

Haier®

DIGITAL LED LCD TELEVISION

INSTRUCTION MANUAL

Model: LET32T1000HF
LET42T1000HF
LET39Z18HF
LET46Z18HF

Please read this manual carefully before operating the unit, and keep it for future reference.

Contents

Safety Warnings	2	How to Adjust Volume.....	15
Welcome	2	Adjusting Picture Settings	15
Important Information	2	Changing the Picture Setting	15
About Your LED LCD TV	5	Adjusting Sound Setting	16
Installing the Stand	5	Changing the Sound Setting	16
Front Control Panel	7	Function Settings	17
Rear Terminal Control	8	Lock Menu Setting	18
Get to Know Your Remote Control	9	Shortcut Menu Display	20
Connecting Your TV	10	Using the features	21
Antenna Connection.....	10	Teletext Functions	21
Improve Your Signal	10	Teletext.....	21
Connect Your PC to the TV	10	USB Mode	22
Connect a DVD Player to Your TV	10	To Use the USB Device.....	22
Connect a DVD Player or VCR to Your TV	10	Connecting a USB Device.....	22
SCART Input	10	USB Media Menu operation	22
HDMI Input	10	To play pictures	23
Mount Your TV onto the Wall	10	To play music	23
Preparation of Your Remote Control	11	To play movie.....	24
Battery Installation.....	11	To play text	24
Battery Caution	11	Using External USB Disk For Recording	25
Getting Started	11	Time Shift	25
Setting up	11	Recording.....	25
Location	11	Reference Sections	26
Connection	11	Troubleshooting	26
Switching Your TV On	11	Specification	27
Tuning Your TV	12	Appendix	28
Switching to an External Source Other Than TV	12		
Auto Search (Antenna or Cable)	12		
Digital Manual Search(Antenna)	13		
Digital Manual Search(Cable)	13		
Analog Manual Search	13		
Skip.....	14		
Sort	14		
Edit.....	14		
Using Your TV	15		
How to Select the TV Program	15		

Safety Warnings

Welcome

Thanks for buying this 32"/39"/42"/46" Full HD Digital LED LCD TV. This guide will help you to set up and begin using your TV.


Firstly, check the contents of your box with the parts checklist below:

- 32"/39"/42"/46" Full HD Digital LED LCD TV
- Remote control
- AAA battery x2
- Instruction Manual
- Warranty
- TV Stand
- Screws for TV stand
- Component audio adapter
- Cover bottom

Now you can get started!


Important Information

READ ALL INSTRUCTIONS BEFORE USE AND KEEP FOR FUTURE REFERENCE.



WARNING

RISK OF ELECTRIC SHOCK
DO NOT OPEN



WARNING

TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER TO QUALIFIED SERVICE PERSONNEL.

*To avoid electric hazards, it is strongly suggested that the back cover not be opened, as there is no any accessory inside the casing.


*If necessary, please contact authorized after-sales services.

*A lightning flash mark in a triangle: A potentially hazardous situation, which, if not avoided, could result in serious injury by high voltage.

*An exclamation mark in a triangle: Major part or accessory of which technical specifications must be followed if it is to be replaced.

WARNING: To avoid fire or electric hazards, never place your television receiver in an area with heavy moisture. Attention should be paid to avoid accidental scratches or impacts onto the screen. The ventilation should not be impeded by covering the ventilation openings with items, such as newspaper, table-cloths, curtains, etc.

- CAUTION:**
- ▲ The main plug is used as disconnect device which shall remain readily operable.
 - ▲ Please read this manual carefully before using your television and keep this manual in a good place for future reference.
 - ▲ To achieve the best performance of your television, read this User's Manual carefully and properly store it for future reference.
 - ▲ Information of screen displays and figures in the User's Manual may vary due to technical innovations.
 - ▲ Unauthorized disassembly of this product is prohibited.

 
TruSurround XT, SRS and the  symbol are trademarks of SRS Labs, Inc. TruSurround XT technology is incorporated under license from SRS Labs, Inc.

TruSurround XT® creates a truly immersive surround sound experience with rich bass and clear dialog from only two speakers.




WARNING To prevent the spread of fire, keep candles or other open flames away from this product at all times.


The product should be tightly fixed to avoid drop damages and even fire.

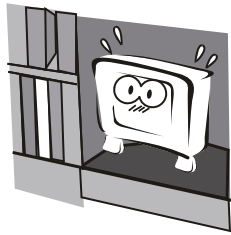

 
To avoid fire hazards, do not use this product under direct sunlight or closely to heat sources.

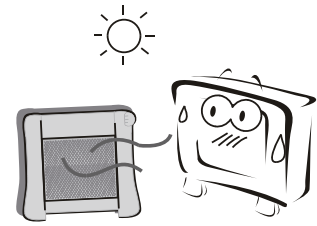

 
Do not locate the product close to water or oil (ie, cooking oil or lubricating oil), which may cause fire hazards.

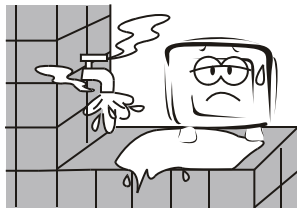

 
Unplug the power supply and antenna of the product when there is a rainstorm, especially Thunderstorm.

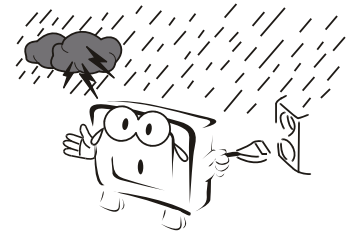

 
Do not use damaged or worn electric plugs, and keep electric cord away from heat sources to avoid electric shocks or fire hazards.

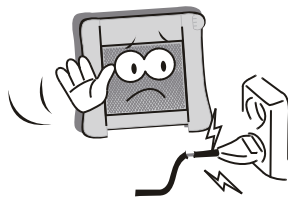

 
Do not connect excessive sockets in parallel or share the same socket by multiple plugs to avoid fire hazards.

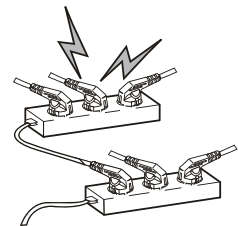

 
The product must be placed on a solid and stable surface to avoid collapse.

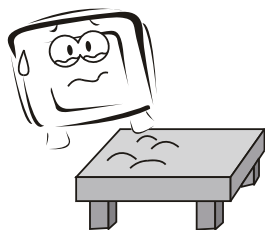

 
Unauthorized disassembly of the television is prohibited to avoid electric shocks or fire hazards. Contact authorized after-sales service if technical service is needed.

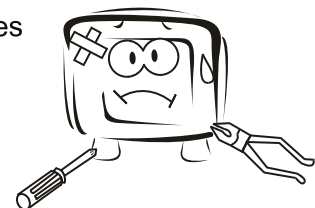

 Keep the product away from a transformer or heat source to avoid fire hazards.

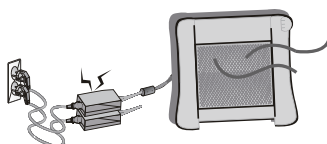

 Disconnect the product from power supply and contact authorized after-sales service if abnormal sound is heard in the product.

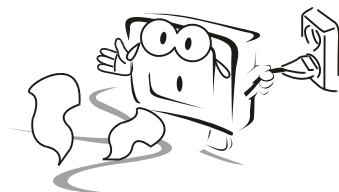

Don't use or store inflammable materials near the product to avoid explosion or fire hazards.

Don't place the product in a humid area to avoid fire hazards.

The antenna of the product should be away from electric cable to avoid electric shocks.

Never touch the plug when your hand is wet as this might cause electric shocks.

Always make sure that the television is well plugged as poor electric connection might cause fire.

When antenna is used, measures should be taken to prevent water from flowing down along the cable into the television.

Unplug the television, use soft fabric, never chemicals, if you are going to make cleaning of the product. Make sure that no water drops in the product.

The plug and electric cable must be kept clean to avoid electric shocks or fire hazards.

Disconnect the television from power supply and antenna when there is a rainstorm or thunderstorm to avoid electric shocks or fire hazards.

Disconnect the television from power supply to avoid electric shocks or fire hazards in a long vocation.

 
About Your LED LCD TV

Installing the Stand


Only 32"42" LED LCD Model

(Put your TV on the table with its rear cabinet facing upwards.)

1. Put the stand on the TV set

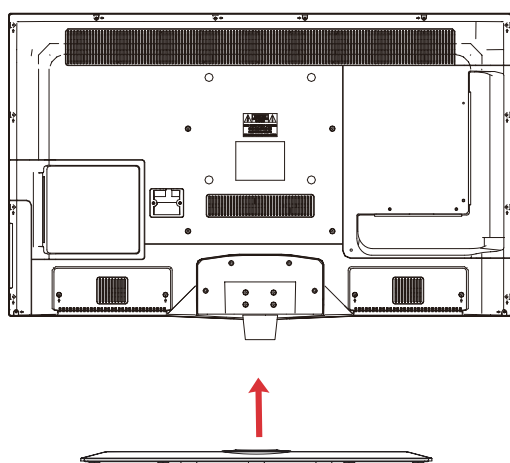

 2. Screw the stand in the positions with the screws supplied (4 x B4 x 16).

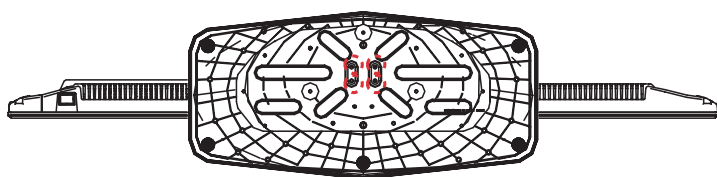



Screws:4xB4X16

Installing the Stand


Only 39"46" LED LCD Model

(Put your TV on the table with its rear cabinet facing upwards.)

 1. Put the rear board on the stand neck, and fix the rear board with the screws supplied (4 x B4 x 12F).

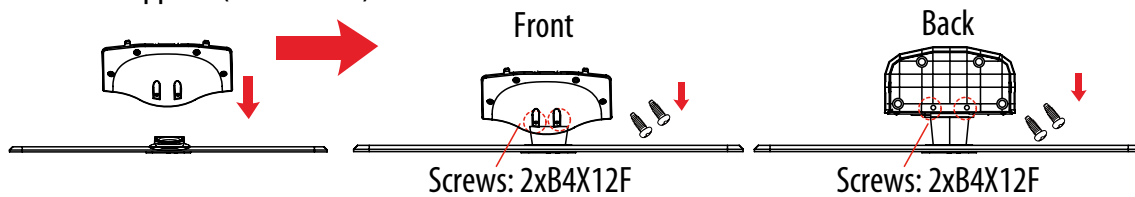


 2. Put the rear board on the rear cabinet of TV, and fix the rear board with the screws supplied (4 x M4 x 14).


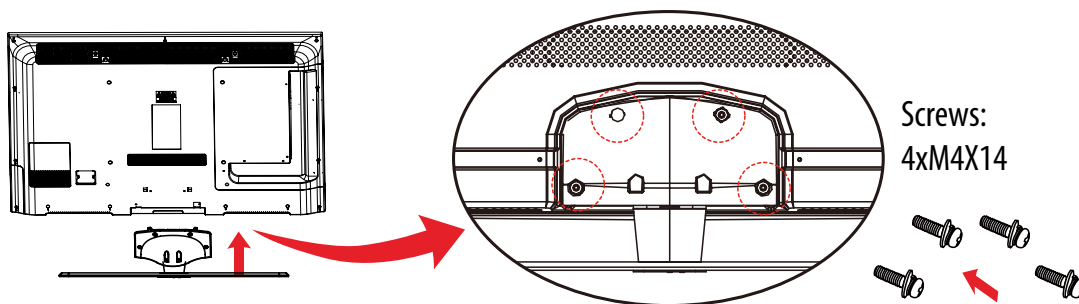


Front Control Panel

 32" 42"

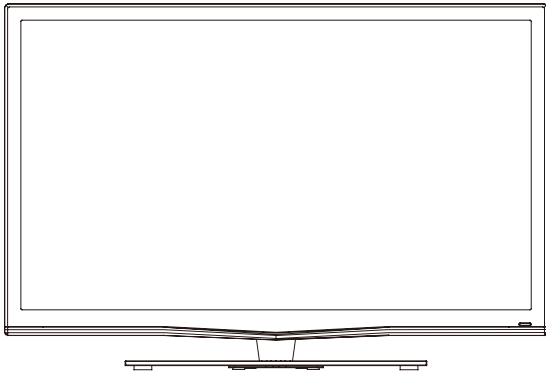


39" 46"

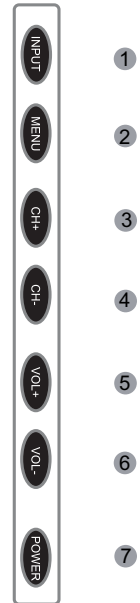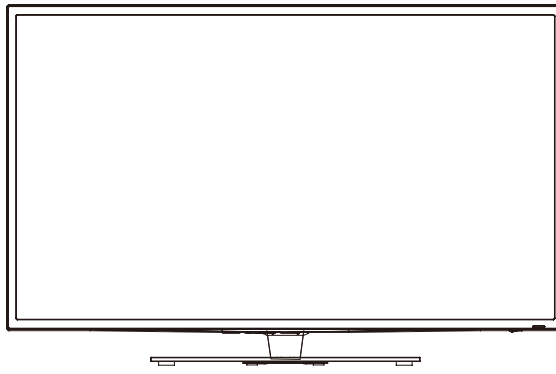  

1	INPUT	Toggles between all the available input sources.
2	MENU	Press to select the main menu.
3	CH+	TV channel up.

4	CH-	TV channel down.
5	VOL+	Press to increase the volume.
6	VOL-	Press to decrease the volume.
7	POWER	Press to turn the TV on and off.

 
Rear Terminals Control

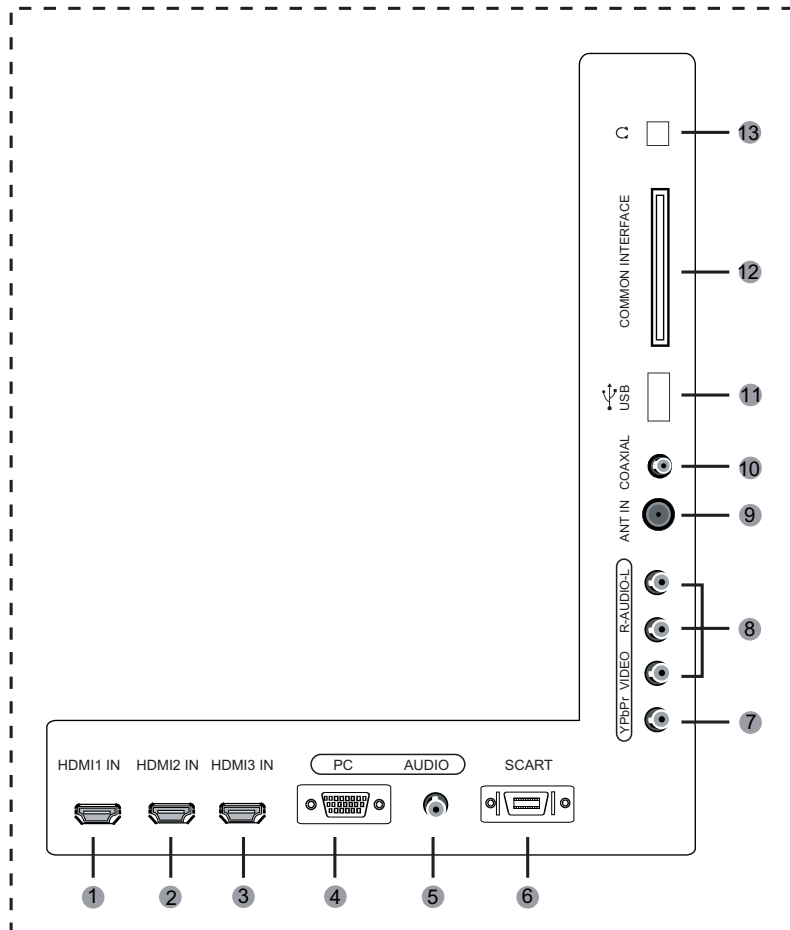

1	HDMI1 IN	input	7	YPbPr	input
2	HDMI2 IN	input	8	AV	input
3	HDMI3 IN	input	9	ANTENNA	input
4	PC	input	10	COAXIAL	
5	PC AUDIO	input	11	USB	
6	SCART	input	12	Common Interface	
			13	Earphone	output

Get to Know Your Remote Control

 When using the remote control, aim it towards the remote sensor on the TV.

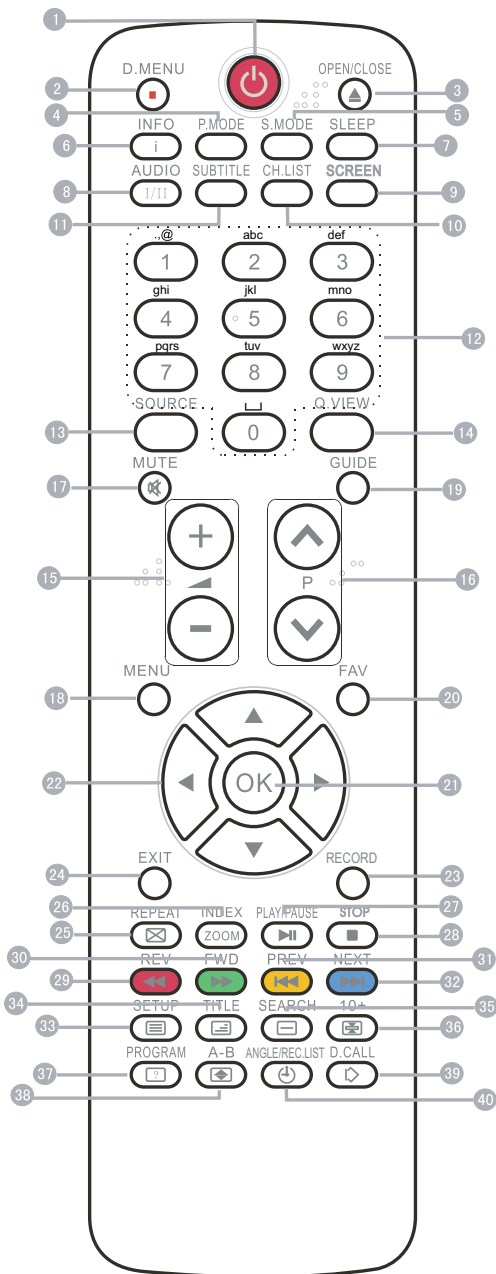

- ① POWER
- ② No Function
- ③ No Function
- ④ Picture Mode
- ⑤ Sound Mode
- ⑥ Display Information
- ⑦ Sleep Button
- ⑧ DTV Audio/NICAM
- ⑨ Screen Button
- ⑩ Channel List
- ⑪ Display or Close Subtitle
- ⑫ Numerical Keys
- ⑬ Source
- ⑭ Q.View
- ⑮ Volume Selection
- ⑯ Channel Selection
- ⑰ Mute
- ⑱ Menu
- ⑲ Electronic Programme Guide
- ⑳ Favourite
- ㉑ OK Button
- ㉒ Cursor Mover Button
- ㉓ STAR T RECORD
- ㉔ Exit
- ㉕ USB REPEAT
- ㉖ Teletext Index / USB Zoom
- ㉗ USB PLAY/PAUSE
- ㉘ USB STOP
- ㉙ Teletext Red Button / USB Fast Rewind
- ㉚ Teletext Green Button / USB Fast Forward
- ㉛ Teletext Yellow Button / USB Previous File
- ㉜ Teletext Blue Button / USB Next File
- ㉝ Teletext Text
- ㉞ Teletext Mix
- ㉟ Teletext Subcode
- ㊱ Teletext Hold
- ㊲ Teletext Reveal
- ㊳ Teletext Size
- ㊴ No Function
- ㊵ REC.LIST

Note

RED button, GREEN button, BLUE button and YELLOW button are fast text button in analog signal. Function button in DVBT (just reference the OSD)

Connecting Your TV

Antenna Connection

Connect your aerial to the back of the TV into the ANTENNA IN socket.

Improve Your Signal

To improve picture quality in a poor signal area, use a signal amplifier (not supplied).

Connect Your PC to the TV

You can use your TV as a monitor for your personal computer by connecting it with a VGA cable (not supplied).

 
- 1 Read your computer user guide and check it has a VGA connector.
- 2 Turn the power off on your TV and PC.
- 3 Connect a D type 15-pin VGA interface cable to the VGA video interface connector on the PC. Connect the other end of the cable to the PC interface connector on the TV. Tighten the screws on the VGA connectors and connect the audio cable (not supplied) to the audio input socket on the back of the TV.
- 4 Turn on the power of the TV firstly and then the PC.
- 5 Press the button on the TV or TV remote control to set the video input mode to PC.
- 6 Once the image shows, if there is noise present, change the PC mode to another resolution, change the refresh rate to another rate or adjust the brightness and contrast on the menu until the picture is clear.

Connect a DVD Player to Your TV

Connect the DVD video outputs (Y, Pb, Pr) to the COMPONENT (Y, Pb, Pr) IN socket on your TV.

- 1 Turn on the DVD player and insert a DVD.
- 2 Press the SOURCE button to select COMPONENT mode.

- 3 Refer to the DVD player user guide for operating instructions.

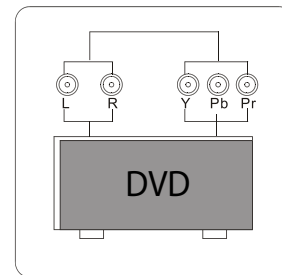

Connect a DVD Player or VCR to Your TV

There are two ways in which you can connect a DVD player or VCR to your TV. Make sure that both the TV and DVD player or VCR are switched off before you connect them.

SCART Input

- 1 Connect the scart lead from the external device (DVD player, Set-top box or games console) to the TV scart socket.
- 2 Press the **SOURCE** button to select SCART mode.
- 3 Press the **PLAY** button on the external device.

HDMI Input

- 1 Connect the cable from the HDMI device to the TV HDMI socket.
- 2 Press the **SOURCE** button to select HDMI mode.
- 3 Refer to the HDMI device user guide for how to operate.

 
Mount Your TV onto the Wall

You can mount your TV onto the wall by using a wall bracket (not supplied). Use M6 machine screws (4 pcs) to screw the TV onto the bracket (not supplied).


Preparation of Your Remote Control

Battery Installation


- 1 Place the remote control face down, then open the cover of the battery compartment.

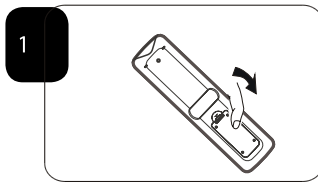

 - 2 Install two AAA batteries. (The + and - symbol of the battery must match with the marks on the remote).

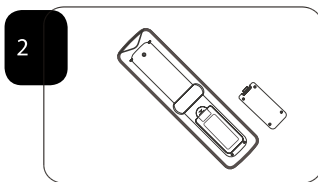

 - 3 Close the cover of the battery compartment.

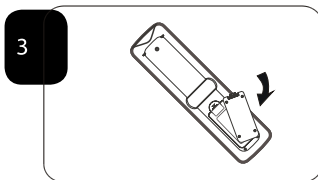

Battery Caution

Confirm there is no object between the remote control and the remote sensor of the TV set.

Sunshine or other strong light will interfere with the signal sent by the remote control. Avoid using nearby special fluorescent light or neon signs.

Do not put the remote control in direct heat or in a damp place as you may damage the remote.

Please use two AAA 1.5V batteries. Do not mix battery types. Install the batteries at the correct polarities. Do not use rechargeable batteries. If your TV is to be stored for a period of time, remove the batteries from the remote control.

Do not throw away the battery with common domestic waste. Do not throw them in fire. Dispose of the battery according to local regulation.

Getting Started

Setting up

Location

 
You will need to place your TV near your plug socket (so the power cable can comfortably reach) and within reach of your aerial socket or extension lead.

Connection


- 1 Insert your TV aerial lead into the Antenna input at the side of the TV.
- 2 Insert the batteries into the remote control. Make sure they are inserted the right way around, matching the polarity as indicated inside the battery compartment.

Switching Your TV On

- 1 Press the **POWER** button on the right of the TV once. A indicator light will appear in the right of the screen.
- 2 Press **POWER** on the remote control. **The TV will turn on.** This may take a few moments, and this display will appear on the screen when the TV is turned on for the first time.

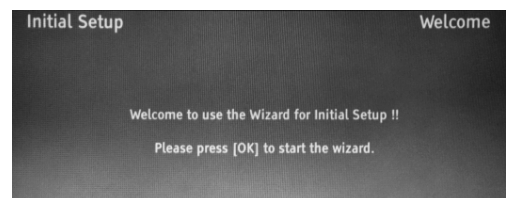

 - 3 Press **OK** button on the remote control to enter the Backlight Mode menu.

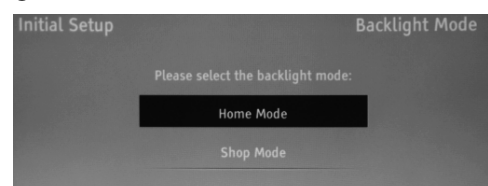

HOME MODE

Press **▲ ▼** button to select **HOME MODE** and press **OK** button to enter the Language menu.

 
Press **▲ ▼** button to select **language** and press **OK** button to enter the Country menu.

Press **▲ ▼** button to select **Country** and press **OK** button to enter the Tuner mode menu.

Press **▲ ▼** button to select **Tuner MODE** and press **OK** button to enter the Channel Scan menu.



Press **▲ ▼** button to select **SCAN** and press **OK** button to start auto scan, it may take a few minutes to complete.

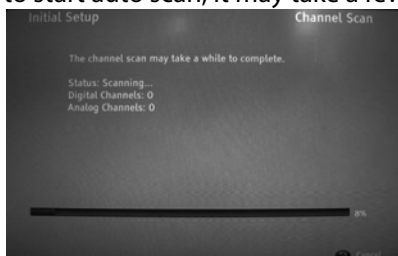

SHOP MODE

Press **▲ ▼** button to select **SHOP MODE** **OK** button to enter the Shop mode menu. and press



The shop mode will display on the screen, and you could not do any operation except pressing **EXIT** button to exit.

Tuning Your TV

 
Switching to an External Source Other Than TV

If you have attached a DVD player or similar external device to the TV, you will need to tell the TV to display the content from it. Simply press **SOURCE** which will bring up the source menu in the left corner of the screen, use the **▲** and **▼** button to highlight the required source and press **OK** select.

For details of how to plug in other equipment see **Connecting your TV** on page 10.

Auto Search (Antenna or Cable)



- 1 Press **MENU** button.
- 2 Press **▲ ▼** button to select **Tuning**, press **▶** button to enter.

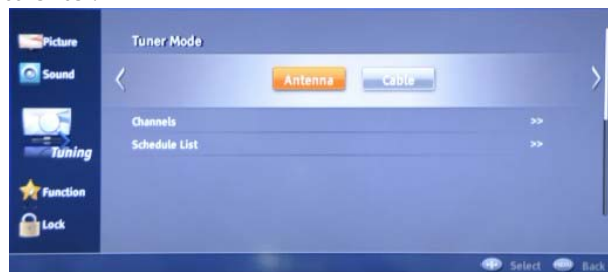

- 3 Press **▲ ▼** button to select **Tuner Mode (Antenna or Cable)** and **Country**. Press **◀ ▶** button to select you needed.
- 4 Press **▲ ▼** button to select **Channels**, press **OK** button to enter.



  Press **▲ ▼** button to select the **Channel scan**, and press **OK** button to start searching.

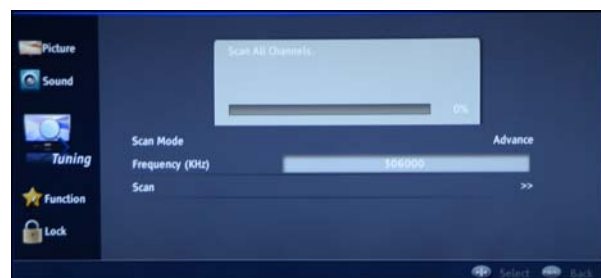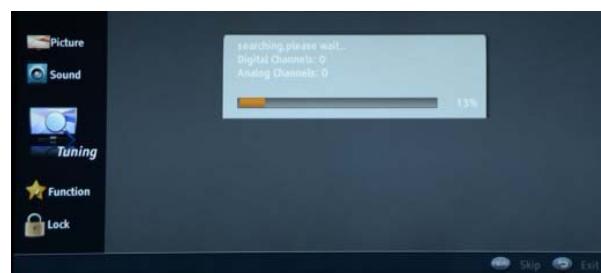

- Press **EXIT** button to stop auto search during searching.

Note

It may take a few moment to complete the Auto Search.

Press Menu button to exit DTV search ,ATV search will go on.

 
- Once a channel is located, you can press **OK** button to save it.

Press **EXIT** button to exit.

Analog Manual Search

Follow the below steps when you need a manual search.

- Press **MENU** button , Press **▲ ▼** button to select **Tuning** , press **▶** button to enter.
- Press **▲ ▼** button to set **Antenna (Antenna or Cable)** and **Country** .
Press **◀ ▶** button to select you needed.
- Press **▲ ▼** button to select **Channels** , press **OK** button to enter.

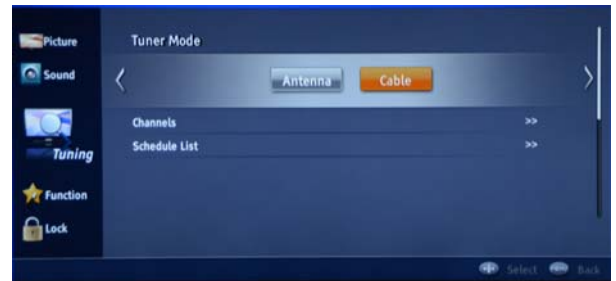

- Press **▲ ▼** button to select **Analog Manual Scan** , press **OK** button to enter.



 
- Press the number button on the remote control to set Frequency(MHz).
- Press **▲ ▼** button to select **Search Up** and press OK button to search the higher frequency channel. Select **Search Down** and press OK button to search the lower frequency channel.

- Once a channel is located, you can press **OK** button to save it.

Press **EXIT** button to exit.

Digital Manual Search(Cable)

- Press **MENU** button.
- Press **▲ ▼** button to select **Tuning** , press **▶** button to enter.

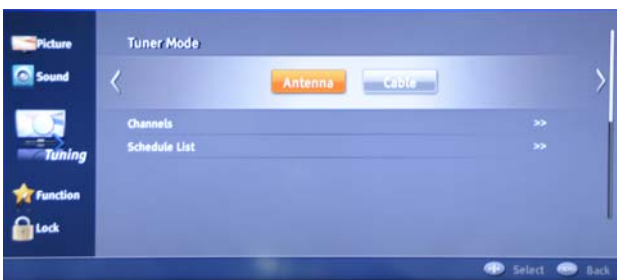


- Press **▲ ▼** button to set **Antenna (Cable)** and **Country** .
Press **◀ ▶** button to select you needed.

- Press **▲ ▼** button to select **Channels** , press **OK** button to enter.



 - Press the number button on the remote control to set Frequency(KHz).
Press **◀ ▶** button to set Modulation you want.
Press the number button on the remote control to set Symbol Rate(Ksym/s).
Press **OK** button to start searching,

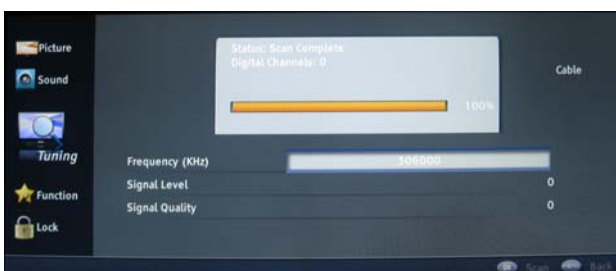

Skip

- 1 Press **MENU** button.
- 2 Press \blacktriangle \blacktriangledown button to select **Tuning**, press **OK** button to enter.
- 3 Press \blacktriangle \blacktriangledown button to select **Channels**. Press **OK** button to enter the sub-menu.



- 4 Press \blacktriangle \blacktriangledown button to select **Skip**. Press \blacktriangleright button to enter the sub-menu.



- 5 Press \blacktriangle \blacktriangledown button to select the channel and press **OK** button to select the channel to skip.

Sort

- 1 Press \blacktriangle \blacktriangledown button to select **Sort**. Press **OK** button to enter the sub-menu.
- 2 Press \blacktriangle \blacktriangledown button to select the channel you want and press **OK** button to select the channel.



 
- 3 Press \blacktriangle \blacktriangledown button to select the number position you want to remove to, press **OK** button to confirm.
- 4 You can press the **EXIT** button to cancel the changes at anytime.

Edit

- 1 Press \blacktriangle \blacktriangledown button to select **Edit**. Press **OK** button to enter the sub-menu.



- 2 Press **Ok** button to enter the menu you want and change the option you want.

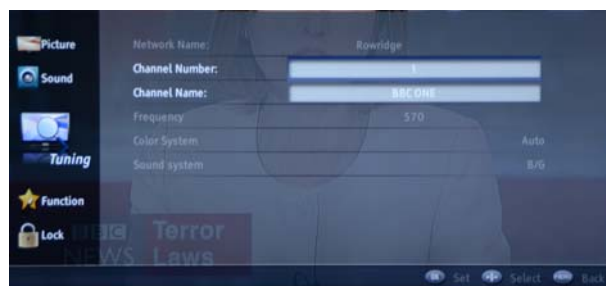


Common Interface

The common interface (CI) slot is designed to accept the Conditional Access (CA) Module and Smart card in order to view the pay TV programmes and additional services. Contact your Common Interface service provider to get more information about the modules and subscription. Please noted that CA modules and smart cards are neither supplied nor optional accessories from us.

Warning

- Switch off your TV before any module is inserted in the Common Interface slot.

 
- 1 Insert the CAM correctly, then Smart Card to the CI slot that is located at the side of the TV.

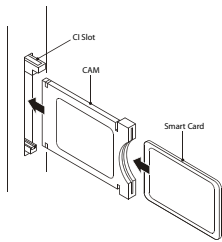

- 2 Turn on the TV and it will display the below message if the CA module is detected. Wait for few moments until the card is activated.



 - 3 Press the **OK** button to enter and use the **▲** and **▼** button to select the option you need and press the **“OK”** button.

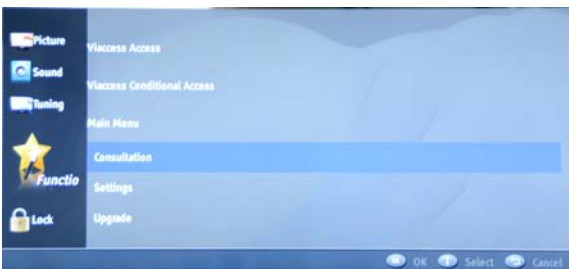

- 4 Detailed information on the CI card used is displayed.
- 5 Press **OK** button to access the card menu. Refer to the module instruction manual for setting details.

Using Your TV

How to Select the TV Program

- 1 Using Program number button Enter the channel number with the number keypad on the remote control.
- 2 Using **P+/P-** button.
Press the **P+/P-** button to select a channel number.

How to Adjust Volume

Press **V+/V-** button on the remote control or the **bottom** of the TV to adjust the volume level.

Adjusting Picture

Settings

Changing the Picture Setting

- 1 Press **MENU** button.then press **▲ ▼** button to select **Picture** , press **OK** button to enter..



- 2 Press **▲ ▼** button to select the item requires adjusting.
- 3 Press **◀ ▶** button to adjust the selection item.
- 4 When you are satisfied with your choice, press the **EXIT** button to return to normal viewing or press

MENU button to return to the previous menu.

Mode

This will select the picture mode. Select **Standard/ /User/Vivid/Eco/Cinema/sport** according to the program.

You can quickly select the desired mode by **P.MODE** button on the remote control.

Brightness

This will adjust the light output of the complete picture, which will mainly affect the darker areas of the picture.

Contrast

This will adjust the intensity of bright parts in the picture but keep the dark parts unchanged.

Colour

This will adjust the saturation level of the colours to suit your personal preference.

Sharpness

This will adjust the sharpness of fine details in the picture.

Tint

Allows you to select the colour mix (Tint) of the picture.

Note

The Tint function is only available in NTSC mode.

Colour temperature

Press ◀ ▶ button to set Colour temperature as **User, Cool, Standard, Warm**.

This will increase or decrease **Warm** (red) standard and **Cool** (blue) colours to suit personal preferences. Select **Cool** to give the white colour a blue tint, **Standard** to give the white colour a neutral tint, **Warm** to give the white colour a red tint.

Advanced Video

- **DNR**

To adjust the level of reducing the digital noise. Press ◀ ▶ button to set DNR as Off, Low, Medium strong Auto

- **MPEG NR**

To adjust the level of MPEG NR. Press ◀ ▶ button to set MPEG NR as Off, Low, Medium or strong.

Active Contrast

To adjust the level of luminance of the picture. Press ◀ ▶ button to set Active Contrast as On / Off.

Adjusting Sound Setting

Changing the Sound Setting

- 1 Press **MENU** button.
- 2 Press ▲ ▼ button to select **Sound**, press **OK** button to enter.



- 3 Press ▲ ▼ button to select the item requires adjusting.
- 4 Press ◀ ▶ button to adjust the selection item.
- 5 When you are satisfied with your choice, press the **EXIT** button to return to normal viewing or press **MENU** button to return to the previous menu.

Sound mode

This sound setting can be adjusted to suit your personal preference.

Balance

This will adjust the output of the right and left speakers to obtain the best stereo reproduction for your listening position.

Bass

To adjust the lower-pitched sounds.

Treble

To adjust the higher-pitched sounds

Surround

This will control the Woofer output. Press ▲ ▼ button to select Surround. Press ◀ ▶ button to set Surround as **OFF, ON**.

Equalizer

This sound setting can be adjusted to suit your personal preference.

SPDIF Type

This will control the SPDIF Type.
 Press button to select SPDIF Type.
 Press button to set SPDIF Type. As **OFF**,
Auto,PCM.

SPDIF Delay

To adjust the sound to make the video and audio playing at the same time. This function actives when Digital Audio Output is PCM.

AVL (Automatic volume control)

To adjust the volume of each channel automatically to a normal level to ensure the volume is the same.
 Press ◀ ▶ button to set AVL as Off or ON.

Sound Type

Set the sound output type

Type

Press ◀ ▶ button to set the type as **Normal** or **Visually Impaired**.

Visually Impaired

This function actives When Type is Visually Impaired.

- **Speaker**

Press ◀ ▶ button to set Speaker as Off or ON.

- **Volume**

To adjust the volume of Visually Impaired audio.

Function Settings

1 Press **MENU** button.

2 Press ▲ ▼ button to select **Function** , press **OK** button to enter.



3 Press ▲ ▼ button to select the item requires adjusting.

4 Press ◀ ▶ button to adjust the selection item.

5 When you are satisfied with your choice, press the **EXIT** button to return to normal viewing or press **MENU** button to return to the previous menu.

Language

To select the menu language.

Screen Mode

To set the picture proportion, press ◀ ▶ button to select Auto/16:9/4:3/Zoom1/Zoom2 . You can quickly select the desired mode by **SCREEN** button on the remote control.

- **16:9 mode**

Choose **16:9** when you want to adjust the picture horizontally, in a linear proportion to fill the entire screen.

- **4:3 mode**

Choose **4:3** when you want to view a picture with an original 4:3 aspect ratio, with gray bars appearing at both the left and right sides.

- **Zoom1**

Choose **Zoom1** when you want to view the picture without any alteration. However, the top and bottom portions of the picture will be cropped.

- **Zoom2**

Choose **Zoom2** when you want the picture to be altered, both vertically extended and cropped. The picture taking a halfway trade off between alteration and screen coverage.

Blue Screen

This will select the character background colour.

Note

The Blue Screen function is only available for ATV mode.

 
Time

- **Time Zone**

Press ◀ ▶ button to select the appropriate time zone

• Time

Press **OK** button to enter the submenu.

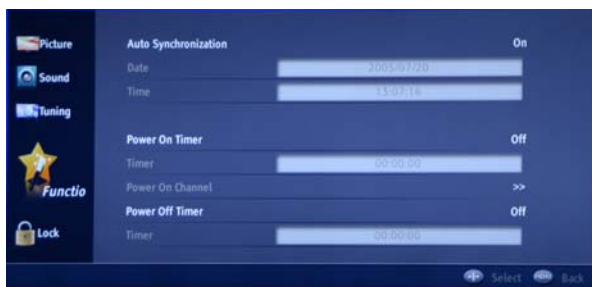

Auto Synchronization: Press ◀ ▶ button to select On or Off . When Auto mode on , the time can not be adjusted. Select Off , you can operate to set the time manually.

Date: Press ◀ ▶ button to select the position and digits button to set the date.

Time: Press ◀ ▶ button to select the position and digits button to set the time.

On/Off Time: Press ◀ ▶ button to select **once**, **Off** or **Daily**. To select Off, the time can not be adjusted.

Timer: Press digits button to switch on AM and PM.

• Sleep Timer

Press ◀ ▶ button to select the number of minutes: To select Off, 10Minutes, 20Minutes, 30Minutes, 40Minutes , 50Minutes, 60Minutes, 90Minutes or 120Minutes.

• Auto Sleep

According to the latest ERP regulation, this unit will switch off itself automatically if no change in status within the last 4 hours of operation.

OSD Timer

To set how long you want the menus to appear on-screen. Each press of ◀ ▶ button repeatedly to select the number of preset seconds, the Time will be set in sequence: 5sec, 10sec, 15sec, 30sec, 45sec, 60sec.

Subtitle

To show subtitle of current playing video file in multimedia.

- Subtitle
 - Press ◀ ▶ button to set Analog Subtitle as Off ON
- Digital Subtitle Language 1.
 - To adjust the default digital subtitle language.
- Digital Subtitle Language 2.
 - To adjust the second default digital subtitle language.

• Subtitle Type

Press ◀ ▶ button to set Subtitle Type as Normal and Hearing Impaired.

Teletext

To set the mode of Teletext.

• Digital Teletext Language

To adjust the default digital Teletext language.

• Decoding Page Language

To adjust the decoding page language.

Audio Language

Audio Language 1st

Press ◀ ▶ button to set Audio Language.

To select the default audio language for a digital channel. This function actives when in digital channel.

Audio Language 2nd

To select the second default audio language for a digital channel. This function actives when in digital channel.

Frist Time Installation

Shop Mode

 
Press ◀ ▶ button to select On/Off.

Reset default

To recover to the default value.

Lock Menu Setting

Using this function can control the tuner, program, source volume and so on. Pressing **MENU** on the remote control, press ▲ ▼ button to select Lock menu, press ▶ button to enter, and you will be required to enter the password. The initial password of the television is 0000. If you forget your password, you can always input 9443 to regain control.

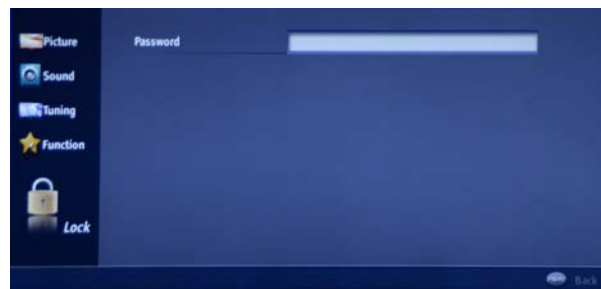

System Lock

Press ▲ ▼ button to select System Lock.

Press ◀ ▶ button to set **On** or **Off**.

Channel BLock

Press ▲ ▼ button to select the channel you want to lock.

Parental Guidance

Press ▲ ▼ button to select parental lock. Press ◀ ▶ button to select OFF or 4-18 to limit the age of children who will watch TV.

 
Clear ALL

Press ▲ ▼ button to select **Clear Lock** mode.

Press ◀ ▶ button to unlock all set modes, setting all lock options to off, and the maximum volume returns to 100.

Change Password

1 Press ▲ ▼ button to select Change Password item. Press ▶ button to enter the submenu.

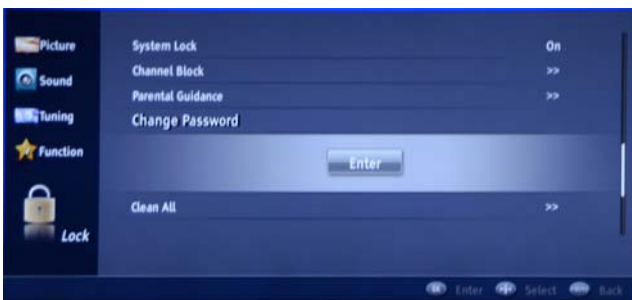

2 Input the new digital password and confirm it, you can change the password.

HOTEL SETTING

Press MENU button and press 1,0,0,1,0,8 button to enter the menu:



Hotel Mode Operation:

Turn on/off the Hotel Mode.

Max Volume:

Set the max volume for the TV.

Default Volume:

Set the default volume for the TV when it turns on.

OSD Menu Display

Press ◀ ▶ button to set this function as off or on.

Keypad Lock :

Prohibite the input source for the TV.

Remote Controller Lock:

Clear all the locks above.

Remote Controller Lock



Source Lock

Default Source

Default Program

TV Back up to USB

USB Restore to TV

Shortcut Menu

Display

Subtitle Function

Press **SUBTITLE** button on the remote control will set the subtitle function as On or Off.

Note

Press **SUBTITLE** button on the remote, it will display subtitle languages menu only in the DTV mode.

 
CH.List Function

- 1 Press **CH.List** button on the remote control, will display Channel List menu.
- 2 Press yellow button to select Digital, Radio or Analog ,press ◀ ▶ button to select Air ,Cable or Satellite.
- 3 Press ▲ ▼ button to select the channel and press **OK** button to enter. You can press the **EXIT** button to cancel the changes at anytime.

GUIDE Function

Press **GUIDE** button on the remote control, will display Program Guide menu, press ▲ ▼ ◀ ▶ button to select the program.

You can press the **EXIT** button to cancel the changes at anytime.

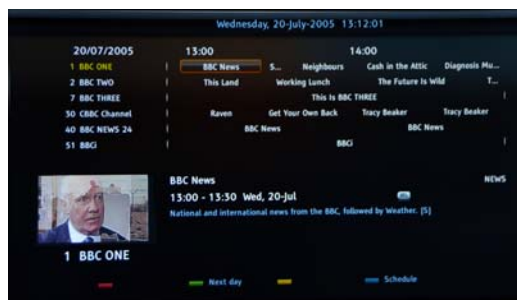


Note

Available only in the DTV mode.

FAV Function

Press **FAV** button on the remote control, will display Favourite List menu.

 Press **OK** button to set the current channel into the favourite list. and press **OK** button again , you can delete the current **channel** from the favourite list.

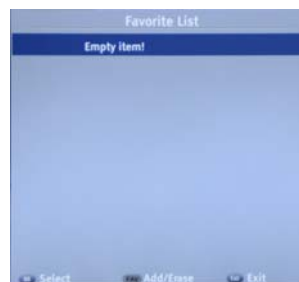

INFO

Press **INFO** button on the remote control, will display the current channel information.

You can press the **EXIT** button to cancel the changes at anytime.



AUDIO/I/II

Press **AUDIO** button on the remote control, will display Audio Languages menu.

Note

Press **AUDIO** button on the remote, it will display Audio Languages menu only in the DTV mode.

Eliminate Sound

When you need to pay attention to surrounded sounds, or there is a telephone calling you or there are some guests visiting you, the sound elimination (mute) function is very convenient.

- 1 Press the **MUTE** button on the remote control and "Mute" type face will display on the lower part of the screen. At this Time, the sound of the TV set is turned off.
- 2 If you want to recover the sound, press the **MUTE** button again or directly press **V+** button.

Quick program view

This function enables quick swap to the last watched program. Press **Q.view** button, and the TV will be back to **the last watched program**.

- 1 Suppose the channel number you used just now is 8 and the channel number you are using is 18 (as shown in the figure).

18
8
18

- 2 If you want to return to the last watched program channel 8, you can simply press the **Q.View** button.
- 3 If you want to return to channel 18, press the button again. Use this function, you can easily change between the channel you are using and the channel you used last Time.

Teletext Functions


Teletext is an information system, broadcast by certain channels, which can be read like a newspaper. It also provides subtitles for people with hearing difficulties or those who are unfamiliar with the language in which a particular program is being broadcast (cable networks, satellite channels, etc.).

Note

The **teletext** buttons could be working even if there is no teletext signal, but there is no teletext display.

Teletext

Teletext functions

To select "teletext" press the  button on the handset. To switch off teletext, press the button again. "Note all menu functions are not available in teletext mode". Only a few direct button control functions are available in teletext mode, they are:

 
- Volume adjustment
- Mute function



Page up/down


Use the P+/P- buttons to browse next or previous

page.




Page number entering

 To select a Teletext page, enter the page number using the numeric key pad on the remote control, or use the P+ or P- buttons, or the coloured Fast text buttons.

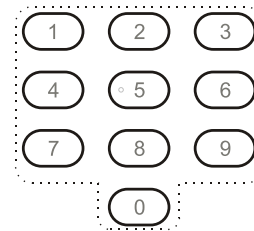

Mix mode

To view the TV picture while in Text mode press the  button, this will superimpose the Teletext data on top of the TV picture. Press this button again to return to Full text.




INDEX

Press the **INDEX** button to go to the index page of teletext.



Hold

Pressing the  button will stop the teletext page automatically updating. This feature is very useful where there are several teletext pages or data on the same page number.




Size

Pressing the  button changes between full screen

top half bottom half full screen. This feature is very useful as it magnifies the image making the characters easier to read.



Reveal

Pressing the  button will reveal hidden text. This feature is used to reveal information such as answers to Teletext on-line interactive puzzles.

 


Fast text coloured buttons

Fast text automatically displays the four most commonly used pages that the broadcaster thinks that you may want to choose next. Press the same coloured button on the remote control as the coloured link at the bottom of the teletext page to go directly to that page.



Subcode

Pressing the  button by entering its 4-digit number to enter a secondary page.



USB Mode

Note

The diagrams in the following section are schematic and only for your reference. Please see the actual product if necessary.

The OSD of the USB function may be somewhat different from your product because it is just example to help the instruction.

To Use the USB Device

1 Supported file formats:

- Photo: *.jpg;
- Music: *.mp3 files;
- Movie: *.avi files;
- TEXT: *.txt

Note

Due to the particularity of file coding, some files may be unable to read.

2 Supported equipment:

Support the equipment that supports Mass Storage Protocol and whose file system is FAT32, such as some USB disks, mobile harddisks, and MP3 player. If USB equipment could not be identified due to unsupported file system, please format the equipment to the above-mentioned file system.

3 To achieve smooth playing, ensure the following:

- The file code rate should be lower than 300KB/S;
- Due to the limitation of USB signal transmission distance, it is recommended not to use USB patch cord, in case of using the cord, make sure that its length is not over 1m;
- Use high-speed USB equipment in conformity with USB2.0 full speed Interface Standard; If USB equipment does not comply with USB full speed Interface Standard, the playing may be unsmooth.

Connecting a USB Device

1 Turn the TV on.

2 Connect a USB device containing photo, music and/or movie files to the USB jack on the side of the TV.

 
 
3 When the USB is connected to the TV, then you can select the Media Play.

USB Media Menu operation

1 Plug-in an external storage device into USB port.

2 Press **SOURCE** button on the remote and press ▲ / ▼ button to select USB.

3 Press **OK** button on the remote to display the sub page.

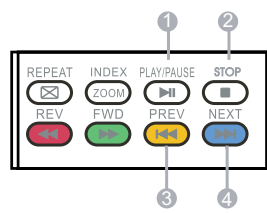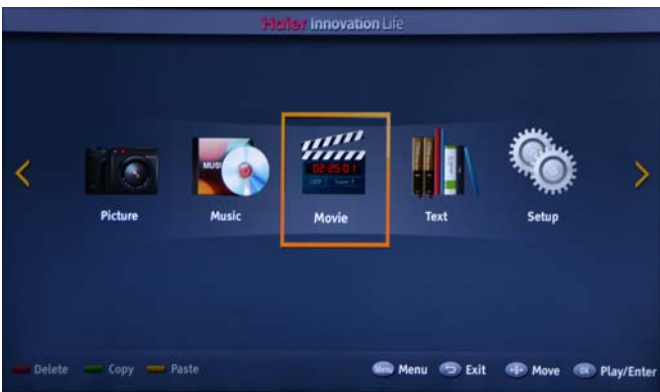

- | | |
|----|-----------------------|
| 1. | Play or pause |
| 2. | Stop |
| 3. | Play previous picture |
| 4. | Play next picture |

- Press **EXIT** button to return to the previous menu.

Note

You may play the pictures among selected.

To play pictures

- Press **◀ / ▶** button to select **Picture**, then press **OK** button on the remote.
- Press **▲ / ▼ / ◀ / ▶** button to select the desired picture in the file list, then press **OK** button to play pictures.



- Press **MENU** button to display the option list.



- Press the button on the remote control to select the adjusted item, press **ENTER** button to confirm.

To play music

 
- Press **◀ / ▶** button to select **Music**, then press **ENTER** button in the Media Play menu.



- Press **▲ / ▼ / ◀ / ▶** button to select the desired music in the file list, then press **OK** button to play music.
- Press **MENU** button to display the option list.



- Press the button on the remote control to select the adjusted item.

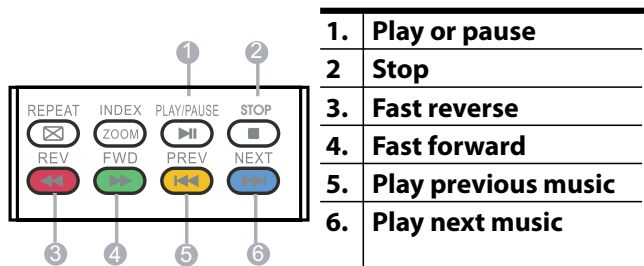


- 5 Press **EXIT** button to return to the previous **menu**.

Note

You can press any button except POWER button to exit Audio Only function.
You may play the music among selected.

 - 4 Press the button on the remote control to select the adjusted **item**.

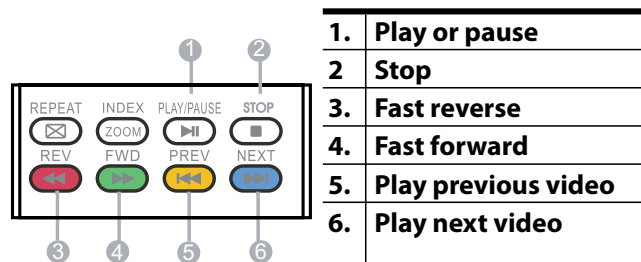

- 5 Press **EXIT** button to return to the previous **menu**.

Note

Do not remove USB device from the TV until you have exited the USB mode otherwise you may damage the USB device.

 
To play movie

- 1 Press **◀ / ▶** button to select **Movie**, then press **ENTER** button in the Media Play menu




- 2 Press **▲ / ▼ / ◀ / ▶** button to select the desired movie in the file list, then press **OK** button to play movie.

- 3 Press **MENU** button to display the option list.

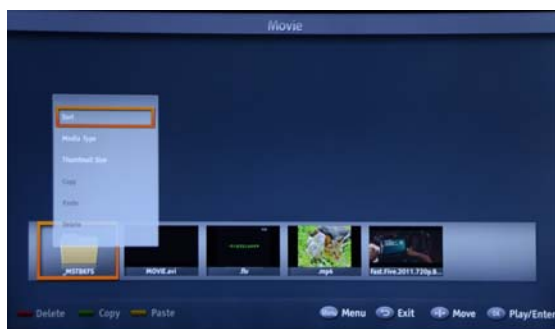


To play text

 - 1 Press **◀ / ▶** button to select **Text**, then press **ENTER** button in the Media Play menu

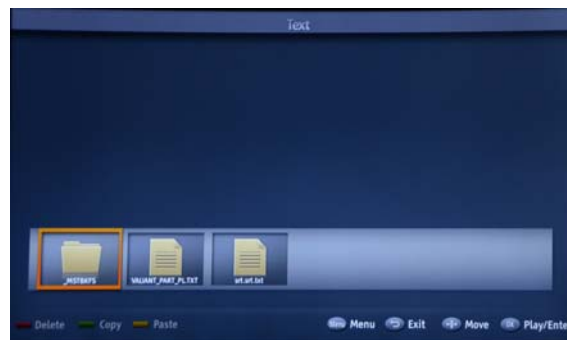


- 2 Press **▲ / ▼ / ◀ / ▶** button to select the desired text in the file list, then press **OK** button to play text.

 - 3 Press **MENU** button to display the option list.

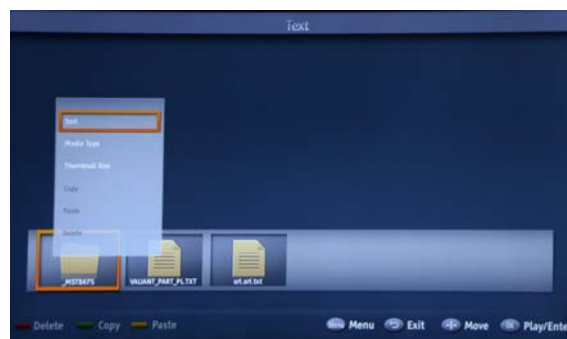

 - 4 Press the button on the remote control to select the adjusted item.

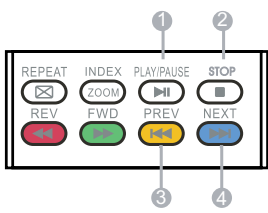

1.	Play or pause
2.	Stop
3.	Play previous text
4.	Play next text

- 5 Press EXIT button to return to the previous menu.

Using External USB Disk For Recording

Note

The system will format the whole device and if your device size is bigger than 1GB, you can set the size which is used for time shift.

If you select all the size format for time shift, you can not do any recording.

Only have to format when you use the device for record for the first time.

 
Suggest the minimum device size for record is 1GB.

Bit rate:

- Device bit-rate > 5MB/s REC is safe .

The system can not work normally if the USB device have the listing problem below:

- The device has bug.
- The device has error block.

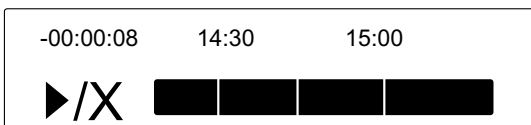

- The device reports the unfaithful size.

IMPORTANT

- USB device should be format as FAT32 format by your PC before insert to the USB connector.

Time Shift

- 1 Insert the USB device with FAT32 format into the USB connector.
- 2 Press PLAY/PAUSE button to start timeshifting . Time Shift function is only available in DTV mode. Press **PLAY/PAUSE** to pause the program, and press **PLAY/PAUSE** again, the time shift program will be played. If you want to stop time shift function, press the **STOP** button. You can stop the time shift program being played by pressing the **STOP** button.

Recording

- 1 Press **RECORD** button to record the program being played, and **press EXIT** button to make the recording interface minimum.



- 2 Press **STOP** button to stop the program recording being played.
- 3 For Playback the recorded program. Enter **USB** to open the pvr floder .
- 4 Select the content you recorded.
- 5 Press **OK** button to play the program recorded and press **STOP** button to stop it.

Reference Sections

Troubleshooting

To assist in location of possible faults use the help guide below:

No picture, no sound	Verify if the television is properly plugged in. Verify if the television has a proper supplied power source. Verify if electricity is available.
Blank screen	Verify if correct signals are input. Operate the remote to change signal input to correct input. Restart the television if power supply is interrupted.
No sound	Press MUTE button and verify if Mute mode is set. Switch to other channel and verify if the same problem happens. Press VOL+ button to see if the problem can be solved.
Poor sound	Verify if sound system is correct. Refer to user's manual for adjustment.
No picture in some channel	Verify if correct channel is selected. Adjust the antenna.
No color for some channel program (black and white)	Verify if the same problem exists in other channels. Check out of picture and sound systems. Refer to relative instructions in the Manual for color adjustment.
Spots with some or all pictures	Verify if the antenna is correctly connected. Verify if the antenna is in good condition. Make fine adjustment of channel.

Television out of control

Disconnect the television from power supply and 10 seconds later, connect the television to the power supply. If the problem still exists, contact authorized after-sales service for technical assistance.

Note

If the fault can not be repaired using the above guide consult with your local authorized service centre.

The TV set must only be repaired by a qualified registered service person. Never attempt to remove the back cover as the TV set has dangerous voltages in side that may cause a fatality or fire.

Specification

Specifications of the television that you have just purchased may vary from the information in this table due to technical innovations.

	32"	39"	42"	46"
Model	LET32T1000HF	LET39Z18HF	LET42T1000HF	LET46Z18HF
Picture, Sound system	PAL/SECAM-B/G,I,D/K.L			
Power	75W	100W	120W	150W
Audio Output	8W+8W			
Channels	100 channels for ATV, 1400 channels for DTV			
External input port	Component Input , PC Input , PC Audio input , SCART , Antenna input Video Input , R/L Audio Input , HDMI Input , USB			
Temperature	Working:5°C~35°C Storage:-15°C~45°C			
Humidity	Working:20%~80% Storage:5%~90%			
Accessories	Remote control , AAA battery ×2, Instruction Manual, Warranty TV Stand 4XScrews for TV stand Component audio adapte Cover bottom			
Dimensions with stand (WXDXH)	751X200X515	888X277X608	983X250X654	1057X255X673
Weight withstand(Kg)	8.6	13	14.1	16.5
Weight without stand and base(Kg)	7.3	10.0	12.5	13
Wall Mounting	200X100	200X200	200X200	400X400

Appendix

Appendix1

VGA Timing table

Item	61.08H. Freq.(Khz)	Mode	Resolution	V.Freq. (Khz)	26~32"	39~46"
1	31.469	IBMVGA	640X350	70.086		
2	31.469	IBMVGA	720X400	70.087		
3	31.469	IBMVGA	640X480	59.94	•	•
4	35	MACINTOSH	640X480	67		
5	37.861	VESA	640X480	72.089	•	•
6	37.5	VESA	640X480	75	•	•
7	35.156	VESA	800X600	56.25	•	•
8	37.879	VESA	800X600	60.317	•	•
9	48.077	VESA	800X600	72.188	•	•
10	46.875	VESA	800X600	75	•	•
11	49.7	MACINTOSH	832X624	75		
12	48.363	VESA	1024X768	60.004	•	•
13	56.476	VESA	1024X768	70.069	•	•
14	60.023	VESA	1024X768	75.029	•	•
15	61.08	IBM XGA-2	1024X768	75.781		
16	44.772	VESA CVT	1280X720	59.855		
17	47.776	VESA	1280X768	59.87	•	•
18	60.289	VESA	1280X768	75	•	•
	49.702	VESA	1280X800	59.81	•	•
19	47.72	VESA CVT	1360X768	59.799		
20	63.981	VESA	1280X1024	60.02	•	•
21	79.976	VESA	1280X1024	75.025	•	•
	55.935	VESA	1440X900	59.887	•	•
	70.635	VESA	1440X900	74.984	•	•
22	65.29	CVT1.76MW	1680X1050	59.954		
23	64.674	CVT1.76MW-R	1680X1050	59.883		
24	66.587	CVT2.3MA-R	1920X1080	60		

Appendix 2

HDMI (High Definition Multimedia Interface) support format

1 support 480i/480p,576i/576p,720p,1080i ,1080p,42" only format with HDCP.

2.Digital interface with 4 channels TMDS signal.

Scart input/output description

TV Source	Screen Display Source	Scart out
ATV	ATV	ATV
DTV	DTV	DTV

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>