 


# Haier

## **COLOR TV RECEIVER**

---

## **OWNER'S MANUAL**

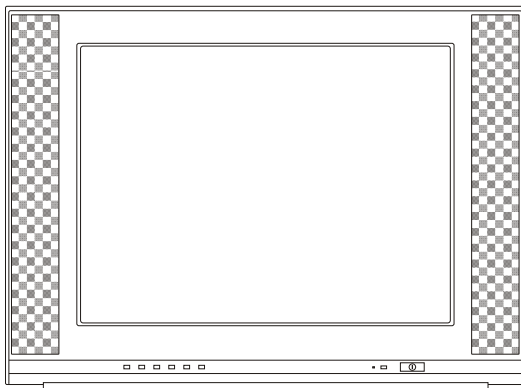

Please READ this manual carefully before operating the unit, and keep it for future reference.

The Owner's Manual for the Follow Models:  
**29F9D-P, 29T9D-P, 29F9D, 29T9D**

\*Please read this manual carefully before using your television and keep this manual in a good place for future reference.

# CONTENTS

## Before Operation

<b>Warning and cautions</b> .....	2
<b>Installation</b> .....	3
Aerial connection.....	3
Preparation of the remote control unit.....	3
<b>Function buttons and external sockets</b> .....	4
Front panel of the TV set.....	4
Rear panel of the TV set.....	4
<b>Buttons on the remote control</b> .....	5

## Basic operation

 
<b>Switching on/off the TV set</b> .....	6
<b>Watching TV program</b> .....	7
Watching TV program.....	7
Program swap and auto scan functions.....	8
<b>Searching channel</b> .....	9
Full automatic search mode.....	9
Semi-automatic search.....	10
Manual fine tune.....	11
Program skip .....	12
<b>Convenient picture and sound control functions</b> .....	13
Multiple picture modes .....	13
Black stretch and noise reduce.....	14
Mute function.....	15
<b>Time functions</b> .....	16
Clock setting and timer on/off functions.....	16
Sleep timer and program preset .....	17
<b>Setup function</b> .....	18
Screen saver and child lock functions.....	18
AVL and calendar functions.....	19
Fade and select language.....	20
<b>Position exchange function</b> .....	21
<b>Others</b>	
<b>Connection to the external audio and video equipment</b> .....	22
<b>Troubleshooting guide</b> .....	23
<b>Specifications</b> .....	24

## Warning and cautions


1. When you clean the TV set, please pull out the power plug from AC outlet. Don't clean the cabinet and the screen with benzene, petrol and other chemicals.



4. Do not place the TV set near rain or moisture as it may cause an electric shock, or the TV set to catch fire. The TV set must only be used in dry in door locations.

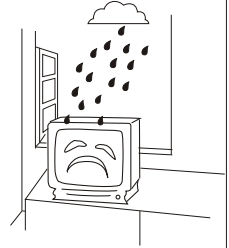

 
2. In order to prolong the using life of the TV set, please place it in a well ventilated location.

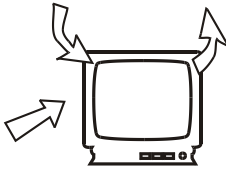


5. The back cover must only be removed by a registered electrical service person. Removing the back cover may result in electric shock, fire or damage to the TV set.



 3. Don't place the TV set in direct sunlight or near a heat source.

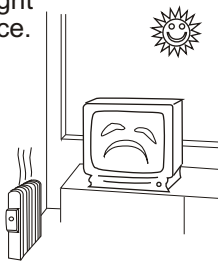

 6. If the TV set is not going to be used for a long time, or there is a severe thunder & Lighting storm, it is recommended that the TV set be disconnected from the AC power outlet and the aerial plug removed.

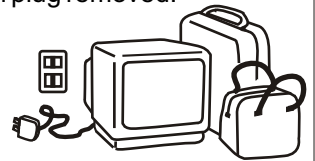


## Explanation on the display tube

In general, it is not needed to clean the tube surface. However, necessary, it's surface can be cleaned with a dry cotton cloth after cutting off the power. Don't use any cleanser. If using hard cloth, the tube surface will be damaged.

# Installation

## Aerial connection

 Generally speaking, to enjoy a clearer picture, we recommend that you use a CATV system or an outdoor antenna. In different places, the suitable antenna type and position are different.

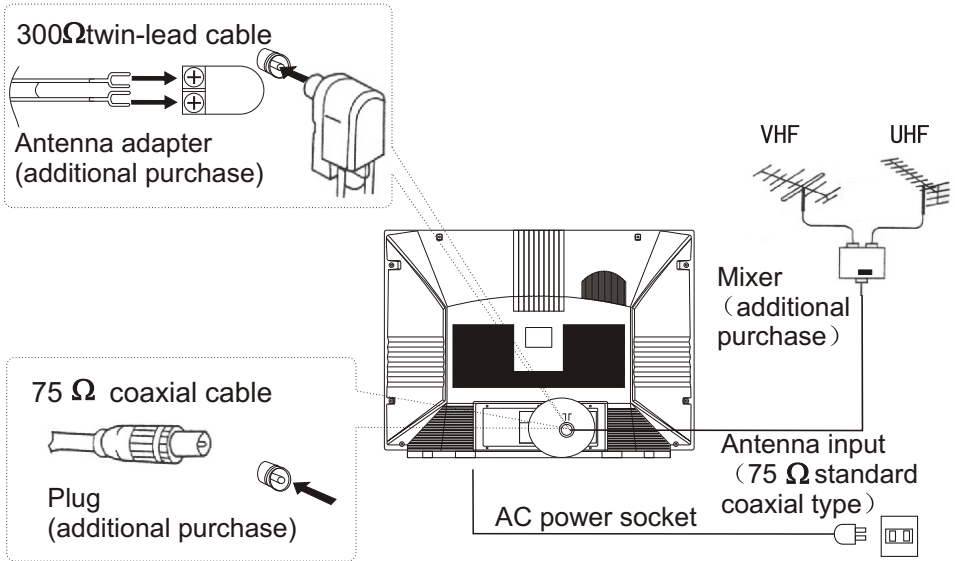

Note:

- \* It is recommended that you'd better use **75Ω** coaxial cable to remove the disturbance caused by airwave.
- \* Don't bind antenna cable and power wire together.

## Preparation of the remote control unit

### Battery installation

 
Take off the battery compartment cover. Place two AAA batteries, make sure that battery polarity matches with the +/- mark inside the battery compartment.

### Operation notes for the remote control unit


- Under normal conditions, the life time of batteries is one year.
- If you don't intend to use the unit for a long period or the electricity of the batteries is used up, remove the batteries to prevent batteries acid from leaking into the battery compartment.
- Don't throw your batteries into a fire. Dispose of your batteries with a specified method.
- Avoid the falling and the wetting of the remote control unit.

# Function buttons and external sockets

## Front and side panel of the TV set

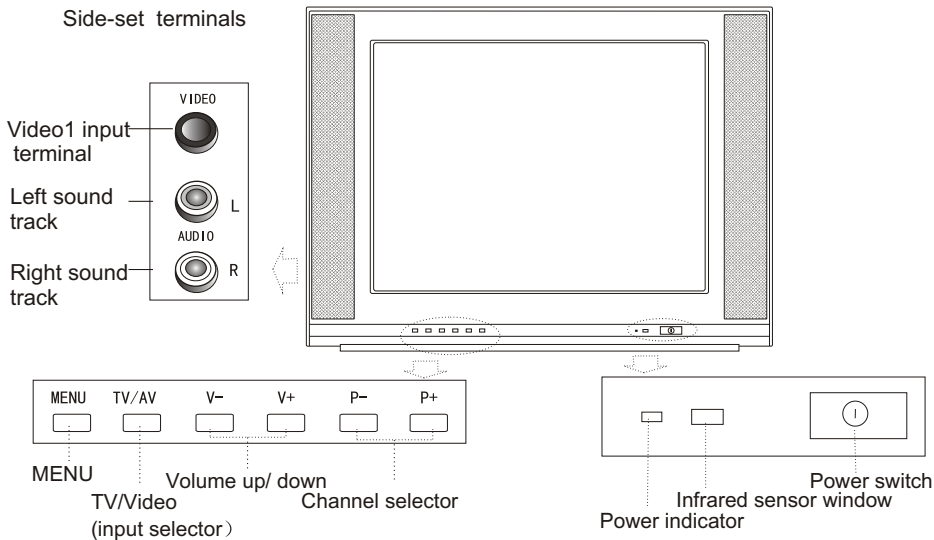

## Rear panel of the TV set

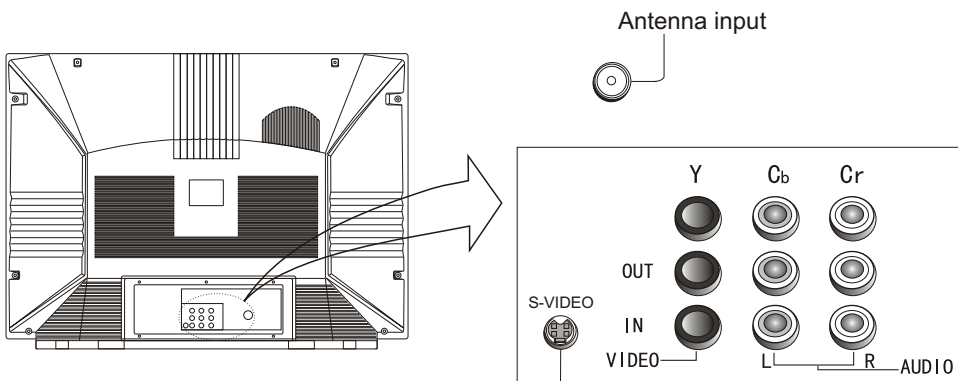 

Video output terminals: VIDEO; AUDIO (L, R)


Video 2 input terminals: VIDEO; AUDIO (L, R)

DVD input terminals: Y, Cb, Cr; AUDIO (L, R)

**NOTE** If you want to connect the TV set to the other audio/video equipment, please refer to P22.

# Buttons on the remote control
 
## Buttons and Descriptions

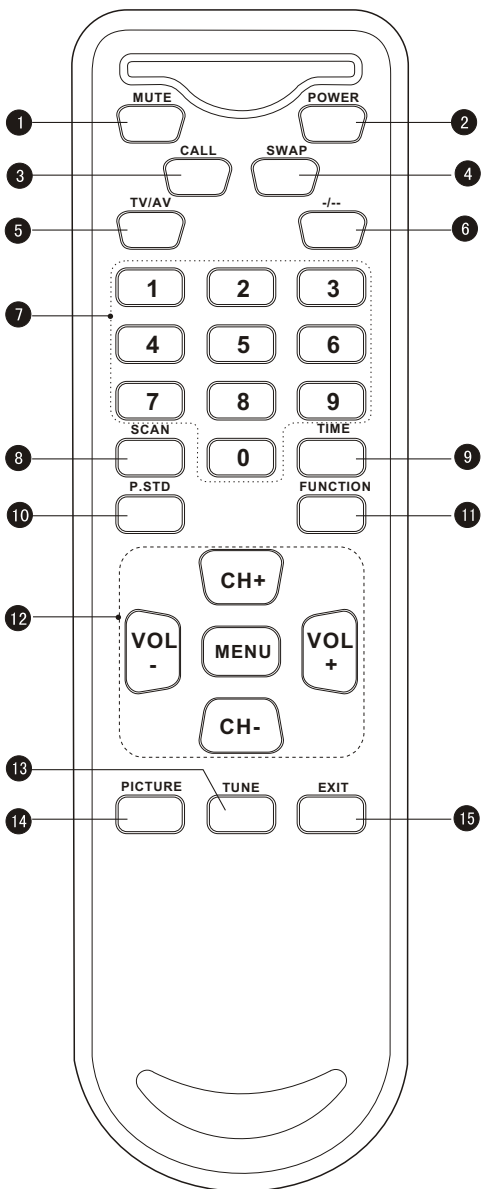

- 1 Mute Button  
Press to conceal the sound of programs.
- 2 Stand by Button
- 3 Screen Display Button
- 4 Swap function Button
- 5 TV and AV Exchange Button  
To exchanger between TV and other available video inputs
- 6 Digital selector
- 7 Program number Button
- 8 Program scan Button
- 9 Time menu
- 10 Picture mode selection
- 11 Function menu
- 12 Menu Select/ Adjust Button  
Use this button to adjust the menu, the volume and the channels.
- 13 Tune menu
- 14 Picture menu
- 15 Exit screen display

## Switching on/ off the TV set

- In the following, the methods of using power switch and remote controller to switch on/off power supply for the TV set will be explained.

### Switching on/ off the TV set

#### Switching on/ off the TV set

1 Please press the power switch to switch on AC power supply and the power indicator will light.

2 If the indicator is lighting in red, press the POWER button on the remote control again.

Note:

1 When you don't operate the TV set with a remote control, you can turn on it directly through pressing the P+/- buttons on the TV set (Child Lock must be turned off).

4  
AUTO  
BG



2 If you want to exchange to standby status, please press down the POWER button on the remote control.

3 If you want to fully switch off the power supply for the TV set, please press the power switch button on the TV set.

#### Auto switch-off function

 
 
 
When the "Back" function is on, if an empty channel is selected or the TV programs are ended for the day, the power will be switched off 5 minutes later automatically. If the "OFF TIME" is on, it will be switched off according to the presetting time. The auto power off function does not work under video input or when the background is off.

(Note: If the "off timer" is less than 5 minutes, it will be switched off automatically to the preset Time. )

# Watching TV

- You can watch TV program in a preset channel.

## Watching TV program

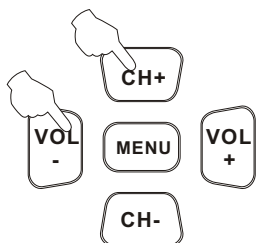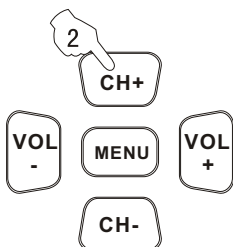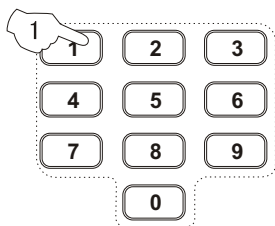

## How to select TV program

### Select the desired program

#### 1 Using "Program number" buttons

- Directly enter the channel number with the numeric keypad on the remote control.
- To select channel numbers from 10 ~ 99 press [-/--] button and enter the two digit channel number
- To select channel numbers from 100 ~ 218 press [-/--] button twice and enter the 3 digit channel number

#### 2 Using the CH+/- buttons

- Press the CH+ button to select a channel number in number increasing direction.
- Press the CH- button to select a channel number in number decreasing direction.

 
### Select the desired sound

Press the VOL+/- buttons on the remote or the front of the TV set to adjust the volume level. The range is 0~99. When the volume buttons are pressed the volume level is displayed automatically on the TV screen.

### If the colour or sound of a channel is abnormal

The settings of the colour system or the sound system may be wrong.

Press the TUNE button and setting menu shown on the right will display on the screen.

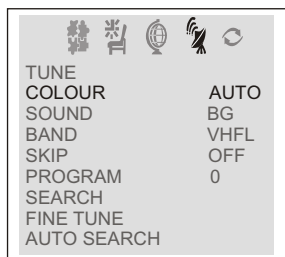

- If picture colour is abnormal  
Use the CH+/- buttons to select Colour then the VOL+/- buttons to change between Auto, PAL, NTSC, SECAM and NTSC443. Press the EXIT button to save the setting.
- If the picture sound is abnormal  
Use the CH+/- buttons to select Sound then press the VOL+/- buttons to select the sound system.



## Watching TV (continued)

 
- Swap function enables quick swap to the last watched program.
- Auto scan function enables automatic successive scanning of all the programs in memory with "OFF" skip status (each channel will last about 2 seconds).

### Program swap and auto scan functions

#### Program swap



1 Suppose the channel number you used just now is 8 and the channel number you are using is 18 (as shown in the figure).

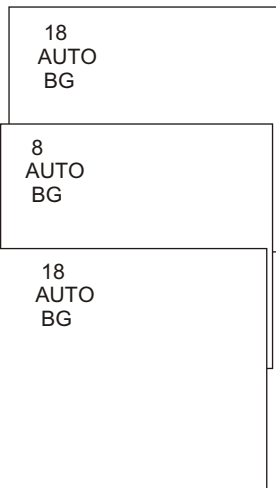

2 If you want to return to the last watched program channel 8, you can simply press the SWAP button.

3 If you want to return to channel 18, press the button again. Through this function, you can easily change between the channel you are using and the channel you used last time.

#### Auto program scan



1 If you want to select a desirable program, you may scan all the TV programs in memory. You can simply press the SCAN button to do this. The programs will appear one after another from beginning to end (each channel number will last about 2 seconds).

 


2 If you want to stop the function during auto scanning, simply press the SCAN button again.

# Searching channel


- This TV set has three methods to set the channels, which are respectively full automatic, semi-automatic and manual fine tune.
- In this section, how to use the remote control to set the channel is explained. You can also use the buttons on the TV set to set channel.

## Full automatic mode

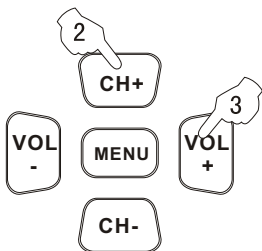


### Automatic search

 
1 Press the TUNE menu button , till the TUNING menu shown on the right display on the screen.

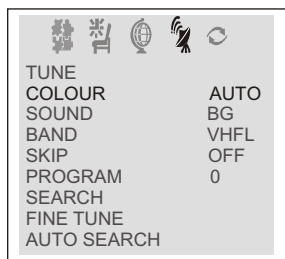

 2 Press the CH+/- buttons to select "AUTO SEARCH".

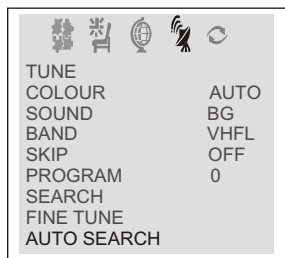


 3 Press the VOL+ button to ensure automatic search function operates. All channels now playing program will be automatically preset in order . After the search has finished, the first program number will display on the screen.

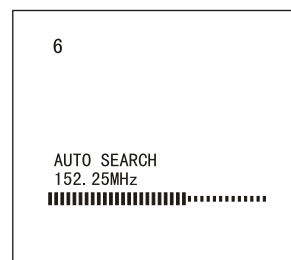

### Display function

 Press the CALL button, then the channel number and the systems will be displayed on the screen.

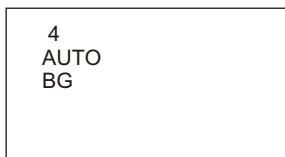

# Searching channel

 
(Continued)

## Semi-automatic search


### Semi-automatic search

1 Press the CH+/- buttons or PROGRAM NUMBER (0-9) buttons to choose desired channels (I.E. channel 1) .


1  
AUTO  
BG



 2 Press the TUNE menu button, till the TUNING menu shown on the right display on the screen.

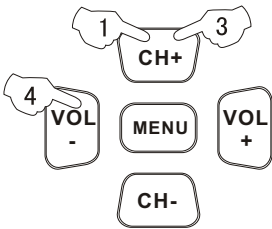

 3 Press the CH+/- buttons to select "SEARCH".

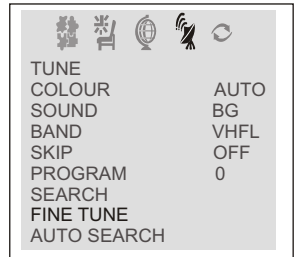

4 Press the VOL-/+ buttons to start searching.

The VOL- (down) button is used for lower side program search.  
The VOL+ (up) button is used for higher side program search.

Repeat this step, till find the desired channel.

1

SEARCH  
152.25MHz



### To turn off the on-screen menu

 
 
 
In general, after you press the MENU button, the menu item display (PICTURE, TIME, FUNCTION, TUNE, EXCHANGE, ETC.) will automatically disappear within 15 seconds. If you want to eliminate these contents immediately, please press the EXIT button.



# Searching channel

(Continued)

## Program skip

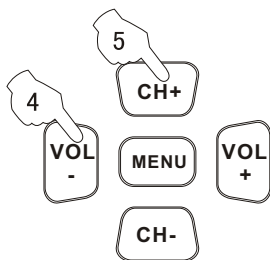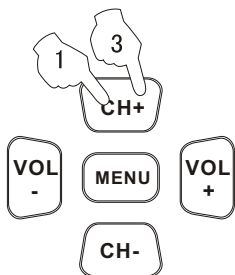

## Program skip

The Program skip feature enables you to skip/hide programs that you do not wish to be displayed when using the CH+/- buttons. These channels will still be displayed by directly using the channel number buttons on the remote control.

1 Press the CH+/- buttons or PROGRAM NUMBER (0-9) button to choose desired channels (I.E. channel 1).

1  
AUTO  
BG

2 Press the TUNE menu button, till the TUNING menu shown on the right display on the screen.

3 Press the CH+/- buttons to select "SKIP".

TUNE	
COLOUR	AUTO
SOUND	BG
BAND	VHFL
SKIP	OFF
PROGRAM SEARCH	0
FINE TUNE	
AUTO SEARCH	

4 Press the VOL-/+ buttons to turn the SKIP function "ON".

TUNE	
COLOUR	AUTO
SOUND	BG
BAND	VHFL
SKIP	ON
PROGRAM SEARCH	0
FINE TUNE	
AUTO SEARCH	

5 Press the TUNE button to close the menu. When you use the CH+/- buttons to select channel, this channel will be skipped. However, you can still use the PROGRAM NUMBER buttons to select the skipped channel numbers.

## If you want to recover the skipped channel

 
1 Use the PROGRAM NUMBER buttons to select the channel number to be recovered.

2 Repeat those steps just now.

3 Press the VOL-/+ buttons to turn the SKIP function "OFF".

# Convenient picture and sound control functions


## Multiple picture modes



### How to select picture modes

You can quickly select the desired picture mode from four preset modes and one customized mode.

 Press the P.STD button to select the desired picture quality. Five kinds of picture modes (i.e., "STANDARD", "RICH", "USER", "LISTEN", "SOFT" ) can be selected in turn.


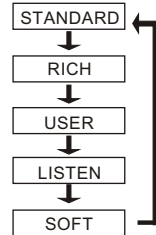


### How to customize your own picture status

1 Press the PICTURE menu button, till the PICTURE menu shown on the right display on the screen.



  2 Press the CH+/- buttons to select the item to adjusted, then press the VOL-/+ buttons to obtain the desired effect.

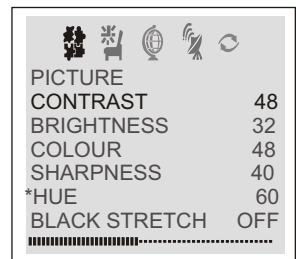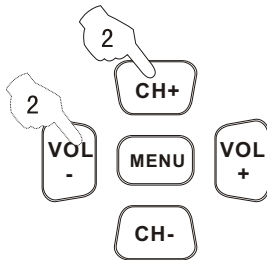

ITEM	Press VOL-	Press VOL+
CONTRAST	Weak	Strong
BRIGHTNESS	Dark	Bright
COLOUR	Shallow	Deep
SHARPNESS	Soft	Sharp
*Hue	lean to purple	lean to green

Note:


The "Hue" item only appears when the colour system is NTSC.

# Convenient picture and sound control functions

 (Continued)

- Black Stretch-(Automatically Increases the Contrast Rage)
- Noise Reduce - (Picture Noise & Grain Reduction Circuit. Only use on poor reception.)

## Black stretch and noise reduce

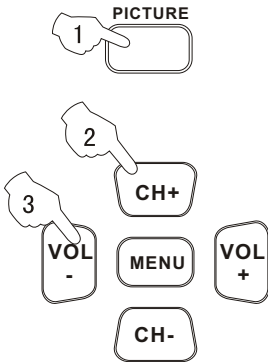

### How to select BLACK STRETCH


1 Press the PICTURE menu button , till the PICTURE menu shown on the right display on the screen.

PICTURE	
CONTRAST	48
BRIGHTNESS	32
COLOUR	48
SHARPNESS	40
*HUE	60
BLACK STRETCH	OFF

2 Press the CH+/- button to select "BLACK STRETCH".

PICTURE	
CONTRAST	48
BRIGHTNESS	32
COLOUR	48
SHARPNESS	40
*HUE	60
BLACK STRETCH	ON

 3 Press the VOL-/+ buttons to turn the BLACK STRETCH function "ON" or "OFF".

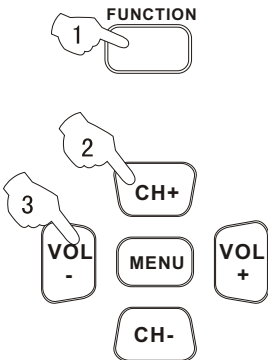

1 Press the FUNCTION menu button , till the FUNCTION menu shown on the right display on the screen.

FUNCTION	
ENGLISH	
BACKGROUND	ON
NOISE REDUCE	ON
FADE	ON
CHILD LOCK	OFF
AVL	ON
CALENDAR	

2 Press the CH+/- buttons to select "NOISE REDUCE".

FUNCTION	
ENGLISH	
BACKGROUND	ON
NOISE REDUCE	OFF
FADE	ON
CHILD LOCK	OFF
AVL	ON
CALENDAR	

3 Press the VOL-/+ buttons to turn the NOISE REDUCE function "ON" or "OFF".

## Convenient picture and sound control functions

(Continued)

### Mute function



### Sound mute

1 Press the MUTE button on the remote control and "MUTE" type face will display on the lower part of the screen. At this time, the sound of the TV set is turned off.

MUTE

2 If you want to recover the sound, press the MUTE button again or directly press the VOL-/+ buttons.

 


# Time functions

## Clock setting and timer on/off functions

### Clock setting

The clock will only work if the TV set is left turned on or in standby. When the set is disconnected from the power supply or is turned off by the main power on the front panel, the clock loses power and will need to be reset when the power is reconnected.

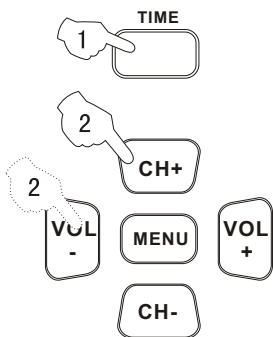


1 Press the TIME menu button, and the TIME menu display on the screen.

2 Press the CH+/- buttons select "CLOCK", then press the VOL -/+ buttons to adjust the time in hour position; press again the CH+/- buttons to select the time in minute position, then press the VOL -/+ buttons to adjust the value of minutes.

TIME	
CLOCK	17:18
ON TIME	18:00
ON PROG	1
OFF TIME	--:--
SLEEP TIMER	0
REMIN TIME	--:--
REMIN PROG	1

### On/off timer

 Using on/off timer function, the TV set can automatically turn on to a preset program or shut down in a preset time.

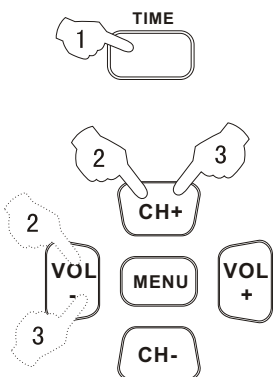

1 Press the TIME menu button to call up the TIME menu on the screen.

2 Press the CH+/- buttons to select "ON TIME", then press the VOL -/+ buttons to set the value in hour position; press again the CH+/- buttons to select the minute position and set the value of the minute.(take 18:00 as an example)

3 Press the CH+/- buttons to select "ON PROG", then press the VOL-/+ or program direct number buttons to select your desired channel (take 8 as an example).

4 Repeat step 1-2 to set OFF TIME.(take 23:00 as an example)

TIME	
CLOCK	17:18
ON TIME	18:00
ON PROG	1
OFF TIME	--:--
SLEEP TIMER	0
REMIN TIME	--:--
REMIN PROG	1

TIME	
CLOCK	17:18
ON TIME	18:00
ON PROG	8
OFF TIME	23:00
SLEEP TIMER	0
REMIN TIME	--:--
REMIN PROG	1


# Time functions
 
## (Continued)

### Sleep timer and program preset

#### Sleep timer

The TV set have 18 sections option for sleep timer function (each section has a time interval of 10 minutes) (See right chart):

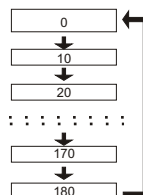

1 Press the TIME menu button, and the TIME menu display on the screen.

2 Press the CH +/- buttons to select "SLEEP TIMER".

3 Press the VOL -/+ buttons to adjust the SLEEP TIMER level.

TIME				
CLOCK				17:18
ON TIME				18:00
ON PROG				8
OFF TIME				23:00
SLEEP TIMER				120
REMIND TIME				--:--
REMIND PROG				1

#### REMIND PROG function

Program remind timer, that displays an on-screen reminder prompt, when a program on a different channel is due to start.

1 Press the TIME menu button to call up the TIME menu on the screen.

 
 
2 Press the CH +/- buttons to select "REMIND TIME", then press the VOL +/- buttons to set the value in hour position; press again the CH +/- buttons to select the minute position, and then set the value of the minute. (take 19:00 as an example)

3. Press the CH +/- buttons to select "REMIND PROG", then press the VOL +/- buttons or the program direct number buttons to set the desired channel (take 18 as an example).

NOTE: For REMIND PROG to operate CHILD LOCK must be turned off.

TIME				
CLOCK				17:18
ON TIME				18:00
ON PROG				8
OFF TIME				23:00
SLEEP TIMER				120
REMIND TIME				19:00
REMIND PROG				1

TIME				
CLOCK				17:18
ON TIME				18:00
ON PROG				8
OFF TIME				23:00
SLEEP TIMER				120
REMIND TIME				19:00
REMIND PROG				18

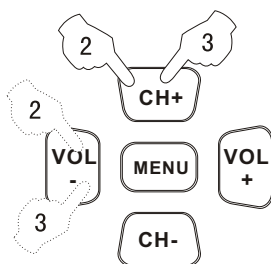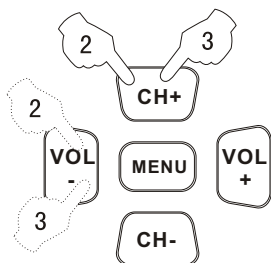

# Set up function

## Screen saver and childlock functions

 
### How to start screen saver function

When the BACKGROUND function is ON, the screen will turn automatically as shown "NO SIGNAL" of moving .

NO SIGNAL

1 Press the FUNCTION menu button, till the FUNCTION menu shown on the right display on the screen.

2 Press the CH+/- buttons to select "BACKGROUND" and press the VOL-/+ buttons to turn the BACKGROUND function "ON" .

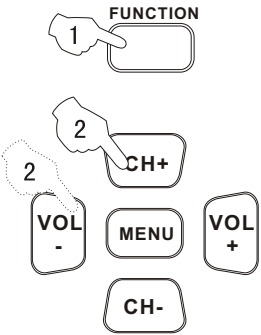


FUNCTION	ENGLISH	BACKGROUND	NOISE REDUCE	FADE	CHILD LOCK	AVL	CALENDAR	ON	ON	ON	OFF	ON

### Child lock function

 Enables the TV front control buttons to be locked.

1 Press the FUNCTION menu button, till the FUNCTION menu shown on the right display on the screen.

2 Press the CH+/- buttons to select "CHILD LOCK" and press the VOL-/+ buttons to turn CHILD LOCK function "ON" .

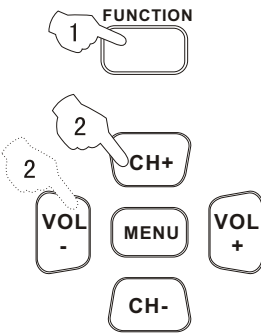

FUNCTION	ENGLISH	BACKGROUND	NOISE REDUCE	FADE	CHILD LOCK	AVL	CALENDAR	ON	ON	ON	OFF	ON



#### NOTE:

  All the control panel buttons on the front of the TV are disabled when CHILD LOCK is turned on. The power switch will still turn the TV set off.

# Set up function

(Continued)

## AVL and calendar functions

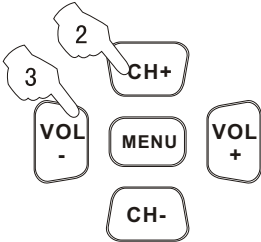


### AVL function

1 Press the FUNCTION menu button, till the FUNCTION menu shown on the right display on the screen.



2 Press the CH+/- button to select "AVL" .

 3 Press VOL-/+ button to turn the AVL function "ON" or "OFF."

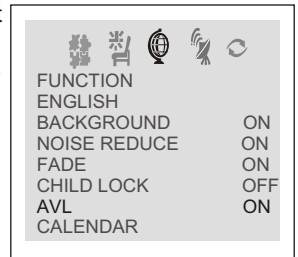

### Calendar function

1 Press the FUNCTION menu button, till the FUNCTION menu shown on the right display on the screen.

2 Press the CH+/- button to select "CALENDAR", then press the VOL-/+ buttons to the CALENDAR display on the screen.

3 Press the CH+/- buttons to turn the YEAR/MONTH/DAY, press VOL-/+ buttons to set or adjust the YEAR/MONTH/DAY.



# Set up function

 
## (Continued)

### Fade and select a language


#### Fade

The FADE control allows time for the picture tube to warm up and gently turned on, which can help prolong the life of the picture tube.

1 Press the FUNCTION menu button, till the FUNCTION menu shown on the right display on the screen.

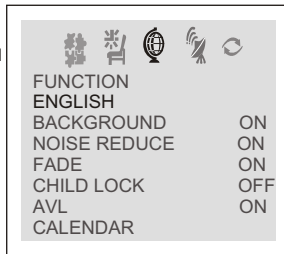

 
2 Press the CH +/- buttons to select "FADE".

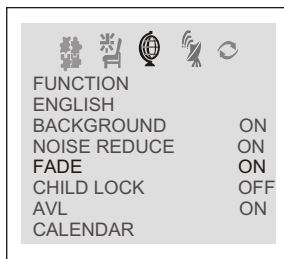

3 Press the VOL +/- button to turn the FADE function "ON" or "OFF".




#### Select a language

 1 Press FUNCTION menu button, till FUNCTION menu shown on the right display on the screen.

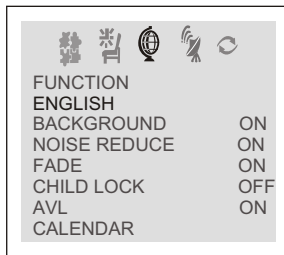




2 Press the CH +/- buttons to select "ENGLISH".

   3 press the VOL +/- buttons to select the desired language. Then all the items will be displayed in the selected language.

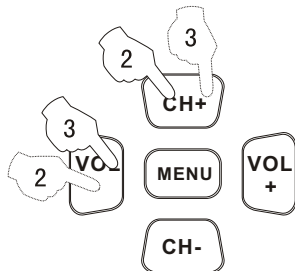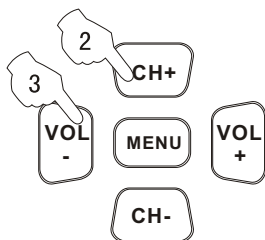

# Position exchange functions
   
## Exchange

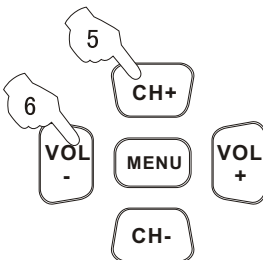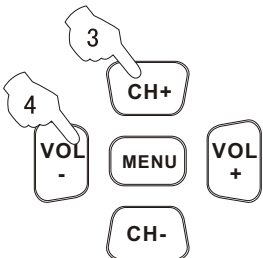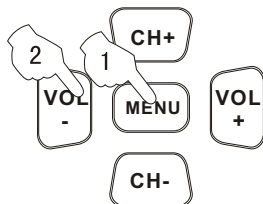

## Exchange

This feature enables TV programs that may be on a wrong TV channel number to be swapped/exchanged. This feature is very useful when Automatic Search Tuning has been used, to reallocate the found programs to the correct channel numbers.

1 Press the MENU button till the EXCHANGE menu display on the screen.



2 Press the VOL-/+ buttons or the PROGRAM NUMBER (0-9) buttons to set PROGRAM 1 TO 6.

3 Press the CH-/+ buttons to select "PROGRAM 2".



4 Press the VOL-/+ buttons or the PROGRAM NUMBER (0-9) buttons to set PROGRAM 2 TO 9.

5 Press the CH+/- buttons to select "EXCHANGE".

 


6 Press the VOL-/+ buttons to set "EXCHANGE".

# Connecting the TV set to the other video and audio equipment

## Connecting to the other video and audio equipment

You can connect a stereo to the AUDIO output terminals on the TV set to enjoy sounds of higher quality. VIDEO and AUDIO output terminals output the video and audio signals being monitored by the TV set. The electric levels of video and audio output signals are fixed.

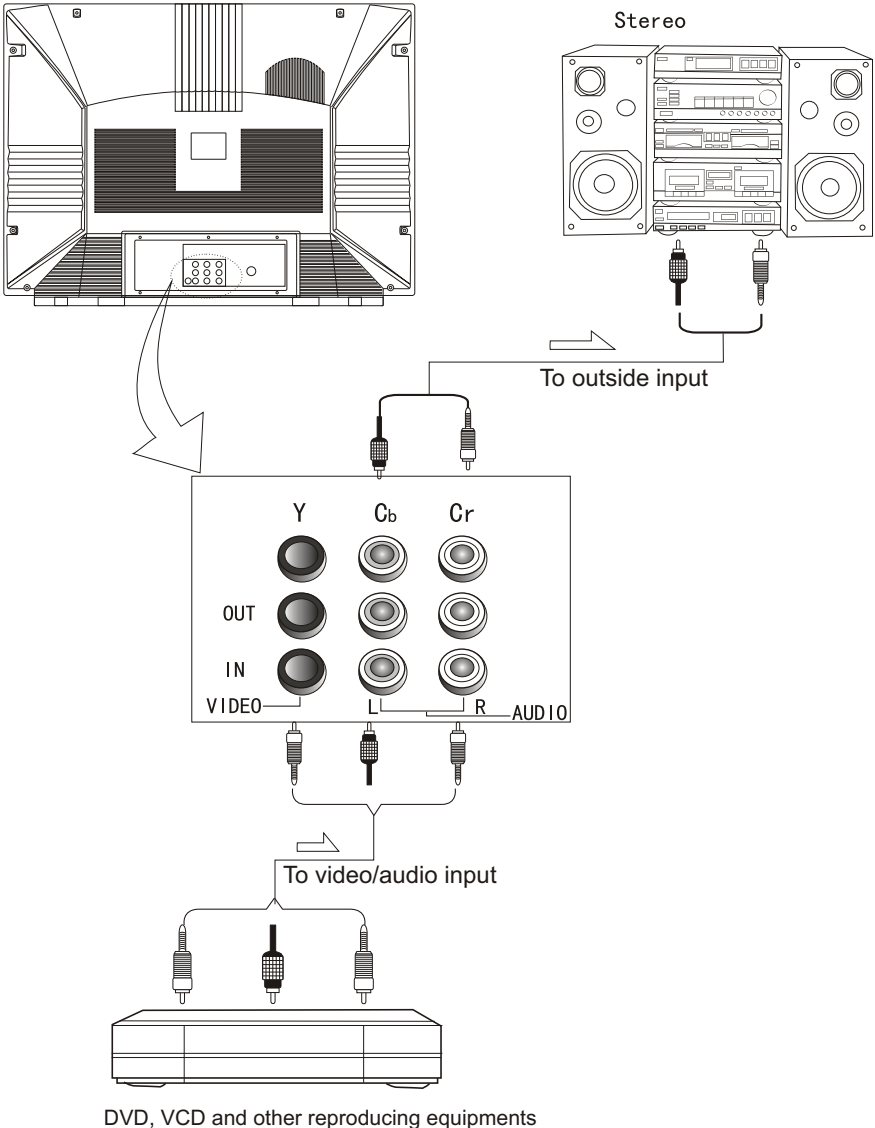

## Troubleshooting guide

- If the TV set has breakdown, please check according to the following list.

Checking	
No power supply	<ul style="list-style-type: none"> <li>• If power line is connected?</li> </ul>
No sound	<ul style="list-style-type: none"> <li>• Whether sound mute is used?</li> </ul>
Bad colour/ hue	<ul style="list-style-type: none"> <li>• Whether the adjustments of contrast, colour and hue are suitable?</li> <li>• If the position of the TV set is changed during its work, the colour shadow may appear.</li> <li>• If this case occurs, please switch off the power supply for TV set and let it cool for about 30 minutes, then switch on the power supply again.</li> </ul>
Colour spot Scramble	<ul style="list-style-type: none"> <li>• If there are disturbances from automobile, motorcycle, electric car, fluorescence lamp, blower etc?</li> <li>• If there are disturbances from the other TV set, PC, game machine and wireless broadcasting station?</li> </ul>
Double or triple image	<ul style="list-style-type: none"> <li>• Whether there is any reflection of broadcasting signal from mountain or building?</li> <li>• Whether the antenna position is changed or not?</li> </ul>
Snowy picture	<ul style="list-style-type: none"> <li>• Whether the antenna connection is disconnected or fallen off?</li> <li>• Whether the antenna position is changed or not?</li> </ul>
The remote control do not work	<ul style="list-style-type: none"> <li>• Whether the batteries in the remote control unit are used up or not?</li> <li>• Whether the installation of the batteries is correct or not?</li> <li>• Whether there is any barrier between the remote control and the infrared receiver?</li> <li>• Whether the infrared receiver is influenced by strong light?</li> <li>• Whether the main power supply is connected?</li> </ul>

### The cases shown below are not breakdowns:

Snapping sound from the cabinet of the TV set	<ul style="list-style-type: none"> <li>• The snapping sound is caused by the telescoping of the cabinet due to the temperature changing. It is normal, please use it reassuringly.</li> </ul>
Uneven colour sometimes appearing on a part of the screen	<ul style="list-style-type: none"> <li>• This kind of uneven colour may be caused by bright picture setting.</li> <li>• Even colour can be recovered by decreasing contrast.</li> </ul>

### Note

If the breakdown can't be cleared after you doing by above steps, please get in touch with the local center of service and don't open the back cover yourself.



## Specifications

---

Colour system	PAL, SECAM, AV NTSC
Sound system	DK, BG
Display tube	29" CRT
Sound output power	5W+5W
Power supply	~ 160-250V 50/60 Hz
Power consumption	≤150W
Size	773 (width) x594 (depth) x500 (height) (mm)
Supplied accessories	Remote control X1 Owner's manual X1 Battery(AAA) X2

\*The design and specifications may be changed without notice.

# Haier

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>