

Haier

TFT-LCD COLOUR TELEVISION RECEIVER

OWNER'S MANUAL

This User's Manual is applicable for the following models:
L26A9-AK,L37A9-AK,L37A9-AKF

Please read this manual carefully
before operating the unit, and keep
it for future reference.

*Please read this manual carefully before using your television and keep this manual in a good place for future reference.

*To achieve the best performance of your television, read this User's Manual carefully and properly store it for future reference.

*Information of screen displays and figures in the User's Manual may vary due to technical innovations.



CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN



Warning

*To avoid electric hazards, it is strongly suggested that the back cover not be opened, as there is no any accessory inside the casing.

*If necessary, please contact authorized after-sales services.

*A lightning flash mark in a triangle: A potentially hazardous situation, which, if not avoided, could result in serious injury by high voltage.

*An exclamation mark in a triangle: Major part or accessory of which technical specifications must be followed if it is to be replaced.



Warning:

To avoid fire or electric hazards, never place your television receiver in an area with heavy moisture. Attention should be paid to avoid accidental scratches or impacts onto the LCD screen.



 
Caution:

Unauthorized disassembly of this product is prohibited.


CONTENTS

Safety precautions	1
Preparation for the Remote Control	3
Keys and Ports	4
Front panel	4
Side panel	4
Back panel	5
Keys of remote control	6
OSD display	7
Power on / off	8
Viewing TV program	9
Program play	9
Quick view and program scan	10
Tuning	11
Automatic search	11
Manual search	12
MFT	13
Skip	14
Channel exchange and edit	15
Adjusting the picture	16
Multiple picture modes	16
Adjusting the sound	17
Multiple sound modes	17
Sound limit and mute	18
Setting the timer	19
Setting the Clock and time on/off	19
On Prog	20
Setting the function	21
Language and OSD position	21
Menu timeout and menu background option	22
PIP	23
Child lock	23
De-interlace	24
PC setup	25
Setting the other function	26
Picture still, sleep timer and program edit	26
Stream media broadcast system	27
Connecting additional equipments	36
Antenna connection	36
How to connect the signal with other equipments	37
How to connect the video input terminal	38
How to connect the component input terminal	38
How to connect the PC input terminal	39
External speaker installation	40
Woofer installation	40
Troubleshooting	41
Specification	42


Safety Precautions

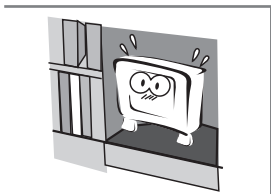

 
The product should be tightly fixed to avoid drop damages and even fire.

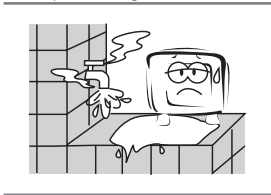

 
Do not locate the product close to water or oil, which may cause fire hazards.

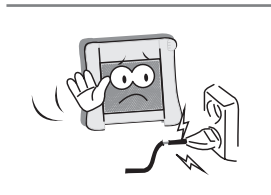

 
Do not use damaged or worn electric plugs, and keep electric cord away from heat sources to avoid electric shocks or fire hazards.

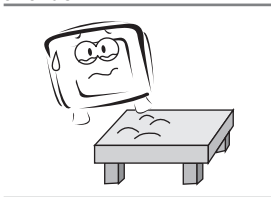

 The product must be placed on a solid and stable surface to avoid collapse.

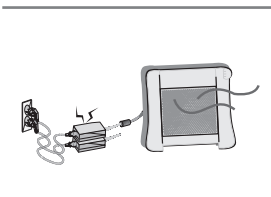

 
Keep the product away from a transformer or heat source to avoid fire hazards.

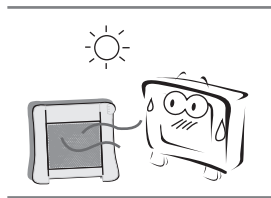


To avoid fire hazards, do not use this product under direct sunlight or closely to heat sources.



 
Unplug the power supply and antenna of the product when there is a rainstorm, especially thunderstorm.

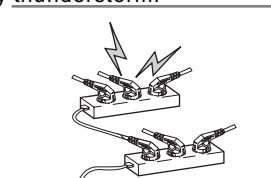

 Do not connect excessive sockets in parallel or share the same socket by multiple plugs to avoid fire hazards.

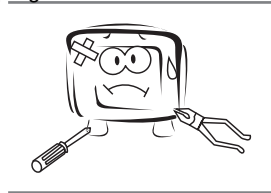


 Unauthorized disassembly of the television is prohibited to avoid electric shocks or fire hazards. Contact authorized after-sales service if technical service is needed.

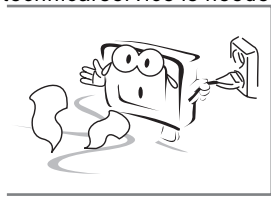


Disconnect the product from power supply and contact authorized after-sales service if abnormal sound is heard in the product.

 
Safety Precautions (continued)

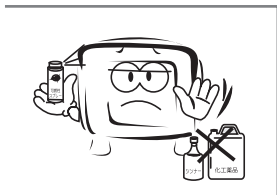

 
Don't use or store inflammable materials near the product to avoid explosion or fire hazards.

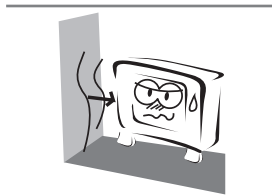

 Don't place the product in a humid area to avoid fire hazards.

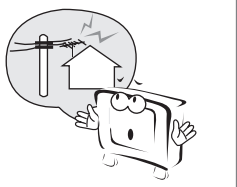

 The antenna of the product should be away from electric cable to avoid electric shocks.

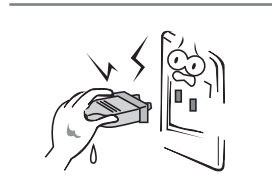


Never touch the plug when your hand is wet as this might cause electric shocks.




Always make sure that the television is well plugged as poor electric connection might cause fire.



 When antenna is used, measures should be taken to prevent water from flowing down along the cable into the television.

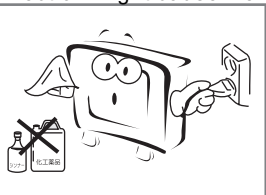

 
Unplug the television, use soft fabric, never chemicals, if you are going to make cleaning of the product. Make sure that no water drops in the product.

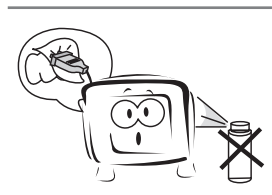

The plug and electric cable must be kept clean to avoid electric shocks or fire hazards.



 Disconnect the television from power supply and antenna when there is a rainstorm or thunderstorm to avoid electric shocks or fire hazards.



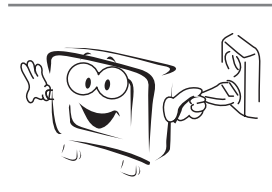


Disconnect the television from power supply to avoid electric shocks or fire hazards in a long vacation.

Preparation for the Remote Control


Battery loading

   1. Slide open the cover of the battery compartment on the back of the remote controller.
2. Load two 7# alkaline batteries in the compartment. (plus and minus poles to respective mark)
3. Replace the cover of the battery compartment.

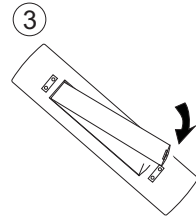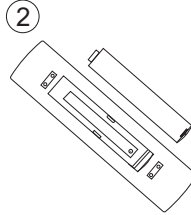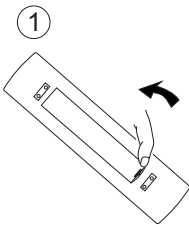

Precautions

 Make sure that there is no obstacle between the remote controller and television set.

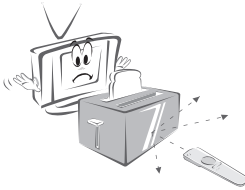


As strong light may interfere the signals, change your position to operate the remote controller if the television cannot be turned on or off as you expect.



Keep the remote controller away from heat source or humid area to ensure effective performance of the remote controller.




 Make sure that two 7# 1.5V alkaline batteries are loaded. The batteries must be of the same type. The batteries must be located properly. The batteries are not rechargeable.




Keys and Ports

 Front panel

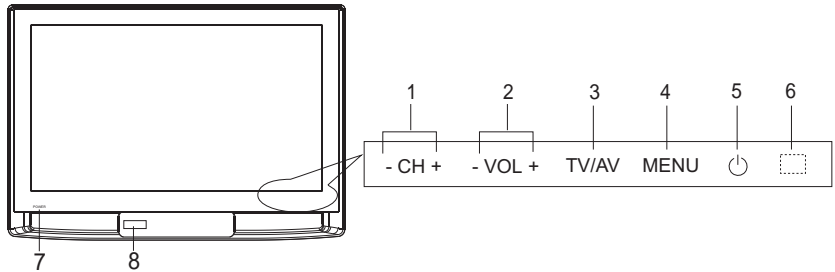


- 1、CH-/+ : program minus and plus , menu options
- 2、VOL-/+ : volume decrease and increase , menu reset and entry
- 3、TV/AV: all input source select:TV-VIDEO-SIDE VIDEO-S VIDEO-YUV-USB-VGA-DVI
- 4、MENU: menu display
- 5、Power on/off and indicator: in red when standby mode, in blue when display.
- 6、Remote control signal receive window
- 7、POWER :AC power on/off
- 8、Multi-media input

 Side panel

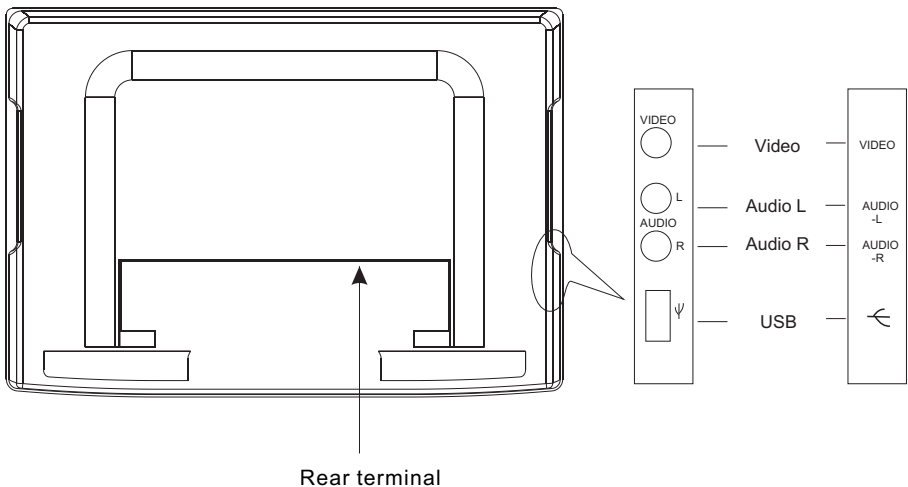

Keys and Ports (continued)

 
Back panel

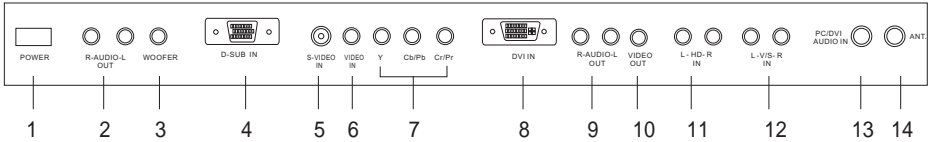

- 1、 **POWER**:AC power input
- 2、 **R-AUDIO-L OUT** : External audio output } (Not available on L26A9-AK)
- 3、 **WOOFER** : External woofer output
- 4、 **D-SUB IN** : Computer input,For PC display purpose. Connects to the VGA analog output connector of the PC display card.
- 5、 **S-VIDEO IN** : S-VIDEO input
- 6、 **VIDEO IN** : external video input
- 7、 **YCbCr,YPbPr** : is an video input terminal connecting to the video output terminal of the video output device(Y Cb Cr/ Y Pb Pr).
- 8、 **DVI IN** : For high quality PC display purpose. Connects to the DVI digital output connector of the PC display card.
- 9、 **R-AUDIO-L OUT** : audio output (to external speaker)
- 10、 **VIDEO OUT** : external video output
- 11、 **L-HD-R IN** : external YUV (YCbCr,YPbPr) audio input
- 12、 **L-V/S-R IN** : external S-VIDEO/VIDEO audio input
- 13、 **PC/DVI AUDIO IN** : external D-SUB/DVI audio input
- 14、 **ANT.** : Connect antenna or CATV 75 coaxial cable to receive TV/ CATV signal.

Keys of remote control

 The remote controller cannot be operated unless the batteries are properly loaded.

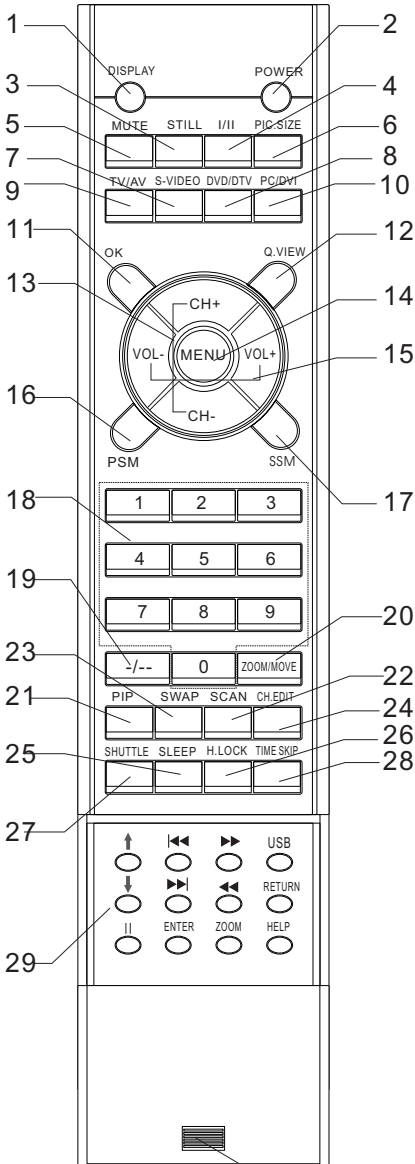

1. **DISPLAY:** Display the current info
2. **POWER:** Press to turn on the TV from standby mode. Press again to switch off the TV to standby mode.
3. **STILL:** Press it to freeze-frame the current screen press again to continue playing(never see the still picture for long time, it would burn-in the screen)
4. Nicam selection in the signal
5. **MUTE:** Press this button to mute the sound. Press again to reactivate the sound. Sound also reactivated if the power is turned off then on or if press **VOL+** button.
6. **PIC.SIZE:** Press to select the display the size of the screen(never see the 4:3 picture for long time, it would burn-in the screen)
7. **S-VIDEO:** Press it to select S terminal input.
8. **DVD/DTV:** Select YUV input
9. **TV/AV :** Press this key to select the sources
10. **PC/DVI:** Press it to select inputs as follows: TV-VGA-DVI-TV
11. **OK:** Press to confirm
12. **Q.VIEW:** Back to the last channel
13. **CH+/-:** Select the option up and down in menu or select channels when there is no OSD.
14. **MENU:** Press to display or exit the menu
15. **VOL+/-:** Left and right orientation in menu option or adjust the volume when there is no OSD.
16. **PSM:** Press to select the picture mode
17. **SSM:** Press to select the sound mode
18. Number key: Press to select the channel number
19. are not available in these set .
20. **ZOOM/MOVE:** PIP moving
21. **PIP:** PIP on or off
22. **SCAN:** Scan all preconcerted channel program
23. **SWAP:** Switch the input signal of the PIP and the main picture
24. **CH.EDIT:** Press to display the stored channel diagram
25. **SLEEP:** Can be used to set time to change the TV into the standby status after a period of preset time.
29. Only for the multi-media ,reference to the instruction following.

Note:

The function just takes the remote control for example in this manual P+/(CH+/-),V+/(VOL+/-),MENU,TV/AV and POWER on TV panel are corresponding with the CH+/-,VOL+/-,MENU,TV/AV and POWER keys.

OSD display

There are some OSD (on screen display) following for you to reference

Picture menu

Brightness	50
Contrast	50
Saturation	50
Hue	50
Sharpness	50
Color Temp.	Std

Picture | Audio | Tuner | Func | PC | Time

Audio menu

Bass	50
Treble	50
Balance	50
Surround	Off
SubWoofer Switch	Off
SubWoofer	50
AVL	Off

Picture | Audio | Tuner | Func | PC | Time

Tuner menu

Prog.	0
Color Sys.	PAL
Sound Sys.	DK
Skip	Off
Prog.Name	----
Search Set	>>>
Auto Search	>>>
Exchange	>>>

Picture | Audio | Tuner | Func | PC | Time

Function menu

OSD Position	>>>
OSD Timer	60S
OSD Language	English
PIP	>>>
Transparency	0
De-interlace	>>>
Child Lock	Off

Picture | Audio | Tuner | Func | PC | Time

PC menu

Auto	>>>
Clock	0
Phase	0
H_Position	0
V_Position	0
I/P Info.	VGA

Picture | Audio | Tuner | Func | PC | Time

Time menu

Clock	0:00
Off Time	Off
Off Time	0:00
On Time	Off
On Time	0:00
On Prog.	0

Picture | Audio | Tuner | Func | PC | Time

Note:

There may be some difference between the above OSD and your realset, you could adjust it according to what you want following the steps as follow:

1. Press MENU button to enter the main MENU
2. Press VOL-/+ to select the main menu left and right orientation
3. Press OK or CH+/- to enter the submenu
4. Press MENU to back to the last menu
5. Press VOL+/- to adjust the item of the menu
6. There is no SubWoofer Switch and SubWoofer in sound menu in L26A9-AK

POWER



Power ON/OFF

1. Switch on power supply (indicator in red in standby)

2. If the television is on standby mode , you could press **POWER** button on remote controller or **POWER** button on the TV to turn on the TV.

3. If you want to switch off the TV to standby mode press **POWER** button on TV or **POWER** button on remote controller .

 


4. Disconnect the power supply or unplug the television if it is intended to completely cease the television performance.

Viewing TV Program

- There are 160 channels from 0 to 159.

Program play

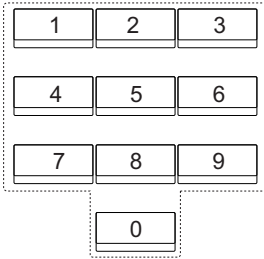

How to select program

Select desired program

1. Select buttons directly
If program number is selected, press digit 1~9 directly.

2. Select buttons in sequence

 
Press **CH+/-** button for program option. (Note: If Skip mode is activated, the program will not appear by this way.)

Choose the proper volume you like

Press **VOL+/-** button to adjust sound volume.

If the color or sound of one channel is abnormal



It might be because the color or sound system has been set improperly, you may follow the instruction below to adjust it : press **MENU** and **VOL+/-** to select Tuner menu ,you can see the form , then press **CH+/-** to enter

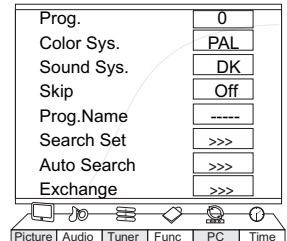

- If the color of the picture is abnormal

Press **CH+/-** to "Color Sys. ", then press **VOL+/-** to select the proper system.(AUTO、PAL、NTSC443 and NTSC M will appear in sequence).

  - If the sound is abnormal
Enter the Tuner as above and **CH+/-** to " Sound Sys. " item. Then press **VOL+/-** to select the system you want.

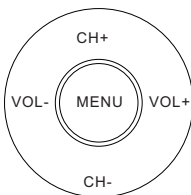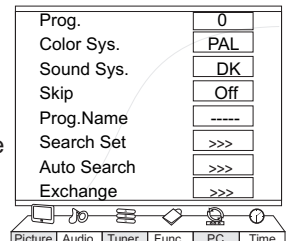

Viewing TV Program (continued)

- Quick view function can back to the channel you watched just now quickly
- Program scanning function is to let the television automatically scan all preconcerted channel program .

Quick view and program scan



Q.VIEW

Quick view

 
1. For example, if you have viewed channel 8 just now and you are watching channel 18 now (as right figure)



2. If you want to back to channel 8, just press **Q.VIEW** button



3. If you want to return to channel 18, press **Q.VIEW** button again .


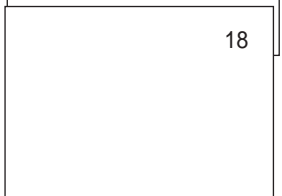


SCAN




Program scanning function

  1. If you want to scan the programs and select your favorite channel, just press the **SCAN** button then the television will start scanning from the present channel with a rate of three seconds per channel and until all the preconcerted programs have been displayed once.

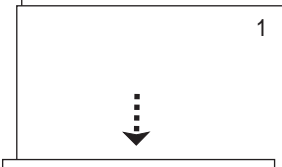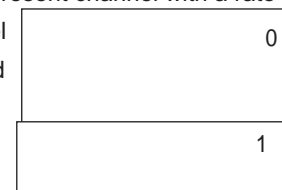

 
2. If you want to terminate this function during the scanning, press the **SCAN** or **MENU** button again, and the program will stay at the present channel

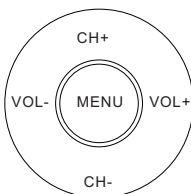

Tuning


- There are three ways of searching: automatic search, manual search and MFT (manual fine tune)
- You may operate it either on the TV or on the remote control. Here is mainly about the remote control

 Automatic search

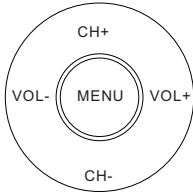


Automatic search


 
- 1、 Press **MENU** button and **VOL+/-** to select Tuner menu , Then press **CH+/-** to enter

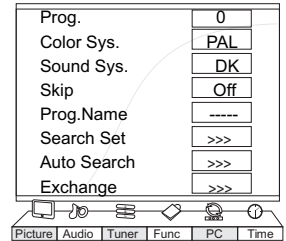

 - 2、 Press **CH+/-** button to move to Auto Search item.

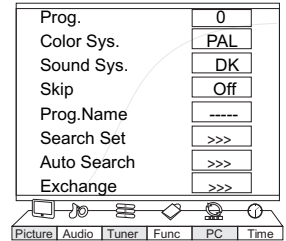


  - 3、 Press **VOL+**, then Auto Search will work. The TV set will search automatically all available programs, after that, all available program will be stored in turn and the TV set will return to the first channel

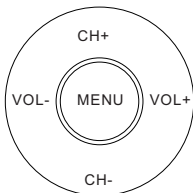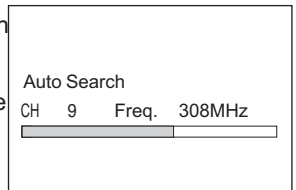


- If you want to stop the search, just press **MENU** button
- The order of the automatic search is due to the frequency of the program, generally speaking, it is used only at the first time you search the program, and once the order of the program has been confirmed, you don't have to use this function, otherwise the order of the program will be changed.
- After searching Press **CH+/-** button to check the channels. If the color or sound is abnormal in a certain channel, it may be the color or sound system has not been set properly, so you should adjust it to the proper system (Reference to page 9).

 Manual search

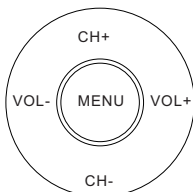


Manual search

 1. Press **CH+/-** button or the Direct-digit choosing button to select a channel directly (take channel 1 for example).




 2. Press **MENU** and **VOL+/-** to select Tuner menu, then press **CH+** to enter

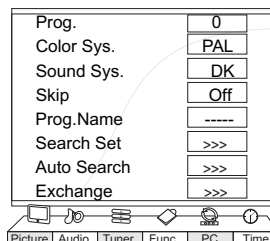

3. Press **CH+/-** to move to Search Set, then press **VOL+** to enter

 4. Press **CH+/-** to move to Search

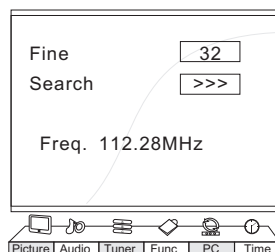


5. Press **VOL+/-** button to start searching.

VOL- button is used to search the lower frequency channel.


VOL+ button is used to search the higher frequency channel.

 Repeat the steps until you find the channel you need.

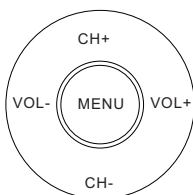

Tuning (continued)

 MFT

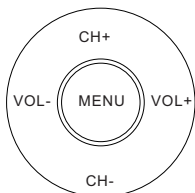


MFT(manual fine tune)

When you can't get a satisfactory picture and audio effect, you can fine tune to obtain.

1. Press **CH+/-** button or the Direct-digit choosing button to select a channel directly (take channel 1 for example).




 2. Press **MENU** and **VOL+/-** to select Tuner , then press **CH+/-** to enter

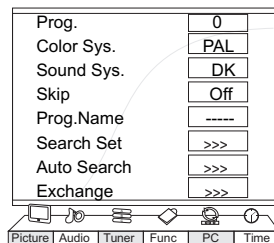

3. Press **CH+/-** to move to Search Set , then press **VOL+** to enter the menu

 
4. Press **CH+/-** to move to Fine.

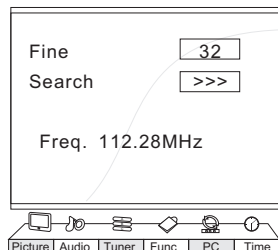

5. Press **VOL+/-** button repeatedly to fine tune, until the picture and the sound become satisfactory.

- VOL- button is used to search the lower frequency channel.
- VOL+ button is used to search the higher frequency channel.

 
Skip

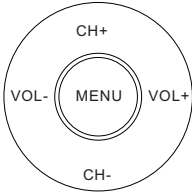


Skip

After the programs are preset, you can skip some programs so that to select your favorite channels only.

 1. Press **CH+/-** button or Direct-digit choosing button to select a channel directly (take channel 1 for example). You could also select your favorite channel number in menu





 2. Press **MENU** and **VOL+/-** to select the Tuner menu then press **CH+/-** to enter.

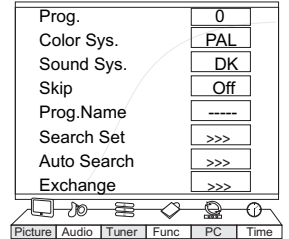

3. Press **CH+/-** to move to Skip.

  4. Press **VOL+/-** button to set it On.

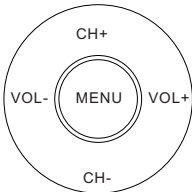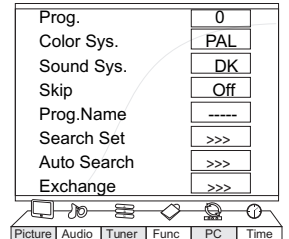

5. Press **MENU** button to close the menu. When you select channels with **CH+/-** button, this channel will be skipped. However, you can also use the Direct-digit Choosing button on the remote control to select this channel directly. And the channel number will be in red.

 
 
If you want to recover the skipped channel

1. Use Direct-digit choosing button to select the number of the channel to be recovered.
2. Do the above steps again.
3. Press **VOL+/-** button to set Skip Off.

Tuning (continued)

- The function of channel exchange will enable you to exchange any two programs and you can conveniently adjust the order of the programs due to your own need.

Channel exchange and edit

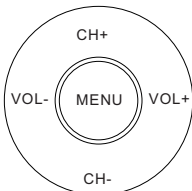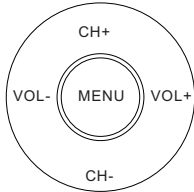

Channel Exchange

 
 
(For example, to change between channel 6 and 9)

1、 Press **MENU** and **VOL+/-** to select the Tuner menu , then press **CH+/-** to enter.

2、 Press **CH+/-** and move to Exchange

3、 Press **VOL+** to enter the submenu.

4、 Press **CH+/-** to move to Exchange Prog. then press direct-digit to set the channel you want to exchanged to 6. And then press **OK** to confirm

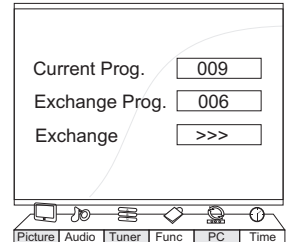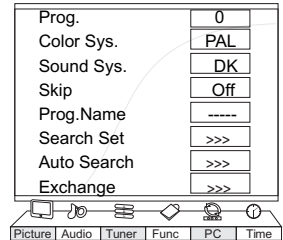

5、 Press **CH+/-** button, move to Exchange , then press **VOL+** button to confirm. Then the programs of the two channel will be exchanged.

Program edit function

 
This function can enable you to rename your favorite channel

1、 Press **MENU** and **VOL+/-** to select the Tuner menu , then press **CH+/-** to enter.

2、 Press **CH+/-** to select Prog. , Press **VOL+/-** to set the channel number

3、 Press **CH+/-** to select Prog.Name , and press **VOL+/-** to select the position you want to adjust , then press **CH+/-** to select among "A-Z", "0-9", ",", " ", "-", and blank .

4、 After the operation, just press **OK** to confirm

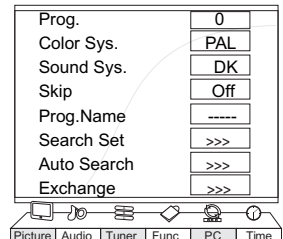

Adjusting the Picture

Multiple picture modes



How to select the picture mode


You may select the mode you want from the three preset modes and one individual mode.

Press the **PSM** button to select a mode you like. STANDARD, SOFTNESS, USER and BTIGHTNESS total four picture modes can be selected alternately.

MODE	PICTURE QUALITY
STANDARD	MEDIUM COLOR AND BRIGHTNESS
SOFTNESS	LOW COLOR AND BRIGHTNESS
USER	SET BY YOURSELF
BRIGHTNESS	BRIGHT COLOR


Set the parameter of USER

 You could set it just by your favorite

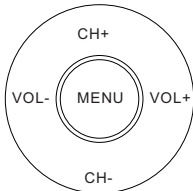

1、 Press **MENU** and **CH+/-** to enter Picture menu.

 2. Press **CH+/-** button, move to the option you want to adjust, then press **VOL+/-** button to do the adjustment. Then the parameter will be automatically stored in USER option.

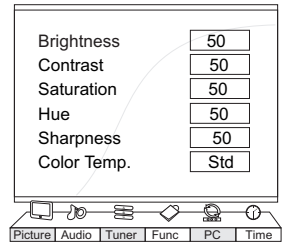

OPTION	VOL+	VOL-
Brightness	BRIGHT	DARK
Contrast	STRONG	WEAK
Saturation	THICK	LIGHT
Hue	GREEN	PURPLE
Sharpness	SHARP	SOFT
Color Temp.	Std-Cool-Warm	

 
Note : Hue only available in NTSC system.

Adjusting the Sound

Multiple Sound Modes



SSM

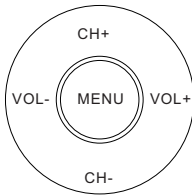

How to select the sound mode

You may select the mode you want from the four preset modes and one individual mode.

Press the **.SSM** button to select the sound quality that you want.


Mode	Sound quality
FILM	Theater sound
NEWS	Clear
MUSIC	For Music
STANDARD	Standard sound
USER	For your convenient to set

Setting the parameter of USER

You could set the parameter if you select USER mode.

1. Press **MENU** and **VOL+/-** to select Audio menu , then press **CH+/-** to enter

 2. Press **CH+/-** button, move to the option you want to adjust, then press **VOL+/-** button to do the adjustment.

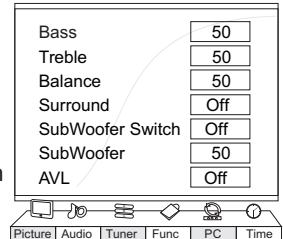


Note : SubWoofer can only be adjusted when SubWoofer Switch is set On, SubWoofer and SubWoofer Switch is not available in L26A9-AK.

OPTION	VOL-	VOL+
Bass	Decrease	Increase
Treble	Decrease	Increase
Balance	Decrease right channel	Decrease left channel

OPTION	Select On
Surround	Stereo sound
SubWoofer Switch	Enhance the effect

Adjusting the Sound (continued)

 
Sound limit and mute

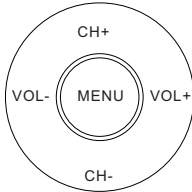

Sound limit


1、 Press **MENU** to display the menu.

 2、 Press **VOL+/-** to select Audio menu.

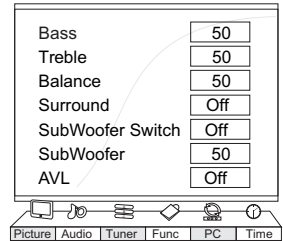

3、 Press **CH+/-** to enter it .

 4、 Press **CH+/-** to select AVL .

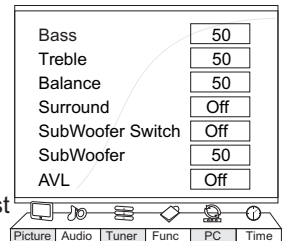

5、 press **VOL+/-** button to adjust the parameter you expect or set On or Off.

How to use the MUTE function

When you want to pay attention to the environment or answer a telephone, or to meet guests, using the mute function is very convenient.

1、 Press **MUTE** button, a sign will appear at the top right corner of the screen, and the sound of the TV set is cut off.

2、 In order to recover the sound, press **MUTE** button again or press **VOL+** button.



MUTE

 


Note: If you have pressed **VOL-** button in the condition of the mute mode, the value of the volume would decrease, but the sound of the TV is still in mute mode.


Setting the Timer

- This TV set provides you with three timer functions such as timer on, timer off and On Prog.
- The basic unit of the time in the menu is minute.
- The Clock will recover to 0:00 and the On Prog. will recover to 0 when switch the TV on after off.

Setting the Clock and timer on/off

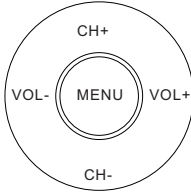

OK

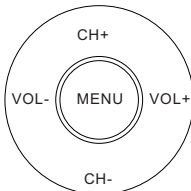 


Setting the Clock

You should check whether the Clock is the same with the standard time of the area you are being in; if not, please adjust it as follows

1、 Press **MENU** and **VOL+/-** to select Time menu.

2. Press **CH+/-** to move to Clock and press **VOL+** to enter the digital position you want to adjust, then press **CH+/-** to adjust the value

 3. After the setting, press **OK** to confirm

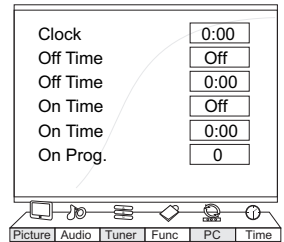

Timer on/off

When timer on function is used, the TV set can automatically turn the power on at the preset time in the standby status and display the preset program. Using timer off function can turn the TV set automatically into standby status at the preconcerted time.

 
 
1、 Press **MENU** and **VOL+/-** to select Time menu.

2、 Press **CH+/-** to move to On Time, Press **VOL+** to enter the digit position, and then press **CH+/-** to adjust the value (eg. 18 : 00)

• Same as step 2 of Clock setting .


3. Press **CH+/-** to move to Off Time, then press **VOL+/-** to set on

4、 Repeat steps 1 and 2 to set Off Time (eg. 23:00).

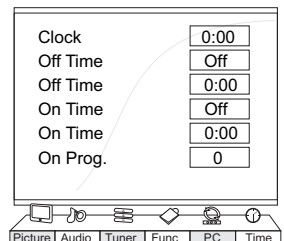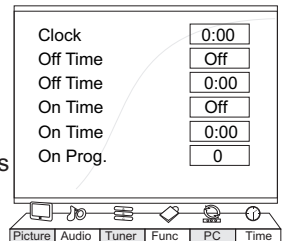

Setting the Timer (continued)

 
On Prog.

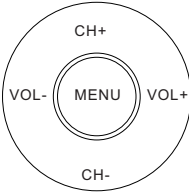

On Prog.

Using this function, the TV set can display the preset program automatically when the TV set is turned on.

 
1. Press **MENU** to display the menu.

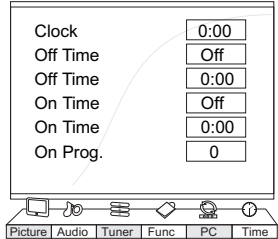

2. Press **VOL+/-** to select Time menu.

3. Press **CH+/-** to move to On Prog.

 
4. Press **VOL+/-** button to set the channel number you want (eg. 18)

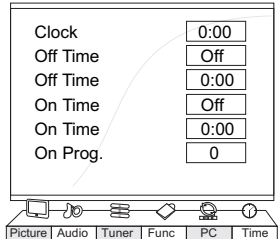

Setting the Function


Language and the OSD position

 How to select the language on the screen

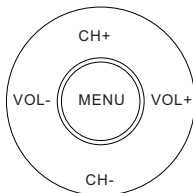

1. Press **MENU** and **VOL+/-** to select the Func menu.

 2. Press **CH+/-** button, move to OSD Language.

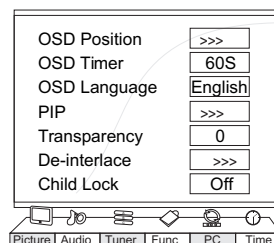


3. Press **VOL+/-** button to select the language and the menu on the screen will be displayed with the language you select.

How to select the OSD position


Using this function, you could select the position of the OSD on the screen you want.

1. Press **MENU** and **VOL+/-** to select the Func menu .

 2. Press **CH+/-**, move to OSD Position .

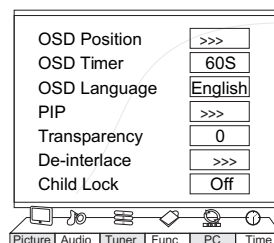

 3. Press **VOL+/-** to enter submenu of the OSD Position .

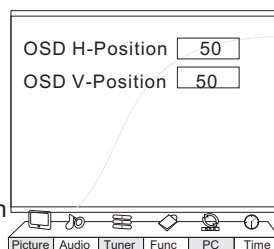

4. Press **CH+/-** to select the item you want to adjust, and then press **VOL+/-** to adjust. After all, press **MENU** to back to the main menu.

Setting the Function(continued)

Menu timeout and menu background option

Menu timeout option

- If time you set in OSD menu expires after the latest press, the menu will disappear automatically

 
 
1. Press **MENU** and **VOL+/-** to select the Func menu .

2. Press **CH+/-** and move to OSD Timer .

3. Press **VOL+/-** to select the time

Note :

the basic unit of the OSD Timer is second,


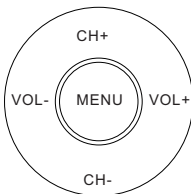
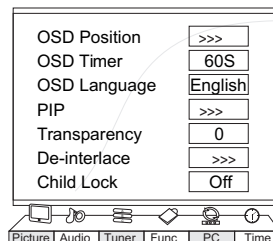


Menu background option

1. Press **MENU** and **VOL+/-** to select the Func menu .


2. Press **CH+/-** to move to Transparency .

   3. Press **VOL+/-** to adjust the value you want. You could press **MENU** to back to the main menu.

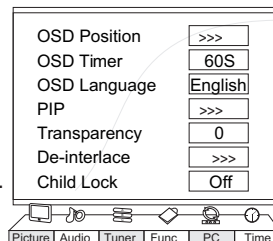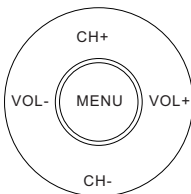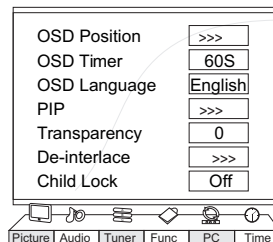

Setting the Function(continued)

 
PIP

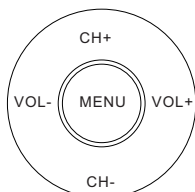

PIP


- Using this function, you could adjust the H-POSITION , V-POSITION and the size of the PIP.

 1. Press **MENU** and **VOL+/-** to select the Func menu .

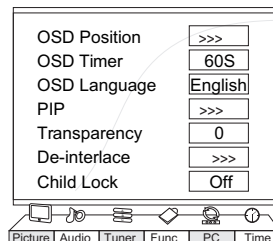

2. Press **CH+/-** and move to PIP .

 3. Press **VOL+/-** to enter the submenu of PIP .

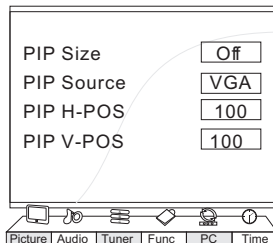


4. Press **CH+/-** to select the item you want to adjust , then press **VOL+/-** to adjust. After this , you could press **MENU** to back to the main menu.


Note: Press source buttons (eg. TV/AV) to change the main input;
The signal of PIP can be changed in the submenu of PIP .

Child Lock

 - If Child Lock is set On , the keys on the TV will be locked that means you could not operation the TV with these buttons.

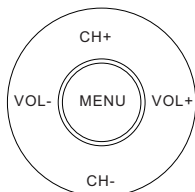

 1. Press **MENU** and **VOL+/-** to select the Func menu .

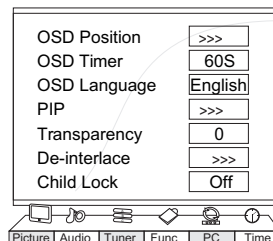


2. Press **CH+/-** and move to Child Lock .

3. Press **VOL+/-** to set On or Off. You could press **MENU** back to the main menu.

Setting the Function(continued)

 De-interlace

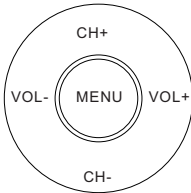

De-interlace

 
 
- Using this function, you could improve the effect of the picture.

1. Press **MENU** and **VOL+/-** to select the Func menu.


2. Press **CH+/-** and move to De-interlace .

3. Press **VOL+/-** to enter the submenu

4. Press **CH+/-** to select the item you want to adjust, then press **VOL+/-** to adjust it .

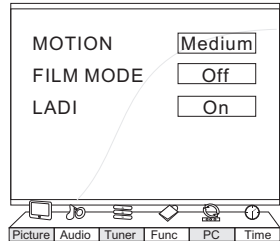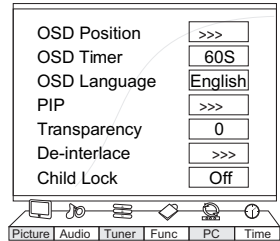

MOTION	To decrease the blur of the motorial image
FILM MODE	To improve the image while filming
LADI	To decrease the sawtooth

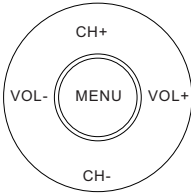 


PC setup

- You could adjust the correlative item if you use this set as a monitor

1. Press **MENU** and **VOL+/-** to select the PC menu .

 2. Press **CH+/-** and move to the item you want to adjust

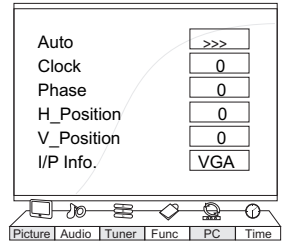

3. Press **VOL+/-** to adjust the item or enter its submenu (according to the item setting)

4. If enter the submenu, press **CH+/-** and move to the item you want to adjust, and then press **VOL+/-** to adjust. Then you could press **MENU** to back to the main menu.

Setting the other Function

Picture still,sleep timer and program edit

STILL



Picture still

You could press **STILL** button to “ freeze-frame ” the current screen. And press the button again to continue playing



SLEEP



Sleep timer

Using this function, the TV set can be changed into the standby status after a period of preset time from when this function is activated.

CH.EDIT




Program edit

1.Press **CH.EDIT** button to display the current program diagram

Prog. Prog.Name

2. There are ten channels per page. You could select the channel on this page with **CH+/-**, also, you could press **VOL+/-** to turn to the other page , you could press **CH+/-** to select the channel you want to watch, then press **OK** to confirm. Press **CH.EDIT** or **MENU** to exit.

0	QTV-1
1	CCTV1
2	CCTV2
3	CCTV3
4	CCTV4
5	CCTV5
6	CCTV6
7	CCTV7
8	CCTV8
9	CCTV9

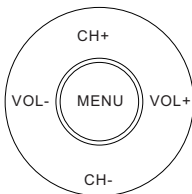 

3. You could see every channel name by the program edit function. It is very convenient for you to watch the program you want.

Note:

The program name can not be more than five letters

Stream Media Broadcast System

Stream media play prepare

1. Supporting equipment

1. Equipment supporting Mass and Storage agreements include USB, mobile hard disk, card reader, some MP3 and digital camera.

2. Equipment supporting PTP agreement includes some digital camera.

2.1 Supporting media:

picture, music, MPEG4, MPEG2 and MPEG1;

Supporting file format

*.Avi, *.DIVX, *.MPEG, *.DAT, *.MP3, *.WMA, *.JPG and *.JPEG. Due to particularity of file code and file mode, It is possible that some files cannot be read.

2 If Pic & Music mode is activated, relative media file format will include JPEG and MP3 files. After Picture is selected, MP3 files set for play will open both music and picture files for sync play performance. As some files must be read while music is being played, the speed of picture operation response might be affected.

3. Before starting operation, verify USB storage device is of FAT32 and FAT file system format. At present, this television does not support NTFS and the file system of other format.

4. Many movie files use suffix of AVI and MPG. However, many kinds of format

are used for internal files. This television can only play some AVI and MPG files of this format. Those files with suffix of dat are not movie files, but data files used by computers, and cannot be played for movies.

5. External card reader supports most digital cards available in the market. Readable digital cards are classified according to the property of card readers and can be connected to mobile hard disks (working voltage 5.0V, working current not over 500mA).

6. Sometime the television operation may be halted due to excessive rate of information code errors. In such case, restart the system. As there are many nonstandard USB mobile devices in the market. If this kind of USB mobile devices are used in the stream media play system, the problem of identification failure might occur. The same problem may also happen with computers, not televisions.

7. It is suggested that the external devices with USB2.0 interface be used to improve velocity of information reading and continuity of information play.

Stream Media Broadcast System

Stream media system setup

 
Note: Memory cards or USB devices are not supplied with this TV.

USB setup

- 1 Insert USB in the card slots at the left side the TV.
- 2 Insert it to be clicked in.
- 3 Press USB button on the remote controller to enter the stream media system.


CARD setup

This TV is compatible with the card of SD/MMC/CF/MS/SM format.

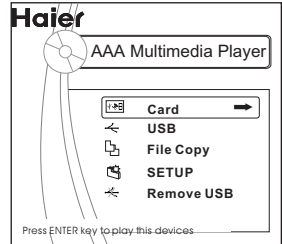

How to use

 
1、 Jack of card Instructions :

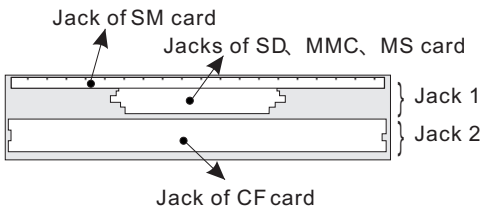

Note

1. Please note chooses uses the digital memory card with you corresponds the receptacle
2. Card reader in 1 cannot simultaneously insert two kind of cards in the graphical representation position

 2、 Insert the card as right direction. As following Card in common use

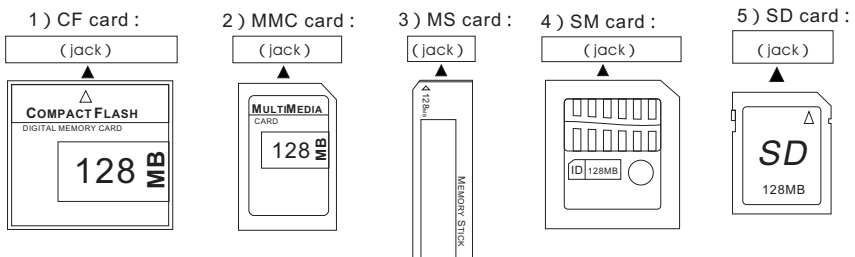


Note:

1. the card insertion time, after the flows media system starts 2s , insert the card to numerical code card reader , do not bring card to start flow media system.
2. After card insertion, indicator light will shines, and enters glitters condition, after period of time , indicator light enters constant bright condition, indicates already distinguishes finished, this time carries on play operation and so on .
3. In the market , the digital card type are very many, please uses standard product of the standard factory , meets reads takes difficult or reads speed limits, please replaces the digital card.

Stream Media Broadcast System

Removing USB device

 - 1 Press up or down to select **Remove USB**, and press **ENTER** button to ensure it.
- 2 press **RETURN** button to exit menu.
- 3 Remove the memory card/USB device.
- 4 If to remove the card device, press **RETURN** button to return to the main menu, and remove the card.

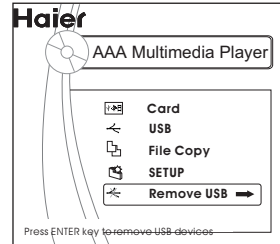

Card data protection

- Do not remove the card/USB device when the content is being read or when browsing. Such action may damage the memory card/USB device.
- Do not touch the terminals on the back of the card.
- Always insert a card in the correct direction. Failure to do so may result in damage to the card and the unit.
- Do not subject the card to excessive pressure or strong impacts.
- Malfunctions of the unit or card may result in data loss or damage to the card.
- Haier shall not accept any liability for damage or loss of stored data.

 


Warning:



Memory cards can be swallowed by young children. Do not allow children to handle memory cards. Please remove the memory card immediately after use.

Stream Media Broadcast System

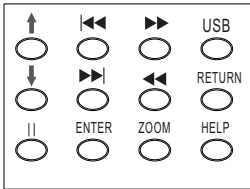To start the media play

 


1. Press **USB** button to enter media play system.

2. Press up  or down  button to select the desired option.

3. Press **ENTER** button to enter desired option.

4. Press **RETURN** to return the previous menu.

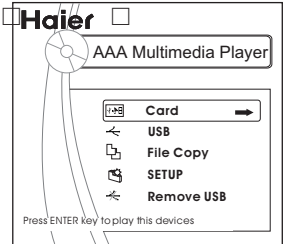



5. If to exit USB system, you need to return to the main menu to protection card data.



Note: If there are no operation two minute later, the TV will enter the saver automatically, at the time, press any button of USB system to exit the saver menu.


To operate the menu



1. Press up  or down  to select the item with up or down.

2. Press  or  to select the desired item of submenu with left or right.

3. Press **ENTER** button to ensure the desired option, to enter the submenu, to resume the speed of standard.

4. Press  or  button to operate play quickly or slowly.

5. Press pause  button to make the program stop, and press again to resume it.

 
6. Press **ZOOM** button to make zoom, and press  or  button to enjoy the detail.

7. Press **HELP** button to call up or exit the OSD information. And press **HELP** button to call up or exit the OSD during operating file copy.


8. press **RETURN** button to return to previous menu and stop play, press **RETURN** button repeatedly to return to main menu.

Stream Media Broadcast System

To select stream media broadcast system



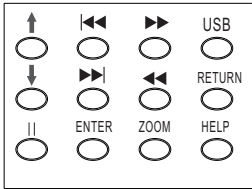


 1. Press up or down button to select "Card" or "USB". (The device be inserted and identified).
2. Press **ENTER** button to enter adjusted option.

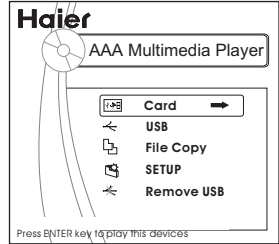

To play picture

   1. Press up or down button to select Picture item.
2. Press **ENTER** button to enter the menu of play.
3. Press again up or down button to select desired enjoy picture, and then press **ENTER** button to enter the play menu.
4. On screen display, Press or to select the speed of play. (Normal, Slow, Fast).
5. Press or button to swap the picture of next and previous. Press **RETURN** button to return.

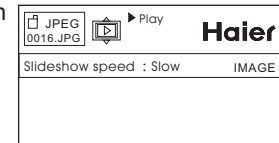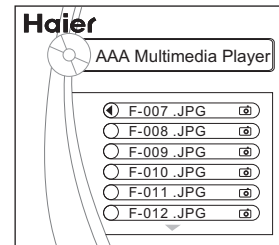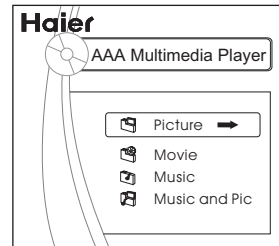

Note:
the play file menu are different with your USB devices.

To enjoy the picture detail

 
1. After selecting the picture to play, press **ZOOM** to select desired zoom.
2. Press **HELP** button to exit the display, and then press \square or \square or \square or \square to move and enjoy the picture detail.

To make the picture overturn

Each press of button to make overturn 90° with right, press **ENTER** button to resume the program playing.

Stream Media Broadcast System

To enjoy music

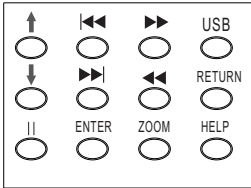

1. Press up or down button to select "Music" option.

2. Press ENTER button to enter play menu.

3. Press up or down button to select desired music, and then press **ENTER** button to play music.

Note: The play file menu are different with your USB device.

 
 
 
 
 
4. When playing music, press up or down to select play mode, (play mode: standard, program, Random; Repeat mode: Disc Repeat, Folder Repeat, File Repeat) and press **ENTER** button to ensure the mode.

5. When playing music, press or button to swap the next and previous music

6. Press **RETURN** button to exit the playing.


Note: 1. **DISC Repeat mode:** press up or down button, the DISC Repeat will appear on the screen, and then press **ENTER** to ensure it.

2. **Program mode:** press or button to select the music in right list, and press **ENTER** button to program in turn, and then press button to select "Done", and then press **ENTER** button to ensure it.

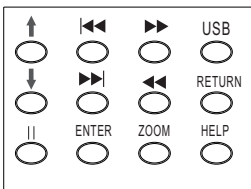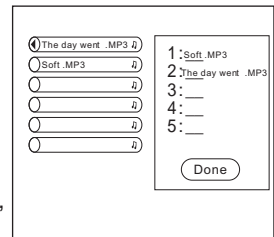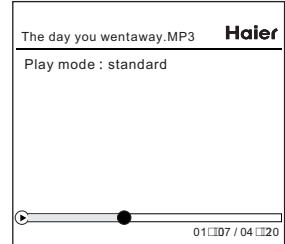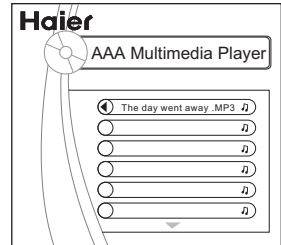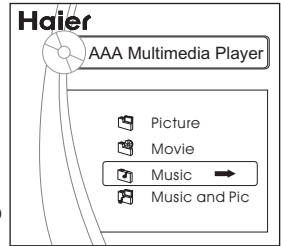

Stream Media Broadcast System

 To play Movie

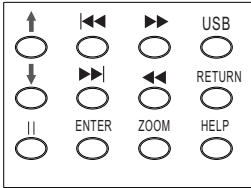

1. Press up or down button to select "Movie" option.

2. Press **ENTER** to enter play menu.

3. Press again up or down button to select desired music, and press again **ENTER** button to play it.

 
 
 
 
4. On screen display, press or button to select in turn:

File*-PlayBack Control-Audio channel-Play Mode

5. Press or button to set speed, press **ENTER** button to resume to standard mode.


6. Press or button to select the next movie or previous.

7. Press **RETURN** button repeatedly to return.

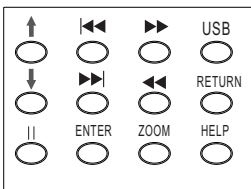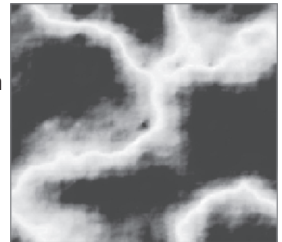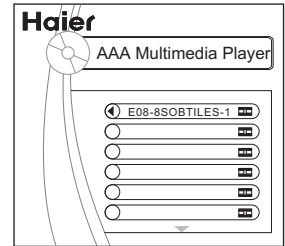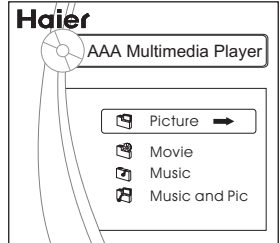

Stream Media Broadcast System

 To select the Music and PIC item

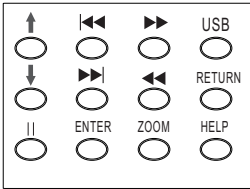

1. Press up or down button to select "Music and Pic" option, and press **ENTER** button to enter menu.

2. Press up or down to select desired file, and press button to ensure it. (to cancel). Repeat step 2 to select more file, and press **ENTER** button to enter play menu.

 
 
 
 
3. On screen display menu, press up or down to select the speed to play. (**Normal**, **Slow**, **Fast**).

4. Press or button to swap the next and previous picture, press or button to select the music.

Note: press pause button to stop playing the picture.


5. Press repeatedly **RETURN** button to return.

Note: On the music and picture, the playing music is *.mp3 format.

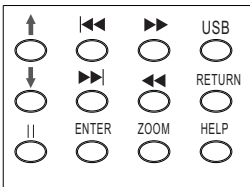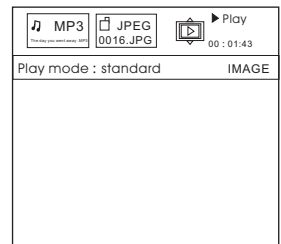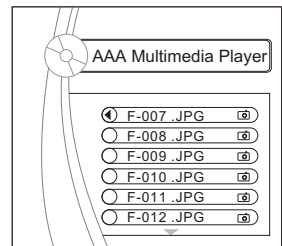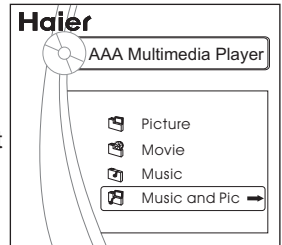

Stream Media Broadcast System

 Copy file function

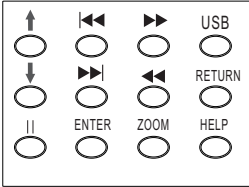

1. Press up or down to select "File Copy" item.

 
 
 
2. Press **ENTER** button to enter the copy menu.

3. Press **ENTER** button to enter the file menu, and press up or down button to select "Card" or "USB".

4. Press **ENTER** button to enter Card or USB, and select the files to copy, then press **HELP** button to call up COPY and PASTE, and then press / button to select COPY, and press **ENTER** button to confirm, press again / button to select

PASTE, then press **ENTER** button to paste, in this time, the "File already exists, overwrite it ? "will appears on the screen, and press or button to select YES/NO, and then press **ENTER** button to confirm.

5. Press **ENTER** to cancel.

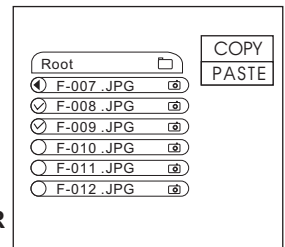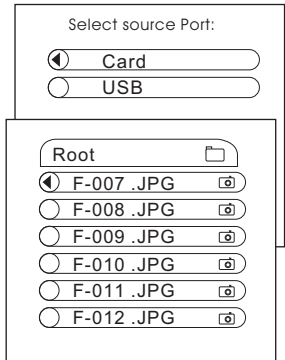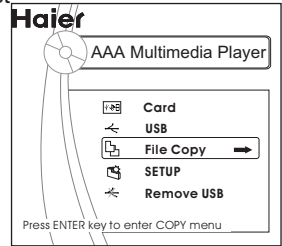


Note:

button to select the all files;
button to cancel.

Connecting Additional Equipments

Antenna connection

 Generally speaking, to enjoy a clearer picture. We recommend that you use a CATV system or an outdoor antenna. In different places, the suitable antenna type and position are different.

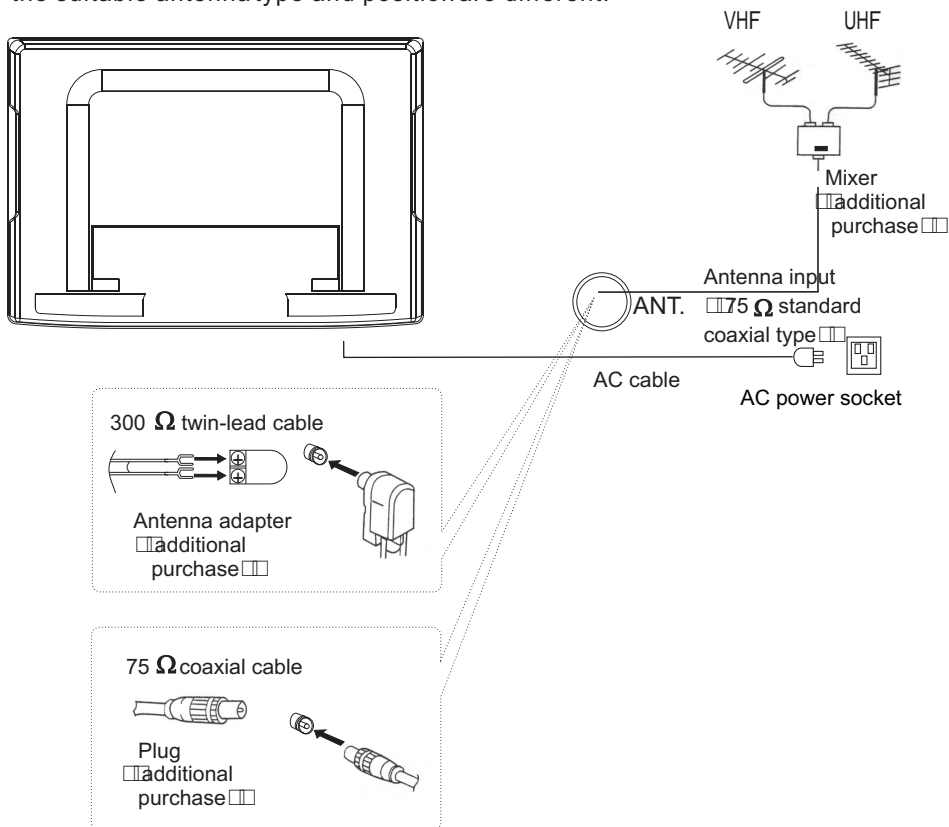

Note

 
 
 
It is recommended that you had better use 75 Ω coaxial to remove the disturbance caused by airwave.

Do not lay the twin-lead cable under the TV set. You need the suitable coaxial cable. and plug to receive the best picture and sound.

Connecting Additional Equipments




How to connect the video input terminal

Output signal

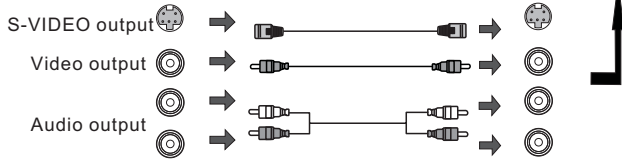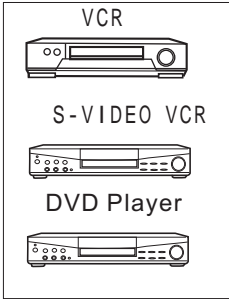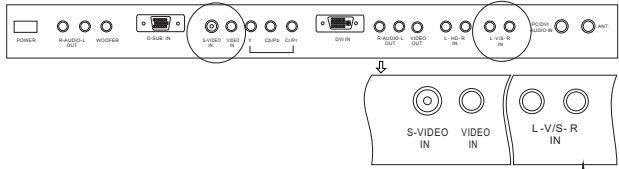


How to connect the component input terminal

   Output signal

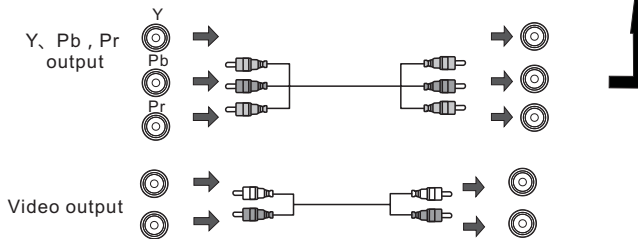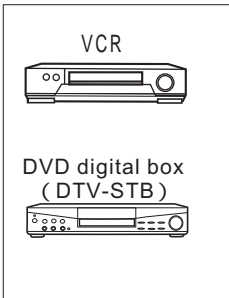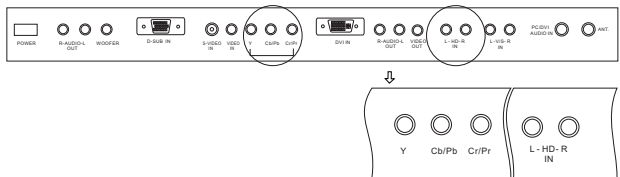

Connecting Additional Equipments

 How to connect the PC input terminal

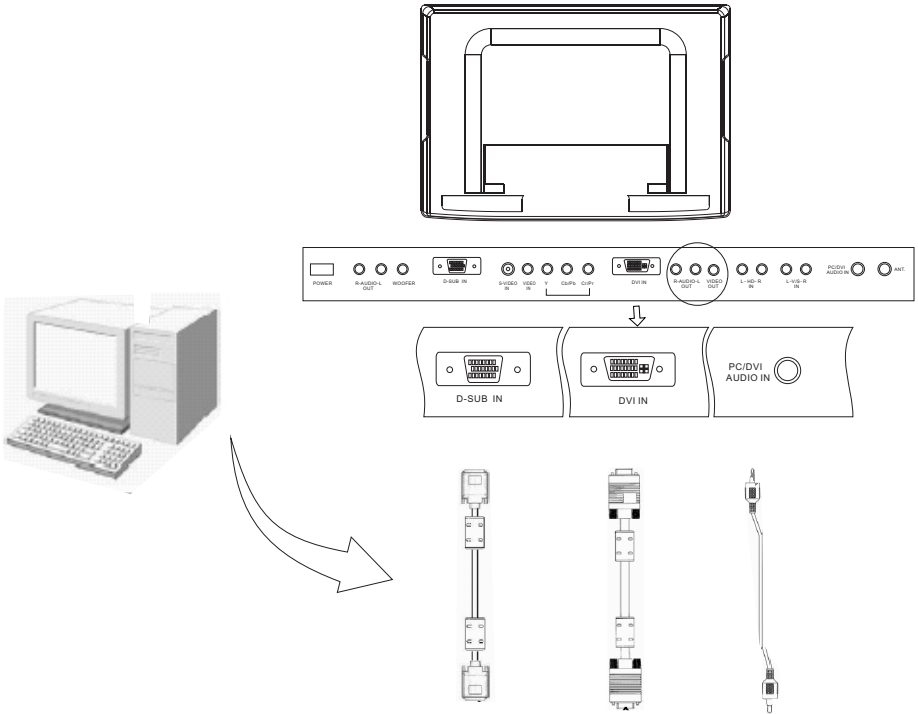

Note:

The computer above is just an example

The other equipments and coaxial are not included in the TV set

PC input terminal is the DDC1/2B. If the computer is not provide with DDC1/2B, you should adjust it when connecting.

Some models of PC can not be connected with this TV set

 
The D-sub 15P terminal of DOS/V need not adapter for the computer

The H/V scan frequency can not exceed the regulate range.

Connecting Additional Equipments

External speaker installation


1. Face the LCD screen upside down on a clean blanket or a bracket and pay attention not to indent the casing. Lay the two speaker aside of the LCD.
2. Lay a bracket on the speaker and hind rind, Fix 4 screws to the speaker and hind rind.
3. Connect the speaker cable to the speaker terminal of LCD TV and the speaker terminal, and insert the connecting cable into the terminal slot, Release the speaker terminal, and ensure that the white connecting cable is inserted in the terminal slot marked red and black connecting cable is inserted in the black terminal slot, and that anode and cathode poles are correctly connected.

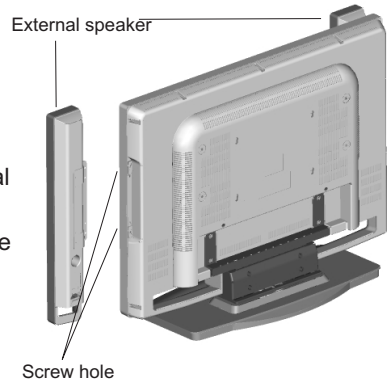

Note:It is not suitable for L26A9-AK

Woofers installation

 1. Take the woofer out, and place it the hind rind. (See picture)
2. Connect cable to the woofer terminal and LCD TV terminal.

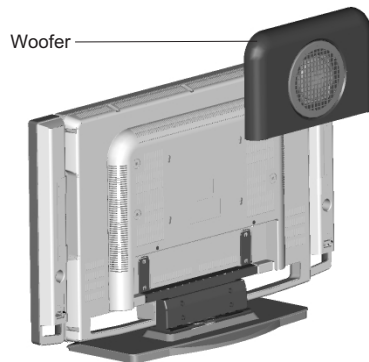

Note:It is not suitable for L26A9-AK

Troubleshooting

- Determine and try to solve the problems of your television by yourself before applying for technical assistance by authorized after-sales service.
- Do not leave the television with static picture in an extended period as it may result in residual image on your television screen.

Troubleshooting

No picture, no sound	Verify if the television is properly plugged. Verify if the television is properly supplied power. Verify if electricity is available.
Blank screen	Verify if correct signals are input. Press TV/AV button to change signal input to TV input. Restart the television if power supply is interrupted.
No sound	Press Mute button and verify if Mute mode is set. Switch to other channel and verify if the same problem happens. Press VOL+ button to see if the problem can be solved.
Poor sound	Verify if sound system is correct. Refer to some chapter for adjust.
No picture in some channel	Verify if correct channel is selected. Adjust the antenna. Make adjustments by Fine Tune and Manual Search.
No color for some channel program (black and white)	Verify if the same problem exists in other channels. Check out of picture and sound systems. Refer to relative instructions in the Manual for color adjust.
Spots with some or all pictures	Verify if the antenna is correctly connected. Verify if the antenna is in good condition. Make fine adjustment of channel.
Television out of control	Disconnect the television from power supply and, 10 seconds later, connect the television to the power supply. If the problem still exists, contact authorized after-sales service for technical assistance.

Note

Design and specifications are subject to change without notice.
The dimension in this manual is a approximation.

Specification

- Following are some reference specifications, which may vary from that of the television that you have just purchased due to technical innovations.

Model	L37A9-AK/L37A9-AKF	L26A9-AK
Power	~150V-240V 50/60Hz	
Power consumption	Average 180W standby consumption 3W	Average 140W standby consumption 3W
LCD screen	size 37.02 inch (94.03cm) viewing angel 170	size 26 inch (66.03cm) viewing angel 170
System	PAL DK BG TV NTSC 3.58 NTSC 4.43 PAL 50 PAL 60 } Video	
Condition	Working temperature 5 35 Working humidity 20-80 Store temperature -25- 45 Store humidity 5-90	
Connection terminal	Video (RCA) 1.0Vp-p (75ohm) S-video(Mini D2N4) Y1.0Vp-p (75ohm) C 0.286Vp-p(75ohm) Audio L-R(RCAX2) 0.5Vrms Y 1.0Vp-p PbPr 0.35Vp-p VGA Analog RGB 0.7Vp-p;75ohm,TTL DVI DVI-D USB 2.0	
Dimensions (WDXH)	1151mmX124mmX664mm	861mmX300mmX526mm (stand including)
Accessory	User's Manual Remote control Electric cord Warranty card External speaker Woofer	User's Manual Remote control Electric cord Warranty card

- Design and specifications contained in the manual might vary due to technical innovations.
- Warranty card is only for the special countries and areas.

Specification(continued)

DVI supporting

Input mode	Refresh frequency (Hz)	Remark
640x480	60	/
800x600	60 , 75	
1024x768	60 , 75	

PC supporting

Resolution	Vertical (Hz)	Horizontal (KHz)	Clock (MHz)
640x480	60	31.5	25.2
	75	37.5	31.5
800x600	60	37.9	40.0
	75	46.9	49.5
1024x768	60	48.4	65.0
	75	60.0	78.75
1600x1200	60	75.0	162.0

Haier

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>