

# Twin-tub Washing Machine

User's manual

# Haier

This manual is for

HWM80-0626S

HWM80-0626SH

- Please read this manual carefully before using.
- Retain it for future reference.




0030807884

# Contents



● Names of the parts	1
● Safety precautions	2
● Installation and adjustment	4
● Preparation before washing	6
● The musts in washing	7
● Usage of the detergent	7
● Washing sequence	8
● Disposal after washing	13
● Trouble-Shooting *Answer to question	15
● Packing list *Specification	17
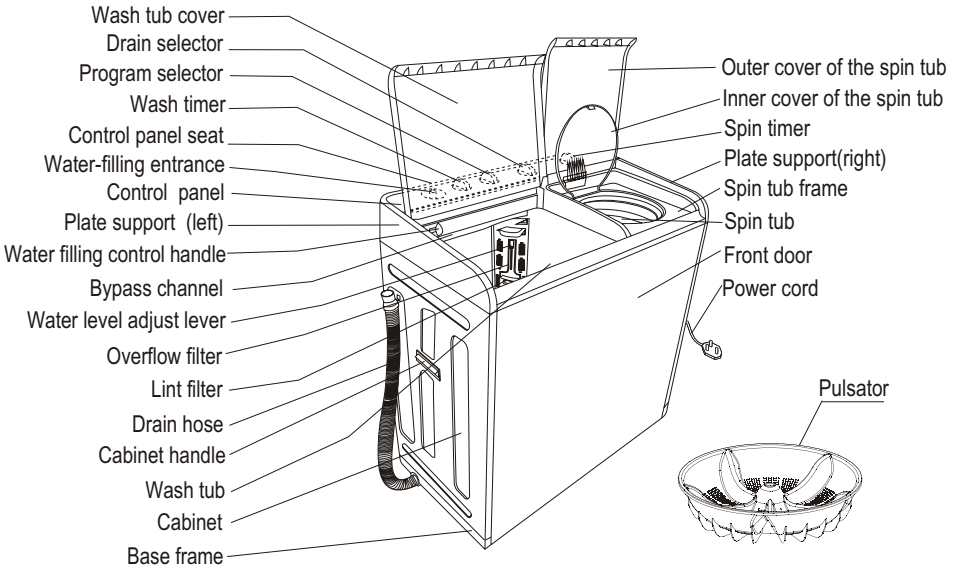
# Names of the parts



Notes: All illustrations in this Manual are given for reference only. Your products and accessories may show differences from these illustrations due to our continuous improvement.

## Meaning and description of the symbols

<p>Warning sign</p> 	<p>Contents marked with that symbol are related to the safety of the product and the personal safety of the users. Please operate in strict conformity to the contents, otherwise it may cause damage of the machine or injure the personal safety of the user.</p>
<p>Forbidding sign</p> 	<p>Contents marked with that symbol are actions forbidden to perform. Performing of those actions may result in damage of the machine or injure the personal safety of he user.</p>

- Please check if the power receptacle has good earthing condition before using to guarantee your safety.

# Safety precautions

Please insert the power cord into special receptacle with rated voltage. Be sure to use single-phase three pins receptacle. The earthing terminal of the receptacle must be earthed reliably. If possible, please adopt electric leakage protector.




When the machine is normally using, please put the power plug at the location easily to be inserted and extracted by hand. Be sure to pull the plug off when there's power failure, or the machine is being moved, cleaned or when it is idle.




- Do not bend ,extend, twist, bind by force. Do not press or nip it with weight.
- Keep the pin of the power plug clean, if the power plug is polluted with dust, please wipe with dry cloth carefully.
- If the power cord or the power plug is bad, to avoid risk it is required to have it replaced by the technicians of our special shop or the after-sale service department.




Do not put the machine at damp place like the bathroom . Never wash it with water. Do not place wet laundries on the control panel.

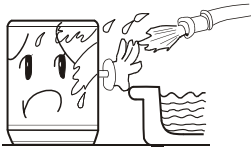

Do not use water hotter than 50°C .

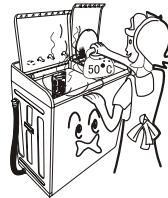

In case the washing machine is installed on ground with carpet , do not block the ventilation hole with carpet.

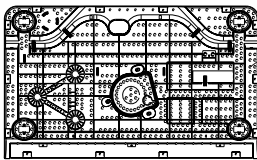


Ventilation hole at the bottom of the washing machine



Do not wash water-proof laundries like the raincoat, bike covers etc, to avoid abnormal vibrations in spinning.




Do not let the machine share one receptacle with other electric appliances. If the power plug is damaged, or the plugging into the receptacle is loose, do not use the plug any more.

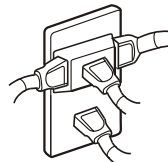


# Safety precautions

Do not stretch hands into the working machine. It is dangerous even if the rotation is slow. Take special care of the children.

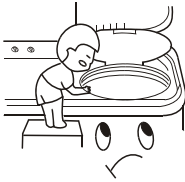


Do not decompose, repair or alter the machine by yourself.

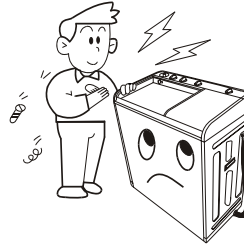


Do not put any hot or heavy items (such as the kettle with hot water) on the washing machine.



Do not wash laundries with volatile materials (such as thinner, petrol etc.).

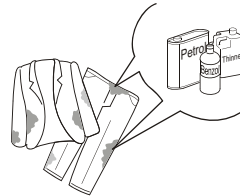


Handicapped or children without care shall not use the machine.

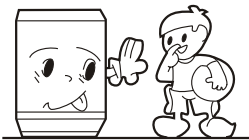

Keep the machine away from direct sunlight and heat source like the heater.



Please keep the lint filter in good condition, and install it to proper position during washing. If the lint filter is lost or damaged, please contact the local after-sale service department of our company.

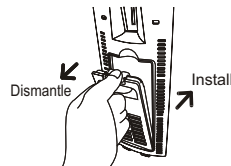


# Installation and adjustment

Please install and adjust the machine according to the requirement of the manual. It is very important to your security and correct operating the machine.


## Usage of the drain hose

The drain hose shall drain smoothly


1. The height of the drain hose shall be less than 10cm, or the drainage will not be smooth, and cost such long time that the machine may stop at mid way.

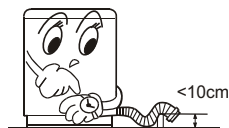


2. Do not ramp or press the drain hose.

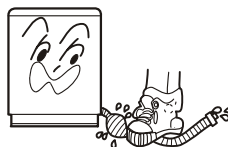


3. If the drain hose is too long, cut it at mid point. To make smooth drainage, cut the front end of the hose slantingly.

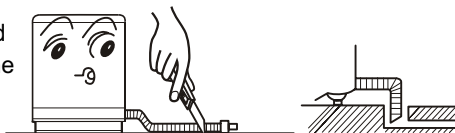

4. If extra drain hose is needed, please make separate purchase. The inner diameter of the extra hose shall not less than 40mm, and the length shall not exceed 1.5m.

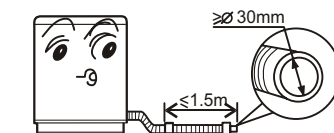

If the extra hose is too long, cut it either at A or at B point.

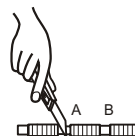

## How to change the direction of the drain hoses

- Figure 1 indicates the ex factory installation position of the drain hose.

Extend the drain hose from the side of spin tub

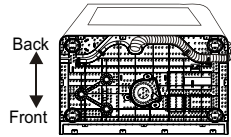


Figure 1

- Put soft items on the ground. Lean the machine down gently with the front surface facing the ground. Take off the drain hose from the cabinet. Dismantle the drain hose fixing clamp and take the hose out of the fixing groove. (See to Figure 2).




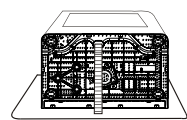


Figure 2

- Embed the drain hose into the groove along the side of the spin tub in the order of ①~③, heading for the side of the spin tub. (See to Figure 3).

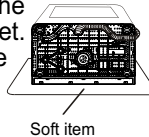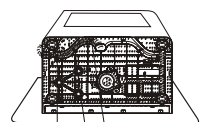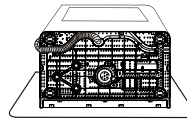


Extend to the spin tub side

Figure 3

- Embed the drain hose into the groove with hands. Take care not to damage the drain hose in fastening the fixing clamp.

## Install the water inlet hose; Select the water level

- Insert the water inlet hose into the water-filling entrance on the control panel (To dismantle the water inlet pipe, just push the control handle as indicated in the figure and pull it out)
- Select water level according to the quantity of the laundries. Set the water level adjusting lever to needed line.

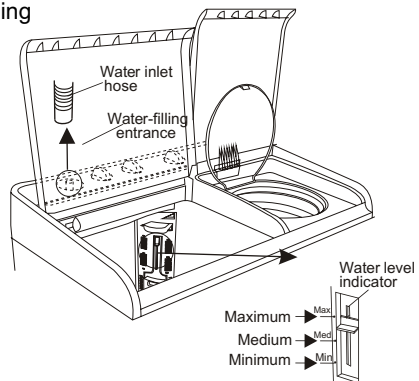

# Preparation before washing



## Preparation before washing

1. Connect the water inlet hose.
2. Confirm that the washing machine is earthed reliably. Then insert the power plug into the receptacle. Do not connect the earth terminal to the gas pipe and tap water pipe.
3. Put down the drain hose.



4. Slanting or uneven ground may result in unstable working or abnormal noise. Please make the machine stand horizontally.


## Pay attention to followings before washing the laundries

<p>Check if the laundries has special requirement on washing</p>	<p>Clear the pocket. Take out the coins, sand, hairpins etc.</p>	<p>Tie the long strips; fasten the buttons; close zippers.</p>	<p>The quantity of the laundries shall not be too large. Stretch and loosen the laundries before putting them in the tub.</p>	<p>When the pulsator is running, the buttons of the laundries may cause noise. For the sake of discretion, please put the laundries with buttons into other laundries.</p>

- a. Check if the laundries are applicable for washing with machine.
- b. Divide the laundries that are not colorfast from other laundries.
- c. Put those laundries difficult to absorb water into water with hand.
- d. For those laundries with heavy soil, please first remove the dirt like mud or dust. For the parts with heavy soil, please apply detergent on them in advance, which can make it easier to remove the soil
- e. For those laundries that may get lint ball and those with long fur, turn it over before putting in.
- f. Do not put those laundries polluted by chemicals into the washing machine directly.



# The musts in washing

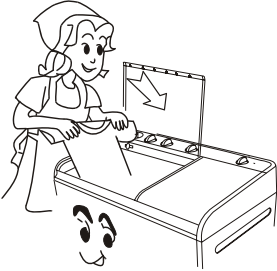

- The capacity of washing and spinning of the machine refer to the largest weight of the standard laundries under dry condition that can be washed or spinned in one time.
- The thickness, size, type of the cloth will influence the actual washing capacity. It is suitable to put in reasonable amount of laundries and the laundries can be turned round in washing for one time washing.
- It is suggested to use foamless washing powder.
- Do not select " Max " water level for laundries less 1.5kg, so as to avoid splashing of water.

## Usage of the detergent

### How to use the whitener

- Fill water to decided level. Dilute the whitener with container. Pour it slowly into the washing tub.
- Avoid using whitener on laundries with color or pattern as they are prone to lose color.
- The whitener shall not touch the laundries directly.
- Refer to the user's manual for the usage and quantity of the whitener.
- For powder whitener, please dissolve it before using.

 
### How to use the washing powder

- Direct dissolved in the machine:
  - 1.Fill small quantity of water.
  - 2.Add the powder . Run for 30 seconds to dissolve it completely.
  - 3.Put it in the laundries. Select suitable water level.
- The instant dissolving of the washing powder:
  - 1.Prepare warm water of 30°C and a container.
  - 2.Add the powder while stirring to fully dissolve it.
- The powder is more prone to pollute the laundries than the detergent. Therefore please use it with proper quantity.
- Dosage of different washing powder is different. Please refer to the instruction of the washing powder for the detail dosage.

# Washing sequence

## Wash timer


(To set to below 2 minutes, first set to 6 minutes then turn it back.)



WASH TIMER

## Function selector

 (Soft current, Standard current)




(HWM80-0626S) (HWM80-0626SH)

FUNCTION SELECTOR

## Drain switch


(Not set the switch to DRAIN during washing)

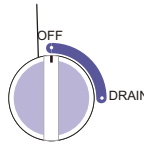

DRAIN SWITCH

## Spin timer

 (To set to below 1 minute, first set to 2 minutes then turn it back, it can increase the service life of the timer.)



SPIN TIMER

## Wash

### 1. Water-filling selector

① Set the water inlet selector at the "WASH" side.

(Figure 1)

② Set the water level adjusting lever to needed line.

2. Fill the water and add the dissolved washing powder to make the water level reach the preset position. (Figure 2)

Run washing program for some time to stir and dissolve the powder completely.



3. Put in the laundries. If the water quantity is insufficient, please add water.

4. Select the current.

Select the strength of the current according to the laundries. (Figure 3)

5. Select the washing time

Select the washing time according to the laundries. (Figure 4)

6. After washing, set the "WASH SELECTOR" at "DRAIN". (Figure 5).



Figure 1

 


Figure 2

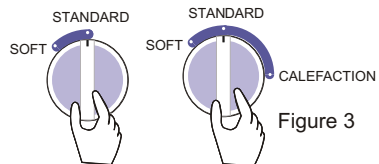


Figure 3

FUNCTION SELECTOR

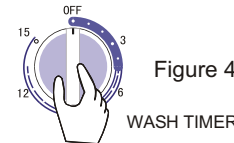


Figure 4

WASH TIMER

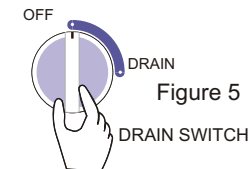


Figure 5

DRAIN SWITCH

## Calefaction

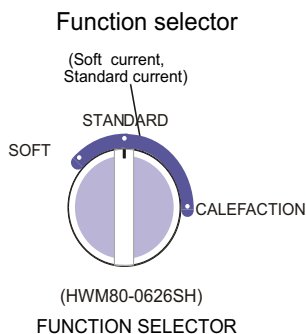


Figure 6

When filling water to MAX or MED and MIN water levels, turn the SELECTOR to the CALEFACTION after put in the laundries. It begins to heat after close the wash tub, when the temperature reaches  $45^{\circ} \pm 5^{\circ}$ , the Buzzer will give an musical alarm. Then turn the selector to "STANDARD" or "SOFT", the heater will stop heating and the Buzzer will stop alarming. It begins to wash after turning the WASH TIMER.


※Remarks: Don not open the wash tub when heating, otherwise it will stop heating and influence the heating time.

## Midway spinning

1. Put the laundries into the spin tub evenly and smoothly.


2. Spin: (1) Put the gland in properly.

- Please put in the gland properly even if the laundries quantity is small.

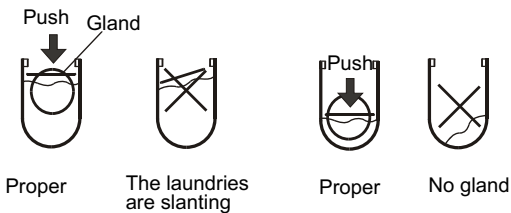

(2) Close the inner and outer cover of the spin tub.


(3) Spin for 1-2 minutes.

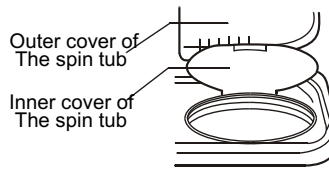

3. Run the foam-removing spinning.

( 1 ) Set the inlet selector handle on spin side and fill water for about 1 min.

- In case water flows out from wash tub side due to too much inflow, please turn down the water tap a bit.

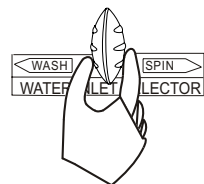

( 2 ) Close the spin tub outer cover and spin for about 1 - 2 min.

## Rinsing

### Rinse with water-filling

1. Put the laundries into the wash tub. Select suitable current according to the laundries.
2. Adjust the water level  
Set the water level with water level adjusting lever according to the laundries quantity. Then fill suitable water continuously.
3. Rinse  
Adjust the wash timer to 5-7 minutes to do rinsing.

(Repeat the midway spinning and rinsing with stored water for 2-3 times.)

### Rinse with stored water

1. Put the laundries into the wash tub. Select suitable current according to the laundries.
  2. Fill water to preset water level.
  3. Rinse  
Adjust the wash timer to 2-3 minutes to do rinsing.
- When the laundries quantity is below 4.0 kg, please use “SOFT” current. If you use “STANDARD” current, it may splash.

## Spinning

1. Put the laundries into the spin tub evenly and smoothly.
2. Press the gland in the tub properly. Close the inner and outer cover of the spin tub.
3. Spin
  - Select suitable spin time according to the laundries, and do spinning.
  - During spinning, if there is abnormal sound, it is generally owing to slanting placement of the laundries. Please stop the machine and reorder the laundries.
  - In spinning, it will pause the work if you open the outer cover of the spin tub. Close it to resume the spinning.



To do spinning and draining and rinse with water-filling together, please first do spinning for around 1 minute, then do draining or rinse with water-filling . Otherwise the spinning will stop owing to too much water stored in the spin tub.

# Disposal after washing

- After using, please clean the lint and foreign materials of the lint filter and overflow filter in time. Otherwise it may influence your using the machine.
- Please first pull off the power plug from the receptacle before cleaning.

## Cleaning the lint filter

- The lint filter must be used during washing.
- It must be cleaned in time after each using.


1. Press the elastic piece at upper end of lint filter to release the tab from the filter cover, and pull the lint filter outward to remove it. (See Figure 7).



Figure 7

2. Remove lint

Pull the lower end of lint filter rear cover outward to disassemble it from the lint filter front cover. Remove lint completely with clear water. (See Figure 8).

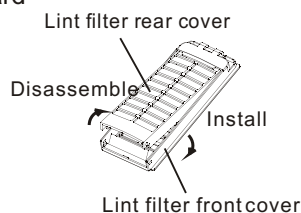

3. Install lint filter




Figure 8

## Cleaning the overflow filter

- Too much lint on the overflow filter will influence the normal usage of the machine. Please clean it every two months.

1. Take off the overflow filter.

As indicated in the figure, nip the elastic fixing claw and pull it to the direction of the arrow to take it off.

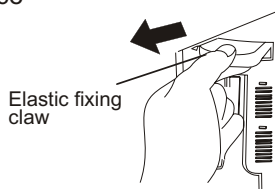

## Cleaning the overflow filter

2. Take off the corrugation pipe.  
Dismantle the upper part of the corrugation pipe inside the overflow filter ( as indicated in Figure 9).

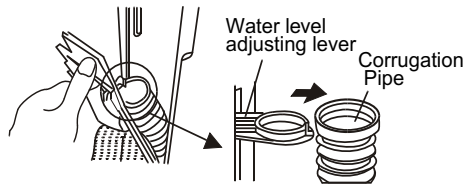


Figure 9

3. Cleaning the overflow filter  
Clean the lint around the filter and flush with water.

4. Install the overflow filter.

- (1).Install the corrugation pipe.
- (2).Insert the mounting plate at the bottom of the filter into the valve cover.
- (3).Hang up the hook at the left upper side.
- (4).Push the upper part in (as indicated in Figure 10).

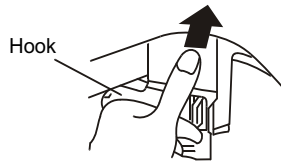


Figure 10

## Disposal of the complete unit

- Wipe the complete unit with soft cloth twisted dry.
- Wipe with neutral detergent if too dirty.
- Do not wash it directly by water.



- After washing, dismantle the water inlet hose.
- Do not store water in the tub for long period. Discharge the water immediately after each using.
- Pull off the power plug and hang up the power cord.
- Hang up the drain hose.
- Wipe off the water drops on the surface and inside the tub with clean soft cloth.
- Open the cover of the wash tub and the inner/outer cover of the spin tub for some time (about one hour), then close them.




# Trouble-shooting Answers to question

## If the laundries fall to the outer side of the spin tub

If the laundries fall to the outer side of the spin tub, Please take it out quickly.

### 1. Dismantle

First take two plugs out, then dismantle the two screws which fixed the Spin tub frame. As indicated in the figure, push the point marked with "※" to pull the spin tub frame to oblique upwards to dismantle it.

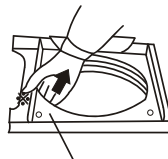

Spin tub frame

Figure 1

Please check carefully. The laundries may fall to the lower part of the outer side of the spin tub ( Figure 2).

- If the laundries fall to the outer side of the spin tub, during spinning the draining will get blocked and the rotation speed of the spin tub is reduced.)

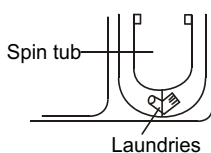


Figure 2

### 2. Install

After install the back edge of the spin tub frame to proper position, push the four points marked with "※" by force to reset it, fix it with screws, then fixed the two plugs at the position.

 


Figure 3


## When the remained water is frozen

Prevent the freezing

- Drain completely after using.

When the water is frozen

- Pour hot water below 50°C into the wash tub to soak it completely. Then turn the pulsator with hands gently. Please confirm the drainage can work normally before next using.

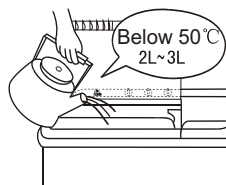



## Trouble-shooting Answers to question

(If there's breakdown, please pull off the power plug before checking) The following phenomena are not breakdowns sometimes. Please confirm again before sending it to repair. If there are real breakdowns, please come to the special maintenance department or after-sale service department of our company. Do not repair it by yourself.

Phenomena	The reason
The machine does not act.	<ul style="list-style-type: none"> <li>● Is there power failure?</li> <li>● Is the power plug loose?</li> <li>● Is the pulsator twisted by foreign materials?</li> </ul>
The draining does not work.	<ul style="list-style-type: none"> <li>● Does the drain hose put down?</li> <li>● Is the drain hose frozen?</li> <li>● Is the drain hose blocked by foreign material?</li> <li>● Are there laundries falling to the outer side of the spin tub?</li> </ul>
There's abnormal sound during washing	<ul style="list-style-type: none"> <li>● Are there hair pin, coins or metal items brought inside the tub?</li> </ul>
There's abnormal sound and violent vibration during spinning	<ul style="list-style-type: none"> <li>● Is the machine slanting?</li> <li>● Is the gland pressed evenly?</li> <li>● Are there laundries falling to the outer side of the spin tub?</li> <li>● Are the laundries in spin tub too much?</li> </ul>
There may be some waterflowing out of the drain hose in the first use of the machine.	<ul style="list-style-type: none"> <li>● It is the water remained in the factory inspection of performance.</li> </ul>
 
# Packing list

Name	Quantity
● User's manual	● One piece
● Warranty card	● One piece
● Water inlet hose 	● One piece
● Gland 	● One piece
● Twin-tub washing machine	● One set

## Specification

Water level / Water quantity (about)(L)	Maximum/71 Medium/60 Minimum/49
Injection pressure(MPa)	0.02~0.2
Rated washing / spinning capacity (kg)	8.0/6.0

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>