

XQB50-20

Fuzzy Logic Automatic Washing Machine



- Part specialized code : 0030504485
- Please check if the power receptacle has good earthing condition before using to guarantee your safety.
- The product is used only in the Chinese continent..If other countries or areas need it, please contact us.

- Please read this manual carefully before using. The manufacturer will not take responsibility for those risks occurred from not obeying this manual.
- Retain it for future reference.

Contents

Before using

Names of the parts.....the 2nd cover	
Safety precautions	1
Special function introduction	3
Installation and adjustment	3
Install the water inlet hose.....	5

Using process

Preparation before washing	7
Put in the laundries	8
Add the detergent/softener	9
Use the operation buttons	10
Close the top lid	14
Washing finished	14
Disposal after washing	15

Trouble shooting • Answer to question.....

.....	16
-------	----


Packing list	17
--------------------	----

Specification.....the back cover




Names of the parts

Before Using

**Honorable users,
Thanks for your choosing Haier products.
To facilitate your operation, please read the manual carefully and operate this machine according to it.**

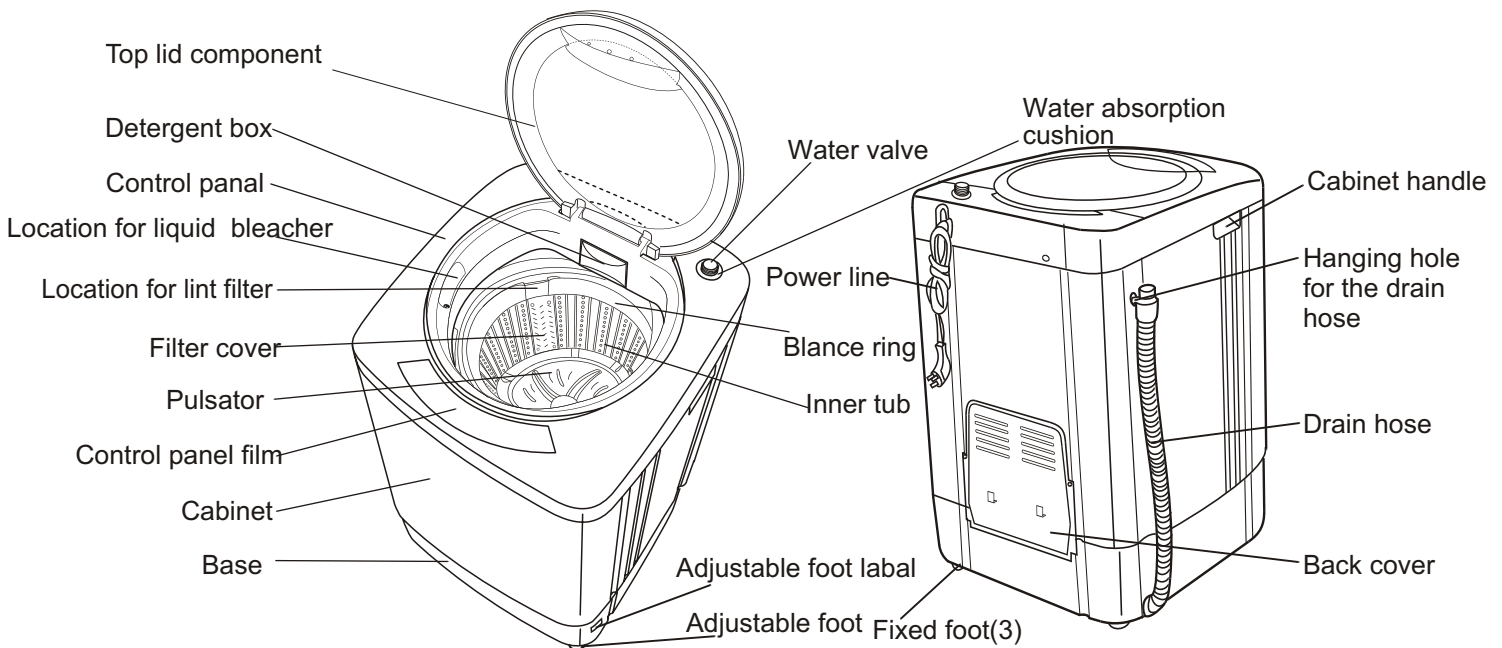

Accessories

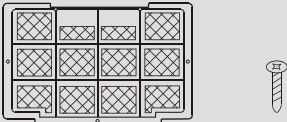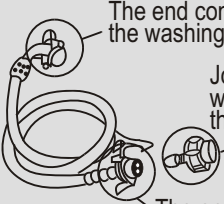	<p>Bottom plate (one)</p> <p>Tapping screws (five)</p>
 <p>The end connecting to the washing machine</p> <p>Jointer connecting the water inlet hose and the water faucet</p> <p>The end connecting to the water inlet hose jointer</p>	<p>Water inlet hose (one)</p> <p>Water inlet Hose jointer (one)</p>
	<p>Lint filter (one)</p>

Meaning and description of the symbols


<p>Warning sign</p> 	<p>Contents marked with that symbol are related to the safety of the product and the personal safety of the users. Please operate in strict conformity to the contents. Otherwise, it may cause damage of the machine or injure the personal safety of the user.</p>
<p>Forbidding sign</p> 	<p>Contents marked with that symbol are actions forbidden to perform. Performing of those actions may result in damage of the machine or injure the personal safety of the user.</p>

All the pictures in this manual are sketch-map. And because of the continual improvement of product, so the washing machine and accessories which you received cannot be match accurately with the sketch map in this manual.

Safety precautions

Before Using


Please plug the plug on special 220V~240 AC receptacle. Be sure to use three phase power receptacle. Ensure the earthing prong of the power receptacle is earth-ed reliably. Use a leakage protector if possible.

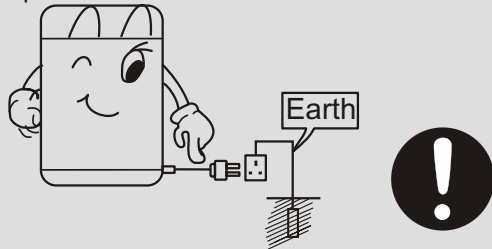


In normal usage of the washing machine, the power plug shall be ready to be pulled or plugged with hang. Be sure to pull the plug off and close the water faucet when occurring power failure, delivering the machine, setting the machine idle or cleaning the machine, Do not plug or pull the power plug with wet hand.



Do not bend, stretch, twist, bind the power cord by force, or reform it. Do not press or clamp it with heavy items. If the power cord and power plug are bad, or the receptacle is loose, be sure to have it replaced by the technicians of our special shop or our agent, or the after-sales service department to avoid any risk. Keep the prong of the power plug clean. If dust is found on the power plug, please wipe it off with dry cloth.

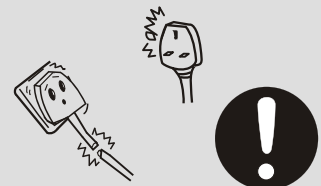


In case the washing machine is installed on ground with carpet, be careful not to block the ventilation hole with carpet.

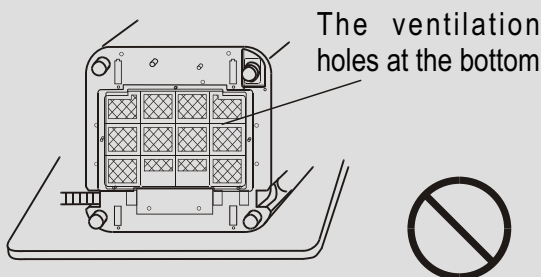

Do not use water with temperature higher than 50°C



Do not put the machine at damp place like the bathroom. Never wash it with water. Do not put wet laundries on the control panel coating.

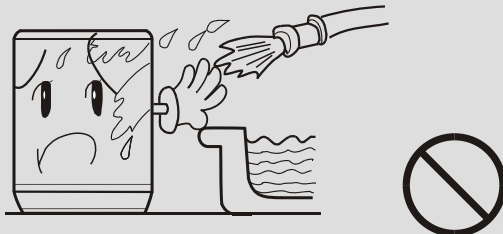

Do not wash waterproof laundry like the raincoat, bikecovers, down textiles etc. To avoid abnormal vibrations in spinning.



Do not let the machine share one receptacle with other electric appliances. If the plugging into the receptacle is loose, do not use the plug any more.




Safety precautions

Before Using

Do not put hand into the rotating tub. It is dangerous even if the rotation speed is slow. Take special care of the children. Keep children away from the washing machine to avoid them climbing on.




Do not decompose, repair or alter the machine by yourself.

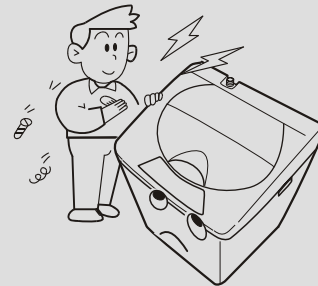


Do not put any hot or heavy items (such as the kettle with hot water) on the washing machine.




Do not wash laundries with volatile materials (such as thinner, petrol etc.)

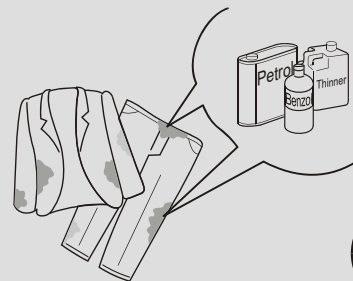


The handicapped or children without care shall not use the machine.

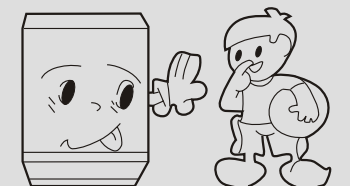


Keep the machine away from direct sunlight and heat source like the heater.

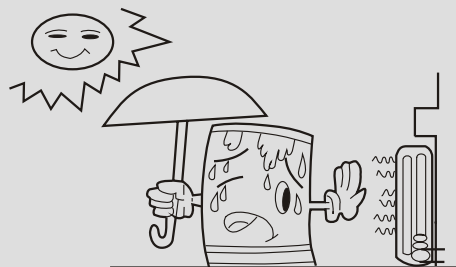

To prevent the lint inside the tub from blocking the cascade outlet during washing, please keep the lint filter in good condition, and install it to proper position. If the lint filter is lost or damaged, please contact the local after-sales service department of our company.

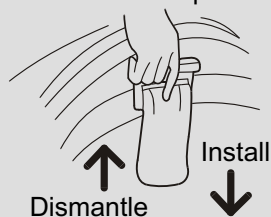

To protect your laundries and washing machine, please take out all of the coins, buttons, sand, hairpin and other foreign materials before washing.

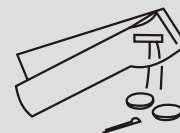

Please check if the water faucet is open, and if the connection of the water inlet pipe is proper. If the drain pipe is put down. It is suggested to use foamless washing powder.

Special function introduction *Before Using*

● Eliminating foam rinse

Press the RINSE button, when the tube is on, it indicates that you have chosen the ELIMINATING FOAM RINSE PROGRAM, and perform eliminating foam rinse firstly. Then, it will fill water continuously after the water level is high, and the foam in the tub will overflow from the overflow inlet, and avoiding polluting the clothes again.

● Memory programme

After switching on the Power, select the memory programme(the tube on).Then select appropriate time of SOAK, WASH and SPIN and the time of rinse on need. After setting, the washing machine memorized the programme set by yourself. When switching on the Power again, press the PROGRAM button, and select the MEMORY program, the program set by yourself will start automatically. Using the MEMORY program, you can storage the program which meets with your individual need.

Installation and adjustment

Please install and adjust the machine according to the requirement of the manual. It is very important to your security and correct operating the machine.


Install lint filter

Push lint filter downward to location for lint filter



Install bottom plate

After you open the package, please lean the washing machine gently down on soft items (like the towel cloth, blanket, etc.). Install the bottom plate to the bottom of the machine with the five screws by a cross screwdriver, then lift the machine up gently. See to the figure:

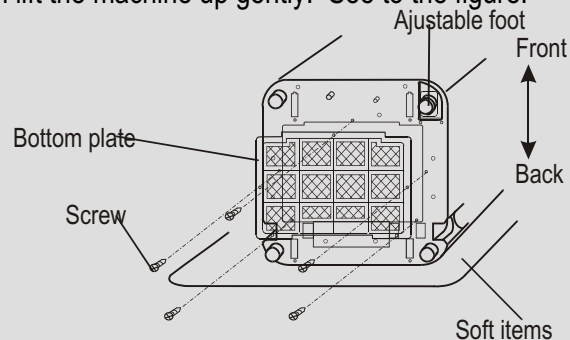


Adjust the installation position

The distance that washing machine away from wall should be above 20mm. The largest allowed slope of the shank base of the machine is 2° . The slanting or rough ground will result in unstable running or stoppage of the machine. Please adjust it with following methods:


● Confirm it's horizontal:

Hang the lead line to confirm if it is horizontal.

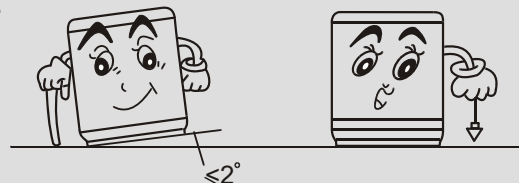

● Adjust the adjustable foot:

- 1.To twist the adjustable foot, please first lift up the side of the foot slightly, loosen the adjustable nut, and twist the foot.
- 2.Fasten the nut after adjustment.

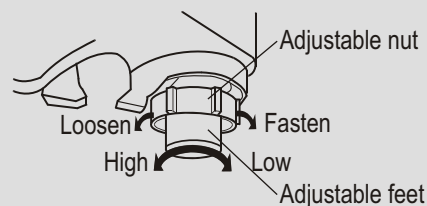


Before Using


How to change the direction of the drain hose

1. Loosen the fastening screws of the back cover,unpack the back cover gently, avoiding to break the clip claw.

(Figure 1)

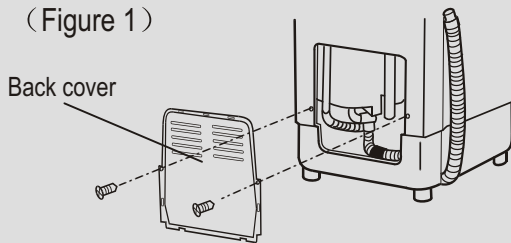


3. Stretch out the drain hose to the right of the frame from the groove. Fasten it in the base frame with the drain hose support, and fasten the screws. Then hang the hook in the drain hose, and hang the drain hose in the hole of the cabinet. (Figure 3)

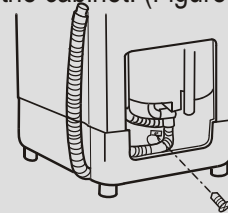

(Figure 3)


2. Take the drain hose from the cabinet, make the mouth of it flat a little, dismantle the pothook, loosen the fastening screws, dismantle the drain hose support ,and pull the drain hose into the cabinet from the left of the base.

(Figure 2)

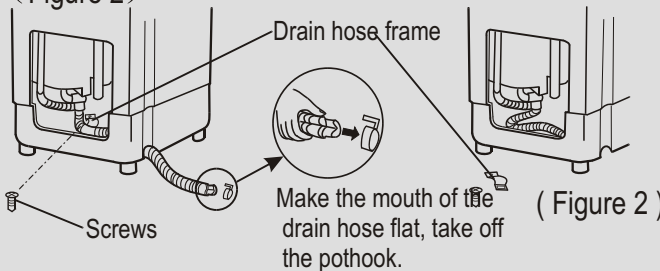

(Figure 2)

4. Install the back cover. Hang the under side of the back cover on the cabinet firstly, then push the left , the right tab and the upside into the cabinet. Do not do it strongly, and fasten the screws. (Figure 4)

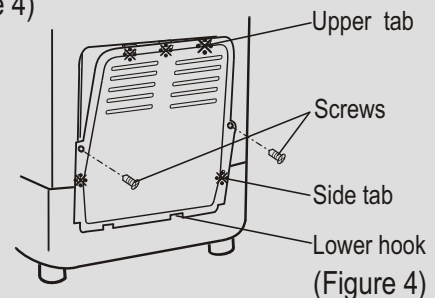


(Figure 4)

Usage of the drain hose


The drainage shall be smooth with the drain hose.

1. Never let the drain hose exceed 10cm above the ground. If the time of draining is too long, the washing machine will stop in the midway.

2. Do not step on or press the drain hose.

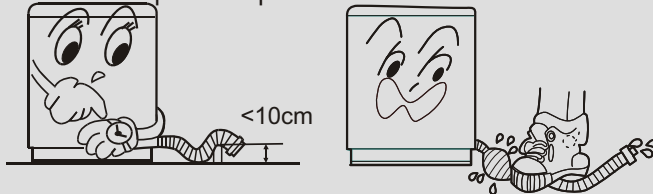


4. If extra drain hose is needed, please make separate purchase. The inner diameter of the extra hose shall not less than 30mm, and the length shall not exceed 1.5m.

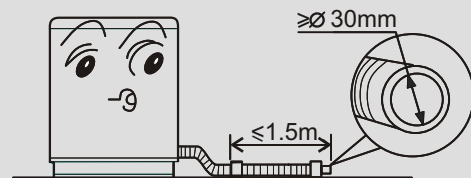

3. If the drain hose is too long, cut it at mid point. To make smooth drainage, cut the front end of the hose slantingly.



5. If the extra hose is too long, cut it either at A or at B

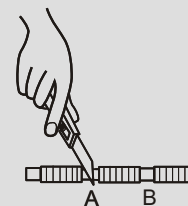


Install the water inlet hose


Confirm the water faucet

Before Using

Water faucet, suitable

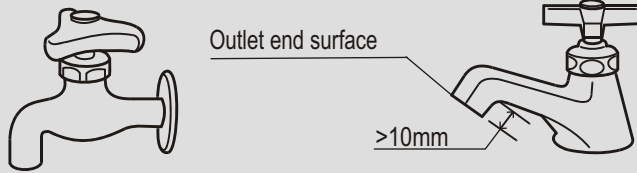

Water faucet, not suitable

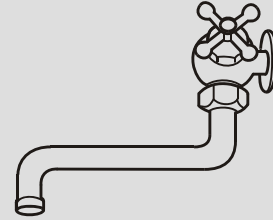

It is required that the front end shall be longer than 10cm.

The outlet end surface of the faucet shall be flat and smooth. If not please file it to avoid leakage.

Connection between the water inlet hose jointer and the water faucet

1. Press the lower end of the lock lever and push down the slider. Take off the water inlet hose jointer from the water inlet hose component. See to Figure 1.
2. Loosen the screw till the water faucet can be accessed. Put the jointer of the water inlet hose on the faucet. See to Figure 2. (If the faucet is too large and the jointer can not be set on the water faucet, please loosen the four screws and take out the bushing in the jointer. See to the figure.)

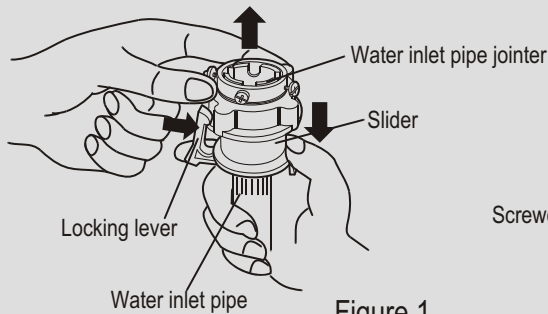


Figure 1

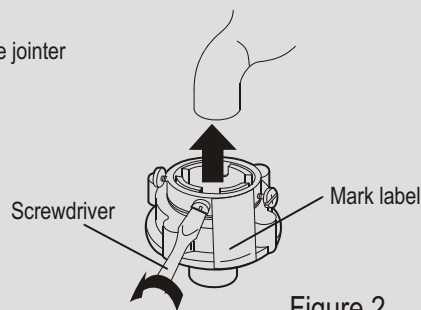


Figure 2

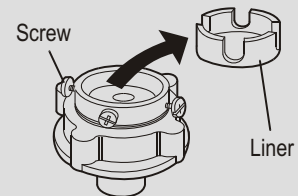


Figure 3

3. Fasten the four screws evenly. See to Figure 4.
4. Take off the nameplate. Twist the fastening nut as per the indication of the figure to seal up the outlet end surface of the faucet. See to Figure 5.

Remarks: Before installation, the threading is 4mm above the upper surface of the nut. After installation, the threading is 2mm above the upper surface of the nut. See to Figure 6.

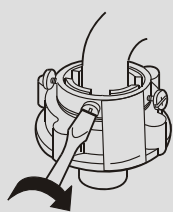


Figure 4

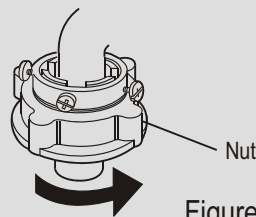


Figure 5


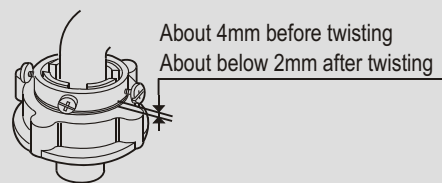


Figure 6


Connection between the water inlet hose and the washing machine

1. Do not take off the water absorption cushion. Please check if the cushion is dropped or damaged before each usage. If it happens please contact our after-sale department immediately.
2. Put the nut of the water inlet hose on the valve jointer.
3. Fasten the nut. Swing it gently to confirm if it's suitable.

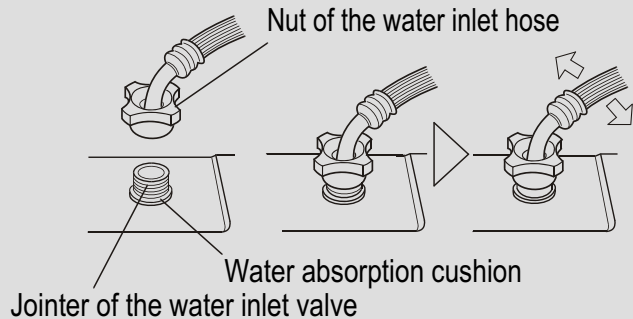


Connection between the jointer of the water inlet hose and the water inlet hose

1. Push down the slider. Insert the water inlet hose into the jointer.
2. Hang the lock lever to the jointer. Release the slider till a click sound is heard.

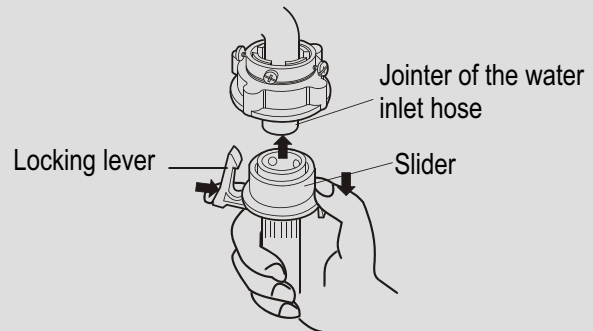


Check the connection between the jointer of the water inlet hose and the water faucet

1. Swing the hose gently to confirm if it is fastened stable.
2. After installation, open the faucet to check if it leaks.
3. Do not bend the hose with overstrain.
4. Before each usage please check if the connection between the jointer of the water inlet hose and the water faucet, and the installation of the water inlet hose are firm, so as to prevent dropping from improper installation position.

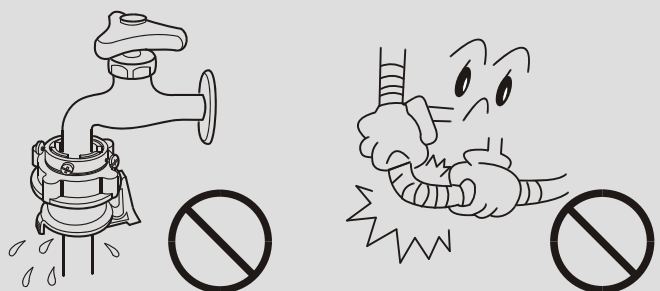

Dismantle the water inlet hose

1. Close the water faucet.
2. Press the locking lever. Push down the slider. Then pull off the water inlet hose. If the machine is used more than once every week, the jointer of the water inlet hose can be kept on the faucet to prevent damaging the fixing screw.

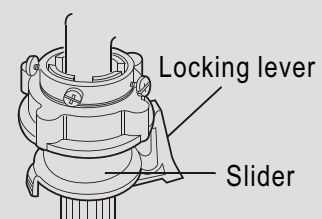


1 Preparation before washing *Using process*



Preparation before washing

1. Connect the water inlet hose.
2. Confirm that the washing machine is earthed reliably. Then insert the power plug into the receptacle. Do not connect the earth terminal to the gas pipe and tap water pipe.
3. Put down the drain hose.

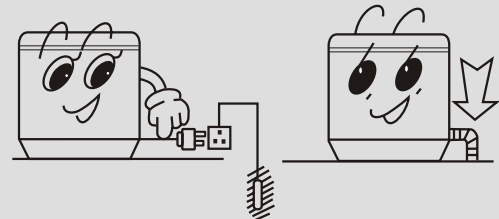

Pay attention to followings before washing the laundries

Confirm if there's special requirement for the laundries.

Clear the pocket. Take out the coins, sand, hairpins etc.

Fasten the buttons and zippers.

The quantity of the laundries shall not exceed the rated value. The big laundries like the jeans shall be put in loosely.

When the pulsator is running, the buttons of the laundries may cause noise. For the sake of discretion, please put the laundries with buttons into other laundries.



- a. Check if the laundries are applicable for washing with the machine.
- b. Divide the laundries with unfast color from other laundries.
- c. Put those laundries difficult to absorb water into water with hand.
- d. For those laundries with heavy soil, please first remove the dirt like mud or dust. For the parts with heavy soil, please apply detergent in advance, which can make it easier to remove the soil.
- e. For those laundries that may get lint ball and those with long fur, turn it over before putting in.
- f. Do not put those laundries polluted by chemicals directly into the washing machine.
- g. For those small laundries and those may get twisting or worn, and woolen/fur laundries, please put them into mesh bag for washing.


2 Put in the laundries

Using process




- The capacity of washing and spinning of the machine refer to the largest weight of the standard laundries under dry condition (as per the laundries stipulated in the A2 Attachment of GB4288-1992 standard) that can be washed or spun in one time. One time washing quantity shall be lower than the rated capacity. The largest capacity of this machine is 5.0kg.
- The thicknesses, size, type of the cloth will influence the actual washing capacity. It is suitable for one time washing to put in reasonable amount of laundries and the laundries can be turned round in washing.
- Do not select 4 water level or above for laundries smaller than 1.0kg, so as to avoid splashing of water.

Reference weight of the laundries:

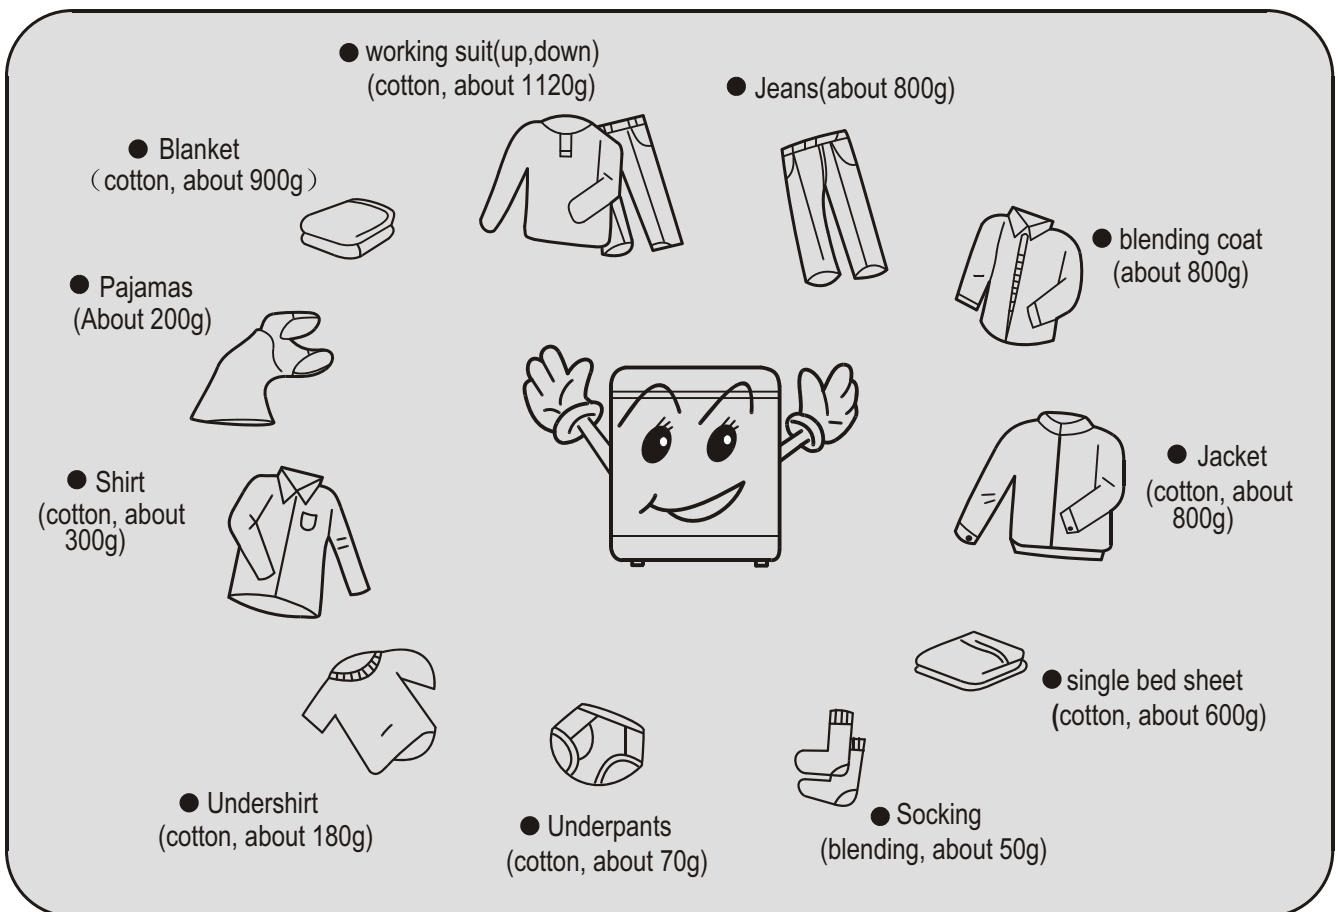

3 Usage of the detergent

Using process

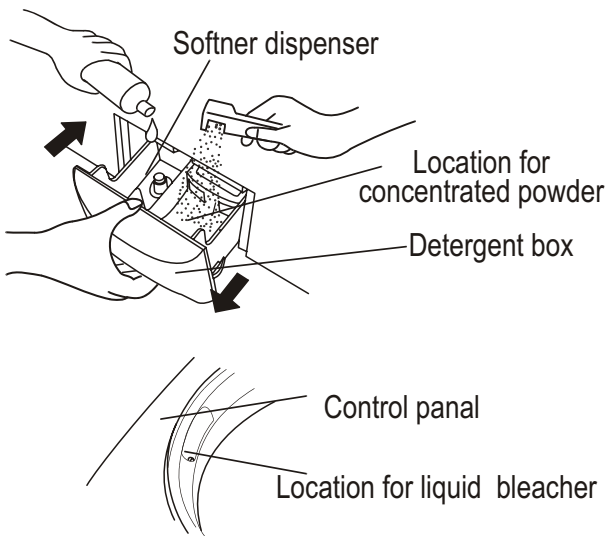

How to use the whitener

- Fill water to decided level. Dilute the whitener with container. Pour it slowly into the washing tub.
- Avoid using whitener on laundries with color or pattern as they are prone to lose color.
- The whitener shall not touch the laundries directly.
- Refer to the user's manual for the usage and quantity of the whitener.
- For powder whitener, please dissolve it before use.

- Add the detergent and softener into the box directly as indicated in the left figure.
- After adding, please close the detergent box. See to following table for the dosage of the detergent.

How to use the washing powder

- Direct dissolved in the machine
 - 1.Fill water to "Low" water level.
 - 2.Add the power. Run for 30 seconds to dissolve it completely.
 - 3.Put in the laundries. Select suitable water level.
- The instant dissolving of the washing powder:
 - 1.Prepare warm water of 30 °C and a container.
 - 2.Add the powder while stirring to fully dissolve it.
- The powder is more prone to pollute the laundries than the detergent. Therefore please use it with proper quantity.
- It is suggested not to use high-sudsing detergent.
- Washing powder with poor quality or not used for a long period may get blocked. Please clean the detergent box in time.
- Different washing powders have different dosage. Please refer to the usage manual of the washing powder for the details.

Water level, water quantity and the choice of usage quantity of the detergent

Laundries quantity(kg)	Water level	Water quantity	Common powder (Add 40g in each 30L water)	Concentrated powder (Add 25g in each 30L water)
5.0~3.5	10 9	About 42L About 38L	About 56g About 50.5g	About 35g About 31.5g
2.5~3.5	8 7	About 35L About 33L	About 46.5g About 44g	About 29g About 27g
1.5~2.5	6 5	About 31L About 28L	About 41g About 37g	About 26g About 23g
0.5~1.5	4 3	About 26L About 23L	About 34.5g About 30.5g	About 22g About 19g
Below 0.5	2 1	About 18L About 15L	About 24g About 20g	About 15g About 12.5g

4 Use the operation buttons *Using process*


A Description of the function of the buttons

Mode and meaning of the indicator light

-
- :Flashing: indicate the running program
- On: indicate the program about to run, or indicate the selected mode

Indicator light of procedure

- During the transmitting, the digital tube of SOAK is off, the digital tube of WASH displays "--", the digital tube of RINSE displays "2", and the digital tube of SPIN displays "4".
- During the program, the digital tubes display appropriate time.

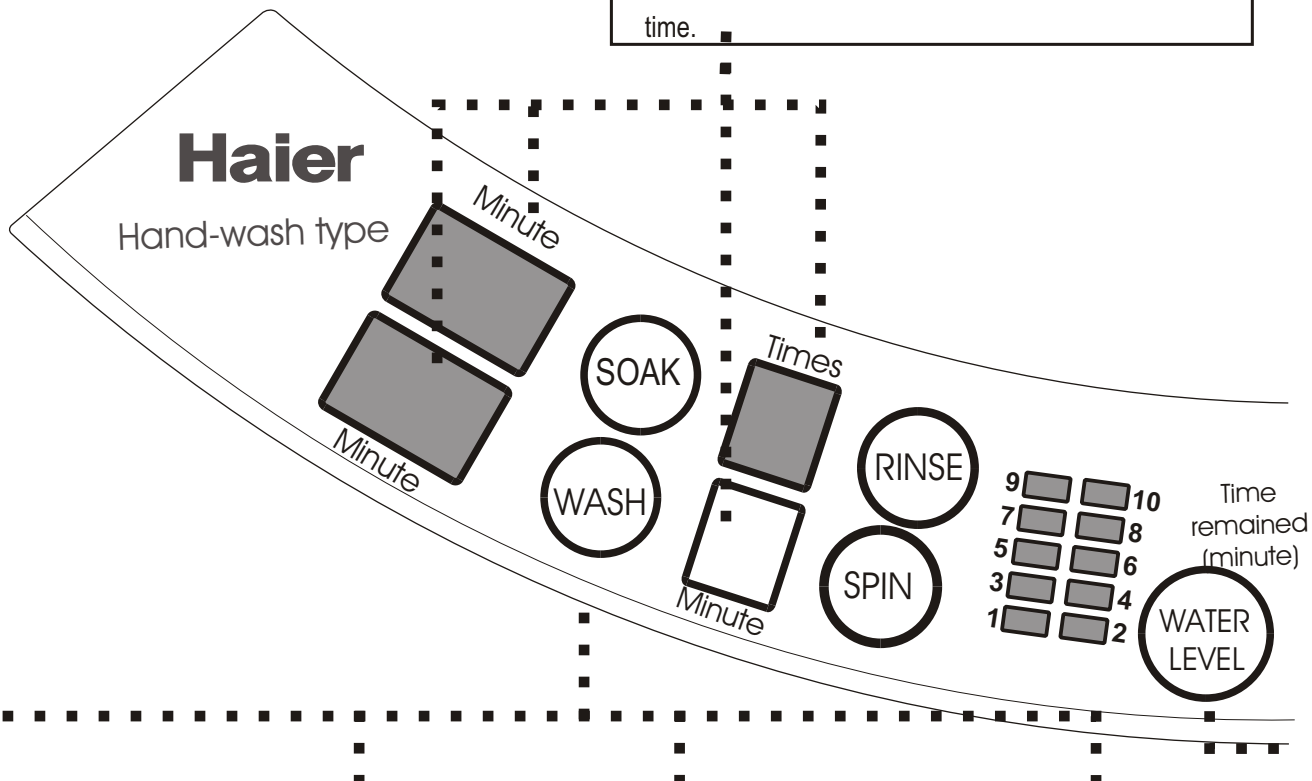

SOAK button

- Press the SOAK button to set the process of SOAK.
- During the NORMAL or COTTON program, press the SOAK button to set different time (10、20、30、40 minutes)
- During the JEAN or FIBRE program, press the SOAK button to select process, but not to change the time for soaking.
- During the GENTLE or QUICK program, press the SOAK button, the washing machine does not respond.

WASH button

- Press the WASH button to set the process of WASH.
- During the NORMAL or COTTON program, press the WASH button to set different time (from 0 to 25 minutes)
- During the JEAN or FIBRE program, press the WASH button to select process, but not to change the time for washing.
- During the GENTLE or QUICK program, press the WASH button, the washing machine does not respond.

RINSE button

- Press the RINSE button to set the process of RINSE.
- During the NORMAL or COTTON program, press the RINSE button to set different times(1、2、3、4 times). When the tube is on, it indicates that you have chosen the ELIMINATING FOAM RINSE PROGRAM, and perform eliminating foam rinse firstly. Then, it will fill water continuously after the water level is high, and the foam in the tub will overflow from the overflow inlet, and avoiding polluting the clothes again.
- During the GENTLE、JEAN or FIBRE program, press the RINSE button to select rinse process, but not to change the times of rinse.
- During the QUICK program, press the RINSE button, the washing machine does not respond.

SPIN button

- Press the SPIN button to set the process of SPIN.
- During the NORMAL or COTTON program, press the SPIN button to set different time of spin(from 0 to 9 minutes)
- During the GENTLE、JEAN and FIBRE program, press the SPIN button to select the process of spin, but not to change the time of spin.
- During the QUICK program, press the SPIN button, the washing machine does not respond.

Indicator light of RESERVE and TIME REMAINED

- During the transmitting, it displays "--"
- During the process of reserve, it displays reserve time(hours)
- When the program starts, it displays time remained(minutes).When the total time exceeds 99 minutes, if "A " represents 100 minutes, "b " represents 110 minutes, then A3 equals 103 minutes.
- If there are abnormal phenomenon, it displays abnormal signal.

No.16

ON/OFF button

- Press the ON/OFF button to switch on the power
- After the power is on,another press will switch off the power.
- After the power is on, if not press the START/PAUSE button, the washing machine will be shut-off 5 minutes later automatically.

START/PAUSE button

After the power is on,press the START/PAUSE button, tha washing machine will start.

- Pressing the button in running will cause pausing.
- In pausing, press it again to restart.

XQB50-20
FUZZY

POWER
ON/OFF

START
PAUSE

Reserve(hours later)

NORMAL Fuzzy
COTTON MEMORY
JEAN GENTLE-SPIN
FIBRE
GENTLE
QUICK

PROGRAM

RESERVE

WATER LEVEL button

- The washing machine can check laundries automatically. After laundries, the level can be set automatically. The auto-set water level are "4","6","8","10".
- You can select water level by yourself. After the washing machine started working, it will not set the water level again,you must press the ON/OFF button to set again.
- If there is water remained in the tub, it can not perform laundries check, and will display water level "6". If you put wet laundries, it may display "10".
- If you select "Fast" program, the water level will be set to "2" automatically. When it is reached, then machine will inlet water along with washing, and the "4" indicator flashes, till "4" is reached. Then it stops inlet water, display "4",and perform normal washing.
- During the WASH and RINSE program, press the WATER LEVEL to supply water, till you loose hand or the water reaches the overflow level, it stops supplying water.

RESERVE button

- Press the knob and you can seslect 2-24h reserve end time.
- When the RESERVE starts, press and hold the knob, it will display the reserve mode.

PROGRAM button


- The following automatical program are available. (The GENTLE SPIN program cooperates with the NORMAL and GENTLE program in washing.)

Programs	Application
NORMAL	Normal washing
COTTON	For cotton clothes
JEAN	For bigger and thicker clothes
FIBRE	For clothes made from fibre
GENTLE (GENTLE SPIN)	For woolen or underpants
QUICK	10 minutes fast washing
MEMORY	Memory and usage of the self-edit program
NORMAL (GENTLE SPIN)	Normal washing and spinning gently

After switching on the power, the machine will set to wash-rinse-spin program automatically. That is the most common program. To select other program, Push SOAK, WASH, RINSE and SPIN button to select one or more programs among soak/wash/rinse/spin. After switching on the power button, if one of the WASH, RINSE, SPIN button is pushed firstly, then the digital lamps will go out automatically, and the process procedure is stopped. For example, if the "Spin" button is pushed firstly, the machine will set to SPIN program automatically.

Attention

- Even there's no water in the tub, the spinning will start after a certain period.
- Do not use the SOAK program for the woolen laundries.
- Wash the laundries that are prone to lose colors separately from other laundries.
- The pulsator will not rotate unless the water is filled to selected water level.

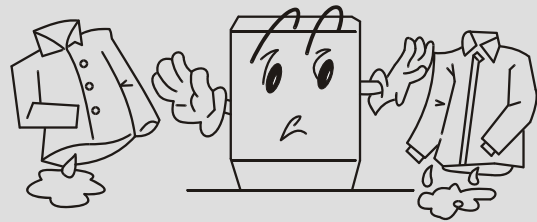

- The soak program can be used as fitting of the STANDARD, COTTON, JEANS and FIBRE automatic programs. Soak with slight stirring before wash.
- After running, you can set programme in the SOAK and WASH mode, and the process of SPIN in the RINSE mode, but can not set in other conditions.

4 Push the WATER LEVEL button to select suitable water level



When the power is switched on, the washing machine will check the cloth automatically. After that, the water level is set automatically. To select other water level, push the button. Refer to the Standard usage quantity of the detergent and water quantity in Page 9 and WATER LEVEL SELECTION in page 11 for the selection.

Page 9



Page 11




Time list of each program (WITHOUT SELF-EDIT PROGRAM)

Program	Water level	Wash (min)	Rinse (min)	Spin (min)	Total time(min)	
					Without SOAK	With SOAK
STANDARD	1-10	10-15	Rinse twice, each about 2-3	About 5-6	About 37-42	About 47-82
COTTON TEXTILE	1-10	10-15	Rinse thrice, each about 2-3	About 5-6	About 47-52	About 57-92
JEANS	1-10	20	Rinse twice, each about 4-5	About 5-6	About 53	About 93
CHEMICAL FIBER	1-10	12	Rinse twice, each about 2-3	About 5-6	About 39	About 69
GENTLE	1-10	3	Rinse twice, each about 2-3	About 5-6	About 25	—
QUICK WASH	About 4	2	Rinse once, each about 2	About 1-2	About 10	—
MEMORY	1-10	0-25	Rinse 0-4 times, each about 2-3	About 0-9	About 0-76	About 10-116
STANDARD (GENTLE SPIN)	1-10	10-16	Rinse twice, each about 2-3	About 5-6	About 37-42	About 47-82

- * Total time: including the normal water inlet time and drain time.
The total washing time may be influenced by the water inlet pressure and water level.
- * Spin time: the time from intermittent running to finishing
- * When selecting SOAK program, first soak for 10-40 minutes, then do wash, rinse, spin.
- * When selecting QUICK WASH program, wash, rinse and spin are set automatically.

5 Push the RESERVATION button to select suitable reserve program

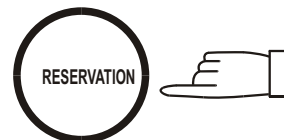


When the power is switched on, the reservation program is disabled automatically. If you need to finish the washing in reserved time, please push the RESERVATION button to select suitable program. Refer to the RESERVATION in Page 11 for selection.

Page 11


• Confirm the reservation program

- When the reservation program is started, pressing the button, the numeral tube displays the reserved hours to the wash cycle end. The point light flashes to indicate in-reservation.
- To change the running program or cancel reservation, you have to switch off the power and make new selection.

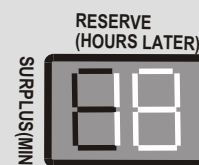

The washing will finish about 18 hours later

6 Push the START/PAUSE button

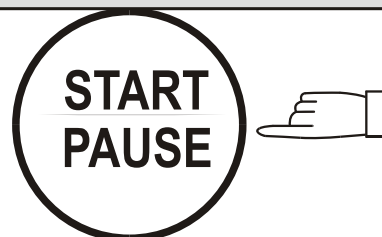

5 Close the top lid

If you open the top lid, the machine will stop working except for water filling and spinning



6 Washing finished





The power will be switched off automatically after the finishing of the washing.



After Finishing wash, alarm automatically

7 Disposal after washing

- After using, please clean the lint and foreign materials of the lint filter etc. in time. Otherwise, it may influence your using the machine.
- Please first pull off the power plug from the receptacle before cleaning.
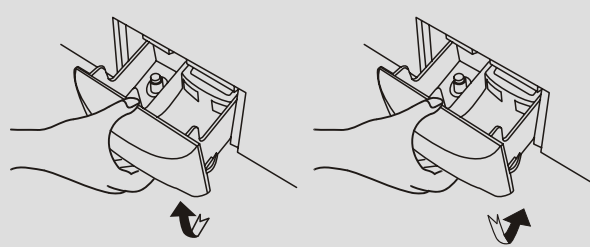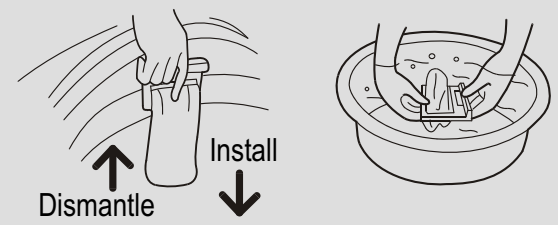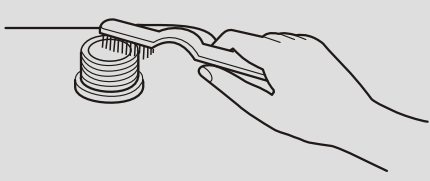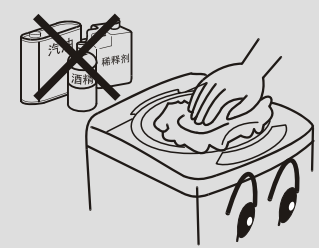
<p>Clean the detergent box and set it on the control panel seat. The method of dismantle: Push it up aslant and gently. The method of install : install it upwards and aslant, then push it in .</p>  <p style="text-align: center;">Dismantle Install</p>	<ul style="list-style-type: none"> ● The lint filter must be used during washing. ● It must be cleaned in time after each using <p>Lint filter: 1 pull upward to dismantle lint filter; 2 push downward to install lint filter; 3 please clean lint filter after wash.</p>  <p style="text-align: center;">Dismantle Install Clean</p>
<p>The filter screen of the water inlet valve is likely to be blocked by foreign materials and influence the water inlet. Please clean it with brush every two months.</p> 	<p>If the cabinet is dirty, wipe it with wet cloth</p> <ul style="list-style-type: none"> ● Do not flush it directly with water. ● Wipe it with neutral detergent. ● Do not wipe it with thinner, petrol, alcohol etc. 

1. After washing, close the water faucet. (If needed, you can dismantle the water inlet hose).
2. Do not store water in the washing machine for a long period. Drain the water completely after each using.
3. Be sure to pull off the power plug before maintenance.
4. Hang up the power cord and drain hose.
5. Wipe off the water drops on the surface of the machine and inside the tub. Open the top lid for some time (about 1 hour), then close the top lid.

Trouble-shooting Answer to question

(If there's a breakdown, please pull off the power plug before checking) The following phenomena are not breakdowns sometimes. Please confirm again before sending it to repair. If there are real breakdowns, please come to the special maintenance department or after-sale service department of our company. Do not repair it by yourself.

Phenomena		Reason	How to settle
The digital tube displays "E0"		<ul style="list-style-type: none"> ● The top lid is not closed 	<ul style="list-style-type: none"> ● Close the top lid
The draining does not work, or the speed of draining is too slow. The digital tube displays "E1" and it rings.		<ul style="list-style-type: none"> ● Is the drain hose upended? ● Is the drain hose blocked by foreign material? 	<ul style="list-style-type: none"> ● Put down the drain hose.. Open and close the top lid once. ● Clean the foreign material. Open and close the top lid once.
It stops running during spin. The digital tube displays "E2" and it rings.		<ul style="list-style-type: none"> ● The top lid is not closed 	<ul style="list-style-type: none"> ● Close the top lid
The safety switch acts. The spinning cannot work (after twice revising). The digital tube displays "E3" and it rings.		<ul style="list-style-type: none"> ● Are the laundries put slantingly? ● Is the machine slanting? 	<ul style="list-style-type: none"> ● Re-order the laundries. Close the top lid. ● Level the machine in right position. Open and close the top lid once.
It does not do water inlet or the speed is slow (the water level is not reached after 15 minutes). The digital tube displays "E4" and it rings.		<ul style="list-style-type: none"> ● Is the water faucet open or is there water supply failure? ● Is the water inlet valve is blocked ● Is the water pressure too low? 	<ul style="list-style-type: none"> ● Open the water faucet. Open and close the top lid once. ● Clean the water inlet valve. Open and close the top lid once. ● Open and close the top lid once.
The digital tube displays "E6".		<ul style="list-style-type: none"> ● The water level sensor is failure. 	<ul style="list-style-type: none"> ● Please contact the after-sales service department.
The machine does not act	Not wash	<ul style="list-style-type: none"> ● Is there power failure? ● Is the power plug inserted tightly? ● Is the water level reached preset position? 	<ul style="list-style-type: none"> ● Please use it when there's power supply ● Insert the power plug tightly. ● Fill water to the preset position.
	Not spin	<ul style="list-style-type: none"> ● Is the power plug inserted tightly? ● Is the top lid closed reliably? ● Are the laundries set flat? 	<ul style="list-style-type: none"> ● Is the power plug inserted tightly? ● Is the top lid closed reliably? ● Are the laundries set flat?
There's abnormal sound inside the machine		<ul style="list-style-type: none"> ● Is the machine slanting? ● Are the laundries put slantingly in spinning? ● Are there any foreign materials? 	<ul style="list-style-type: none"> ● Adjust the machine to be even ● Reorder the laundries and close the top lid. ● Remove the foreign materials.
The water tap leaks		<ul style="list-style-type: none"> ● Is the screw of the jointer of water inlet hose loose or awry? 	<ul style="list-style-type: none"> ● Fasten the screw of the jointer properly.

Common phenomena

Phenomena	Explanation
<ul style="list-style-type: none"> ● The spinning is intermittent when it starts. 	<ul style="list-style-type: none"> ● Balance the laundries to avoid slanting.
<ul style="list-style-type: none"> ● Pause during washing. 	<ul style="list-style-type: none"> ● supplemental water filled after fabric sensor has checked fabric (about 48 seconds)
<ul style="list-style-type: none"> ● Select spin, but it doesn't work. 	<ul style="list-style-type: none"> ● The program is setting the drain time. Some time is needed before it starts spinning.
<ul style="list-style-type: none"> ● The pulsator pauses during water inlet in wash and rinse. 	<ul style="list-style-type: none"> ● It is to avoid splashing during water inlet.
<ul style="list-style-type: none"> ● There may be some water flowing out of the drain hose in the first use of the machine. 	<ul style="list-style-type: none"> ● It is the water remained in the factory inspection of performance.

Packing list

Name	Quantity	Storage position
● User's manual	● One	● Inside the document bag
● Warranty card	● One	● Inside the document bag
● Lint filter	● One	● Inside the document bag
● Components of the water inlet hose	● One	● Inside the accessory bag
● Bottom plate	● One	● Between the upper cushion of the washing machine package and the upper seal of the package carton
● Tapping screws	● Five	● Inside the accessory bag
● Fuzzy logic automatic washing machine	● One	

Specification

Model	XQB50-20
Rated voltage • frequency	220V-240V/ 50Hz
Rated washing / spinning capacity	5 .0kg (weight of standard dry cloth)
Water level/Water quantity (about)	1/15L 2/18L 3/23L 4/26L 5/28L 6/31L 7/33L 8/35L 9/38L 10/42L
Max water consumption	About 126L(Highest water level; STANDARD program)
Injection pressure	0.03Mpa~0.78Mpa
Rated washing power	350W
Rated spinning power	255W
Weight	About 25kg
Dimension	L 537 mm W 520 mm H 890 mm

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>