

Environment-friendly double-driver
automatic washing machine

User's manual

Haier

This manual is for

XQSB60-JN

- Please read this manual carefully before using.
- Retain it for future reference.





0030806318B

Contents

Names of the parts.....	1
Safety precautions	2
Installation and adjustment	4
Install the water inlet hose.....	6
Preparation before washing.....	8
The musts in washing	8
Usage of the detergent	9
Put in laundries.....	9
Close the top lid.....	9
Use the operation buttons	10
Finish washing	16
Disposal after washing	17
Trouble shooting *Answer to question.....	18
Packing list	19
Specification.....	19

Names of the parts

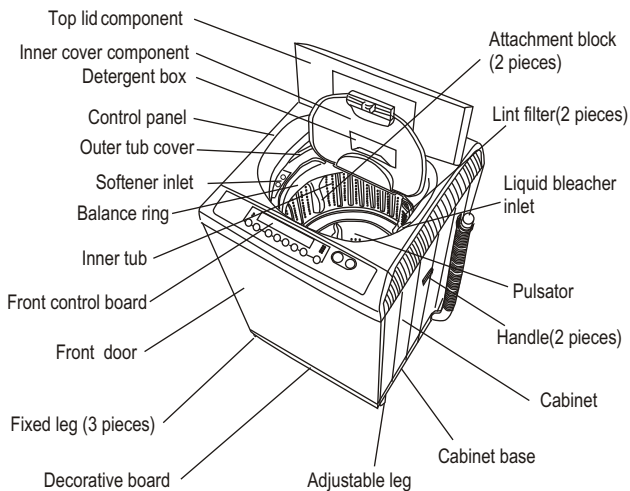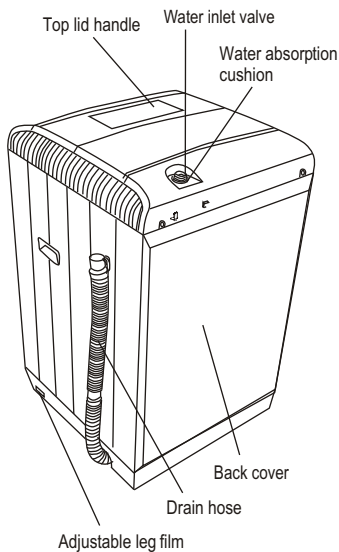

Meaning and description of the symbols

Warning sign



Contents marked with that symbol are related to the safety of the product and the personal safety of the users. Please operate in strict conformity to the contents, otherwise it may cause damage of the machine or injure the personal safety of the user.

Forbidden sign



Contents marked with that symbol are actions forbidden to perform. Performing of those actions may result in damage of the machine or injure the personal safety of the user.

Safety precautions

Please insert the power cord into special receptacle with rated voltage. Be sure to use single-phase three pins receptacle. Ensure the earthing prong of the power receptacle is earthed reliably. Use leakage protector if possible.




In common usage of the washing machine, the power plug shall be ready to be pulled or plugged with hand. Be sure to pull the plug off and close the water faucet when occurring power failure, delivering the machine, setting the machine idle or cleaning the machine. Do not plug or pull the power plug with wet hand.



Do not bend, stretch, twist, bind the power cord by force, or reform it. Do not press or clamp it with heavy items. If the power cord and power plug are bad, or the receptacle is loose, be sure to have it replaced by the technicians of our special shop or our agent, or the after-sales service department to avoid any risk. Keep the prong of the power plug clean. If dust is found on the power plug, please wipe it off with dry cloth.



In case the washing machine is installed on ground with carpet, be careful not to block the ventilation hole with carpet.

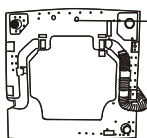


The ventilation holes at the bottom



Do not use water with temperature higher than 50 °C




Do not put the machine at damp place like the bathroom. Never wash it with water. Do not put wet laundries on the control panel coating.

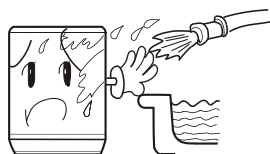

Do not wash water-proof laundry like the raincoat, bike covers etc. To avoid uncommon vibrations in spinning and damages to the laundries.




Do not let the machine share one receptacle with other electric appliances. If the power plug is damaged, or the plugging into the receptacle is loose, do not use the plug any more.

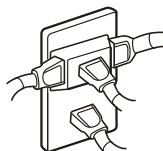


Safety precautions

Do not put hand into the rotating tub. It is dangerous even if the rotation speed is slow. Take special care of the children. Keep children away from the washing machine to avoid them climbing on.

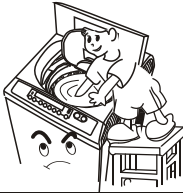


Do not decompose, repair or alter the machine by yourself.

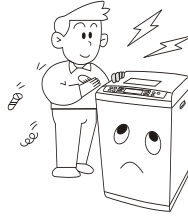


Do not put any hot or heavy items (such as the kettle with hot water) on the washing machine.




Do not wash laundry with volatile materials (such as thinner, petrol etc.).

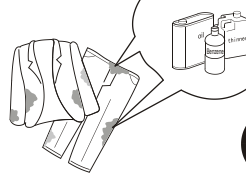


The handicapped or Children without care shall not use the machine.

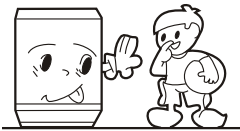


Keep the machine away from direct sunlight and heat source like the heater.

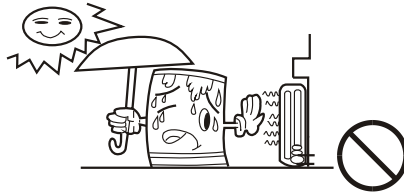

Please keep the lint filter in good condition, and install it to proper position during washing. If the lint filter is lost or damaged, please contact the local after-sales service department of our company.

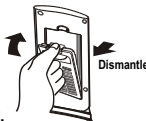

 To protect your laundries and washing machine, please take out all of the coins, buttons, sand, hairpin and other foreign materials before washing.



Please check if the water faucet is open, and if the connection of the water inlet pipe is proper before washing. Please put down the drain hose before washing. It is suggested to use foamless washing powder. Please don't use the washer in the environment below 0°C; if the washer has been stored below 0°C, please be sure to ensure the washer is placed under the room temperature for 24 hours and then use otherwise the washing effects may be lowered or the washer may be damaged.


Installation and adjustment

Please install and adjust the machine according to the requirement of the manual. It is very important to your security and correct operating the machine.


Install the inner cover component

1. Open the top lid of the washing machine.

2. Put the inner cover component on the outer tub cover, aiming the inner cover shaft to the installation hole of the corresponding outer tub cover shaft groove.

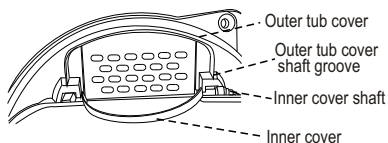


3. Firstly insert the inner cover shaft of one side into the corresponding outer tub cover shaft groove, then push the another inner cover shaft into the corresponding outer tub cover shaft groove. Please install to designated position to guarantee there are no dropping or abnormal sound in opening and closing of the inner cover, and the operation shall be smooth. Do not dismount the inner cover component after washing.

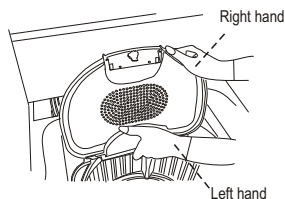

Install the bottom plate

After opening the package, please lean the washing machine gently down on soft items (like towel cloth, blanket, etc.). Install the bottom plate to the bottom of the machine with four screws by a cross screwdriver, then lift the machine up gently.


See to the figure:

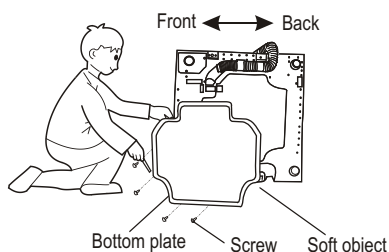


Adjust the Installation position

The washing machine away from wall should be overrun 20mm. The largest allowable slope of the shank base of the machine is 1° . The slanting or rough ground will result in unstable running or stoppage of the machine. Please adjust it with following methods:

- Confirm it's horizontal:
Hang the lead line to check if it is horizontal.

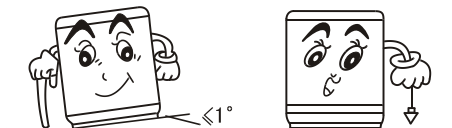


- Adjust the adjustable leg:
 1. To twist the adjustable leg, please first lift up the side of the leg slightly, loosen the adjustable nut, and twist the leg.
 2. After adjustment, fasten the nut.

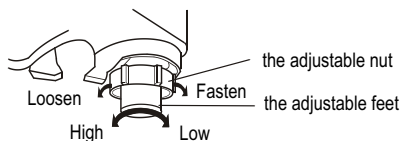


Usage the drain hose

The drainage shall be smooth with the drain hose.

1. The height of the drain hose shall be less than 10cm, or the drainage will not be smooth, and cost such long time that the machine may stop at mid way.
2. Do not step on or press the drain hose.

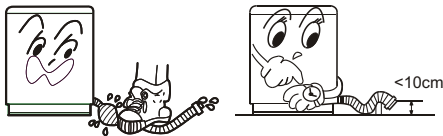


4. If extra drain hose is needed, please make separate purchase. The inner diameter of the extra hose shall not less than 30mm, and the length shall not exceed 1.5m.

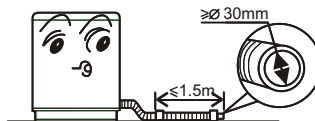

3. If the drain hose is too long, cut it at mid point. To make smooth drainage, cut the front end of the hose slantingly.



5. If the extra hose is too long, cut it either at A or B point.

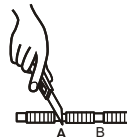

Install the water inlet hose

1. Attach the water inlet hoses to the water faucet. Using pliers, tighten the coupling. (As figure 1)

NOTE: Do not over tighten. Damage to the valves can result.

2. Connect the other ends to the water inlet valve .
(As figure 2)

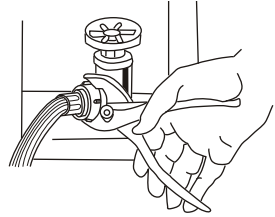


Figure 1

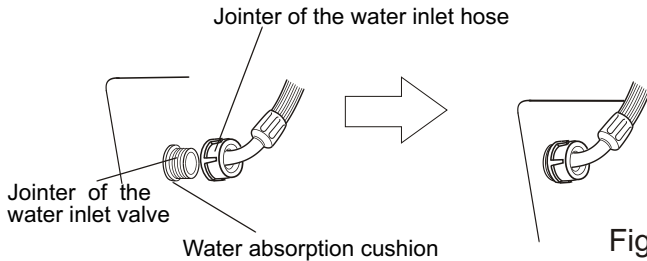


Figure 2

Check the connection between the jointer of the water inlet hose and the water tap

1. Swing the hose gently to confirm if it is fastened stable.
2. After installation, open the faucet to check if it leaks.
3. Do not bend the hose with overstrain.
4. Before each usage please check if the connection between the jointer of the water inlet hose and the water faucet, and the installation of the water inlet hose are firm, so as to prevent dropping from improper installation position.



Take down the water inlet hose

1. After using, Close the water tap.
2. Pull off the water inlet hose from the water tap and washer

1 Preparation before washing



Preparation before washing

1. Connect the water inlet hose.
2. Confirm that the washing machine is earthed reliably. Then insert the power plug into the receptacle. Do not connect the earth terminal to the gas pipe and tap water pipe.



4. The ground inclination or unevenness may cause the washer operating not steadily or cause noise, please set level the washer.

Pay attention to followings before washing the laundries

<p>Confirm if there's special requirement for the laundries.</p>	<p>Clear the pocket. Take out the coins, sand, hairpins etc.</p>	<p>Fasten the buttons and zippers.</p>	<p>The quantity of the laundries shall not exceed the rated value. The big laundries like the jeans shall be put in loosely.</p>	<p>When the pulsator is running, the buttons of the laundries may cause noise. For the sake of discretion, please put the laundries with buttons into other laundries.</p>

 
- a. Check if the laundries are applicable for washing with machine.
- B. Divide the laundries that are not colorfast from other laundries.
- c. Put those laundries difficult to absorb water into water with hand.
- d. For those laundries with heavy soil, please first remove the dirt like mud or dust. For the parts with heavy soil, please apply detergent in advance, which can make it easier to remove the soil.
- e. For those laundries that may get lint ball and those with long fur, turn it over before putting in.
- f. Do not put those laundries polluted by chemicals directly into the washing machine.

2 The musts in washing


- The capacity of washing of the machine refer to the largest weight of the standard laundries under dry condition that can be washed in one time.
- The thickness, size, type of the cloth will influence the actual washing capacity. It is suitable to put in reasonable amount of laundries and the laundries can be turned round in washing for one time washing.
- It is suggested to use foamless washing powder.
- Do not select high water level for small quantity of laundries, so as to avoid splashing of water.

3 Usage of the detergent

- When choosing the “No washing powder” program, the usage of softener or bleach is same as using detergent.



- When “No washing powder” button not selected, for using washing powder program, please determine the consumption of washing powder as per the operating instruction of washing powder, clothes load and dirtiness. When selecting “No washing powder” function, if add a small quantity of detergent, the clothes will be washed cleaner.

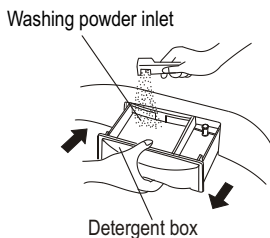

How to use the softener

- The usage and dose of the softener as per the specifications of softener.
- Before washing put the softener into the filling entrance (can be found on the balancing ring by rotating the inner tub, as illustrated in the left drawing, please refer to P1 graphics). The softener will put into the washer when rinsing.
- After the softener is put in, please don't place for a long time otherwise softener may solidify and cause flowing not smooth.
- When the washer in spin process, please don't push “START/ PAUSE” button for fear that the softener is put in earlier, which affect the effects.
- Please do not use softener in the following cases:
Selected rinsing times greater than two;
Choosing rinse/spin two-in-one program.

How to use the bleach

- Fill water to decided level. Dilute the bleach with container. Pour it slowly into the washing tub.
- Avoid using bleach on laundries with color or pattern as they are prone to lose color.
- The bleach shall not touch the laundries directly.
- Refer to the user's manual for the usage and quantity of the bleach.
- For powder bleach, please dissolve it before use.

How to use the washing powder

- When selecting reserve wash or fuzzy program, put the detergent into filling entrance.
- Directly dissolved in the machine (not applicable for fuzzy program and reserve wash)
 - 1.Fill small quantity of water (select the smallest water level) .
 - 2.Add the wash powder. Run for 30 seconds to dissolve it completely.
 - 3.Put in the laundry. Select suitable water level.
- The instant dissolving of the washing powder:
 - 1.Prepare warm water of 30℃ and a container.
 - 2.Add the wash powder while stirring to fully dissolve it.
- In selecting the posthaste program, it is suggested to adopt liquid detergent instead of washing powder to guarantee the washing effect.
- Put in the proper quantities detergent according to the water level and the laundries quantities.
- Washing powder with poor quality or long time storage maybe caked. Please pay attention to cleaning the detergent box in time.

4 Put in the laundries

5 Close the top lid

Besides drainage, if opening the top lid, the washer will stop and give an alarm.

6 Use the operation buttons

a. Description of the function of buttons

Mode and meaning of the indicators


- Off
- On: indicate the program about to run, or indicate the selected mode

Digital tube

- During sensing, it displays--
- During operation of programs, it displays there mainned time (minute) or remained times of the corresponding procedure

No washing powder button

- Push the button to set the wash function.
- If "no washing powder" function is activated, the "No washing powder" indicator is on. You can then do washing without adding detergent into the inner tub. The max laundry volume is 5.0kg. The max water level is 8.
- If "disinfect" function is activated, the "disinfect" indicator is on to execute disinfecting function.
- If "no washing powder" function is not activated, the "no washing powder" indicator is off.
- The programs will require detergent.
- In "gentle" program, the "no washing powder" button will not respond. Special detergent is required.

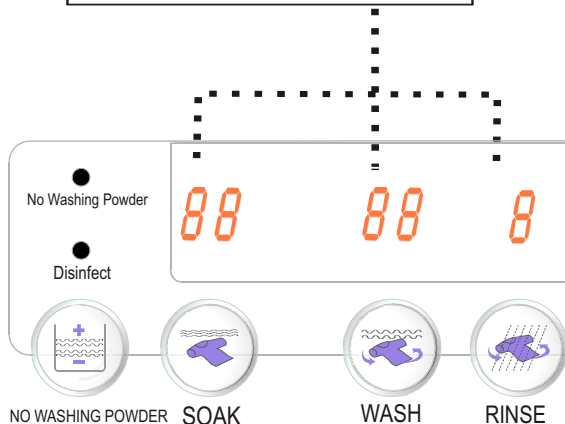

Soak button

- Push the soak button to set the soak procedure.
- During common, standard, jean, push the soak button to set different soak time (10, 20, 30, 40 minutes).
- During cotton programs, push the soak button to select soak procedure, but the soak time can not change.
- During quick, posthaste, gentle, silk programs, push the soak button, the machine have no reaction.

Wash button

- Push the wash button to set the wash procedure.
- During common, standard, jean programs, push the wash button to set different wash time :With detergent: 0-25min ; Without detergent: 11-35min.
- During cotton, silk programs, push the wash button to select wash procedure, but the wash time cannot change.
- During quick, posthaste, gentle, programs, push the wash button the machine have no reaction.
- If the "no washing powder" function is activated, the wash time will increase for 10 more minutes.

Rinse button

- Push the rinse button to set the rinse procedure
- During jean, standard and common programs, push the rinse button to set different rinse times (0, 1, 2, 3, 4 times)
- During cotton, silk programs, push the rinse button to select rinse procedure, but the rinse times cannot change.
- During quick, posthaste, gentle programs, push the rinse button, the spin procedure have no reaction.
- During standard program, the machine is set to save water program. If you push the rinse button before starting operation, it will change to water storage rinse program.

Remarks: For those large laundries with high water absorption capability such as pillow, bedspread, coat etc., Please select water-storage rinse program to avoid splashing.

Reserve/remain time indicator digitron

- During sensing, it displays --
- During reserve procedure, it displays the remained reserve time (in hours)
- During operation of programs, it displays the remained time (minutes). If the remained time exceeds 99 minutes, it adopts A at tens place to represent 100 minutes, b to represent 110 minutes. For instance, A3 represents 103 minutes.
- In case of abnormal phenomenon, it displays the abnormal symbol (see to Page 16)

Page 16



Time remained (minutes)

STANDARD ●●	COMMON ●●
COTTON ●●	QUICK ●●
SILK ●●	POSTHASTE ●●
GENTLE ●●	JEAN ●●

Reserve (hours later)

8 8 88



SPIN

WATER LEVEL

RESERVE

PROGRAM

Spin button

- Push the spin button to set the spin procedure.
- During common, jean, standard, programs, push the spin button to set different spin time (from 0 to 9 minutes)
- During cotton, silk programs, push the spin button to select spin procedure, but the spin time cannot change.
- During quick, posthaste, gentle programs, push the spin button, the machine have no reaction.

Water level button

- The washing machine can detect the laundries automatically. After detection, it will set the water level to suitable value among 4, 6, 8, and A automatically.
- You can also set water level by yourself. After the machine is started, it will not set water level automatically. You shall push the start/pause button to make new setting.
- If there's water inside the tub, the machine cannot detect the laundries and will display water level 6.
- If wet laundries are put in, it may display water level 10. You must set suitable water level by yourself.
- If posthaste program is selected, it will display water level 3. When water level 1 is reached in water filling, it will perform washing while filling water. When water level 3 is reached, it will change to common washing.
- During operation of wash and rinse program, you can push down the water level button to add water. When you release the button, or it reaches the overflow water level, the machine will stop adding water.
- The water level decided may be different from actual value because of the different moisture level of the laundries.

Start/Pause button

- After the power is switched on, push it to start the machine
- During working, push it to pause working.
- During pause, push it to resume working.

Power On/Off button

- Push the POWER button to switch on the power.
- When the power is on, push it again to switch off the power.
- Push the POWER button to switch on the power. If the start/pause button is not pushed, the washing machine will automatically switch off the power after 5 minutes.



START
PAUSE



POWER
ON/OFF

Program selection button


- Following automatic programs are available for selection

Program	Applicable situation
common	Common washing
Quick	Fast efficient washing for common laundries
Posthaste	Super quick wash of the laundry under 1 kg with light soil
Jeon	Washing the relatively big and thick laundries
Standard	Standard water saving washing
Cotton	Washing the cotton textiles
Silk	Washing the silk textiles
Gentle	Washing for laundries with particularity care


Reserve button

- Push this button, can select washing closing time, range of choice for 2 - 24 hours.
- After reservation starts up, after hold "RESERVE" button by hand, can display reserving status.

b.Steps of using the operation buttons and description of the steps

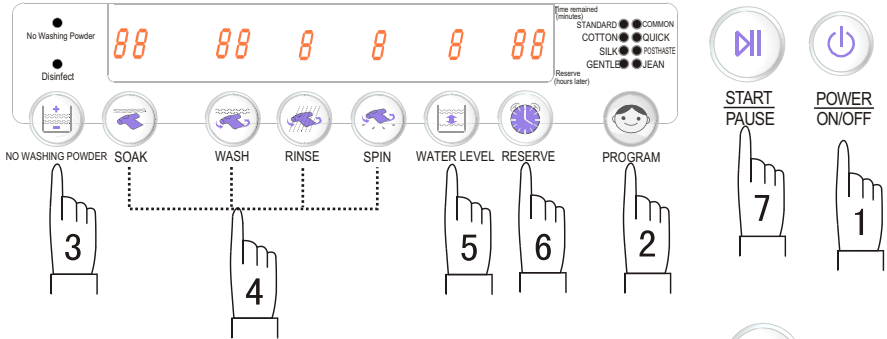

1.Push the "POWER ON/OFF " button to switch on the power.

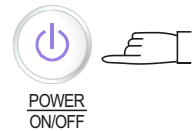

2.Push the "PROGRAM" button to select suitable automatic program



After switching on the power, the machine will set common program automatically. To select other automatic program, push the "program" button till the relative indicator is on. Refer to the "program button" on Page 11 for the selection.

For instance: select "posthaste"program for laundries with small quantity and light soil.



- In selecting the common, standard program, the machine will execute fuzzy program to select water and wash time according to the cloth and weight of the laundries. The full procedure is controlled automatically.

 
STANDARD ● ● COMMON
COTTON ● ● QUICK
SILK ● ● POSTWASTE
GENTLE ● ● JEAN

3.Push the "NO WASHING POWDER " button to select suitable function.

- Push the "no washing powder " button till the relative indicator is on. Refer to the "program" button on page 10 for the selection.
- When "No washing powder" indicator lamp is not on, it is the program for using the washing powder.




4.Push the "SOAK" , "WASH" , "RINSE" , "SPIN" button to select suitable procedure.



After switching on the power, the washing machine will set to common program including "wash, rinse, spin" automatically. To select other procedures, push the "soak", "wash", "rinse" or "spin" button to select the time of soak, wash and spin, and the times of rinse. After switching on the power, if you push one of the button among "wash", "rinse" and "spin", the digitron of the former procedures will turn off automatically. The former procedures will not run. For instance: after switching on the power. If you push the "spin" button first, it will execute spin singly after starting.

Attention

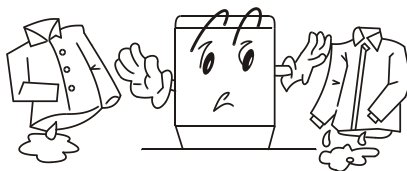

- Even there's no water in the tub, a certain period is required before spin starting.
- Do not use the soak program for the woolen textiles.
- Separate the laundries that are not colorfast from other laundries in washing.
- When high water level is selected, the pulsator will rotate discontinuously when the water level reaches 1.
- The soak procedure can work in cooperation with automatic programs like common, jeans, gentle and cotton. There is intermittent pulsator stirring during soak.

**5. Press " WATER LEVEL "button,
select suitable water level**



After switching on the power, the washing machine will execute fuzzy program automatically to detect the cloth. After defection, it can set the water level automatically. To select other water level, first push the "start/pause" button, then push the "water level" button to set the water level. Refer to "water level button" in page 11 for selection.

Page 11

6. Push the "RESERVE" button to select suitable reserve wash program



After switching on the power, the reserve program is set to off mode automatically. If you need to set the washing procedure to be finished at reserved time, please push the "reserve" button to set the reserve wash program. Refer to reserve button in Page 11 for selection.

• Confirm the operation of reserve program




- When the "reserve" function is activated, the indicator light of the program you have set will be off. The "reserve (hour)" and "time remain" indicator lights will be on. During reserve procedure, push the "reserve" button to display the reserve mode.
- To change the running program or cancel the reserve setting, you need to switch off the power and make new selection.



the washing will be finished after 18 hours.

7. Push the "START/PAUSE" button

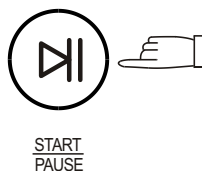

7 Finish washing


After finishing wash , it'll be off automatically.

8 Disposal after washing


- Please first pull off the power plug from the receptacle before cleaning.
- After using, please clean the lint and foreign materials of the lint filter etc. in time. Otherwise it may influence your using the machine.
- If the tap water quality is bad, it can generate scale attached onto the water injection box and filling entrance of outer tub cover. When using, please scour off the scale with wiping rags dipping with an amount of detergent or abstergent to prevent the clothes from contamination.

The detergent box should be dismantled and washed by water.

- 1.The method of dismantle: Push it up aslant and gently.
- 2.The method of install : install it upwards and aslant and push it in .

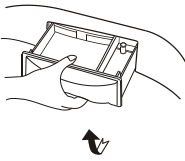


Dismantle

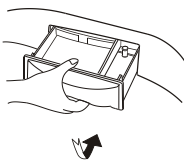

Install

- The lint filter must be used during washing.
- It must be cleaned in time after each using
- The installing and dismantling method of lint filter as follows:
Press down elastic trip at upper end of lint filter to make the claw of elastic trip relieving from the filter cover and pull lint filter outward. Insert lower end of lint filter into the filter cover and push upper end into filter cover and secure to fit on lint filter.
- After washing, dismantle the lint filter and take down back cover of filter to clean off the lint.

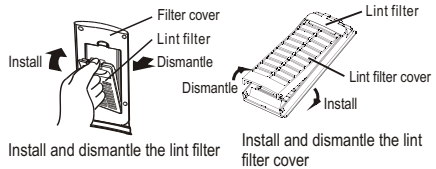


Install and dismantle the lint filter

Install and dismantle the lint filter cover

Note: after installation, check whether the edges on both sides of filter is in flush with the filter cover or the filter falls out by shaking slightly to avoid the fallout due to filter not installed in place.

 The filter screen of the water inlet valve is likely to be blocked by foreign materials and influence the water inlet.
Please clean it with brush every two months.



If the cabinet is dirty, wipe it with wet cloth

- Do not flush it directly with water.
- Wipe it with neutral detergent.
- Do not wipe it with thinner, petrol, alcohol etc.



- 1.After washing, close the water faucet. (If needed, you can dismantle the water inlet hose).
- 2.Do not store water in the washing machine for a long period. Drain the water completely after each using.
- 3.Be sure to pull off the power plug before maintenance.
- 4.Hang up the power cord and drain hose.
- 5.Wipe off the water drops on the surface of the machine and inside the tub. Open the top lid for some time (about 1 hour), then close the top lid.

Trouble-shooting Answer to question




 
(If there's breakdown, please pull off the power plug before checking) The following phenomena are not breakdowns sometimes. Please confirm again before sending it to repair. If there are real breakdowns, please come to the special maintenance department or after-sale service department of our company. Do not repair it by yourself.

Phenomenan		The reason	How to settle
The digitron displays E0.		<ul style="list-style-type: none"> • The top lid is opened during reserve procedure. 	<ul style="list-style-type: none"> • Close the top lid.
The drainage cannot work, or is too slow. The digitron displays E1.		<ul style="list-style-type: none"> • Is the drain hose put down? • Is the drain hose blocked? 	<ul style="list-style-type: none"> • Put down the drain hose. Open and close the top lid once. • Clean the foreign material. Open and close The top Lid Once.
It stops running in midway. The digitron displays E2.		<ul style="list-style-type: none"> • The top lid is not closed. 	<ul style="list-style-type: none"> • Close the top lid.
The safety switch acts, and the spinning cannot work. The digitron displays E3.		<ul style="list-style-type: none"> • Are the laundries put slantingly? • Is the machine slanting? 	<ul style="list-style-type: none"> • Reorder the laundries. Close the top lid. • Place the machine horizontally. Open and close the top lid once.
The water filling does not work, or is slow. After about 30 minutes later, the digital displays E4.		<ul style="list-style-type: none"> • Is the water tap opened, or is there water supply failure? • Is the water inlet valve blocked? • Is the water pressure too low? 	<ul style="list-style-type: none"> • Open the water tap. Push the start/pause button once. • Clean the water inlet valve then push the start/pause button once. • Open and close the top lid once..
The digitron displays E6.		<ul style="list-style-type: none"> • The water level sensor is bad. 	<ul style="list-style-type: none"> • Please contact the after-sales service department.
The digitron displays EE.		<ul style="list-style-type: none"> • Is the water tap opened, or is there water supply failure? • Is the water inlet valve blocked? 	<ul style="list-style-type: none"> • Open the water tap. Push the start/pause button once. • Clean the water inlet valve then push the start/pause button once.
The machine does not act	Not wash	<ul style="list-style-type: none"> • Is there power failure? • Is the power plug inserted tightly? • Is the water level reached preset position? 	<ul style="list-style-type: none"> • Please use it when there's power supply. • Insert the power plug tightly. • Fill water to the preset position.
	Not spin	<ul style="list-style-type: none"> • Is the power plug inserted tightly? • Is the top lid closed reliably? • Are the laundries set flat? 	<ul style="list-style-type: none"> • Insert the power plug tightly. • Close the top lid. • Set the laundries flat.
There's abnormal sound inside the machine		<ul style="list-style-type: none"> • Is the machine slanting? • Are the laundries put slantingly in spinning? • Are there any foreign materials? 	<ul style="list-style-type: none"> • Adjust the machine to be even • Reorder the laundries and close the top lid. • Remove the foreign materials.
The water tap leaks		<ul style="list-style-type: none"> • Is the screw of the jointer of water inlet hose loose or awry? 	<ul style="list-style-type: none"> • Fasten the screw of the jointer properly.

Common phenomena

Phenomena	Explanation
* The spinning is intermittent when it starts	* Balance the laundries to avoid slanting.
* The wash procedure pauses.	* The cloth sensor is detecting the cloth. It will start adding water after about 48 seconds.
* Select "Spin" program, but it doesn't work.	* The program is setting the drain time. A certain period is needed before it starts spinning.
* The pulsator pauses during washing, rinsing or adding water.	* It is to avoid splashing during water filling.
* There may be some water flowing out of the drain hose in the first use of the machine.	* It is the water remained in the performance inspection by the factory.
* When selecting "No washing powder" or "Disinfect" function, there is a small quantity of water flowing out of the drainpipe during water filling.	<ul style="list-style-type: none"> * When selecting "No washing powder" function, what is expelled from the drainpipe is disinfectant during water filling, which can sterilized the gully and wiping rags, etc. * When selecting "Disinfect" function, what is expelled from the drainpipe is decontaminating water during water filling, which clean the gully and wiping rags, etc.

Packing list

Name	Quantity
● User's manual	● One
● Components of the water inlet hose 	● One
● Bottom plate 	● One (Between the upper cushion of the washing machine package and the upper seal of the package carton)
● Tapping screws 	● Four
● Inner cover component 	● One
● Environment-friendly double-drive automatic washing machine	● One



Specification

Water level/Water quantity(about)	1/18L、 2/24L、 3/29L、 4/34L、 5/38L、 6/42L、 7/46L、 8/50L、 9/54L、 10/59L
Injection pressure	0.03MPa~1MPa

This washer can run for ten years (equivalent times) if using the “no washing powder” function and running three times weekly. After running up to the above number, this washer can still be used as a common double-driver washer.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>