# Little Sea-ox

Haier Household Electric Water Heater

User's Manual



Haier

FCD-JTHC40-III (E)
FCD-JTHC50-III (E)
FCD-JTHC60-III (E)
FCD-JTHC80-III (E)

Haier Group

Qingdao Economic and Technological Development District Haier Water Heater Co., Ltd. Add:Haier Garden, Qianwangang Road, Economic DevelopmentZone,Qingdao, P. R. China Website:http:// www.haier.com

Specific Number 0040501678

Please read this manual before usage
 Retain it for future reference

Download from Www.Somanuals.com. All Manuals Search And Download.

## Pre-safe Expert



This mark is the designation for Pre-safe Expert of Haier Water Heater Company, which indicates use of the company's patented technology inside the product. It ensures you a safe bath while monitoring whether your house ground wire is live or not all the time. If this mark is lighted on, it indicates your house ground wire has come live (poor grounding and live). In this case, please immediately stop use and unplug from the power supply, and remember not to touch any electric appliance shell in your house. At the same time, immediately contact after-

Mark of Haier Safe Water Heaters family.

sales service and your property management company for professional repair until the mark goes off. Pre-safe Expert will become the electric safeguard for your

# Contents

Before Usage	Attentions in installation		
Features2	Operation		
Parameters 2 Dimensions 3	Operation instructions		
Electric circuit diagram3	FAQ*After service		
Safety precautions 4 Setting environment 5	Cleaning and maintenan FAQ		
Installation	Packing list		
Installation ····· 6-7	Friendly hints ······		

#### 

### **Friendly Hints**

- 1. If water supply cutoff occurs in your home, please disconnect the power. Before connecting power again, please open mixing valve to the mostest pitch of the hot water, watch the showerhead until water comes out (indicating tank is full) and close mixing valve. This can ensure a longer life of heating element.
- 2. If you live in high-rise apartment with water pressure beyond rated range (e.g. more than 0.75 MPa), it is suggested you purchase a pressure reducing valve, which can ensure reliable operation and normal service life of the water heater.

Note: Above hints only apply to electric water heaters.

See to the physical product for the appearance, color or pattern.

### **Cleaning and Maintenance**

Internal Cleaning: To ensure high working efficiency, heating elements and tank liner of water heater shall be cleaned once in three years. Take care not to damage protection layer on heating elements and tank liner inner surface. If maintenance is needed, please contactlocal service station.



Problems		Possible Causes to be Confirmed	Corrective Measures	
No outlet water		If water supply is stopped or water pressure is too low		
		If use point is blocked or if hot water valve is open	Check and clean	
Outlet water is cold	Heating lamp lighted	If heating element is damaged	Contact service station	
	Heating lamp not lighted	If power is connected	Connect power	
		If thermostat is out of work	Contact service station	
Heating lamp keep lighted for long		g lamp keep lighted Water hasn't reached temperature setting		
		If thermostat is out of work	Contact service station	
Outlet water flow and temperature is not steady		It city water pressure is steady		

**Packing List** 

Name	Electric water heater (set)	Safety valve (pcs)	Drain hose (ply)	Expansion bolt (pcs)	Expansion hook (pcs)	User's manual (copy)
Quantity	1	1	1	2	2	1



#### Dear User,

Thanks for choosing Haier water heater product.

Haier products have good quality and excellent performance. To facilitate you to use the product, please read the manual and operate accordingly. Please retain it for future reference.

The international star service of Haier Group will always accompany you.No matter what kind of problems you meet in usage, please contact with the local after-sales service agent.We are at your service all the time.Thanks again for choosing Haier Product.

The water heater you purchased may not full comply with the manual due to the improvement of product. We apologize for the inconvenience occurred therefrom.



#### 1. Safe:

High-quality imported heat-resistant stainless steel heating element, corrosion resistant and more reliable. Over-temperature protection, tank liner over-pressure protection and "Safe Care" patented design together with the function of monitoring and displaying of

live ground wire have become a real safeguard for family safety.

- 2. Durable:
  - Specially treated shell. Elegant and durable.

Tank liner produced with 3-layer liner enameling technology. More reliable quality. 3. Easy to use:

Heating temperature adjustable. Easy and flexible operation.

Water temperature adjustable between inlet temperature ~ 75°C.

4. Multi-purpose:

Closed structure suitable to connect several outlets for water use in locations like washroom and kitchen. (outlet water is not suitable to drink) Suitable for use in homes, enterprises and institutions, and service tradelike hair & beauty saloons.


5. Horizontal installation, elegant style and space saving.

Yourwater heater is an improved product of this series. Please use it as instructed in this manual.




Rated voltage: 220V~, 50Hz Power: 1500 W Rated pressure: 0.75 Mpa Waterproof grade: IPX 4 (▲) Dimensions: (see to Fig. 1) Weight: (see to Fig. 1) Volume:(see to Fig. 1) Tap water pressure: not less than 0.05 MPa



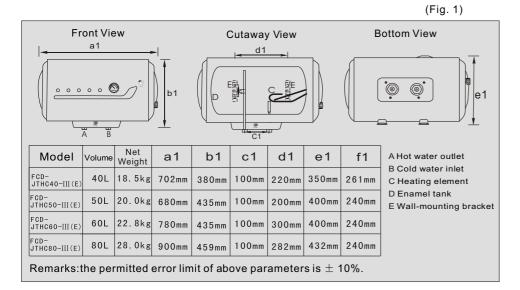

### Electric Circuit Diagram

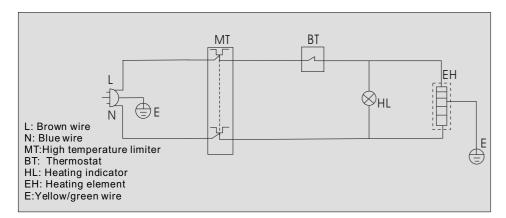

# **Operation Instructions**

- For the first use after installation, due to there's no water within the tank, first the city water inlet valve and any water outlet valve of the water heater must be opened. Close the water outlet valve when water flows out continuously from the showerhead or other outlets (the tank is full). Check connections are free of water leakage, and insert the power plug.
- Turn the knob to set your desired water heating temperature, which can be stepless changed between cold water inlet temperature and 75℃. In heating mode, heating lamp is lighted on. Normally the knob shall be positioned at highest temperature. This machine has a thermostat function, which automatically switches off the water heater when temperature reaches the setting value, and switch on again when water temperature decreases to certain value.
- City water pressure ≥ 0.75 MPa will cause much water flowing out from safety valve pressure relief vent. This is due to too big water pressure. Please ask after-sales service for correction.

#### Attentions in Operation

- 1. To avoid causing machine troubles, do not connect power before tank is full of water.
- 2. Adjust a suitable temperature before use, for water temperature above 50°C may burn your skin.
- 3. This product is closed water heater, which can supply hot water through pipe connection to several points like bathroom (bathtub, washbasin, showerhead) and kitchen.
- 4. Heating adjustment can be made flexibly all year round adapting to climate changes. In long-term out-of-use or maintenance, you can close city water pipe valve, open mixing valve, and move up safety valve handle to drain the tank. To avoid injury, before next use, it is suggested to first open hot water valve before switching on the water heater, exhausting gas possibly retained in the pipeline. In this case, no smoke or fire is permitted near the open valve. Carefully check and confirm all parts are in good condition.
- 5. Provided hot water quantity can meet use demand, temperature setting shall be possibly low. It can minimize heat dissipation, high-temperature corrosion and sedimentation, ensuring a longer service life.
- 6. Regularly ask servicemen to make safety inspection, remove sediment on heating elements, and check consumption of anode bar. Too much consumed anode bar shall be replaced.

### Cleaning and Maintenance

Statement: This water heater shall only be repaired and maintained by qualified servicemen. Improper maintenance may cause severe injury or damage. Before opening or repairing water heater, please dopull out the power plug.


- Note:Before asking for service, please refer to troubleshooting section to resolve easy problems.
- External Cleaning: Disconnect power supply before cleaning. Gently wipe with wet cloth dipped with a little of mild detergent. Do not use gasoline or other solvents. Finally dry with dry cloth. Keep water heater dry. Do not use cleansers containing grinding agent (e.g. toothpaste), acids, chemical solvents (e.g. alcohol) or polishers to clean.




# Installation

Connection and Use of Safety Valve:

- The safety valve should be connected to the cold water inlet pipe. Please check carefully if the direction is correct after installation. The correct direction of installation is that the arrowhead on the safety valve should point to the water heater.
- If your water heater is not installed in a bathroom with sewage drain, please connect the drain hose to the safety valve. Connect one end of the hose to the safety valve vent and the other end to the sewage drain. The hose can be cut short or extended as necessary. The hose shall be installed as inclined downward.
- The water may drip from the discharge pipe of the pressure relied device and that this pipe must be installed in a continuously downward direction and in a frost-free environment. Check safety valve once a month as follow: move the small handle of safety valve, if there's water flowing out, safety valve is normal; if there's no water flow, please contact local after-sales service station.
- The pressure relief device is to be operated regularly to remove lime deposits and to verify that it is not blocked.

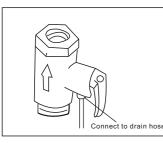


(Fig.4)

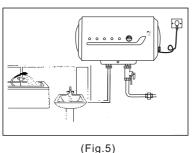

#### Attentions in Installation

- O During installation, adequate space must be reserved for future maintenance and repair. If the water heater is installed within decoration boards, the right board shall be removable to facilitate removing the plastic cover during maintenance.
- City water inletpressure shall not be less than 0.05 Mpa. Electric water heater shall be installed indoors with ambient temperature above 0°C. The pipes shall be collectively laid. Hot water outlet shall not be too far from use points. In case farer than 8 m, hot water pipe shall have a thermal insulation to minimize heat loss.
- The mounting wallshall be firm and reliable to support twice the weight of water heater full of water. Non-load bearing walls or air brick walls must have corresponding protective measures like additional support, wall-through screws or backboards.
- Electric water heater shall be located in a place easy for use, maintenance and with a floor drainer. In case the tank or pipes leak, nearby or lower facilities shall not be damaged. The installation location shall avoid being above toilet bowl, bathtub. washbasin or doorframe, where will cause a suppressed or unsafe feeling to users.
- OPower socket for water heater shall be in a dry place free of water splash. (splashproof box is preferred)
- Do not confuse inlet and outlet water pipes. Safety valve shall be installed at designated position with no random modification.

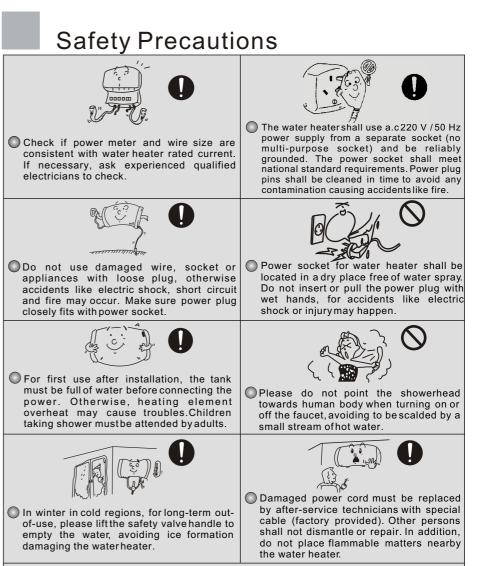


The product adopts Haier "Safe Care" patented technology. In normal installation, even in severe case that ground wire is live due to wrong connection, the product "Safe Care" technology can filter and efficiently ensure your safety. However, whenever your feel a sensory current, please pull out the power plug and notify local after-service men in time. Do not dismantle by yourself.

#### **Description of the Symbols**

Never do that


Be sure to act as per instructions



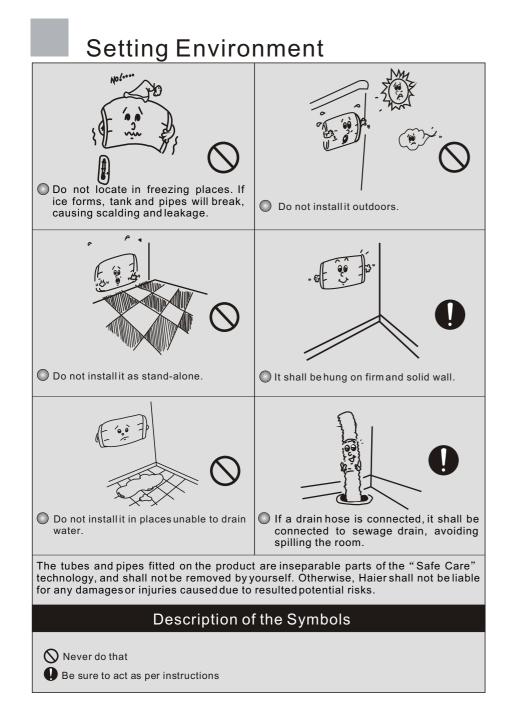

# Installation

- Installation must be made by installers of or designated by our company after-service department.
- The water heater shall be wall-mounted.
- Before installation, make sure water heater rear wires are fit firmly. Determine an installation location. Make four holes 12mm, 65 mm deein the wall. Insert and fix expansion hooks and expansion bolts in corresponding wall holes. Lift the water heater. Insert wall rack onto the hooks and bolts. Fit flat washers, rear wires and nuts in turn onto the bolts. Tighten the nuts and check them firm. Install accessories such as safety valve, drain hose as shown in Fig. 2. Use sealing compound to prevent water leakage.
- To facilitate installation and removal, it is suggested a G 1/2" movable nut is fitted at appropriate locations on inlet and outlet pipes respectively. Find water supply location. Connect inlet pipe, outlet pipe and city water piperespectively to the use point. Note: To avoid heat dissipation, hot water pipe shall not be too long.
- For easy future maintenance and repair, adequate space must be reserved during installation.

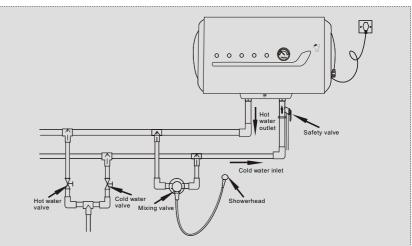

(Fig.2) For Installation Information Only

(Fig.3)





Free Manuals Download Website <u>http://myh66.com</u> <u>http://usermanuals.us</u> <u>http://www.somanuals.com</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.com</u> <u>http://www.404manual.com</u> <u>http://www.luxmanual.com</u> <u>http://aubethermostatmanual.com</u> Golf course search by state

http://golfingnear.com Email search by domain

http://emailbydomain.com Auto manuals search

http://auto.somanuals.com TV manuals search

http://tv.somanuals.com