

Proctor-Silex®



Hot Air Popcorn Pumper2
USA: 1-800-851-8900

840057900

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions.
2. The Popcorn Pumper is designed to pop popcorn in hot air. Do not use oil, it could damage the Popcorn Pumper or cause injury.
3. Do not touch hot surfaces. Use hot pads or mitts when handling hot Chute or base.
4. To protect against electrical shock do not immerse cord, plug, or base in water or other liquid.
5. Close supervision is necessary when any appliance is used by or near children.
6. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts and before cleaning.
7. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner. Call our toll-free customer service number for information on examination, electrical repair, mechanical repair, or adjustment.
8. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
9. Do not use outdoors.
10. Do not let cord hang over edge of table or counter, or touch hot surfaces, including the stove.
11. Do not place on or near a hot gas or electric burner, or in a heated oven.
12. To disconnect remove plug from wall outlet.
13. Do not use appliance for other than intended use.
14. When Popcorn Pumper is operating, it should have both Chute and Cup in place and should not be left unattended.
15. Remove Cup containing melted butter from Chute before moving the Popcorn Pumper.

SAVE THESE INSTRUCTIONS!

2

CONSUMER SAFETY INFORMATION

This appliance is intended for household use only.

To avoid an electrical circuit overload, do not use another high wattage appliance on the same circuit with the Popcorn Pumper. This appliance has a short cord to reduce the hazards of becoming entangled or tripping over a longer cord. An extension cord may be used if the electrical rating of the extension cord is equal to or greater than the rating of the Popcorn Pumper. Use an extension cord rated 10 amperes or greater. Care must be taken to arrange the extension cord so that it will not drape over the countertop or tabletop where it can be tripped over or pulled on by children.

The thermostat is designed to stop popping by shutting off the heater under these conditions:

- Continuously popping for extended periods of time without unplugging unit.
- Overfilling the Popping Chamber.


Should this happen, unplug from wall outlet, remove Cup and Chute, dump any kernels from Popping Chamber, allow unit to cool at least 5 minutes before attempting to use again.

CAUTION: Popcorn Pumper should not be left unattended while in use. While corn is popping, keep face a safe distance from Chute opening to avoid any eye contact with "popping" kernels.

3

Parts and Features

1. Cup
2. Chute
3. Popping Chamber/Base

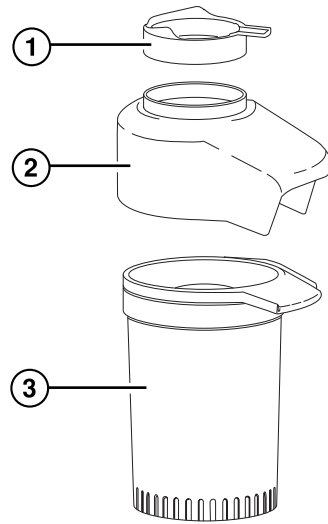

To Use

1. Place Chute in position on top of Base, as illustrated.
2. Place large, heat-proof bowl under Chute opening.
3. Fill Cup level with popcorn kernels (about $\frac{1}{2}$ cup). **DO NOT OVERFILL. DO NOT USE OIL.**
4. Pour popcorn kernels into Popping Chamber. Place Cup in top of Chute.

5. To melt butter or margarine, place 3 tablespoons in Cup. Heat will melt butter while unit is operating. (Never remove Cup during popping).
6. Plug cord into electrical outlet.
7. When popping stops, unplug pumper; remove Cup from Chute by handle and pour melted butter over popped corn in bowl.
8. Before making additional batches:
 - Use hot mitts to protect hands.
 - Dump any unpopped kernels from Popping Chamber.
 - Wash and dry cup before measuring additional kernels.
 - Repeat steps 1 through 7.

To Clean

1. Unplug Popcorn Pumper and let cool.
2. Wash Cup and Chute in hot, soapy water. Rinse and dry.
3. Dump unpopped kernels out of Popping Chamber, then reassemble pumper.
4. Wipe Base with damp cloth.
5. For compact storage, turn pumper upside down and place chute over pumper.

Customer Service

Call our toll-free customer service numbers for more information about your Hot Air Popcorn Pumper. Please note the model, type, and series number on the pumper, or have the pumper close by when you call. This will help us answer your question.

TWO YEAR LIMITED WARRANTY

Hamilton Beach/Proctor-Silex, Inc. warrants this appliance to be free from defects in material and workmanship for a period of two (2) years from the date of original purchase, except as noted. There is no warranty with respect to the following, which may be supplied with this appliance: glass parts, glass containers, cutter/strainer, nonstick soleplate and/or nonstick cooking surfaces. This warranty extends only to the original consumer purchaser and does not cover damage from abuse, neglect, use for commercial purposes, or any other use not found in the printed directions. HAMILTON BEACH/PROCTOR-SILEX, INC. EXPRESSLY DISCLAIMS ALL RESPONSIBILITY FOR CONSEQUENTIAL DAMAGES OR INCIDENTAL LOSSES CAUSED BY USE OF THIS APPLIANCE. Some states or provinces do not allow this exclusion or limitation of incidental or consequential losses, so the foregoing disclaimer may not apply to you. If you have a claim under this warranty, DO NOT RETURN THE APPLIANCE TO THE STORE! Please call our CUSTOMER SERVICE NUMBER. (For faster service please have model and serial numbers ready for operator to assist you.)

CUSTOMER SERVICE NUMBERS

In the U.S. 1-800-851-8900

In Canada 1-800-267-2826

Web site address: www.hamiltonbeach.com

KEEP THESE NUMBERS FOR FUTURE REFERENCE!

This warranty gives you specific legal rights, and you may also have other legal rights which vary from state to state, or province to province.

HAMILTON BEACH ♦ PROCTOR-SILEX, INC.
Washington, North Carolina 27889

PROCTOR-SILEX CANADA, INC.
Picton, Ontario K0K 2T0

840057900

Web site address: www.hamiltonbeach.com

4/99

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>