

GARAGE DOOR THRESHOLD

Model 96326 - 8'

Model 96327 - 10'

Model 96328 - 16'

INSTALLATION INSTRUCTIONS



Adhesive shown is not included.

Diagrams within this manual may not be drawn proportionally.

Due to continuing improvements, actual product may differ slightly from the product described herein.

Distributed exclusively by Harbor Freight Tools®.

3491 Mission Oaks Blvd., Camarillo, CA 93011

Visit our website at: <http://www.harborfreight.com>



**Read this material before using this product.
Failure to do so can result in serious injury.
SAVE THIS MANUAL.**

Copyright© 2007 by Harbor Freight Tools®. All rights reserved. No portion of this manual or any artwork contained herein may be reproduced in any shape or form without the express written consent of Harbor Freight Tools.

For technical questions or replacement parts, please call 1-800-444-3353.

SAVE THIS MANUAL

Keep this manual for the safety warnings and precautions, assembly, operating, inspection, maintenance and cleaning procedures. Write the product's serial number in the back of the manual near the assembly diagram (or month and year of purchase if product has no number). Keep this manual and the receipt in a safe and dry place for future reference.

GENERAL AND SPECIFIC SAFETY RULES



WARNING! Read all instructions. Failure to follow all instructions listed below may result serious injury.

SAVE THESE INSTRUCTIONS

1. **Work area safety**

Keep work area clean and well lit. *Cluttered or dark areas invite accidents.*

2. **Personal safety**

- a. Inspect this Threshold often. Repair or replace if needed.
- b. Always wear ANSI-approved safety goggles during installation of this product.
- c. Use this Threshold only for intended purpose.
- d. Stay alert, watch what you are doing and use common sense when installing. Do not install while you are tired or under the influence of drugs, alcohol or medication. *A moment of inattention may result in serious personal injury.*
- e. Do not overreach. Keep proper footing and balance at all times.
- f. Keep out of reach of children.

3. Maintain labels and nameplates. These carry important safety information. If unreadable or missing, contact Harbor Freight Tools for a replacement.

4. The warnings, precautions, and instructions discussed in this instruction manual cannot cover all possible conditions and situations that may occur. It must be understood by the operator that common sense and caution are factors which cannot be built into this product, but must be supplied by the operator.



SAVE THESE INSTRUCTIONS.

UNPACKING

When unpacking, check to make sure that the item is intact and undamaged. If any parts are missing or broken, please call Harbor Freight Tools at the number shown on the cover of this manual as soon as possible.

ASSEMBLY

There is no assembly required for this Garage Threshold.

INSTALLATION INSTRUCTIONS




Read the **ENTIRE IMPORTANT SAFETY INFORMATION** section at the beginning of this manual including all text under subheadings therein before set up or use of this product.

FITTING AND INSTALLING THE THRESHOLD

1. Open the garage door and clean the bottom of the door and the area of the garage floor where the door and the floor meet. Make sure there is no moisture or dirt on the surface or you will not get a good bond with the Threshold.
2. Place the Threshold in the opening, centering it between the door tracks on each side of the entrance. The garage door tracks are the channels the door uses as it rolls up and down. The Threshold is made to fit most garage doors so usually no trimming is necessary. If you do have to trim, use a straight edge for a uniform fit when the Threshold is installed.

Figure 1

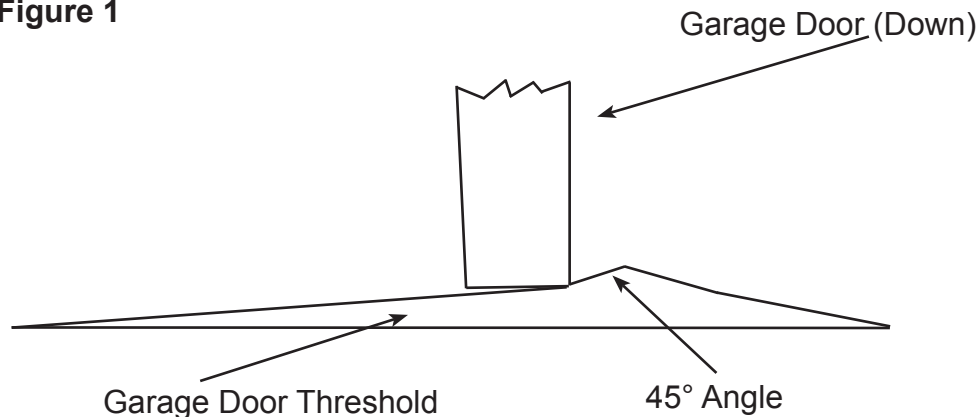

3. Lower the door onto the Threshold. Place the 45° angle of the Threshold against the inside of the bottom of the door. The 45° angle of the Threshold should be against the inside of the door for a proper seal against moisture.
4. Trace the inside edge of the Threshold then raise the garage door and, using a carpenter's pencil (not included), trace the leading edge of the Threshold.

5. With the garage door still in the raised position remove the Threshold. Apply two 1/4" rows of adhesive (not included) between the two lines running parallel the length of the garage door opening. Apply the adhesive lines 3/4" from the front and back edge of the Threshold.
6. Using the adhesive (not included) make a zig-zag line from the front adhesive line to the back adhesive line and run this zig-zag line the entire length of the two lines.
7. Follow the adhesive (not included) label directions for proper dry time before applying the Threshold. Always keep adhesives away from children.
8. Place the Threshold between the two pencil lines and carefully press into place.
9. Lower the Garage door so it may act as a clamp holding the Threshold until the adhesive dries. Make sure the Threshold is still aligned between the pencil lines.
10. Wipe up any excess adhesive with warm water before it has a chance to harden.

MAINTENANCE AND SERVICING

Damaged products can fail. Do not use this Threshold if it is damaged in any way. Have any problem corrected before use.

Cleaning and Maintenance

1. **Periodically** inspect the general condition of the Garage Door Threshold. Check cracks or any abnormal condition that may affect its safe operation.
2. **Periodically clean with sponge mop.** This will keep dirt from wearing down the surface reducing the possibility of moisture or insects entering your garage.

PLEASE READ THE FOLLOWING CAREFULLY

THE MANUFACTURER AND/OR DISTRIBUTOR HAS PROVIDED THE PARTS LIST AND ASSEMBLY DIAGRAM IN THIS MANUAL AS A REFERENCE TOOL ONLY. NEITHER THE MANUFACTURER OR DISTRIBUTOR MAKES ANY REPRESENTATION OR WARRANTY OF ANY KIND TO THE BUYER THAT HE OR SHE IS QUALIFIED TO MAKE ANY REPAIRS TO THE PRODUCT, OR THAT HE OR SHE IS QUALIFIED TO REPLACE ANY PARTS OF THE PRODUCT. IN FACT, THE MANUFACTURER AND/OR DISTRIBUTOR EXPRESSLY STATES THAT ALL REPAIRS AND PARTS REPLACEMENTS SHOULD BE UNDERTAKEN BY CERTIFIED AND LICENSED TECHNICIANS, AND NOT BY THE BUYER. THE BUYER ASSUMES ALL RISK AND LIABILITY ARISING OUT OF HIS OR HER REPAIRS TO THE ORIGINAL PRODUCT OR REPLACEMENT PARTS THERETO, OR ARISING OUT OF HIS OR HER INSTALLATION OF REPLACEMENT PARTS THERETO.

PARTS LIST

1. One piece Garage Threshold: Model 96326 - 8' X 4"
2. One piece Garage Threshold: Model 96327 - 10' X 4"
3. One piece Garage Threshold: Model 96328 - 16' X 4"

NOTE: Each package contains one piece of that model number.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>