



Model 98475

OIL PRESSURE GAUGE

INSTRUCTIONS AND PRECAUTIONS

Distributed exclusively by Harbor Freight Tools®.

3491 Mission Oaks Blvd., Camarillo, CA 93011

Visit our website at: <http://www.harborfreight.com>



SAVE THESE INSTRUCTIONS. READ ALL PRECAUTIONS AND INSTRUCTIONS.

Copyright© 2008 by Harbor Freight Tools®. All rights reserved. No portion of this document or any artwork contained herein may be reproduced in any shape or form without the express written consent of Harbor Freight Tools. Diagrams within this document may not be drawn proportionally. Due to continuing improvements, actual product may differ slightly from the product described herein.

For technical questions or replacement parts, please call 1-800-444-3353.

UNPACKING

When unpacking, check to make sure that the item is intact and undamaged. If any parts are missing or broken, please call Harbor Freight Tools at the number shown on the cover of this document as soon as possible.

IMPORTANT SAFETY INFORMATION

Assembly Precautions

1. Assemble only according to these instructions. Improper assembly can create hazards.
2. Wear ANSI-approved safety goggles and heavy-duty work gloves during assembly.
3. Keep assembly area clean and well lit.
4. Keep bystanders out of the area during assembly.
5. Do not assemble when tired or when under the influence of drugs or medication.

Use Precautions

1. This product is not a toy. Do not allow children to play with it.
2. Use for intended purpose(s) only.
3. Inspect before use; do not use if loose or damaged.
4. Only use in accordance with State, local, Federal and D.O.T. laws and regulations.
5. Disconnect vehicle battery negative post before installation.
6. Positive and negative connections can not touch. If you are unsure of how to install this product safely then have a qualified mechanic install the gauge for you.
7. Insulate connections to prevent fire.
8. Maintain product labels and nameplates. These carry important safety information. If unreadable or missing, contact Harbor Freight Tools for a replacement.

ASSEMBLY INSTRUCTIONS



Read the **ENTIRE IMPORTANT SAFETY INFORMATION** section at the beginning of this document including all text under subheadings therein before set up or use of this product.

Setup

1. A round 2-1/16" wide hole with at least 2-1/2" clearance behind is needed to install this gauge.
2. At least 18 AWG stranded copper wire must be purchased for the installation of this gauge.
3. Some vehicles with air bags or other systems may require precautions before disconnecting the battery. Consult your vehicle's service manual.
4. Route and secure wires as needed to attach the Gauge and sender to the desired area; avoid sharp edges and hot spots.

Installation

1. Disconnect negative (-) vehicle battery cable according to manufacturer's instructions. Reconnect when installation completed.
 2. Wire Oil Pressure Gauge according to diagram shown below in **Figure 1**.
- Note:** If Sensor is wired differently, do not install this Gauge. Do not disconnect wires if sensor is already connected to other wiring. Consult a mechanic.
3. Green wires goes to oil pressure sensor unit. Connect oil pressure sensor unit via oil filter block sandwich or other means of plumb-

- ing. Use teflon tape or sealant on threads to prevent oil leakage.
4. Wiring:
 - **RED** Wire: Connects to a switched 12V power source that turns on and off with vehicle's ignition switch.

CAUTION: It is recommended that a inline fuse (1Amp/3AG) be installed before connecting to the 12V ignition system.

- **GREEN** Wire: Connects to oil pressure sensor unit. **WARNING! Do not touch this wire to positive source.**
 - **ORANGE** and **WHITE** Wires: Connect to the 12V dashboard lights or other switch.
 - **BLACK** Wire: Connects to a clean, or with good connection, engine ground (-).
5. Install the meter into the hole. Attach bracket onto the back of the meter and tighten.
 6. Reconnect the battery according to the vehicle service manual. Verify that there are no short circuits before reconnecting.
 7. Ensure that the pressure line wiring has no leaks and is not near any parts that will get hot during operation. Check for loose strands of wire and direct contact with grounded components. Use a multimeter with a continuity function to help verify that there are no shorts to ground.
 8. Start the vehicle and turn the dashboard lights on. LED should light up. Be ready to disconnect battery if arcing or sparking occurs at the meter.
 9. To change the color of the LED light, push the button on the face of the gauge.



Record Serial Number Here: _____

Note: If product has no serial number, record month and year of purchase instead.

Note: No replacement parts are available.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>