

AGES 2+

4930

playhouse
Disney

Disney's
STANLEY

Stanley's All About Animals Great Big Book of Everything



Thank you for purchasing this Stanley toy! For maximum play value, be sure to read and follow instructions carefully.

Includes 3 x 1.5V "AA"/R6 batteries. Alkaline batteries recommended. Phillips/cross-head screwdriver (not included) required to replace batteries.

TO PLAY

This learning toy features 3 modes of play: *Animal Sounds*, *Name that Animal* and *Fun Facts*. Each mode is activated by pressing a different button in the lower left-hand corner of the playset.

Animal Sounds

The *Animal Sounds* mode is activated each time child presses the **Stanley** button. When the button is pressed Stanley says, "What animal makes this sound?" followed by one of 7 animal sounds.


Name that Animal

The *Name that Animal* mode is activated each time child presses the **Stan-o-Scope** button. When the button is pressed Stanley asks, "Where is the (animal)?"

Fun Facts


The *Fun Facts* mode is activated each time child presses the **Dennis** button. When the button is pressed Dennis asks one of 10 different questions, such as "What animal hops?" or "What animal lives in the water?" (Some questions have more than one correct answer.)

To answer a question, the child presses an animal on the keypad. If the answer is correct Stanley says, "That's right!" or "Great job!" If the answer is incorrect, Dennis says, "Let's try again."

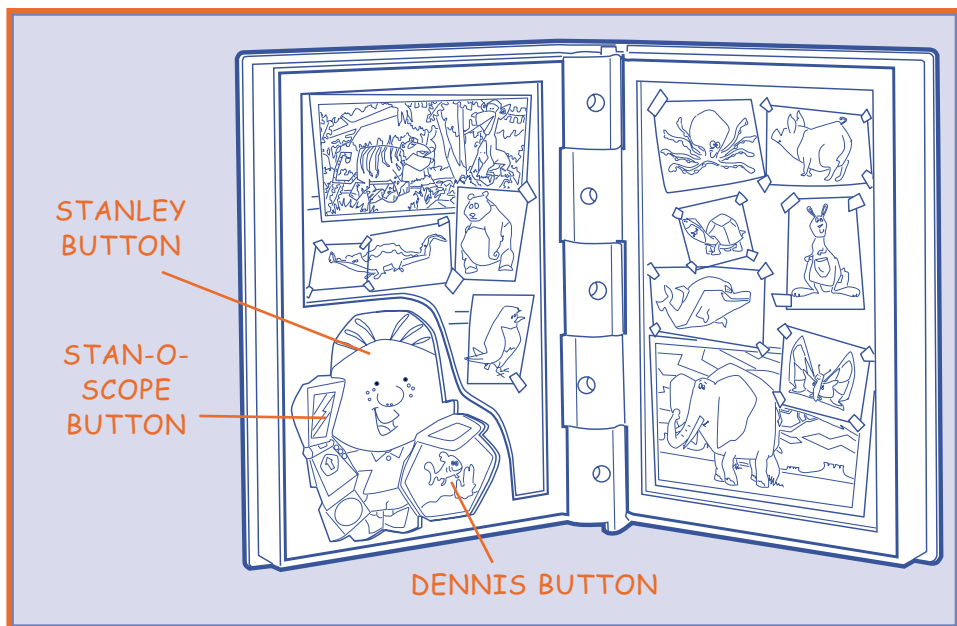

TO REPLACE BATTERIES

Using a Phillips/cross head screwdriver, loosen screw on battery box and remove battery cover. Remove exhausted batteries and replace with 3 x 1.5V fresh "AA"/LR6 alkaline batteries. Replace battery cover and tighten screw.

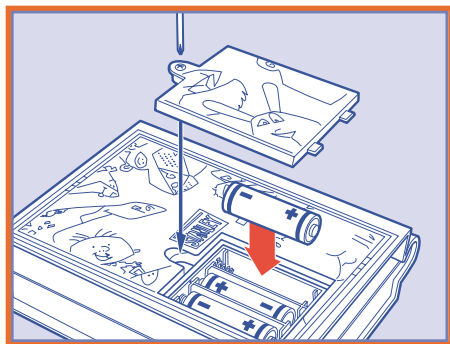

⚠ CAUTION: TO AVOID BATTERY LEAKAGE

- 1) Be sure to insert the batteries correctly and always follow the toy and battery manufacturers' instructions;
- 2) Do not mix old and new batteries or alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries;
- 3) Always remove weak or dead batteries from the product.

IMPORTANT: BATTERY INFORMATION

Please retain this information for future reference.

Batteries should be replaced by an adult.

⚠ CAUTION:

1. Always follow the instructions carefully. Use only batteries specified and be sure to insert them correctly by matching the + and - polarity markings.
2. Do not mix old batteries and new batteries, or standard (carbon-zinc) with alkaline batteries.
3. Remove exhausted or dead batteries from the product.
4. Remove batteries if product is not to be played with for a long time.
5. Do not short-circuit the supply terminals.
6. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.
7. RECHARGEABLE BATTERIES: Do not mix these with any other types of battery. Always remove from the product before recharging. Recharge batteries under adult supervision. **DO NOT RECHARGE OTHER TYPES OF BATTERIES.**

FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including any interference that may cause undesired operation. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>