30082

ESTERO BELLIER OVEN

Blender


For maximum enjoyment of this product, be sure to follow all instructions carefully.

Requires 2 x 1.5V "C" batteries (not included). Alkaline batteries recommended. Phillips screwdriver required (not included) for battery installation.

Parents Please Note:

Wash all parts by hand thoroughly before use. Do not wash in dishwasher.

Visit www.easybake.com
to learn about upcoming
EASY-BAKE
contests!

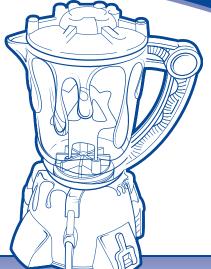

© 2004 Hasbro. All Rights Reserved.

® denotes Reg. U.S. Pat. & TM Office. P/N 6385630200


EASYBAKE.COM FOR NEW PRODUCTS AND OFFERS

Questions? Call: 1-800-327-8264

To Install Batteries


Use a Phillips screwdriver to loosen screw

in battery compartment door (screws remain attached to door).
Remove door. Insert 2 x 1.5V "C" batteries as indicated. Alkaline batteries recommended. Replace door and tighten screw.

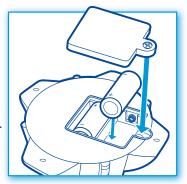

To Assemble

- Insert posts on paddle into 2 holes in impeller.
- 2. Fit pitcher into base.

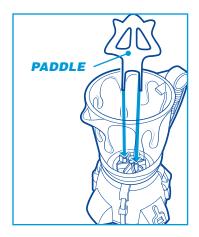

CAUTION: TO AVOID BATTERY LEAKAGE

- 1. Be sure to insert the batteries correctly and always follow the toy and battery manufacturers' instructions;
- 2. Do not mix old batteries and new batteries or alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries;
- 3. Always remove weak or dead batteries from the product.

Recipe

- 1. Pour 1 cup of milk into pitcher.
- 2. Add flavored syrup of your choice (vanilla, chocolate, strawberry, etc.).
- 3. Fit cover onto pitcher. Press button for about 10 seconds to blend mixture.

Enjoy your delicious milkshake!

Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com