

Holds up to 20 lbs.

PLAYSKOOL
baby

Foldables™ Baby Bouncer

INSTRUCTIONS




Dear Parent,
Thank you for purchasing the Foldables Baby Bouncer from our innovative selection of Juvenile Products. We hope your baby enjoys many hours of bouncing fun on this durable, comfortable bouncer. Like all of our infant care products, our bouncer is designed to give you confidence and satisfaction, with the quality and comfort you have come to expect from Playskool Baby products.



WHEN USING BOUNCER, ALWAYS BE SURE BABY IS CORRECTLY POSITIONED IN HARNESS, AND THE STRAPS ARE SECURELY FASTENED (SEE ABOVE ILLUSTRATION).

TO ASSEMBLE



Please Note: Before beginning assembly, check to be sure rubber sleeves on leg support are in correct corner positions as shown.

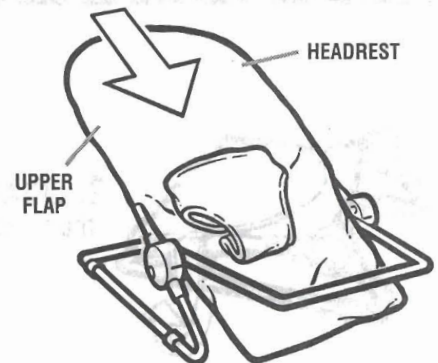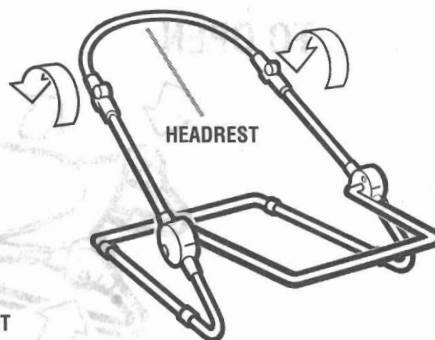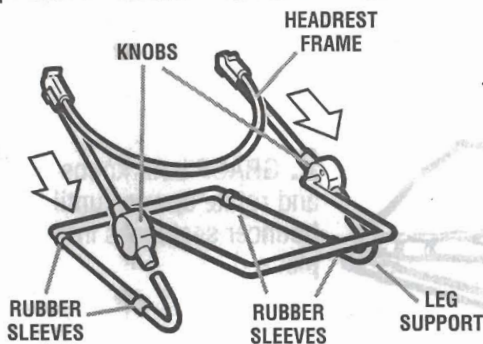

1. Slide knob ends on headrest frame onto ends of leg support as far as possible. To ensure headrest frame is properly positioned, make sure the headrest frame can fold toward the front of the bouncer as shown.

2. Flip up headrest and lock into position.


3. To place pad on bouncer, fit upper flap on pad over headrest and slide completely onto headrest.

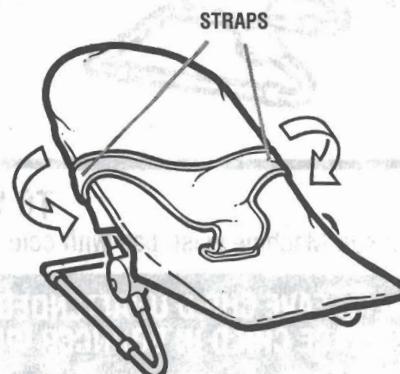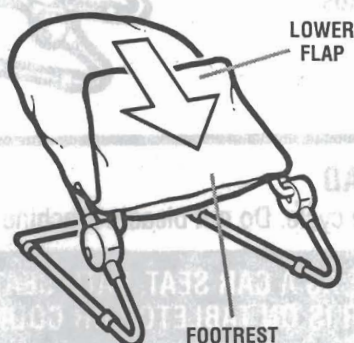


4. Flip up footrest. Fit lower flap over footrest and slide remainder of pad fully onto footrest. Fold footrest down.

5. Fasten straps as shown.

TO FOLD

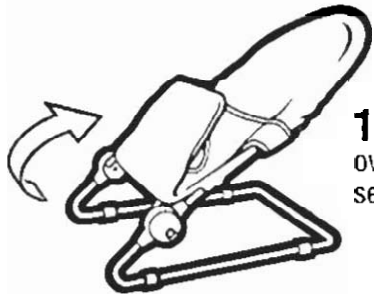


1. FOLD the footrest over the bouncer seat.

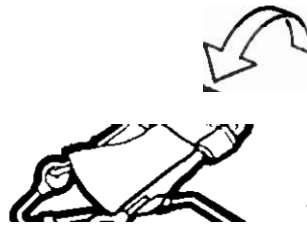


2. FOLD the headrest over the footrest.


3. PRESS in both buttons on the knobs at the same time, and lower the bouncer seat.

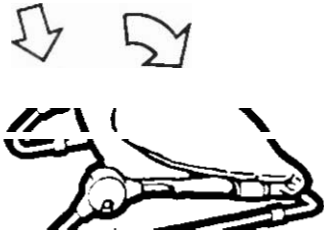


4. UNFASTEN the straps, wrap them around the leg support, and refasten the straps. Grasp the carry handle and go!

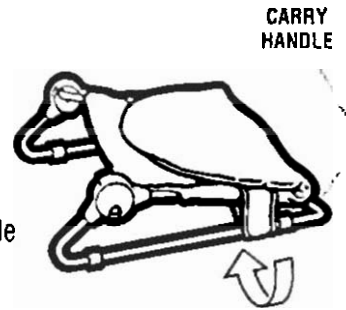

TO OPEN

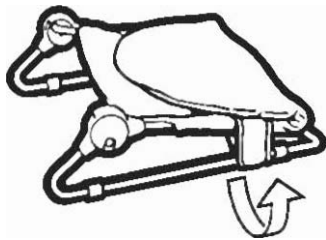

1. UNFASTEN the straps.

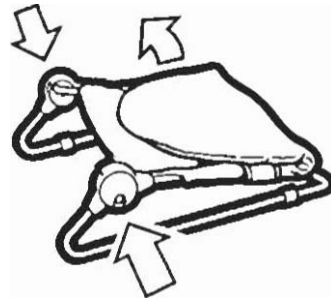


2. GRASP both knobs and rotate upward until bouncer seat locks into place.

3. FLIP up the headrest.



4. FLIP down the footrest. **FASTEN** the straps.

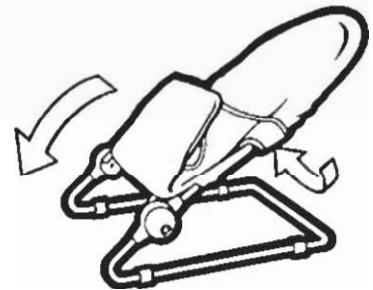

TO WASH THE PAD

Remove pad from bouncer. Machine wash pad with cold water, on gentle cycle. Do not bleach. Machine dry on low heat setting.

CAUTION: NEVER LEAVE CHILD UNATTENDED. DO NOT USE AS A CAR SEAT, BATH SEAT, OR IN A CRIB. DO NOT PLACE CHILD IN BOUNCER WHILE BOUNCER IS ON TABLETOP OR COUNTERTOP.



Questions? Call: **1-800-PLAYSKL**™

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>