

**BIRTH +**  
**06577**

**PLAYSKOOL**<sup>®</sup>

# Storytime

Gloworm<sup>™</sup>


**Thank you for choosing this lovable friend!**



**Includes 3 x 1.5V  
"AA"/LR6 alkaline  
batteries. Phillips/cross  
head screwdriver (not  
included) required for  
battery installation.**

## TO USE

**Note:** This product is shipped in "DEMO" mode. Open seam on back and slide switch to "LULLABY MODE" or "STORY MODE" for full use at home.

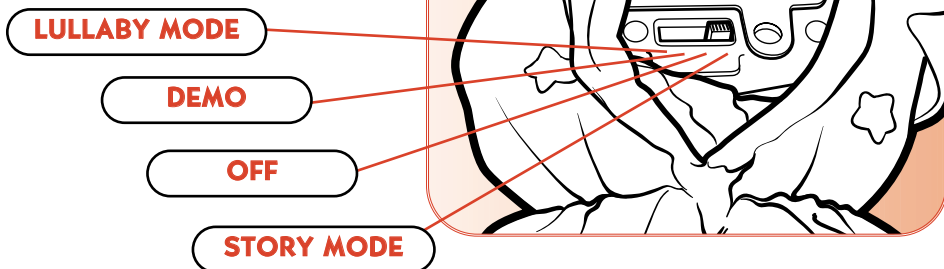

Your child's **STORYTIME GLOWORM** friend may ease the transition to bedtime by reciting classic nursery rhymes and playing soothing lullaby music! Simply squeeze the sheep to bring this lovable, light-up companion to life.

### Choose "STORY" or "LULLABY" mode!

(Open seam on back and slide switch on sound unit to desired setting.)

#### "STORY" Mode

Each time your child presses the sheep, the **STORYTIME GLOWORM** character will recite or sing one of 5 classic nursery rhymes. The image that lights up on the cloud matches the nursery rhyme being recited!

These nursery rhymes include:

- "Little Miss Muffet"
- "Star Light, Star Bright"
- "Mary Had a Little Lamb"
- "Hey Diddle Diddle"
- "Rock-A-Bye Baby"

#### "LULLABY" Mode

Each time your child presses the sheep, he or she will be rewarded with one of 6 gentle lullabies.


Among the lullabies included:

- "Hush Little Baby"
- "Brahm's Lullaby"
- "Twinkle, Twinkle Little Star"

**Note:** Slide switch to "OFF" to shut off sounds and lights. Light bulb never needs to be replaced.

# TO REPLACE BATTERIES

Open seam on back to access electronic unit. Using a Phillips/cross head screwdriver, loosen screw in battery cover (screw will remain attached to cover). Remove old batteries and insert 3 fresh 1.5V "AA"/LR6 alkaline batteries into battery compartment. Replace cover, retighten screw and close seam.

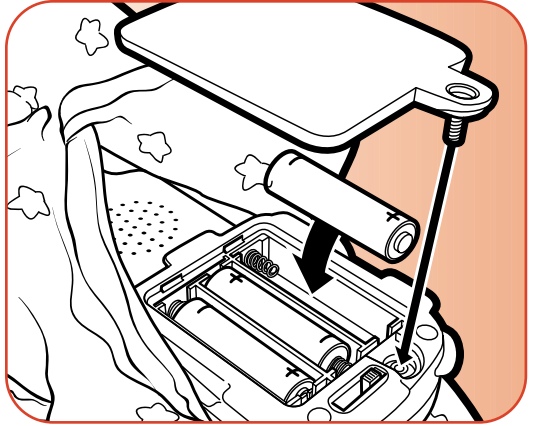

## **!** CAUTION: TO AVOID BATTERY LEAKAGE

- 1) Be sure to insert the batteries correctly and always follow the toy and battery manufacturers' instructions;
- 2) Do not mix old and new batteries or alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries;
- 3) Always remove weak or dead batteries from the product.

## IMPORTANT: BATTERY INFORMATION

Please retain this information for future reference.

Batteries should be replaced by an adult.

## **!** CAUTION:

1. Always follow the instructions carefully. Use only batteries specified and be sure to insert them correctly by matching the + and - polarity markings.
2. Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
3. Remove exhausted or dead batteries from the product.
4. Remove batteries if product is not to be played with for a long time.
5. Do not short circuit the supply terminals.
6. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.
7. RECHARGEABLE BATTERIES: Do not mix these with any other types of battery. Always remove from the product before recharging. Recharge batteries under adult supervision. DO NOT RECHARGE OTHER TYPES OF BATTERIES.

## FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including any interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

SURFACE WASHABLE ONLY

FILLING: ALL NEW MATERIALS: 100% POLYESTER FIBER

REG. NO. PA-282



© 2003 Hasbro. All Rights Reserved.  
® denotes Reg. U.S. Pat. & TM Office.  
06577 P/N 6273120000



Questions? Call: 1-800-PLAYSKL

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>