

This toy simulates the function of house hold appliances. Please caution your child about the hazards of house hold appliances.

### FCC STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Consult the dealer or an experienced radio/TV technician for help.




© 2005 Hasbro. All Rights Reserved.  
TM & ® denote U.S. Trademarks  
08133/08132 P/N 6503230000

**Ages 2+**  
08133/08132

**PLAYSKOOL**

## Mini the Vacuum™

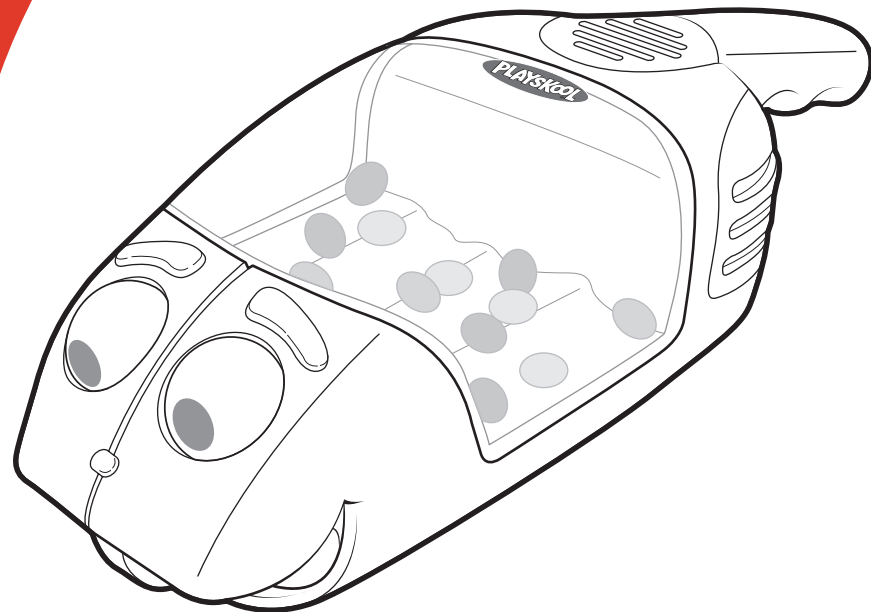


**Thank you for choosing this unique PLAYSKOOL toy!**

Batteries included. Replace with 2 x 1.5V "AA" or R6 size batteries.  
Alkaline batteries recommended. Phillips/cross head screwdriver  
(not included) required to replace batteries.

**NOTE: Adult should remove and discard wire ties.**


## PLAY FEATURES

Preschoolers can pretend to clean with their new animated, electronic buddy. Simply roll the toy back and forth to make MINI THE VACUUM "come to life" with fun vacuum sounds, spinning dust-poppin' action and silly cleaning phrases! The MINI THE VACUUM toy will say a phrase each time it is rolled.

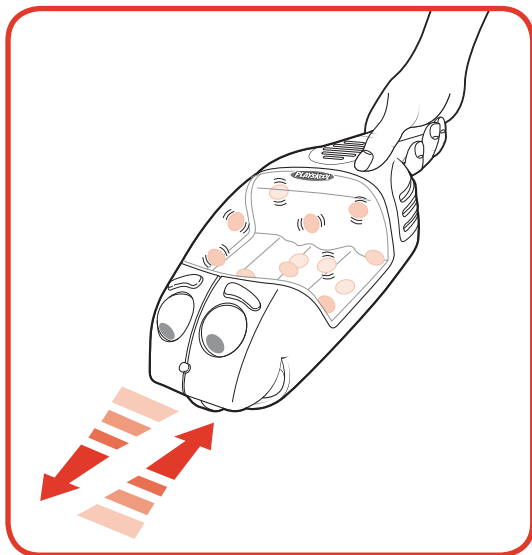

## TO REPLACE BATTERIES

Use a Phillips/cross head screwdriver (not included) to loosen screw in battery compartment door as shown (screw stays attached to door). Remove door. Remove and discard old batteries. Replace with 2 fresh 1.5V "AA" or R6 size batteries. Alkaline batteries recommended. Replace door and tighten screw.

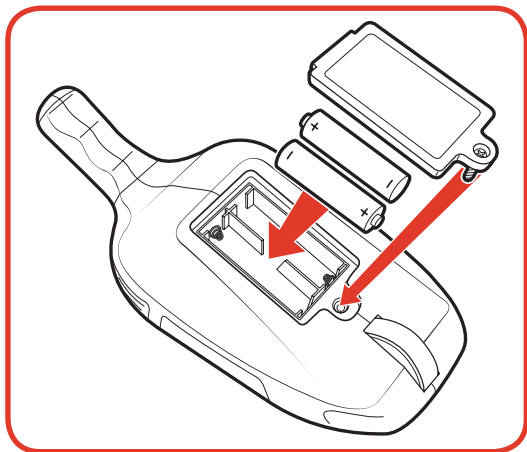

## ⚠ CAUTION: TO AVOID BATTERY LEAKAGE

1. Be sure to insert the batteries correctly and always follow the toy and battery manufacturers' instructions;
2. Do not mix old and new batteries or alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries;
3. Always remove weak or dead batteries from the product.

## IMPORTANT: BATTERY INFORMATION

Please retain this information for future reference.  
Batteries should be replaced by an adult.

## ⚠ CAUTION:

1. Always follow the instructions carefully. Use only batteries specified and be sure to insert item correctly by matching the + and - polarity markings.
2. Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
3. Remove exhausted or dead batteries from the product.
4. Remove batteries if product is not to be played with for a long time.
5. Do not short circuit the supply terminals.
6. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.
7. RECHARGEABLE BATTERIES: Do not mix these with any other types of battery. Always remove from the product before recharging. Recharge batteries under adult supervision. DO NOT RECHARGE OTHER TYPES OF BATTERIES.

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>