

## ⚠️ CAUTION: TO AVOID BATTERY LEAKAGE

1. Be sure to insert the batteries correctly and always follow the toy and battery manufacturers' instructions;
2. Do not mix old and new batteries or alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries;
3. Always remove weak or dead batteries from the product.

## IMPORTANT: BATTERY INFORMATION

Please retain this information for future reference. Batteries should be replaced by an adult.

## ⚠️ CAUTION:

1. Always follow the instructions carefully. Use only batteries specified and be sure to insert item correctly by matching the + and - polarity markings.
2. Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
3. Remove exhausted or dead batteries from the product.
4. Remove batteries if product is not to be played with for a long time.
5. Do not short circuit the supply terminals.
6. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.
7. RECHARGEABLE BATTERIES: Do not mix these with any other types of battery. Always remove from the product before recharging. Recharge batteries under adult supervision. DO NOT RECHARGE OTHER TYPES OF BATTERIES.

## FCC STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Visit



© 2006 Hasbro. All Rights Reserved.  
TM & ® denote U.S. Trademarks  
08855 P/N 6579700000

Download from Www.Somanuals.com. All Manuals Search And Download.

BIRTH +  
08855

PLAYSKOOL®

Let's Play  
Together™


 
Thank you for choosing  
this PLAYSKOOL product!

## Tummy Time Together Gym™

Includes electronic  
unit with attached  
soft character, 2 soft  
characters, 2 bases,  
2 arms and 6 screws.

**Adult assembly required.**  
Tool needed: Phillips/crosshead  
screwdriver (not included).

### Overhead Gym Mode

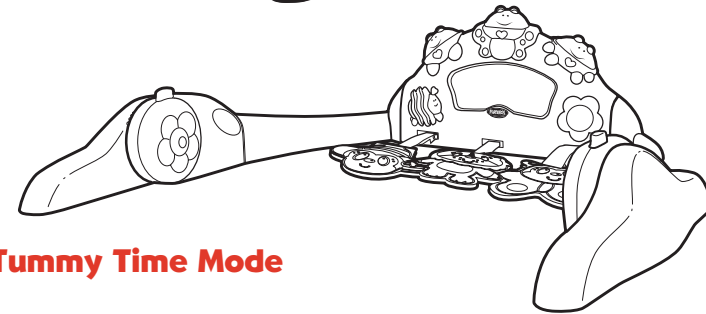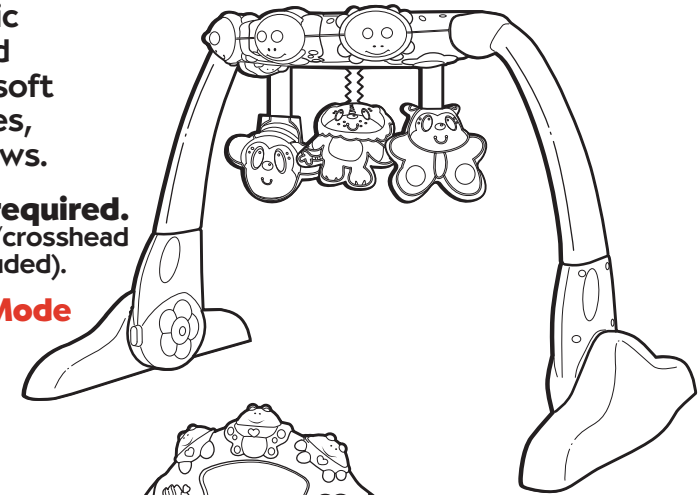

### Tummy Time Mode

**X3** 1.5V AA  
R6 size  
**BATTERIES  
REQUIRED  
NOT INCLUDED**

Alkaline batteries  
recommended.  
Phillips/cross head  
screwdriver (not included)  
needed to insert batteries.


⚠️ **CAUTION:** NEVER leave child unattended. To avoid injury and to prevent possible strangulation and entanglement injury, NEVER place gym in crib or playpen. NEVER add strings, ties or other products to gym.

Remove gym from the children's environment when they begin to stand up.


⚠️ **CAUTION:** This product contains small parts which are necessary for assembly. Prior to and during assembly of this product, keep small parts out of children's reach. Small parts pose a choking hazard to children under 3 years.

## TO ASSEMBLE

1. Insert posts on arms all the way into openings on electronic unit. Tighten 2 short screws into each side of electronic unit to secure arms to unit.

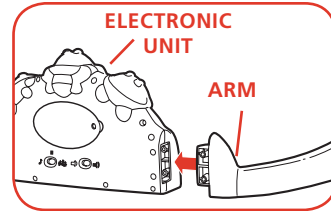


2. **IMPORTANT:** Make sure to match pivot piece on arm marked "LEFT" with base marked "LEFT." Tighten long screw (with washer head) into each pivot piece/base assembly. Repeat for pivot piece and base marked "RIGHT."

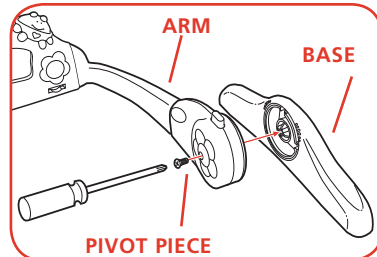

3. Insert posts on soft bee and butterfly into slots on electronic unit (listen for snap).

**NOTE:** Be sure to check assembly by pressing the button on each arm and rotating each base until button pops out to display the word "LOCKED" and a snap is heard. If no snap is heard, go back and check assembly.

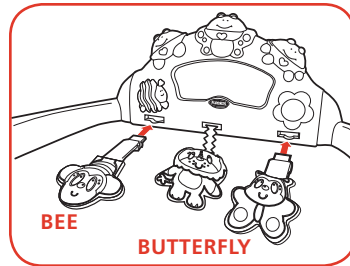

## TO USE

The Tummy Time Together Gym™ toy is a musical, light-up tummy time toy that quickly converts to an overhead gym! It also features colorful animals and an angled mirror that lets babies see themselves!

### 2 WAYS TO PLAY!

**NOTE:** When the legs are in locked position, the word "LOCKED" will be visible on the side of the button. Check for this word each time you lock the legs in position.


 
**NOTE:** Be sure baby is clear of toy when adjusting to gym or tummy-time positions.

### Tummy Time Toy

As a tummy time toy, baby can have fun with wonderful lights, sounds, and music.

#### To adjust to tummy time position:

Lay toy down so that bottom of electronic unit rests on the floor. Press button and rotate base down so that it lies flat on the floor. Repeat for other button and base.

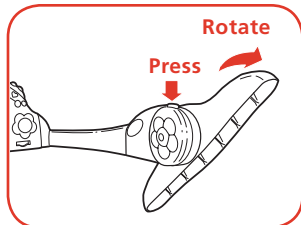
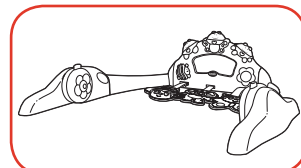


## Gym Toy

When used as a gym, babies lie on their backs and bat the dangling bee, butterfly and lion.

#### To adjust to gym position:

Lay toy down so that bottom of electronic unit rests on the floor. Press button and rotate base into "up" position (listen for snap). Repeat for other button and base. Lift electronic unit to stand up toy.

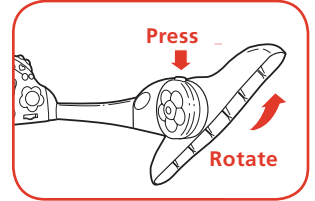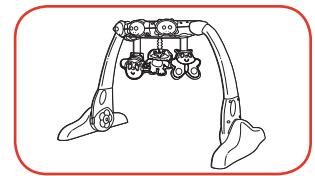

#### Using the wiggle lion:

Pull down the tethered lion and watch him wiggle back!

## MUSICAL SETTINGS!

You will notice that there is a 3-position switch on the electrical unit.

The single "musical note" is for short play. When activated by batting the bee or butterfly, the unit will play a single song with lights and sounds and then stop until your child bats the bee or butterfly to start another single song.

The multiple "music notes" are for long play. Each time your child bats the bee or butterfly, multiple songs will play in succession.

The center setting is MUSIC OFF.

 
**NOTE:** You can also activate music by pressing the light-up characters. The lion will not activate music.

**NOTE:** After a brief period of inactivity, the toy will prompt baby to play again before shutting off.

- Adjust sound level to HIGH or LOW using the volume switch.
- When storing the toy, move the operating switch to OFF to prevent accidental activation.

## TO INSERT BATTERIES

Use a Phillips/cross head screwdriver (not included) to loosen screw in battery compartment door (screw remains attached to door). Remove door. Insert 3 x 1.5V "AA" or R6 size batteries. Alkaline batteries recommended. Replace door and tighten screw.

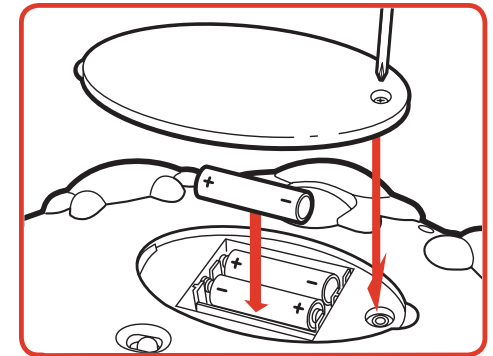

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>