

18638/18636 Asst.

18641/18637 Asst.

AGES 3+

Thank you for purchasing this BABY ALIVE® doll! For maximum play value, please read and follow instructions carefully.

Includes doll, dress, 2 doll diapers, bottle with nipple and cap, bowl, spoon, 4 packets of doll food and bib. Spoon and bottle contain magnets.



BABY ALIVE doll food is non-toxic and made of food-grade ingredients, but it is **not intended to be eaten**. If accidentally ingested, however, it is not harmful. Use only BABY ALIVE doll food with your BABY ALIVE doll.



Baby  
Alive



Note to the consumer: BABY ALIVE is packaged in "TRY ME" mode. When you bring the doll home, activate its full range of features by moving its ON/OFF/TRY ME switch to the "ON" position.

 **x4** 1.5VAA or LR6 size alkaline  
**BATTERIES INCLUDED**

Replace with 4 x 1.5V "AA" or LR6 size batteries. Alkaline batteries required. Phillips/cross head screwdriver (not included) needed to replace batteries.



# TO PLAY



To activate, first make sure doll's ON/OFF/TRY ME switch is set to "ON".



## Bracelet

Press the button on the doll's bracelet and she will "wake up".

To change from one mode of play (eat - play - change - play - sleep) to another, press button on the doll's bracelet. After about

30 seconds of non-activation, doll will turn itself off. To re-activate, press button again.

To play with your BABY ALIVE doll without having her speak, press button on the bracelet and hold for about 5-6 seconds. Doll will say "bye-bye", but her eyes will remain open. Press button again to "wake up" doll.

**Note:** To conserve batteries, turn switch to "OFF" position when doll is not to be played with for extended periods of time,



## Mealtime

Before you feed your doll, put her bib on and make sure she's wearing a diaper that's securely fastened.

**Note:** Doll food may stain some surfaces; wash promptly upon contact. For best results, feed doll in an environment that's easily wiped clean, and away from surfaces such as carpeting or upholstery.



To feed the doll, open a packet of BABY ALIVE doll food and pour into feeding bowl. Add 15ml of water and stir well; food will thicken as it's stirred. You can measure the water by filling up to the fill line on the food bowl, bottle cap or bottle. Feed your doll right after you've mixed the doll food. (If doll falls asleep

while you're preparing her food, press the button on her bracelet to wake her up, or just start feeding her, and she will wake up.)



Feed the doll using the included spoon. Every time you place the spoon in her mouth she will really "chew" her food.

**Tip:** Food moves through the doll more quickly when she is leaning back slightly in a sitting position (as shown).



After every few spoonfuls of food, be sure to give the doll a drink from her bottle. Fill the bottle with water, and press into doll's mouth. Squeeze bottle gently to release water, giving her a few sips at a time. You can keep the bottle in her mouth between sips, but if the bottle stays in for more than 30 seconds, she will get drowsy and fall asleep.

## Important mealtime guidelines

- Use only **BABY ALIVE** doll food and doll juice mixes (sold separately); **never** feed her “real” food.
- Always give your doll a bottle of water after she eats, or food may become stuck inside. Use only clean tap water; do not use any other liquids.
- Do not feed doll more than one packet of food and one bottle of water between diaper changes.
- If doll food becomes too thick, add a spoonful of water and stir well.
- Doll food cannot be stored; use immediately after mixing.
- Only the included spoon and bottle will work with your **BABY ALIVE** doll. A replacement spoon, sippy cup and diaper refills are available in **BABY ALIVE** Accessory Packs (sold separately).
- Do not place any foreign objects in doll’s mouth or any other opening.



## Diaper time

After you’ve fed your doll, you’ll need to clean her and change her diaper. Clean her all over with a soft, damp cloth or paper towel, then put on a new diaper. **Always** change your doll’s diaper and clean her after she eats; **never** let her sit with a full diaper. Discard dirty diapers; they cannot be washed or reused.

## Naptime

**BABY ALIVE** will yawn and tell you when she’s sleepy. You can hold her in your arms or put her down for a nap. To wake her, press button on her bracelet.

## If your **BABY ALIVE** doll is fussy

Sometimes your **BABY ALIVE** doll may become fussy. She may cry or fuss or say she’s thirsty. Give her the bottle (even if there’s no water inside), or press the button on her bracelet and she’ll feel better.

## Important cleaning instructions

To prevent clogging, it is essential to rinse doll clean immediately after each use. If food is left in the doll, it can harden and become difficult to clean.

- To clean doll after feeding, give the doll several bottles of water until any remaining food has been rinsed away and the water runs clear (it’s best to do this over a sink). Tilt bottle from side to side to make sure you’ve rinsed away any food build-up in the corners of the doll’s mouth. Use a soft cloth or paper towel to wipe away any remaining food. Allow doll to dry.
- Clean doll’s face and body by wiping gently with a soft, damp cloth.  
**Do not rub.**
- Do not submerge doll in water; it is not intended for bath-time play.
- Do not wash doll’s hair; if any doll food gets into hair, wipe away with a soft, damp cloth.
- Doll’s clothes are machine-washable (mild detergent, cold water, gentle cycle); they can also be spot-cleaned with a cool damp cloth; hang to dry. Doll bib should be cleaned with a soft, damp cloth; hang to dry.
- Hand-wash spoon and bottle with mild dish soap and water; they are not dishwasher-safe.



## Troubleshooting

If doll is unresponsive, speaks slowly or makes unusual facial expressions, battery power may be low. Replace batteries.

## TO REPLACE BATTERIES

Use a Phillips screwdriver to loosen screw in battery compartment door (screw remains attached to door). Remove door and remove old batteries. Insert 4 x 1.5V fresh "AA" or LR6 size alkaline batteries. Replace door and tighten screw (be sure ribbon is clear of seal).

### ⚠ CAUTION: TO AVOID BATTERY LEAKAGE

1. Be sure to insert the batteries correctly and always follow the toy and battery manufacturers' instructions;
2. Do not mix old and new batteries or alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries;
3. Always remove weak or dead batteries from the product.

### IMPORTANT: BATTERY INFORMATION

Please retain this information for future reference. Batteries should be replaced by an adult.

### ⚠ CAUTION:

1. Always follow the instructions carefully. Use only batteries specified and be sure to insert them correctly by matching the + and - polarity markings.
2. Do not mix old batteries and new batteries, or standard (carbon-zinc) with alkaline batteries.
3. Remove exhausted or dead batteries from the product.
4. Remove batteries if product is not to be played with for a long time.
5. Do not short-circuit the supply terminals.
6. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and reinserting batteries) if necessary.
7. **RECHARGEABLE BATTERIES:** Do not mix these with any other types of battery. Always remove from the product before recharging. Recharge batteries under adult supervision. **DO NOT RECHARGE OTHER TYPES OF BATTERIES.**

### FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

© 2006 Hasbro. All Rights Reserved.  
TM & ® denote U.S. Trademarks.  
18638/18636 Asst. & 18641/18637 Asst.

PN 6571800000



BabyAlive.com

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>