



Petal-Chi



INSTRUCTION

200103250IWTI-01

 
* Checklist

The following items are included in this package:

- 1 x Petal-Chi
- 1 x Special Watering Can
- 1 x Instruction Manual

If any item is missing, please contact the Tiger Electronics Customer Service Department and the missing items will be sent to you.

Petal-Chi is the newest species of houseplant found anywhere. To care for your Petal-Chi, daily watering and conversation are very important. Have hours of fun watching your Petal-Chi's personality mature as it sings and dances for you!

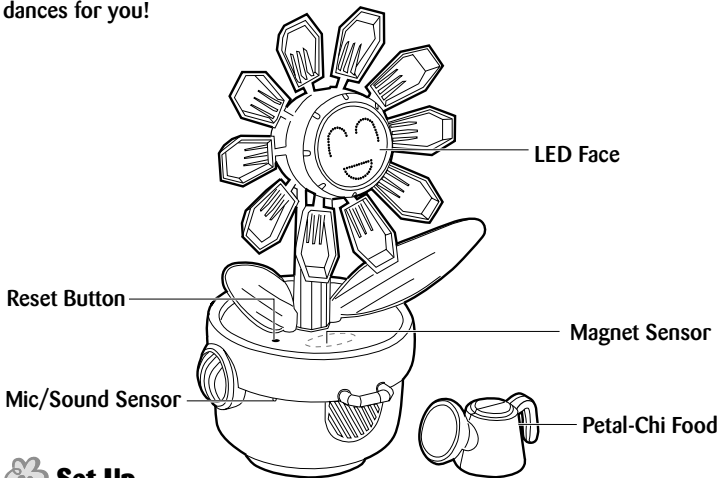

* Set Up

Petal-Chi will play best on a smooth, flat surface. Make certain the area is clear of obstacles so Petal-Chi can dance and sing. Petal-Chi should always be played with indoors.

 
* Movement

- Leaves – move side to side
- Head – moves up and down
- Body – sways left to right

* Watering

Feeding Petal-Chi is an important step in its development. To feed Petal-Chi place the special watering can over the "water me here" label on the soil. Petal-Chi can die from lack of water or too much. Please see below for watering tips:

- 5 water sounds + 1 burp = needs more water
- 3 water sounds + 1 burp = perfect amount of water
- 1 water sound + 1 burp = too much water
- Do not attempt to open the watering can.
- Avoid placing the watering can close to any magnetic-sensitive object like a cassette tape, video tape, magnetic disk, credit, etc.

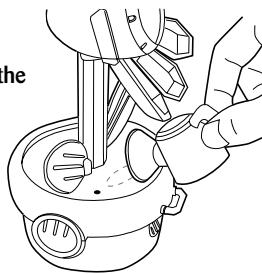


* Wither

If you do not take good care of your Petal-Chi it will wither. The funeral song will start to play and Petal-Chi's face will go blank, the petals will wither and it goes back to the first stage again. At this point you will have to start all over again with Petal-Chi.


* Talking to Petal-Chi

 Petal-Chi reacts to sound, so talking to your Petal-Chi or playing music for it is very important.

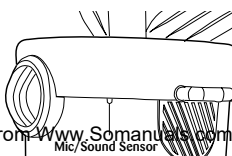

* Biorhythm

The graphs shown below represent the 8 biorhythm levels of Petal-Chi. The amount of attention you give to Petal-Chi affects its moods. You can make your Petal-Chi happy and healthy or it will wither from loneliness.

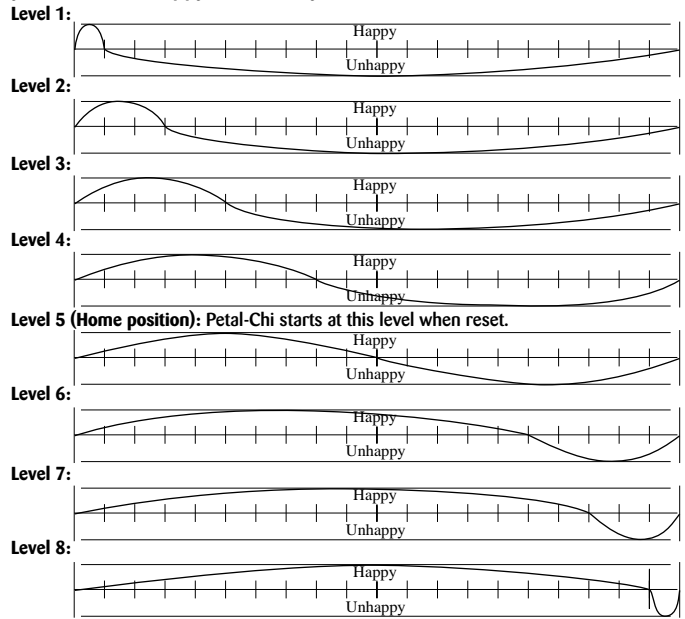 

* Stages

The more attention Petal-Chi receives the faster it will move through the 3 stages of development.

Stage 1 – Limited basic actions. In this stage the petals are closed because Petal-Chi is very young and has to grow. Petal-Chi does not sing in this stage. It only makes Pi, Po and Pa sounds. *****Very Important** – it takes 15 minutes to move to Stage 2. To make Petal-Chi grow faster in this stage water it more, talk to it a lot and play music for it. This will make Petal-Chi grow up A LOT faster! In this stage Petal-Chi cannot wither from too much water, so you can feed it as much as you want.

Stage 2 – Basic actions, Petal-Chi starts to sing short songs, its face gets more expressions and its petals open up. This is a very important stage – The way you take care of Petal-Chi in this stage determines the character it will be in stage 3. If Petal-Chi is left alone for more than 3 minutes it will go to sleep. Please refer to sleeping section for details. *****Please note** – in this stage Petal-Chi will wither with too much water.


Stage 3 – Basic actions and events (character development is an event). In this stage Petal-Chi becomes one of four characters. If you have taken very good care of Petal-Chi it will switch into another character after the first one.

Characters

For each character, Petal-Chi will play 10 different songs (40 songs total) in different genres of music ranging from nursery rhymes to rock and roll! The only way to get to the next character is to water and play with Petal-Chi. Don't water it too much or Petal-Chi will wither.

1. Adorable Baby
2. Young Lady
3. Teenage Rocker
4. Awkward Chap

 * Interaction

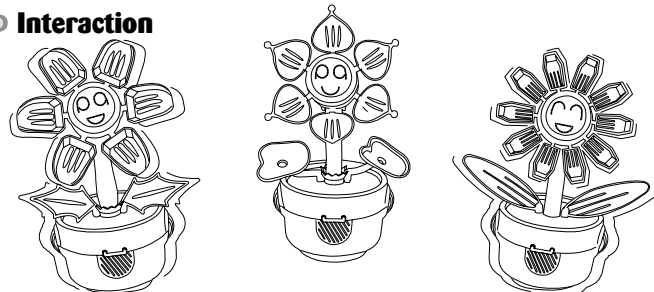

Besides having fun with you, Petal-Chi likes to hang out with other Petal-Chi friends! Place two or more Petal-Chi's next to each other and watch them sing and dance together! Petal-Chi flowers react to sound, so if one singing Petal-Chi is placed next to another quiet Petal-Chi, then the quiet Petal-Chi will start to sing and dance as well. (The quiet Petal-Chi must be "On" for the sound activation to work).

* Attention

Petal-Chi will make certain noises to clue you in on what it needs. Petal-Chi will make a beep sound to indicate that it has received your attention. Please refer to the following for hints:

Water running sound = needs water. Once you give it to Petal-Chi it will sing and dance. You have to be fast!!! If you wait too long to give Petal-Chi water, the buzzer sounds and that means you have just lost points in the game.

Beep, Beep, Beep = needs you to talk to it. Once you start talking to Petal-Chi its petals and leaves start moving.

***Please note: Petal-Chi will react differently after receiving just water, just sound and a combination of the two. Try all three combinations to see how Petal-Chi will react!

Sleeping

 
If you do not pay attention to Petal-Chi it will fall asleep. Petal-Chi will make a wah wah sound to indicate that it is yawning and about to fall asleep. To wake Petal-Chi up, give it water.

Turning Petal-Chi On

Please note that there is no on/off switch for Petal-Chi. Once the batteries are in, Petal-Chi comes to life. ***Please note that if the batteries are removed or when the reset button is pressed (see 'Reset' section for details) all data for Petal-Chi will be erased and it will go back to the beginning stage of play.

Reset

Press the reset button only if Petal-Chi's movements seem to be malfunctioning. Take a ball-point pen or a paper clip and insert it into the reset button hole located on the soil of the pot. Do not press the Reset button with any sharp instrument. Once the reset button is pressed, Petal-Chi goes back to the beginning stage.

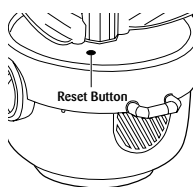


Helpful Tip

Petal-Chi is a mechanical robotic toy. The mechanical sound you hear when it moves is normal.

Battery Installation

IMPORTANT: Battery installation should be done by an adult. Always install the batteries correctly according to the positive (+) and negative (-) signs on the batteries.

 1. Unscrew and remove the battery compartment door on the bottom of the pot.
2. Insert 3 "AAA"/LR03 batteries (not included) as shown inside of the battery compartment.
3. Attach the battery compartment door and fasten the screw.
4. If there is any malfunction, please press the reset button located on the top of the pot in the soil (see reset section for more details).

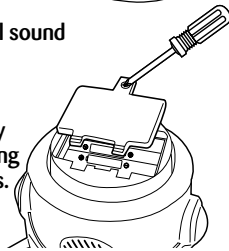

To ensure proper function:

- Do not mix old and new batteries.
- Do not mix alkaline, standard or rechargeable batteries.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged (if removable).
- Rechargeable batteries are only to be charged under adult supervision (if removable).
- Only batteries of the same or equivalent type as recommend are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short circuited.
- Replace with new batteries at the first sign of erratic operation.

* Do not dispose of batteries in fire, batteries inside this product may explode or leak.

Caution

- As with any small batteries, the batteries used with this toy should be kept away from small children who still put things in their mouths. If they are swallowed, promptly see a doctor and have the doctor phone 202.625.3333 collect.
- Make sure the batteries are inserted correctly and follow the toy and battery manufacturer's instructions.

Taking Care of your Petal-Chi

- Prevent spills of food and beverage on the unit.
- Do not submerge the product in water. If the product needs to be cleaned, wipe gently with a barely damp soft cloth.
- Do not throw or kick the product, and do not push sharp objects through the speaker openings.

Cleaning Instructions



High temperature will destroy the unit. Do not leave unit in direct sunlight.



Clean only with a piece of barely damp soft cloth.

Download from Www.Somanuals.com

Trouble Shooting

Your Petal-Chi friend is designed to provide hours of fun play. If its actions become erratic and you are having trouble, check to see that Petal-Chi has fresh batteries and then call Tiger Electronics Service Department at 1-800-844-3733.

If you can't see Petal-Chi's face, it may be asleep (see section entitled "SLEEPING") or check to make certain there are fresh batteries.)

For more information about Tiger Electronics, our products and special promotion please visit our web site at: www.tigertoys.com.

90 day limited warranty

Tiger Electronics. (TIGER) warrants to the original consumer purchaser of this product that the product will be free from defects in materials or workmanship for 90 days from the date of original purchase. This warranty does not cover damages resulting from accident, negligence, improper service or use or other causes not arising out of defects in materials or workmanship.

During this 90-day warranty period, the product will either be repaired or replaced (at TIGER'S option) without charge to the purchaser, when returned with proof of the date of purchase to either the dealer or to TIGER.

Product returned to TIGER without proof of the date of purchase or after the 90-day warranty period has expired, but prior to one year from the original date of purchase, will be repaired or replaced (at TIGER'S option) for a service fee of US\$10.00. Payments must be by check or money order payable to Tiger Electronics.

THE FOREGOING STATES THE PURCHASER'S SOLE AND EXCLUSIVE REMEDY FOR ANY BREACH OF WARRANTY WITH RESPECT TO THE PRODUCT.

All product returned must be shipped prepaid and insured for loss or damage to:

TIGER REPAIR DEPARTMENT
1000 N. Butterfield Road, Unit 1023
Vernon Hills, IL 60061, U.S.A.

The product should be carefully packed in the original box or other packing materials sufficient to avoid damage during shipment. Include a complete written description of the defect, a check if product is beyond the 90-day warranty period, and your printed name, address and telephone number.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES AND NO OTHER REPRESENTATIONS OR CLAIMS OF ANY NATURE SHALL BE BINDING ON OR OBLIGATE TIGER IN ANY WAY. ANY IMPLIED WARRANTIES APPLICABLE TO THIS PRODUCT, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE NINETY (90) DAY PERIOD DESCRIBED ABOVE. IN NO EVENT WILL TIGER BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES RESULTING FROM POSSESSION, USE, OR MALFUNCTION OF THIS TIGER PRODUCT.

Some states do not allow limitations as to how long an implied warranty lasts and/or exclusions or limitations of incidental or consequential damages, so the above limitations and/or exclusions of liability may not apply to you. This warranty gives you specific rights, and you may also have other rights which vary from state to state.

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions :

(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio TV technician for help.

TIGER
ELECTRONICS
A division of Hasbro, Inc.
Where Technology Comes to Play!™



©, TM, & © 2001 Tiger Electronics. All Rights Reserved.
980 Woodlands Parkway, Vernon Hills, Illinois 60061, U.S.A.
©, TM, & © 2001 Tiger Electronics UK Ltd. All Rights Reserved.
Ponders Bush, King's Road, Harrogate, North Yorkshire,
United Kingdom HG1 1EL.

PRINTED IN CHINA

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>