

## FCC STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

## SURFACE WASHABLE ONLY

RAGGEDY ANN and RAGGEDY ANDY are trademarks of Hasbro and are used with permission © 2002 Hasbro. All Rights Reserved. Manufactured under license from Hasbro, Inc. RAGGEDY ANN and RAGGEDY ANDY were created by Johnny Gruelle.

70163 P/N 6174890000

AGE 1 1/2 +

70163



## Dress Me Raggedy Ann®




Thank you for  
buying this  
Raggedy Ann®  
product!

Includes 3 "AA"  
batteries. Phillips  
screwdriver  
(not included)  
required for  
battery  
replacement  
and assembly.

**RAGGEDY ANN®**  
says 21 fun phrases!


"Hi! I'm Raggedy Ann. Can you help me get dressed?"

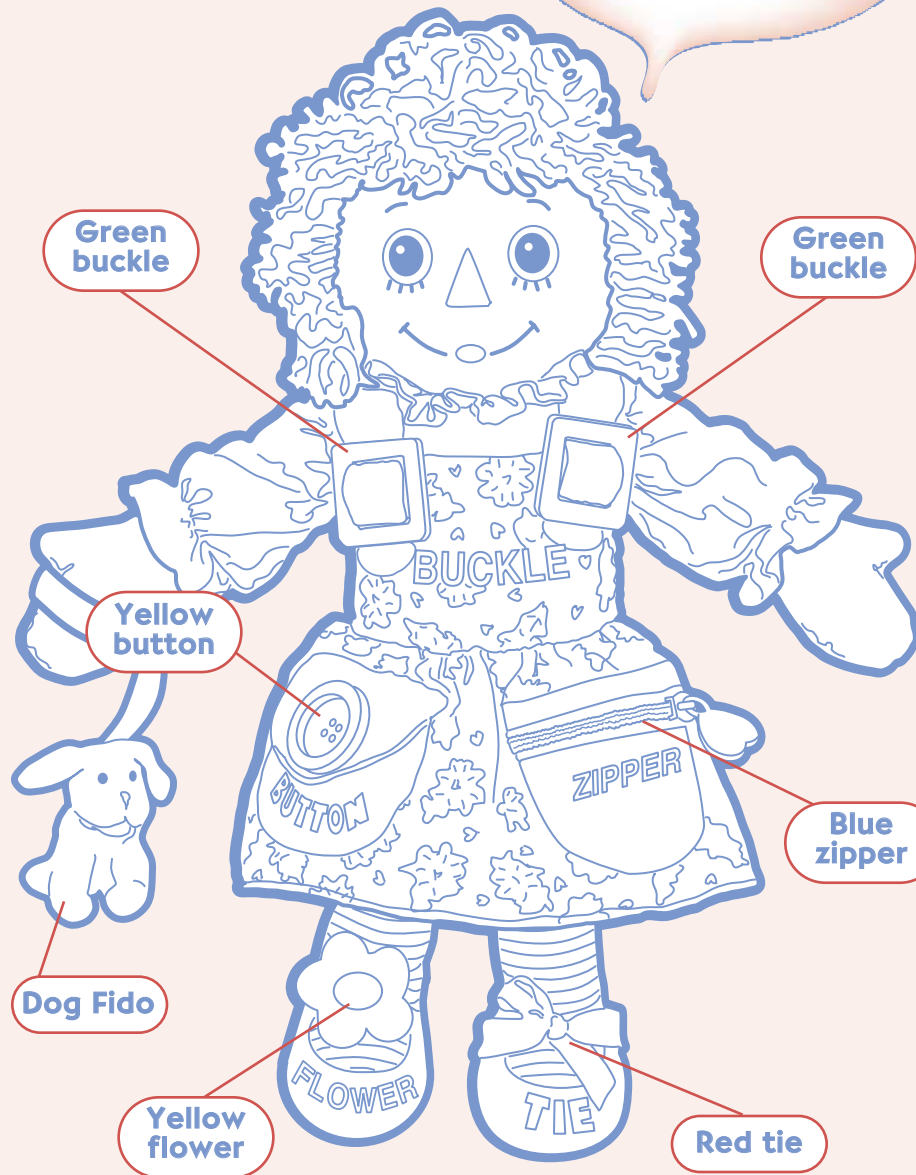

Auto shut-off occurs after 5 seconds of inactivity.

## TO REPLACE BATTERIES

Use a Phillips screwdriver to loosen screw in battery compartment door (screw remains attached to door). Remove door. Remove old batteries and insert 3 fresh "AA" alkaline batteries. Replace door and tighten screw.

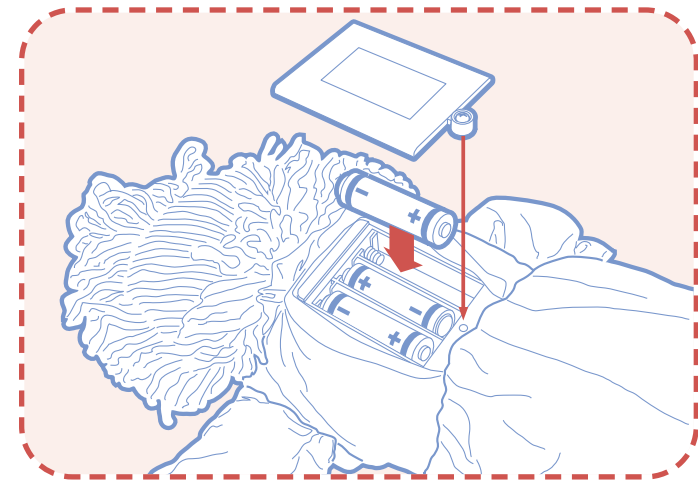

### ⚠ CAUTION: TO AVOID BATTERY LEAKAGE

- 1) Be sure to insert the batteries correctly and always follow the toy and battery manufacturers' instructions;
- 2) Do not mix old and new batteries or alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries;
- 3) Always remove weak or dead batteries from the product.

## HELPFUL HINTS

- The batteries that come with DRESS ME RAGGEDY ANN are for in-store demonstration purposes and may not last as long as replacement batteries.
- If the toy functions improperly, replace the batteries (be sure to use alkaline).

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>