

TIGER
ELECTRONICS, LTD.



© 1999 Lyons Partnership, L.P.

All rights reserved. The Barney and Baby Bop names and characters, and the overlapping dino spots and Barney and star logos are trademarks of Lyons Partnership, L.P. Barney and the Barney and star logo are Reg. U.S. Pat. & Tm. Off.

©, TM, & © 1999 Tiger Electronics, Ltd. All Rights Reserved.
980 Woodlands Parkway, Vernon Hills, Illinois 60061, U.S.A.

PRINTED IN CHINA

875010001WTV-01

Download from www.Somanuals.com. All Manuals Search And Download.

Barney

**INSTRUCTION
MANUAL**



Telephone Fun Smart Sticks

 
TIGER

**Ages 2 and Up
Model 87-501**

INTRODUCTION

Barney's Telephone Fun Smart Stick is a hand held electronic learning aid for preschoolers that helps teach children their home phone numbers and their emergency numbers. They can even call Baby Bop for added play!

KEY FUNCTIONS

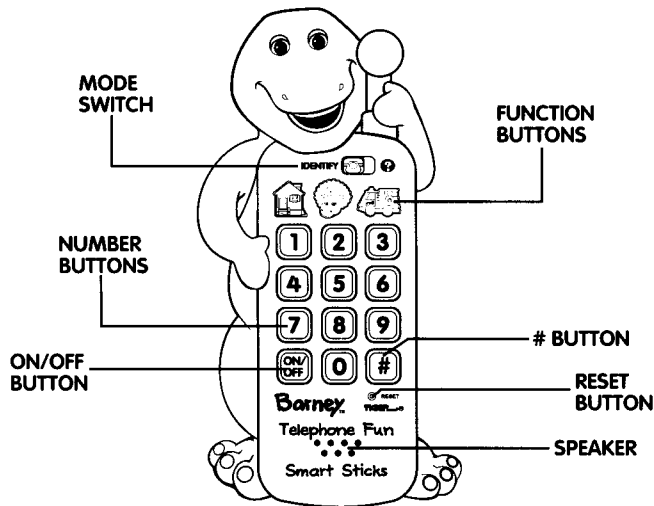

- MODE SWITCH** - Slide the switch to select one of the 2 Modes of play:
Mode 1 : Identify
Mode 2 : Call/?
- FUNCTION BUTTONS** - Press these buttons to activate what phone number Barney is looking for or what phone number the children want to learn.
- ON/OFF BUTTON** - Press this button to turn the unit On and Off.

1

- # BUTTON** - Press this button during the programming procedure.
- RESET BUTTON** - Press this button during the programming procedure.
- NUMBER BUTTONS** - Press these buttons to select the desired numbers.

PROGRAMMING PROCEDURE

The parent can program in any home phone number or emergency phone number by following these simple instructions. The programmed phone numbers can be changed at any time.

1. Turn the unit ON.
2. Press the RESET button.
3. Press the HOUSE button.
4. Enter your home phone number.
5. Press the (#) button.
6. Press the FIRE TRUCK button.
7. Enter your emergency number whether it is 911 or a local number.
8. Press the (#) button again.
9. Your child can now begin to play.

If the parent presses the RESET button again, the previously entered numbers will automatically be erased and the parent will need to start over from #3 above.

NOTE: These instructions are also engraved on the back of the Telephone Fun Smart Stick for your convenience.

HOW TO PLAY

Note: The unit will automatically shut off after 3 minutes of non-use.

1. To activate your Smart Stick, press the ON/OFF button. Barney will say, "Hello, this is Barney!"
2. Your Smart Stick will begin play in the mode selected. If you wish to play a different mode, slide the MODE SWITCH to another mode. You can change modes at any time during play.

The 2 modes are: Mode 1 : Identify
Mode 2 : Call/?

2

GAME PLAY

Mode 1: IDENTIFY

- Slide the **MODE SWITCH** to the **IDENTIFY** position. (left)
- When the child presses a number, Barney will say that number.
- When the child presses the **HOUSE** button, Barney will repeat the home phone number that was programmed in by the parent and ask the child if they can dial that.
- If they dial the number correctly, they will be rewarded with a fun phrase from Barney.
- If they dial the number incorrectly, Barney will ask them to please try again and repeat the programmed phone number. Barney will keep repeating this phrase until the child enters the correct number or until the child changes modes.
- When the child presses the **FIRE TRUCK** button, Barney will repeat the emergency number that was programmed in by the parent and ask the child if they can dial it.
- If they dial the number correctly, they will be rewarded with a fun phrase from Barney.
- If they dial incorrectly, Barney will ask them to please try again and repeat the programmed phone number. Barney will keep repeating the phrase until the child enters the correct number or until the child changes modes.
- When the child presses the **BABY BOP** button, they will hear Baby Bop talk to them and ask them questions.

MODE 2: CALL/?

- Slide the **MODE SWITCH** to the **CALL/?** position. (right)
- When the child presses the **HOUSE** button, Barney will ask the child what their home phone number is. If the child enters the same number that their parent programmed in, they will be rewarded with a fun phrase from Barney. If the child enters a different number, Barney will ask them to try again. After 2 incorrect tries, Barney will tell them what their home phone number is and ask them if they can dial that.
- When the child presses the **FIRE TRUCK** button, Barney will ask them what their emergency number is. If the child enters the same number that the parent programmed in, they will be rewarded with a fun phrase from Barney. If the child enters a different number, Barney will ask them to try again. After 2 incorrect tries, Barney will tell them what their emergency number is and ask them if they can dial that.
- When the child presses the **BABY BOP** button, they will hear Baby Bop talk to them and ask them questions.

REPLACING THE BATTERIES

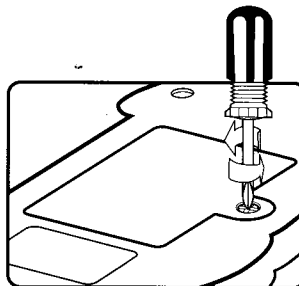 


ILLUSTRATION 1

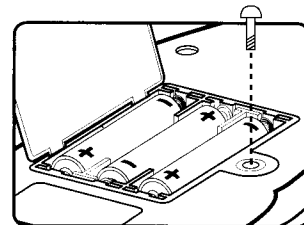 


ILLUSTRATION 2

NOTE: Battery installation should be done by an adult. Always install the batteries correctly according to the positive (+) and negative (-) signs on the batteries.

1. Open the battery compartment door on the back of the unit using a **UNIVERSAL HEAD SCREWDRIVER**. (Illustration 1)
2. Insert 3 "AAA" / UM4 / LR03 batteries. Be sure to match the "+" and "-" symbols as shown. (Illustration 2)
3. Close the battery compartment door and replace the screw using a **UNIVERSAL HEAD SCREWDRIVER**.

CAUTION

To ensure proper function and avoid battery leakage:

- Do not mix old and new batteries
- Do not mix alkaline, standard or rechargeable batteries
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged (if removable).
- Rechargeable batteries are only to be charged under adult supervision.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity, and follow the toy and battery manufacturer's instruction.

- Exhausted or dead batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.
- Remove the batteries if you won't be using the Smart Stick for a long period of time.

TROUBLESHOOTING

1. If the unit does not work, please check that the batteries have been inserted correctly.
2. If the volume is too low, please install new batteries.

If you are still having trouble after checking all of these things, please call our toll-free number at 1-800-TIGER ED and a representative will be happy to help you.

CARE AND USE/MAINTENANCE

To protect Telephone Fun Smart Stick follow these instructions:

- Prevent spills of food and beverage on the unit.
- Do not submerge the product in water. If the product needs to be cleaned, wipe it gently with a barely damp, soft cloth.
- Do not throw or kick the product, and do not push sharp objects through the speaker opening.
- Do not put the Smart Stick in direct sunlight or near any source of heat.
- Designed for children 2 and up.

90- DAY LIMITED WARRANTY

Tiger Electronics, Ltd. (TIGER) warrants to the original consumer purchaser of this product that the product will be free from defects in materials or workmanship for 90 days from the date of original purchase. This warranty does not cover damages resulting from accident, negligence, improper service or use or other causes not arising out of defects in materials or workmanship.

During this 90-day warranty period, the product will either be repaired or replaced (at TIGER'S option) without charge to the purchaser, when returned with proof of the date of purchase to either the dealer or to TIGER.

Product returned to TIGER without proof of the date of purchase or after the 90-day warranty period has expired, but prior to one year from the original date of purchase, will be repaired or replaced (at TIGER'S option) for a service fee of U.S. \$4.00. Payments must be by check or money order payable to Tiger Electronics, Ltd.

THE FOREGOING STATES THE PURCHASER'S SOLE AND EXCLUSIVE REMEDY FOR ANY BREACH OF WARRANTY WITH RESPECT TO THE PRODUCT.

All product returned must be shipped prepaid and insured for loss or damage to:

TIGER REPAIR DEPARTMENT
1000 N. Butterfield Road, Unit 1023,
Vernon Hills, IL 60061, U.S.A.

The product should be carefully packed in the original box or other packing materials sufficient to avoid damage during shipment. Include a complete written description of the defect, a check if product is beyond the 90-day warranty period, and your printed name, address and telephone number.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES AND NO OTHER REPRESENTATIONS OR CLAIMS OF ANY NATURE SHALL BE BINDING ON OR OBLIGATE TIGER IN ANY WAY. ANY IMPLIED WARRANTIES APPLICABLE TO THIS PRODUCT, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE NINETY (90) DAY PERIOD DESCRIBED ABOVE. IN NO EVENT WILL TIGER BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES RESULTING FROM POSSESSION, USE, OR MALFUNCTION OF THIS TIGER PRODUCT.

Some states do not allow limitations as to how long an implied warranty lasts and/or exclusions or limitations of incidental or consequential damages, so the above limitations and/or exclusions of liability may not apply to you. This warranty gives you specific rights, and you may also have other rights which vary from state to state.

For more information about Tiger Electronics, our products and special promotions, please visit our web site at: www.tiger toys.com

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>