

# Princess Dear Diary...

 
## The keepsake organizer!

### Contents


Opening your Princess Dear Diary	p.2
A Quick Look at Princess Dear Diary Icons	p.3
How to Change the Batteries Without Losing Your Stuff	p.4-6
The Functions You Will Use	p.7-8
Features:	
Clock/Alarm	p.9-10
Things to Remember	p.11
Calculator	p.12-13
Things to Do	p.14-15
Friends & Family	p.16-17
Password	p.18-19
Stuff	p.20
Troubleshooting	p.21
Cautions	p.22
Warranty	p.23

# Opening Your Princess Dear Diary


To open your Princess Dear Diary, turn the heart-shaped latch a quarter turn to the left and lift.

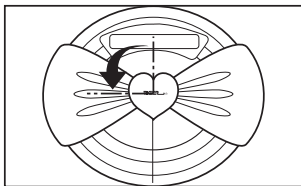

 Open the left-hand locket cover, then the right-hand locket cover and finally, the top locket cover. This will display all the buttons you will need to use your Princess Dear Diary.

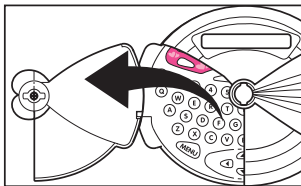

 Close the covers in the reverse order. To lock your Princess Dear Diary, turn the heart-shaped latch a quarter turn to the right.

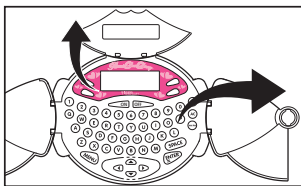

**NOTE:** The locket covers are designed to snap off the base. This is to help prevent breakage. If any of the covers snap off, just align the hinges and snap it back on.

# A Quick Look at Princess Dear Diary Icons



## **THINGS TO REMEMBER**

You can save dated messages of fifteen characters each.



## **CALCULATOR**

You use this for basic math functions.



## **THINGS TO DO**

You can save messages for an exact time and date.



## **FRIENDS & FAMILY**

You can save the names, phone numbers and birthdays of special people.



## **PASSWORD**

You can create a four character password to protect your files from nosey people.



## **STUFF**

You can save one list that holds up to fifty characters.



## **CLOCK/ALARM**

You can set and change the clock and the alarm can remind you of an important appointment.


# How to Change the Batteries Without Losing Your Stuff

The Princess Dear Diary has main batteries and a backup battery. The main batteries are two AAA batteries that must be installed before you can use Princess Dear Diary. The backup battery is a CR2032 “button cell” battery about the size of a nickel. It provides power to hold your information if the AAA batteries discharge completely.


Never remove all of the batteries at the same time or all of your information will be erased!

## Replacing the Main Batteries


Remove the screw from the battery compartment door using a phillips® screwdriver.

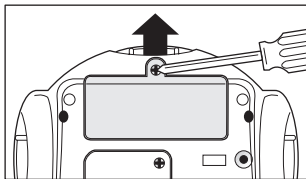


Lift and remove the battery compartment door.

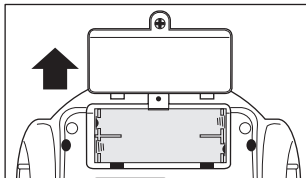

Insert the batteries, making sure to align the “+” and “-” signs.

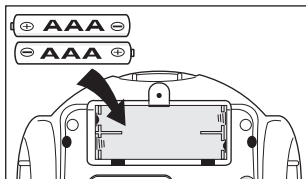

Replace the battery compartment door and screw.

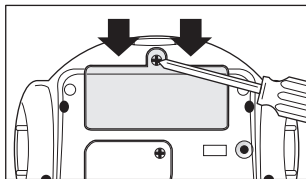

#### TO ENSURE PROPER FUNCTION :


- DO NOT MIX OLD AND NEW BATTERIES
- DO NOT MIX ALKALINE, STANDARD OR RECHARGEABLE BATTERIES
- BATTERY INSTALLATION SHOULD BE DONE BY AN ADULT
- NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED
- RECHARGEABLE BATTERIES ARE TO BE REMOVED FROM THE TOY BEFORE BEING CHARGED (IF REMOVABLE)
- RECHARGEABLE BATTERIES ARE ONLY TO BE CHARGED UNDER ADULT SUPERVISION
- ONLY BATTERIES OF THE SAME OR EQUIVALENT TYPE AS RECOMMENDED ARE TO BE USED
- BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY
- EXHAUSTED BATTERIES ARE TO BE REMOVED FROM THE TOY
- THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED




## Replacing the Backup Battery

Note: This battery was installed at the factory and, with normal use, should not need changing for 24 months after you begin using your Princess Dear Diary.


Using a Phillips® screwdriver, remove the screw on the small battery compartment door. Lift and remove the battery compartment door.

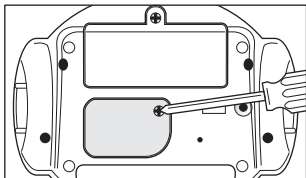

 Remove the CR2032 button cell battery and replace it with one of the same type. The “+” should be facing you.

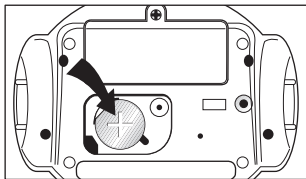

 Replace the battery compartment door and screw.

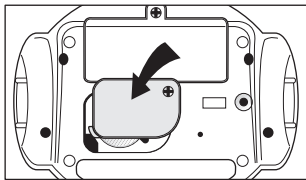

# The Functions You Will Use



Press the **ON** button and a clock face appears on the screen. **NOTE:** The diary will NOT operate unless the **ON** button is pressed.

Press **EDIT** when you want to change information that is in your Princess Dear Diary and is showing on the display. You can add or remove information using the keyboard.

Press **DELETE** when you want to erase a character at the underline cursor or erase an item from your **THINGS TO DO, THINGS TO REMEMBER, FRIENDS & FAMILY** or **STUFF** lists.

Press **SEARCH** when you have a list in Princess Dear Diary and you want to look through it. If you press a **letter, followed by SEARCH**, you will see the first word that begins with that letter. (Very useful for finding Zack's number in the telephone directory.) If you press **SEARCH** in the **THINGS TO REMEMBER** mode, you will see your list in date order.

Press **QUIT** to stop editing or reading the current list and backup one level closer to the main menu.

Press **MENU** to jump right to the main menu.

Press the **UP, DOWN, LEFT** and **RIGHT ARROWS** to make the calculator divide, add, multiply and subtract. The **ARROW** keys are marked with the associated calculator function.

Press **AC** or **SPACE** to clear the display and memory in the calculator.

Press **ENTER** to make a selection when Princess Dear Diary asks you to. In the CALCULATOR mode, use **ENTER** for the equal sign.

 
Press **ON** to access the CLOCK/ALARM mode. Press **ENTER** and the entire menu is shown.

Press **OFF** to turn off menu icons.

Note: The clock, day and date will be on the screen for quick reference when you are not in a function mode.

## Reset Operation :

- By pressing the reset button on the bottom of the unit, you can delete all the data previously input. A message on the screen will ask you, **CLEARALL?Y/N**. By pressing **Y**(yes) all data will be deleted, **N**(no) will return you to the clock display screen.

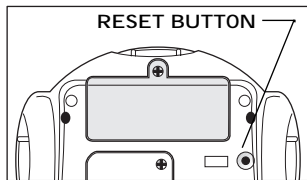

- Be sure to press reset button and clear all data before you use PRINCESS DEAR DIARY for the first time.



## Clock/Alarm

Press **MENU** to see the icon.

Use the **LEFT** or **RIGHT ARROW** followed by **ENTER** to select the clock icon. You will know when you are on that icon because it will be flashing.



Press **EDIT**, the screen will show CLOCK/ALARM  
Press "C" for clock.



Enter the date using keys 0-9. Use two digits for the month, two digits for the day and the last two digits of the year. Press **ENTER** when date is correct.



Enter the time using keys 0-9. Use two digits for the hour and two digits for the minute. Press **AM/PM** to activate AM or PM mode. Press **ENTER** when time is correct.



To access the **ALARM** function, go back to the screen that shows CLOCK/ALARM and press "A" for alarm. Enter the alarm time using keys 0-9. Press **ENTER** when alarm is correct. Press AM/PM to activate AM or PM mode.



To activate the alarm, select ON/OFF using the **ARROW** keys. Press **ENTER** to save the alarm.



**Note:** When the alarm rings, press any key to turn it off.

## Things to Remember




Press **MENU** to see the icon.

Use the **LEFT** or **RIGHT ARROW** followed by **ENTER** to select the THINGS TO REMEMBER icon.




Enter the date to remember using keys 0-9. Press **ENTER** when date is correct.

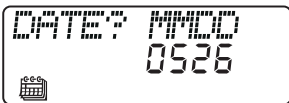

Type your message. Press **ENTER** when you are finished with the message. To add more message, repeat these steps as many times as needed to enter all your messages.



 To look at your list, press **SEARCH** or the **DOWN ARROW**. The first date and message appears.



Press the **DOWN ARROW** to scroll through your list. The list will sort automatically placing the earliest date first.

Press **QUIT** or **MENU** to return to the Main Screen.


## Calculator




Press **MENU** to see the icons.



Use the **LEFT** or **RIGHT ARROW** followed by **ENTER** to select the **CALCULATOR** icon.

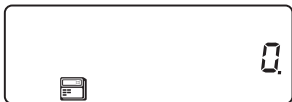

Use the number keys and calculator function (**ARROW**) keys to enter your problem.

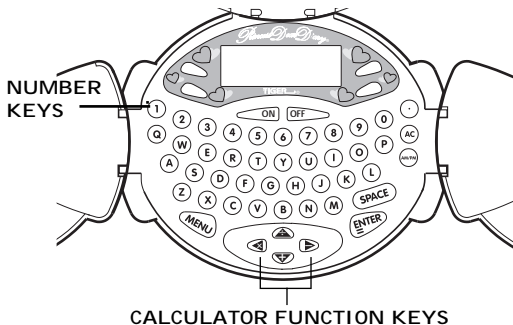

Use **ENTER** as the equal sign.  
Use **SPACE** or **AC** to clear memory.

For example :

$600 \div (\text{▲}) 25 = (\text{ENTER})$

Display shows : 24

Next example : clear memory (**AC** or **SPACE**)

$13 + (\text{▼}) 11 = (\text{ENTER})$

Display shows : 24

continuing the example with the last result:

$\times (\text{✕}) 25 = (\text{ENTER})$

Display shows : 600

Press **QUIT** or **MENU** to return to the Main Screen.

-

## Things to Do

Press **MENU** to see the icons.

 
 
Use the **LEFT** or **RIGHT ARROW** followed by **ENTER** to select the THINGS TO DO icon.

Enter the date to remember using keys 0-9. Press **ENTER** when the date is correct.


Enter the time to remember. Press **ENTER** when the time is correct. Press **AM/PM** to activate AM or PM mode.

Type your message. Press **ENTER** when you are finished. To continue entering items to list, repeat these steps as often as needed.

To look at your list, press **SEARCH** or the **DOWN ARROW**. The first date and time appears.



Press the **DOWN ARROW** as many times as needed to see your messages.

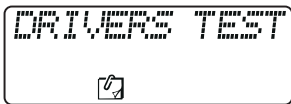

Press **DELETE** to erase the message showing on the display.

Press **QUIT** or **MENU** to return to the Main Screen.

## Friends & Family

Press **MENU** to see the icons.



Use the **LEFT** or **RIGHT ARROW** followed by **ENTER** to select the **FRIENDS & FAMILY** icon.



Type the name of the first person on your list. Press **ENTER**. Each name can be up to 12 characters long, including spaces.



Enter the the person's telephone number using keys 0-9, " - " and space. Press **ENTER**.



Enter the person's birthday using keys 0-9. Press **ENTER**.



To add more **FRIENDS & FAMILY** repeat these steps as often as needed.



 
To review your list, press **SEARCH** or the **DOWN ARROW**. Press the **DOWN ARROW** to scroll through your list. The person's name and phone number will appear first, then the person's name and birthday.



Princess Dear Diary will put your **FRIENDS & FAMILY** in alphabetical order based on the first name typed. **EXAMPLE:** If you enter Amy Jones and Susie Bobbitt, Amy Jones will appear first.



A faster way to find a person is to press the first letter (or letters) in the name, then press **SEARCH**.



Press **QUIT** or **MENU** to return to the Main Screen.

## Password


Press **MENU** to see the icons.




Use the **LEFT** or **RIGHT ARROW** followed by **ENTER** to select the **PASSWORD** icon.




Enter any four characters that you want to be your password. Press **ENTER**.

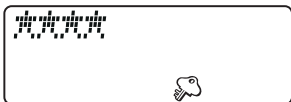

Princess Dear Diary will ask you to enter your password again to make sure it has the correct one. Retype your password and press **ENTER**.

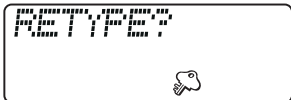

(Your actual password will not appear on the screen. This is so that it stays a secret.)

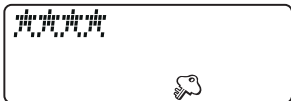

Decide if you want your password on or off, or if you want to edit (change) it. If you want it **ON**, press **ENTER**. If you want it **OFF**, use the **RIGHT ARROW** to move the cursor to **OFF** and press **ENTER**.



ON/OFF/EDIT

If you want to EDIT it, use the **RIGHT ARROW** to move the cursor to EDIT and press **ENTER**.



CHANGE TO

Princess Dear Diary will display CHANGE TO.

Type your new password. then press **ENTER**. As before, Princess Dear Diary will ask you to retype your password to make sure it is correct. Type your password again and press **ENTER** when you are finished.

Your password will protect your privacy, preventing other people from scrolling through your Princess Dear Diary.

**NOTE: DON'T FORGET YOUR PASSWORD. IF YOU DO, YOU WILL NOT BE ABLE TO ACCESS ANY OF YOUR FILES (YOU MAY WANT TO WRITE IT DOWN IN A SPECIAL PLACE).**

Press **QUIT** or **MENU** to return to the Main Screen.

 
## Stuff



Press **MENU** to see the icons.



Use the **LEFT** or **RIGHT ARROW** followed by **ENTER** to select the STUFF icon.



This file has room for fifty (50) characters in one continuous line. To type as much stuff as you can in fifty characters, use abbreviations. Press **ENTER** when you are finished.

To see your STUFF list, press the **DOWN ARROW**. Press the **RIGHT ARROW** to scroll through the line. Press the **LEFT ARROW** to scroll back.



Press **QUIT** or **MENU** to return to the Main Screen.

# Troubleshooting

## SYMPTOM

## SOLUTION

Unit will not function after initial battery insertion.

RESET button on the back of the unit **MUST** be pressed before using for the first time.

Unit freezes or will not turn off.

Press the RESET button on the back of the unit.

The screen becomes dim, cursor movement slows or functions do not work consistently.

“AAA” batteries require replacement. Under normal use, “AAA” batteries may need replacement every 2-3 weeks. The backup button cell battery should last at least 2 years.

# Cautions



High temperature will destroy the unit. Do not leave unit in direct sunlight.



Do not press the liquid crystal display and avoid heavy shock or the display may fail.



Do not use a pencil or pin to press the RESET button. Use a ball-point pen.



Clean only with a piece of soft dry cloth.

# 90-DAY LIMITED WARRANTY

Tiger Electronics, Ltd. (Tiger) warrants to the original consumer purchaser of this product that the product will be free from defects in materials or workmanship for 90 days from the date of original purchase. This warranty does not cover damages resulting from accident, negligence, improper service or use or other causes not arising out of defects in materials or workmanship.

During this 90-day warranty period, the product will either be repaired or replaced (at Tiger's option) without charge to the purchaser, when returned with proof of the date of purchase to either the dealer or to Tiger.

Product returned to Tiger without proof of the date of purchase or after the 90-day warranty period has expired, but prior to one year from the original date of purchase, will be repaired or replaced (at Tiger's option) for a service fee of U.S.\$10.00. Payments must be by check or money order payable to Tiger Electronics, Ltd.

**The foregoing states the purchaser's sole and exclusive remedy for any breach of warranty with respect to the product.**

 
All product returned must be shipped prepaid and insured for loss or damage to:  
Tiger Repair Department  
1000 N. Butterfield Road, Unit 1023  
Vernon Hills, IL 60061, U.S.A.

The product should be carefully packed in the original box or other packing materials sufficient to avoid damage during shipment. Include a complete written description of the defect, a check if product is beyond the 90-day warranty period, and your printed name, address and telephone number.

**THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES AND NO OTHER REPRESENTATIONS OR CLAIMS OF ANY NATURE SHALL BE BINDING ON OR OBLIGATE TIGER IN ANY WAY. ANY IMPLIED WARRANTIES APPLICABLE TO THIS PRODUCT, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE NINETY (90) DAY PERIOD DESCRIBED ABOVE. IN NO EVENT WILL TIGER BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES RESULTING FROM POSSESSION, USE, OR MALFUNCTION OF THIS TIGER PRODUCT.**

Some states do not allow limitations as to how long an implied warranty lasts and/or exclusions or limitations of incidental or consequential damages, so the above limitations and/or exclusions of liability may not apply to you. This warranty gives you specific rights, and you may also have other rights which vary from state to state.

**For more information about Tiger Electronics, our products and special promotions, please visit our Web Site at: [www.tigertoys.com](http://www.tigertoys.com)**

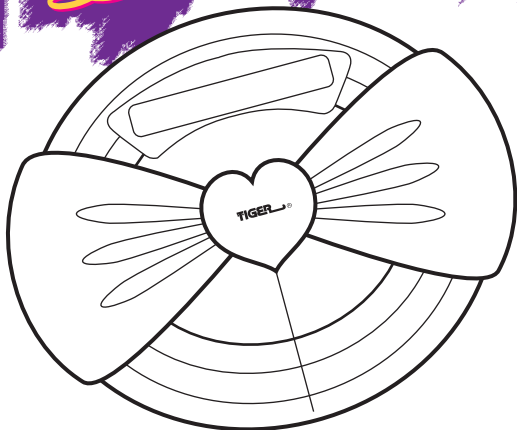

## INSTRUCTIONS

Model: 71-554

 **WARNING:**  
**CHOKING HAZARD - SMALL PARTS**  
**NOT FOR CHILDREN UNDER 3 YEARS**



**TIGER**  
**ELECTRONICS, LTD.**

®, TM & © 1999 Tiger Electronics, Ltd.  
980 Woodlands Parkway, Vernon Hills, Illinois 60061, U.S.A.  
[www.tigertoys.com](http://www.tigertoys.com)  
PRINTED IN CHINA

715540001WTI-03

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>