

! CAUTION: TO AVOID BATTERY LEAKAGE

1. Be sure to insert the batteries correctly and always follow the toy and battery manufacturers' instructions;
2. Do not mix old and new batteries or alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries;
3. Always remove weak or dead batteries from the product.

IMPORTANT: BATTERY INFORMATION

Please retain this information for future reference.

Batteries should be replaced by an adult.

! CAUTION:

1. Always follow the instructions carefully. Use only batteries specified and be sure to insert item correctly by matching the + and - polarity markings.
2. Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
3. Remove exhausted or dead batteries from the product.
4. Remove batteries if product is not to be played with for a long time.
5. Do not short circuit the supply terminals.
6. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.
7. RECHARGEABLE BATTERIES: Do not mix these with any other types of battery. Always remove from the product before recharging. Recharge batteries under adult supervision. **DO NOT RECHARGE OTHER TYPES OF BATTERIES.**

FCC STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Consult the dealer or an experienced radio/TV technician for help.



© 2005 Hasbro. All Rights Reserved.
TM & © denote U.S. Trademarks.

 
06552 P/N 6505420000

Download from www.Somanuals.com. All Manuals Search And Download.

**BIRTH +
06552**

PLAYSKOOL

Lullaby
Gloworm™
Lights the way to dreams!

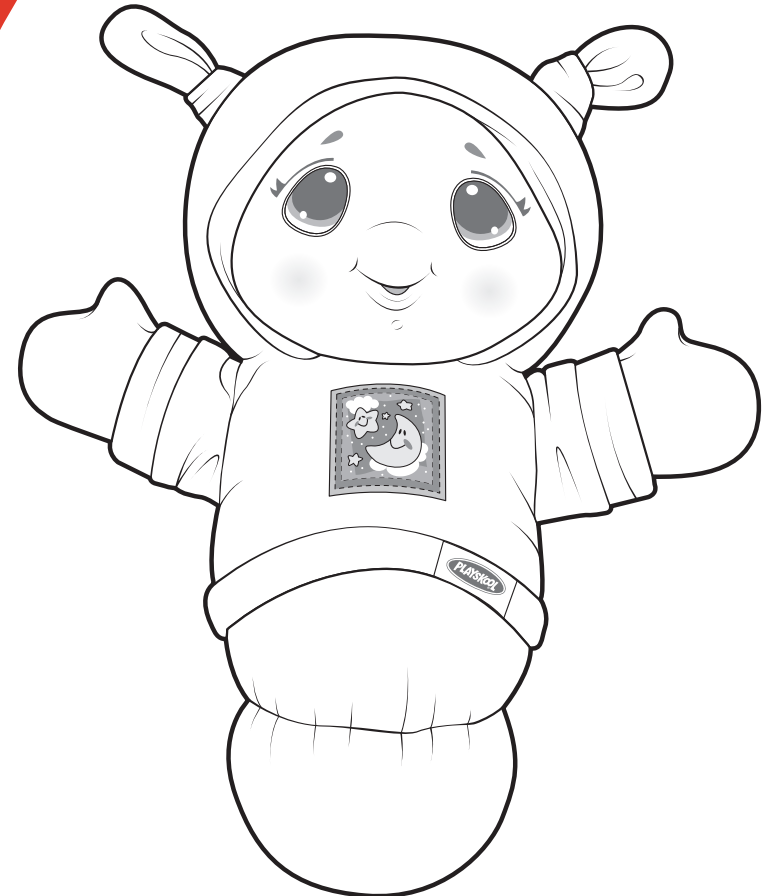


Thank you for purchasing this lovable friend!

Batteries included. Replace with 3 x 1.5V "AA" or R6 size batteries. Alkaline batteries recommended.

Phillips/cross head screwdriver (not included) needed to replace batteries.

TO USE

 
NOTE: This product is shipped in "demo" mode. Open seam on back and slide switch to "play" for full use at home. If GLOWORM toy electronics accidentally halt, remove batteries for 10 seconds to reset the electronics. Follow the "To Replace Batteries" instructions for information about removing and replacing batteries.

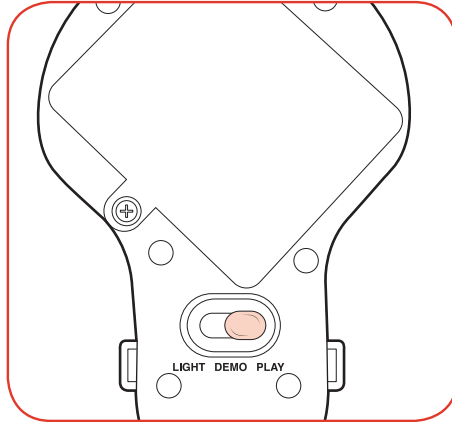

PLAY FEATURES

Your child's LULLABY GLOWORM friend may ease the transition to bedtime with a friendly, glowing face and soothing lullaby songs.

 
1. Gently press the patch on your lovable friend for a glowing light and to start music. Each time your GLOWORM friend is squeezed, he will play 1 of 6 lullaby songs.
2. For quiet time, move switch to "light" so that your GLOWORM friend can light up without making a sound.

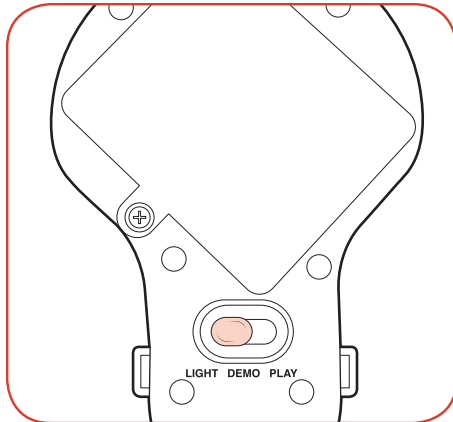

WASHING INSTRUCTIONS


(DO NOT WASH TOY WITH ELECTRONIC UNIT INSIDE!)

 Open back, untie laces and remove electronic unit. Place the toy in pillow case and tie end closed. Machine wash in cold water, gentle cycle, mild detergent, **NO BLEACH**. Tumble dry in pillow case on low heat setting. After the toy is dry, distribute filling evenly throughout body. (During washing, filling may bunch up.) Place electronic unit in the toy with the bulb toward the face and the activation button facing forward. Fit lace through tab on each side of unit and tie to other lace. Close seam.

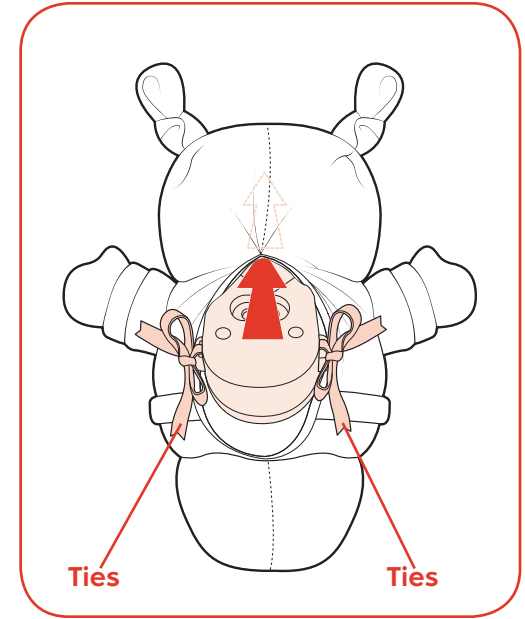

TO REPLACE BATTERIES

 Open seam on back to access electronic unit. Using a Phillips/cross head screwdriver (not included), loosen screw in battery cover (screw will remain attached to cover). Remove old batteries and insert 3 fresh 1.5V "AA" or R6 size batteries into battery compartment. Alkaline batteries recommended. Replace cover, retighten screw, and put electronic unit back inside with the light and button facing forward. Tie unit into place and close seam to conceal electronic unit.

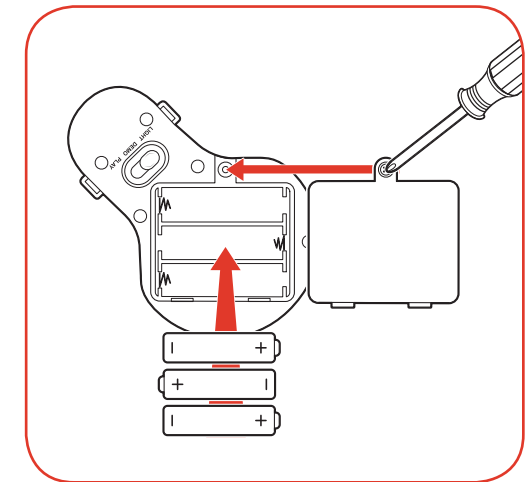

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>