

SPIDER-MAN™


AGES 5+
69379/69366 Asst.

TRIPLE FLINGER



CAUTION: Do not aim at eyes or face.
TO AVOID INJURY: Use only webs designed for this product. Do not modify webs or web blaster.

Thanks for purchasing the SPIDER-MAN® Triple Flinger.
Please read and retain these instructions.

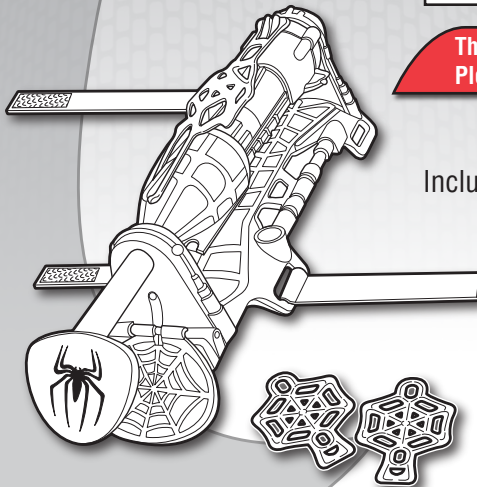

Includes: Web Flinger and 3 Webs



Not suitable for children
under 3 years because of
small parts — choking hazard.




MARVEL®

MARVEL and all related character names and the distinctive likenesses thereof:
TM & © 2007 Marvel Characters, Inc. All rights reserved. This action figure is
produced under license from Marvel Characters, Inc.
www.marvel.com
®* and/or TM* & © 2007 Hasbro. All Rights Reserved.
TM & © denote U.S. Trademarks.


P/N: 6747830000

Triple Flinger Assembly & Use:


1 Hook front of Web onto flinger as shown.

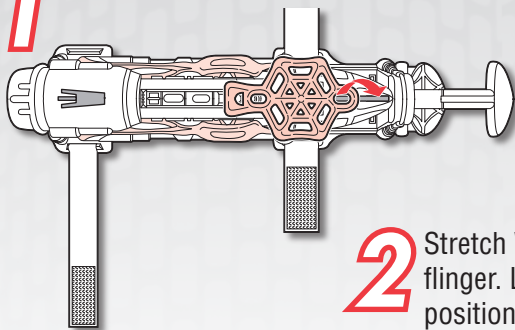


2 Stretch Web and hook other end onto flinger. Load three webs onto the three positions on the launcher.

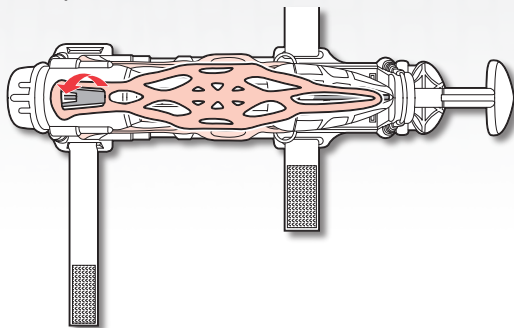

3 Place flinger on forearm and fasten touch fastener straps.

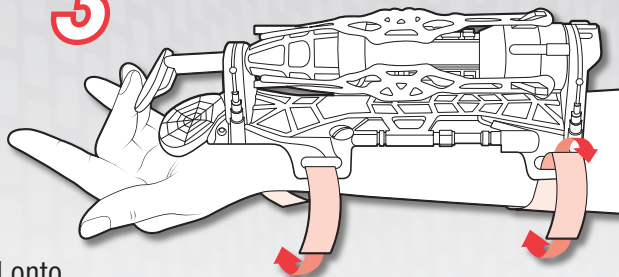

4 Press trigger with index finger to fire.

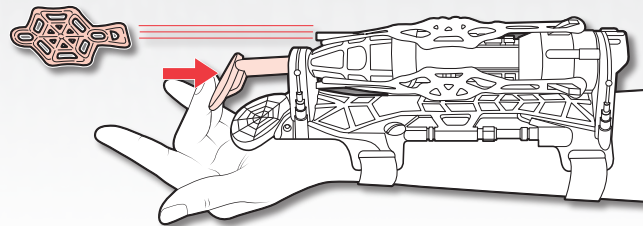

Note: Do not leave webs stretched or loaded on blaster when not playing.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>