

AGES 3+



# Musical Boom Box

Thank you for  
purchasing this My  
Little Pony® toy!

 


**x3**  
**BATTERIES**  
**INCLUDED**

Replace with 3 x 1.5V "AA"  
or LR6 size alkaline batteries.  
Phillips/cross head  
screwdriver (not included)  
needed to replace batteries.



63642/62914 Asst.

## GETTING TO KNOW YOUR MUSIC PLAYER

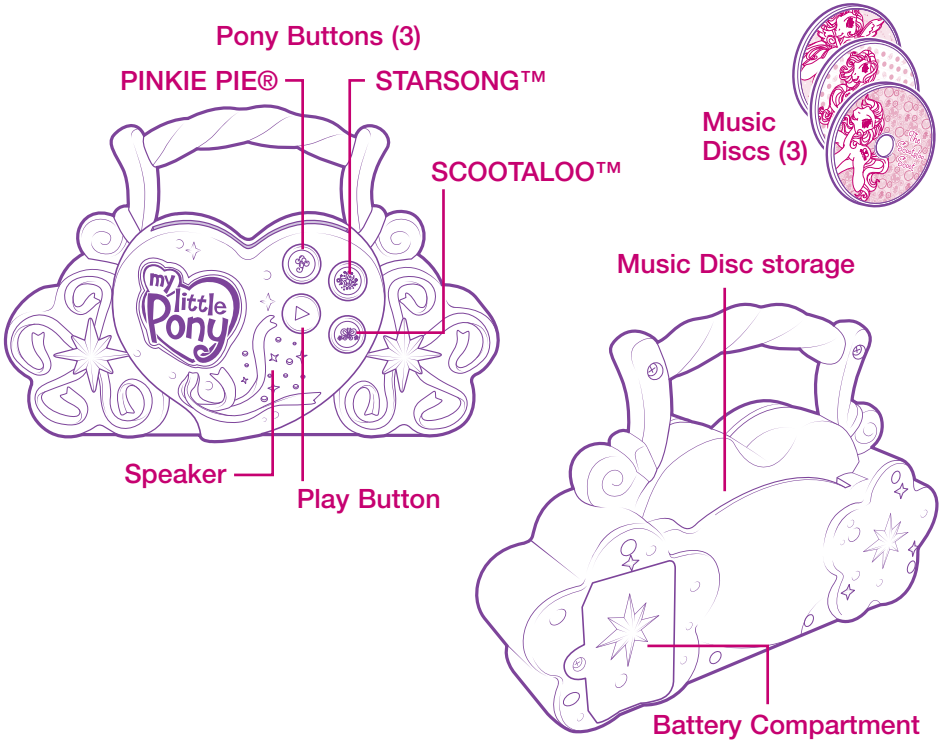

## HOW TO PLAY

  1. Insert a disc into the player with the picture side facing front.
  2. Press the PLAY button or the matching Pony button to play the song. (If you press another pony's button, you'll hear that pony's name.)
  3. Press the PLAY button to stop the song.
  4. To remove the disc from the player, carefully pull it upward.
- If you press a pony button without inserting a disc, you'll hear the pony's song.
  - Store the discs in the rear compartment.

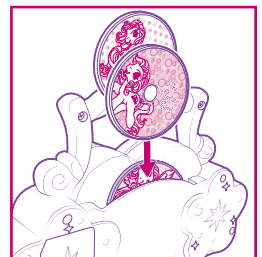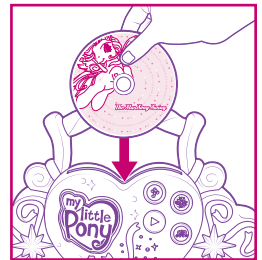

## SONG LYRICS



### Sing along with PINKIE PIE!

Pink cotton candy  
And everything dandy  
Who am I?  
I'm PINKIE PIE!

If you're planning a party  
I'll help you get started  
Who am I?  
I'm PINKIE PIE!

A house of balloons,  
Friendship in bloom,  
I'm ready for anything new!  
I'm PINKIE PIE!



### Sing along with STARSONG!

Hey, everybody! I'm  
STARSONG!  
I'm singin' it  
Spotlight  
I'm wingin' it!

Come on, let's go!  
Let's put on a show!  
I want a part of it!  
I'm going to star in it!

STARSONG!  
Inviting you to join me  
And do what you do!

Singing a song,  
Or just dancing along,  
I'm so excited!  
I'm STARSONG!



### Sing along with SCOOTALOO!

Hit it!  
Glidin' on my scooter,  
Always on the go!  
Riding for adventure,  
Never take it slow!  
Look out, I'm comin' through!  
I'm SCOOTALOO! SCOOTALOO!

 
Well, I'm keepin' real busy  
Sometimes it makes me dizzy  
Look out, I'm comin' through!  
I'm SCOOTALOO! Yee-ha!

### MY LITTLE PONY® THEME SONG

My Little Pony, My Little Pony  
Here with you the fun never ends  
My Little Pony, Beautiful Pony  
Won't you come out and play!

## TO REPLACE BATTERIES

Using a Phillips/cross head screwdriver, loosen screw in battery compartment cover (screw stays attached to cover). Insert 3 x 1.5V "AA" or LR6 size alkaline batteries (not included). Replace cover and tighten screw.

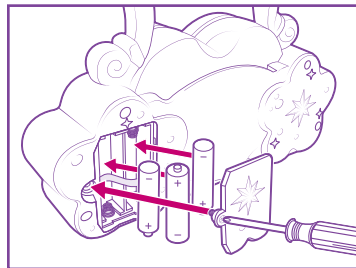

### ⚠ CAUTION: TO AVOID BATTERY LEAKAGE

1. Be sure to insert the batteries correctly and always follow the toy and battery manufacturers' instructions;
2. Do not mix old batteries and new batteries or alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries;
3. Always remove weak or dead batteries from the product.

# IMPORTANT: BATTERY INFORMATION

Please retain this information for future reference.

Batteries should be replaced by an adult.



## CAUTION:

1. Always follow the instructions carefully. Use only batteries specified and be sure to insert item correctly by matching the + and – polarity markings.
2. Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
3. Remove exhausted or dead batteries from the product.
4. Remove batteries if product is not to be played with for a long time.
5. Do not short-circuit the supply terminals.
6. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reinsert batteries if necessary.
7. **RECHARGEABLE BATTERIES:** Do not mix these with any other types of batteries. Always remove from the product before recharging. Recharge batteries under adult supervision. **DO NOT RECHARGE OTHER TYPES OF BATTERIES.**

### FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Product and colors may vary.

© 2007 Hasbro. All Rights Reserved.

TM & ® denote U.S. Trademarks.

63642/62914 Asst.

PN 6744610000

Download from [www.Somanuals.com](http://www.Somanuals.com). All Manuals Search And Download.



Questions? Call 1-800-327-8264

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>