


STAR WARS EPISODE I DARTH MAUL™ COMPACT PHONE

INSTRUCTION


The **Darth Maul Compact Phone** is a fully functional phone that features the face of **Darth Maul** when in the closed position and, when opened reveals the true master of the dark side, **Darth Sidious**.

TELEPHONE CONTROLS AND FEATURES

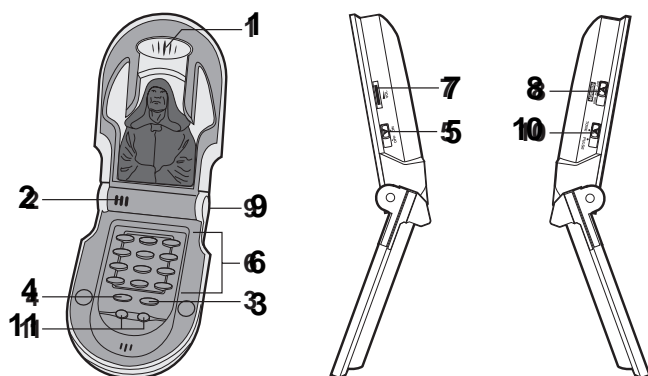


- 1. EAR PIECE/SPEAKER**
- 2. MICROPHONE**
- 3. REDIAL BUTTON**
- redials the last number called
- 4. FLASH BUTTON**
- lets you retrieve a dial tone after ending a call
- 5. TALK ON/OFF SWITCH**
- turns phone on and off
- 6. DIALING KEYS**
- 7. VOLUME CONTROL**
- controls the reception volume
- 8. RINGER VOLUME SELECTOR**
- controls ringer volume with three settings: **OFF**, **LOW** or **HIGH**
- 9. PHONE CORD CONNECTION**
- 10. TONE/PULSE**
- use to select the tone or pulse dialing method.
- 11. SOUND EFFECT BUTTONS**

INSTALLATION

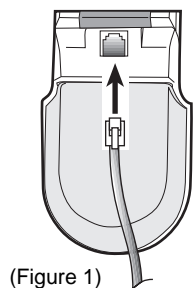

(Figure 1)

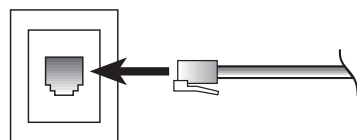

(Figure 2)

Line Cord Connection

With a modular telephone system, connect the 10 feet of straight telephone line cord included with the phone to the modular jack located on the bottom of the handset (Fig. 1). Insert the other end of the cord into a modular wall jack (Fig. 2). Make sure all plugs snap firmly in place.

Receiving a Phone Call

When the phone rings, pick up the handset and open the phone. Slide the switch to **ON** (talk) position and it will work like any basic telephone. Slide the switch to **OFF** to "hang-up" the telephone when you have completed your conversation.

Dialing a Call

Pick up the handset, slide the talk switch to **ON** (talk), and wait for a dial tone. Press the numeric keypad (dialing keys) for the number you want.

KEY FEATURES

Sound Effects

There are two sound effects buttons that activate **Darth Maul** and **Darth Sidious** phrases from the movie. Push a button anytime when you want to insert one into your conversation.

Redial

If the line is busy when you call someone, or you want to call someone you just called, there is no need to dial the number again manually. When pressed, the **REDIAL** button automatically dials the previous number. Slide the talk switch to **ON**. When you hear a dial tone, press **REDIAL** instead of dialing the number.

Ringer Volume Selector

The **Darth Maul Phone** features a harmonic ringer which can be adjusted to a loud (**HIGH**) or soft (**LOW**) sound level. When you do not want to be disturbed by incoming calls, slide the switch to the **OFF** position. You can still make outgoing calls without being disturbed by incoming calls.

Flash

The **FLASH** button is used to switch from one call to another call if you subscribe to call waiting with your phone service (this service is provided by your local phone company and is not a feature of the phone itself). To switch from one call to another, briefly press **FLASH** and then release the button. You can switch back to the first call in the same manner.

Volume Control

Your **Darth Maul Compact Phone** features a dial control to regulate the volume of the reception. If you are having trouble hearing the person you are talking to, increase the volume until it is at a desirable level. If the reception is too loud, decrease the volume level until it is at a desired level.

TROUBLESHOOTING

No Dial Tone

- Check all modular plug connections to make sure they are securely connected.
- Problem with the wiring. Try another phone jack. If the phone works on another jack, you may have a problem with your wiring. Contact your local phone company.

Redial Function Does Not Operate

- Check if the last number you dialed was the number you intended to call with the redial feature.

Phone Does Not Ring

- Check to see if the ringer switch is set correctly. Make sure **RINGER VOLUME SELECTOR** is in either the **LOW** or **HIGH** position.
- Too many telephones may be installed on the same line. Contact your local telephone company to determine the maximum number of extensions for your calling area.

Sound Volume Is Too Low

- Check the **VOLUME CONTROL DIAL** to make sure it is not turned down too low.
- Another extension may be off the hook. Hang up extension.

IMPORTANT SAFETY INSTRUCTIONS

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:

Read and understand all instructions.

Follow all warnings and instructions marked on the product.

Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.

Do not use this product near water, for example, near a bathtub, wash bowl, kitchen sink or laundry tub, in a wet basement, or near a swimming pool.

Do not place this product on an unstable cart, stand, or table. The product may fall causing serious damage to the product.

Slots and openings in the cabinet and the back or bottom are provided for ventilation, to protect from overheating. These openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should never be placed near or over a radiator or heat register. This product should not be placed in a built-in installation unless proper ventilation is provided.

Never push objects of any kind into this product through cabinet slots as they may touch dangerous voltage points or short out parts that could result in a risk of fire or electric shock. Never spill liquid of any kind on the product.

To reduce the risk of electric shock, do not disassemble this product, but take it to a qualified service person when some service or repair work is required. Opening or removing covers may expose you to dangerous voltages or other risks. Incorrect re-assembly can cause electric shock when the appliance is subsequently used.

Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions.

- When the power supply cord is damaged or frayed.
- If liquid has been spilled into the product.
- If the product has been exposed to rain or water.
- If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions, because improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to normal operation.
- If the product has been dropped or the cabinet has been damaged.
- If the product exhibits a distinct change in performance.
- Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a risk of remote electric shock from lightning.
- Do not use the telephone to report a gas leak in the vicinity of the leak.

SAVE THESE INSTRUCTIONS

FCC REQUIREMENTS

This equipment complies with Part 68 of the FCC Rules. On the base unit of this equipment is a label that contains, among other information, the FCC Registration Number and Ringer Equivalence Number (REN) for this equipment. If requested, this information must be given to the telephone company.

The REN is useful to determine the quantity of devices you may connect to your telephone line and still have all of those devices ring when your telephone number is called. In most, but not all areas, the sum of the REN's of all devices connected to one line should not exceed five (5.0). To be certain of the number of devices you may connect to your line, as determined by the REN, you should contact your local telephone company to determine the maximum REN for your calling area.

If your equipment causes harm to the telephone network the telephone network, the telephone company may discontinue your service temporarily. If possible, they will notify you in advance. But if advance notice isn't practical, you will be notified as soon as possible. You will be informed of your right to file a complaint with the FCC. Your telephone company may make changes in its facilities, equipment, operations or procedures that could effect the proper functioning of your equipment. If they do, you will be notified in advance to give you an opportunity to maintain uninterrupted telephone service.

The telephone company may ask that you disconnect this equipment from the network until the problem has been corrected or until you are sure that the equipment is not malfunctioning.

This equipment may not be used on coin service provided by the telephone company. Connection to party lines is subject to state tariffs.

If you experience trouble with this telephone equipment, please contact the following address and phone number for information on obtaining service or repairs.

Company: Tiger Electronics, Ltd., Repair Dept.
Address: 980 Woodlands Parkway
Vernon Hills, IL 60061, U.S.A.
Tel. No.: 847-913-8100

This equipment is hearing aid compatible.

90-DAY LIMITED WARRANTY

Tiger Electronics, Ltd. (Tiger), warrants to the original consumer purchaser of this product that the product will be free of defects in material or workmanship for 90 days from the date for original purchase. This warranty does not cover damages resulting from accident, negligence, improper service or use or other causes not arising out of defects in materials or workmanship.

During this 90-day warranty period, the product will either be repaired or replace (at Tiger's option) without charge to the purchaser, when returned with proof of the date of purchase to either the dealer or to Tiger.

Product returned to Tiger without proof of date of purchase or after the 90-day warranty period has expired, but prior to one year from the original date or purchase, will be repaired or replace (at Tiger's option) for a service fee

of \$18.00. Payment must be by check or money order payable to Tiger Electronics, Ltd.

The foregoing states the purchaser's sole and exclusive remedy for any breach of warranty with respect to the product.

All products returned must be shipped prepaid and insured for loss or damage to:

Tiger Electronics, Ltd.
980 Woodlands Parkway
Vernon Hills, Illinois 60061 U.S.A.

The product should be carefully packed in the original box or other packing materials sufficient to avoid damage during shipment. Include a complete written description of the defect, a check if product is beyond the 90-day warranty period, and your printed name, address and telephone number.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES AND NO OTHER REPRESENTATIONS OR CLAIMS OF ANY NATURE SHALL BE BINDING ON OR OBLIGATE TIGER IN ANY WAY. ANY IMPLIED WARRANTIES APPLICABLE TO THIS PRODUCT, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE NINETY (90) DAY PERIOD DESCRIBED ABOVE. IN NO EVENT WILL TIGER BE LIABLE FOR ANY SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM POSSESSION, USE, OR MALFUNCTION OF THIS TIGER PRODUCT.

Some states do not allow limitations as to how long an implied warranty lasts and/or exclusions or limitations of incidental or consequential damages, so the above limitations and/or exclusions of liability may not apply to you. This warranty gives you specific rights, and you may also have other rights which vary from state to state.

For more information about Tiger Electronics, our products and special promotions, please visit our web site at www.tigertoys.com.

© Lucasfilm Ltd. & TM. All rights reserved.
Used under authorization.

®, TM, & © 1999 Tiger Electronics, Ltd.
All rights reserved.
980 Woodlands Parkway,
Vernon Hills, Illinois 60061 U.S.A.
Visit the Tiger Electronics, Ltd. web site: <http://www.tigertoys.com>

Printed in China

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>