



If you have any questions regarding our products, call our toll-free consumer customer service line: **800.643.3522**

Visit our web page: www.hatterashammocks.com

Single Cotton Rope Swing

Congratulations on your purchase of the Single Cotton Rope Swing. We believe that you will find it a product of unsurpassed quality and durability.

 
 
The box should contain:

Single Cotton Rope Swing (chain attached)

1 - "S" Hook

1 - Steel Hanging bracket


2 - 5/16 x 2" Hex Head Lag Bolts

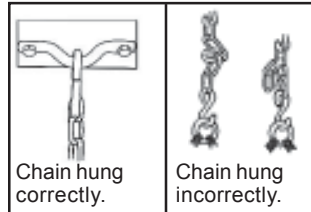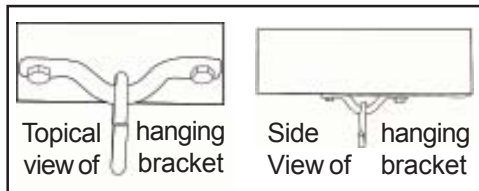

Hanging Chain

"S" Hooks

 Swing Chain

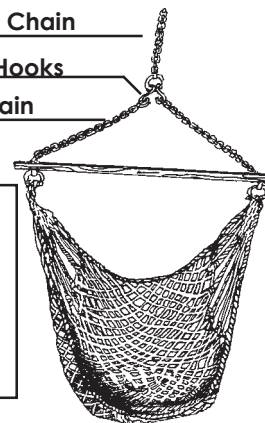

Assembly Instructions:

NOTE: During shipping, the hanging chain may come apart from the swing chains. If this has occurred, lay the swing down and extend the swing chains from each end of the spreader bar toward a center point. Place the hanging chain above the swing. Attach the hanging chain to the swing chains using the attached "S hooks."

Hanging Instructions:

1. Select a location for your swing that is 6 1/2 feet to 8 1/2 feet above ground or floor level and will support a maximum of 350 lbs. Position hanging system bracket along the center line of the beam on which you wish to hang your swing. Make sure beam has no knots or cracks or signs of rot.

CAUTION:

A. Mounting Hardware included is safety rated ONLY for load bearing structures. The steel hanging bracket is not safety tested and approved for concrete surfaces, steel or plastic construction, particle board and the like material, or vinyl siding.

B. The steel hanging bracket is to make contact with mounting surface. Structural support unit must accommodate maximum safe weight limit of 350 pounds.

C. Prior to each use of your swing, inspect the ropes and other materials in your swing including but not limited to: the mounting hardware, installation points, and objects supporting your swing for signs of weakness or wear. Do not use if there are any signs that the material or supports are not in proper condition.

IF YOU HAVE ANY QUESTIONS CONCERNING INSTALLATION, PLEASE CONSULT A BUILDING EXPERT. THE HAMMOCKSOURCE IS NOT RESPONSIBLE FOR IMPROPER INSTALLATION.

2. Mark drill holes on center line with a pencil where the bolt holes are located on the bracket and expose bare wood.

3. Drill holes where indicated by marked spots with a 1/4" drill, approximately 2" deep.

4. Position bracket with bracket holes over drill holes and start bolts by hand. Tighten with wrench or socket. Do not overtighten bolts. Bolts will strip the wood, thus causing a reduction in load capacity.

5. Affix "S" hook to hanging bracket. Hook the chain on the swing to the bottom of "S" hook. Adjust the

height of the swing with the chain for maximum comfort. When sitting in the swing, your feet should touch the ground with knees slightly bent. Note: The first time you hang the swing, it may seem too high off the ground, however; the ropes will stretch, bringing the swing to a more comfortable level. Simply adjust the chain to put your swing at the desired height.

6. The design of this swing provides ample room for "push-out" seating. After seated in the swing, the user can place his or her feet at the edge of the swing front and "push-out." The roomy design of the front of the swing will provide a comfortable rest for the legs.

 
WARNING:

- Not recommended for use by children without adult supervision.

- Your swing is not built to hold more than one person at a time.

- Your swing is not designed for high, rough swinging or twisting movements.

- Do not allow the chain to twist as the strength of the chain is dramatically reduced when it is twisted.

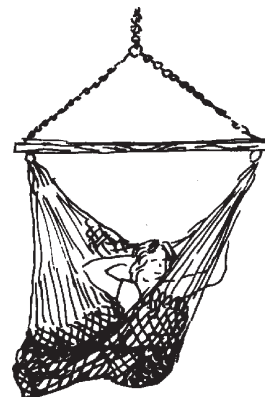

CARE AND MAINTENANCE:

Thank you for purchasing the Hatteras Hammocks® Single Cotton Rope Hammock Swing. The Single Cotton Rope Hammock Swing is designed to be weatherable. However, in order to keep your swing in the best condition, bring it indoors and out of extreme conditions.

A solution of mild soap and water will remove most dirt and is not harmful to the natural cotton fibers. For stains: spot clean and rinse thoroughly. Sponge thoroughly with clean water and air dry.

WARRANTY INFORMATION:

Products of The HammockSource are guaranteed to be free of defects in workmanship and materials for up to one year after the purchase date. Prolonged exposure to weather conditions including snow, rain, and humidity are not covered under the warranty nor is damage caused by normal wear, mildew, or improper care including storage, maintenance, and installation. If an item is found to be defective within one year of its purchase, it will be replaced without charge upon the return of the unit accompanied by a sales receipt. If you choose to return an item, you must contact our customer service department at 800.643.3522 to obtain a Return Authorization Number that will allow us to track your unit once it arrives at our warehouse; thereby creating a faster response to your concern.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>