


# Honeywell

OWNER'S MANUAL  
GUIDE D'UTILISATION  
MANUAL DEL PROPIETARIO

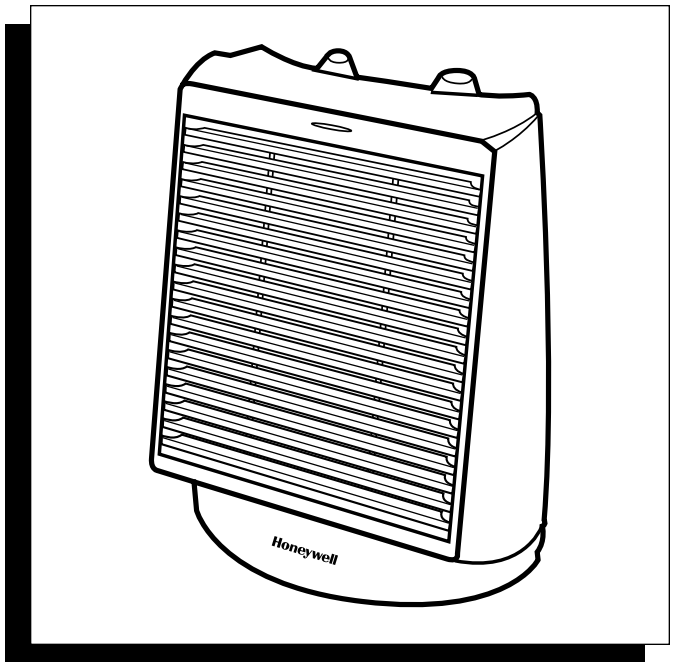

HEAT EXPRESS® 1500 WATT HEATER FAN  
Model HZ-2016

VENTILATEUR DE CHAUFFAGE HEAT EXPRESS®  
Série de Modèle HZ-2016

HEAT EXPRESS® CALENTADOR CON VENTILADOR  
Serie de Modelo HZ-2016

# IMPORTANT SAFEGUARDS

## READ ALL SAFETY INSTRUCTIONS BEFORE USING THIS HEATER

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electrical shock and injury to persons, including the following:

## IMPORTANT INSTRUCTIONS

1. Read all instructions before using heater.
2. This heater is hot when in use. To avoid burns, do not let bare skin touch hot surface. If provided, use handles when moving this heater. Keep combustible materials such as furniture, pillows, bedding, papers, clothes and curtains at least 3 feet (0.9m) from the front of the heater and keep them away from the sides and rear.
3. Extreme caution is necessary when any heater is used by or near children or invalids and whenever the heater is left operating and unattended.
4. Always unplug the heater when not in use.
5. Do not operate the heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner. Return heater to authorized service facility for examination, electrical or mechanical adjustment, or repair.
6. Do not use outdoors.
7. This heater is not intended for use in bathroom, laundry areas and similar moist indoor locations. Never locate heater where it may fall into a bathtub or other water container.
8. Do not run cord under carpeting. Do not cover cord with throw rugs, runners or the like. Arrange cord away from traffic areas where it will not be tripped over.
9. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of shock, this plug is intended to fit only one way in a polarized outlet. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. **DO NOT** attempt to defeat this safety feature.
10. This heater draws 12.5 amps during operation. To prevent overloading a circuit, do not plug the heater into a circuit that already has other appliances working.
11. It is normal for the plug to feel warm to the touch; however, a loose fit between the AC outlet (receptacle) and plug may cause overheating and distortion of the plug. Contact a qualified electrician to replace loose or worn outlet.
12. To disconnect the heater, first turn controls to the **OFF** position, then grip the plug and pull it from the wall outlet. Never pull by the cord.
13. Do not insert or allow foreign objects to enter any ventilation or exhaust


opening as this may cause an electric shock or fire, or damage the heater.

14. To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surface, like a bed, where openings may become blocked.
15. A heater has hot and arcing or sparking parts inside. Do not use it in the areas where gasoline, paint, or flammable liquids are used or stored.
16. Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
17. Avoid the use of an extension cord because the extension cord may overheat and cause a risk of fire. However, if you have to use an extension cord, the cord shall be No. 14 AWG minimum size and rated not less than 1875 watts.
18. The output of this heater may vary and its temperature may become intense enough to burn exposed skin. Use of this heater is not recommended for persons with reduced sensitivity to heat or an inability to react to avoid burns.

## 19. SAVE THESE INSTRUCTIONS

### OPERATION USING THE THERMOSTAT FEATURE

- Place the heater on a firm, level surface free from obstructions, and at least 3 ft. (0.9m) away from any wall or combustible material.
- **DO NOT** use on an unstable surface such as bedding or deep carpeting. Be sure the heater is not in a position where it may be tripped over by small children or pets.
- With the Power knob in the OFF position, plug the heater into a polarized outlet.
- Turn the Thermostat control fully clockwise to the HIGH (+) setting.
- To turn the heater on, rotate the Power knob turning it clockwise to the desired position (Fig. 1). The power light will illuminate.
- When the room reaches a comfortable temperature, slowly turn the Thermostat control counter-clockwise until the heater goes off. This is the point at which the Thermostat setting equals the room temperature. At this setting, the thermostat will automatically turn the heater on and off to maintain this selected temperature.
- Turn the Power knob to OFF and unplug the heater when you are finished using it.

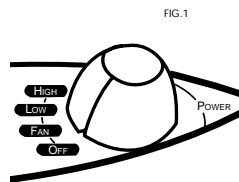

**NOTE: DO NOT OPERATE HEATER WHILE CORD IS BUNDLED OR WRAPPED.**

### OTHER FEATURES

- To use the unit as an air circulator without heat, turn the Power knob to FAN and the Thermostat to its highest setting.
- This heater has a convenient recessed carrying handle.
- This heater has a cord wrap for easy storage.

## SAFETY FEATURES

This heater is equipped with several devices and features for added protection.

- A tip-over switch that disables the heater if it is accidentally tipped back wards or forwards.
- A high temperature safety control prevents overheating (HI limit).
- A backup thermal circuit breaker.
- This heater is also equipped with motor thermal fuse that will shut down the motor should it operate at a higher than normal temperature.
- This heater was created using a high quality safety plastic.

## TROUBLESHOOTING

If your heater shuts off unexpectedly or fails to operate, one of your heater safety features may have been activated to prevent overheating.

- Be sure it is plugged in and that the electrical outlet is working.
- Check your Thermostat setting. The unit may simply be off because you have reached your desired heat setting.
- Check for any obstructions. If you find an obstruction, turn the heater OFF and unplug it.
- Allow the heater to cool completely, then remove the obstruction. Wait at least 10 minutes, then re-plug in the heater and follow the OPERATING INSTRUCTIONS for your unit.

**NOTE: IF YOU EXPERIENCE A PROBLEM, PLEASE RETURN THE HEATER TO THE PLACE OF ORIGINAL PURCHASE OR SEE YOUR WARRANTY. DO NOT ATTEMPT TO OPEN THE HEATER YOURSELF. DOING SO MAY VOID YOUR WARRANTY AND CAUSE DAMAGE TO THE HEATER OR PERSONAL INJURY. IF YOU HAVE ANY QUESTIONS REGARDING THIS HEATER, PLEASE CALL OR WRITE:**

Honeywell Consumer Relations Dept.

Toll Free 1-800-332-1110

Email us at [service@honeywell.com](mailto:service@honeywell.com)

Mail questions and comments to:

Honeywell Consumer Products Business

Consumer Relations Department

250 Turnpike Road

Southborough, MA 01772

USA

**Please be sure to specify model number.**

## CLEANING AND STORAGE

We recommend that the heater be cleaned at least once a month and before off-season storage.

- Turn the heater OFF and unplug it. Allow it to cool.
- Use a dry cloth only to clean the external surfaces of the heater.  
**DO NOT USE WATER, WAX, POLISH OR ANY CHEMICAL SOLUTION.**
- Clean your heater using the above - mentioned steps, then pack the heater in its original container and store it in a cool dry place.
- This heater does not disassemble.

## ELECTRICAL RATING

This product is rated at 12.5 Amps (1500 Watts) @ 120V, 60Hz.

## 5 YEAR LIMITED WARRANTY

You should first read all instructions before attempting to use this product.

**The enclosed Customer Response card should be filled out and returned within 7 days of purchase.**

- A.** This 5 year limited warranty applies to repair or replacement of product found to be defective in material or workmanship. This warranty does not apply to damage resulting from commercial, abusive, unreasonable use or supplemental damage. Defects that are the result of normal wear and tear will not be considered manufacturing defects under this warranty.

**HONEYWELL IS NOT LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY NATURE. ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.**

Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you also may have other rights which vary from jurisdiction to jurisdiction. This warranty applies only to the original purchaser of this product from the original date of purchase.

- B.** At its option, Honeywell will repair or replace this product if it is found to be defective in material or workmanship. Defective product should be returned to the place of purchase in accordance with store policy. Thereafter, while within the warranty period defective product may be returned to Honeywell.
- C.** This warranty does not cover damage resulting from any unauthorized attempts to repair or from any use not in accordance with the instruction manual.
- D.** Return defective product to Honeywell Consumer Products with a brief description of the problem. Include proof of purchase and a \$10 US/\$13.50 CAN check or money order for handling, return packing and shipping charges. Please include your name, address and a daytime phone number. You must prepay shipping charges. Send to:

Honeywell  
Attn: Returns Department  
4755 Southpoint Drive  
Memphis, TN 38118  
USA

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>