

Hotpoint Service Offices

SERVICE CALL: If you have a problem with your appliance ring your local Service Office.
SPARES and ACCESSORIES: To purchase spares and accessories send your Accessories Order Form to your Spares Centre. If the accessory or spare part you want is not on the form then contact your Spares Centre for prices and availability.
 Please address all correspondence to Hotpoint Spares Centre or Hotpoint Service Office as applicable.

Service Offices and Spares Centres are open between 8.30am-5.00pm Monday to Friday, except on Public Holidays: 8.30am-12.30pm Saturdays

- Service Office and Spares Centre
- Service Office only

EASTERN

- **MORWICH:**
92 Dunlop St, Giles Street, NR2 1LT.
Tel: Norwich (0693) 620661.
- **PETERBOROUGH:**
Celia Road, PE2 9JH.
Tel: Peterborough (0733) 64741.
- **LUTON:**
5 Cramley Road, LU1 1HX.
Tel: Luton (0582) 462211.
- **CHELMSFORD:**
Industrial Buildings,
Bevington Lane, CM3 9TE.
For postal orders: 6M, 16
Chesham Road, CM2 4JG
Chesham Road (0245) 492433
Chesham Road (0245) 289331.

EAST MIDLANDS

- **LEICESTER:** 65 Belgrave Gate, LE1 3HR.
Tel: Leicester (0533) 514455.
- **WEST LONDON:**
298 Cannon Road, NW9 1DW.
Tel: West London (0833) 222669.
- **NOTTINGHAM:** 40 Gower Hill Lane,
Tel: Services (05243) Nottingham
Spares Centre (05243) Nottingham
Spares Centre (05243) Nottingham
(05243) 860397.

LONDON and SOUTH EAST

- **SUTTON:** 2 St. Nicholas Road, SM1 1EH.
Tel: 081 643 0921.
- **HILL SLAM:** 195 Wood North Street,
AN2 1DQ, Tel: Hillslam (0223) 842733.
- **WENDLEY:** 68 East Lane, W9 7DQ.
Tel: 081 904 4399.
- **Office of Special codes:**
WV, NW, WC, SW 1, 3, 5, 6, 7, 10
081 904 1250
N.E. EC 001 908 4722
S.E. same as SW 081 908 2511
- **LARKFIELD:** Larkfield Trading Estate,
New Rythe Lane, W62 0GSY.
Tel: Service Office Watlington (0822) 716671
Spares Centre Watlington (0822) 716651.

CHANNEL ISLANDS

The normal United Kingdom guarantees apply and all services schemes are available.
JERSEY: 19 Don Street, St. Helier. Tel: (0534) 21629.
 Clos D'Ormes, Pontac, St. Clements. Tel: (0534) 94608.
GUERNSEY & SARRE: Valais Stores, Grande Rue, St. Martin, Guernsey. Tel: (0481) 38422.
 15 Le Poitrel, St. Peter Port, Guernsey. Tel: (0481) 23311.
 Lowlands, Brave Road, Vale, Guernsey. Tel: (0481) 48284.
ALDERNEY: 32 High Street, Alderney. Tel: (0481) 822866.

Spares and accessories may be ordered from Hotpoint Spares Administration Dept., Celia Road, Peterborough, PE2 9JB.
 Tel: Peterborough (0733) 69898

In accordance with its policy of progressive product design, the Company reserves the right to alter specifications.
 Hotpoint Ltd, Peterborough, PE2 9JB, England

NORTH EAST

- **NEWCASTLE:**
31 Mosley Street, NE1 1YE.
Tel: Newcastle 091 2321008
- **MIDDLESBROUGH:**
59 Albert Road, TS1 1NG.
Tel: Middlesbrough (0642) 248436
- **HULL:** Custom House Building,
Whitefriarage, HU1 2EU
Tel: Hull (0482) 224777
- **MEXBOROUGH:** Morphy Richards,
Swinton Works, S64 8AJ
Tel: Mexborough (0709) 682831
- **WETHERBY:** Sandbeck Lane, LS22 4TW.
Tel: Service Office Wetherby
Spares Centre Wetherby
(0937) 61221.

NORTH WEST

- **KENDAL:** 28 Highgate, LA9 4SX.
Tel: Kendal (0529) 724493.
- **PRESTON:** 24/25 Cannon Street,
PR1 3NR, Tel: Preston (0772) 24311.
- **ST. HELENS:** 40 Gower Hill Lane,
WA 12 6JG, Br. St. Helens (0744) 36152.
- **ELESMERE FORD:**
London Road, L65 2ER.
Tel: 051 338 21446 Station Road,
STOCKPORT, 4446
Heaton Works, SK4 3QJ
Tel: Services (061 442 8677) (South)
Spares Centre 061 432 0255.

SCOTLAND

- **ABERDEEN:** 68 Garden Place, AB1 1UL.
Tel: Aberdeen (0224) 642283.
- **DUNDEE:** Bannerman House,
South Tay Street, DD1 1NR.
Tel: Dundee (0382) 28383.
- **EDINBURGH:**
35 West Bowling Green Street,
Leith, EH6 5HX.
Tel: 031 554 1431
- **GLASGOW:** West Lodge Road,
Borthwick Estate, PA4 9EN.
Tel: Service Office 041 886 6241
Spares Centre 041 886 5611.
(0822) 716651.

SOUTH MIDLANDS

- **DIDCOT:**
224 Broadway, OX11 8RS.
Tel: Didcot (0239) 817711.
Spares and accessories may be ordered
from either Aldridge or Wembley
Centres.

SOUTH WEST

- **BRISTOL:**
3/5 Brisington Hill, Brisington, BS4 5BQ.
Tel: Bristol (0272) 714471.
- **PLYMOUTH:**
69 Muller Plan, PL 4 6JH.
Tel: Plymouth (0752) 262631.
- **TOTTEN:**
South Hampshire Industrial Park,
Salisbury Road, SO4 3SA.
Tel: Service Office Totton (0703) 861991
Spares Centre Totton (0703) 867933.

WALES

- **LLANQUUNO JUNCTION:**
Conwy Road, LL31 9E2.
Tel: Denbany (0492) 582626.
- **BRIDGEND:**
183 Western Avenue, Bridgend Industrial Estate,
CF31 3SL.
Tel: Service Office Bridgend (0656) 664121
Spares Centre Bridgend (0656) 766111.

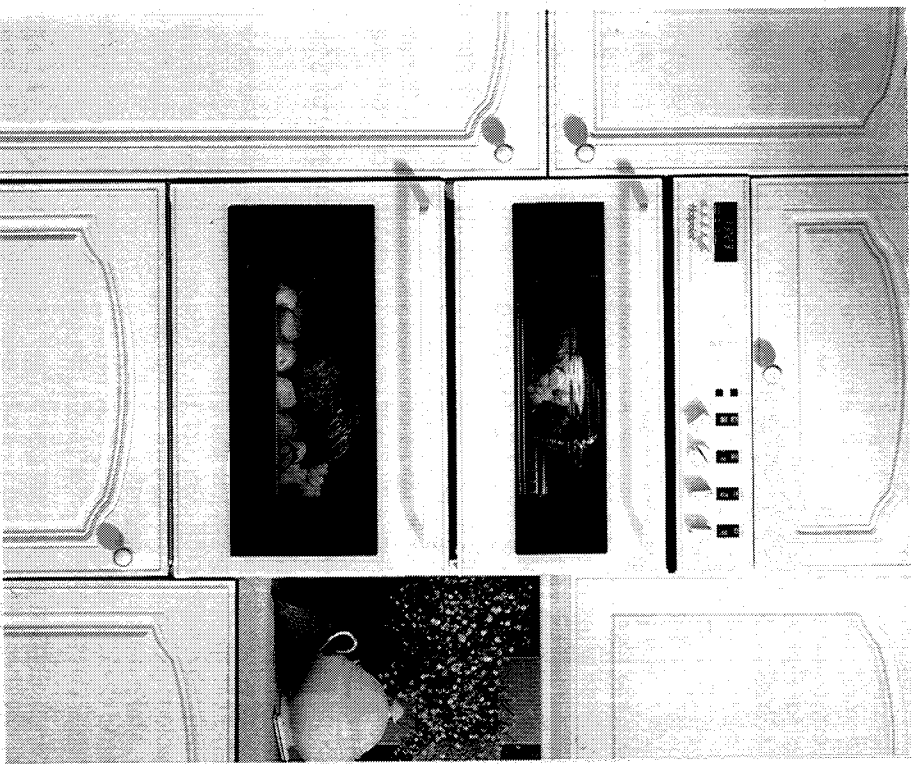
WEST MIDLANDS

- **STONE-ON-TRENT:**
West Avenue, Nelson Estate, Kidsgrove,
S17 1TN.
Tel: Kidsgrove (0782) 774511.
- **ALDRIDGE:**
Westgate, WS9 8UX.
Tel: Service Office Aldridge (0922) 743374
Spares Centre Aldridge (0922) 743377.

IRELAND

Northern Ireland: 256 Ormeau Road, Belfast, B17 2FZ.
 Tel: Belfast (0232) 647111.
 Eire: 35/36 Arvan Quay, Dublin 7.
 Tel: Dublin (0001) 725922.
 Spares and accessories may be ordered from either address.

FULL INSTRUCTIONS FOR
 INSTALLING AND OPERATING
 YOUR HOTPOINT DOUBLE OVEN
 MODEL 6192



Hotpoint®

Before you operate your new Hotpoint Double Oven

Please read these instructions fully.

1. Ensure that the oven is installed by a qualified electrician following the instructions below.
2. For your own safety and to get the best results from your oven it is important to read through this Handbook **before** using your oven for the first time.

Electrical Requirements

- Any electrical wiring must be carried out in compliance with the appropriate IEE and electricity board regulations by a qualified electrician, eg. your local electricity board or a contractor who is on the roll of the National Inspection Council for Electrical Installation Contracting (NICEIC).
- **WARNINGS – INCORRECT INSTALLATION COULD AFFECT THE SAFETY OF THE OVEN.**

- **ALL APPLIANCES MUST BE EARTHED.**
- **BEFORE CONNECTING OR INSTALLING THE OVEN THE ELECTRICITY SUPPLY MUST BE SWITCHED OFF.**

- **THE INSTALLER MUST** check that the voltage shown on the rating plate corresponds with the house electricity supply.
- The oven must be supplied via a suitable double pole isolating switch placed in a readily accessible position adjacent to the unit.
- The maximum loading for your oven is 5.6kW.
- If the oven is to be wired into a socket/connector unit this may be positioned behind the oven provided the following requirements are met:
 - i) The connector unit must not project from the wall more than 25mm.
 - ii) The top of the connector must not be more than 100mm above the base of the oven recess.
- After unpacking the oven stand it on the packing base in order to avoid damage.

Electrical Connections

- Remove the terminal cover at the rear base of the oven. Pass the cable through the cable clamp and connect to the appropriate terminals provided. Allow sufficient cable so that the oven can be set down on the floor whilst still connected up. Tighten the screws on the cable clamp and replace the terminal cover. Make mains connections.

WARNING: CHILDREN SHOULD NOT BE ALLOWED TO PLAY WITH THE CONTROLS OR TAMPER WITH THE APPLIANCE.

YOUR OVEN SHOULD NOT BE LOCATED ADJACENT TO A GAS HOB, HEATER OR EYE LEVEL GRILL, AS FLAMES FROM THE BURNERS COULD CAUSE DAMAGE TO YOUR OVEN.

Hotpoint Service Cover

Satisfaction Guaranteed or Your Money Back

Hotpoint gives you a unique 'Satisfaction Guaranteed' promise – valid for ninety days after you have purchased your Hotpoint product. If there is a problem with your Hotpoint appliance just call your Hotpoint Service Office. If necessary we will arrange for an engineer to call. If the problem is not resolved by us under this Guarantee, Hotpoint will replace your appliance or, if you prefer, give you your money back. This Guarantee is additional and subject to the terms of Hotpoint's Five Year Parts Guarantee.

Hotpoint's Free Five Year Guarantee

From the moment your appliance is delivered, Hotpoint guarantees it for **FIVE YEARS**.

- In the Five Years all replacement parts are **FREE** provided they are fitted by our own Service Engineer. During the first year our Engineer's time and labour is also free.
- After the first year we will charge for our Engineer's time and labour. We do, however, operate a range of Service Plans (see opposite) which for an annual payment enables you to cover any repair costs which may be necessary.
- All of our service repairs are guaranteed for twelve months in respect of our labour and any parts fitted.
- The appliance must be used in the United Kingdom and must not be tampered with or taken apart by anyone other than our own Service Engineer.
- You may, however, buy parts which can be safely fitted without specialist knowledge or equipment. The correct fitting of such parts, provided they are genuine Hotpoint spares, will not affect your Guarantee. Parts are available from our main Hotpoint Spares Centres.
- Our Guarantee does not cover the cost of any repair which is needed because of power cuts, accidents or misuse. Nor does it cover the cost of any visit to advise you on the use of the appliance except for our Free Installation Check for Automatic Washing Machines and Dishwashers. Please read the instruction book thoroughly.
- If at any time during the Guarantee period we are unable to repair your appliance, we will refund any repair costs paid to us in the previous twelve months. We will also offer you a new appliance at a reduced charge instead of a repair.
- Our Guarantee is in addition to and does not affect your legal rights.
- Should you need independent advice on your consumer rights, help is available from your Consumer Advice Centre, Law Centre, Trading Standards Department and Citizens Advice Bureau.

- All Hotpoint servicing is done by our own Service Organisation located throughout the United Kingdom and Southern Ireland. It will be happy to deal with any problems.

Hotpoint's Installation Check

If you ask at your local Service Office (see back page), Hotpoint will send one of its trained Engineers to make sure that the appliance has been properly unpacked and correctly connected to existing water and electrical supplies. If you wish, the Engineer will be happy to explain how to use your new appliance.

Hotpoint's Service Care

Whether you have just one or a number of Hotpoint appliances in your kitchen Hotpoint has a range of Service Schemes to give you complete peace of mind.

Service Cover

One annual payment covers you for all repairs for **individual appliances**. If two or more appliances are covered a 20% reduction is made on each fee. There is also the option of **Service Cover with Maintenance** at an additional cost. Service Schemes renewable each year by mutual agreement.

Kitchen Cover

One annual payment covers you for all Repairs and a Maintenance Check for **all Hotpoint appliances owned** which are less than ten years old. Kitchen Cover also covers loss of food up to the value of £250 in our refrigeration and freezer products. Any additional Hotpoint appliances purchased after you have joined **Hotpoint Kitchen Cover** will automatically be included during the current annual period of cover without any further charge.

Appliance Registration

To ensure that you have the opportunity to benefit from any of the above Service Schemes you should complete and return immediately the Appliance Registration Form supplied with your appliance. Full details and costs of our Service Schemes together with an application form will be sent to you at the end of the first year of the guarantee.

Annual Safety/Maintenance Checks

Hotpoint strongly recommends that all its appliances are regularly checked for electrical and mechanical safety whether or not they are covered by a Service Plan.

Proof of Purchase

For future reference please attach your purchase receipt to this booklet and keep it in a safe place.

Spare and Accessories

Spare and accessories can be ordered from your local Hotpoint Spares Centre (listed on the back page), using the order form enclosed.

If it still won't work...

Contact the Service Office

If there is still a problem with your oven after checking the points above:

1. Switch off the oven at the oven control panel.
2. Call your nearest Hotpoint Service Office or local importer (outside the UK). The telephone number is shown on the back page. Note the number down in the space below:

When you contact us we will want to know the following:

1. Your name, address and post code.
2. Your telephone number.
3. Clear and concise details of the fault.
4. The model number (6192) and the colour.
5. The date of purchase. Enter the date here:
6. If you have taken out one of the Hotpoint Service Schemes.

Please make sure you have these ready when you call.

Spare Parts

Please remember your new appliance is a complex piece of equipment.

'DIY' repairs or unqualified and untrained service people may put you in danger, could damage the appliance and might mean you lose cover under Hotpoint's Parts Guarantee.

If you do experience a problem with the appliance don't take risks; call in Hotpoint's own Service Engineer.

The address and telephone number of your nearest Hotpoint Service Office is in your local telephone directory.

Our spare parts are designed exclusively to fit only Hotpoint appliances. Do not use them for any other purpose as you may create a safety hazard.

Contents

	Page
Before you operate your new Hotpoint Double Oven	2
Electrical Requirements	2
Installing your Double Oven	4-5
The main parts of your Oven	6
The Cooking Systems in your Oven	7
The Controls	8-9
The Automatic Oven Timer	10-12
Before using your Double Oven for the first time	13
Cooking in the Top Oven	14
– Grilling	14-15
– Conventional Cooking	14-15
Cooking in the Lower Oven	16
– Conventional Cooking	16-17
– Fan Cooking	17-18
– Fan Grilling	17-18
Care and cleaning of the Oven	19-20
If something goes wrong	21
If it still won't work	22
Hotpoint Service Cover	23
Hotpoint Service Offices and Spares Centres	back page

Retention of this Instruction Book

This Instruction Book must be kept handy for reference as it contains important details on the safe and proper use of the appliance.

If you sell or pass the appliance to someone else, or move house and leave it behind, make sure this Book is also provided so the new owner can become familiar with the appliance and safety warnings.

If the Book is lost or damaged a copy may be obtained from Hotpoint Ltd, Celta Road, Peterborough, PE2 9UB.

Installing your Double Oven

Dimensional Requirements

Dimensions for the housing unit recess and the oven are given in Figure 1.

The housing unit **MUST** be firmly attached to the wall, using the bracket supplied, before the oven is installed.

The housing unit into which the oven is to be placed should be solid wood or have a melamine or laminate finish.

Adequate ventilation must be provided (see Figure 2). Particular attention must be paid to ensure that the air inlet and outlet areas are kept clear. Sufficient space must be left between the top of the housing unit and the ceiling to allow a free flow of air.

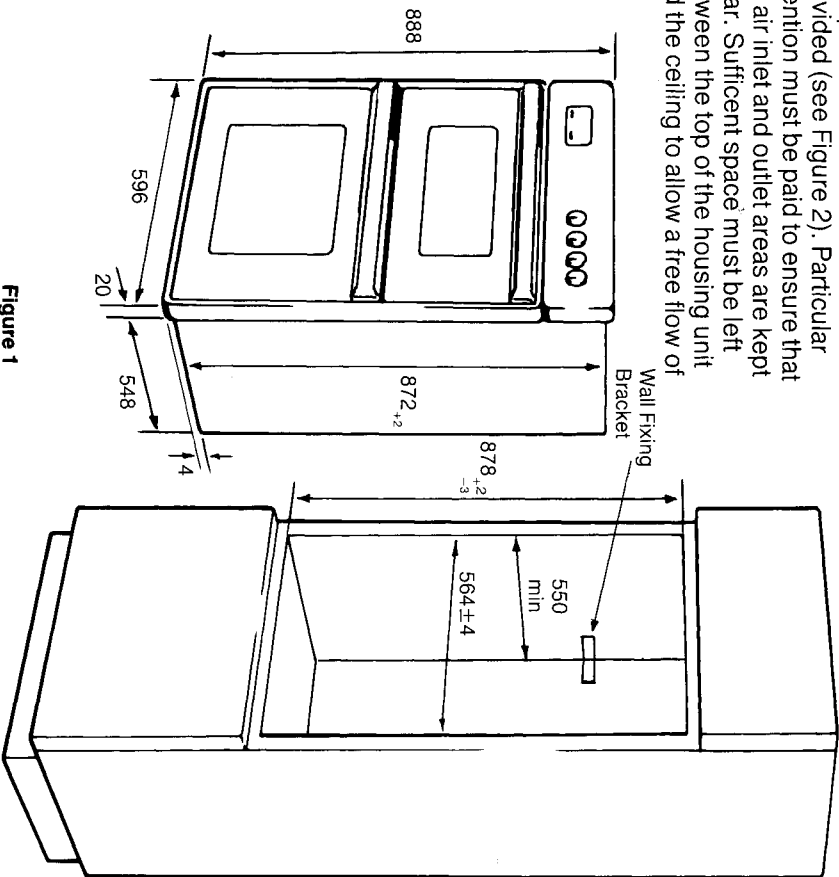

 


Figure 1

If something goes wrong...

First, don't panic!

There may be nothing wrong. Check the points below before calling your Hotpoint Service Office.

1. Check that the mains supply is switched on.
2. If the timer is showing **0.00** and is flashing then the power supply has been interrupted and the Timer must be reset (see page 10).
3. Check that the oven timer has been set to manual operation and not left on automatic (see pages 12 and 13).
4. Have you turned both the Lower Oven Selector  and the Oven Temp Selector  to the appropriate positions?
5. If grilling have you turned the relevant Oven Control to the required position and the Dual Grill Control to the appropriate setting?

will be. In most cases this cleaning operation will take place during cooking. However, if higher cooking temperatures are not regularly used then it may be necessary, in order to prevent heavy soiling, to run the ovens from time to time at a higher setting of 250°C for a couple of hours.

Should it be necessary the 'Stay Clean' side and roof panels can be removed by simply sliding them out.

Note: DO NOT grill without the roof liners in position.

To remove the metal shelf fittings from the side liners simply push the metal fittings upwards until the base section is disengaged from the retaining holes. To replace the fittings place the longer locating ends into the retaining holes at the top of the liner and allow the fitting to slide down to engage the base section in the retaining holes.

The 'Stay Clean' liners can then be washed in warm soapy water followed by rinsing in clear water. Dry well with a soft cloth.

NOTE: DO NOT use enzyme washing powder, harsh abrasives or chemical oven cleaners of any kind.

DO NOT wash the 'Self Clean' liners in a dishwasher.

Oven Fittings

The shelf fittings can be removed as described above. They and the wire shelves can be cleaned either in a dishwasher or by using a fine steel wool soap pad to remove stubborn stains.

Oven Interiors

To clean the oven interiors remove all the oven fittings and if necessary the 'Stay Clean' liners.

All types of oven cleaners can be used, but **DO NOT** allow abrasive cleaners or oven spray to come into contact with the 'Stay Clean' liners, oven surround or trims. Use a fine steel wool soap pad to remove stubborn stains.

How to replace the oven lights

Should the oven lights fail to work, **switch off** the mains supply to the oven. Access to the bulbs can be gained after first removing the lamp cover by turning anti-clockwise. The bulb can then be unscrewed and replaced by one of a similar type (Part No. 613002) which can be obtained from your nearest Hotpoint Service Centre (see back cover).

Note: Additional shelves can be obtained from your local Hotpoint Spares Centre, listed on the back page.

Installing the Oven into the Housing Unit

Do not lift or carry the oven by the door handles. It is advisable to remove the oven doors before attempting to lift the oven. To do this open the doors fully and swing the hinge steps upwards (Figure 3). Close the doors as far as the 'stop' position. Lifting the doors slightly pull them, complete with hinges, away from the oven housing (Figure 4). Then lift up the oven using the handles in the side of the oven casing and push it into the recess, making sure that the connecting cable is not trapped beneath or behind. Centralise the oven within the housing unit and secure through the side trims using two of the black screws supplied. Replace the oven doors.

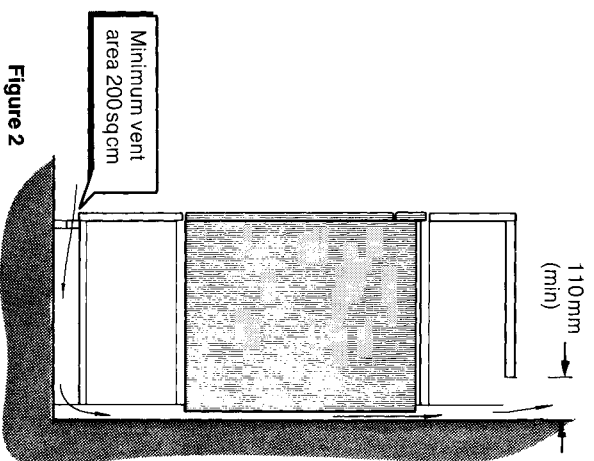


Figure 2

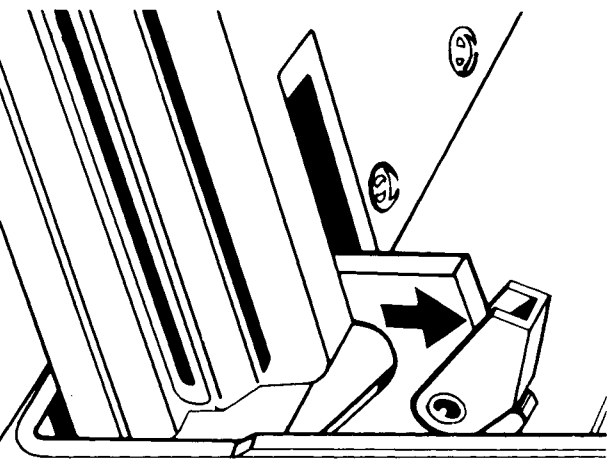


Figure 3

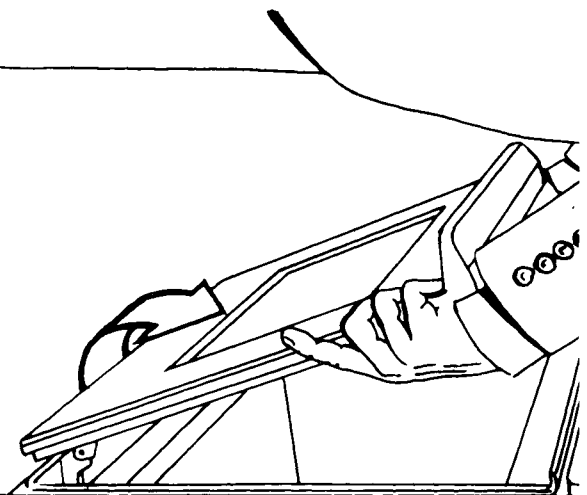
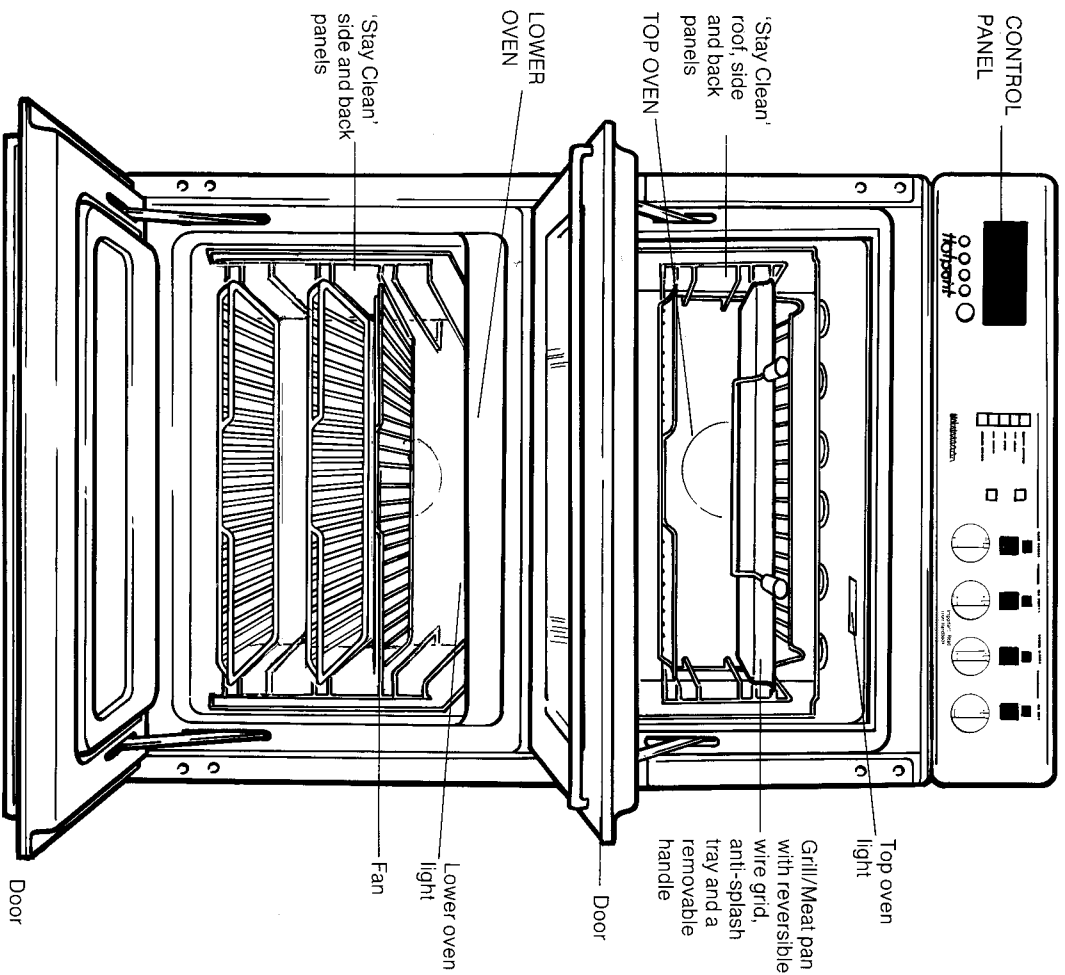


Figure 4

The main parts of your Oven



Oven furniture

Should include:

- 4 reversible wire shelves, 1 grill/meat pan with anti-splash tray with reversible grid and a removable handle.

WARNING: DO NOT TOUCH THE GLASS DOORS WHEN THE OVEN IS IN USE AS THESE AREAS CAN BECOME HOT.

Care and cleaning of the Double Oven

WARNING: BEFORE CLEANING SWITCH THE OVEN OFF AT THE COOKER CONTROL PANEL AND ALLOW IT TO COOL.

Cleaning the outside

Clean the outside by wiping with a damp cloth using a small amount of detergent, followed by wiping down with a dry clean cloth.

Note: DO NOT use scouring pads or abrasive powder which will scratch the glass.

Cleaning the Oven Doors

Both doors can be removed for cleaning. To do this, open the door and swing the hinge 'stops' upwards (Figure 5). Close the door as far as the 'stop' position. Lifting the door slightly, pull it, complete with hinges, up and away from the oven housing (Figure 6).

Stubborn stains on the inside of the doors can be removed by using a liquid cleaner, eg. *Jif*. During cleaning the doors must not be immersed in water. Do not use cleaners which contain bleach as they may dull the surface. After cleaning, wipe down with a damp cloth and dry with a soft cloth.

WARNING: DO NOT RUN THE OVEN WITHOUT THE DOORS FITTED.

'Stay Clean' Liners

The back and sides of both ovens are fitted with 'Stay Clean' Liners which absorb cooking soils.

'Stay Clean' roof panels are available as an optional extra (Part No. 6003). These are available from your retailer or Hotpoint Service Centre (see back cover).

Figure 5

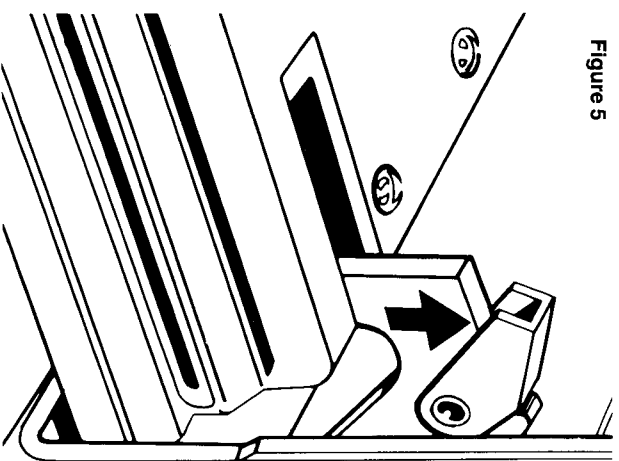
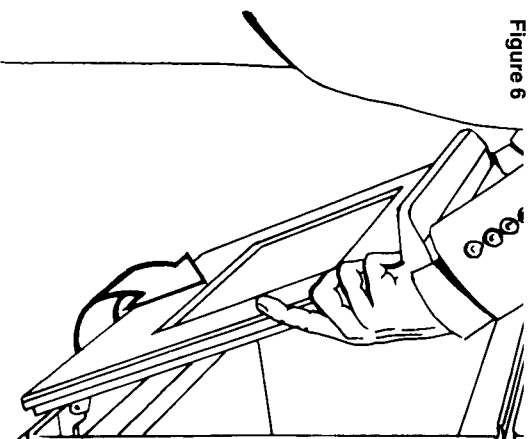


 


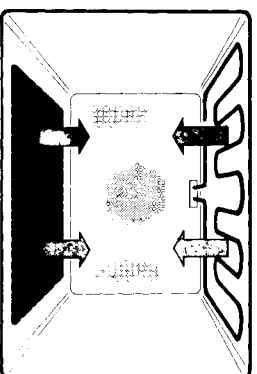
Figure 6



 
At high temperatures the special surface enables these soils to be slowly destroyed. The higher the temperature the more effective this

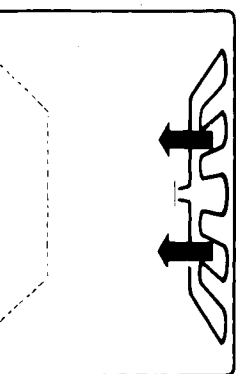
The Cooking Systems in your Oven

 
longer grilling time will be necessary. For ordinary grilling we would normally recommend using the Top Oven Grill with the Dual Grill Control (see page 14). However, if necessary the top element in the Lower Oven can be used as a full power grill by turning the Lower Oven Selector to  and the Oven Temp Selector to , but the oven door must be CLOSED. Alternatively it can be used at a lower setting by turning the Lower Oven Selector to  and the Oven Temp Selector to a lower temperature. Care however should be taken with delicate foods, eg. fish – as the grill will come on full initially in order to raise the temperature.

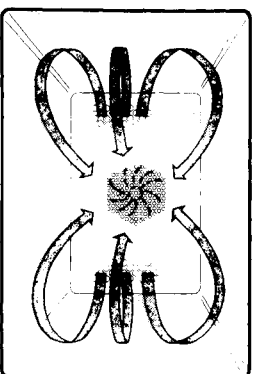


Your Double Oven is equipped with four different cooking systems:

 
1. **Conventional Cooking**  – **(Lower and Top Oven)** – with upper and lower heat. This system is particularly useful for roasting and baking on one shelf only.

 


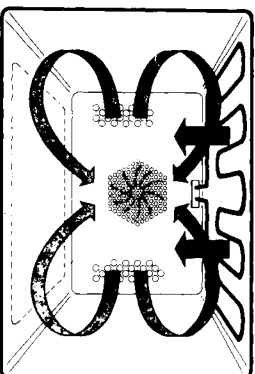
2. **Grilling**  – both ovens can be used for conventional grilling although we recommend the use of the Top Oven Grill, and have full width, fully controllable grills. The grill in the top oven also has an economy setting which enables you to use just the middle section.



NOTE: The Oven Door(s) should be closed when grilling.

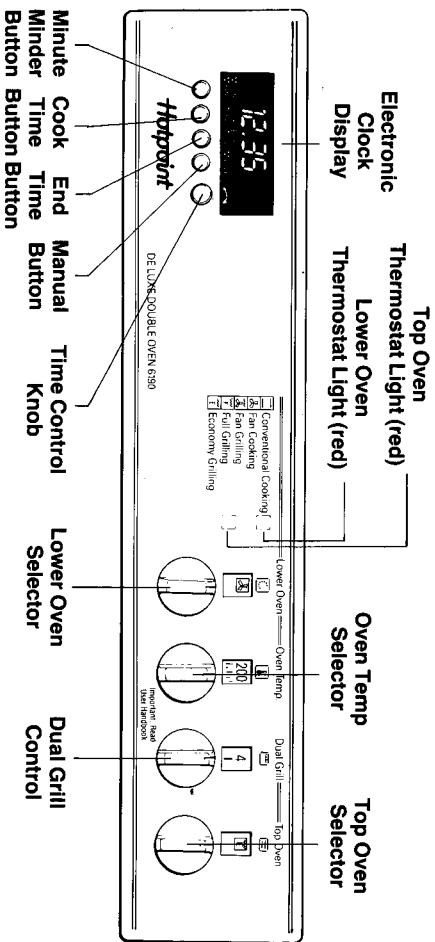
3. **Fan Cooking**  – **(Lower Oven)** – the fan oven operates by constantly moving heated air around the oven. This gives improved efficiency and, in general, enables the use of lower temperatures for cooking. It also means that there is less need to be particular about shelf positions and that you can bake at more than one level simultaneously.

4. **Fan Grilling**  – **(Lower Oven)** – this is a combination of heat from the grill element and hot air circulated by the fan. Joints of meat and poultry will be browned as if they were cooked on a rotisserie or spit but more economically as the door is left closed.

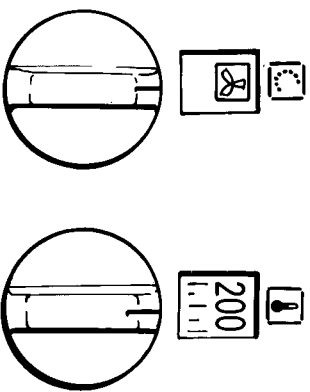



These four systems of cooking are described more fully in the separate Recipe Book and we would suggest you read right through the Introductory Section of that book **before** using the oven.

The Controls




Lower Oven Controls





Before using the Lower Oven the Lower Oven Selector  must be turned to the appropriate position. The control has four settings.


 
 
 
 Conventional Cooking

 Fan Cooking

8


 Grilling

 Fan Grilling

Now turn the Oven Temp Selector  clockwise to the required temperature. The Lower Oven thermostat light will immediately come on when either Conventional  or Fan Cooking  is selected and will remain on until the oven reaches the required temperature. The light will then automatically go off and on during cooking as the oven thermostat maintains this temperature. If the thermostat light does not come on when the thermostat is turned on, make sure that the Manual button is pressed so that the arrow above this button is not showing. When Fan Grilling  or Grilling  is selected the

Baking

The advantage of this method of cooking is that as the oven heats up more quickly and generally foods cook at a lower temperature than in a conventional oven. Pre-heating the oven is only required for certain types of food, eg Yorkshire pudding, bread, or if the cooking time is less than 25 minutes. Since the distribution of heat is more even most foods will cook satisfactorily in any shelf position, but the shelves should be evenly spaced. If only one shelf is being used then position 1 is preferable. Temperatures selected should be 10-30°C lower than with conventional heating – see separate recipe book.


When cooking a complete meal – for instance roast beef, roast potatoes, Yorkshire pudding and apple pie – place meat/potatoes upon anti-splash tray in the meat pan and stand the pan on an inverted shelf () situated on the floor of the oven. Place the apple pie and Yorkshire pudding on a shelf at position 3.

When batch baking large quantities of food for home freezing or parties, use shelf positions 1, 3 and 4. Remember to place the food to be cooked in the centre of each shelf to allow for even air circulation around the food. It may be necessary to increase the cooking times by a few minutes to allow for the larger mass of food, and to take out food on the upper shelf slightly earlier. If you are batch baking you will need to preheat the oven.

Detailed charts covering temperatures and shelf positions for Fan Cooking are given in the recipe book supplied.


 


Defrosting

Without heat – for frozen foods such as cakes, fruit, etc. the Oven Temp Selector  should be set at '0' (Off) and shelf position 2 used.

With heat – for chicken portions, sausages, meat rolls, etc. turn the Oven Temp Selector to 50-75°C and again use shelf position 2. This method of defrosting is only recommended for food up to 2kg in weight and the food should be cooked immediately afterwards.

Fan Grilling

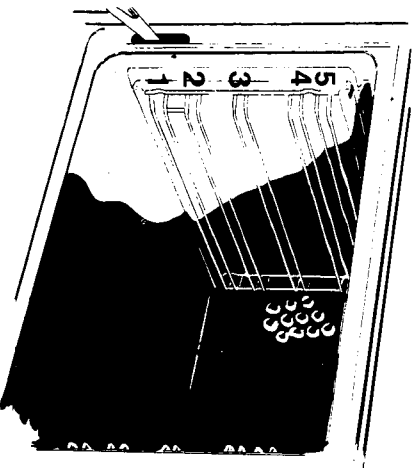
Turn the Lower Oven Selector  to  and the Oven Temp Selector to the required temperature. The heat for Fan Grilling is provided by the grill element at the top of the oven and this heat is circulated around the food by the fan. The element and the fan are switched off and on alternately. It is ideal for roasting a joint or a chicken and has the same result as if you were cooking on a rotisserie but more economically as the door is left closed. There is no need to pre-heat the oven. Insert the grill pan and anti-splash tray on the floor of the oven or at shelf position 1. Place the food on one of the oven shelves and insert at shelf position 1, 2 or 3, depending on the height of the food. For large pieces of meat or several pieces a lower temperature and a





Cooking in the Lower Oven

Oven

To obtain the best results it is recommended that you use the meat pan provided either on its own if you are cooking on one shelf only or if cooking on more than one shelf, in conjunction with your own baking tins. Only put in the shelves or fittings you actually want to use. Unused shelves only restrict access and get in the way. If possible it is a good idea to remove the fittings when you have finished cooking so that when you next come to use the oven you do not inadvertently heat up unnecessary shelves or tins – as well as being more convenient this will save electricity.

Position of shelves

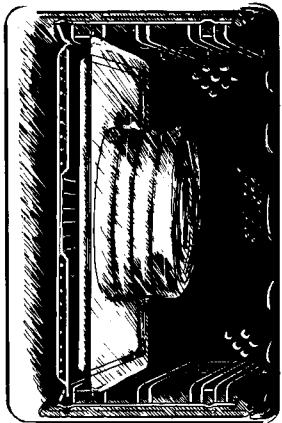


Conventional Cooking 
Turn the Lower Oven Selector  to  and the Oven Temp Selector  to the required temperature.

Baking

Always place the item you are baking in the centre of the shelf. You will find


 
 
 
that shelf position 1 or 2 will give the best results. If you are baking on more than one shelf then the Fan Cooking System is recommended.





Roasting

If roasting in an open dish, shelf position 2 is recommended. If roasting directly in the meat pan, use the anti-splash tray supplied so that during the cooking all the fat drains into the cavity base. This ensures that oven cleaning is kept to a minimum. If roasting or cooking a casserole in a closed dish it should be placed on a shelf either at position 1 or 2 depending on the size of the dish.

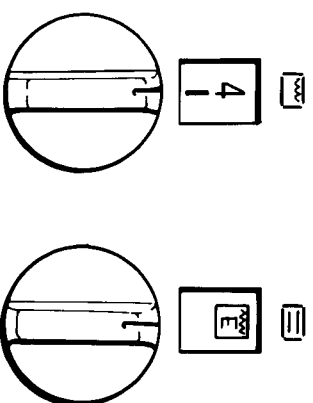
Fan Cooking

Turn the Lower Oven Selector  to  and the Oven Temp Selector  to the required temperature. The heat for Fan Cooking is provided by an element situated at the back of the oven and around the fan. Therefore with this cooking system it is possible to utilise the floor of the oven, either by standing baking tins directly on the floor of the oven or by placing an inverted shelf () on the floor. This allows for greater flexibility within the oven.


 

thermostat light will not operate. After use always set the Lower Oven Selector and Oven Temp Selector back to 'O' (Off).

If required the top element in the Lower Oven can be used as a Grill by turning the Lower Oven Selector to  and the Oven Temp Selector either to  or a lower setting on the Selector if less than full power is required. Always remember to keep the oven door closed.

Top Oven Controls

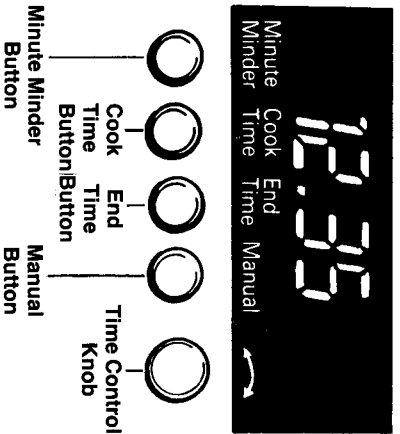


To heat this oven, turn the Top Oven Selector clockwise to the required temperature. The Top Thermostat Light will immediately come on and remain on until the oven reaches the selected temperature. The light will then automatically go off and on during cooking as the oven thermostat maintains this temperature. After use always turn the Oven Selector anti-clockwise back to 'O' (Off).

To use the grill set the Top Oven Selector to either the Economy  or the Full  power setting and the Dual Grill Control  within the range 1-9.

The Automatic

Oven Timer



Both the Lower and Top Ovens, with the exception of the Grills, can be controlled by the Automatic Timer. The Timer is controlled by the Electronic Clock. Check that the clock is showing the correct time, if not reset it by pressing in both the Minute Minder and Cook Time Buttons and hold them in while turning the Time Control knob until the correct time appears on the Clock. An arrow will flash above the Manual Button showing that the Oven is in the automatic mode. To select Manual press the Manual Button and the arrow disappears from above the Button.

The Minute Minder

The Minute Minder can be used independently or in conjunction with the automatic timer and will give an audible reminder. It does not control the operation of the ovens.

Press the Minute Minder Button and **0-00** will appear in the Display.

Holding the button in turn the Time Control knob to the length of time required. Release the button and the

Clock will revert back to the time of day but with the arrow still showing above the Minute Minder Button. The Minute Minder Button can be pressed at any time to show how long it will be before it sounds. At the end of the set time the Minute Minder will sound for approximately 2 minutes but can be switched off beforehand by pressing any one of the buttons.


To set the Timer to switch ON and OFF automatically

1. Press the End Time Button and an indicator arrow will appear above the button. Holding the End Time Button in, turn the Time Control knob until the time you want the meal to finish cooking appears on the Clock. Release the button and the clock will revert back to the time of day with a second indicator arrow visible above the Manual Button to show the oven is in the Automatic Cooking Mode.
2. Press the Cook Time Button, an indicator arrow will appear above the button. Holding the Cook Time Button in, turn the Time Control knob until the length of time you want the meal to cook for is shown on the Clock (this sets the switching-on time). Release the button and the clock will revert back to the time of day.
3. Turn the appropriate Oven Control (or controls if using both ovens) to the required temperature and if using the Lower Oven the Lower Oven Selector to the type of heating required.

drains into the cavity base, this ensures that oven cleaning is kept to a minimum.

Detailed charts covering temperatures and shelf positions for Conventional Cooking are given in the recipe book supplied.

Warming Dishes

The Top Oven is ideal for warming dishes and keeping food hot. Dishes should not be placed directly on the floor of the oven and the Top Oven Selector should be turned to .

WARNING: DO NOT PUT DELICATE CHINA OR ITEMS WHICH COULD BE AFFECTED BY HEAT INTO THE OVEN.

If using aluminium foil **never** allow the foil to touch the sides of either of the ovens. **Never** cover the interior or shelves with foil.

Cooking in the

Top Oven

The Top Oven can be used for normal cooking, but on a smaller scale. Where necessary it is advisable to stand dishes on a baking tray to avoid spillage on to the floor of the compartment. Most foods will cook at a slightly lower temperature in the smaller Top Oven than in the larger Lower Oven.

 
 
Position of Shelves



Grilling

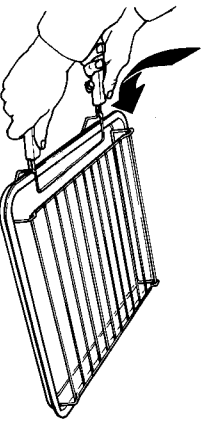
 **Full Width or Economy**

The grilling facility in the Top Oven enables you to use the full width of the grill or just the middle section depending on the amount of food you wish to grill at any one time.

To use the full width of the grill turn the Top Oven Selector to  and for economy grilling turn it to . In both positions the grill power can be adjusted by means of the Dual Grill Control (settings 1-9). Grilling should be done with the Top Oven door CLOSED. There is no need to pre-heat. Use the grill pan with the anti-splash tray and the reversible grill pan grid if necessary in positions 2-4, according to the thickness of the food. If you find excessive smoke being emitted then turn the Dual Grill


Control to a lower setting and/or move the grill pan to a lower position. The grill pan must be cleaned after every use. Excess fat build up in the bottom of the pan could cause a fire hazard.

Fix the grill pan handle securely in position. With the grill pan handle in the vertical position, place the chrome section centrally over the grill pan lip. Drop the handle away from the grill pan and ensure that the handle is secure before use (see illustration).



Conventional Cooking



Turn the Top Oven Selector  to the required temperature. The heat for Conventional Cooking is provided by the Grill element and the element under the floor of the oven. Therefore **DO NOT COOK DIRECTLY ON THE FLOOR OF THE OVEN**, or place food too close to the top element.

Baking

Always put the item you are baking in the centre of the shelf and locate the shelf at position 1. If using the flat baking tray supplied always have the sloping edge towards the front.

Roasting

When roasting shelf position 1 is recommended. If roasting directly in the meat pan use the anti-splash tray so that during cooking, all the fat

4. The Oven(s) will automatically switch ON (the middle indicator arrow will disappear) when the pre-selected start time has been reached and switch OFF when the End Time is reached. At that time the arrow above the Cook Time Button will disappear and the Minute Minder will start to sound to remind you that the meal is ready to take out. The Minute Minder will sound for approximately 2 minutes but can be switched off beforehand by pressing any one of the buttons. The arrow above the Manual Button will start to flash.

5. After use turn the appropriate controls to 'O' (Off) and press the Manual button to return the oven(s) to Manual operation (the arrow above the Manual Button will disappear).

To set the Timer to switch OFF only

 
The timer may be used to switch the Oven(s) off.

1. Follow step 1 as above.
2. Turn the appropriate Oven Control (or controls if using both ovens) to the required temperature and if using the Lower Oven the Lower Oven Selector to the type of heating required. The Oven thermostat light(s) will come on and the oven(s) start to heat up.
3. The oven(s) will automatically switch OFF when the End Time is reached. At that time the arrow above the End Time Button will disappear and the Minute Minder will start to sound to remind you that the meal is ready to take out.

The Minute Minder will sound for approximately 2 minutes but can be switched off beforehand by pressing any one of the buttons. The arrow above the Manual Button will start to flash.

4. After use turn the appropriate controls to 'O' (Off) and press the Manual Button to return the oven(s) to Manual operation (the arrow above the Manual button will disappear).

General notes on using the Automatic Timer

1. When setting any part of the timer always keep the appropriate button pressed in with one hand and turn the Time Control at the same time with the other hand.
2. After a button has been released an arrow will remain above it on the Clock to act as a reminder of what has been selected.
3. If the arrow above the Manual Button flashes this means that the oven is in the Automatic mode. Press the Manual Button to change the oven to Manual operation (the arrow disappears).
4. If you wish to cancel or change one of the settings simply press the appropriate button and turn the Time Control back to . Reset the appropriate button as required.
5. If after setting the timer or when the meal has started to cook you want to know how long it will take simply press the Cook Time Button and the length of time will be shown on the Clock.
6. If you want to know when the cooking will come to an end simply press the End Time Button

and the finishing time will be shown on the Clock.

7. The Minute Minder can be set to come on before the end of automatic cooking, eg. to remind you to put the vegetables on. The Minute Minder will sound a second time at the end of the automatic cooking period.

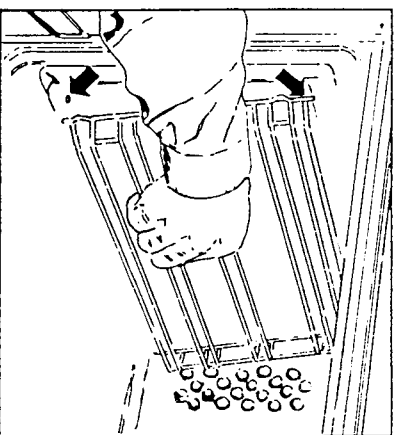
8. Always remember to press the Manual Button after you have used the Automatic Timer to return the oven to Manual operation.

WARNING: CHILDREN SHOULD NOT BE ALLOWED TO PLAY WITH THE CONTROLS OR TAMPER WITH THE APPLIANCE.

Before using your

Double Oven for the first time

In some models the shelf racks will have to be inserted. To do this first push the long ends of the racks into the top openings in the side walls and then insert the bottom ends in the holes provided.




Make sure the electricity supply is switched ON

Your Double Oven is fitted with an Electronic Clock and Timer. When switching the oven on for the first time or if the power supply has been interrupted the Electronic Clock will flash **0-00**. To set the clock to the time of day press both the Minute Minder and Cook Time Buttons and hold them in while turning the Time Control until the time of day appears on the Clock. When you have reached the right time release the buttons and the clock will operate. Remember that the clock is a 24-hour one so that 3 o'clock in the afternoon will show on the Clock as **15-00**.

Manual/Automatic

For normal operation (without automatic timing) the Manual Button must be pressed so that the arrow above the button disappears – this ensures that the oven is in the Manual mode.

To remove the 'new smell', heat up the empty ovens for 30 minutes keeping the doors closed. To heat up the Lower Oven turn the Lower Oven Selector to  – the Mains ON/OFF light and the light inside the oven will come on – and set the Oven Temp Selector to 250. When you do this the Lower Oven Thermostat light on the Control Panel will come on. To heat up the Top Oven turn the Top Oven Selector to 250 – the Top Oven Thermostat Light and the light inside the Top Oven will come on.

The new smell is due to any temporary finish on oven fittings and elements and also any moisture absorbed by the lagging. The odour will cease after a short period of use. Ensure that the area is well ventilated and that persons and pets, who are possibly sensitive to the odour, are removed from the vicinity.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>