



# Hotpoint

OUR IDEAS. YOUR HOME.

## Instructions for Installation and Use

3kg Tumble Dryer  
V3D01

### **To the Installer:**

**Before installation, fill in the product details on the back cover of this book.  
The information can be found on the rating plate.**



### **To the User:**

**This symbol reminds you to read this booklet.  
You must read the instructions prior to installing and using the appliance  
and then retain them for future reference.**

# Contents

Safety Advice	3 - 4
Electrical Requirements	5
Features - Get to know the main parts of your Dryer	6
Where to put and vent your Dryer	6
How to use your Dryer	7
Sorting your laundry	8
Items not suitable for drying	9
Items requiring special attention	10
The Controls	11
Guide to Drying Times	12
How to remove and clean the Fluff Filter	13
Caring for your Dryer	13
If something goes wrong	14
If it still won't work	15
Product Data	16
Hotpoint Guarantee/After Sales Service	18/19
Essential Contact Information	20

## Retention of this Instruction Book

This Instruction Book must be kept handy for reference as it contains important details on the safe and proper use of the appliance.

If you sell or pass the appliance to someone else, or move house and leave it behind, make sure this Book is also provided so the new owner can become familiar with the appliance and safety warnings.

---

# For your safety

---

## IMPORTANT

Using your Tumble Dryer is easy.

Nevertheless, for your own safety and to get the best results it is important to know your Dryer by reading right through this handbook **before** using your dryer for the first time.

- NEVER** ● Allow children to play with or otherwise interfere with the dryer.
- NEVER** ● Allow the air inlet at the back of the dryer, the air outlet or vent hose to be obstructed.
- NEVER** ● Direct the vent hose outlet towards the air intake at the back of the machine.
- NEVER** ● Allow the tumble dryer to recycle exhaust air.
- NEVER** ● Switch the machine off leaving a hot load in the drum.
- NEVER** ● Tumble dry without the filter in position.
- NEVER** ● Exceed the maximum load capacity recommended or place dripping wet items in the drum.
- NEVER** ● Use the dryer on a carpeted floor where the pile height would prevent air from entering the dryer from the base.
- NEVER** ● Allow lint to collect around the dryer.
- NEVER** ● Add liquid or sheet fabric conditioner to the dryer, use liquid conditioner in the final rinse of your wash.
- NEVER** ● Use the dryer for commercial drying, the dryer is only suitable for domestic use.
- NEVER** ● Dry Acrylics on the high heat setting.
- NEVER** ● Tumble dry articles that have **NOT** been well washed in water and detergent then well rinsed and spun.
- NEVER** ● Tumble dry articles that have had chemicals used for cleaning.
- NEVER** ● Tumble dry articles that are contaminated with flammable substances (Cooking oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, waxes, wax removers and hair sprays), unless washed in hot water with an extra amount of detergent.
- NEVER** ● Tumble dry rubber, rubber backed articles and clothes, pillows fitted with foam rubber pads, foam (latex foam), rubber, plastic, shower caps, waterproof textiles, nappy pants or liners, polythene or paper.
- NEVER** ● Tumble dry: Large, very bulky items including duvets and sleeping bags.
- NEVER** ● Attempt to stand on top of your dryer, it is not designed for such use and you could injure yourself or damage the dryer by such abuse.
- NEVER** ● Switch electricity On or Off with wet hands.


## IMPORTANT

**A CHILD COULD CLIMB INTO OR TAMPER WITH AN UNATTENDED TUMBLE DRYER. WHEN THE MACHINE IS NOT IN USE SWITCH OFF, REMOVE THE PLUG AND CLOSE THE DOOR.**

---

# For your safety

---


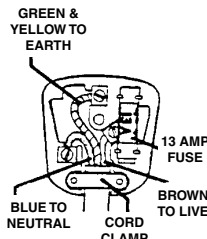 

- ALWAYS** ● Supervise children to ensure that they do not play with the dryer.
- ALWAYS** ● Supervise persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- ALWAYS** ● When the dryer is not in use, switch off at the wall, remove plug and close the door.
- ALWAYS** ● Comply with the specified electrical requirements.
- ALWAYS** ● Ensure that your dryer is installed correctly and has adequate ventilation. (see, "Where to put and vent your dryer.")
- ALWAYS** ● Use the vent hose for optimum drying performance.
- ALWAYS** ● **Finish** every programme with the cool tumble cycle provided on the control.
- ALWAYS** ● **Clean the filter**, it is essential that the filter is kept clear of fluff after **EACH** drying cycle.
- ALWAYS** ● Observe the rules for drying garments:  
**In particular woollen articles should not be dried in a tumble dryer unless they are labelled 'Superwash', 'Machine washable' or have the 'May be tumble dried' symbol:**   
**If in any doubt do not dry wool in the machine.**  
**Unlike other materials, the mechanism of wool shrinkage is irreversible, i.e. it will not stretch back to the original size and shape.**
- ALWAYS** ● Buy genuine accessories and spares.

***WARNING: Never stop the dryer before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated!***



**CAUTION: WHEN THE DRYER IS IN USE AVOID TOUCHING THE REAR OF THE DRYER AS IT MAY BE HOT.**

# Electrical Requirements

 
<p><b>Supply</b></p>	<p style="text-align: center;"><b>WARNING: This appliance must be earthed!</b></p> <p><b>REFER TO THE RATING PLATE FOR VOLTAGE AND CURRENT REQUIREMENTS. (see diagram for location.)</b></p> <p>The flexible mains lead is supplied fitted with a BS1363 plug and with a 13 amp BS1362 fuse.</p> <p>The plug should be connected to the mains supply via a suitable switched socket which is accessible after installing your dryer.</p>
<p><b>Changing the fuse</b></p> <p><b>Moulded plug</b></p> 	<p>If it is necessary to fit a replacement fuse, it must be a 13 amp ASTA approved to BS1362 type.</p> <p style="text-align: center;"><b>WARNING: The plug must not be used without a fuse cover.</b></p> <p>If a replacement fuse holder/cover is required, it must be of the same colour coding or wording as shown on the base of the plug. Replacements are available from your Spares stockist.</p>
<p><b>Changing the plug</b></p> <p><b>Rewirable plug</b></p> 	<p>The wires in the mains lead are coloured in accordance with the following:</p> <p>GREEN/YELLOW - EARTH          BLUE - NEUTRAL          BROWN - LIVE</p> <p>If a replacement plug is to be fitted, the appropriate wire must be connected to the correct terminal, as follows:</p> <p>Connect:</p> <p>Green/Yellow to terminal marked Earth or Green or </p> <p>Blue to terminal marked Neutral or N or Black</p> <p>Brown to terminal marked Live or L or Red.</p> <p>If the plug being replaced is a non-rewirable type then the cut-off plug must be disposed of safely. <b>DO NOT</b> leave where it can be inserted into a socket and create a shock hazard.</p>
<p><b>Changing the mains cable</b></p>	<p>Should the mains lead ever require replacing at any time please contact your nearest Service Centre. A charge will be made for the replacement of the mains lead or if you require a longer lead.</p> <p><b>The mains lead must only be replaced by a specially prepared cable obtainable from your Spares Stockist and fitted by a qualified electrician.</b></p>

**NOTE: IF IN DOUBT ABOUT ANY OF THE ABOVE CONSULT A QUALIFIED ELECTRICIAN.**

---

# Features - Get to know the main parts of your dryer

---

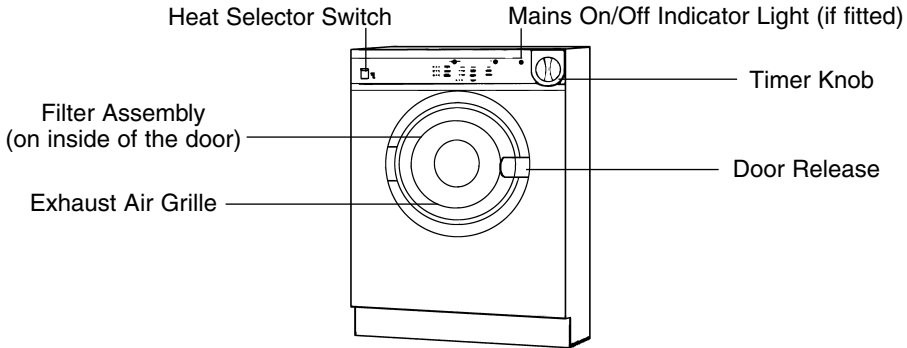

---

## Where to put and vent your dryer

---

- Your tumble dryer should **NOT** be located adjacent to a gas hob, cooker, heater, or eye level grill as flames from the burners could cause damage to your machine.
- The dryer should be placed where air can freely circulate around it, preferably near a window that can be opened to reduce the possibility of condensation occurring while the dryer is in use.
- When operating the dryer, there has to be adequate ventilation to avoid the back flow of gases into the room from appliances burning other fuels, including open fires.
- A vent hose is recommended for optimum performance.
- **DO NOT operate the dryer in an enclosed environment, ensure the dryer is adequately ventilated.**
- **If the dryer is enclosed or fitted under a work surface, a gap of at least 50mm (2") must be allowed above the top across the full width of the dryer and at least 25mm (1") either side. This allows air to enter into the rear air inlet. The dryer must NEVER be run in a cupboard with a closed door.**
- We do not recommend that the dryer is installed in a cupboard but the dryer must never be installed behind a lockable door, a sliding door or a door with a hinge on the opposite side to that of the dryer door.
- **DO NOT** allow clothes, towels etc., to hang down the front of the dryer into the airstream. This obstructs the airflow and may damage the dryer.
- Ensure that the end of the hose is not directed towards the air intake grille at the rear of the dryer.
- **NOTE: The vent hose should not exceed 2.4 metres in length, and should be kept free of any possible accumulation of fluff lint (and water) by frequently shaking it out. Always ensure that the hose is not squashed.**

### Wall Hanging Kit

This allows the dryer to be mounted on a wall of suitable strength to take the weight. Alternatively it should be used when the dryer is mounted on top of a work surface to secure the dryer to the wall.

**WARNING:**

 
**DO NOT DISCHARGE THE EXHAUST AIR INTO A FLUE WHICH IS USED FOR EXHAUSTING FUMES FROM OTHER APPLIANCES BURNING GAS OR OTHER FUELS.**

# How to use your dryer


1. Plug in, switch on electricity.

**WARNING: WHEN SWITCHING ON OR OFF, PLEASE ENSURE THAT YOUR HANDS ARE DRY**

2. Sort your laundry (see section "Sorting Your Laundry")

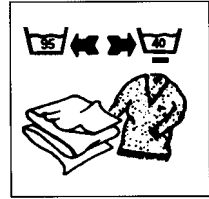

 3. Open the door. Check that the fluff filter is clean (see section How to remove and clean the fluff filter).

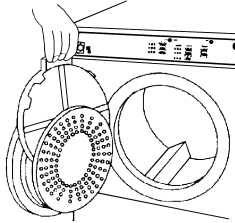


4. Load the dryer placing the clothes carefully in the drum, pushing them well towards the back and away from the door seal. Close the door.



5. Select the relevant heat setting (see section "Sorting your Laundry").

 
Push IN for high heat, for cottons, linens and synthetics.  
Low setting - button OUT for acrylics and acrylic mixtures.

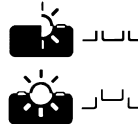

Button OUT  
LOW HEAT


Button IN  
HIGH HEAT

 6. Turn the Timer clockwise to select the required drying time. (See Section "The Controls".)  
The dryer will start

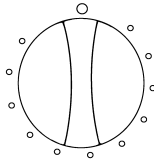

7. When finished open the door and take out the laundry.

 Clean and replace the fluff filter.

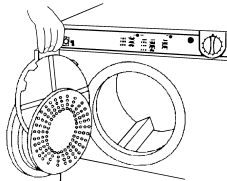

8. Switch off electricity and remove plug from socket.

**WARNING: WHEN SWITCHING ON OR OFF, PLEASE ENSURE THAT YOUR HANDS ARE DRY**

**Never switch the dryer off with a hot load in the drum.  
You must terminate every programme with the Cool Tumble Phase.**

# Sorting your laundry

1. Always separate laundry into the correct fabric groups before washing and drying.
2. See that all zips are closed, hooks and eyes are fastened and belt, strings etc. are tied loosely in bows, you will normally have done this for each item before the washing stage.
3. It is important to extract as much water as possible from each item before drying. This saves you time and money.

**WARNING:**  
**CLOTHES SHOULD NEVER BE LOADED DRIPPING WET**

4. Make sure that the items to be dried are suitable for tumble drying, or are not of a type requiring 'special attention' (see "Wash Care Labels" section).

## Maximum load size

Your dryer will hold a load of 3kg (6.6lb) dry weight of natural fabrics. if you are drying items of man-made fibres (synthetic or acrylics), the maximum load should not exceed 2kg (4.4lb) dry weight. This difference is that man-made fibres require more space to tumble-dry without creasing.

**WARNING:**  
**DO NOT OVERLOAD YOUR DRYER AS THIS COULD RESULT IN REDUCED DRYING PERFORMANCE.**

## Typical load

To help you estimate how many items it takes to make up a drying load, the charts below show the approximate weights of some everyday washing items.

<b>Clothes</b>			
Blouse	Cotton	150g	5oz
	Other	100g	3 <sup>1</sup> / <sub>2</sub> oz
Dress	Cotton	500g	1lb 2oz
	Other	350g	12oz
Jeans		700g	1lb 6oz
10 Nappies		1000g	2lb 3oz
Shirt	Cotton	300g	10 <sup>1</sup> / <sub>2</sub> oz
	Other	200g	7oz
T-Shirt		125g	4 <sup>1</sup> / <sub>2</sub> oz

<b>Household Items</b>			
Duvet cover (Double)	Cotton	1500g	3lb 5oz
	Other	1000g	2lb 3oz
Large Tablecloth		700g	1lb 6oz
Small Tablecloth		250g	9oz
Tea Towel		100g	3 <sup>1</sup> / <sub>2</sub> oz
Bath Towel		700g	1lb 8oz
Hand Towel		350g	12oz
Double Sheet		500g	1lb 2oz
Single Sheet		350g	12oz

If you group small cotton or terry-towelling items with a synthetic fabric load they could be damp at the end of the drying cycle. If this happens simply give them an additional short period of drying to finish them off.



---

# Wash Care Labels

---

Most of today's fabrics can be tumble dried in your Dryer with no trouble at all, but there are certain fabric finishes which should be dried away from direct heat.

The majority of garments now have wash-care labels on them, giving full washing and drying instructions. These should always be followed carefully especially when you are drying something for the first time.

Typical symbols are:



May be tumble dried



Do **not** tumble dry

Or:



Tumble dry at high heat setting



Tumble dry at low heat setting

---

## Items not suitable for tumble drying

- Those containing foam rubber or rubber-like materials or plastic film (e.g. pillows, cushions, PVC rainwear), or any other articles which are inflammable or contain inflammable substances (e.g. towels contaminated with hair lacquer)
- Fibreglass (e.g. some types of curtains)
- Items which have been dry cleaned
- Woollens. Woollen items need as much care in drying as they do in washing. The movement of the tumble-drying action causes the woollen fibre to shrink and distort.
- Garments with the ITCL Code (see 'Items Requiring Special Attention').



Do **not** tumble dry.

- Large bulky items e.g. continental quilts, sleeping bags, pillows, cushions, double blankets and large bedspreads. These expand when drying and would prevent airflow through the Dryer.

**WARNING: THE DRYER IS INTENDED FOR USE ONLY WHERE WATER SOLUTION IS USED FOR THE CLEANING PROCESS. MISUSE OF A TUMBLE DRYER MAY CREATE A FIRE HAZARD.**

---

# Items requiring special attention

---

## Blankets and Bedspreads

The drying requirements of blankets and bedspreads will, of course, vary tremendously according to size and weight. Some, however are simply too big. if you have difficulty getting them into the Dryer, the machine will have difficulty drying them properly. Blankets (and Garments) made from Acrylic fibres (e.g. Acilan, Courtelle, Orion and Dralon) **must be dried** with special care on Low heat setting. Overdrying should be avoided to ensure heat creasing does not occur.

## Permanently pleated or creased garments

Your dryer will cope with such clothes very well, but you should always read the manufacturer's drying instructions attached to the garment before you begin.

## Starched articles

Starched articles should be dried together in the same load to avoid the distribution of starch to non-starched items. You should use a slightly heavier starch solution than you would when drying the items on the washing line. Make sure that as much of the solution is removed from the load as possible before placing it in the Dryer. Remove the items from the dryer as soon as they reach ironing dampness. If they are overdried the starch will powder, leaving the fabric limp - which rather defeats the purpose of the exercise!

## Fabric conditioner

To make sure all your tumble dried clothes come out really fresh and soft we recommend you use a liquid fabric conditioner in the final rinse of your **wash**. A liquid fabric conditioner restores bounce and softness and helps eliminate static cling.

**WARNING: ON NO ACCOUNT SHOULD LIQUID FABRIC CONDITIONER BE ADDED TO THE DRYER ITSELF.**

## Home Dry Cleaning

 
Garments with the ITCL Code ☒ may be cleaned using one of the Home Dry Cleaning Kits available. The instructions supplied with the Home Dry Cleaning Kit must be strictly followed.

---

# The Controls

---

## Setting the timer

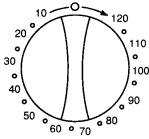

Turn the Timer clockwise to select the required drying time. The timer controls the drying time for both heat settings. All you have to do is turn the Timer knob clockwise until it lines up with the required time.

### **Never wind the Timer Control anti-clockwise.**

This operation also starts the dryer, provided the door is closed and the machine is plugged in. The “Guide to Drying Times” section will tell you how much time you’ll need for various loads.

## Door Release

To open door, grip the handle and pull towards you.

If the door is opened while the Dryer is in use, the drying programme cuts out automatically and the machine stops. When the door is closed the Dryer will restart but you will not need to reset the Timer Control.

You can however reset the Timer Control at any stage, should you wish.

**WARNING: CHILDREN HAVE BEEN KNOWN TO CLIMB INTO TUMBLE DRYERS AND INJURE THEMSELVES. ALWAYS ENSURE THAT THE MACHINE IS SWITCHED OFF AT THE MAINS WHEN THE DRYER IS NOT BEING USED.**

## Heat Selection

Select the appropriate button for low heat or for high heat.

With the switch IN High Heat is selected

With the switch OUT Low Heat is selected

The choice of HIGH HEAT or LOW HEAT depends upon the fabric you wish to dry (see section “Sorting your Laundry”)

## Mains Light (if fitted)



This light indicates that there is power being supplied to the dryer when plugged into a suitable socket.

# Guide to Drying Times

Please note that the Drying Times stated below and on appliance control panel are a GUIDE only and drying times are affected by:

- The amount of water remaining in the clothes after spinning** Items such as towelling retain a lot of water after spinning, also the suggested wash programme for small items such as T-Shirts may sometimes incorporate a low spin speed which has the same effect.
- The type of fabric** Your drying load may contain the same type of fabric but of different thicknesses. Thinner items will take less time to dry. Some fabrics, such as those used for jeans are of closer texture than others and although light when dry will be heavy after washing and spinning.
- The quantity of clothes to be dried** Single items of clothes or small loads may take disproportionately longer to dry. It is more energy efficient to dry larger loads.
- How dry you want the clothes** As it takes longer to fully dry clothes than to have them ready for ironing, you may wish to remove some clothes when they are slightly damp, ready for ironing and then continue to dry the remainder until they are fully dry.
- The heat setting you have selected** The label on the garment should tell you the correct heat setting to select. See 'Wash Care Labels'.
- The temperature of the room** If the room in which the dryer is situated is cold, your clothes will take longer to dry than if the room is warm.
- Bulky items** Some bulky items such as padded jackets can be dried, with care, and we do advise that you remove these items several times, shake them and return them to the dryer.  
**THERE ARE HOWEVER SOME ITEMS THAT WE DO NOT ADVISE YOU TO DRY: SEE 'ITEMS NOT SUITABLE FOR TUMBLE DRYING'**

**Drying Guide** - approximate drying time in minutes (weights specified are when dry)

COTTONS			SYNTHETICS		ACRYLICS	
High Heat			High Heat		Low Heat	
Drying times 1000rpm in washing machine			Drying times on reduced spin in washing machine		Drying times on reduced spin in washing machine	
	Half load	Full load	Half load	Full load	Half load	Full load
1 kg	2 kg	3 kg	1 kg	2 kg	1 kg	2 kg
30 - 40	40 - 55	60 - 70	20 - 30	30 - 45	30 - 50	50 - 70

 
- Be careful not to overdry** All fabrics contain a little natural moisture even when 'dry' and this natural moisture should not be lost if the clothes are to remain soft and fluffy. Clothes that are dried for too long tend to wrinkle and will need more ironing than usual giving you extra work that the dryer was designed to remove.

---

# How to remove and clean the fluff filter

---

## To remove the filter

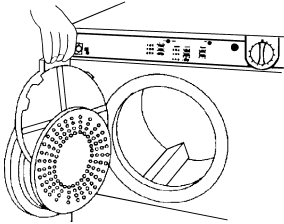

A very important part of your dryer is the fluff filter at the front edge of the drum. It's there to trap the particles of lint and fluff which are normally blown away when clothes are dried on the washing-line.

if the filter is allowed to become blocked, the passage of warm air through the drum will be severely restricted. This means your clothes will take much longer than normal to dry and the cost of drying them will be increased. it may also damage your dryer.

**WARNING: DO NOT OPERATE THE DRYER WITHOUT CLEANING THE FILTER AFTER EACH DRYING CYCLE.**

Wash or vacuum clean the filter occasionally.

Don't be alarmed by the amount of fluff you may find on the filter. It's part of the wearing, washing and drying process.

**WARNING: DO NOT OPERATE THE DRYER WITHOUT THE FILTER IN POSITION.**

---

## Caring for your Dryer

---

Your tumble dryer needs very little attention. The following simple steps will keep it performing well.

### When finished

**Switch off electricity and remove plug.**

### After each load

Always clean the filter and turn the drum by hand to check that small items like handkerchiefs do not get missed.

### As necessary

Clean exterior metal and plastic surfaces with a damp cloth or silicon polish only. Regularly check and clean if necessary, the vent hose and any permanent venting fixture to ensure that there has been no accumulation of fluff or lint during the drying process. Clean fluff from the area below the fluff filter and the rear vent tube.

**Do not use** abrasive cleaners, scouring agents, acids, chlorine bleach or metal polish to clean any part of the machine. These could damage the machine.

### Lubrication

Your tumble dryer uses special bearing components. Lubrication by the user is not necessary and must not be attempted.

We strongly recommend that all appliances are regularly checked for electrical and mechanical safety.

---

# If something goes wrong

---

First, don't panic! There may be nothing wrong at all. Look for your problem below, then check the things we suggest. More often than not, this will give you the answer to your problem, and you'll be able to carry on without having to telephone your Service Office.

If after this you still cannot get your machine to work, follow the advice given on the next page.

---

## Problem

## Check these things first

---

### 'It won't start'

1. Is the machine plugged in and switched on at the socket?
  2. Is the Timer Control set to required time?
  3. Is the door securely closed?
  4. Has the fuse blown? (Try plugging in another appliance to check)
  5. Have you used an extension lead? Many are not suitable. Try plugging the dryer directly into a socket to check.
- 

### 'It is taking a long time to dry'

1. Have you forgotten to clean the filter? It should be cleaned after each load.
  2. Have you selected the correct Heat setting for the type of fabric you are drying?
  3. Is the flexible Vent Hose blocked or kinked? Check it for foreign objects or condensate (water).
  4. Is the air inlet obstructed in any way?
  5. Permanent venting - is flap on the storm cover obstructed?
  6. Were the clothes 'excessively wet' when they were put in?
  7. Was the correct time selected?
  8. Have you overloaded the dryer?
- 

### Any other problem

Have you re-read this instruction book?

---



This appliance conforms to the following EC Directives.  
Low Voltage Equipment  
2006/95/EC  
Electromagnetic Compatibility  
2004/108/EC

# If it still won't work...

## Contact the Service Office

If something is still wrong with your machine after you've been through the check-list on the previous page:

1. Switch off and unplug your machine from the mains.
2. Call your nearest Service Office or local importer.

When you contact us we will want to know the following:

1. Your name, address and postcode.
2. Your telephone number.
3. Clear and concise details of the fault.
4. The model number and the serial number of your dryer.
5. The date of purchase enter the date here.

Please make sure you have all these details ready when you call.

## Spare parts

Please remember your new appliance is a complex piece of equipment.

'DIY' repairs or unqualified and untrained service people may put you in danger, could damage the appliance, and might mean you lose cover under the Parts Guarantee.

If you do experience a problem with the appliance don't take risks, call in our Service Engineer. Our Spare Parts are designed exclusively to fit your appliance. Do not use them for any other purpose as you may create a safety hazard.



## Recycling and Disposal Information

As part of our continued commitment to helping the environment, we reserve the right to use quality recycled components to keep down customer costs and minimise material wastage.

- Disposal of packaging materials: follow local regulations, so that packaging can be recycled.
- To minimise the risk of injury to children, remove the door and plug - then cut off the mains cable, flush with the appliance. Dispose of these parts separately to ensure that the appliance can no longer be plugged into a mains socket.

## Disposal of old electrical appliances

The European Directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed of in the normal unsorted municipal waste stream. Old appliances must be collected separately in order to optimise the recovery and recycling of the materials they contain and reduce the impact on human health and the environment.



The crossed out "wheeled bin" symbol on the product reminds you of your obligation, that when you dispose of the appliance it must be separately collected.

Consumers should contact their local authority or retailer for information concerning the correct disposal of their old appliance.

# Product Data... (EU Regulation 392/2012)

Rated capacity of Cotton laundry for the standard programme at full load <b>3 kg</b>	Energy efficiency class <b>C</b>
<p>The weighted Annual Energy Consumption (<math>AE_c</math>) <b>261.3 kWh</b>          Consumption per year, based on 160 drying cycles of the standard cotton programme at full and partial load, and the consumption of the low-power modes. Actual energy consumption per cycle will depend on how the appliance is used.</p>	
<p>This household tumble dryer is an <b>Non-Automatic Air-Vented Dryer</b></p>	
<p>Energy consumption : full load <math>E_{dry}</math> <b>2.17 kWh</b>, partial load <math>E_{dry1/2}</math> <b>1.23 kWh</b></p>	
<p>Power consumption : off-mode (<math>P_o</math>) <b>0.06 W</b>, left-on mode (<math>P_l</math>) - <b>W</b></p>	
<p>Duration of the 'left-on mode' for power management systems - minutes</p>	
<p>The 'standard cotton programme' suitable for drying normal wet cotton laundry that is the most efficient programme in terms of energy consumption for cotton used at full and partial load is <b>High Heat</b>.</p>	
<p>Programme time (minutes) : weighted (<math>T_l</math>) full &amp; partial load <b>57</b>, full load (<math>T_{dry}</math>) <b>72</b>, partial load (<math>T_{dry1/2}</math>) <b>45</b></p>	
<p>Airborne acoustical noise emissions <b>69 dB(A) re 1 pW</b></p>	







## Guarantee

### 12 months Parts and Labour Guarantee

Your appliance has the benefit of our manufacturers' guarantee, which covers the cost of breakdown repairs for twelve months from the date of purchase.

This gives you the reassurance that if, within that time, your appliance is proven to be defective because of either workmanship or materials, we will, at our discretion, either repair or replace the appliance at no cost to you.

#### The guarantee is subject to the following conditions:

- The appliance has been installed and operated correctly and in accordance with our operating and maintenance instructions.
- The appliance is only used on the electricity or gas supply printed on the rating plate.
- The appliance has been used for normal domestic purposes only.
- The appliance has not been altered, serviced, maintained, dismantled or otherwise interfered with by any person not authorised by us.
- Any repair work must be undertaken by us or our appointed agent.
- Any parts removed during repair work or any appliance that is replaced become our property.
- The appliance is used in the United Kingdom or Republic of Ireland.

#### The guarantee does not cover:

- Damage resulting from transportation, improper use, neglect or interference or as a result of improper installation.
- Replacement of any consumable item or accessory.  
These include but are not limited to: plugs, cables, batteries, light bulbs, fluorescent tubes and starters, covers and filters.
- Replacement of any removable parts made of glass or plastic.

THE GUARANTEE WILL NOT APPLY IF THE APPLIANCE HAS BEEN USED IN COMMERCIAL OR NON-DOMESTIC PREMISES.

#### Non-Domestic Usage Policy:

Indesit Company manufactures appliances for domestic use only. We understand that in some cases our appliances are used in commercial and/or non-domestic situations. We still provide a full 12 month manufacturers' guarantee, provided the appliance has not been:

- Accidentally damaged* - Damage that occurs suddenly as a result of an unexpected and non-deliberate external action.
- Maliciously damaged* - The deliberate and intentional damage to the product.
- Subjected to misuse* - Incorrect or careless or improper use.
- Subjected to overuse* - Excessive usage versus that expected of a domestically situated appliance.



## 5 Year Parts Guarantee

Hotpoint also offers you a FREE 5 year parts guarantee.

This additional guarantee is conditional on you registering your appliance with us and the parts being fitted by one of our authorised engineers.

There will be a charge for our engineer's time.

To activate the extra parts warranty on your appliance, simply call our **free phone** registration line on **0800 519 2102 (Republic of Ireland 1800 844 347)**

## Extended Guarantees

We offer a selection of protection plans that enable you to fully cover yourself against the expense of repair bills for the life of your policy.

To find the ideal plan for you please call our advice line on **08448 226 226 (Republic of Ireland: 01 230 0233)**

## Free Helpdesk Service

We have a dedicated team who can provide free advice and assistance with your appliance if you experience any technical difficulties within the first 90 days of ownership.

Simply call our Hotpoint Service Hotline on

**08448 224 224 (Republic of Ireland 0818 313 413)**

for telephone assistance, or, where necessary, to arrange for an engineer to call.

## After Sales Service

No one is better placed to care for your Hotpoint appliance during the course of its working life than us - the manufacturer.



195057472.04 N

10/2012 - LION fpg . Four Ashes, Wolverhampton



## Essential Contact Information

### Hotpoint Service

We are the largest service team in the UK and Ireland offering you access to 400 skilled telephone advisors and 1100 fully qualified engineers on call to ensure you receive fast, reliable, local service.

**UK: 08448 224 224**

**Republic of Ireland: 0818 313 413**

**[www.hotpointservice.co.uk](http://www.hotpointservice.co.uk)**

**Please note: Our advisors will require the following information:**

Model number

Serial number

### Parts and Accessories

We supply a full range of genuine replacement parts as well as accessory products that protect and hygienically clean your appliance to keep it looking good and functioning efficiently throughout its life.

**UK: 08448 225 225**

**Republic of Ireland: 0818 313 413**

**[www.hotpointservice.co.uk](http://www.hotpointservice.co.uk)**

### Appliance Registration

We want to give you additional benefits of Hotpoint ownership. To activate your FREE 5 year parts guarantee you must register your appliance with us.

**Free phone UK: 0800 519 2102**

**Republic of Ireland: 1800 844 347**

**[www.hotpointservice.co.uk](http://www.hotpointservice.co.uk)**

**Indesit** Company UK Limited, Morley Way, Peterborough, PE2 9JB  
**Indesit** Company, Unit 49 Airways Industrial Estate, Dublin 17

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>