



## Installation and User Instructions for the Aquarius Range



For everyone you'll ever be

WMA33  
WMA32  
WMA31  
WMA30

# Congratulations on choosing Aquarius!!



Model WMA 33

Model WMA 32

Model WMA 31

Model WMA 30

## Model WMA33

Model WMA33 shows the maximum features available on an Aquarius washing machine.



Please record the Model number and the Serial number of your machine on the Back Cover of the book for future reference.

The Model number can be found on the control panel.  
The Serial number can be found on the inner door trim.



Interlocking door & release lever

Hooked end support

Mains cable

Hot water inlet point and attached hose (grey)

Cold water inlet point and attached hose (blue)

Rating plate

Transit bolts (both must be removed before use)

Plumbing Indicator Line label

Drainage hose

Wheels

The following instructions and information will help you to get the most out of your new machine...

## Safety first!

This instruction manual contains important details on using your machine safely. If you pass the machine onto someone else, make sure that you give them this manual.

Page 4

SAFETY

## Installing your machine

Follow these steps for trouble free installation: location, transit bolt removal, electricity, water supplies and drainage. Moving the machine and adjusting the feet.

Pages 5-10

INSTALLING YOUR MACHINE

## A typical wash programme

Washcare tips and a simple step by step guide to using your machine.

Pages 11-12

ATYPICAL WASH PROGRAMME

## The dispenser

Guidance on getting the most out of your wash using powders, liquids, tablets and fabric conditioners.

Pages 13-14

THE DISPENSER

## Programmes, options and other features

Select a programme for any wash including automatic functions, pre-washes, economy loads, variable temperature and spin speeds.

Pages 15-18

PROGRAMMES AND OPTIONS

## Cleaning and maintenance

How to care for your machine by removing and cleaning the dispenser drawer and compartments, cleaning the door bowl and machine exterior plus the recommended Maintenance wash.

Page 19

CLEANING & MAINTENANCE

## Troubleshooting

In the unlikely event that you have problems with your machine, the following guide may help you to get your machine working correctly straight away.

Pages 20-21

TROUBLE SHOOTING

## After sales service and guarantee

We give you a unique 'satisfaction guaranteed' promise - valid for ninety days after you have purchased your machine.

Pages 22-23

SERVICE & GUARANTEE

# Safety first

## SAFETY

This instruction manual contains important details on using your machine safely. Please keep it safe for your future reference.

If you pass the machine onto someone else, please make sure that you give them this manual so that the new owner can read these safety warnings.



- **Dispose of packaging materials carefully and keep them well away from children.**
- **When disposing of your old machine, to minimise risk of injury to children, isolate from the electrical supply, remove the door, the plug and cut the mains cable off flush with the appliance. Dispose of them separately to make sure that the appliance can no longer be plugged into a mains socket.**
- **This washing machine is designed for domestic use only.**
- **Before using your machine remove the transit bolts and spacers from the back of the machine. Keep the parts you remove for future transportation.**
- **Any electrical work necessary to install this machine should be carried out by a qualified electrician.**



- **Do not plug your machine into a socket when your hands are wet.**
- **Do not connect the washing machine to a single outlet instantaneous water heater.**
- **Do not try to modify this machine in any way.**
- **Do not connect the washing machine directly to an artificial water softening unit. Use the recommended amount of detergent for the water hardness in your area.**
- **Do not let children play with the machine or its controls.**
- **Do not stand on the machine or in the door opening.**
- **Do not lean on the door or use the door to lift or move the machine.**
- **Do not wash garments that have previously been treated with solvents.**

## Remove the polystyrene block...

After removing the packaging from the machine, make sure that the polystyrene block (figure 1) has come away from the underside of the machine, with the polystyrene base.

If it has not come away, carefully lower the machine on its side onto the polystyrene top cap and then remove the polystyrene block (see figure 2).

You may need a second person to help you lower and raise the machine.

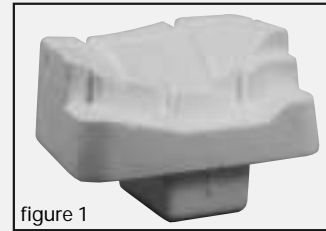


figure 1



figure 2

INSTALLING  
YOUR MACHINE

# Installing your machine

Follow these steps for trouble free installation:


## 1. Choose a location...

Where you install the machine will affect its performance.

- For your safety and to comply with electrical regulations, seek professional advice if you want to install your machine in a bath or shower room.
- Make sure that the electrical socket and water taps are easily accessible. You should switch off the machine's electrical and water supplies when you are not using it.
- Make sure that you allow enough space for the machine. Select a space at least 600mm wide, 600mm deep and 850mm high. Also leave enough space to open the door fully so you can load and unload it easily.
- Where possible the machine should be positioned on a solid level floor to minimise vibration.
- Take care when you move the machine not to rip any floor coverings. There are wheels on the bottom rear of the machine, so tilting it backwards a little is the easiest way to move it. The weight of the machine may cause indentations in some floor coverings.

### WARNINGS:

- Do not plug the machine in and switch it on at the mains until the installation is completed.
- You may be charged for a service call if a problem with your machine is caused by incorrect installation or misuse.

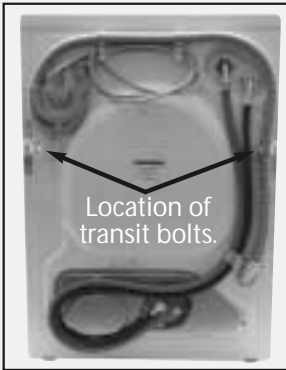

Location of transit bolts.

## 2. Remove the transit fixings...

There are **two** transit bolts fitted under plastic covers, one at either side of the rear of your machine. These bolts prevent damage to the machine while it is being transported. Remove both transit bolts complete with spacers, by following the instructions below. Use a screwdriver to release the covers and a standard 13mm spanner to remove **both** bolts..


### WARNINGS:

- Before you use the machine, remove the two transit bolts complete with spacers. If you do not do this, damage may occur to your machine. Keep the parts in case you need them for future transportation.
- If and when you replace the bolts complete with spacers make sure you do not overtighten them.


Firstly, unhook the grey drainage hose and proceed as follows, taking care not to loosen the hot and cold water fill hoses.




Using a screwdriver, remove the screw to release the plastic cover.

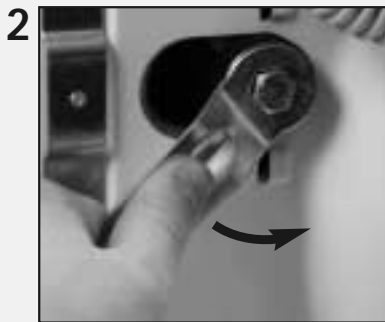

Use a standard 13mm spanner to undo the bolt until three threads can be seen on the bolt. (see below)

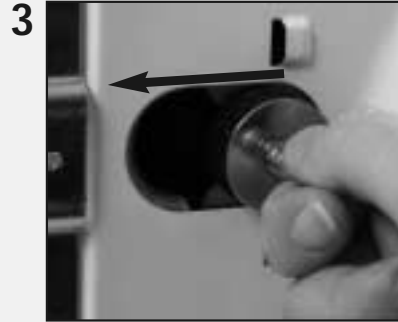

Hold the transit bolt and slide to the side and then pull out. The bolt and spacer should be removed intact. (see below)

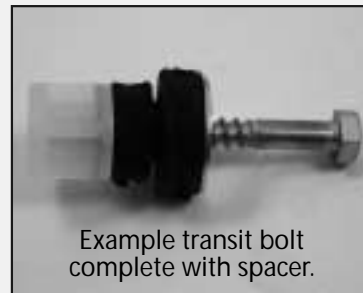

Example transit bolt complete with spacer.



For **safety**, replace the plastic cover over the hole left by the transit bolt.

**(Repeat steps 1 to 4 to remove the second transit bolt).**

### 3. Connect your machine to the electricity supply

Make sure that the electrical socket is accessible. Take the mains lead from the back of the machine and plug it into the socket. We do not recommend wiring your machine directly into the mains supply.

#### Changing the mains lead

If you have damaged the existing lead and need a new one, contact Hotpoint Service UK on 08709 066066 or [www.theservicecentre.co.uk](http://www.theservicecentre.co.uk) (or in the Republic of Ireland on 1850 302 200). A charge will be made. We strongly advise that fitting the new lead is carried out by a qualified electrician.


#### Changing the plug

If you need to change your plug if it does not fit your socket; isolate the machine from the mains supply. Cut off the supplied plug and safely dispose of the discarded plug. Note: If you change the plug, the colour of wires in the mains lead may not match the colour of the markings which show the different terminals in the plug. You must wire it as shown below.

##### Green and yellow

(Earth) wire this to the terminal marked 'E', ⊕ symbol, or coloured green and yellow.

**Blue (Neutral)** wire this to the terminal marked 'N' or coloured black.

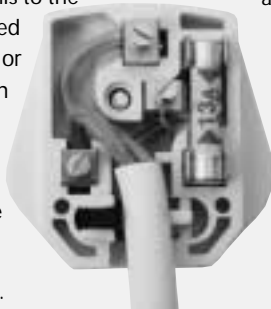

**13A ASTA** approved fuse to BS1362.

**Brown (Live)** wire this to the terminal marked 'L' or coloured red.

#### Fuses

Your machine comes fitted with a plug and a 13 amp (13A) fuse. If you need to replace the fuse, use only those rated at 13 amp (13A) and ASTA approved to BS1362. To change the fuse, lift the holder to vertical position and lift the fuse out. To replace the fuse, insert the fuse and push the fuse holder down into the locked position. Correct replacement is identified by colour coding or the marking on the base of plug.

#### WARNING:

**Do not use the plug unless the fuse holder is in the locked position and the top cover firmly replaced.**



CE marking shows that this machine meets the following EEC directives.

Low Voltage Equipment - 72/23/EEC & 93/68/EEC  
Electromagnetic Compatibility - 89/336/EEC, 92/31/EEC & 93/68/EEC.

#### WARNINGS:

- This machine must be earthed.
- Do not use the plug unless the fuse cover is fitted.
- To avoid a shock hazard, when changing a plug, always safely discard the cut off plug. Do not insert into any other socket.
- Seek professional advice if you need to use an extension lead.

INSTALLING  
YOUR MACHINE

## 4. Connect your machine to the water supply...


### WARNINGS:

- The temperature of your hot water supply should ideally be 60°C and no higher than 70°C as this could cause damage to your laundry and the machine.
- Do not connect the machine to a single outlet instantaneous water heater.

- Your hot and cold water pressure should be between 3 and 150 psi (21 - 1034 kPa).
- The water supply taps should be accessible when the machine is installed.
- Before connecting the fill hoses, check that water is running from the water supply taps you will use for your machine.
- Connect the washing machine to the water supply using the fill hoses fitted to the machine. Do not use old hoses.

### Hot and cold fill

- 1 Unclip the grey and blue fill hoses from the back of the machine.
- 2 Connect the free end of the grey fill hose to the HOT water supply (see figure 1). Connect the free end of the blue fill hose to the COLD water supply.
- 3 Turn on your water supply and check for leaks. If there is a leak, turn off the water supply, remove the connector and check that the sealing washer is in place. Refit the connector and tighten it. Turn on the water supply.
- 4 When moving the machine into its final position, make sure that the hoses are not trapped or kinked.

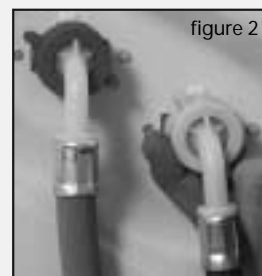


### If the fill hoses are too short:

Longer fill hoses are available from our Genuine Parts and Accessories Mail Order Hotline UK on 08709 077 077 or [www.theservicecentre.co.uk](http://www.theservicecentre.co.uk) (or in the Republic of Ireland on (01) 842 6836).

Remove the existing fill hoses from the inlet valves on the back of the machine and fit the new longer fill hoses as shown above with the angled ends of the hoses connected to the machine (see figure 2).

cold water supply

figure 3

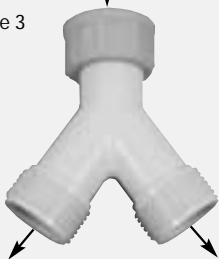

### If you have no hot water supply or your hot water pressure is low:


A cold fill adaptor (figure 3) and fitting instructions are available from your local Hotpoint authorised Service Centre or by calling the Genuine Parts and Accessories Mail Order Hotline UK on 08709 077 077 or [www.theservicecentre.co.uk](http://www.theservicecentre.co.uk) (or in the Republic of Ireland on (01) 842 6836).



## 5. Connect the machine to a drainage system...


- Do not remove the hooked end support from the GREY drainage hose when using any of the drainage methods detailed below. You may need to reposition it as required along the drainage hose.
- For drainage into a standard work top sink, ensure the outlet pipe has a minimum diameter of **32mm**. If your sink is inset, the front edge of the basin must be less than **75mm** from the front edge of your worktop, so that the drain hose will hook securely into the sink. Unclip the drainage hose from the back of the machine and hook over into the sink. Make sure that the sink is free of any obstructions and that the sink plug can not fall into the sink, preventing the water from draining away freely. Pumped out water may be very hot.

We recommend one of the following drainage methods:

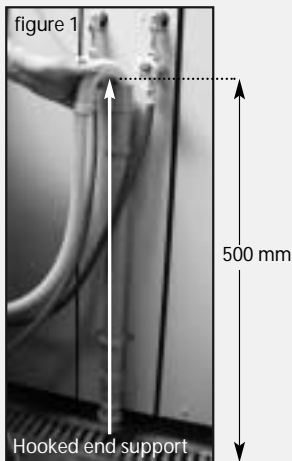


### Standpipe

- 1 Make sure that the standpipe has a minimum diameter of 38mm.
- 2 Remove the drainage hose from the clips on the back of the machine.
- 3 Make sure that the top of the standpipe is positioned at least **500mm** from the floor (see figure 1). Use the plumbing indicator line label on the back of the machine as a guide.
- 4 Place the drainage hose approximately 100mm into the standpipe.

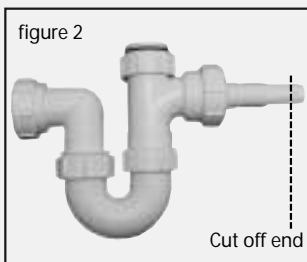

### Under sink waste system

- 1 Cut out the membrane, bung or blanking plug (see figure 2).
- 2 Unclip the drainage hose from the back of the machine.
- 3 Move the hooked end support along the drainage hose as required.
- 4 Attach the drainage hose securely to the under sink drainage unit, using a hose clip (see figure 3).
- 5 Raise the hooked end support up to at least **800mm** to avoid water being drawn back into the machine.

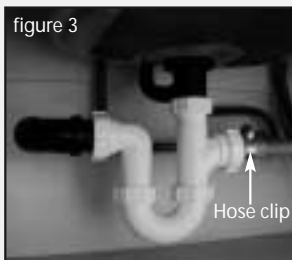

### If the GREY drainage hose is too short

A longer drainage hose is available from our Genuine Parts & Accessories Mail Order Hotline  
UK on 08709 077 077 or [www.theservicecentre.co.uk](http://www.theservicecentre.co.uk)  
(or in the Republic of Ireland on (01) 842 6836).

### WARNINGS:

- Take care when using the sink drainage system. The discharge water may be very hot.
- Do not position the standpipe near an electrical socket.
- Flooding could occur if any part of the installation is not carried out correctly.

## 6. Move the machine into position...

### WARNING:

- Do not drag or lift the machine by it's door.

Your machine is heavy so care must be taken when moving it. To help you we have fitted wheels to the bottom rear of the machine.

- Please take care not to damage any floor coverings when moving the machine.
- When moving the machine, take care not to kink or damage the hoses at the back of machine.




## 7. Adjust the feet...

### Once the machine is in place

Your machine may become noisy or move about if it is not level.

If necessary, to level the machine adjust the two front feet, as follows:

- 1 Remove the yellow labels from the feet.
- 2 Turn both the locking disc and foot together clockwise until the machine is standing firm and does not rock. To check this use a spirit level.
- 3 Turn only the locking disc anti-clockwise until it is in contact with the base of the machine.
- 4 Switch the machine on at plug socket.

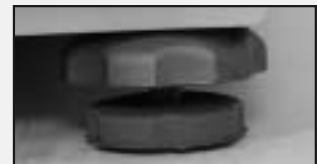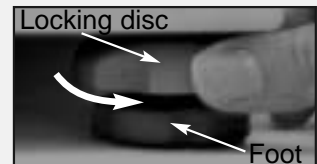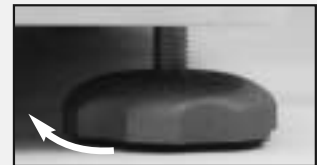

Now that you have successfully installed your new machine, we advise that you run it through a programme C wash without any laundry and without any detergent in it.

This will check your installation, connections and drainage, and will thoroughly clean the interior before you carry out an actual wash programme on your laundry.

**NOTE:** This will take approximately 2 hours 30 minutes to complete.

Continue reading this book to get to know the various features of the machine.

# Using your machine

The rest of this instruction book will help you to make the most of your new washing machine. We have created the machine for the way you live, by listening to people just like you who use our products. You will find that your new machine has many useful features and is easy to use.

## Washcare tips...

- Your machine can wash a maximum load of 5.5kg (cotton).
- Do not overload the machine (maximum load 5.5kg). In addition to reducing the quality of the wash, this may also damage your laundry and the machine.
- Do not use the machine if the item to be washed does not have a wash label.

**Before washing laundry we recommend that you do the following:**

- Pre-treat awkward stains with washable treatments. Do not wash any items that have previously been treated with solvents.
- Close zips, fasten belts, tie strings and close press studs to prevent tangling.
- Empty all objects from pockets as they may damage clothes and the machine.
- Limit the size of absorbent loads, for example towels to 3kg (7lb) to give good washing and rinsing results.
- Place small items in a wash bag.
- Always follow the care label on items when choosing a wash programme.
- Wash non-colourfast items or really dirty clothes separately as they may affect other items.

### Weight of Wash Load

Two examples of maximum wash loads for different types of fabric.

**COTTON**  
2 Bath Towels  
5 Shirts  
6 Blouses  
1 pair of Pyjamas  
4 items of Underwear

**= 5.5kg**

**SYNTHETIC**  
2 Children's Dresses  
4 Shirts  
4 Blouses  
1 pair of Pyjamas  
4 items of Underwear

**= 3kg**

ATYPICAL WASH PROGRAMME

# A typical wash programme

ATYPICAL WASH PROGRAMME

## WARNINGS:

- Do not allow children to play with the machine or tamper with the controls.
- Do not overload the machine! It may damage laundry and reduce the quality of the wash.
- Do not try to open the door when the door indicator light is on.
- Do not open the dispenser drawer during any programme.

- 1 Sort your laundry into groups by washcare labels. Load the machine, making sure that clothes are not trapped in the door. Close the washing machine door by pushing it until it clicks.



2 Add detergent and fabric conditioner, if required, to the dispenser drawer. Refer to the detergent manufacturer's dosage instructions.




3 Turn the programme selector dial to the programme required.

- 4 Select any optional wash feature(s) that you may require by pressing the appropriate button(s), indicator lights will show what you have chosen.

- 5 Models WMA32 and WMA33 only. **Reduce** the spin speed if you wish by turning the variable spin speed control dial.

- 6 Model WMA33 only. **Reduce** the wash temperature if you wish by turning the variable temperature control dial.

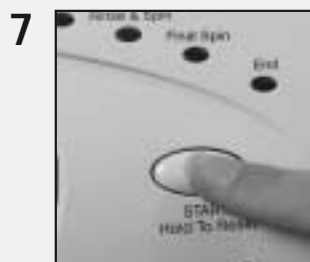

7 When all selections have been made press the '**START/Hold To Reset**' button. To cancel a programme once the machine has started, press and hold in the '**START/Hold To Reset**' button for two seconds, until the '**End**' light flashes. You can then re-select the programme you want. Press the '**START/Hold To Reset**' button again to carry on.




8 During the wash, the programme progress lights will show what stage in the cycle the programme has reached.

- 9 A short time after the programme has finished the '**Door Locked**' indicator light will go out and you can open the machine door. Return the programme selector dial to the '**OFF**' position. We also recommend that you switch off the electricity and water supply.

# The dispenser

**IMPORTANT INFORMATION.** We have set the detergent retaining flap, in the main detergent compartment to dispense powder detergent only. If you want to dispense liquid detergent put the retaining flap in its 'down' position.

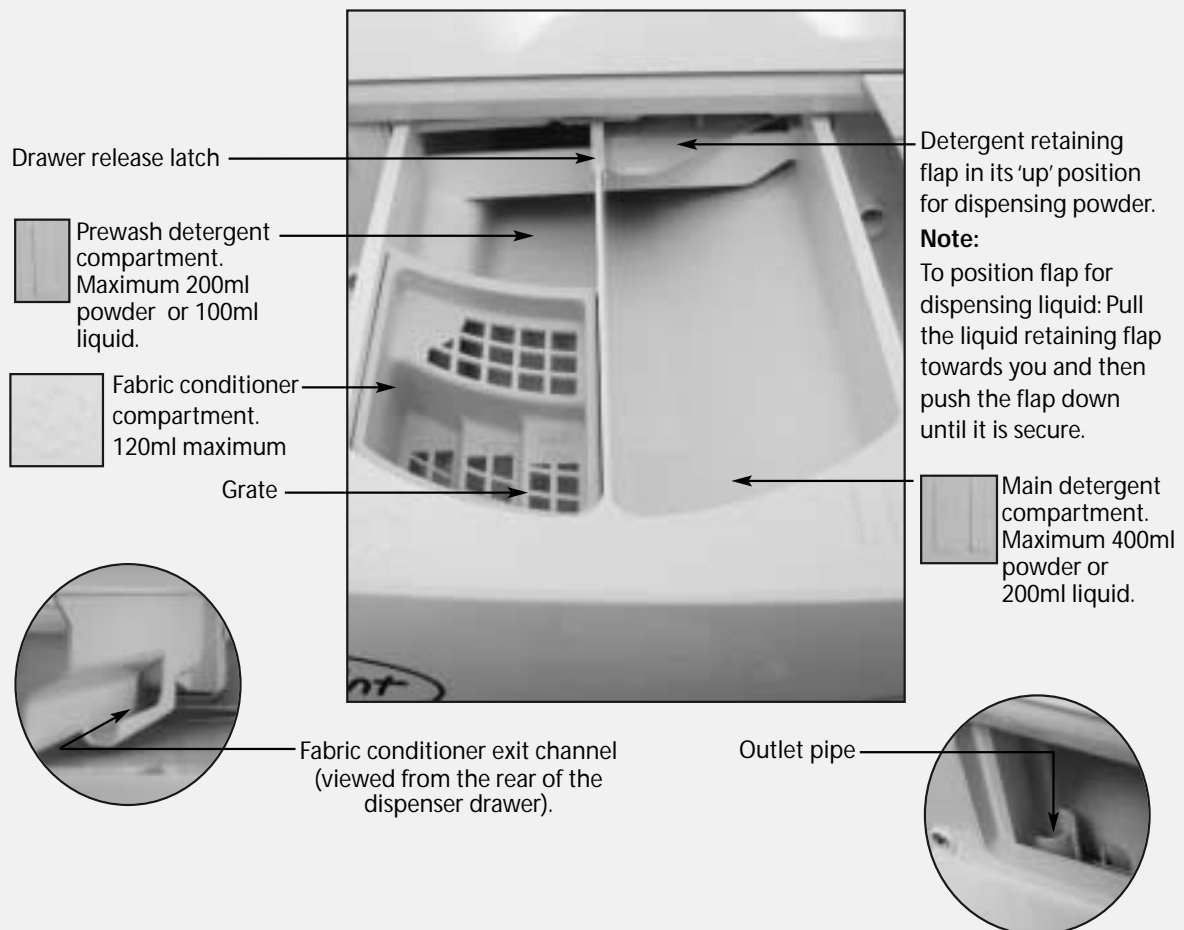

THE  
DISPENSER

## Choose a suitable detergent

- Follow the detergent manufacturer's recommendations to make sure you use the correct amount for your wash.
- To achieve the best wash results, the water hardness, degree of soiling and load size need to be considered and the recommended amount of detergent used.
- We recommend the Persil range of detergent products and Comfort fabric conditioner.
- Choose 'lowsuds' automatic powder, liquid or tablets, designed specifically for automatic washing machines. Do not use handwash detergent, even on the handwash programme as excessive suds will occur.
- Do not use too much detergent or exceed the maximum level indicators.
- Do not use too little detergent, you will not achieve a clean wash. Follow the detergent manufacturer's recommendations.

**WARNING:**

- Do not put any item(s) into the drawer other than detergents that are designed to be released from the drawer as they may cause damage or blockage.

**THE DISPENSER**



**Dispensing powder detergent**

To achieve the best wash results the manufacturer's recommended amount of detergent should be measured and added to the dispenser drawer (max. 400ml).



**Dispensing liquid detergent**

The liquid retaining flap is preset for adding powder detergent. To add liquid detergent, change the position of the liquid retaining flap as follows.



**1** Pull the liquid retaining flap towards you.



**2** Push this flap down until it is secure.

The liquid detergent retaining flap indicates four lines which represent the amount of liquid you may need to use (see 2 above). Do not go above the maximum level of 200ml.

**Note:** It is normal when using liquid detergent, for a small amount of water to remain in this compartment, after the wash has finished. Lift the flap slightly and it will drain away.

**Dispensing tablets**

Most tablets are dispensed via the machine drum using a net, or similar device, which is placed on top of the washload towards the back of the drum. However, some tablets are designed to be placed in the dispenser drawer. Check the pack for details.

**Using in-drum dosing**

Dosing devices - balls, nets etc can be used. Place upright, on top of the wash load and towards the back of the machine.

Do not use with pre-wash programmes A and B.

**Pre-wash**


When you are using programmes 'A' or 'B' add detergent to the pre-wash compartment (I symbol). Add the detergent for the main wash to the main compartment (II symbol).

**Adding fabric conditioner**

Pour the recommended dosage of fabric conditioner into the compartment (flower symbol). Do not exceed the maximum fill line.



# Wash programmes

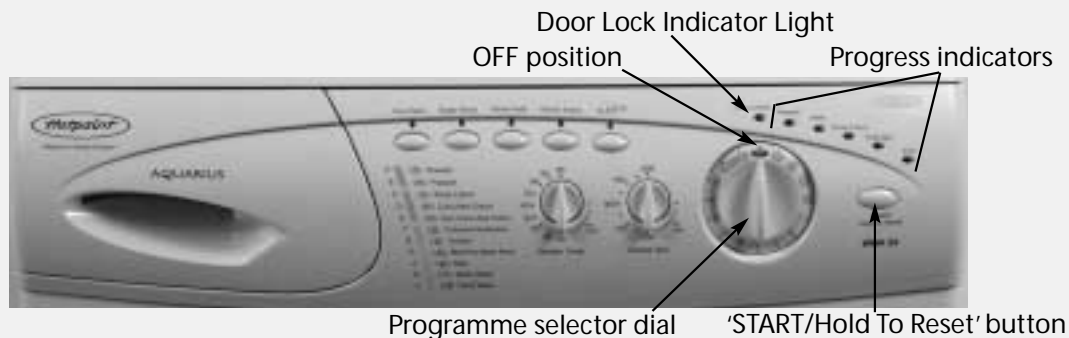

## On-Off / Selecting a programme

The machine is switched on, by turning the programme selector dial away from the **'OFF'** position, to your selected programme. To start the programme press and release the **'START/Hold To Reset'** button.

When the programme has finished return the programme selector dial to the **'OFF'** position.

## To pause or change a programme

To pause a programme hold the **'START/Hold To Reset'** button for two seconds until the **'End'** light flashes. To continue press the **'START/Hold To Reset'** button once more.

If you want to change a programme, hold the **'START/Hold To Reset'** button for two seconds until the **'End'** light flashes. You can then change the programme. Press the **'START/Hold To Reset'** button to continue. A short time after the programme has finished, the **'Door Locked'** indicator light will go out and the door can be opened. If you turn the wash programme selector dial during a programme, the **'Wash'** light will flash to show that the programme running is not that shown on the dial. Turn the dial to the original programme to stop the flashing. The flashing will stop automatically when the programme enters the rinse phase.

## Progress indicators

These will light up when you choose a programme, to indicate the progress of the selected programme. When started, the first light in the cycle will stay lit and as the machine progresses, successive lights will come on until the programme finishes. The **'End'** light will stay lit until you turn the programme selector dial to the **'OFF'** position or choose another programme or option.

## Door Locked Indicator light

The **'Door Locked'** indicator light will come on two seconds after you press the **'START/Hold To Reset'** button and will stay lit throughout the programme. A short time after the programme has finished the indicator light will go out and you can then open the door.

## Door not closed



 



 




The programme will not start if the door is not closed properly, the **'Door Locked'** indicator light will be flashing to show this. Please make sure that the door is properly closed by pushing it until you hear the catch click.

## **WARNINGS:**

 - Do not try to open the door while the **'Door Locked'** indicator light is on.
- Do not allow children to play with the machine or tamper with the controls.
- If you cancel a programme part way through a wash or there is a power cut, take care when opening the door. The machine may contain hot water.
- In the unlikely event of something not working see the **Trouble - shooting** section.

# Wash programme dial


Turn from 'OFF' to the programme you need.

Programme	Wash label	Fabric	Wash temp. °C	Maximum dry weight load	*Approx. programme time	Spin speed
<b>Automatic Pre-wash and Wash Programmes</b>						
A		White cotton Heavy soil	95	5.5kg	2 hours 30minutes - 2 hours 40minutes	Fast
B		Cotton heavy soil	40	5.5kg	1 hour 40minutes - 1 hour 50minutes	Fast
<b>Wash Programmes</b>						
C		White cotton and linen without special finishes	95	5.5kg	2 hours 20minutes - 2 hours 30minutes	Fast
D		Colourfast cotton linen or viscose without special finishes	60	5.5kg	2 hours 5minutes - 2 hours 15minutes	Fast
E		Non-colourfast cotton, linen or viscose	40	5.5kg	1 hour 40minutes - 1 hour 55minutes	Fast
F		Synthetics coloured nylon, polyester, acrylic and cotton mixtures, cotton or viscose with special finishes, coloured polyester and cotton mixtures.	50	3kg	1 hour 5minutes - 1 hour 15minutes	Slow
G		Acrylics acrylics and tri-acetate blends of these fabrics with wool, polyester and wool blends	40	3kg	40 - 50minutes	Slow
H		Wool shrink resistant machine- washable wool, woollen blankets.	40	1.5kg	1 hour 15minutes - 1 hour 25minutes	Medium
		Wool mixtures with cotton or rayon.	40	2.5kg	1 hour 15minutes - 1 hour 25minutes	Medium
J		Silk Printed acetate	30	3kg	55minutes - 1 hour 5minutes	Slow
K		Quickwash for freshening up lightly soiled items. <b>Warning:</b> not for woollen, silk or delicate items.	35	1kg	35 - 45minutes	Slow
L		Handwash a cool gentle action wash.	25	3kg	45 - 55minutes	Gentle spin
<b>Rinse and Spin programmes</b>						
Rinse and spin fast		Cotton		5.5kg	30minutes	Fast
Rinse and spin slow		Delicates		3kg	30minutes	Slow
<b>Spin only Programmes</b>						
Fast spin		Cotton		5.5kg	15minutes	Fast
Slow spin		Delicates		3kg	15minutes	Slow

\*can vary, depending on the temperature of incoming water.



# Options

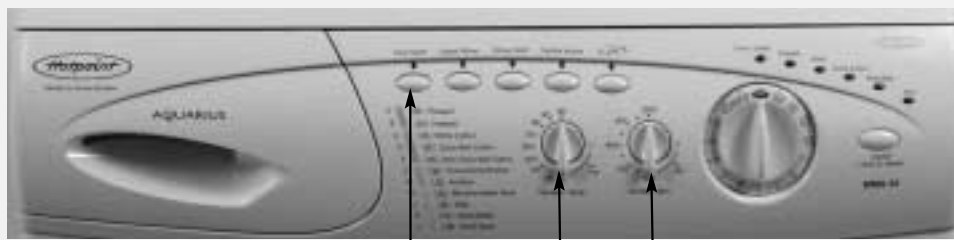

Option Buttons

Variable temperature dial

Variable spin speed dial

## Choosing an option button

To choose an option, press the button and you will see a light come on above the button. Press again to cancel, and the light will go out. You cannot alter the options once the machine is running.

### Time saver... use this option for...

- **Saving up to a third on the programme time.**  
This is not available with the Quickwash, Rinse and Spin or Spin only programmes.

### Super rinse... use this option for...

- **Large wash loads and items for young children or people with sensitive skin.**  
This option increases the water level of the first two rinses.  
This is not available with the Rinse and Spin or Spin only programmes.

### Rinse hold... use this option for...

- **Helping to reduce the creasing of delicate or synthetic fabrics by holding clothes in the final rinse water.**  
Complete the final spin by pressing the rinse hold button when the light is flashing. This is not available with the Wool, Handwash or Spin only programmes.

### Gentle action... this option ...

- **Reduces wash action and spin speed for delicate clothes.**  
This does not apply to cotton or wool programmes.  
**(not available with WMA30)**

### One... use this option for...

- **Washing a single item of clothing, for example, one pair of jeans.**  
This option will reduce water consumption and washing time.  
Note: You can reduce the amount of detergent you use with this wash.  
**Do not use the 'One' option with a full or a half load.**

## Options



### Variable spin speed

**This is only available on Models WMA32 and WMA33**

Use this control to **reduce the programme spin speed only**. If you leave this in the maximum position (1300), the spin will be the maximum which is appropriate for whatever wash programme you have chosen.

When the wash has finished return the dial to the original setting i.e 1300.

**Note: You cannot alter the spin speed while the machine is spinning.**



### Variable temperature

**This is only available on Model WMA33**

Use this control to **reduce the wash temperature only**. If you leave this in the maximum position (95), the actual wash temperature will be the maximum which is appropriate for the wash programme which you have chosen.

When the wash has finished return the dial to the original setting i.e. 95.

**Note: You cannot alter the temperature while the machine is washing.**

## Automatic Features

### Auto half load

Auto half load saves you time and money when washing smaller loads. Water levels are automatically adjusted to cater for the different loads.

### Unbalanced load warning

Your machine has an inbuilt feature to prevent it spinning with an unbalanced load. This will minimise vibration and prolong the life of the machine.

If a load is not evenly distributed, the machine will try to spread it around the drum. The 'Final Spin' indicator light will flash at the end of the programme if the machine does not spin. You can open the door, re-distribute the clothes, close the door and spin them by using a fast or slow spin programme.

# Cleaning and maintenance

## WARNINGS:

- Do not clean any part of your machine with abrasive cleaners, scouring agents, acids, chlorine based bleach or metal polish as they may cause damage.
- Do not try to clean any part of the dispenser drawer while the machine is working.


## Removing and cleaning the dispenser drawer and compartments

**Note: You should clean the dispenser drawer regularly.**


- 1 Pull the dispenser drawer out until it reaches its stop.
- 2 Press the drawer release latch down to remove the dispenser drawer.



- 3 Clean and dry the dispenser drawer, syphons, grate and fabric conditioner exit channel. Regularly clean the outlet pipe area.

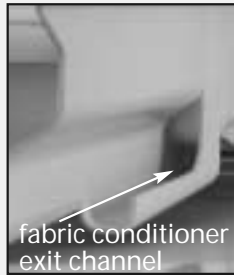

fabric conditioner exit channel

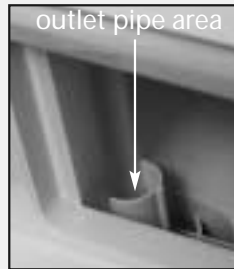

outlet pipe area

- 4 Replace the dispenser drawer in position and push it firmly back into place.



## Cleaning the outside

Use a damp cloth to clean the outside surfaces of the machine.

## Cleaning the door bowl

Clean the inside surface of the door bowl regularly with a soft cloth.



Harsh abrasive cleaners should not be used as they can scratch the surface. A build-up of soiling and water hardness residue may result in water leaking from the door.

CLEANING & MAINTENANCE

## Maintenance wash

Using too little detergent can cause a build up of grease, dirt and hard water salts, which, over time may damage your machine, your clothes and could cause the machine to smell. We recommend you carry out a maintenance wash two or three times a year to keep the machine and the outlet pipes clean and free from a build up of these deposits. Simply run programme 'C' without laundry, using the usual amount of biological detergent for normal soiling.

**NOTE:** This will take approximately 2 hours 30 minutes to complete.

# Troubleshooting...

In the unlikely event that you have problems with your machine, the following guide may help you to get your machine working correctly straight away...

## The machine will not start...

- Close the door. Check that the machine has power. Choose a programme and press the '**START/Hold To Reset**' button. If after two seconds the '**Door Locked**' indicator light is not lit, check to see:
  - i) If the machine is plugged in and switched 'ON'.
  - ii) If the socket is OK. Try another appliance in the socket to check.
  - iii) If the fuse in the machine plug is OK. If not, replace it, see 'Connect your machine to the electrical supply' (see section: INSTALLING YOUR MACHINE).

## The 'Door Locked' indicator is flashing...

- Shut the door firmly, until it clicks. The '**Door Locked**' indicator light should now stay on.

## The 'Pre-wash' progress indicator is flashing...

- This means that the machine cannot fill. Check that the water supply is turned on and that the inlet hoses are not kinked.

## The 'Wash' progress indicator is flashing...

- The wash dial has been moved since the programme started. Move the wash dial to the original programme.

## The 'Spin' progress indicator is flashing...

- This means that there has been an unbalanced load and the machine could not spin:  
Open the door, re-distribute the clothes, close the door and select a spin only programme.

## The programme takes a long time...

- Some programmes do take a long time. Things which can lengthen the programme time include low temperature and low pressure of the incoming hot water supply, or low cold water pressure.

## The door will not open...

- Has the programme finished? Is the '**End**' progress light lit? The door will not open until the '**Door Locked**' indicator light has gone out. The '**Door Locked**' indicator light will go out about two minutes after the programme has finished.
- There is still water in the machine. Go through all the points in the next section, 'The machine will not pump out water...'

## The machine will not pump out the water...

- Make sure that there is no blockage in the drain hose and that it is not kinked.
- Is the drain hose installed correctly?
- If you have connected your machine to a sink waste system, make sure that you have cut out the membrane from the under sink drainage system. (see section: INSTALLING YOUR MACHINE).
- Ensure that the drainage system, standpipe or under sink connection is free from any blockage.  
- If any of the above are found to be the cause of your problem you will need to run the machine through a spin only programme.
- If you have chosen '**Rinse Hold**', the light will flash until you press the '**Rinse Hold**' button to continue the programme.

## The machine is leaking...

- Check the fill hoses have been tightened at both ends? If not, tighten them.
- Are the fill hoses tightly fitted yet still leaking? If so, replace the rubber washers.
- Is the standpipe or household drain blocked? You will need to call a plumber if you cannot clear the blockage.

continued...

# Troubleshooting...

## The programme takes a long time...

- Some programmes do take a long time. Things which can lengthen the programme time include low temperature and low pressure of the incoming hot water supply, or low cold water pressure.

## The machine makes a noise or vibrates during a spin programme...

If the noise is very loud you should check whether:

- You have removed the transit bolts.
- You have removed the polystyrene block.
- You have correctly adjusted the feet to stabilize the machine.
- You have removed loose items such as coins from pockets, as these can rattle about inside the machine drum and cause damage.

## The laundry has not spun dry...

- Is the spin progress indicator flashing? If so, this means that the machine did not spin due to the load being unbalanced during the spin. Open the door, re-distribute the clothes, close the door and choose a spin only programme to try again.
- Did you use a short spin programme on a non-synthetic load? If so, try again using a faster spin programme.
- Did you adjust the variable spin dial reducing the spin speed of the selected programme? Select a faster spin programme.

## The dispenser drawer will not close properly...

- Please check that the drawer is properly aligned.
- Is the drawer clogged with detergent? (see section: CLEANING & MAINTENANCE).

## Steam is coming from the dispenser drawer...

- We have designed the machine to release steam from the dispenser drawer during hot washes, so don't worry.

## Suds are coming from the dispenser drawer...

- Have you used the correct low suds automatic detergent? See 'The Dispenser' - Choose a suitable detergent.
- If you have used the wrong type of detergent, flush out your machine by choosing a rinse programme.

## Not all of the detergent has been flushed away...

- Check that your water supply taps are turned on fully.
- Check the inlet hoses are not kinked.
- Is your hot water pressure low? If so you may need a cold fill adaptor to run your machine as cold fill only.
- Ensure the detergent flap is in its 'up' position when dispensing powder and 'down' for dispensing liquid.

## Water collects in the detergent dispenser compartment...

- Is the retaining flap in the down position. Lift to allow the water to drain away.

## The flap keeps falling down...

- As you push the flap to the up position you will feel some resistance, increase the pressure and the flap will move to its home position.

## The clothes are hot at the end of the programme...

- Check that the hoses are fitted correctly: GREY to HOT  
BLUE to COLD.

If the machine is still not working contact Hotpoint Service, see the back page.

**Remember, you may be charged for a service call if a problem with your machine is caused by incorrect installation or misuse.**



## Hotpoint guarantee

### **"Satisfaction guaranteed or your money back"**

We give you a unique 'satisfaction guaranteed' promise - **valid for 90 days** - after you have purchased your Hotpoint product. If there is a technical problem with your Hotpoint appliance simply call Hotpoint Repair service or go to our web-site at [www.theservicecentre.co.uk](http://www.theservicecentre.co.uk), and where necessary, we will arrange for an engineer to call. If the technical problem is not resolved under this guarantee, **we will replace your machine or, if you prefer, give you your money back.**

Also Hotpoint appliances are guaranteed for 5 years. All appliances carry a fully inclusive 12 month parts and labour guarantee as well as free replacement parts for the first 5 years (provided that they are fitted by a Hotpoint engineer).

### **Guarantee terms and conditions**

Your guarantee is only applicable in the United Kingdom or Republic of Ireland and is subject to the following provisions that your appliance:

- Has been installed and used correctly in accordance with this instruction booklet.
- Has been used solely for domestic purposes and is located on domestic premises (ie. not for commercial or trade use).
- Has been properly connected to a suitable electrical supply voltage as stated on the appliance rating plate.
- Has not been subject to misuse, accident, modified or repaired by anyone other than one of our own service engineers.



## Recycling & Disposal Information

As part of Hotpoint's continued commitment to helping the environment, Hotpoint reserves the right to use quality recycled components to keep down customer costs and minimise material wastage.

Please dispose of packaging and old appliances carefully. To minimise risk of injury to children, remove the door, plug and cut mains cable off flush with the appliance. Dispose of these parts separately to ensure that the appliance can no longer be plugged into a mains socket.



## After sales service

**"No company is better positioned to offer an after sales service on a Hotpoint appliance than us - the manufacturer"**

As part of our commitment to you, all Hotpoint appliances have the added benefit of a fully inclusive parts and labour guarantee for the first 12 months. In addition to this you also have the advantage of **free replacement parts for the first 5 years** when fitted by a Hotpoint engineer. When the 12 months parts and labour guarantee expires we offer the following after sales service options:

### **Repair Service and Information Help Desk**

UK: 08709 066066

[www.theservicecentre.co.uk](http://www.theservicecentre.co.uk)

Republic of Ireland: 1850 302 200

Note: Our operators will require the Model number and the Serial number of your machine, see page 2 for the location of these numbers.

Available 364 days a year with a fast, effective and value for money service.

We have the largest white goods repair service in the UK with over 1100 of our own fully trained engineers. All repairs include a parts and labour guarantee for 12 months from the date of the repair.

If you require any information or have any questions about your machine, our operators are on hand with help and advice.

All this ensures that you will receive the best available after sales service possible.

### **Extended Warranties**

UK: 08709 088 088

[www.theservicecentre.co.uk](http://www.theservicecentre.co.uk)

Republic of Ireland: 1850 502 200

Whether you have just one or a number of Hotpoint appliances in your kitchen, we offer two service cover plans to give you total peace of mind.

- Service Cover - FREE service repairs for a single Hotpoint appliance during the period of cover.
- Kitchen Cover - FREE service repairs for all your Hotpoint appliances less than 10 years old.

### **Genuine Parts and Accessories**

 
UK: 08709 077 077

[www.theservicecentre.co.uk](http://www.theservicecentre.co.uk)

Republic of Ireland: (01) 842 6836

A wide range of genuine parts and accessories are available from our hotline or through our web site.

**Genuine parts and accessories, extended warranties and service repairs are all available on our web-site at:**



[www.theservicecentre.co.uk](http://www.theservicecentre.co.uk)

**SERVICE &  
GUARANTEE**



## Key contacts After Sales Service

Over 1100 trained specialists, directly employed by us, ensure that you can have complete confidence in both the appliances and services we offer.

**THE SERVICECENTRE**

### Repair Service and Information Help Desk

UK: 08709 066066

(Open 8 to 8 Mon - Fri, 8 to 6 Sat & 10 to 4 Sun)

[www.theservicecentre.co.uk](http://www.theservicecentre.co.uk)

Republic of Ireland: 1850 302 200

Note: Our operators will require the following information:

Model number

Serial number

### Extended Warranties

UK: 08709 088 088

(Open 8 to 6 Mon - Fri)

[www.theservicecentre.co.uk](http://www.theservicecentre.co.uk)

Republic of Ireland: 1850 502 200

### Genuine Parts and Accessories

UK: 08709 077 077

(Open 8-30 to 5-30 Mon - Fri & 8-30 to 12 Sat)

[www.theservicecentre.co.uk](http://www.theservicecentre.co.uk)

Republic of Ireland: (01) 842 6836

### Hotpoint Appliance Information

08701 50 60 70

(Open 8 to 8 Mon - Fri, 9 to 5 Sat & 10 to 5 Sun)

[www.hotpoint.co.uk](http://www.hotpoint.co.uk)

General Domestic Appliances Limited, Morley Way, Peterborough, PE2 9JB.

Printed by Renault Printing Co.Ltd., Birminham, England, B44 8BS

1666200001 - 09



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>