



Product End-of-Life Disassembly Instructions

Product Category: External Options

Marketing Name / Model

[List multiple models if applicable.]

DJ9000 Air Purifier System 230v / Q6668A

DJ9000 Air Purifier System 120v / Q6668B

DJ9000sf (Air Purifier System + Printer Bundle) / Q6666A

Purpose: The document is intended for use by end-of-life recyclers or treatment facilities. It provides the basic instructions for the disassembly of HP products to remove components and materials requiring selective treatment, as defined by EU directive 2002/96/EC, Waste Electrical and Electronic Equipment (WEEE).

1.0 Items Requiring Selective Treatment

1.1 Items listed below are classified as requiring selective treatment.

Item Description	Notes	Quantity of items included in product
Printed Circuit Boards (PCB) or Printed Circuit Assemblies (PCA)	With a surface greater than 10 sq cm	3
Batteries	All types including standard alkaline and lithium coin or button style batteries:	0
Mercury-containing components	For example, mercury in lamps, display backlights, scanner lamps, switches, batteries	0
Liquid Crystal Displays (LCD) with a surface greater than 100 sq cm	Includes background illuminated displays with gas discharge lamps	0
Cathode Ray Tubes (CRT)		0
Capacitors / condensers (Containing PCB/PCT)		0
Electrolytic Capacitors / Condensers measuring greater than 2.5 cm in diameter or height	4 Electrolytic condenser in each turbine	8
External electrical cables and cords	Power cable	1
Gas Discharge Lamps		0
Plastics containing Brominated Flame Retardants		0
Components and parts containing toner and ink, including liquids, semi-liquids (gel/paste) and toner	Filters	2
Components and waste containing asbestos		0
Components, parts and materials containing refractory ceramic fibers		0
Components, parts and materials containing radioactive substances		0

2.0 Tools Required	Tool Size (if applicable)
Tool Description	
Adjustable Spanner	
Phillips Screwdriver set	
Nipper	
Slotted Screwdriver	
Allen Key	4-5-6-8 mm

3.0 Product Disassembly Process

3.1 List of the basic steps:

1. Open the filters door housing and take out the two filter box by unscrewing the allen screw (Photo 1).
2. Unscrew the motors cover screw to access LCD PCB and turbines (Photo 2).
3. Unscrew Turbines fixing screws to can access to the turbines PCB and condensers.

3.2 Graphics.

Photo 1:

 
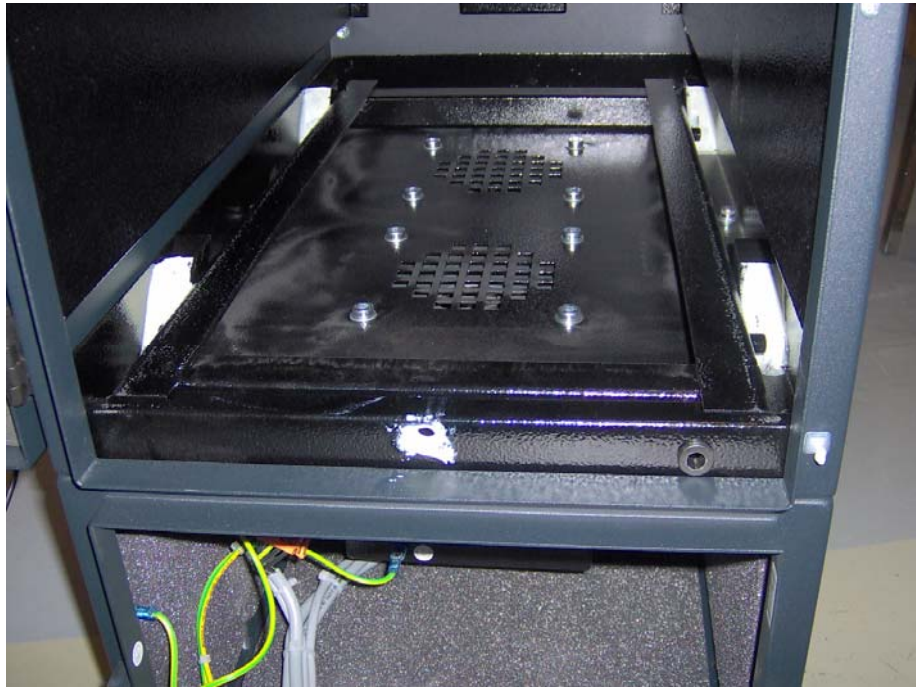 


Photo 2:

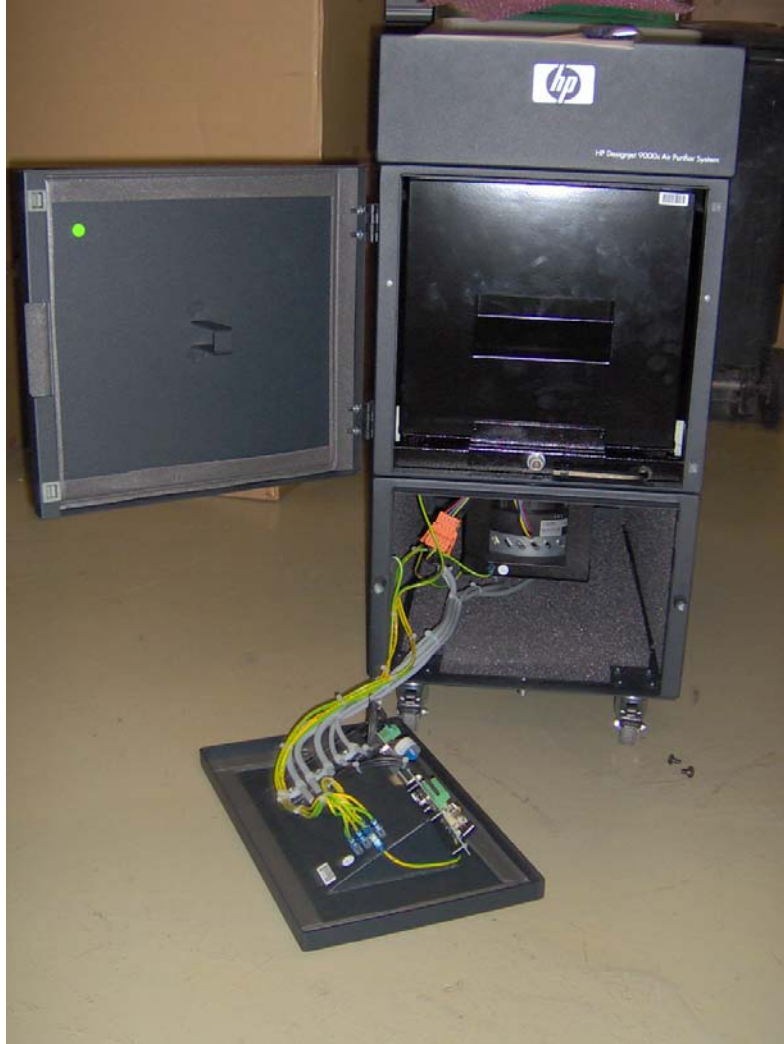

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>