




Digital Recorder
Digitale Recorder

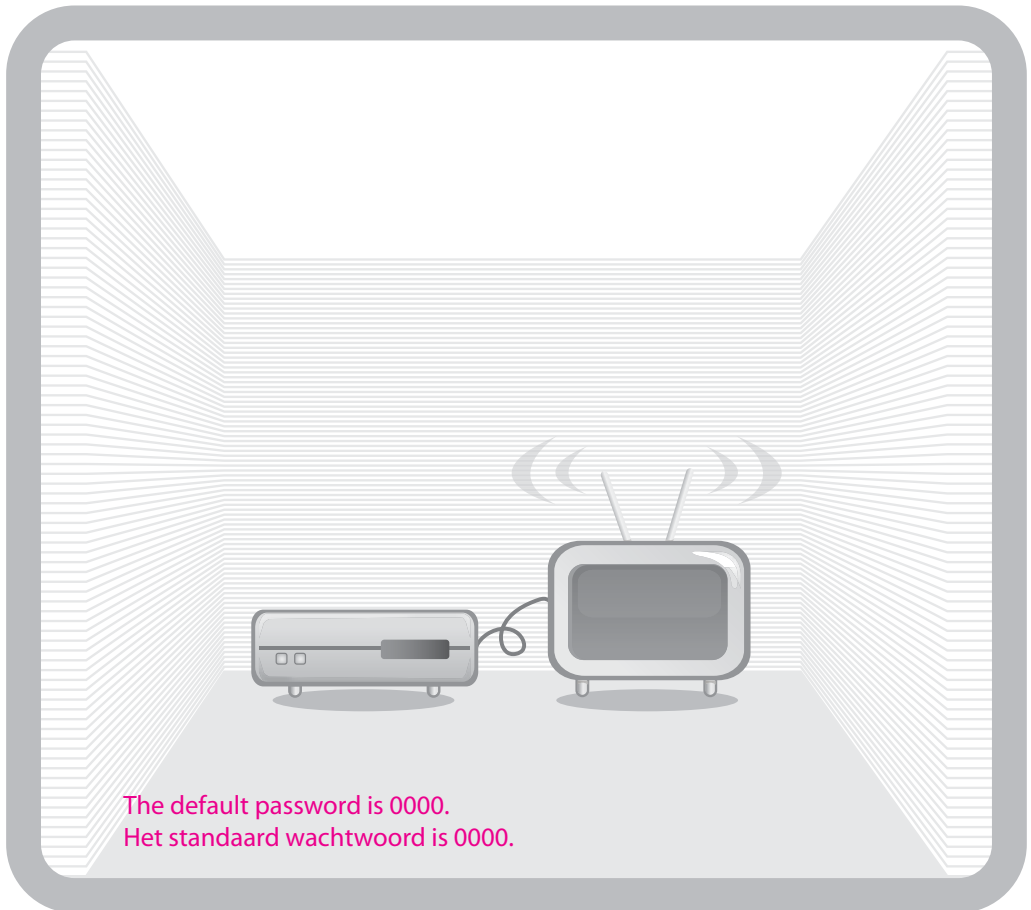

User's Manual /Gebruikershandleiding

iHDR-5050C

HUMAX
EASY DIGITAL

Notice



Thank you for purchasing a HUMAX product. Please read this user's manual carefully to be able to safely install, use and maintain the product at maximum performance. Keep this user's manual next to your product for future reference. The information in this user's manual is subject to change without notice.

Copyright (Copyright © 2009 HUMAX Corporation)

Not to be copied, used or translated in part or whole without HUMAX's prior consent in writing except approval of ownership of copyright and copyright law.

Warranty

The warranty does not cover parts which may become defective due to misuse of the information contained in this manual.

Trademarks

- Viaccess is a trademark of France Telecom.
- CryptoWorks is a trademark of Irdeto Access B.V.
- Irdeto is a trademark of Irdeto Access B.V.
- Nagravision is a registered trademark of KUDELSKI S.A.
- Conax is a trademark of Telenor Conax AS.
- Manufactured under license from Dolby Laboratories.
Dolby and the double-D symbol are trademarks of Dolby Laboratories.

Notice



Warnings, Cautions and Notes

Throughout the whole manual, pay special attention to the following marks that indicate hazardous situations.

- **Warning**
Indicates a hazardous situation which could result in serious injury.
- **Caution**
Indicates a situation which could damage the equipment or other apparatus.
- **Note**
Indicates additional information to make the user aware of possible problems and information of any importance to help understand, use and maintain the installation.

Meaning of Symbols



To reduce the risk of electric shock, do not remove cover (or back). No user serviceable parts inside. Refer servicing to qualified service personnel.



This symbol indicates **dangerous voltage** inside the product that presents a risk of electric shock or personal injury.



This symbol indicates important instructions accompanying the product.

Instruction about the 'WEEE' Symbol



This product should not be disposed with other household wastes at the end of its working life. Please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources. This will prevent possible harm to the environment or human health from uncontrolled waste disposal.

- **Domestic users:**
Please contact either the retailer where you purchased this product or their local government office for details of where and how they can take this item for environmentally safe recycling.
- **Business users:**
Contact your supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.

Safety Warning



This product has been manufactured to comply with international safety standards. Please read the following safety precautions carefully.

Safety Instructions and Precautions

1. MAINS SUPPLY

90-250V a.c., 50/60Hz

- Operate this product only from the type of power supply indicated on the marking label. If you are not sure of the type of power supplied to your home, consult your local power company.
- Disconnect the product from the mains before you start any maintenance or installation procedures.

2. OVERLOADING

- Do not overload a wall outlet, extension cord or adapter as this may result in electric fire or shock.

3. LIQUID

- The product should not be exposed to liquid of any kind. In addition, no objects filled with liquid should be placed on the apparatus.

4. CLEANING

- Disconnect the product from the wall outlet before cleaning.
- Use a light damp cloth (no solvents) to dust the product.

5. VENTILATION

- The slots on top of the product must be left uncovered to allow proper airflow into the unit.
- Do not stand the product on soft furnishings or carpets.
- Do not stack electronic equipments on top of the product.

6. ATTACHMENTS

- Do not use any unsupported attachments as these may be hazardous or cause damage to the product.

7. CONNECTION TO THE CABLE TV SIGNAL

- Connect all components before plugging any power cords into the wall outlet. Always turn off the product, TV and other components before you connect or disconnect any cables.

8. CONNECTION TO THE TV

- Disconnect the product from the mains before connecting or disconnecting the cable from the TV. Failure to do so can damage the TV.

9. LOCATION

- Place the product indoors to avoid exposing it to lightning, rain or sun.
- Do not place it near a radiator or heat register.
- We recommend that the product has 10 cm clearance from any other appliances susceptible to electromagnetic influences, such as a TV or a VCR.
- Do not block the openings with any object, and do not place the product on a bed, sofa, rug, or other similar surface.
- If you place the product on a rack or a bookcase, ensure that there is adequate ventilation and that you have followed the manufacturer's instructions for mounting.
- Do not place the product on an unstable cart, stand, tripod, bracket, or table where it can fall. A falling product can cause serious injury to a child or adult, and serious damage to the appliance.

Safety Warning



10. LIGHTNING, STORM or NOT IN USE

- Unplug the product from the wall outlet and disconnect the antenna during a thunderstorm or when left unattended and unused for long periods of time. This will prevent damage to the unit due to lightning and power-surges.

11. EXTRANEIOUS OBJECTS

- Do not insert anything through the openings in the unit, where they can touch dangerous voltage points or damage parts.

12. REPLACEMENT of PARTS

- When replacement of parts is required, be sure the service technician uses replacement parts specified by the manufacturer or those that have the same characteristics as the original part. Unauthorized substitution may result in additional damage to the unit.

Warning

1. To avoid damage of the power cord or plug;

- Do not modify or process the power cord or plug arbitrarily.
- Do not bend or twist the power cord.
- Make sure to disconnect the power cord holding the plug.
- Keep heating appliances as far as possible from the power cord in order to prevent the cover vinyl from melting.
- The mains plug, as a disconnection device, shall remain readily accessible by the user.

2. To avoid electrical shock;

- Do not open the main body.
- Do not insert metal or inflammable objects inside the product.
- Do not touch the power plug with wet hands.
- Disconnect the power cord in case of lightning.

3. To avoid damage of product;

- Do not use the product when it is out of order. If you continue to use the product when defective, serious damage can be caused to it. Make sure to contact your local product distributor if the product is out of order.
- Do not insert metal or alien substance into the slots for the modules or Smartcards. It may cause damage to the product and reduce its life span.

4. Hard Disk Drive;

- Do not move the product or turn the power off suddenly while the hard disk drive is running.
- The company shall not be liable for any corruption of data on the hard disk drive caused by the carelessness or misuse of users.

5. Standby Mode;

- It is recommended to leave the product in Standby mode during long periods when not being used e.g. Over night. The product will record any schedules set while in Standby mode.

Contents




1. Before Using the Product	GB7
1.1 Package Contents	GB7
1.2 Front Panel	GB8
1.3 Conditional Access	GB9
1.4 Rear Panel	GB10
1.5 Remote Control	GB11
1.6 Remote Control Batteries	GB14
2. Setup	GB15
2.1 Using HDMI Cable	GB15
2.2 Using an HDMI-to-DVI Converter	GB16
2.3 Using Component Cable	GB17
2.4 Using SCART Cable	GB18
2.5 Powering On	GB19
3. Installation Wizard	GB20
3.1 Language	GB20
3.2 Search Channels	GB20
3.3 Display	GB21
3.4 HDD Partition	GB21
3.5 Result	GB21
3.6 Installation Checklist	GB22
4. Basic Operation	GB23
4.1 Switching Channel	GB23
4.2 Volume Control	GB23
4.3 Resolution	GB23
4.4 Sleep	GB24
4.5 Wide	GB24
4.6 Audio	GB24
4.7 Subtitle	GB25
4.8 TEXT	GB25
4.9 Programme Information (i-plate)	GB26
5. Channel List	GB28
5.1 All Channels List	GB28
5.2 Favourite List	GB29
5.3 HD List	GB30
5.4 History List	GB30
6. TV Guide	GB31
6.1 Using TV Guide	GB31
6.2 List Guide	GB32
6.3 Schedule	GB32
6.4 Find	GB34
7. Preferences	GB35
7.1 Parental Control	GB35
7.2 Language Setting	GB36
7.3 Time Setting	GB38

Contents



7.4 Media Setting	GB39
7.5 A/V Setting	GB40
7.6 Network.	GB43
7.7 Other Settings.	GB44
8. Edit Channels	GB45
8.1 Edit Channel List	GB45
8.2 Edit Favourite List	GB46
8.3 Display History List	GB47
9. Installation	GB48
9.1 Channel Search	GB48
9.2 Software Update	GB49
9.3 Default Setting	GB49
10. System	GB50
10.1 Status	GB50
10.2 Signal Detection.	GB50
10.3 Conditional Access	GB50
10.4 Mail Messages	GB50
11. Media List	GB51
11.1 Video	GB51
11.2 Radio.	GB55
11.3 Music.	GB55
11.4 Photo.	GB56
12. Personal Video Recorder(PVR)	GB58
12.1 Play bar	GB58
12.2 Time Shifted Recording (TSR) and Playback.	GB59
12.3 Recording.	GB60
12.4 Bookmark	GB62
13. Software Update	GB63
13.1 OTA (Over the Air).	GB63
14. Appendix	GB64
14.1 Menu Map	GB64
14.2 Trouble Shooting	GB65
14.3 Error Message	GB67
14.4 Specification	GB68
14.5 Glossary	GB70
14.6 Service and Support	GB71
14.7. Using the Universal Remote Control	GB72
14.8 OPEN SOURCE SOFTWARE NOTICE	GB100


1. Before Using the Product

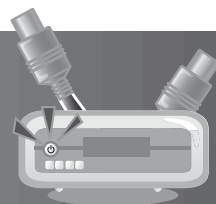

This chapter provides detail instructions on the product and its accessories.

1.1 Package Contents

Please check all package contents before using your product.

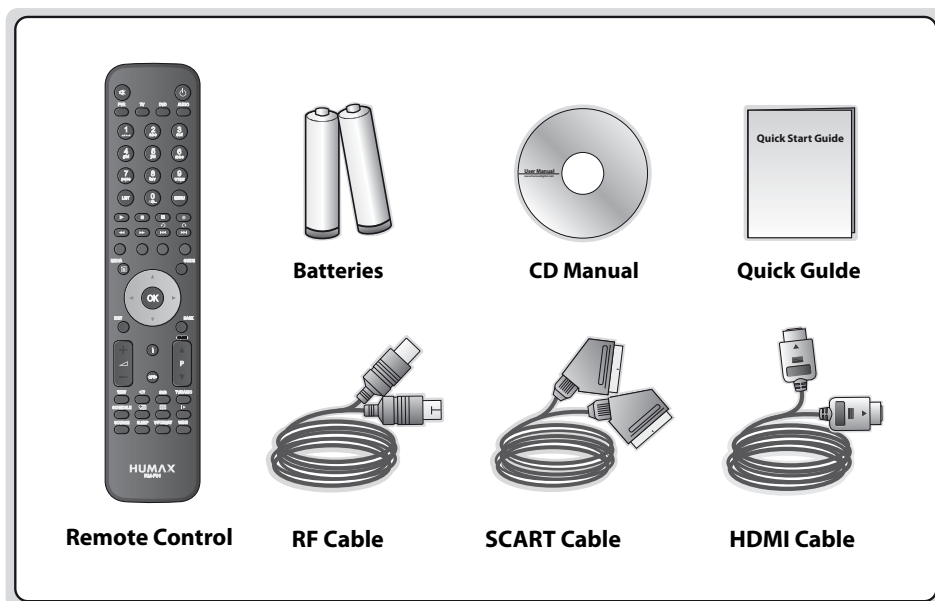


Note:

- Faults may occur if the remote control is left without battery for a long time. Always keep the battery inserted in the remote control.
- Package contents may vary according to area.


Caution:

- The company shall not be liable for problems caused by changing hard disk drive by user.
- The company shall not be liable for problems caused by the installation of hard disks bigger than 320GB.

1. Before Using the Product

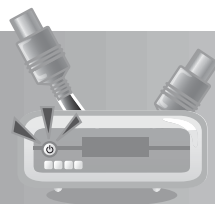

1.2 Front Panel

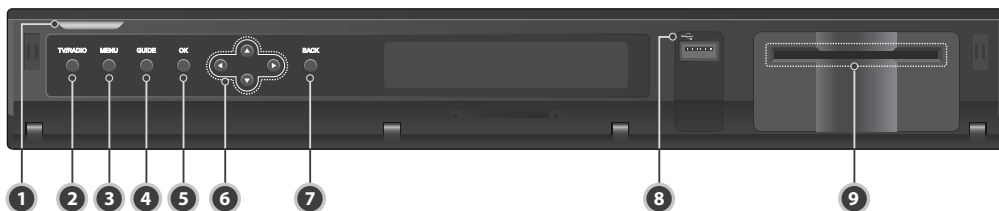

1. STANDBY BUTTON

Switches between operation and standby modes.

2. TV/RADIO BUTTON

Switches between TV and radio modes.

3. MENU BUTTON

Displays the main menu.

4. GUIDE BUTTON

Displays the programme guide.

5. OK BUTTON

Selects a menu or confirms the selected operation. Displays the channel list while watching a programme.

6. ARROW BUTTONS

Changes the channel or moves the cursor up, down, left or right.

7. BACK BUTTON

Closes and returns to the previous menu and screen.

8. USB Port


Connects to the USB memory or external HDD (for archiving recordings, or transfer of MP3 or JPEG files).

9. SMARTCARD SLOT

A slot for a Smartcard

Note: The front of the product is subject to change without notice.

1. Before Using the Product

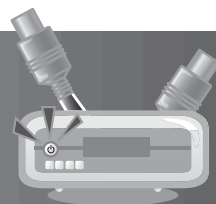



1.3 Conditional Access

Although some TV and radio services are free to air, others are available on a subscription basis and can only be enjoyed via a Conditional Access component. The Conditional Access component is a removable Smartcard.


Inserting the Smartcard

The Smartcard looks similar to a credit card and is inserted into the slot behind the right-hand front flap of the product. A valid Smartcard entitles you to view and listen to all the channels you choose to subscribe to. The Smartcard slot on the product can be used for Irdeto Smartcard only.


1. Open the flap on the front panel of the product to expose the card slot.
2. Hold the Smartcard horizontally with the electronic chip (small square-shaped, gold in colour) facing downwards.
3. Insert the Smartcard into the slot.

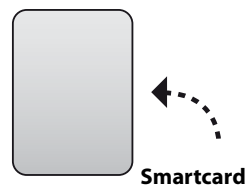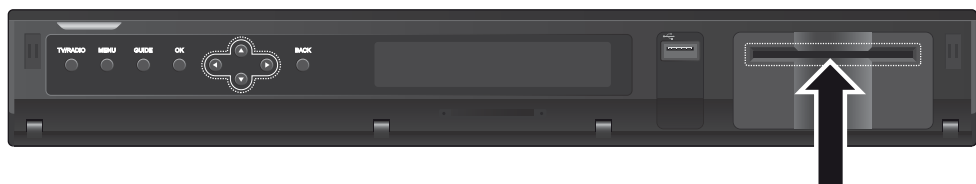

1. Before Using the Product

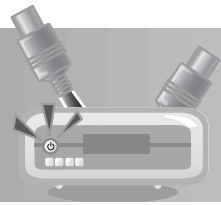


1.4 Rear Panel

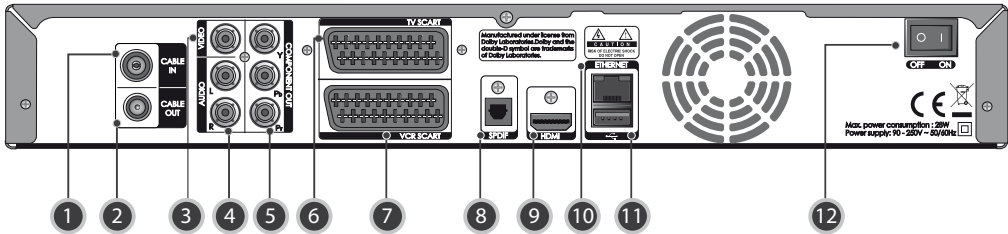

- 1. CABLE IN**
Connects a network cable
- 2. CABLE OUT**
Connects to the RF IN of the TV or VCR
- 3. VIDEO**
Connects to the TV or VCR using an RCA cable.
- 4. AUDIO**
Connects to the TV or VCR using an RCA cable.
- 5. COMPONENT(YPbPr)**
Connects to the TV or VCR using a component cable.
- 6. TV SCART**
Connects to the TV using a TV SCART cable.
- 7. VCR SCART**
Connects to the VCR or DVD using a VCR SCART cable.
- 8. SPDIF**
Connects to the audio system using an S/PDIF cable. (digital audio)
- 9. HDMI**
Connects to the TV using an HDMI cable.
- 10. ETHERNET**
Ethernet port (for future use).
- 11. USB**
Connects to the USB memory or external HDD.
- 12. ON/OFF**
Powers on/off.


Note: The rear panel of the product is subject to change without notice.

1. Before Using the Product

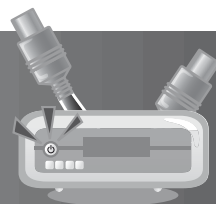

1.5 Remote Control

Note: The remote control of the product is subject to change without notice.

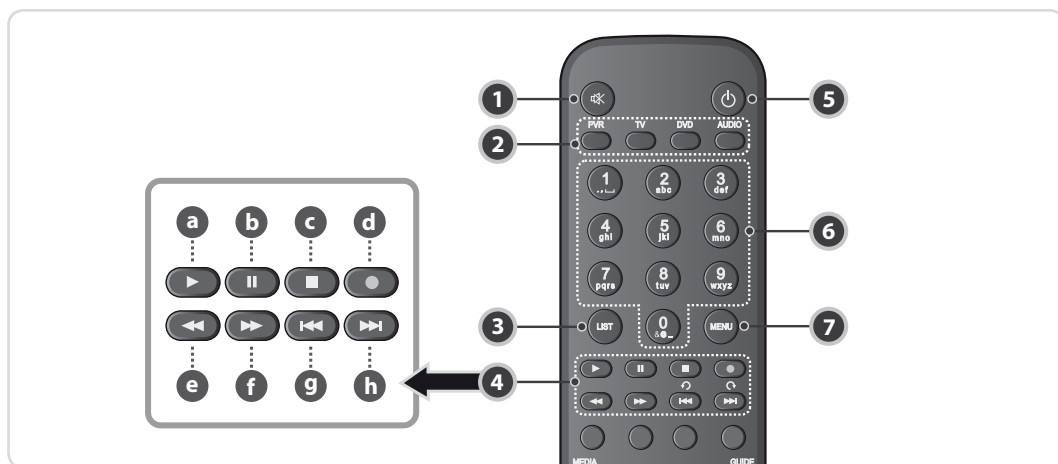

1. MUTE

Mutes or unmutes the audio temporarily.

2. PVR/TV/DVD/AUDIO

Changes the mode.

3. LIST

Display the channel list.

4. PLAYBACK CONTROL BUTTONS

a. PLAY

Plays at normal speed or resumes.

b. PAUSE

Pauses the live programme or recording.

c. STOP

Stops a recording or goes to the live programme.

d. RECORD

Records programme.

e. FAST REWIND

Rewinds at high speed. Each time you press this button, the rewind speed is increased.

f. FAST FORWARD

Fast forwards at high speed. Each time you press this button, the fast forward speed is increased.

g. PREVIOUS (REPLAY)

Goes to the previous scene.

h. NEXT (SKIP)

Goes to the next scene.

5. STANDBY

Switches between operation and standby modes.



6. NUMERIC(0-9) BUTTONS

Enters a TV/radio channel number or menu option number.

7. MENU

Displays the main menu.

1. Before Using the Product

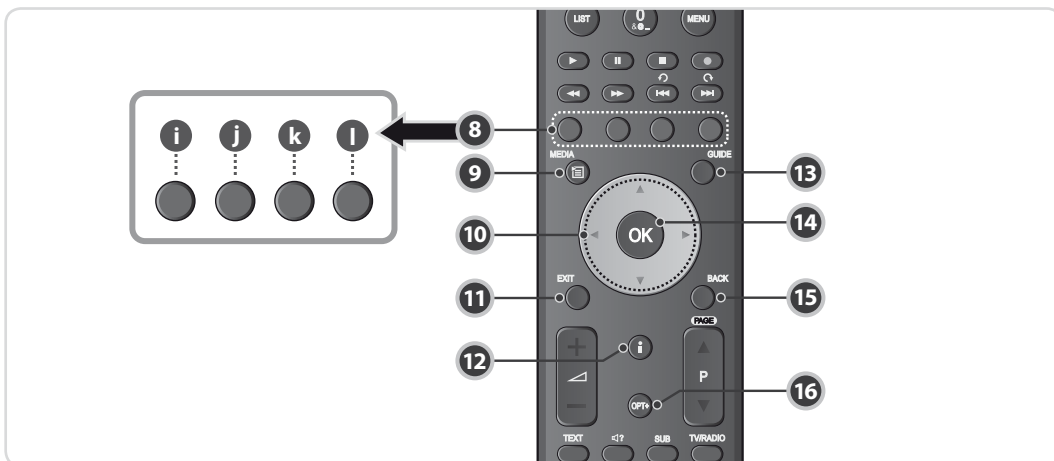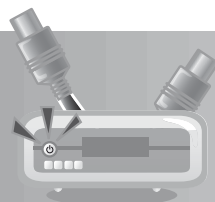

8. COLOUR BUTTONS(R/G/Y/B)

Select the colour keys for interactive applications.

i. RED

Displays the channel list in normal viewing mode.

j. GREEN

Displays the favourite channel list in normal viewing mode.

k. YELLOW

Displays the HD TV channel list in normal viewing mode.

l. BLUE

Displays the history channel list in normal viewing mode.

9. MEDIA

Displays the media list.

10. ARROW BUTTONS

Changes the channel or moves the cursor up, down, left or right.

11. EXIT

Exits all On-Screen Display (OSD) screens.

12. i (INFORMATION)

Displays the channel and programme information.

13. GUIDE

Displays the programme guide.

14. OK

Selects a menu or confirms the selected operation.



15. BACK

Returns to the previous channel.

16. OPT+

Displays the channels attributes while watching a programme.

1. Before Using the Product

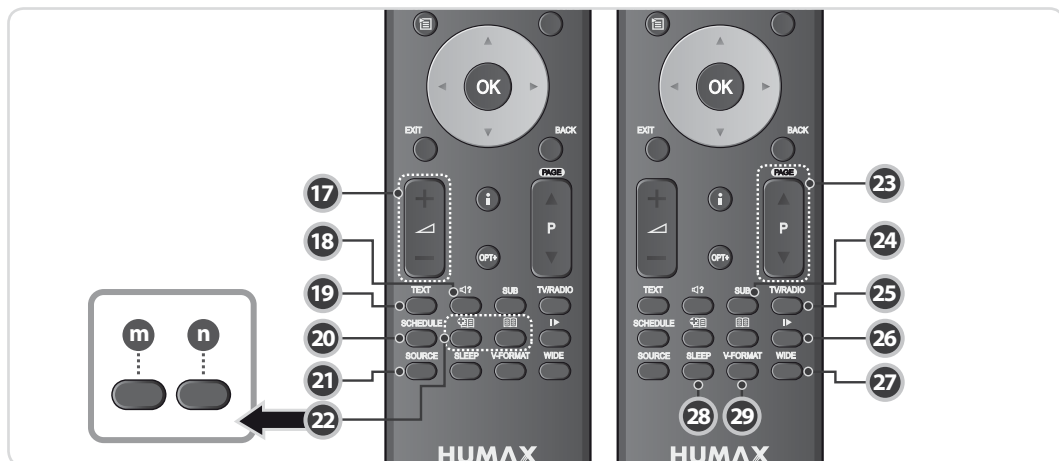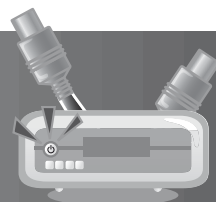

17. VOLUME

Adjusts the audio volume.

18. AUDIO

Displays the audio list.

19. TEXT

Enters the digital text service.

20. SCHEDULE

Displays the schedule in programme guide.

21. SOURCE

Controls the output of TV SCART.

22. BOOKMARK

m. ADD BOOKMARK

Saves the current viewing position as a bookmark during playback.

n. BOOKMARK LIST

Displays the list of saved viewing positions during playback.

23. P▲/▼

Changes the channel or page.

24. SUB

Displays the subtitle language list.

25. TV/RADIO

Switches between TV and radio modes.

26. SLOW

Plays the programme in slow motion.

27. WIDE

Sets the display format.


28. SLEEP

Sets the sleep time.

29. V-FORMAT


Changes the resolution of video.

1. Before Using the Product

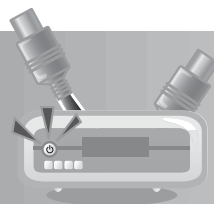

1.6 Remote Control Batteries

1. Press the hook upward and lift the battery cover off.
2. Insert the new batteries. Make sure the plus (+) ends meet the plus markings on the battery case.
3. Close the cover.

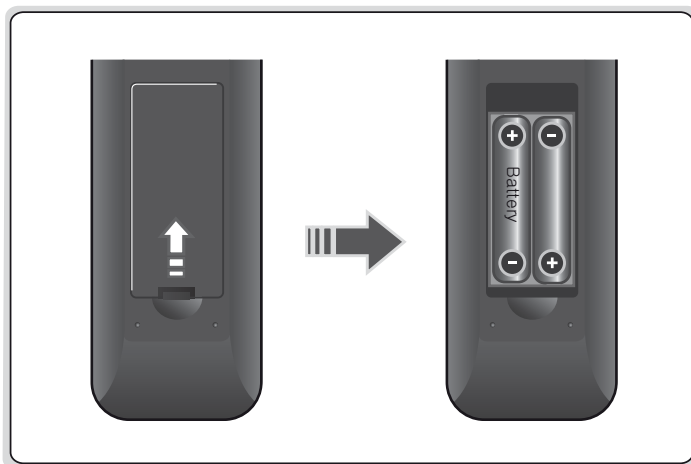

2. Setup



This chapter describes how to connect your product to the TV with the particular equipments for gaining optimum signal quality. The product provides various interfaces to connect to the TV, VCR or other devices. Select the most appropriate procedure depending on the equipment you have.

Note:

- If you encounter any problems setting up your product, please contact your local product distributor.
- The rear image of the TV and VCR may differ depending on the manufacturer and model.


2.1 Using HDMI Cable

The HDMI connection, a special all-digital interface that provides the highest picture quality, is suitable for Digital TV. If the TV has a HDMI input, connect the product & TV using a HDMI cable as follows.


1. Connect your CATV line to the CABLE IN.
2. Connect the product and TV using an HDMI cable.

Important:

- When connecting the product to a TV with a HDMI cable no other connection is required.
- If you connect using a HDMI cable please switch your TV set to the correct channel/input for HDMI. (Refer to your TV's manual for details.)

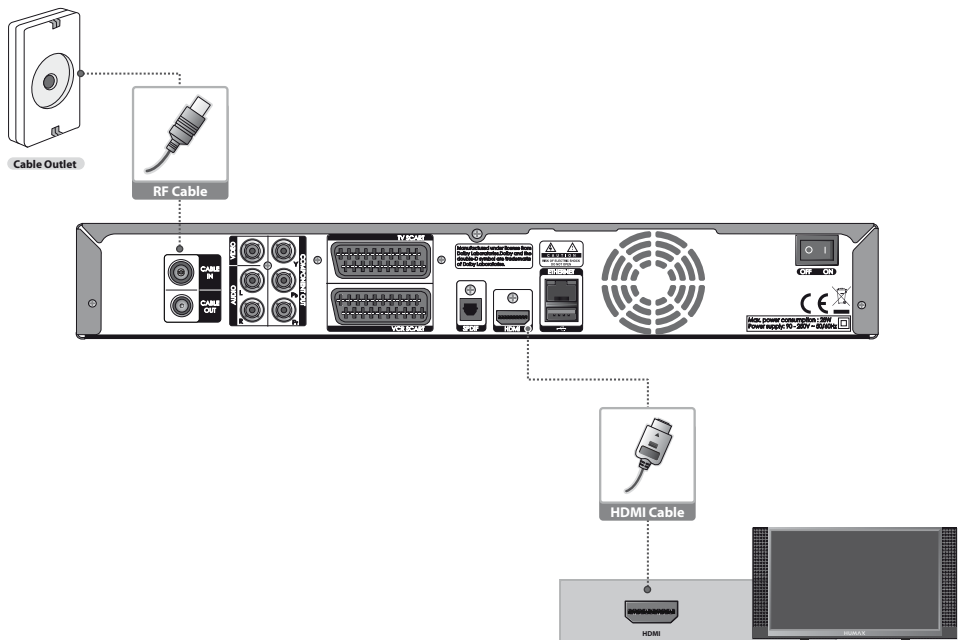

2. Setup

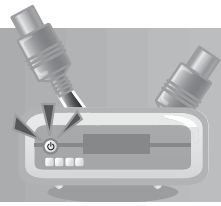

2.2 Using an HDMI-to-DVI Converter


The HDMI-to-DVI connection with converter is suitable for Digital TV. If the TV has the DVI input connector only, connect the product to the TV with an HDMI cable and an HDMI-to-DVI converter(not supplied) as follows.

1. Connect your CATV line to the CABLE IN.
2. Connect one end of the HDMI cable to the HDMI input on the product and the other end to the HDMI-to-DVI converter.
3. Connect the HDMI-to-DVI converter to the DVI input on the TV.
4. 1) **When using the digital audio system**, connect the product and the digital audio system using an S/PDIF cable.
2) **Otherwise**, connect the product and the TV using an RCA cable (Audio L/R).

Important: If you connect using an HDMI-to-DVI converter, please switch your TV to the correct channel/input for the DVI. (Refer to your TV's manual for details.)

Note: You can also connect the product to the TV using the Y Cable (3.5 Stereo-to-2 RCA).

Caution: DO NOT CONNECT TO HEAD PHONE CONNECTOR ON TV!

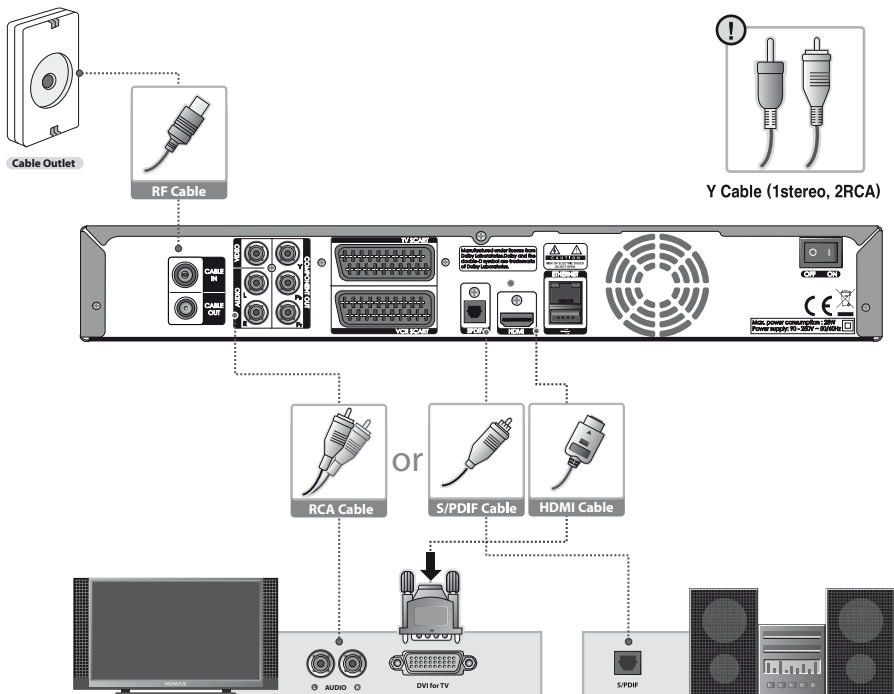

2. Setup




2.3 Using Component Cable

The component connection is recommended for Digital TV. Connect the product and the TV using a component cable as follows.


1. Connect your CATV line to the CABLE IN.
2. Connect the product and the TV using a component cable.
3. 1) **When using the digital audio system**, connect the product and the digital audio system using an S/PDIF cable.
2) **Otherwise**, connect the product and the TV using an RCA cable (Audio L/R).

Important: If you connect using the component cable, please switch your TV to the correct channel/ input for the component. (Refer to your TV's manual for details.)

Note: The **Component Selection** menu should be set to **YPbPr** when using the component cable. (Refer to p.40.)

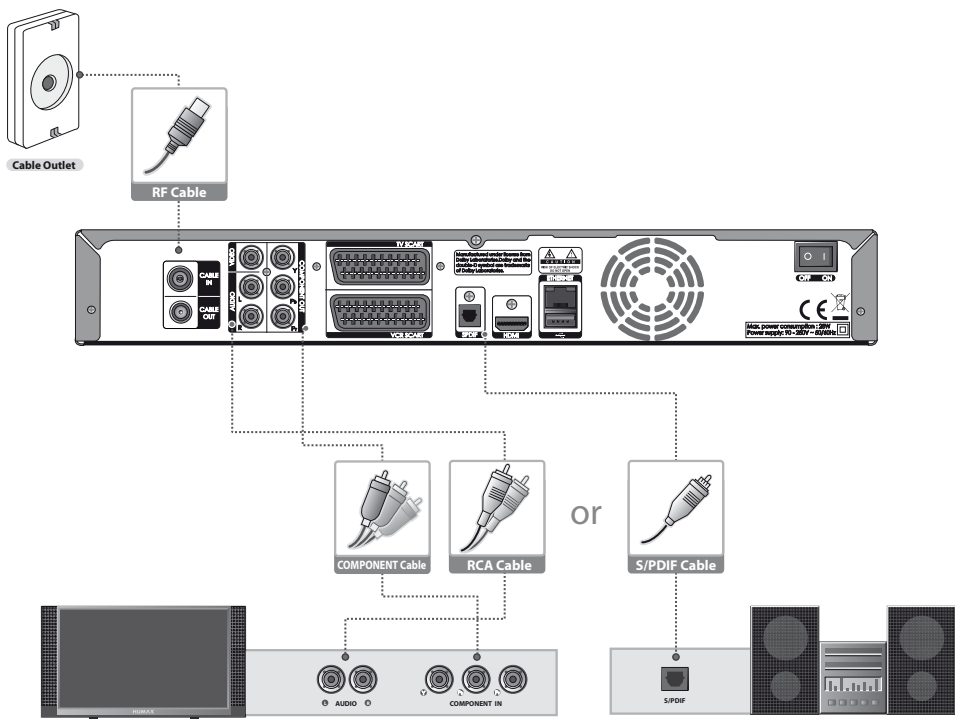

2. Setup

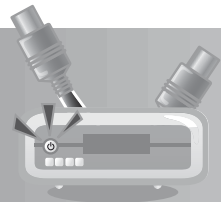


2.4 Using SCART Cable

A SCART cable connection is recommended for analogue TV or VCR. Connect the product and the TV using a SCART cable as follows.

1. Connect your CATV line to the CABLE IN.
2. Connect the product and the TV using a SCART cable.
3. Connect the product and the VCR using a SCART cable.

Important: If you connect using the SCART cable, please switch your TV to the correct channel input for the SCART. (Refer to your TV's manual for details.)

Note: The **Component Selection** menu should be set to **RGB** when using the SCART cable. (Refer to p40.)

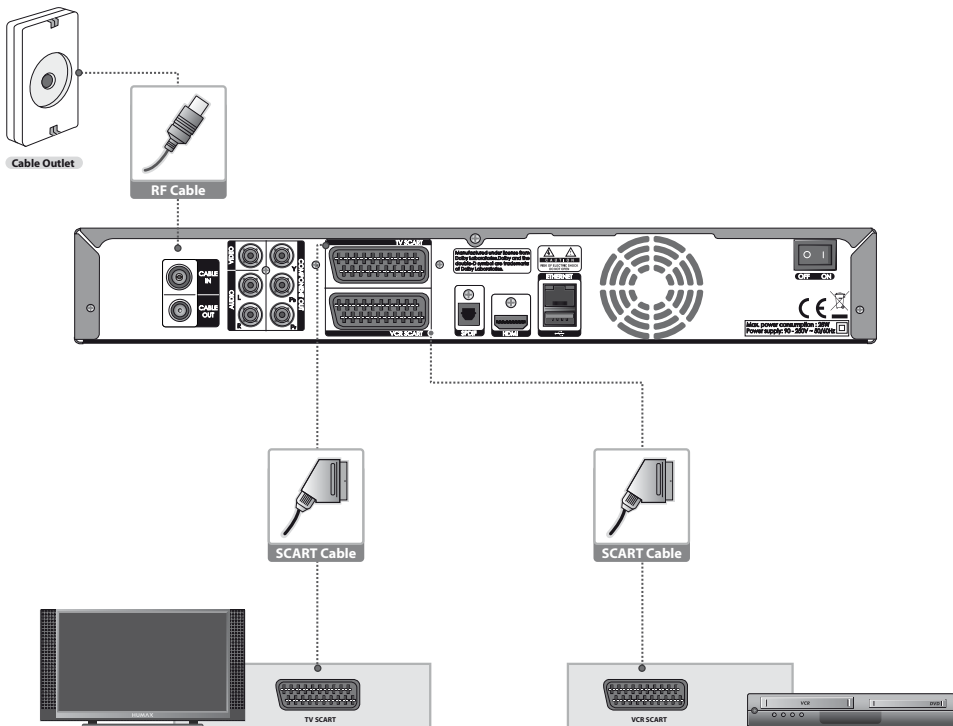


2. Setup



2.5 Powering On

1. Connect the power cord of the product to a wall outlet.
2. Ensure the **ON/OFF** switch at the rear of the product is switched to **ON**.
3. Power on by pressing the **STANDBY** button of the remote control or the **STANDBY** button at the front of the product.

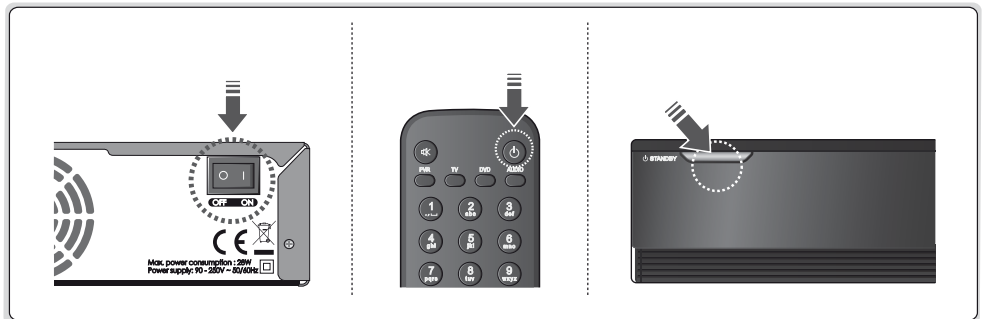

3. Installation Wizard



When powering on your product for the first time after purchase, the installation wizard will operate automatically.

Tip:

- The default password is **0000**.
- If you have forgotten your password, please contact your local product distributor.

3.1 Language

Language allows you to select the main language.

Select the appropriate language from the list. Press the **OK** button to save.



3.2 Search Channels

Search Channels will activate and the results will appear.

1. Enter **Frequency/Network ID/ Symbol Rate** using the **NUMERIC (0-9)** buttons.
2. Select **Search** and press the **OK** button.
3. Please wait for finishing the channel search. If you want to stop the channel search, press the **OK** button.
4. Select **Save** and press the **OK** button to go to the next step.



3. Installation Wizard



3.3 Display

Display enables you to set the screen ratio, display format and resolution of the screen.

Select the value for **Screen Ratio**, **Display Format** and **Resolution**.

Select **Next** and press the **OK** button.




3.4 HDD Partition

HDD Partition enables you to view the current status of the Hard Disc Drive (HDD) storage and also format the HDD. View the HDD storage status and select **Next**.

To format the HDD, select **Format HDD** and press the **OK** button. A popup will appear.


Select **Yes** and press the **OK** button. You will be prompted to enter your password. Enter the password and assign the partition size. Select **OK** and press the **OK** button. Select **Next** and press the **OK** button.

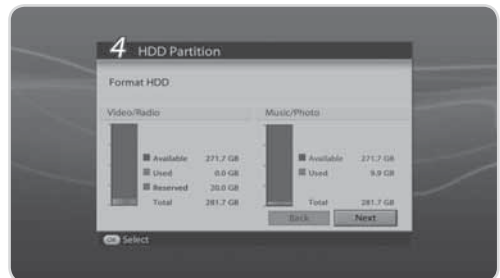

3.5 Result

After all setting is complete, you can view the result screen.

Select **Finish** and press the **OK** button to complete the installation wizard.

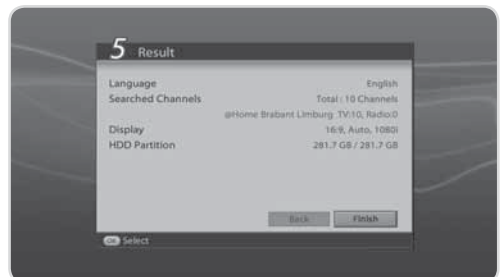

3. Installation Wizard



3.6 Installation Checklist

Before using the product, please make sure that you have completed the following steps.

Step	Page	Done?
Is the CATV line connected correctly?	GB15~18	
Is the product connected to your TV?	GB15~18	
Is the power cord plugged in the wall outlet?	GB19	
Is the power switch located at the back of the product switched on?	GB19	
Is the product in operation mode (not Standby mode)?	GB19	
Have you performed channel search in the installation wizard?	GB20	

Note: If you exit the installation wizard without fully completing the channel searching procedure, you may not have all of the channels available. In this case, you can use the installation menu to search for more channels.

4. Basic Operation



This chapter describes the basic functions the product provides such as switching channel, volume control and other common features.

4.1 Switching Channel

You can switch the current channel by pressing the **P▲/▼** button or entering the channel number directly using the **NUMERIC(0-9)** buttons. Press the **TV/RADIO** button to switch between TV channels and radio channels.

Note: You can switch channels using the channel list or TV guide. To return to the previous channel, press the **BACK** button.

4.2 Volume Control

You can adjust the audio volume. Press the **VOLUME** button to adjust the audio volume. Press the **MUTE** button to stop the audio temporarily.

Note: The mute function remains set while you switch channels.



4.3 Resolution

You can set the resolution of the screen. Press the **V-FORMAT** button while watching a programme. The current resolution will be displayed.

Each time you press the **V-FORMAT** button, the resolution changes in the following sequence: 576i→576p→720p→1080i→Original



4. Basic Operation



4.4 Sleep

You can set the automatic turn off time.

Press the **SLEEP** button while watching a programme to set the sleep time. Each time you press the **SLEEP** button, the sleep time changes in the following sequence: 10, 20, 30, 60, 90, 120 minutes.

4.5 Wide

You can set the display format.

Press the **WIDE** button while watching a programme to change the display format.

Each time you press the **WIDE** button, the display format changes.

Note: For more information about display format, refer to **7.5.8 Display Format**.



4.6 Audio

You can select the language you prefer in **Audio** if the current programme is available in multiple audio languages.

1. Press the **AUDIO** button.
2. Select the audio language you prefer.
3. Select audio direction (left, right, stereo) using the ◀▶ button.
4. Press the **EXIT** button to close.

Note: If the programme is broadcast in Dolby Digital, you cannot set the audio direction.



4. Basic Operation



4.7 Subtitle

can select the language for the subtitle if the programme provides subtitle information.

1. Press the **SUBTITLE** button.
2. Select the required subtitle language and press the **OK** button. The subtitle will be displayed in the selected language at the bottom of the screen.
3. Select **Off** from the subtitle language list to hide the subtitle from the screen.

Note: When there is no subtitle available, **Off** does not appear.



4.8 TEXT

All teletext supporting channels have the teletext icon on the i-plate.

1. Press the **TEXT** button.
2. To display the teletext menu, press the **MENU** button in teletext mode.
3. Select the teletext function you want and press the **OK** button. To view the teletext page, use the **NUMERIC(0-9)** buttons.



4. Basic Operation



4.9 Programme Information (i-plate)

The i-plate is always displayed for a certain period of time whenever you switch channels. You can view the programme information by pressing the **i** button while watching a programme. Press the **EXIT** button to hide the i-plate.


After switching to a channel, press the **◀/▶** button to display navigation mode.

Press the **◀/▶** button to view the previous/next programme information.

Press the **▲/▼** button to view the programme information of other channels.

1. General Information

The general information is displayed on the screen as the following.

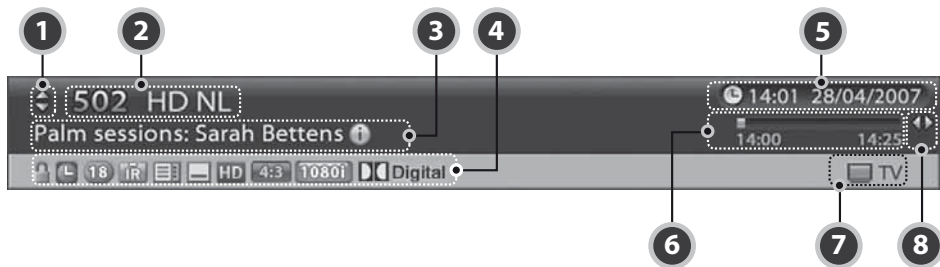

1. Next/previous channel

2. Channel number and name

3. Programme name

4. Icons



Displayed only when the channel is a locked channel.



Displayed only if the programme is reserved for watching.



Represents parental level. Indicates the minimum level of age for viewing the programme.



Displayed only when the channel is a scrambled channel.



Displayed only when there is any teletext information.



Displayed only when subtitle information is available.



Displayed only when the channel provides HD programmes.



Displayed the screen ratio of the current programme.



Displays the resolution of the current programme.



Displayed only when the programme is broadcast in Dolby Digital.



4. Basic Operation

5. Current time & date
6. Programme broadcasting time and progress bar: Displays programme playing time and progress bar.
7. Group name: Displays the group the channel belongs to.
8. Previous/Next programme information: Displayed if previous/next programme information is provided. Press the ◀/▶ button to display previous/next programme information.

Note: If there is no programme information available, programme information is not displayed.

2. Detailed Programme Information

You can see the detailed information about the current programme.

Press the **i** button when the i-plate is displayed to view detailed information. Press the **i** button once more to hide the i-plate.

Note:

- If the detailed programme information is over one page, use the ▲/▼ button to move to the previous or next page.
- Press the ◀/▶ button to display previous/next programme information.



5. Channel List



This chapter will help you manipulate the channel list. You can display the channel list by pressing the **LIST** or **OK** button while watching a programme.

Four types of channel lists are provided for quick and easy channel search.

All (RED)	TV: The list of all TV channels. Radio: The list of all radio channels.
Favourite (GREEN)	The list of the favourite channels in five groups.
HD (YELLOW)	The list of all HD TV channels.
History (BLUE)	Most Viewed: The list of the most viewed channels. Recently Viewed: The list of the recently viewed channels.

Note:

- Press the **EXIT** button to exit the channel list.
- The sub-groups of favourite channel list exist only after configuration.

5.1 All Channels List

All Channels List is the list of all channels available including both TV and radio channels.

1. Press the **OK** button while watching a programme to display the channel list.
2. Press the **RED** button while the channel list is displayed.
3. Select the channel you wish to view and press the **OK** button. You can also enter the channel number using the **NUMERIC(0-9)** buttons.
4. Press the **RED** button again and select a sub group using the **◀▶** button.



Note: You can switch between TV and radio by simply pressing the **TV/RADIO** button.

5. Channel List



1. Option

1. Select a channel and press the **OPT+** button.
2. To add the channel to the favourite group, select **Favourite**. Select the group using the **◀/▶** button and press the **OK** button.
3. To lock the channel, select **Lock** and press the **OK** button.



2. Configuration

1. Press the **MENU** button.
2. To display the icon, enable **Show Icon** using the **OK** button.
3. To display the channel number, enable **Show Channel Number** using the **OK** button.
4. To change the list type, select **List Type** and select among **Simple**, **One Column** and **Two Column** using the **◀/▶** button.
5. To select how to sort the favourite channel list, select **Favourite CH Numbering**. And select **Added Order** or **Original** using the **OK** button.



5.2 Favourite List

Favourite List is the list of the favourite channels you can select yourself from the entire channel list. There are five favourite groups in total.

1. Press the **OK** button while watching a programme.
2. Press the **GREEN** button to display the list of favourite groups.
3. Press the **GREEN** button again and select a subgroup using the **◀/▶** button.



5. Channel List



5.3 HD List

HD List is the list of HD TV channels.

1. Press the **OK** button while watching a programme.
2. Press the **YELLOW** button to display the HD TV list.



5.4 History List

History List is the list of the most or recently viewed channels.

1. Press the **OK** button while watching a programme.
2. Press the **BLUE** button to display the history list.
3. Press the **BLUE** button again and select **Most Viewed** or **Recently Viewed** using the **◀/▶** button.



6. TV Guide



The **TV Guide** displays the programme information of each channel, in time and date order. You can customize your own programme guide to list the channels or programmes of interest to you and schedule your viewing using the programme information.

Note: Press the **GUIDE** or **EXIT** button to exit the TV guide screen.



6.1 Using TV Guide

You can view the programme information of all channels in time and date order.

1. Press the **GUIDE** button.
2. Press the **RED** button.

1. Table Guide

1. Move to the previous/next programme within the same channel using the **◀/▶** button.
2. Move to another channel using the **▲/▼** button. If the contents are more than one page, use the **P▲/▼** button to skip to the next page. Enter the number of the channel you wish to move using the **NUMERIC(0-9)** buttons.
3. Jump back/ahead two hours using the **FAST REWIND/FAST FORWARD** button.
4. Move to the previous/next day using the **PREVIOUS/NEXT** button.
5. Select the programme you want and press the **OK** button to play the programme in the PIG (Picture in Guide). Press the **OK** button again to view the programme.
6. You can reserve it if it is a future programme. Select a future programme and press the **OK** button to see the reservation popup. Select the reservation mode and repeat frequency.

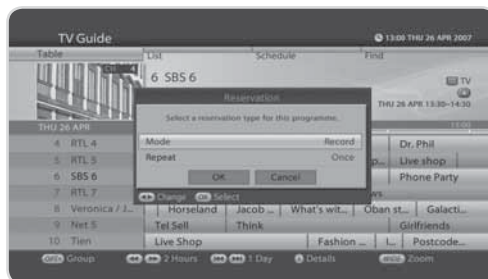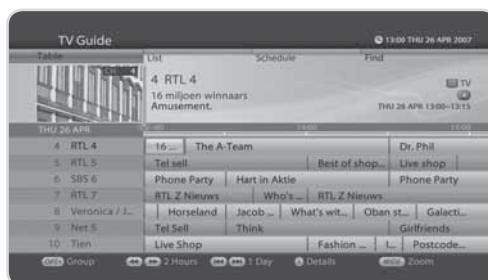

Record	Reserved for recording
Watch	Reserved for watching.

7. Select a reserved programme and press the **OK** button to cancel the reservation.
8. Press the **OPT+** button to change the channel group. Select the channel group using the **◀/▶** button and select the sub channel group using the **▲/▼** button.
9. Press the **WIDE** button to change the length of the time scale in 30, 60, 90, 120 min order.

6. TV Guide



Note:

- Press the **i** button to view the programme information.
- Press the **TV/RADIO** button to switch to TV or radio.


2. Instant Reservation

1. Select a programme in the EPG table and press the **RECORD** button. The selected programme will become reserved and the recording icon will appear immediately.
2. To cancel the reservation, select the programme and press the **STOP** button. The reservation will be canceled immediately.

Note: You cannot reserve new programmes when the HDD is already full. Please delete another recorded programme.

6.2 List Guide

1. Press the **GUIDE** button.
2. Press the **GREEN** button.
3. You can view the programme information for approximately a week. The features are similar as in table guide.

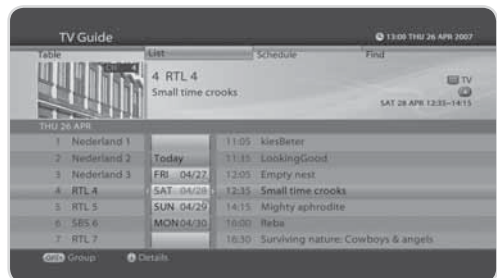


6.3 Schedule

Schedule displays the list of the programmes reserved. You can modify, delete or make new reservations.

1. Press the **GUIDE** button.
2. Press the **YELLOW** button to display the schedule of reservations.
3. Press the **YELLOW** button again to switch from watching list to recording list.
4. Select a reservation and press the **OPT+** button to delete the reservation.

Note: Press the **BACK** button to sort the list in time or alphabetical order.

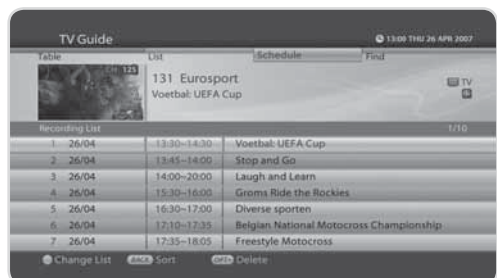


6. TV Guide



1. Editing Reservations

1. Select a reservation you want to edit and press the **OK** button. The reservation popup will appear.
2. Select **Channel** and press the **OK** button to display the channel list. Select the channel.
3. Select **Date** and press the **OK** button to view the calendar. Select the date.
4. Select **Start Time** or **End Time** and enter the time using the **NUMERIC(0-9)** buttons.
5. Select **Repeat** and change the repeat frequency using the **◀/▶** button.
6. Select **Mode** and switch from **Record** to **watch**.
7. Select **OK** and press the **OK** button.

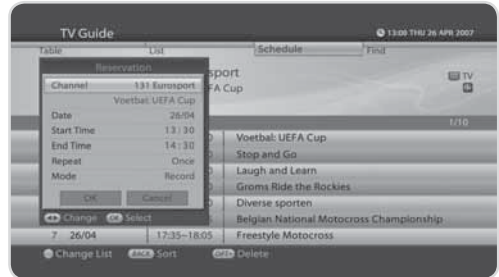

2. Deleting Reservations

1. Select a reservation you want to delete.
2. Press the **OPT+** button to delete the reservation.

3. New Reservation

1. Select a blank space and press the **OK** button.
2. The reservation popup will appear. Enter the channel number, date, start/end time and repeat frequency and then press the **OK** button.

Note:

- Reservations for deleted channels or past programmes are automatically deleted.
- In case the channel number has changed, reservation has to be done again.

6. TV Guide



6.4 Find

Find enables you to find the programme you want by entering the keyword, genre, time and day of the programme.

1. Press the **GUIDE** button.
2. Press the **BLUE** button to find programme.
3. Enter the keyword, genre, time & day of the programme and select **Search** and then press the **OK** button.
4. The search result of the entered values will appear.
5. To reserve a programme, select a future programme and press the **OK** button.

Note: Press the **BACK** button to display seven of the most recent values that have been entered.



1. Search by Keyword

1. Press the **OK** button while the cursor is on **Keyword**.
2. A keyboard will appear. Enter the keyword.
3. Select **Language** and choose the language of the keyword.
4. Select **SMS** to switch to SMS keyboard.
5. Press the **YELLOW** button to complete.

2. Search by Genre

1. Press the **OK** button while the cursor is on **Genre**.
2. The list of genres will appear. Select a genre and press the **OK** button.

3. Search by Time and Day

1. Press the **OK** button while the cursor is on **Time & Day**.
2. The time & day popup will appear. Select the time and day using the **OK** or **◀/▶** button.
3. Select **OK** and press the **OK** button.

7. Preferences



In this chapter you can set parental control, language setting, time setting, media setting, A/V setting and other configuration items to keep limitations where you want them for the viewers.

Note: Press the **EXIT** button to save the changes and return to the previous menu. Press the **MENU** button to exit the menu screen.

7.1 Parental Control

Parental Control allows you to set rating limits for each programme according to the age of the viewer or change your previous password. You can also lock the changes you have made using installation lock.

Tip: The default password is **0000**.

1. Press the **MENU** button.
2. Select **Preferences** using the **▲/▼** button and press the **OK** button.
3. Select **Parental Control** using the **▲/▼** button and press the **OK** button.
4. You will be prompted to enter your password. Enter the password using the **NUMERIC(0-9)** buttons.




1. Age Limit

Age Limit enables you to place certain restrictions on the viewers by setting age limits.

1. Select **Age Limit** and press the **OK** button.
2. Select the age limit you wish to set.

Note: You must enter your password to watch programmes blocked by the age restriction.

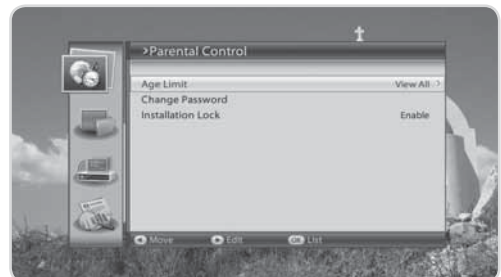

7. Preferences



2. Change Password

Change Password allows you to change the current password.

1. Select **Change Password** and press the **OK** button.
2. Enter the password in **New Password** using the **NUMERIC(0-9)** buttons.
3. Enter the password again in **Verify Password** to confirm.

3. Installation Lock

Installation Lock allows you to block access to the installation menu settings you have previously made.

1. Select **Installation Lock**.
2. Select **Enable** or **Disable** using the **OK** or **◀/▶** button.

7.2 Language Setting

Language Setting enables you to set the basic language and subtitle options.

1. Press the **MENU** button.
2. Select **Preferences** using the **▲/▼** button and press the **OK** button.
3. Select **Language Setting** using the **▲/▼** button and press the **OK** button.



1. Menu/Audio/Subtitle Language

Menu/Audio/Subtitle Language allows you to choose from the given language options and set the language.

1. Select **Menu/Audio/Subtitle Language** and press the **OK** button.
2. Select the language you want and press the **OK** button.

7. Preferences



2. Subtitle Display

Subtitle Display allows you to display the subtitle automatically. This service is provided when subtitles are available.

1. Select **Subtitle Display**.
2. Select **Auto** or **Manual** using the **OK** or **◀/▶** button.

Auto	Subtitles are displayed automatically in the predefined subtitle language.
Manual	Subtitles are displayed only when you press the SUBTITLE button and set subtitle.

3. Subtitle Font

Subtitle Font enables you to select the font of the subtitle.

1. Select **Subtitle Font**.
2. Select **Variable** or **Fixed** using the **OK** or **◀/▶** button.

Variable	Uses the horizontally variable subtitle font of the on-screen display.
Fixed	Uses the fixed subtitle font as in TEXT.

7. Preferences



7.3 Time Setting

Time Setting allows you to set the time you want to turn the product on or off.

1. Press the **MENU** button.
2. Select **Preferences** using the ▲/▼ button and press the **OK** button.
3. Select **Time Setting** using the ▲/▼ button and press the **OK** button.



1. Power ON

You can set the time the product turns on automatically.

1. Select **Power ON** and press the ► button.
2. Enter the powering on time using the **NUMERIC(0-9)** buttons or select **Disable** using the ◀/▶ button.

2. Power On Channel

You can select the channel to watch when the product turns on at the preset wakeup time.

1. Select **Power On Channel** and press the **OK** button to display the channel list.
2. Select the channel and press the **OK** button.

3. Power OFF

You can select the time the product turns off automatically.

1. Select **Power OFF** and press the ► button.
2. Enter the powering off time using the **NUMERIC(0-9)** buttons or select **Disable** using the ◀/▶ button.


7. Preferences



7.4 Media Setting

Tip: The default password is 0000.


1. Press the **MENU** button.
2. Select **Preferences** using the **▲/▼** button and press the **OK** button.
3. Select **Media Setting** using the **▲/▼** button and press the **OK** button.

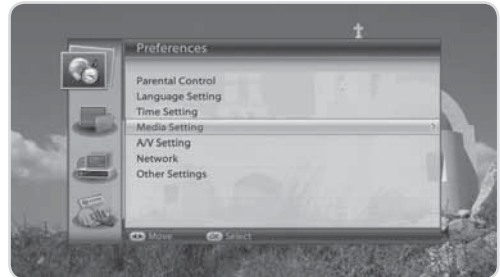

1. HDD Control

You can format the video/radio partition, music/photo partition or the hard disk drive.

1. Select **HDD Control** and press the **OK** button
2. To format the video/radio partition, select **Format Video/Radio Partition** and press the **OK** button. Enter the password to proceed.
3. To format the music/photo partition, select **Format Music/Photo Partition** and press the **OK** button. Enter the password to proceed.
4. To format the hard disk drive, select **Format HDD** and press the **OK** button. Enter the password and assign the partition size using the **◀/▶** button. Select **OK** and press the **OK** button.

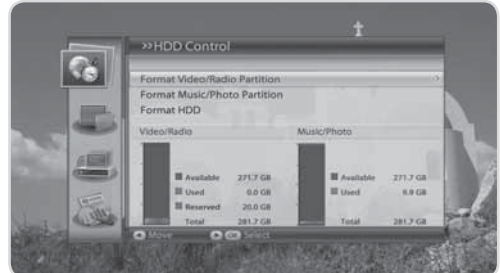

2. USB Control

You can format the USB storage.

1. Select **USB Control** and press the **OK** button.
2. To format the USB storage, select **Delete all files** and press the **OK** button. A popup will appear. Select **Yes** and press the **OK** button. You will be prompted to enter your password. Enter the password using the **NUMERIC(0-9)** buttons.


7. Preferences



3. Recording Options

You can set the recording padding time in case the recording starts earlier or ends later than scheduled. You also can set the instant replay or skip time for the **REPLAY** or **SKIP** button.

1. Select **Recording Options** and press the **OK** button.
2. Select **Start/End Padding** or **Instant Replay/Skip Time** and press the **OK** button.
3. Select the time using the **OK** or **◀/▶** button.

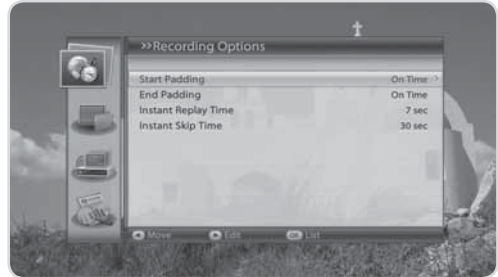

7.5 A/V Setting

You can configure the audio and video output settings.

1. Press the **MENU** button.
2. Select **Preferences** using the **▲/▼** button and press the **OK** button.
3. Select **A/V Setting** using the **▲/▼** button and press the **OK** button.



1. Component Selection

You must choose the video output type between **YPbPr** and **RGB**.

RGB is for SCART connection only. When RGB is selected, you cannot watch video through Component Out (YPbPr).

1. Select **Component Selection** and press the **OK** button.
2. Select **YPbPr** or **RGB** using the **OK** or **◀/▶** button.

7. Preferences



2. TV SCART

You can select the TV SCART output option.

1. Select **TV SCART** and press the **OK** button.
2. Select among **CVBS**, **S-Video** and **RGB** and press the **OK** button.

Note: You can select **RGB** only when the Component Select switch at the rear is on **RGB**.

3. VCR SCART

You can select the VCR SCART output option.

1. Select **VCR SCART**.
2. Select **CVBS** or **S-Video** using the **OK** or **◀/▶** button.

4. Audio Output

You can select the audio output option.

1. Select **Audio Output**.
2. Select **Stereo** or **Mono** using the **OK** or **◀/▶** button.

5. Audio Priority

You can set Dolby Digital automatically. If you select **Dolby**, Dolby Digital audio will be output via S/PDIF.

1. Select **Audio Priority**.
2. Select **Dolby** or **PCM** using the **OK** or **◀/▶** button.

6. Audio Delay

You can adjust the sound difference of audio and video.

Tip: The default password is **0000**.

1. Select **Audio Delay** and press the **OK** or **▶** button.
2. Adjust the sync using the **◀/▶** button.
3. Press the **BACK** button to complete.

Note: Audio Delay is applied to all channels when once adjusted.

7. Preferences



7. Screen Ratio

You can select the screen ratio option.

1. Select **Screen Ratio**.
2. Select **4:3** or **16:9** using the **OK** or **◀/▶** button.

8. Display Format

You can select the display format according to the screen ratio.

1. Select **Display Format** and press the **OK** button.
2. When choosing **4:3** as screen ratio, select among **16:9 Letter Box**, **14:9 Letter Box**, **Center Mode** and **Use TV's feature** and press the **OK** button.
3. When choosing **16:9** as screen ratio, select among **Auto**, **Full Mode** and **Zoom** and press the **OK** button.

9. Letter and Pillar Box Colour

You can select the colour of the letter box and pillar box.

1. Select **Letter and Pillar Box Colour**.
2. Select **Black** or **Gray** using the **OK** or **◀/▶** button.

7. Preferences



7.6 Network

You can view the network information.

1. Press the **MENU** button.
2. Select **Preferences** using the **▲/▼** button and press the **OK** button.
3. Select **Network** and press the **OK** button.
4. The network information will be displayed.



1. FTP Server

You can transfer the media files in HDD into your PC with FTP program.

1. Select **FTP Server**.
2. Select **Disable** or **Enable** using the **OK** or **◀/▶** button.
3. When selecting **Enable**, the product works as FTP server.

Note:

- You can access to HDD by entering the IP address assigned to the product on PC.
- When accessing, enter 'HumaxFTP' for Login ID and your password for Login Password.

2. Ethernet Configuration

You can change the network information for the product.

1. Select **Ethernet Configuration** and press the **OK** button.
2. Select **Configure IP** and press the **OK** or **◀/▶** button to select **DHCP** or **Manual**.
3. When selecting **Manual**, you can enter the value for the network information. Select **Apply** and press the **OK** button to save the changes.

7. Preferences



7.7 Other Settings

You can configure other settings such as info display time and OSD transparency.

1. Press the **MENU** button.
2. Select **Preferences** using the **▲/▼** button and press the **OK** button.
3. Select **Other Settings** using the **▲/▼** button and press the **OK** button.



1. Info Display Time

You can set the automatic display time of the information box when the channel is switched.

1. Select **Info Display Time** and press the **OK** button.
2. Select a value between **Disable**, **1~20** seconds and press the **OK** button.

Note: When set to **Disable**, the i-plate will not be displayed when you switch the channel.

2. OSD Transparency

You can set the transparency of the On-Screen Display.

1. Select **OSD Transparency** and press the **OK** button.
2. Select among **Disable**, **25**, **50** and **75** and press the **OK** button.

Disable	Fully opaque screen
25, 50, 75	The bigger the number, the more transparent the screen.

3. Power Saving in Standby

Power Saving in Standby allows you to reduce the power consumption of product in standby mode.

1. Select **Power Saving in Standby**.
2. Select **On** or **Off** using the **OK** or **◀/▶** button.
3. When selecting **On**, the time is not displayed on VFD in standby mode.

8. Edit Channels



In this chapter you can edit all channels in the channel list or make changes to the favourite lists of the channels you have chosen.

Note:

- Press the **EXIT** button to save the changes and return to the previous menu. Press the **MENU** button to exit the menu screen.
- Press the **TV/RADIO** button to move to TV or radio channel list directly.

8.1 Edit Channel List

Edit Channel List enables you to select or lock/unlock the channels in the channel list conveniently.

Tip: The default password is **0000**.

1. Press the **MENU** button.
2. Select **Edit Channels** using the **▲/▼** button and press the **OK** button.
3. Select **Edit Channel List** using the **▲/▼** button and press the **OK** button.
4. You will be prompted to enter your password. Enter the password using the **NUMERIC(0-9)** buttons.




1. Locking/Unlocking Channels

1. Select the channel you want to lock and press the **OK** button.
2. Press the **RED** button.

Note:

- When all selected channels are locked, **Lock** is switched into **Unlock**. When you press **Unlock**, the locked channel is switched into an unlocked channel.
- To watch locked channels, you must enter the password using the **NUMERIC(0-9)** buttons.

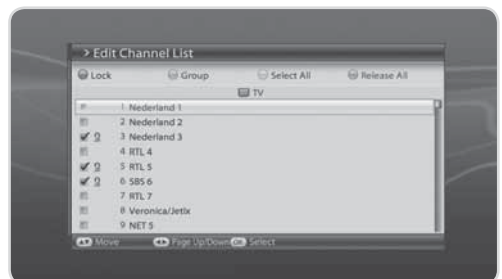

2. Selecting a Channel Group

1. Press the **GREEN** button to display the list of groups.
2. Select the group you want and press the **OK** button.

8. Edit Channels



3. Select All/Release All

1. Press the **YELLOW** button to select all channels.
2. Press the **BLUE** button to release all channels.

8.2 Edit Favourite List

You can add or remove channels from the favourite groups, move favourite channels and rename favourite groups.

1. Press the **MENU** button.
2. Select **Edit Channels** using the **▲/▼** button and press the **OK** button.
3. Select **Edit Favourite List** using the **▲/▼** button and press the **OK** button.

1. Adding/Removing Channels

1. Select the channels you want to add to the favourite channel list and press the **OK** button.
2. Press the **RED** button to add the channels to the favourite list you have chosen.
3. To remove channels from the favourite list, select the channels from the list and press the **RED** button.

Note: When the cursor is on the left column, the red button is marked **Add**; when the cursor moves to the right column, it becomes **Remove**.



2. Selecting Favourite Groups

1. Press the **GREEN** button to display the list of groups.
2. Select the favourite group you want and press the **OK** button.

3. Select All/Release All

1. Press the **YELLOW** button to select all channels in the favourite list.
2. To release all channels, press the **YELLOW** button again.



8. Edit Channels

4. Renaming Favourite Groups

1. Select the favourite group you want to rename and press the **OK** button.
2. Press the **BLUE** button.
3. Select **Rename Group** and press the **OK** button.
4. A keyboard will appear. Enter the name of the favourite group using the keyboard.
5. Press the **YELLOW** button to complete.

Note: The **YELLOW** and **BLUE** buttons become activated only when the cursor is placed on the right column.

5. Moving Favourite Channels

1. Select the favourite channels to move within the favourite channel list and press the **OK** button.
2. Press the **BLUE** button.
3. Select **Move** and press the **OK** button.
4. Move the cursor to the destination using the **▲/▼** button, and press the **OK** button.
5. The selected channel is moved to the new location.

8.3 Display History List

Display History List allows you to set the history list in the channel list to **Enable** or **Disable**.

1. Press the **MENU** button.
2. Select **Edit Channels** using the **▲/▼** button and press the **OK** button.
3. Select **Display History List** using the **▲/▼** button and press the **OK** button.

9. Installation




In this chapter you can configure the installation setting and perform channel search. Menus such as channels search, software update and default setting are included in this section.

Note: Press the **EXIT** button to save the changes and return to the previous menu. Press the **MENU** button to exit the menu screen.

9.1 Channel Search

If your product is connected to the cable and TV, you can search channels manually by searching parameters, if you know the MUX information.

1. Press the **MENU** button.
2. Select **Installation** using the **▲/▼** button and press the **OK** button.
3. Select **Channel Search** using the **▲/▼** button and press the **OK** button.
4. Select **Frequency** and enter the frequency using the **NUMERIC(0-9)** buttons.
5. Select **Network ID** and enter the value using the **NUMERIC(0-9)** buttons.
6. Select **Symbol Rate** and press the **OK** and **◀/▶** button. Select the symbol rate and press the **OK** button. If the required value is not available, select **User Define** and enter the symbol rate directly.
7. Select **Search** and press the **OK** button to start channel search. Please wait for finishing the channel search. If you want to stop the operation during search, press the **OK** button.
8. Press the **OK** button to save the result.

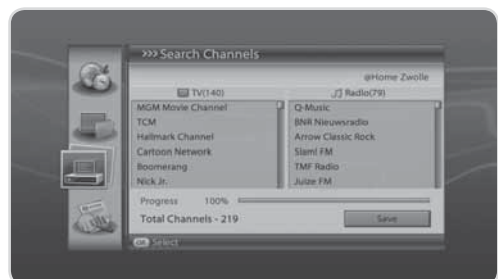

9. Installation



9.2 Software Update

Software Update allows you to update the system software.

1. Press the **MENU** button.
2. Select **Installation** using the **▲/▼** button and press the **OK** button.
3. Select **Software Update** using the **▲/▼** button and press the **OK** button.
4. When new software is detected, you can choose to download the software immediately or save for later.

Note:

- For more information about the software update, refer to **11. Software Update**.
- **Software Update** is activated when a new software is found.

9.3 Default Setting

Default Setting enables you to restore the product to the factory default.

Warning: Please note that once you perform **Default Setting**, all data such as channel list and all user configured data will be deleted.

1. Press the **MENU** button.
2. Select **Installation** using the **▲/▼** button and press the **OK** button.
3. Select **Default Setting** using the **▲/▼** button and press the **OK** button.
4. Select **Yes** and press the **OK** button to restore all setting to factory default. To return to the previous menu, select **No** and press the **OK** button.
5. You will be prompted to enter your password again before starting to load default setting. Enter the password to proceed.
6. When default setting is completed, installation wizard pops up automatically and assists channel search.



Tip: The default password is **0000**.

Note: For detailed information about the installation wizard, refer to **Chapter 3. Installation Wizard**.

10. System



10.1 Status

You can view system status information.

1. Press the **MENU** button.
2. Select **System** and press the **OK** button.
3. Select **Status** and press the **OK** button.
4. The system status information will be displayed.



10.2 Signal Detection

You can view the signal strength and signal quality of the channel that is currently on AV.

1. Press the **MENU** button.
2. Select **System** and press the **OK** button.
3. Select **Signal Detection** and press the **OK** button.

10.3 Conditional Access

You can view the current status of the Conditional Access.

1. Press the **MENU** button.
2. Select **System** and press the **OK** button.
3. Select **Conditional Access** and press the **OK** button.
4. The current status of the Conditional Access will be displayed.

10.4 Mail Messages

You can view the messages.

1. Press the **MENU** button.
2. Select **System** and press the **OK** button.
3. Select **Mail Messages** and press the **OK** button.
4. Mail messages will be displayed.

Note: **Mail Message** is activated when a new mail arrives.

11. Media List



The product supports 4 types of Media lists. Press the **MEDIA** button and then the coloured buttons on the remote control to access each list.

Video (RED)	TV programmes that have been recorded
Radio (GREEN)	Radio programmes that have been recorded
Music (YELLOW)	MP3 (Music) files you have transferred
Photo (BLUE)	Jpeg (Photos) files you have transferred

11.1 Video

When the Media List is on screen, press the **RED** button to select **Video** if not already selected. A list of the TV programmes you have recorded will appear.

Note:

- Press the **LIST** button to sort the files in file name, time, channel number order.
- Press the **i** button to display the programme information of the selected recording.
- The icon (Ⓜ) will be displayed when the file is being played.
- When a support USB device is connected via the front or rear USB ports press the **RED** button to change between the HDD and the USB device.



1. Video Setting

Press the **OPT+** button in video list. A popup will appear to display the setting option.

- **File Manager:** Go to File Manager. (Refer to p.54.)
- **Sort:** Select the sorting order.
- **List Type:** Select between **Simple** or **Normal** list types.



11. Media List



2. Play Option

Play Option for a File

Select a file you want to play and press the **OK** button. A popup will appear to display the play option.

- **Play from the last played position:** Play the file from the point it has been stopped.
- **Play from the start:** Play the file from the beginning.
- **Delete a file:** Delete the file. Select **Yes** and press the **OK** button.
- **Rename:** Rename the file. Enter the name using the keyboard displayed. Press the **YELLOW** button to complete.
- **Play at chapter:** Select a still image and press the **◀/▶** button to select the chapter you wish to view.



Note:

- You can also press the **PLAY** button to play the file from the last played position.
- A chapter is made automatically by dividing a file into eight smaller files and capturing a still image of each smaller file. Chapters are used in play option by pressing the **PREVIOUS** and **NEXT** buttons.



Play Option for Playlist

Select the playlist and press the **OK** button.

- **Play:** Play all files in the playlist.
- **Delete:** Delete the playlist.
- **Edit:** Edit the playlist.

Note: After making a playlist, you can view the playlist in video list. (Refer to File Manager on p.54.)

11. Media List



3. Playlist

You can playback the chosen files in the order you want.

Making or Adding Playlist

1. Press the **OPT+** button. A popup will appear to display the setting option.
2. Select **File Manager** and press the **OK** button to display File Manager.
3. Select the file(s) you want to play.
4. Press the **BLUE** button and select **Make Playlist** or **Add Playlist** and press the **OK** button. A playlist will appear.

Note:

- After making a playlist, you can view the playlist in video list.
- To select multiple files, go to Edit Mode using the **YELLOW** button.



Editing Playlist

1. Press the **OPT+** button. A popup will appear to display the setting option.
2. Select **File Manager** and press the **OK** button to display File Manager.
3. Press the **BLUE** button and select **Edit Playlist** and press the **OK** button.
4. Press the **RED** button to delete the file and renumber the list.
5. Press the **GREEN** button to move the file within the list. Press the **OK** button to complete.
6. Press the **OK** button to play the selected file in the playlist.

Note: You also can edit the playlist using the play option in video list. (Refer to p.52.)



11. Media List



4. File Manager

You can delete files or copy files to/from external devices.

1. Press the **OPT+** button. A popup will appear to display the setting option.
2. Select **File Manager** and press the **OK** button to display File Manager.
 - **Delete:** Select the file to delete and press the **RED** button.
 - **Copy:** Select the file to copy and press the **GREEN** button. (**Move** appears if there is no USB device.)
 - **Edit Mode:** You can edit multiple files. Press the **YELLOW** button to go to edit mode. Press the **YELLOW** button again to go back to normal mode.
 - **Function:** Press the **BLUE** button.



Select All	Select all or release all.
Make Folder	Make new folder within the current folder. Enter the name of the folder using the keyboard displayed. Press the YELLOW button to complete.
Rename	Rename the selected file or folder. Enter the name using the keyboard displayed. Press the YELLOW button to complete.
Lock/Unlock	Lock or unlock the selected file. Lock or unlock the selected file.
Make List	Make new playlist within the current folder.
Add Playlist	Add the selected file(s) within the playlist.
Edit Playlist	Edit the playlist.

Note:

- You also can easily operate several functions; delete, copy(or move), rename or lock; by pressing the **OK** button after selecting a file in normal mode.
- You can copy files from HDD to USB, or vice versa, by moving between left and right columns.
- Press the **OPT+** button while the cursor is in the right column to switch the device.

11. Media List



11.2 Radio

When the Media List is on screen, press the **GREEN** button to select **Radio** if not already selected. A list of the Radio programmes you have recorded will appear.

Note: The features available in the radio list are the same as the video list in section **11.1 Video**.



11.3 Music

When the Media List is on screen, press the **YELLOW** button to select **Music** if not already selected. A list of the MP3 (Music) files you have transferred will appear.

Note:

- Press the **LIST** button to sort the files in file name or time order.
- Press the **i** button while playing a music file to view the file information.



1. Music Setting

Press the **OPT+** button in music list. A popup will appear to display the setting option.

- **File Manager:** Go to File Manager. (Refer to p.56)
- **Sort:** Select the sorting order.
- **Repeat:** Select the repeat option.
- **Shuffle:** Enable or disable shuffle mode.




11. Media List



2. Music Player

1. Select the music file you want and press the **OK** or **PLAY** button to play.
2. Press the **STOP** button to stop playing.
3. Press the **PAUSE** button to pause.
4. Press the **◀/▶** button to go back or go forward.
5. To play the previous/next music file, us the **FAST FORWARD/FAST REWIND** button.
6. Use the **OPT+** button to repeat or shuffle.
7. Press the **EXIT** button to stop the music player.

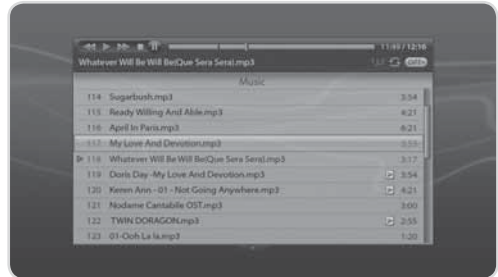

3. Playlist / File Manager


Note: The way to use the playlist and file manager is the same as the video list in section **11.1 Video**.

11.4 Photo

When the Media List is on screen, press the **BLUE** button to select **Photo** if not already selected. A list of the Jpeg (Photo) files you have transferred will appear.

Note:

- Press the **LIST** button to sort the files in file name or time order.
- Press the **i** button in the photo list to view the file information.

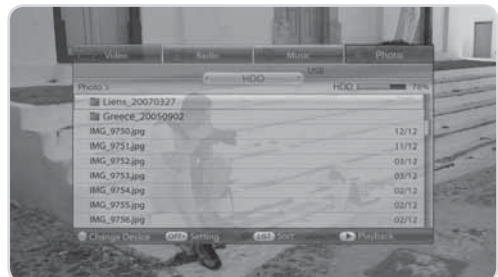

1. Photo Setting

Press the **OPT+** button in photo list. A popup will appear to display the setting option.

- **File Manager:** Go to File Manager. (Refer to p.57.)
- **Sort:** Select the sorting order.
- **Display Time:** Select the display time.
- **Aspect Ratio:** Select **Auto** or **Original**.
- **Music:** Select the music option.





11. Media List

2. Photo Viewer

1. Press the **OK** or **PLAY** button to view the photos in slideshow.
2. Press the **OK** button to display the photo playbar.
3. Press the ◀▶ button to view the previous/next photo.
4. Press the **PAUSE** button to stop the slideshow. Press the **PAUSE** button again or press the **PLAY** button to continue the slideshow.
5. Press the **PREVIOUS/NEXT** button to move back/forward five photos
6. Press the **OPT+** button to display Photo Setting.
7. When music player is playing, press the **FAST REWIND/FAST FORWARD** button to move to the previous/next music file.
8. Press the **EXIT** button to stop the photo viewer.

3. Playlist / File Manager

Note: The way to use the playlist and file manager is the same as the video list in section **11.1 Video**.

12. Personal Video Recorder(PVR)



The product automatically buffers the channel you are viewing to the Hard Drive (2 hour period), this enables you to pause live TV, rewind to the point you changed to the channel, and fast forward.

Note: The buffer will be cleared whenever you change channels.

12.1 Play bar

Press the **PLAY** button while watching a recording to display the play bar. Play bar displays the current operation status, the time gap between the broadcasting point and watching point and the amount of temporarily saved programme.



1. Play status
2. Start time
3. Amount of saved programme
4. Present time
5. Play pointer
6. Total time (present time in TSR)

To move to the specified time point directly, enter the time you want using the **NUMERIC(0-9)** buttons. To move the watching point bar to the time point you want, press the **◀/▶** button while playing back and then press the **OK** button to play the programme from the specified time point. If you do not press the **OK** button after moving the watching point, it will move automatically. Press the **STOP** button to stop the current file and go to live TV.

12. Personal Video Recorder(PVR)



12.2 Time Shifted Recording (TSR) and Playback.

You can perform Time Shifted Recording (TSR) and other VCR functions within TSR using the playback control buttons while playing a programme.

1. Playback

You can view the recorded files in the **Media List**→**Video**. Press the **MEDIA** button to access the recorded file list easily.

1. Press the **REPLAY** button to jump back and play from that point. Press the **STOP** button to return to live video.
2. Press the **SKIP** button to jump ahead and play from that point. Press the **STOP** button to return to live point.

Note:

- Enter the **NUMERIC(0-9)** buttons during playback and press the **OK** button to move to that specific time point.
- For more information about playback, refer to **11.1.2 Play Option**.

2. TSR

You can perform fast rewind, fast forward, slow motion and pause while playing back a recorded file from the media list.

Fast Forward

1. Press the **FAST FORWARD** button to fast forward the programme.
2. Each time you press the **FAST FORWARD** button, the speed increases (x2, x4, x16, x32, x64).
3. If you press the **PLAY** button, the fast forward operation stops and the programme is played at normal speed.

Note: The **Fast Forward** operation is only available during playback of a recording or when you are behind live TV (if you have paused live TV, used slow motion, or fast rewind). You are only able to fast forward to the live TV point; when this is reached the programme will play at normal speed automatically.



12. Personal Video Recorder(PVR)



Fast Rewind

1. Press the **FAST REWIND** button to go back during a recording or the buffer.
2. Each time you press the **FAST REWIND** button, the speed increases (x2, x4, x16, x32, x64).
3. If you press the **PLAY** button, the fast rewind operation stops and the programme is played at normal speed.

Note: You can fast rewind back to the start of a recording or to the start of the buffer. When you reach the start point the programme will play at normal speed automatically.



Slow Motion

1. Press the **SLOW** button to playback in slow motion.
2. Each time you press the **SLOW** button, the playback speed becomes slower. (x $\frac{1}{2}$, x $\frac{1}{4}$, x $\frac{1}{8}$)
3. Press the **PLAY** button to play the programme at normal speed.

Pause

1. Press the **PAUSE** button to pause the current programme.
2. If you press the **PAUSE** button once again, the programme is resumed from that point.

Note: Pressing **PAUSE** while watching live TV will increase the delay from the point you have paused to the live broadcast. You will be able to use the **FAST FORWARD** or **SKIP** functions during this time. To go directly to the live broadcast press the **STOP** button.



12.3 Recording

Using the built-in hard disk drive, you can record a programme without external media devices such as a VCR.

Note:

- Ensure that sufficient disk space is available before recording, the recording will either fail or not record fully if there is insufficient disk space.
- A one hour recording may require 2-3 GB of space depending on the broadcast.
- Radio programmes can be recorded.
- Pressing the **STANDBY** button while recording will not stop the recording. The product will go to standby mode after completing recording.
- Press the **i** button to display the the channel currently recording and i-plate.

GB60

12. Personal Video Recorder(PVR)



1. General Recording

1. Press the **RECORD** button to record the programme you are currently viewing.
2. Press the **RECORD** button again while recording to adjust the recording end time. You can adjust the recording end time using the ◀/▶ button.
3. When recording a current programme which has almost reached the end time, the following programme will be recorded and the ending time of that programme will appear on the play bar. Press the **RECORD** button to move from the current programme to the next programme.



2. Multi-Channel Recording

1. To record another channel, change channels while recording and press the **RECORD** button again.
2. You can record two channels simultaneously.
3. If you change to a third channel and press the **RECORD** button you will be prompted to select one of the other two recordings to cancel.



3. Stop Recording

1. Press the **STOP** button to stop recording one of the two channels.
2. You will be prompted to select one among the current recordings. Select the channel you want to stop recording using the ▲/▼ button.
3. Select **OK** and press the **OK** button.

12. Personal Video Recorder(PVR)



12.4 Bookmark

1. Adding Bookmark


You can jump to a position directly using the bookmark feature in recorded file playback. Use bookmarks to search a specific scene quickly and conveniently.

Press the **ADD BOOKMARK** button at the location you want to set a bookmark while playing back a recorded file. The bookmark icon is displayed at the lower right of the screen.

Note: The bookmark function is available for recorded files only.

2. Bookmark List

1. Press the **BOOKMARK LIST** button after adding a bookmark.
2. Select the location you wish to view using the ◀▶ button. The bookmark image is displayed at the lower right of the screen.
3. Press the **BOOKMARK LIST** button again to return to the play bar.
4. To delete a location, select the location you want to delete and press the **ADD BOOKMARK** button.

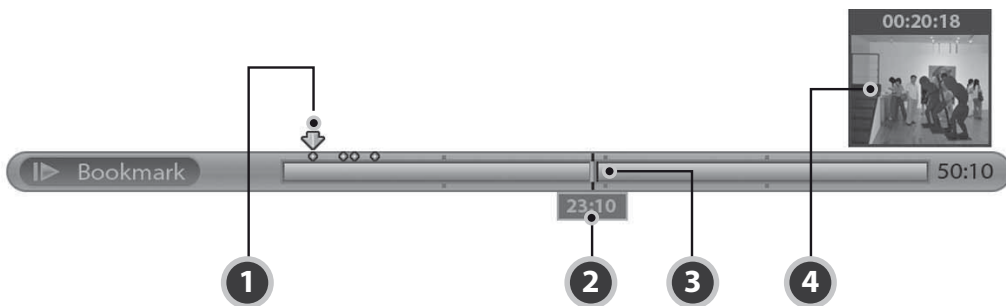

1. Bookmark cursor
2. Watching point time

3. Watching point
4. Bookmark image

13. Software Update



In order to maintain proper performance of the product, it is essential to have the most up-to-date software. Visit the Humax website to check the latest news and newly released software versions. <http://www.humaxdigital.com>.

It is recommended that you periodically check for the availability of software update.

13.1 OTA (Over the Air)

OTA, an abbreviation of **Over-the-Air**, is a standard for the transmission of software through a broadcast system. The manufacturers reserve the right to decide when and where an update is made available. The new software version is then downloaded via cable. The software update via cable will only occur under the following circumstances.

1. The equipment should have the appropriate loader software.

Caution: Please note that if the normal loader software is not equipped, the product may not be updated or operate properly after software update.

2. The manufacturer transmits the software via cable. The new version of the software is generally detected automatically.

Caution:

- Please be careful to keep the power on and the power cord plugged in during software update. If the power is off during software update, fatal damage may be caused to the product.
- Please be careful not to pull out the signal line (coaxial cable) during software update. Update may be interrupted and the product may not operate.

Note:

- It may take 5 ~10 minutes to update software.
- Other functions will not activate while software update takes place.
- You cannot schedule programmes during software update.





1. Software update while watching a programme

When new software is detected, you can choose to download the software immediately or save for later.

14. Appendix



14.1 Menu Map

	<ol style="list-style-type: none">1. Parental Control2. Language Setting3. Time Setting4. Media Setting5. A/V Setting6. Network7. Other Settings
Preferences	
	<ol style="list-style-type: none">1. Edit Channel List2. Edit Favourite List3. Display History List
Edit Channels	
	<ol style="list-style-type: none">1. Channel Search2. Software Update3. Default Setting
Installation	
	<ol style="list-style-type: none">1. Status2. Signal Detection3. Conditional Access4. Mail Messages
System	

14. Appendix



14.2 Trouble Shooting

Before contacting your local service centre, please read the tips below carefully. If the problem persists after completing the following procedure, please contact your local product distributor or service centre for further instructions.

1. No message displayed on the front panel. (The product will not switch on.)

- Check the main power cable and make sure it is plugged into a suitable power outlet.
- Check that the mains supply is switched on.
- Check that the power switch is on at the rear of the product. (where applicable)
- Connect the power cable to a different power outlet.

2. No picture on TV set

- Make sure that the product is powered on and in operation mode. (Press the **STANDBY** button)
- Make sure that the AV cable is firmly connected to the TV.
- Make sure that the cable is properly connected to the product.
- Be sure to activate channel search.
- Check the brightness level of the TV.
- Check if the channel is currently on air. Contact the broadcaster to ensure that the channel is running.
- Press the **SOURCE** button if the product is in external input mode.

3. No or poor sound

- Check that your AV cable is connected correctly.
- Check the volume levels of your TV set and the product.
- Check if the product or TV is on mute.
- Check audio type or soundtrack option in the AV menu.

4. Remote control does not operate.

- To control the product, the top end of the remote control should point directly towards the receiving part of the product.
- Remove and reinsert the batteries in the remote control.
- Replace the batteries in the remote control for a new set.

5. Cannot make reservations.

- Check that no previous reservations are conflicting with the new reservation.

6. No password information is given.

- The default password is always **0000**.

7. Channel search does not work.

- Check that your cable is connected correctly.

8. Cannot update new software.

- You can get an update. If the product does not show a message requesting update, that means no software is available.

9. Cannot watch scrambled channels.

- Check that you have the appropriate Smartcard. Reinsert the Smartcard and make sure it initializes correctly.
- Check in the menu that the product is detecting the Smartcard.
- Check in the menu that you have a valid and working subscription to the channels you wish to view.

14. Appendix



- Ensure that the Smartcard is not damaged.

10. Cannot watch pay channels.

- Check in the menu that you have a valid and working subscription to the channels you wish to view.
- Contact your network operator for more information.

11. Cannot record programmes.

- The hard disk is full. Delete unnecessary programmes and make space for new recording.
- Check if recording is overlapped with another channel. Stop the current recording or wait until the recording is finished.
- Check that the product is switched on when starting recording.

12. Cannot operate the TSR (Time Shifted Recording).

- The TSR may not be available during the recording. Wait until the recording is finished.
- Delete unnecessary programmes and make space for new recording.

13. The product makes a humming noise.

- The noise is from the fan; the hard disk is operating normally. This kind of noise is inevitable but seldom noticeable.

14. Cannot playback.

- To play back the recorded file of a scrambled channel, use the Smartcard. In case it has been a long time since you last recorded, this may not work. Contact the product distributor.
- The signal during the recording may be weak or the hard disk too full.

15. Cannot change channel while recording.

- Certain channels may not be changed due to restriction of the tuner type.

14. Appendix



14.3 Error Message

Error message	Possible causes	What to do
Please Insert Smartcard	The Smartcard is not present.	Insert the Smartcard.
Smartcard Failure	The current Smartcard may be faulty.	Insert the appropriate Smartcard. Contact the product distributor if the problem persists.
Checking Smartcard	The Smartcard is being verified. It may be inserted up-side down.	
Service is currently scrambled	The Smartcard has expired or the datecode on the card has gone backwards.	Check Smartcard. Contact the product distributor if the problem persists.
Service Unknown	No service is located at the entered channel number.	
Service is currently not running	Operating status of the service is set to Off.	
Parental Control Lock	When the parental rating of the event is greater than the setting made via the Parental Control menu.	Enter the PIN-code or reset the settings.
No Event Information	The information for the current event or service has not been received.	
No Signal	The signal is too weak.	Reset the cable.
No Service available	There are no services available.	Reset the setting and restart channel search.

14. Appendix



14.4 Specification

Tuner & Channel	
Input Connector	IEC 169-2 Female
Frequency Range	51 MHz~862MHz
Signal Level	-15 to +15 dBmV @ 64, 128-QAM, -12 to +15 dBmV @ 256-QAM
Demodulation	DVB-C(16QAM, 32QAM, 64QAM, 128QAM, 256QAM)
Input Symbol Rate	3~7MS/s
MPEG Transport Stream A/V Decoding	
Transport Stream	MPEG-2 ISO/IEC 13818 Transport Stream Specification
Profile Level	MPEG-2MP@ML, MPEG-2MP@HL, MPEG-4 AVC/H 264 HP@L4
Input Rate	15MB/s Max
Video Format	4:3, 16:9
Video Resolution	1080i, 720p, 576p, 576i
Audio Decoding	MPEG/MusiCam Layer I & II
Audio Mode	Single channel/Dual channel/Joint stereo/Stereo
Memory	
Flash Memory	16MB
RAM	256MB
EEPROM	8KB
HDD	320GB
Audio/Video/Data In/Out	
Video	TV-SCART(CVBS,S-Video,RGB) VCR-SCART(CVBS, S-Video) RCA-Type(CVBS), YPbPr(RCA), HDMI/HDCP
Audio	TV-SCART, VCR-SCART, Audio L/R, S/PDIF(Digital Audio Output)
File Format	JPEG(jpeg, jpg, jpr, jifif), MP3(mp3, mp2, mp1)

14. Appendix



Data Port	
USB	USB 2.0 Host (5 V \approx 100mA Max.)
Power Supply	
Input Voltage	90-250V a.c., 50/60Hz
Type	SMPS
Power Consumption	Max. 28W
Protection	Separate internal fuse. The input should be protected against lightning.
Physical Specification	
Size	380mm \times 55mm \times 252mm
Weight (Net)	3.1 Kg
Operating Temperature	0 $^{\circ}$ C to +45 $^{\circ}$ C
Storage Temperature	-10 $^{\circ}$ C to +70 $^{\circ}$ C

14. Appendix



14.5 Glossary

1. Coaxial Cable

A cable designed to conduct RF signals. To connect a two devices cable will usually have one female and one male connector.

2. Dolby Digital

An encoding system that digitally compresses up to 5.1 discrete channels of audio (left front, centre, right front, left surround, right surround) into a single Bitstream. A low frequency effect (LFE) channel is included providing the sound needed for special effects.

3. EPG (Electronic Programme Guide)

An electronic equivalent to a printed television listings magazine; it is an application used with digital set-top boxes and digital television sets to list current and scheduled programs that are or will be available on each channel, including a short summary or commentary for each program. The information supplied in the EPG is sent and updated by the channel broadcaster.

4. Frequency

The property of a signal measured in cycles per second (=Hz).

5. HDD (Hard Disk Drive)

The primary computer storage medium, which is made of one or more aluminum or glass platters, coated with a ferromagnetic material.

6. OSD (On Screen Display)

OSD displays the basic information necessary for the users to configure monitor or TV settings. OSD information may include brightness, contrast, tuning, RGB adjustment, and screen size and position.

7. OTA (Over the Air)

A standard for the transmission of software for equipment, through a broadcast system. Manufacturers reserve the right for deciding the release of the software for their products.

8. PVR (Personal Video Recorder)

Video recorder that can record and playback programmes directly using the embedded hard disk drive(s).

9. RF (Radio Frequency)

Television signals are modulated onto RF signals and are then demodulated by your television's or STB's tuner.

10. RGB (Red – Green – Blue)

A technology for transmitting video signals via a cable. RGB is a system to represent red, green, and blue colours on a TV or monitor display. Red, green, and blue can be combined in various proportions to obtain any colour.

11. SCART

A 21-pin connector standard to connect two pieces of Audio-Visual equipment such as a TV and a VCR. Each device will have a 21-pin female connection; a cable with male connection at both ends is used for connecting the devices.

12. Signal Strength

An on-screen graphic menu that displays how strong the digital signal you are receiving is.

13. Smartcard

A credit card sized card that contains updateable chip memory. It is used for accessing Pay TV (encrypted) channel or services when inserted into an appropriate receiver.

14. Appendix



14. S/PDIF (Sony/Philips Digital Interface format)

A standard format for the transfer of digital audio signals. It allows the transfer of digital audio between two devices without any conversion to and from analogue, which could degrade the signal quality.

15. S-Video (Super-Video)

Sometimes referred to as Y/C video; a technology for transmitting video signals via a cable. It is a video signal transmission in which the luminance (brightness) and the chrominance (colour) signals are transmitted separately to achieve superior picture clarity.

16. Trick-Play

Pause, Fast Forward/Fast Rewind, Slow Motion, Instant Replay, Commercial Skip, Repeat A-B.

17. TSR (Time Shifted Recording)

A function that records the present programme temporarily to support trick-play.

14.6 Service and Support

Information concerning troubleshooting, software upgrade and product support is provided in the following websites and call centers. Should your product require warranty service, please contact HUMAX to obtain the appropriate authorization.

Nederland

Tel:	040-2306250
Opening Hours:	9:00-17:00 u. (ma-vr)
Address:	Copaco-Humax Wekkerstraat 25, 5652AN Eindhoven Postbus 7905, 5605SH Eindhoven
E-mail:	info@myhumax.nl
Website:	http://www.myhumax.nl
Language:	Nederlands/English

Note: For hardware repair, please visit our website.

14. Appendix



14.7. Using the Universal Remote Control

1. Select the mode (TV, PVR, DVD, AUDIO) you want to set by pressing the corresponding button on the remote control. The button will blink once.
2. Keep pressing the button for 3 seconds until the button lights on.
3. Enter the 4-digit code. Every time a number is entered, the button will blink. When the fourth digit is entered, the button will blink twice.
4. If a valid 4-digit code is entered, the product will power off.
5. Press the **OK** button and the mode button will blink three times. The setup is complete.
6. If the product does not power off, repeat the instruction from 3 to 5.

Note:

- When no code is entered for one minute the universal setting mode will switch to normal mode.
- Try several setting codes and select the code that has the most functions.

Remote Control Function List

The keys on the remote control function as in the list below.

Note: Some keys may not function depending on the product.

Key	TV	DVD	AUDIO
	MUTE	MUTE	MUTE
	STANDBY	POWER	POWER
PVR	PVR	-	-
TV	TV	-	-
DVD	DVD	-	-
AUDIO	AUDIO	-	-
1	1	DIGIT 1	1
2	2	DIGIT 2	2
3	3	DIGIT 3	3
4	4	DIGIT 4	4
5	5	DIGIT 5	5
6	6	DIGIT 6	6
7	7	DIGIT 7	7
8	8	DIGIT 8	8
9	9	DIGIT 9	9
0	0	DIGIT 0,11	0
LIST	LIST	-	LIST
MENU	MENU	MENU	MENU




14. Appendix



Key	TV	DVD	AUDIO
▶	PLAY	TEXT EXPAND	PLAY
	PAUSE	TEXT HOLD	PAUSE
■	STOP	PIP INPUT	STOP
●	RECORD	PIP MOVE	RECORD, OPEN CLOSE
◀◀	FAST BACKWARD	PIP OFF	REWIND, SEARCH REVERSE; SCAN -
▶▶	FAST FORWARD	PIP	FAST FORWARD, SEARCH FORWARD; SCAN +
◀◀	PREVIOUS(REPLAY)	TEXT MIX	SKIP -, TRACK -, CHAPTER -
▶▶	NEXT(SKIP)	TEXT OFF, TV	SKIP, TRACK +, CHAPTER +
RED	RED	RED	RED
GREEN	GREEN	GREEN	GREEN
YELLOW	YELLOW	YELLOW	YELLOW
BLUE	BLUE	BLUE	PROGRAMME
MEDIA	MEDIA	-	-
GUIDE	GUIDE	GUIDE	GUIDE
OK	OK	OK	OK
UP	UP	UP	UP
LEFT	LEFT	LEFT	LEFT
RIGHT	RIGHT	RIGHT	RIGHT
DOWN	DOWN	DOWN	DOWN
BACK	BACK	LAST, RECALL; PP; LAST CHANNEL	CLEAR
VOL+	VOL+	VOL+	VOL+
VOL-	VOL-	VOL-	VOL-
i	I	INFO, OSD; DISPLAY	INFO, OSD; DISPLAY
OPT+	OPT+	-	-
P+	P+	P+	P+
P-	P-	P-	P-
TEXT	TEXT	TEXT	PVR MENU
🔊?	AUDIO	-	AUDIO, LANGUAGE

14. Appendix



Key	TV	DVD	AUDIO
SUB	SUB	SUBTITLE; LANGUAGE; CC	SUBTITLE
TV/RADIO	TV/RADIO	TV/DTV ATV/DTV; D/A; DTV/TV; DTV; DIGITAL	HDD, DVD/HDD
SCHEDULE	SCHEDULE	ANALOG TV, ATV	DVD
	ADD BOOKMARK	TEXT SUBPAGE TEXT TIME	-
	BOOKMARK	TEXT INDEX	TITLE
	SLOW	TEXT POSITION TEXT CANCEL; TEXT UPDATE	SLOW; STEP
SOURCE	SOURCE	SOURCE, AV, 55INPUT; TV/AV	SOURCE, TV/DVD, TV/DISK
SLEEP	SLEEP	SLEEP	SLEEP
V-FORMAT	V-FORMAT	TEXT SIZE; TEXT EXPAND; FTB	-
WIDE	WIDE	WIDE, FORMAT, 16:9, ASPECT; ZOOM	ZOOM

14. Appendix



1. TV Code List

Brand	Code	Brand	Code
A.R. Systems	0556, 0037, 0455, 0352, 0374	Amoi	1529
Accent	0037	Amplivision	0370, 0217, 0320
Acer	1339, 1403, 1509	Amstrad	0037, 1037, 0264, 0218, 0433, 0009, 0163, 0171, 0362, 0371, 0412, 0516, 0648, 1820, 1890, 1982
Acoustic Solutions	1149, 1523, 1545, 1667, 1727, 1865, 2055	Anam	0037, 0009
Acura	0009	Anam National	0037, 0650
ADL	1217	Andersson	1149, 1163
Admiral	0264, 0087, 0093, 0163	Anglo	0264, 0009
Advent	0876, 1613	Anitech	0037, 0264, 0009, 0282
Adyson	0216, 0217	Ansonic	0037, 0668, 0370, 0009, 0104, 0163, 0259, 0292, 0374, 0411, 1437
AEG	1163, 1324, 1556, 2096	AOC	0625, 1365, 1588
Agashi	0264, 0216, 0217	Apollo	0473
AGB	0516	Apro	1846
Agef	0087	Arc En Ciel	0109
Aiko	0037, 0361, 0264, 0433, 0009, 0035, 0072, 0191, 0216, 0217, 0371	Arcam	0216, 0217
Aim	0037, 0805	Ardem	0037, 0714
Airis	1531, 1833, 2050	Arena	0037
Aiwa	0701, 0705, 1916	Aristona	0556, 0037
Akai	0556, 0037, 0548, 0714, 0715, 0606, 0361, 0264, 0433, 0729, 1259, 1413, 0648, 0631, 2021, 0602, 2025, 2096, 0516, 0480, 0473, 0371, 0217, 0216, 0208, 0191, 0163, 0072, 0035, 0009, 0745, 1537	ART	1037
Akiba	0037, 0218, 0455, 0282	Arthur Martin	0163
Akito	0037, 0272	ASA	0070, 0087, 0104, 0105, 0346
Akura	0037, 0714, 0668, 1037, 0264, 0218, 0009, 0171, 0282, 0412, 1498, 1556, 1687, 1982	Asberg	0037
Alaron	0216	Asora	0009
Alba	0037, 0714, 0668, 1037, 0487, 0370, 0218, 0036, 0587, 2050, 1997, 1935, 1731, 0551, 0480, 0443, 0418, 0371, 0355, 0247, 0216, 0163, 0009	Asuka	0264, 0218, 0216, 0217, 0282
AlfaView	1206	Atec	1606, 1728
All-Tel	0865, 1269	Atlantic	0037, 0206, 0216, 0259, 0320
Allorgan	0206, 0217	Atori	0009
Allstar	0037	Auchan	0163
Amitech	0655, 1281	Audiosonic	0037, 0714, 0486, 0715, 0264, 0370, 0218, 0009, 0109, 0217, 0374, 0865, 1308, 1800, 2050
		Audioton	0486, 0264, 0370, 0217
		Audiovox	0451
		Aumark	0060
		Autovox	0087, 0206, 0217, 0247, 0349, 0544

14. Appendix



AVC	2044
Avious	1634
Awa	0606, 0036, 0108, 0009, 0011, 0217, 0451, 1376
Axxent	0009
Baier	0876
Baird	0072, 0073, 0109, 0193, 0208, 0217, 0343, 1196
Bang & Olufsen	0087, 0565, 0619, 0620
Barco	0163
Basic Line	0556, 0037, 0668, 1037, 0218, 0455, 0009, 0163, 0217, 0282, 0339, 0374, 1163
Bastide	0217
Bauer	0805, 1615
Baur	0037, 0195, 0361, 0191, 0349, 0512, 0535, 0544, 0554
Bazin	0217
Beaumark	0178
Beko	0037, 0714, 0486, 0715, 0606, 0370, 0418, 0808, 1652, 1800
Belson	0698, 0894, 1191
Belstar	1037
BenQ	1212, 1562, 1574
Bensten	1326, 1890, 1893
Beon	0037, 0418
Berthen	0668
Best	0370
Bestar	0037, 0370, 0374
Bestar-Daewoo	0374
Binatone	0217
Black Diamond	1909, 1037, 0614, 1163
Black Star	0247
Blackway	0218, 0282
Blaupunkt	0195, 0036, 0455, 0170, 0191, 0200, 0327, 0535, 0554
Blue Media	1606, 1728
Blue Sky	0556, 0037, 0714, 0668, 1037, 0715, 0487, 0218, 0455, 0499, 0624, 0282, 1191, 1243, 1314, 1363, 1521, 1652, 1709, 1916

Blue Star	0282
BlueH	1745
Boca	1652
Boman	1324
Bondstec	0247
Boots	0009, 0217, 0272
Bork	1363
Bosch	0320
Boxlight	0736
BPL	0037, 0208, 0282, 0896
Brandt	0625, 0714, 0560, 0109, 0287, 0335
Brimax	1709
Brinkmann	0037, 0668, 0486, 0418, 0519
Brionvega	0037, 0087, 0362
Britannia	0216, 0217
Brother	0264
Bruns	0087
BSR	0163
BTC	0218
Bush	0556, 0037, 0714, 0668, 1037, 0698, 0487, 0361, 0264, 0218, 0036, 0587, 1687, 1682, 1667, 1652, 1645, 1634, 1556, 1731, 1869, 1870, 1871, 1900, 1954, 1982, 2050, 2053, 2055, 2056, 0009, 0208, 0217, 0272, 0282, 0349, 0355, 0371, 0374, 0519, 0614, 0660, 0661, 0778, 1149, 1166, 1243, 1259, 1308
Canton	0218
Capsonic	0264
Carad	0668, 1037, 0610
Carena	0037, 0455
Carrefour	0037, 0036, 0070
Carver	0170
Cascade	0037, 0009
Casio	0037
Cat	1682, 2155
Cathay	0037, 1727
CCE	0037
cello	1770, 1820, 1844, 1845, 1846

14. Appendix



Centrum	1037	Daewoo	0556, 0037, 0634, 1909, 0218, 1902, 1812, 1612, 1598, 1376, 1307, 0880, 0876, 0865, 0778, 0661, 0624, 0499, 0451, 0374, 0217, 0216, 0009
Centurion	0037	Dainichi	0218, 0216
Century	0087, 0247	Daitsu	1267
CGE	0370, 0074, 0163, 0247, 0418	Dansai	0037, 0036, 0009, 0035, 0208, 0216, 0217
Changhong	0821	Dansette	0412
Chimei	2052, 1837	Dantax	0714, 1037, 0486, 0715, 0370, 1652, 1916, 1981
Cimline	0218, 0009	Datsura	0208
Cineral	0451	Davis	0736
Cinex	0648, 1166, 1556	Dawa	0037
Citizen	0060	Daytek	1207, 1374, 1376
City	0009	Dayton	0009, 1207, 1374
Clarivox	0037, 0070, 0418	Daytron	0037, 0009, 0374
Classic	0499	De Graaf	0548, 0044, 0163, 0208
Clatronic	0037, 0714, 0264, 0370, 0218, 0009, 0217, 0247, 0320, 0371, 1324	DEC	1326
Clayton	1037	Decca	0037, 0072, 0217, 0272, 0516, 0621
CMS	0216	Dell	1264, 1403
CMS Hightec	0217	Denko	0264
Concorde	0009	Denon	0145
Condor	0037, 0264, 0370, 0009, 0216, 0247, 0282, 0320, 0411, 0418	Denver	0037, 0587, 1189, 1324, 1634, 1820, 1988, 2050, 2096
Conia	0820, 0894, 1498, 1687	DER	0193
Conrac	0808	Desmet	0037, 0009, 0087, 0320
Contec	0037, 0036, 0009, 0216	DGM	1890
Continental Edison	0487, 0109, 0287	Diamant	0037
Cosmel	0037, 0009	Diamond	0825
Crosley	0074, 0087, 0163, 0247	DiBoss	1474
Crown	0037, 0714, 0668, 1037, 0486, 0715, 0487, 0606, 0712, 0370, 1652, 0672, 0418, 0412, 0339, 0208, 0009	Digatron	0037
Crown Mustang	0672	Digihome	1149, 1667
CS Electronics	0218, 0216, 0247	Digiline	0037, 0668, 0105
CTC	0247	Digimate	0890
CTX	1756	Digital Device	1606
Curtis Mathes	0060, 0093, 0145, 0166, 0451	Digitek	1521, 1709
Cybertron	0218	Digitrex	2056
Cytronix	1298	Digix Media	0880
D-Vision	0556, 0037, 1982		

14. Appendix



Dixi	0037, 0009, 0087, 0217, 0247
DL	0891, 1326
DMTech	1338, 1898, 1964, 1994, 2001
Domeos	0668
Domland	0394
Dream Vision	1704
DTS	0009
Dual	0037, 1037, 1137, 0217, 0259, 0343, 0349, 0352, 0394, 0519, 0544, 0778, 1149, 1202, 1267, 2032
Dual Tec	0217
Dumont	0070, 0072, 0087, 0104, 0217
Durabrand	1437, 1652, 1988
Dux	0037
Dynatech	0217
Dynatron	0037
e-motion	1709
E:max	1324, 1531
Easy Living	1248, 1553, 1783
Ecco	0773
ECE	0037
Edison-Minerva	0487
Eiki	0735
Elba-Sharp	0516
Elbe	0556, 0037, 0610, 0218, 0191, 0217, 0259, 0292, 0362, 0411, 0435, 0516, 0551, 0630
Elcit	0087, 0163, 0247, 0516
Elekta	0264, 0282
Element	1687
Elfunk	1037, 1208
ELG	0037
Elin	0037, 0548, 0361, 0009, 0104, 0349
Elite	0037, 0218, 0320
Elta	0264, 0009
Emco	0247
Emerson	0037, 0714, 0668, 1909, 0486, 0361, 0370, 0070, 0087, 0178, 0247, 0282, 0320, 0371, 0624

Emperor	0282
Envision	1365
Epson	0881, 1290, 0833, 0840
Erae	1371
Erres	0037
ESC	0037, 0217
Etron	0009, 0163
Eurofeel	0264, 0217
Euroman	0037, 0264, 0370, 0216, 0217
Europa	0037
Europhon	0037, 0217, 0516
Evesham	1248, 1606, 1667, 1719, 1728
Evesham Technology	1728
Evolution	1756
Excors	2031
Expert	0163, 0206, 0259
Exquisit	0037, 0247
FairTec	1373
Fenner	0009, 0374
Ferguson	0037, 0625, 0548, 0560, 0195, 1037, 0073, 0109, 0193, 0287, 0335, 0343, 0443, 1471, 1935, 2053
Fidelity	0037, 0361, 0264, 0163, 0171, 0193, 0216, 0371, 0412, 0512, 0544
Filsai	0217
Finlandia	0548, 0361, 0072, 0163, 0208, 0346
Finlux	0556, 0037, 0714, 0715, 1585, 1556, 0808, 0631, 0621, 0516, 0492, 0480, 0473, 0411, 0346, 0217, 0163, 0105, 0104, 0087, 0072, 0070
Firstline	0556, 0037, 0714, 0668, 1037, 0361, 1612, 1371, 1363, 1308, 1191, 0808, 0624, 0544, 0411, 0374, 0349, 0321, 0247, 0217, 0216, 0208, 0072, 0009
Fisher	0361, 0370, 0036, 0045, 0072, 0087, 0104, 0208, 0217, 0349, 0544
Flint	0037, 0610, 0264, 0218, 0455, 0072
Force	1149
Forgestone	0193
Formenti	0037, 0087, 0163, 0216, 0320
Formenti-Phoenix	0216, 0320

14. Appendix



Fortress	0087, 0093	GPM	0218
Fraba	0037, 0370	Gradiente	0037, 0170, 1053
Friac	0037, 0610, 0370, 0009, 0499	Graetz	0714, 0487, 0361, 0163, 0339, 0371, 1163
Frontech	0264, 0009, 0163, 0217, 0247	Gran Prix	0648
Fujimaro	0865	Granada	0037, 0548, 0560, 0036, 0108, 0226, 0072, 0163, 0208, 0217, 0339, 0343, 0356, 0469, 0473, 0516, 0045
Fujitsu	0009, 0072, 0206, 0217, 0259, 0683, 0809, 0853	Grandin	0556, 0037, 0714, 0668, 1037, 0715, 0610, 0218, 0455, 1377, 1375, 1374, 1298, 1206, 1191, 0880, 0865, 0624, 0374, 0320, 0282, 0163, 0009
Fujitsu General	0009, 0206, 0217, 0683	Gronic	0217
Fujitsu Siemens	0808, 1163, 1248, 1298, 1373, 1666	Grundig	0556, 0037, 0195, 0487, 0706, 0036, 0587, 2127, 2053, 1954, 1935, 1916, 1869, 1800, 1667, 1376, 1371, 1308, 1223, 0672, 0630, 0070, 0554, 0535, 0191, 0443
Funai	0714, 0668, 0264, 1394, 1595, 1666, 1817	Grunkel	1163
Galaxi	0037	H & B	0808, 2001
Galaxis	0037, 0370	Haier	0698, 1615, 1748, 1604
Gateway	1755	Halifax	0264, 0216, 0217
GBC	0218, 0009, 0163, 0374	Hallmark	0178
GE	0093, 0178, 0282, 0335, 0451, 0735, 1907	Hampton	0216, 0217
GEC	0037, 0361, 0072, 0163, 0217, 0349, 0516	Hanimex	0218, 1908
Geloso	0009, 0163, 0247, 0374	Hanns.G	1783
General	0109, 0287, 0471	Hannspree	1348, 1351, 1352, 1613, 1776, 1783, 2027
General Technic	0009	Hanseatic	0556, 0037, 0625, 0714, 0634, 0361, 0370, 0808, 0661, 0544, 0519, 0499, 0394, 0377, 0349, 0320, 0292, 0282, 0217, 0087, 0009
Genexxa	0037, 0218, 0009, 0163, 0412	Hantarex	0037, 0009, 0516, 0865, 1338, 1465
Gericom	0808, 0865, 0880, 1206, 1217, 1298, 1606, 1731	Hantor	0037
Go Video	0060	Harsper	0865
Gold	1770, 1833, 2077, 2081	Harwa	0773, 1196, 1269
Goldfunk	0668	Harwood	0037, 0487, 0009, 0412
GoldHand	0216	Hauppauge	0037
GoldStar	0037, 0714, 0715, 0606, 0361, 0001, 0044, 0109, 0163, 0178, 0216, 0217, 0247, 0290, 0377	Havermy	0093
Gooding	0487	HCM	0037, 0264, 0218, 0009, 0217, 0282, 0412, 0418
Goodmans	0556, 0037, 0625, 0714, 0560, 0668, 0634, 1909, 1037, 0487, 0264, 0218, 0036, 2056, 1163, 1259, 2055, 1308, 2053, 1376, 1916, 1645, 1667, 1682, 1900, 1687, 1719, 1720, 1727, 0009, 0035, 0072, 0217, 0290, 0335, 0343, 0371, 0374, 0480, 0499, 0516, 0624, 0630, 0661, 0808, 0880, 1149	Hema	0009, 0217
Gorenje	0370	Hemmermann	0349, 0544

14. Appendix



Hifvox	0109
Higashi	0216
Highline	0037, 0264
Hikona	0218, 1983
Hinari	0037, 0264, 0218, 0036, 0009, 0208, 0355, 0443, 1908
Hisawa	0714, 0610, 0218, 0455, 0282
Hisense	0556, 0508, 0780, 1314, 1363, 1660, 2098
Hit	0087
Hitachi	0037, 0548, 0634, 1037, 1137, 0036, 0108, 0225, 0719, 0737, 0744, 0777, 0797, 0877, 0884, 0044, 1045, 1149, 1194, 1225, 1481, 1484, 1576, 1691, 1772, 1854, 2074, 0109, 0145, 0163, 0178, 0217, 0343, 0349, 0356, 0441, 0469, 0473, 0480, 0481, 0492, 0499, 0516, 0105, 0576, 0578, 0072
Hitachi Fujian	0108
Hitsu	0610, 0218, 0455, 0009
HMV	0087
Hoehner	0714, 0865, 1163, 1556
Home Electronics	0606
Hornlyphon	0037
Hoshai	0218, 0455, 0282
Huanyu	0216, 0374
Hugoson	0890, 1217
Humax	2181, 1501, 4000, 4001, 1295, 1535, 1539, 1821, 1873, 2057,
HYD	1376
Hygashi	0216, 0217
Hyper	0009, 0216, 0217, 0247
Hypersonic	0361
Hypson	0556, 0037, 0714, 0668, 1037, 0486, 0715, 0264, 0455, 0217, 0282, 0621
Hyundai	0778, 0865, 0876, 1281, 1294, 1376, 1468, 1532, 1598, 1606, 1612, 1899
Iberia	0037
ICE	0037, 0264, 0218, 0216, 0217, 0371
ICeS	0218, 0216
iDEAL	1556
Igo	1224

ILSonic	1376, 1513, 1613
Iiyama	0877, 0890, 1217
Imperial	0037, 0370, 0074, 0247, 0349, 0418, 0630, 2089
Indiana	0037
InFocus	0736, 0752, 1164, 1206, 1430, 1516
Ingelen	0714, 0610, 0487, 0163
Ingersol	0009
Inno Hit	0218, 0009, 0072, 0217, 0247, 0282, 0290, 0516, 1163
Innovation	0519
Innowert	0865, 1298
Interbuy	0037, 0264, 0009, 0247
Interfunk	0037, 0361, 0087, 0109, 0163, 0200, 0247, 0327, 0349, 0512
Internal	0556, 1909, 0624
Intervision	0037, 0486, 0487, 0264, 0218, 0455, 0009, 0217, 0247, 0282, 0377, 0394, 0519
Irradio	0037, 0218, 0009, 0247, 0290, 0371, 0724
Isukai	0037, 0218, 0455, 0282
ITC	0217, 0320
ITS	0037, 0264, 0218, 0216, 0282, 0371
ITT	0548, 0610, 0361, 0163, 0193, 0208, 0339, 0346, 0349, 0473, 0480, 0544
ITT Nokia	0548, 0610, 0606, 0361, 0163, 0208, 0339, 0346, 0349, 0473, 0480
ITV	0037, 0264, 0247, 0374
JDV	1982
Jean	0036, 1511, 1513
JEC	0035
JMB	0556, 0634, 0443, 0499
JNC	1702
Jocel	0712
Jouge	1435
Jubilee	0556
JVC	0606, 0218, 0036, 0650, 0653, 0093, 0193, 0371, 0418, 0683, 0731, 1053, 1352, 1653, 1818, 2118

14. Appendix



Kaisui	0037, 0218, 0455, 0009, 0216, 0217, 0282	LaSAT	0486
Kamp	0216	Lava	1474
Kapsch	0361, 0104, 0163, 0206, 0259	Lavis	1037
Karcher	0714, 0610, 0606, 0264, 0370, 0282, 0778, 1556, 1982	Leader	0009
Kathrein	0556, 0880	Lecson	0037
Kawa	0371	Lemair	0411
Kawasho	0216	Lenco	0037, 0587, 0104, 0374, 1634, 1983
KB Aristocrat	0163	Lenoir	0009, 1189
Kendo	0037, 1037, 0610, 0370, 0247, 0362, 0377, 0411, 0519, 0551, 0648, 1149, 1437, 1585	Lentec	1531
Kennedy	0163, 0206, 0435	Lesam	0247
Kennex	1037	Lexsor	1196, 1507
Keymat	1326, 1504, 1771, 1890, 1893	Leyco	0037, 0264, 0072
Kingsley	0216	LG	0556, 0037, 0714, 0715, 0698, 0361, 0370, 1305, 1423, 1637, 1663, 1664, 1721, 1768, 1840, 1842, 1859, 1860, 1191, 1148, 0377, 0290, 0247, 0217, 0216, 0178, 0163, 0009, 0001, 1265, 1325
Kioto	0706	Liesenk & Tter	0037
Kiss	0800	Liesenkotter	0037, 0327
Kiton	0037, 0668	Lifetec	0037, 0714, 0668, 1037, 1137, 0218, 0009, 0374, 0519, 0683
Kneissel	0556, 0037, 0610, 0370, 0259, 0292, 0362, 0374, 0411, 0435, 0499	Lloyd's	0009
Kobra	1467	Local India TV	0009, 0208, 0602, 1413
Kolster	0037, 0218, 0247, 0349	Lodos	1037, 1149
Konig	0037, 0101	Loewe	0037, 0370, 0087, 0292, 0512, 0516, 0633, 0655, 0790, 1836, 1884
Konka	0037, 0714, 0218, 0371, 0418, 0641, 0754, 0894	Logic	2107
Kontakt	0487	Logik	1037, 0001, 0011, 0193, 0773, 0880, 1217, 1471, 1687, 2028, 2029, 2030
Korpel	0037	Logix	0668, 0519
Korting	0370, 0087, 0320	Luker	1982
Kosmos	0037	Luma	1037, 0009, 0163, 0206, 0259, 0362, 0374, 0411
Kotron	0412, 1900	Lumatron	0037, 0264, 0073, 0163, 0206, 0217, 0259
Koyoda	0009	Lux May	0037, 0009
Kreisen	0876, 1474	Luxor	0548, 1037, 0361, 0163, 0208, 0217, 0290, 0346, 0349, 0356, 0473, 0480, 0631, 1163
KTV	0217	LXI	0156
Kuba	0349		
Kyoshu	0412, 0418		
Kyoto	0163, 0216, 0217		
L&S Electronic	0714, 0808, 0865		

14. Appendix



M Electronic	0037, 0714, 0634, 0195, 0361, 1652, 0661, 0512, 0492, 0480, 0411, 0374, 0349, 0346, 0343, 0287, 0247, 0217, 0216, 0163, 0109, 0105, 0104, 0009
Madison	0037
MAG	1498, 1687
Magnadyne	0087, 0163, 0247, 0516, 0544
Magnafon	0073, 0216, 0516
Magnavox	0036, 0011
Magnin	1907
Magnum	0037, 0714, 0715, 0648, 1289
Mandor	0264
Manesth	0037, 0264, 0035, 0217, 0320
Manhattan	0037, 0668, 1037, 0778, 0876, 1267, 1474
Maqma	1467, 1606, 1702, 1789
Marantz	0556, 0037, 0412, 0704, 1398, 1532
Marelli	0087
Mark	0037, 0714, 0715, 0009, 0216, 0217, 0374
Marks and Spencer	1846
Marquant	2056
Mascom	1556, 1871
Master's	0499
Masuda	0218
Matsui	0556, 0037, 0714, 0195, 1037, 0487, 0036, 0455, 0433, 0744, 0880, 0544, 0516, 1666, 1916, 0443, 1935, 0371, 0355, 0349, 0335, 0272, 0217, 0208, 0191, 0072, 0045, 0035, 0011, 0009
Matsushita	0650
Maxent	1755, 0762
Maxim	1166, 1556, 1982
Medialine	1206, 1964
Mediator	0556, 0037
Medion	0556, 0037, 0714, 0668, 1037, 0698, 1137, 0808, 0880, 0512, 0245, 1149, 1166, 1202, 1248, 1437, 1556, 1667, 1900, 2001
Megas	0610
Megatron	0145, 0178

MEI	1037
Memorex	1037, 0009, 0060, 0178
Memphis	0009, 0072
Mercury	0037, 0009
Metronic	0625
Metz	0037, 0668, 0195, 0587, 0087, 0191, 0367, 0388, 0447, 0535, 0554, 0746, 1163, 1533
MGA	0178, 1907
Micromaxx	0037, 0668, 1037, 0630, 0808, 1324, 2001
Microspot	1614
Microstar	0808
Mikomi	1037, 0744, 1149
Minato	0037
Minerva	0195, 0487, 0108, 0070, 0191, 0516, 0535, 0554
Minoka	0037, 0412
Mirai	1666, 1852, 2072
Mirror	1900
Mistral Electronics	0193
Mitsai	1556
Mitsubishi	0556, 0037, 1037, 0036, 0108, 0087, 0093, 0178, 0512, 0535, 0868, 1522
Mivar	0216, 0217, 0290, 0292, 0516, 0609
Mogen	1683, 1820
Monaco	0009
Morgan's	0037
Motorola	0093
MTC	0370, 0060, 0216, 0349, 0512
MTEC	0272
MTlogic	0714, 2050
Multibroadcast	0193
Multitec	0037, 0668, 1037, 0486, 1556
Multitech	0037, 0486, 0264, 0370, 0009, 0216, 0217, 0247
Murphy	0104, 0163, 0216
Musikland	0218, 0247
Mx Onda	1498, 1687

14. Appendix



MyCom	1376	Nordic	0217
Myrica	1666	Nordmende	0037, 0714, 0560, 0195, 0109, 0287, 0343, 1289, 1413, 2129
Myryad	0556	Normerel	0037
NAD	0037, 0361, 0865	Northern Star	1206
Naiko	0037, 0606, 0753, 1982	Novatronic	0037, 0105, 0374
Nakimura	0037, 0374	Novita	1384
Narita	1982	Oceanic	0548, 0361, 0163, 0208, 0473
NAT	0226	Odeon	0264
National	0226	Okano	0037, 0264, 0370, 0009, 0072
NEC	0036, 0009, 0011, 0170, 0217, 0245, 0320, 0374, 0704, 1270, 1704	Olidata	1376
Neckermann	0556, 0037, 0370, 0087, 0191, 0200, 0247, 0320, 0327, 0349, 0411, 0418, 0554	Omega	0264
NEI	0037, 1037, 0371	Onida	1053, 1224
Neon	1267, 1732	Onimax	0714
Neovia	0865, 0876, 1206, 1338, 1371, 1373, 1376, 1384, 1964, 1994	Onn	1709, 2029, 2055, 2112, 2125, 2130, 2133
Nesco	0247	Onwa	0218, 0433, 0371, 0602
Nesx	1732	Onyx	1709, 1770
Netsat	0037	Opera	0037
NetTV	0762	Optimus	0650, 0166
Neufunk	0556, 0037, 0714, 0610, 0218, 0009	Optoma	1263, 1622, 1674
New Tech	0556, 0037, 0009, 0217, 0343	Orbit	0037
New World	0218	Orcom	1504
Nextier	1598	Orion	0556, 0037, 0714, 1037, 2031, 2007, 2005, 2001, 1954, 1916, 1908, 1722, 1196, 0880, 0655, 0544, 0516, 0443, 0412, 0355, 0321, 0320, 0011
NFREN	0800	Online	0037, 0218
Nicam	0544	Ormond	0668, 1037
Nicamagic	0216	Orsowe	0516
Nikkai	0037, 0264, 0218, 0036, 0009, 0035, 0072, 0216, 0217	Osaki	0556, 0037, 0264, 0218, 0072, 0217, 0272, 0355, 0374, 0412
Nikkei	0714	Osio	0037, 0290
Nikko	0178	Oso	0218
Noblisko	0070, 0216	Osume	0037, 0218, 0036, 0072
Nogamatic	0109	Otic	1498, 1687
Nokia	0548, 0610, 0606, 0361, 0163, 0208, 0320, 0339, 0346, 0349, 0374, 0473, 0480, 0492, 0631	Otto Versand	0556, 0037, 0195, 0361, 0036, 0226, 0191, 0109, 0217, 0247, 0320, 0343, 0349, 0093, 0512, 0535, 0544, 0554
Norcent	1365, 1588	Pacific	0556, 0714, 1037, 1137, 0443, 1324

14. Appendix



Packard Bell	1314, 1474
Pael	0216
Palladium	0556, 0037, 0714, 0370, 1137, 0200, 0217, 0247, 0327, 0349, 0191, 0411, 0418, 0519, 0554, 0163, 0630, 0655, 0087
Palsonic	0037, 0698, 0264, 0001, 0217, 0418, 1196, 1269, 1507
Panama	0037, 0264, 0009, 0216, 0217, 0247
Panasonic	0037, 0548, 0361, 0650, 0226, 0163, 0367, 0516, 0853, 1310, 1480, 1636, 1650, 1410, 1510
Panavision	0037, 0411
Pathe Cinema	0163, 0216, 0292, 0320
Pathe Marconi	0109
Pausa	0009
Penney	0060, 0156, 0178, 1907
Perdio	0037, 0072, 0163, 0216, 0282, 0320
Perfekt	0037
Petters	0037
Philco	0037, 0370, 0074, 0087, 0145, 0247, 0418
Philex	0193
Philharmonic	0217
Philips	0556, 0037, 0361, 2015, 1887, 1867, 1756, 1521, 1506, 1495, 1304, 0772, 0639, 0605, 0554, 0423, 0374, 0343, 0200, 0193, 0087, 0009
Phocus	0714, 1289, 1308, 1652, 1800
Phoenix	0037, 0486, 0370, 0072, 0087, 0163, 0216, 0320
Phonola	0556, 0037, 0087, 0193, 0216
Pilot	0706
Pioneer	0037, 0486, 0361, 0370, 0109, 0163, 0166, 0287, 0423, 0512, 0679, 0760, 1260, 1398, 1457, 1717
Pionier	0486, 0370, 1556
Plantron	0037, 0264, 0009
Playsonic	0037, 0714, 0715, 0217, 0339, 1652, 1800
Polaroid	1498, 1523, 1645, 1687, 1720, 1741, 1276
Poppy	0009

Portland	0374, 0624
Powerpoint	0037, 0698, 0487, 0894
Prandoni-Prince	0361, 0247, 0516
Precision	0217
Premier	0891
Prima	0264, 0009, 0412, 1196, 1269, 1507
PrimeView	1606
Prinston	1037, 0715
Prinz	0361, 0072, 0349, 0544
Profex	0361, 0009, 0163
Profi	0009
Profilo	1556
Profitronic	0037
Proline	0037, 0625, 0634, 1037, 0072, 0321, 0411, 0621, 0630, 1376, 1545, 1727, 1981
Proscoc	0156
Prosonic	0037, 0714, 0668, 0370, 0216, 0217, 0371, 0374, 1732, 1787, 1865, 1893, 2031, 2085
Protech	0037, 0668, 1037, 0486, 0264, 0009, 0217, 0247, 0282, 0349, 0418
Proton	0178
ProVision	0556, 0037, 0714, 1324
Proxima	0735, 0737
Pvision	0876, 1521, 2001
Pye	0556, 0037, 0087, 0349, 0374, 0554
Pymi	0009
QONIX	1634
Quadral	0218
Quasar	0009, 0247, 0865
Quelle	0037, 0668, 0195, 1037, 0361, 0554, 0544, 0535, 0512, 0349, 0327, 0247, 0200, 0191, 0109, 0104, 0074, 0070, 0011
Questa	0036
R-Line	0037
Radialva	0218, 0163
Radiola	0556, 0037, 0217
Radiomarelli	0037, 0087, 0247, 0516

14. Appendix



RadioShack	0037, 0178
Radiotone	0037, 0668, 1037, 0264, 0370, 0009, 0412, 0418, 0648
Rank	0070
Rank Arena	0036
RBM	0070
RCA	0625, 0093, 1907
RealITV	1267
Reality	1267
Recor	0037
Rectiligne	0037
Rediffusion	0548, 0361, 0036, 0346
Redstar	0037
Reel Multimedia	1424
Reflex	0037, 0668, 1037
Relisys	0865, 0876, 0877, 0878, 1206, 1207, 1376, 1521, 1585, 1598, 1612, 1645, 1741
Remotec	0037, 0093, 0145, 0171
Reoc	0714
Revox	0037
Rex	0264, 0163, 0206, 0247, 0259, 0411, 0551
RFT	0037, 0264, 0072, 0087
Roadstar	0037, 0714, 0668, 1037, 0715, 0264, 0218, 0009, 0282, 0418, 1189, 1900
Robotron	0087
Rolson	0819, 1371
Rover	0877
Royal Lux	0370, 0335, 0412
Saba	0625, 0548, 0714, 0560, 0361, 0087, 0109, 0163, 0287, 0335, 0343, 0498, 0516, 1588
Sagem	0610, 0455, 0830, 1313, 1596
Saisho	0264, 0009, 0011, 0163, 0217, 0516, 0544
Saivod	0037, 0668, 1037, 0712, 1163, 1556, 1982
Sakai	0163

Salora	0548, 0361, 0163, 0208, 0290, 0349, 0356, 0480, 0516, 0621, 0631, 1166, 1202, 1556
Salsa	0335
Sambers	0516
Sampo	1755, 0762
Samsung	0556, 0037, 0264, 0370, 0587, 0618, 1249, 1312, 1395, 1458, 1584, 1619, 1630, 1632, 1678, 1907, 2051, 2094, 2097, 2103, 1235, 0814, 0812, 0644, 0519, 0290, 0217, 0216, 0208, 0178, 0163, 0072, 0060, 0009
Sandra	0216, 0217
Sansui	0037, 0706, 0655, 0729, 0861, 1371, 1553
Santon	0009
Sanyo	1037, 0370, 0036, 0108, 1907, 1667, 1654, 1649, 1648, 1647, 1208, 0893, 0735, 0704, 0544, 0339, 0292, 0217, 0216, 0208, 0170, 0163, 0104, 0072, 0045, 0011, 0009, 1276
SBR	0556, 0037, 0193
Schaub Lorenz	0548, 0714, 0486, 0606, 0361, 0349, 0374, 1191, 1324, 1371
Schneider	0556, 0037, 0714, 0668, 1037, 0361, 1137, 0218, 1982, 1981, 1474, 0648, 0544, 0519, 0394, 0371, 0352, 0349, 0343, 0259, 0247, 0217, 0163, 0070
Scotch	0178
Scotland	0163
Scott	1189
Sears	0156, 0171, 0178
Seaway	0634
Seelver	1037
SEG	0037, 0668, 1037, 0487, 0264, 0218, 0036, 1437, 1163, 1149, 0624, 0362, 0349, 0247, 0217, 0216, 0009
SEI	0037, 0087, 0163, 0206, 0349, 0516, 0544
Sei-Sinudyne	0037, 0087, 0206, 0516, 0544
Seleco	0163, 0206, 0259, 0346, 0362, 0371, 0411, 0435, 0551
Semp	0156
Sencora	0009
Sentra	0035

14. Appendix



Serino	0610, 0455, 0093, 0216
Sharp	0036, 0653, 1193, 0093, 0193, 0200, 0491, 0516, 0818, 1393, 1586, 1659, 1819, 0787, 1459
Shintoshi	0037
Shivaki	0037, 0443
Siarem	0087, 0163, 0516
Siemens	0037, 0195, 0191, 0200, 0327, 0535, 0554
Siera	0556, 0037
Siesta	0370
Silva	0037, 0361, 0216, 0648
Silva Schneider	0037, 1166, 1556, 1982
Silvano	0587
Silver	0715, 0361, 0036
SilverCrest	1037
Singer	0037, 0433, 0009, 0087, 0247, 0335, 0435
Sinotec	0773
Sinudyne	0037, 0361, 0087, 0163, 0206, 0349, 0516, 0544
Skantic	0356
SKY	0037, 0880, 1376, 1504, 1511, 1513, 1606, 1612, 1613, 1614, 1615, 1745, 1775, 1848
SKY Brazil	0880
Sliding	0800, 0865, 0880, 1324, 1374, 1375, 1377
SLX	0668
Smaragd	0487
Soemtron	0865, 1298
Sogera	0320
Sogo	1376, 2050
Solavox	0037, 0548, 0361, 0072, 0163
Sonawa	0218
Soniko	0037
Sonitron	0370, 0208, 0217, 0339
Sonix	1376, 1732
Sonneclair	0037
Sonoko	0037, 0264, 0009, 0217, 0282

Sonorol	0548, 0361, 0163, 0208, 0282
Sontec	0037, 0370, 0009
Sony	0037, 1505, 0036, 1925, 1825, 1751, 1685, 1651, 1625, 1551, 1317, 1010, 0834, 0810, 0353, 0074, 0011
Sound & Vision	0218, 0374
Soundesign	0178
Soundwave	0037, 1037, 0715, 0320, 0418, 1846
Spectra	0009
Squareview	0171
Ssangyong	0009
Standard	0037, 1037, 0218, 0009, 0217, 0320, 0374, 1709
Starlite	0037, 0264, 0009, 0163
Stenway	0218, 0282
Stern	0264, 0163, 0206, 0259, 0411, 0551
Strato	0037, 0264, 0009, 1787
Strong	1149, 1163
Stylandia	0217
SunBrite	1435
Sungoo	2037
Sunkai	0610, 0487, 0218, 0455, 0321, 0355, 0865
Sunstar	0037, 0264, 0009, 0371
Sunstech	2001
Sunwood	0037
Superla	0216, 0217, 0516
SuperTech	0556, 0037, 0218, 0009, 0216
Supra	0009, 0374
Susumu	0218, 0287, 0335
Sutron	0009
SVA	0587, 0865
Swedx	1606
Swissflex	2062
Swisstec	2062, 2059, 1849, 1848, 1776, 1775, 1745, 1615, 1614, 1613, 1612, 1606, 1513, 1511, 1504, 1376, 0880, 0865
Sydney	0216, 0217
Sylvania	0171, 1394, 1864

14. Appendix



Sysline	0037	Teleavia	0287, 0343
Sytong	0216	Telecor	0037, 0218, 0163, 0217, 0259, 0394
T+A	0447	Telefunken	0037, 0625, 0714, 0560, 0486, 1536, 0896, 0566, 0498, 0471, 0346, 0343, 0335, 0287, 0109, 0101, 0074, 0073, 1626
Tactus	0272	Telefusion	0037
Tandberg	0361, 0109, 0367	Telegazi	0037, 0264, 0218, 0163, 0259
Tandy	0218, 0072, 0093, 0163, 0217, 0247	Telemagic	0735
Targa	1267, 1371	Telemeister	0037, 0320
Tashiko	0036, 0163, 0170, 0216, 0217	Telesonic	0037
Tatung	0037, 0011, 0072, 0217, 0272, 0516, 0621, 1191, 1248, 1324, 1371, 1553, 1556, 1719, 1720, 1756	Telestar	0556, 0037
TCL	0706, 1537	Teletech	0037, 0668, 1037, 0009, 0247
TCM	0714, 0808, 1289, 2001	Teleton	0036, 0206, 0217, 0259, 0349
Teac	0037, 0714, 0668, 0698, 0712, 0264, 0455, 0009, 0170, 0171, 0178, 0349, 0512	Televideon	0163, 0216, 0320
Tec	0037, 0009, 0217, 0247, 0259, 0335, 0471	Televiow	0037
Tech Line	0037, 0668, 1163, 1437	Tempest	0009
Tech Lux	1189	Tennessee	0037
Techica	0218	Tensai	0037, 1037, 0715, 0218, 0009, 0104, 0105, 0217, 0247, 0320, 0371, 0374, 0377
Technema	0320	Tenson	0009, 0320
Technica	0621, 1982	Tevion	0556, 0037, 0714, 0668, 1037, 1137, 2032, 1800, 1787, 1687, 1645, 1556, 1498, 1298, 1289, 1259, 1248, 0808, 0648
Technics	0556, 0650	Texet	0218, 0009, 0216, 0217, 0374
Technika	1849, 1865, 2029, 2032, 2059, 2106	Texla	0780
TechniSat	0556, 0655, 1267	Thes	2031, 2036, 2038
Technisson	0714, 1289, 1652	Thomson	0037, 0625, 0560, 0109, 0287, 0335, 0343, 0349, 0471, 1588
Technosonic	0556, 0625, 0499, 0880, 1324, 1326, 1890, 1893, 1982, 2032	Thorn	0037, 0361, 0036, 0553, 0535, 0512, 0499, 0343, 0335, 0272, 0193, 0109, 0104, 0074, 0073, 0072, 0035
Technotrend	1531, 1702	Thorn-Ferguson	0073, 0193, 0335, 0343, 0499
Techwood	1037, 1163	Time	1702, 1994, 1997
Teckton	1376	Tiny	1269
Tecnimagen	0556	Tiny Digital	0660
Teco	1040	TMK	0178
Tedelex	0009, 0217, 1709	Tobishi	1521
Teiron	0009	Tokai	0037, 0668, 1037, 0009, 0072, 0163, 0217, 0374
Tek	0795		
Teknika	0060		
TELE System	0876		

14. Appendix



Tokaido	1037
Tokyo	0035, 0216
Tomashi	0218, 0282
Topline	0668, 1037
Toshiba	0195, 1037, 0036, 0618, 0650, 0508, 1935, 1656, 1524, 1508, 1289, 1164, 1163, 0832, 0736, 0553, 0241, 0156, 0109, 0070, 0060, 0035, 1265, 1325
Tosumi	1982
Towada	0217, 0349
Toyoda	0009
Trakton	0264
TRANS-continents	0556, 0037, 0668, 1037, 0217, 0621, 0865, 1374, 1377
Transonic	0037, 0587, 0009
Transtec	0216
Trident	0217, 0516
Trio	1498, 1687
Tristar	0264, 0218, 0193
Triumph	0556, 0037, 0346, 0516
Tsoschi	0282
TVTEXT 95	0556
TWF	1871
Uher	0037, 0486, 0370, 0206, 0259, 0320, 0374, 0418, 0480
Ultravox	0037, 0087, 0163, 0216, 0247, 0374
UMC	1513, 1606, 1614, 1745, 1775, 1849, 2059, 2062, 2106
Unic Line	0037, 0455, 0473
United	0037, 0714, 1037, 0715, 0587, 1770, 1916, 1982
Universal	0037
Universum	0037, 0668, 0195, 1037, 0361, 0264, 0370, 0036, 0618, 0411, 0418, 0473, 0480, 0492, 0512, 0535, 0544, 0554, 0631, 0808, 1163, 1437, 0362, 0349, 0346, 0327, 0290, 0247, 0217, 0200, 0170, 0109, 0105, 0104, 0074, 0070, 0011, 0009
Univox	0037, 0087, 0163
V2max	0865
V7 Videoseven	0880, 1217, 1267, 1376, 1666, 1755

Venturer	1545, 1727, 1865
Vestel	0037, 0668, 1037, 0217, 1163, 1585, 1667
Vexa	0037, 0009
Vibrant	0272
Victor	0036
Videocon	0508
Videologic	0218, 0216
Videologique	0218, 0216, 0217
Videosat	0247
VideoSystem	0037
Videotechnic	0216, 0217, 0320, 0374
Videoton	0163, 0356
Vidikron	0735, 1398
Vidtech	0178
Viewpia	0876
Viewsonic	1511, 1513, 1542, 1588, 1627, 1745, 1755, 1330, 1578
Visiola	0216
Vision	0037, 0217, 0320
Vistar	0206
Vistron	1363, 2019
Vivax	1308, 1326
Vivid	1308
Vortec	0037
Voxson	0037, 0087, 0163, 0418
Waltham	0037, 0668, 1037, 0109, 0217, 0356, 0418, 0443
Wards	0060, 0156, 0166, 0178
Watson	0037, 0714, 0668, 1037, 0218, 0009, 0163, 0320, 0394, 0519, 1376, 1437
Watt Radio	0163, 0216, 0349, 0544
Wega	0037, 0036, 0087
Wegavox	0009
Welltech	0714, 1625
Weltblick	0217, 0320
Weltstar	1037
Westinghouse	0890

14. Appendix



Wharfedale	0556, 0037, 0519, 0861, 1324, 1556, 1667, 1983, 1988, 2055, 2134
White Westinghouse	0037, 0216, 0320, 0624
Wilson	0556
Windsor	0668, 1037
Windstar	0282
Windy Sam	0556
World-of-Vision	0865, 0877, 0880, 0890, 1217, 1289, 1298, 1606, 1732
X-View	1191
Xenius	0634, 0661
XLogic	0860
Xomax	1770
Xoro	1196, 1217, 1243, 1507, 1789, 2146
Xrypton	0037
Yakumo	1613
Yalos	1771
Yamaha	0797, 1526, 1576, 0833
Yamishi	0037, 0218, 0455, 0217, 0282
Yokan	0037
Yoko	0037, 0264, 0370, 0218, 0009, 0216, 0217, 0247, 0339
Yorx	0218
Ytaiwai	1531
Zanussi	0206, 0217
Zenith	0624, 1265
Zenor	0339
TV/VCR Combo	
Aiwa	1916
Amstrad	0171
Beko	0486
Black Diamond	1909
Blue Sky	0624, 1916
Daewoo	1909, 0624
Dantax	1916
Emerson	1909, 0624
Ferguson	0625, 0073

Fidelity	0171
Finlux	0104
Firstline	0624
GE	0093, 1907
GoldStar	0037
Goodmans	1909, 0374, 0624, 1916
Grandin	0624
Grundig	0556, 0037, 0195, 0554, 1916
Hanimex	1908
Hinari	0036, 1908
Internal	1909, 0624
Irradio	0724
LG	0178
Magnin	1907
Matsui	1916
MGA	1907
Mitsubishi	0556, 0093
Orion	1908, 1916
Penney	1907
Philips	0556, 0037
Portland	0624
Radiola	0556
RCA	0093, 1907
Saba	0625
Samsung	1907
Sanyo	1907
Schneider	0556, 0037
SEG	0624
Sharp	0093
Siemens	0037
Sony	1505, 1925
Teac	0171
Technics	0556
Telefunken	0074
Thomson	0625
United	1916

14. Appendix



Universum	0105
White Westinghouse	0624
TV/VCR/DVD Combo	
Bush	1954

Ferguson	1935
Grundig	1954
Matsui	1935
Orion	1954

2. DVD Code List

Brand	Code
DVD Player	
3D LAB	0539
4Kus	1158
A-Trend	0714
Acoustic Solutions	0730, 0713, 1242, 2082, 2195
AEG	0770, 0790, 0675, 0788, 1233, 1923
AFK	1152, 1923
Airis	0672, 0826, 1224, 1321, 2256
Aiwa	0533, 1243
Akai	0790, 0788, 0898, 1115, 1233, 1695, 2236
Akira	1620
Akura	0898, 1140, 1233, 1493
Alba	0539, 0695, 0730, 0672, 0713, 0717, 1140, 1530, 1695, 1994, 2256
Alize	1151
Altacom	1224
Amitech	0770, 0122, 0850
Amstrad	0770, 0790, 0713, 1151, 1493
Amuseer	1351
AMW	0872
Ansonic	0831, 0759, 1351, 1493
Apex Digital	0672, 1004, 1254, 1480
Arena	1115
Aristona	0539, 0646, 2241
ASCOMTEC	1923
Asono	1224
Atacom	1224
Audiola	1620, 2335

Audiosonic	1923, 2256
Audix	0713
Autovox	0713
Auvio	0843
Axion	0730
Basic Line	0713, 1994
Baze	0898
BBK	1224
Bellagio	1004
Bellwood	0826
Belson	1493, 1923
Belsonic	1493
Berthen	1643
Binatone	1923
Biostek	1601
Black Diamond	0713
Blu:sens	1233, 1321
Blue Nova International	1321
Blue Sky	0695, 0651, 0790, 0672, 0713, 0843
BlueTinum	1493
Boghe	1004
Boman	0898
Bose	2023
Brainwave	0770, 1115
Brandt	0503, 0551, 0651
Broksonic	0695
Bush	0730, 0831, 0672, 0713, 0717, 0723, 1140, 1351, 1419, 1436, 1530, 1695, 1832, 2256, 2261
Cambridge Audio	0751

14. Appendix



Cat	0789, 1923	Denzel	0665
CCE	0730	Desay	0843
cello	1730, 2112, 2186	Dgtec	0672
Centrum	0675, 0713, 0789, 1227, 1923, 1994	Diamond	0651
CGV	0751, 1115	Difrnce	2235
Chili	1492, 1493	Digihome	0713
Cinea	0841	DigiLogic	0713, 1663
Cinetec	0713, 0872	Digitech	1832
CJ Digital	1643, 2173	Digitek	0122
Classic	0730, 1730	Digitrex	2261
Clatronic	0672, 0675, 0788, 1233, 1923	Digix Media	0826
Clayton	0713	DiK	0831
CMX	1643	Dinamic	0788
Coby	0730, 1351	Disney	0831
Codex	1233	DiViDo	0705
Commax	1321, 1492	DK Digital	0831, 1254
Compacks	0826, 2235	Dragon	0831
Contel	0788	DreamX	1151
Continental Edison	0831, 0872	DSE	1730
Crown	0770, 0713, 1115	Dual	0730, 0831, 0651, 0790, 0665, 0713, 1436, 1530
Cybercom	0831	Durabrand	0831, 0675, 0713, 1420, 1530, 1663
CyberHome	0714, 0816	E:max	0330, 1233, 1321, 1643, 1670
Cytron	0651, 0705, 1347	eBench	1152
D-Vision	1115	ECC	0730
Daenyx	0872	Eclipse	0723, 0751
Daewoo	0770, 0213, 0705, 0714, 0832, 0872, 1436, 1441, 1663	Elfunk	0713, 0850
Dalton	1036	Elin	0770
Dansai	0770, 1115, 1695	Ellion	0122, 0850
Dantax	0539, 0790, 0713, 0723, 1358	Elta	0770, 0672, 0788, 0850, 1115, 1151, 1233, 1670, 2173
Daytek	0872	Eltax	1233, 1321, 1620
Dayton	0872, 1158	Emerson	0591, 0705
DCE	0831	Enterprise	0591
Decca	0770, 1115	EuroLine	0675, 0788, 1115, 1233, 1351, 1444, 1643
Denon	0490, 0634, 1634	F&U	2172
Denver	0672, 0788, 0898, 1321, 1420, 1493, 1601, 1923, 2256		

14. Appendix



Fenner	0651
Ferguson	0695, 0651, 0713, 0898, 1695, 1730
Finlux	0741, 0591, 0770, 0672, 0751
Fintec	1530
Firstline	0713, 0843, 0869, 1530
Fisher	0670
Funai	0695, 0675
Gateway	1158
GE	0717
Global Link	1224
Global Solutions	0768
Global Sphere	1152
Go Video	0869
Gold	2112
GoldStar	0741, 0591
Goodmans	0730, 0651, 0790, 0713, 0723, 1004, 1140, 1152, 1254, 1530, 1730, 1923, 2261
GoWell	1643
GPX	0741
Graetz	0665
Gran Prix	0831, 0898
Grandin	0713, 1233, 1254, 2173
Greenhill	0717
Grundig	0539, 0551, 0695, 0651, 0790, 0670, 0705, 0713, 0775, 1004, 1036, 1436, 1643, 1695, 1730, 1832
Grunkel	0770, 0831, 0790, 1493
GVG	0770
H & B	0122, 0713, 0841, 0850, 1233, 2173
Hanseatic	0741, 0790
Harman/Kardon	0702, 1229, 1492
Harwa	2235
HCM	0788
HDT	0705
HE	0730, 1923
Henss	0713
Hikona	1383

HiMAX	0843
Hitachi	0573, 0664, 0713, 1994
Hiteker	0672, 1923
Hoeher	0831, 0651, 0713, 0826, 1004, 1224, 1530
Home Electronics	0770, 0730
Home Tech Industries	1224, 1643, 1923
HotMedia	1152
Humax	0646, 2338
HYD	1233
Hyundai	0850
Ingelen	0788
Inno Hit	0713
International	1663
Irradio	0869, 1115, 1224, 1233
ISP	0695
it's	0717
Jamo	1036
Jaton	0665
JDB	0730
JGC	1530
JMB	0695
JVC	0623, 0539, 0503, 1164, 1597, 1901
Kansas Technologies	1233, 1530
Kazuki	1493
Kendo	0831, 0672, 0713
Kennex	0770, 0713, 0898
Kenwood	0490, 0534
KeyPlug	1643
Kiiro	0770
King Vision	1493, 1643
Kiss	0665, 0841
KXD	0857, 1321, 1492, 1923
Lawson	0768
Leiker	0872
Lenco	0770, 0651, 0713, 1383
Lexia	0768

14. Appendix



LG	0741, 0591, 0790, 0869, 1544, 1906, 2002	MICO	0723, 0751, 1254
Lifetec	0831, 0651, 1347	Micromaxx	0695, 1695
Limit	0768	Micromedia	0539, 0503
LiteOn	1158, 1416, 1644, 1738	Micromega	0539
LM	1643	Microsoft	0522, 1708, 2083
Lodos	0713	Microstar	0831
Loewe	0539, 0741	Minax	0713
Logic	2304	Minoka	0770, 1115
Logik	0713	Mitsubishi	0713
Logix	0705	MixSonic	1130
Lumatron	0741, 0695, 0705, 0713, 1115, 1321, 1832, 2252	Mizuda	0770
Lunatron	0741	Monyka	0665
Luxman	0573	MPX	0843
Luxor	0713, 0717, 1004, 1695, 1730	MTlogic	2256
Magnat	1923	Mustek	0730, 1601, 1730
Magnavox	0539, 0503, 0646, 0675, 0713, 1140	Muvid	1493, 1643, 2173
Magnex	0723	Mx Onda	0651, 0751, 1254
Magnum	1436	Myryad	1254
Majestic	1620, 2335	Mystral	0831
Manhattan	0705, 0713	NAD	0741
Manta	1493	Naiko	0770, 1004
Marantz	0539	Neom	1493, 1643
Mark	0713	Neon	0122
Marquant	0770, 2261	Neufunk	0665
Matsui	0695, 0651, 0672, 0713, 1004, 1695, 1730	Nevir	0770, 0831, 0672
Maxim	0713, 0872, 1242	Nexius	0790
MBO	0730, 1730	Next Base	1667
MDS	0713	NFREN	0826
Mecotek	0770	Nikkai	1923
Mediencom	0751	Nikkei	1254
Medion	0741, 0630, 0831, 0651, 1347, 1644	Norcent	1923
MEI	0790	Nordmende	0831
Memorex	0831	Nortek	2173
Metz	0571, 0525, 0713, 1994	Oasis-Media	1601
		Olidata	0672
		Onkyo	0503, 0627, 1769

14. Appendix



Onn	2316
Onyx	2112
Oopla	1158
Opera	2252
Optim	0843
Optimus	0525
Orbit	0872, 1643
Orion	0695, 0713, 1233, 1419, 1695
Oritron	0651
Ormond	0713
Pacific	0831, 0768, 0790, 0713, 0759
Packard Bell	0831, 1321, 1648
Palladium	0695, 0713, 1906
Panasonic	0490, 1579, 1641, 1834, 1905, 1908
Panda	0789, 1492
peeKTon	0898, 1224
Philips	0539, 0503, 0646, 0675, 1158, 1340, 1354, 1506, 1755, 1813, 1846, 2049, 2056, 2084, 2093, 2225, 2205
Pioneer	0571, 0525, 0142, 0631, 1460, 1531, 1571, 1900, 1965, 2279
PJ	1923
Play It	1643
Plu2	0850
Polaroid	1480
Powerpoint	0872
Prinz	0831
Prism	0831, 0705
ProCaster	1004, 2123
Proline	0651, 0672, 1004, 1358, 1738, 2082
Proscan	0522
Proson	0713
Prosonic	1441, 2195
ProVision	0730, 1321, 1493, 1923
Pye	0539, 0646
QONIX	0790
Quartek	1648

Radionette	0741, 0869, 1906
Radiotone	0713
Raite	0665
RCA	0522, 1759
REC	0490
Redstar	0770, 0759, 0788, 0898, 1394, 1923
Relisys	1347
Reoc	0768, 0875
Revoy	0841
Richmond	1233
Roadstar	0730, 0672, 0713, 0898, 1227, 1832
Ronin	0872
Rotel	0623
Rowa	0717
Rownsonic	0789
Saba	0551, 0651, 2173
Saivod	0831, 0759
Salora	0741
Sampo	1321
Samsung	0490, 0573, 0199, 0298, 0744, 1075, 1635, 1748, 1932, 2107, 2113, 2269, 0820
Sansui	0695, 0122, 0751
Sanyo	0670, 0713
Scan	0705, 0850
ScanMagic	0730, 1730
ScanSonic	1695
Schaub Lorenz	0770, 0788, 1115, 1151, 1643
Schneider	0539, 0831, 0646, 0651, 0790, 0705, 0713, 0788, 0869, 1227, 1358, 2241
Schoentech	0713
Scientific Labs	0768
Scott	0651, 0672, 1036, 1233, 1394, 1923
Seeltech	1224, 1643
SEG	0665, 0713, 0872, 1530, 1994, 2252
Shanghai	0672
Sharp	0630, 0675, 0713, 0869, 1419

14. Appendix



Sherwood	0741, 0717	Swisstec	2187, 2263
Shinco	0717	Sylvania	0675, 2194
Siemssen	1382	Symphonic	0675
Sigmatek	1224, 2123	Synn	0768
Siltex	1224	Syscom	0826
Silva	0788, 0898	Sytech	1601, 2123
Silva Schneider	0741, 0831, 0869, 0898	Tamashi	1394
SilverCrest	0126, 0131, 1152	Tandberg	0713, 1695, 1994
Sinudyne	1254	Tangent	1321
Sistemas	0672	Targa	1227, 1644, 1906
Skantic	0539, 0713	Tatung	0770, 1695
SKY	0122	Tchibo	0741
Skymaster	0730, 0768	TCM	0741, 0790
Skyworth	0898	Teac	0741, 0768, 0705, 0717, 0759, 1227
Sliding	1115	Tec	0898
SM Electronic	0730, 0768, 1152	Technica	1695
Smart	0705, 0713	Technics	0490, 1905
Sogo	1493, 2172, 2256	Technika	0770, 0831, 1115, 1530, 1695, 2187, 2195, 2263, 2302
Sontech	1444	Technisson	1115
Sony	0533, 0864, 1033, 1070, 1516, 1536, 1633, 1824, 1903, 1981, 2020, 2043, 2132, 2138	Technosonic	1115
Sound Color	1233	Techwood	0713, 1530, 1994
Soundmaster	0768	Telefunken	0551
Soundwave	0713, 1530	Teletech	0768, 0713
Standard	0831, 0768, 0651, 0788, 0898	Tensai	0770, 0651
Star Clusters	1152, 1227	Tevion	0651, 0898, 1036, 1227, 1382, 1444, 1730, 1923, 2252
Starmedia	1224	Textorm	1493
Stein	1601	Theta Digital	0571
Strato	1152, 1382	Thomson	0551, 0522, 1254, 1667, 1759
Strong	0713	Time	0122
Sunkai	0770, 0850	Tokai	0790, 0665, 0788, 0898, 1233
Sunstech	0831, 1601, 1620	Tom-Tec	0789, 1601
Sunwood	0788, 0898	Top Suxess	1224
Supervision	0768, 1152	Toshiba	0503, 0695, 1459, 1510, 1637, 1639, 1769, 2006
Supratech	2172, 2238	TRANS-continents	0831, 0826, 0872, 1233, 1321
SVA	0672		

14. Appendix



Tredex	0843
Trevi	0831
TSM	1224
TVE	0713
Umax	1151
UMC	2187, 2263, 2302
United	0695, 0730, 0675, 0713, 0788, 0826, 1115, 1152, 1233, 1351, 1444, 1643, 1832, 2112
Universum	0741, 0591, 0790, 0713, 0869, 1227, 1530
Vecatech	1493
Venturer	0790, 1769, 2082, 2195
Vestel	0713, 1530, 1994
Vieta	0705
Voxson	0730, 0831
Waitec	0730, 1151, 1224, 1233
Walkvision	0717
Waltham	0713, 1530
Welkin	0831
Wellington	0713
Weltstar	0713
Wharfedale	0790, 0713, 0751, 1115, 1383, 1832
Wilson	0831, 1233
Windsor	0713
Windy Sam	0573
Wintel	1130
Woxter	1151, 1224
Xbox	0522, 1708, 2083
Xenius	0790
Xomax	2112
Xoro	1183, 2341
Yakumo	1004
Yamada	0872, 1004, 1151, 1158, 1416, 1492, 1493
Yamaha	0490, 0539, 0646, 0817
Yamakawa	0665, 0872, 2252
Yukai	0730, 1730

Zenith	0503, 0591
TV/DVD Combo	
Acoustic Solutions	2082, 2195
Airis	2256
Akai	2236
Alba	2256
Audiosonic	2256
Bush	0713, 2256, 2261
cello	2112, 2186
Dantax	1358
Denver	1420, 2256
Digitrex	2261
Gold	2112
Hikona	1383
Logic	2304
Marquant	2261
MTlogic	2256
Onn	2316
Onyx	2112
Philips	2225
Proline	2082
Prosonic	2195
Sliding	1115
Sogo	2256
Swisstec	2263
Technika	2195, 2302
UMC	2302
Venturer	2082, 2195
TV/VCR/DVD Combo	
Ferguson	0695
Matsui	0695

14. Appendix



3. Audio & AUX Code List

Brand	Code
Audio Amplifier	
Acoustic Solutions	1446, 1470, 1501, 1601
Cambridge Audio	1730
Curtis Mathes	0300
Denon	0272
Durabrand	1561, 1568
Goodmans	1590
Hitachi	1561
JBL	1177
Logitech	1408
Magnat	1177
Magnum	1601
Mustek	1590
Optimus	0300, 0823
Pacific	1601
Pioneer	0300, 0823
RCA	0300
Sven	1568
Tevion	1601
Trice	1568
upXus	1446
Vieta	1177
Yamaha	0354, 0848
Audio Accessory	
Apple	1115
Sony	0159
Yamaha	2021, 2116
Audio Receiver	
Acoustic Solutions	1546
AEG	1389, 1390
AFK	1389
Aiwa	0121, 1405
Akai	0115, 0609, 1390, 1546
Alba	1546, 1554

All-Tel	1390
Amstrad	0744, 1390
Anam	0609
Arcam	1212
ASCOMTEC	1389
Audiolab	1189
Audiosonic	1389
Audiotronic	1189
Bang & Olufsen	0799
Basic Line	1554
Belson	1389
Binatone	1389
Blue Sky	1390, 1546
Bose	1229, 1629
Bush	0797
Cambridge Audio	1455, 1647
Cat	1389
CCE	1352
Centrum	1220, 1389
Clatronic	0797, 1389
Cosmotron	0797
Daewoo	1436
Dantax	0463, 1390
Denon	1360, 0771, 1104, 1434, 2857, 2861
Denver	1389
Digeo	2857, 2861
DiK	0797
Dual	1220, 1390
eBench	0744, 0797
Elta	0744, 0797, 1390
EuroLine	1625
Fine Arts	1189
Firstline	0797
Garrard	0286, 0463

14. Appendix



Genexxa	0186
Global Sphere	1625
Goodmans	0609, 0744, 0797, 1389, 1390
Grundig	1189, 0286, 0797, 1089, 1546
Grunkel	0744, 1390
Hanseatic	1390
Harman/Kardon	1189, 1304, 0110, 0208, 1306, 1310
Harwood	0744
HCM	1390
HE	1389
Hitachi	1554
Hitech	0744
Hiteker	1389
Home Tech Industries	1389
Hyundai	1546
Inkel	0502
Intersound	0744
JBL	1304, 1306
JVC	0074, 0464, 1374
Kenwood	1027, 1313, 1569, 0186
Kioto	0797

Kompernass	0797
KXD	1389
LG	1293, 1524, 2197
Lifetec	0797
LXI	0744
Magnat	1389
Magnavox	1189, 1089
Marantz	1189, 1269, 0891, 1089, 1289
Matsui	0744, 0797
MBO	1352
Medion	0797, 1546
MEI	1390
Metz	1554
Micromega	1189
Microstar	0797

MTlogic	1546
Musicmagic	1089
Mustek	1352
Mx Onda	0744, 0797
Myryad	1189
NAD	0320, 0609
Nexius	1390
Nikkai	1389
Nikkei	0744
Norcent	1389
NTDE Geniesom	0744
Onkyo	0135, 1320, 1805
Optimus	1023, 0186, 0744
Orient Power	0744
Orion	0463
Palladium	0797, 1220, 1293, 1390, 1524
Panasonic	1763, 1518, 1308, 1309, 1316, 1765, 1766, 1779, 2967
Paramount Pictures	1220
PCCW	2967
Philips	1189, 1269, 0891, 1089, 1266, 1289, 1654, 1673, 1831
Phonotrend	0502
Pioneer	1284, 1023, 0186, 1123, 1459, 1623
PJ	1389
Polk Audio	1289
Prima Electronic	0797
Proline	0797, 1390
ProVision	1389
QONIX	1390, 1546
Radionette	1293, 1634
Recco	0797
Redstar	1389
Revox	0140, 0186, 1089
Roadstar	0797
Rotel	0793
Samsung	0286, 1295, 1868, 2137, 1500
Sansui	0609, 1089, 1625

14. Appendix



Sanyo	0744
Schneider	0110, 0744, 1220, 1390
Scott	1389
SEG	1554
Sharp	0186, 0653, 1386, 1634
Sherwood	0502, 0653
Siemens	0609
Silva Schneider	0797, 1390, 1524
SilverCrest	1546
Sony	1158, 1058, 1258, 1658, 1758, 1112, 1358, 1441, 1454, 1622, 1759, 1822, 1858, 2172
Soundwave	0609
Stereophonics	1023
Sumida	0744
Sunfire	1313
T+A	1270, 1686
TAG McLaren	1189
Tandberg	1554
Targa	1293
TCM	0797
Teac	0463, 0609
Technics	1763, 1518, 1308, 1309, 0208, 1765
Techwood	1554
Tedalex	1625
Tevion	1389
Thorens	1189
Thorn	0744
Tokai	1390
Toshiba	1572
United	1390, 1625
Universum	0286, 0609, 0744, 0797, 1220, 1390, 1436, 1609
Venturer	0797, 1390
Vestel	1554
Victor	0074
Waitec	1352

Watson	0797
Wellfund	0744
Welltech	0797
Wharfedale	1390
Xenius	1390
Yamaha	0176, 0082, 0186, 0376, 0712, 1176, 1276, 1331, 1376, 1776, 1815, 1949
Yukai	1352
Zenith	0744

14. Appendix



14.8 OPEN SOURCE SOFTWARE NOTICE

HUMAX products use certain open operating system software distributed pursuant to GNU GENERAL PUBLIC LICENSE Version 2 and GNU LESSER GENERAL LICENSE Version 2.1 each as defined and published by the Free Software Foundation, Inc.

The following GPL and LGPL software source codes used in this product can be provided. Please contact us at gnu@humaxdigital.com.

GPL Software

linux
busybox
e2fsprogs
tinyftp

LGPL Software

uClibc

The GNU General Public License (GPL)

Version 2, June 1991

Copyright (C) 1989, 1991 Free Software Foundation, Inc.
51 Franklin Street, Fifth Floor, Boston, MA 02110-1301, USA

Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed.

Preamble

The licenses for most software are designed to take away your freedom to share and change it. By contrast, the GNU General Public License is intended to guarantee your freedom to share and change free software—to make sure the software is free for all its users. This General Public License applies to most of the Free Software Foundation's software and to any other program whose authors commit to using it. (Some other Free Software Foundation software is covered by the GNU Lesser General Public License instead.) You can apply it to your programs, too.

When we speak of free software, we are referring to freedom, not price. Our General Public Licenses are designed to make sure that you have the freedom to distribute copies of free software (and charge for this service if you wish), that you receive source code or can get it if you want it, that you can change the software or use pieces of it in new free programs; and that you know you can do these things. To protect your rights, we need to make restrictions that forbid anyone to deny you these rights or to ask you to surrender the rights. These restrictions translate to certain responsibilities for you if you distribute copies of the software, or if you modify it.

For example, if you distribute copies of such a program, whether gratis or for a fee, you must give the recipients all the rights that you have. You must make sure that they, too, receive or can get the source code. And you must show them these terms so they know their rights.

We protect your rights with two steps: (1) copyright the software, and (2) offer you this license which gives you legal permission to copy, distribute and/or modify the software.

Also, for each author's protection and ours, we want to make certain that everyone understands that there is no warranty for this free software. If the software is modified by someone else and passed on, we want its recipients to know that what they have is not the original, so that any problems introduced by others will not reflect on the original authors' reputations.

Finally, any free program is threatened constantly by software patents. We wish to avoid the danger that redistributors of a free program will individually obtain patent licenses, in effect making the program proprietary. To prevent this, we have made it clear that any patent must be licensed for everyone's free use or not licensed at all.

The precise terms and conditions for copying, distribution and modification follow.

TERMS AND CONDITIONS FOR COPYING, DISTRIBUTION AND MODIFICATION

0. This License applies to any program or other work which contains a notice placed by the copyright holder saying it may be distributed under the terms of this General Public License. The "Program", below, refers to any such program or work, and a "work based on the Program" means either the Program or any derivative work under copyright law: that is to say, a work containing the Program or a portion of it, either verbatim or with modifications and/or translated into another language. (Hereinafter, translation is

GB100

User's Manual



14. Appendix

included without limitation in the term "modification"). Each licensee is addressed as "you".

Activities other than copying, distribution and modification are not covered by this License; they are outside its scope. The act of running the Program is not restricted, and the output from the Program is covered only if its contents constitute a work based on the Program (independent of having been made by running the Program). Whether that is true depends on what the Program does.

1. You may copy and distribute verbatim copies of the Program's source code as you receive it, in any medium, provided that you conspicuously and appropriately publish on each copy an appropriate copyright notice and disclaimer of warranty; keep intact all the notices that refer to this License and to the absence of any warranty; and give any other recipients of the Program a copy of this License along with the Program.

You may charge a fee for the physical act of transferring a copy, and you may at your option offer warranty protection in exchange for a fee.

2. You may modify your copy or copies of the Program or any portion of it, thus forming a work based on the Program, and copy and distribute such modifications or work under the terms of Section 1 above, provided that you also meet all of these conditions:
 - a) You must cause the modified files to carry prominent notices stating that you changed the files and the date of any change.
 - b) You must cause any work that you distribute or publish, that in whole or in part contains or is derived from the Program or any part thereof, to be licensed as a whole at no charge to all third parties under the terms of this License.
 - c) If the modified program normally reads commands interactively when run, you must cause it, when started running for such interactive use in the most ordinary way, to print or display an announcement including an appropriate copyright notice and a notice that there is no warranty (or else, saying that you provide a warranty) and that users may redistribute the program under these conditions, and telling the user how to view a copy of this License. (Exception: if the Program itself is interactive but does not normally print such an announcement, your work based on the Program is not required to print an announcement.)

These requirements apply to the modified work as a whole. If identifiable sections of that work are not derived from the Program, and can be reasonably considered independent and separate works in themselves, then this License, and its terms, do not apply to those sections when you distribute them as separate works. But when you distribute the same sections as part of a whole which is a work based on the Program, the distribution of the whole must be on the terms of this License, whose permissions for other licensees extend to the entire whole, and thus to each and every part regardless of who wrote it.

Thus, it is not the intent of this section to claim rights or contest your rights to work written entirely by you; rather, the intent is to exercise the right to control the distribution of derivative or collective works based on the Program.

In addition, mere aggregation of another work not based on the Program with the Program (or with a work based on the Program) on a volume of a storage or distribution medium does not bring the other work under the scope of this License.

3. You may copy and distribute the Program (or a work based on it, under Section 2) in object code or executable form under the terms of Sections 1 and 2 above provided that you also do one of the following:
 - a) Accompany it with the complete corresponding machine-readable source code, which must be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,
 - b) Accompany it with a written offer, valid for at least three years, to give any third party, for a charge no more than your cost of physically performing source distribution, a complete machine-readable copy of the corresponding source code, to be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,
 - c) Accompany it with the information you received as to the offer to distribute corresponding source code. (This alternative is allowed only for noncommercial distribution and only if you received the program in object code or executable form with such an offer, in accord with Subsection b above.)

The source code for a work means the preferred form of the work for making modifications to it. For an executable work, complete source code means all the source code for all modules it contains, plus any associated interface definition files, plus the scripts used to control compilation and installation of the executable. However, as a special exception, the source code distributed need not include anything that is normally distributed (in either source or binary form) with the major components (compiler, kernel, and so on) of the operating system on which the executable runs, unless that component itself accompanies the executable.

If distribution of executable or object code is made by offering access to copy from a designated place, then offering equivalent access to copy the source code from the same place counts as distribution of the source code, even though third parties are not compelled to copy the source along with the object code.

4. You may not copy, modify, sublicense, or distribute the Program except as expressly provided under this License. Any attempt otherwise to copy, modify, sublicense or distribute the Program is void, and will automatically terminate your rights under this License. However, parties who have received copies, or rights, from you under this License will not have their licenses terminated so

14. Appendix



5. You are not required to accept this License, since you have not signed it. However, nothing else grants you permission to modify or distribute the Program or its derivative works. These actions are prohibited by law if you do not accept this License. Therefore, by modifying or distributing the Program (or any work based on the Program), you indicate your acceptance of this License to do so, and all its terms and conditions for copying, distributing or modifying the Program or works based on it.
6. Each time you redistribute the Program (or any work based on the Program), the recipient automatically receives a license from the original licensor to copy, distribute or modify the Program subject to these terms and conditions. You may not impose any further restrictions on the recipients' exercise of the rights granted herein. You are not responsible for enforcing compliance by third parties to this License.
7. If, as a consequence of a court judgment or allegation of patent infringement or for any other reason (not limited to patent issues), conditions are imposed on you (whether by court order, agreement or otherwise) that contradict the conditions of this License, they do not excuse you from the conditions of this License. If you cannot distribute so as to satisfy simultaneously your obligations under this License and any other pertinent obligations, then as a consequence you may not distribute the Program at all. For example, if a patent license would not permit royalty-free redistribution of the Program by all those who receive copies directly or indirectly through you, then the only way you could satisfy both it and this License would be to refrain entirely from distribution of the Program.

If any portion of this section is held invalid or unenforceable under any particular circumstance, the balance of the section is intended to apply and the section as a whole is intended to apply in other circumstances.

It is not the purpose of this section to induce you to infringe any patents or other property right claims or to contest validity of any such claims; this section has the sole purpose of protecting the integrity of the free software distribution system, which is implemented by public license practices. Many people have made generous contributions to the wide range of software distributed through that system in reliance on consistent application of that system; it is up to the author/donor to decide if he or she is willing to distribute software through any other system and a licensee cannot impose that choice.

This section is intended to make thoroughly clear what is believed to be a consequence of the rest of this License.

8. If the distribution and/or use of the Program is restricted in certain countries either by patents or by copyrighted interfaces, the original copyright holder who places the Program under this License may add an explicit geographical distribution limitation excluding those countries, so that distribution is permitted only in or among countries not thus excluded. In such case, this License incorporates the limitation as if written in the body of this License.
9. The Free Software Foundation may publish revised and/or new versions of the General Public License from time to time. Such new versions will be similar in spirit to the present version, but may differ in detail to address new problems or concerns. Each version is given a distinguishing version number. If the Program specifies a version number of this License which applies to it and "any later version", you have the option of following the terms and conditions either of that version or of any later version published by the Free Software Foundation. If the Program does not specify a version number of this License, you may choose any version ever published by the Free Software Foundation.
10. If you wish to incorporate parts of the Program into other free programs whose distribution conditions are different, write to the author to ask for permission. For software which is copyrighted by the Free Software Foundation, write to the Free Software Foundation; we sometimes make exceptions for this. Our decision will be guided by the two goals of preserving the free status of all derivatives of our free software and of promoting the sharing and reuse of software generally.

NO WARRANTY

11. BECAUSE THE PROGRAM IS LICENSED FREE OF CHARGE, THERE IS NO WARRANTY FOR THE PROGRAM, TO THE EXTENT PERMITTED BY APPLICABLE LAW. EXCEPT WHEN OTHERWISE STATED IN WRITING THE COPYRIGHT HOLDERS AND/OR OTHER PARTIES PROVIDE THE PROGRAM "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE PROGRAM IS WITH YOU. SHOULD THE PROGRAM PROVE DEFECTIVE, YOU ASSUME THE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION.
12. IN NO EVENT UNLESS REQUIRED BY APPLICABLE LAW OR AGREED TO IN WRITING WILL ANY COPYRIGHT HOLDER, OR ANY OTHER PARTY WHO MAY MODIFY AND/OR REDISTRIBUTE THE PROGRAM AS PERMITTED ABOVE, BE LIABLE TO YOU FOR DAMAGES, INCLUDING ANY GENERAL, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE PROGRAM (INCLUDING BUT NOT LIMITED TO LOSS OF DATA OR DATA BEING RENDERED INACCURATE OR LOSSES SUSTAINED BY YOU OR THIRD PARTIES OR A FAILURE OF THE PROGRAM TO OPERATE WITH ANY OTHER PROGRAMS), EVEN IF SUCH HOLDER OR OTHER PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

14. Appendix



END OF TERMS AND CONDITIONS

How to Apply These Terms to Your New Programs

If you develop a new program, and you want it to be of the greatest possible use to the public, the best way to achieve this is to make it free software which everyone can redistribute and change under these terms.

To do so, attach the following notices to the program. It is safest to attach them to the start of each source file to most effectively convey the exclusion of warranty; and each file should have at least the “copyright” line and a pointer to where the full notice is found.

One line to give the program's name and a brief idea of what it does.
Copyright (C) yyyy name of author

This program is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.

This program is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.

You should have received a copy of the GNU General Public License along with this program; if not, write to the Free Software Foundation, Inc., 51 Franklin Street, Fifth Floor, Boston, MA 02110-1301, USA.

Also add information on how to contact you by electronic and paper mail.

If the program is interactive, make it output a short notice like this when it starts in an interactive mode:

```
Gnomovision version 69, Copyright (C) year name of author Gnomovision comes with ABSOLUTELY NO WARRANTY; for details type `show w'. This is free software, and you are welcome to redistribute it under certain conditions; type `show c' for details.
```

The hypothetical commands `show w' and `show c' should show the appropriate parts of the General Public License. Of course, the commands you use may be called something other than `show w' and `show c'; they could even be mouse-clicks or menu items--whatever suits your program.

You should also get your employer (if you work as a programmer) or your school, if any, to sign a “copyright disclaimer” for the program, if necessary. Here is a sample; alter the names:

```
Yoyodyne, Inc., hereby disclaims all copyright interest in the program `Gnomovision' (which makes passes at compilers) written by James Hacker.
```

```
signature of Ty Coon, 1 April 1989  
Ty Coon, President of Vice
```

This General Public License does not permit incorporating your program into proprietary programs. If your program is a subroutine library, you may consider it more useful to permit linking proprietary applications with the library. If this is what you want to do, use the GNU Library General Public License instead of this License.

GNU Lesser General Public License (LGPL)

Version 2.1, February 1999

Copyright (C) 1991, 1999 Free Software Foundation, Inc. 51 Franklin Street, Fifth Floor, Boston, MA 02110-1301 USA Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed.

[This is the first released version of the Lesser GPL. It also counts as the successor of the GNU Library Public License, version 2, hence the version number 2.1.]

Preamble

The licenses for most software are designed to take away your freedom to share and change it. By contrast, the GNU General Public Licenses are intended to guarantee your freedom to share and change free software--to make sure the software is free for all its users.

This license, the Lesser General Public License, applies to some specially designated software packages--typically libraries--of the Free Software Foundation and other authors who decide to use it. You can use it too, but we suggest you first think carefully about whether this license or the ordinary General Public License is the better strategy to use in any particular case, based on the explanations below.

14. Appendix



When we speak of free software, we are referring to freedom of use, not price. Our General Public Licenses are designed to make sure that you have the freedom to distribute copies of free software (and charge for this service if you wish); that you receive source code or can get it if you want it; that you can change the software and use pieces of it in new free programs; and that you are informed that you can do these things.

To protect your rights, we need to make restrictions that forbid distributors to deny you these rights or to ask you to surrender these rights. These restrictions translate to certain responsibilities for you if you distribute copies of the library or if you modify it.

For example, if you distribute copies of the library, whether gratis or for a fee, you must give the recipients all the rights that we gave you. You must make sure that they, too, receive or can get the source code. If you link other code with the library, you must provide complete object files to the recipients, so that they can relink them with the library after making changes to the library and recompiling it. And you must show them these terms so they know their rights.

We protect your rights with a two-step method: (1) we copyright the library, and (2) we offer you this license, which gives you legal permission to copy, distribute and/or modify the library.

To protect each distributor, we want to make it very clear that there is no warranty for the free library. Also, if the library is modified by someone else and passed on, the recipients should know that what they have is not the original version, so that the original author's reputation will not be affected by problems that might be introduced by others.

Finally, software patents pose a constant threat to the existence of any free program. We wish to make sure that a company cannot effectively restrict the users of a free program by obtaining a restrictive license from a patent holder. Therefore, we insist that any patent license obtained for a version of the library must be consistent with the full freedom of use specified in this license.

Most GNU software, including some libraries, is covered by the ordinary GNU General Public License. This license, the GNU Lesser General Public License, applies to certain designated libraries, and is quite different from the ordinary General Public License. We use this license for certain libraries in order to permit linking those libraries into non-free programs.

When a program is linked with a library, whether statically or using a shared library, the combination of the two is legally speaking a combined work, a derivative of the original library. The ordinary General Public License therefore permits such linking only if the entire combination fits its criteria of freedom. The Lesser General Public License permits more lax criteria for linking other code with the library.

We call this license the "Lesser" General Public License because it does Less to protect the user's freedom than the ordinary General Public License. It also provides other free software developers Less of an advantage over competing non-free programs. These disadvantages are the reason we use the ordinary General Public License for many libraries. However, the Lesser license provides advantages in certain special circumstances.

For example, on rare occasions, there may be a special need to encourage the widest possible use of a certain library, so that it becomes a de-facto standard. To achieve this, non-free programs must be allowed to use the library. A more frequent case is that a free library does the same job as widely used non-free libraries. In this case, there is little to gain by limiting the free library to free software only, so we use the Lesser General Public License.

In other cases, permission to use a particular library in non-free programs enables a greater number of people to use a large body of free software. For example, permission to use the GNU C Library in non-free programs enables many more people to use the whole GNU operating system, as well as its variant, the GNU/Linux operating system.

Although the Lesser General Public License is Less protective of the users' freedom, it does ensure that the user of a program that is linked with the Library has the freedom and the wherewithal to run that program using a modified version of the Library.

The precise terms and conditions for copying, distribution and modification follow. Pay close attention to the difference between a "work based on the library" and a "work that uses the library". The former contains code derived from the library, whereas the latter must be combined with the library in order to run.

TERMS AND CONDITIONS FOR COPYING, DISTRIBUTION AND MODIFICATION

0. This License Agreement applies to any software library or other program which contains a notice placed by the copyright holder or other authorized party saying it may be distributed under the terms of this Lesser General Public License (also called "this License"). Each licensee is addressed as "you".

A "library" means a collection of software functions and/or data prepared so as to be conveniently linked with application programs (which use some of those functions and data) to form executables.

14. Appendix



The "Library", below, refers to any such software library or work which has been distributed under these terms. A "work based on the Library" means either the Library or any derivative work under copyright law: that is to say, a work containing the Library or a portion of it, either verbatim or with modifications and/or translated straightforwardly into another language. (Hereinafter, translation is included without limitation in the term "modification".)

"Source code" for a work means the preferred form of the work for making modifications to it. For a library, complete source code means all the source code for all modules it contains, plus any associated interface definition files, plus the scripts used to control compilation and installation of the library.

Activities other than copying, distribution and modification are not covered by this License; they are outside its scope. The act of running a program using the Library is not restricted, and output from such a program is covered only if its contents constitute a work based on the Library (independent of the use of the Library in a tool for writing it). Whether that is true depends on what the Library does and what the program that uses the Library does.

1. You may copy and distribute verbatim copies of the Library's complete source code as you receive it, in any medium, provided that you conspicuously and appropriately publish on each copy an appropriate copyright notice and disclaimer of warranty; keep intact all the notices that refer to this License and to the absence of any warranty; and distribute a copy of this License along with the Library.

You may charge a fee for the physical act of transferring a copy, and you may at your option offer warranty protection in exchange for a fee.

2. You may modify your copy or copies of the Library or any portion of it, thus forming a work based on the Library, and copy and distribute such modifications or work under the terms of Section 1 above, provided that you also meet all of these conditions:
 - a) The modified work must itself be a software library.
 - b) You must cause the files modified to carry prominent notices stating that you changed the files and the date of any change.
 - c) You must cause the whole of the work to be licensed at no charge to all third parties under the terms of this License.
 - d) If a facility in the modified Library refers to a function or a table of data to be supplied by an application program that uses the facility, other than an argument passed when the facility is invoked, then you must make a good faith effort to ensure that, in the event an application does not supply such function or table, the facility still operates, and performs whatever part of its purpose remains meaningful.

(For example, a function in a library to compute square roots has a purpose that is entirely well-defined independent of the application. Therefore, Subsection 2d requires that any application-supplied function or table used by this function must be optional: if the application does not supply it, the square root function must still compute square roots.)

These requirements apply to the modified work as a whole. If identifiable sections of that work are not derived from the Library, and can be reasonably considered independent and separate works in themselves, then this License, and its terms, do not apply to those sections when you distribute them as separate works. But when you distribute the same sections as part of a whole which is a work based on the Library, the distribution of the whole must be on the terms of this License, whose permissions for other licensees extend to the entire whole, and thus to each and every part regardless of who wrote it.

Thus, it is not the intent of this section to claim rights or contest your rights to work written entirely by you; rather, the intent is to exercise the right to control the distribution of derivative or collective works based on the Library.

In addition, mere aggregation of another work not based on the Library with the Library (or with a work based on the Library) on a volume of a storage or distribution medium does not bring the other work under the scope of this License.

3. You may opt to apply the terms of the ordinary GNU General Public License instead of this License to a given copy of the Library. To do this, you must alter all the notices that refer to this License, so that they refer to the ordinary GNU General Public License, version 2, instead of to this License. (If a newer version than version 2 of the ordinary GNU General Public License has appeared, then you can specify that version instead if you wish.) Do not make any other change in these notices.

Once this change is made in a given copy, it is irreversible for that copy, so the ordinary GNU General Public License applies to all subsequent copies and derivative works made from that copy.

This option is useful when you wish to copy part of the code of the Library into a program that is not a library.

4. You may copy and distribute the Library (or a portion or derivative of it, under Section 2) in object code or executable form

14. Appendix



under the terms of Sections 1 and 2 above provided that you accompany it with the complete corresponding machine-readable source code, which must be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange.

If distribution of object code is made by offering access to copy from a designated place, then offering equivalent access to copy the source code from the same place satisfies the requirement to distribute the source code, even though third parties are not compelled to copy the source along with the object code.

5. A program that contains no derivative of any portion of the Library, but is designed to work with the Library by being compiled or linked with it, is called a "work that uses the Library". Such a work, in isolation, is not a derivative work of the Library, and therefore falls outside the scope of this License.

However, linking a "work that uses the Library" with the Library creates an executable that is a derivative of the Library (because it contains portions of the Library), rather than a "work that uses the library". The executable is therefore covered by this License. Section 6 states terms for distribution of such executables.

When a "work that uses the Library" uses material from a header file that is part of the Library, the object code for the work may be a derivative work of the Library even though the source code is not. Whether this is true is especially significant if the work can be linked without the Library, or if the work is itself a library. The threshold for this to be true is not precisely defined by law.

If such an object file uses only numerical parameters, data structure layouts and accessors, and small macros and small inline functions (ten lines or less in length), then the use of the object file is unrestricted, regardless of whether it is legally a derivative work. (Executables containing this object code plus portions of the Library will still fall under Section 6.)

Otherwise, if the work is a derivative of the Library, you may distribute the object code for the work under the terms of Section 6. Any executables containing that work also fall under Section 6, whether or not they are linked directly with the Library itself.

6. As an exception to the Sections above, you may also combine or link a "work that uses the Library" with the Library to produce a work containing portions of the Library, and distribute that work under terms of your choice, provided that the terms permit modification of the work for the customer's own use and reverse engineering for debugging such modifications.

You must give prominent notice with each copy of the work that the Library is used in it and that the Library and its use are covered by this License. You must supply a copy of this License. If the work during execution displays copyright notices, you must include the copyright notice for the Library among them, as well as a reference directing the user to the copy of this License. Also, you must do one of these things:

- a) Accompany the work with the complete corresponding machine-readable source code for the Library including whatever changes were used in the work (which must be distributed under Sections 1 and 2 above); and, if the work is an executable linked with the Library, with the complete machine-readable "work that uses the Library", as object code and/or source code, so that the user can modify the Library and then relink to produce a modified executable containing the modified Library. (It is understood that the user who changes the contents of definitions files in the Library will not necessarily be able to recompile the application to use the modified definitions.)
- b) Use a suitable shared library mechanism for linking with the Library. A suitable mechanism is one that (1) uses at run time a copy of the library already present on the user's computer system, rather than copying library functions into the executable, and (2) will operate properly with a modified version of the library, if the user installs one, as long as the modified version is interface-compatible with the version that the work was made with.
- c) Accompany the work with a written offer, valid for at least three years, to give the same user the materials specified in Subsection 6a, above, for a charge no more than the cost of performing this distribution.
- d) If distribution of the work is made by offering access to copy from a designated place, offer equivalent access to copy the above specified materials from the same place.
- e) Verify that the user has already received a copy of these materials or that you have already sent this user a copy.

For an executable, the required form of the "work that uses the Library" must include any data and utility programs needed for reproducing the executable from it. However, as a special exception, the materials to be distributed need not include anything that is normally distributed (in either source or binary form) with the major components (compiler, kernel, and so on) of the operating system on which the executable runs, unless that component itself accompanies the executable.

It may happen that this requirement contradicts the license restrictions of other proprietary libraries that do not normally accompany the operating system. Such a contradiction means you cannot use both them and the Library together in an executable that you distribute.

7. You may place library facilities that are a work based on the Library side-by-side in a single library together with other library facilities not covered by this License, and distribute such a combined library, provided that the separate distribution of the work

14. Appendix



based on the Library and of the other library facilities is otherwise permitted, and provided that you do these two things:

- a) Accompany the combined library with a copy of the same work based on the Library, uncombined with any other library facilities. This must be distributed under the terms of the Sections above.
 - b) Give prominent notice with the combined library of the fact that part of it is a work based on the Library, and explaining where to find the accompanying uncombined form of the same work.
8. You may not copy, modify, sublicense, link with, or distribute the Library except as expressly provided under this License. Any attempt otherwise to copy, modify, sublicense, link with, or distribute the Library is void, and will automatically terminate your rights under this License. However, parties who have received copies, or rights, from you under this License will not have their licenses terminated so long as such parties remain in full compliance.
 9. You are not required to accept this License, since you have not signed it. However, nothing else grants you permission to modify or distribute the Library or its derivative works. These actions are prohibited by law if you do not accept this License. Therefore, by modifying or distributing the Library (or any work based on the Library), you indicate your acceptance of this License to do so, and all its terms and conditions for copying, distributing or modifying the Library or works based on it.
 10. Each time you redistribute the Library (or any work based on the Library), the recipient automatically receives a license from the original licensor to copy, distribute, link with or modify the Library subject to these terms and conditions. You may not impose any further restrictions on the recipients' exercise of the rights granted herein. You are not responsible for enforcing compliance by third parties with this License.
 11. If, as a consequence of a court judgment or allegation of patent infringement or for any other reason (not limited to patent issues), conditions are imposed on you (whether by court order, agreement or otherwise) that contradict the conditions of this License, they do not excuse you from the conditions of this License. If you cannot distribute so as to satisfy simultaneously your obligations under this License and any other pertinent obligations, then as a consequence you may not distribute the Library at all. For example, if a patent license would not permit royalty-free redistribution of the Library by all those who receive copies directly or indirectly through you, then the only way you could satisfy both it and this License would be to refrain entirely from distribution of the Library.

If any portion of this section is held invalid or unenforceable under any particular circumstance, the balance of the section is intended to apply, and the section as a whole is intended to apply in other circumstances.

It is not the purpose of this section to induce you to infringe any patents or other property right claims or to contest validity of any such claims; this section has the sole purpose of protecting the integrity of the free software distribution system which is implemented by public license practices. Many people have made generous contributions to the wide range of software distributed through that system in reliance on consistent application of that system; it is up to the author/donor to decide if he or she is willing to distribute software through any other system and a licensee cannot impose that choice.

This section is intended to make thoroughly clear what is believed to be a consequence of the rest of this License.

12. If the distribution and/or use of the Library is restricted in certain countries either by patents or by copyrighted interfaces, the original copyright holder who places the Library under this License may add an explicit geographical distribution limitation excluding those countries, so that distribution is permitted only in or among countries not thus excluded. In such case, this License incorporates the limitation as if written in the body of this License.
13. The Free Software Foundation may publish revised and/or new versions of the Lesser General Public License from time to time. Such new versions will be similar in spirit to the present version, but may differ in detail to address new problems or concerns.

Each version is given a distinguishing version number. If the Library specifies a version number of this License which applies to it and "any later version", you have the option of following the terms and conditions either of that version or of any later version published by the Free Software Foundation. If the Library does not specify a license version number, you may choose any version ever published by the Free Software Foundation.

14. If you wish to incorporate parts of the Library into other free programs whose distribution conditions are incompatible with these, write to the author to ask for permission. For software which is copyrighted by the Free Software Foundation, write to the Free Software Foundation; we sometimes make exceptions for this. Our decision will be guided by the two goals of preserving the free status of all derivatives of our free software and of promoting the sharing and reuse of software generally.

NO WARRANTY

15. BECAUSE THE LIBRARY IS LICENSED FREE OF CHARGE, THERE IS NO WARRANTY FOR THE LIBRARY, TO THE EXTENT PERMITTED BY

14. Appendix



APPLICABLE LAW. EXCEPT WHEN OTHERWISE STATED IN WRITING THE COPYRIGHT HOLDERS AND/OR OTHER PARTIES PROVIDE THE LIBRARY "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE LIBRARY IS WITH YOU. SHOULD THE LIBRARY PROVE DEFECTIVE, YOU ASSUME THE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION.

16. IN NO EVENT UNLESS REQUIRED BY APPLICABLE LAW OR AGREED TO IN WRITING WILL ANY COPYRIGHT HOLDER, OR ANY OTHER PARTY WHO MAY MODIFY AND/OR REDISTRIBUTE THE LIBRARY AS PERMITTED ABOVE, BE LIABLE TO YOU FOR DAMAGES, INCLUDING ANY GENERAL, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE LIBRARY (INCLUDING BUT NOT LIMITED TO LOSS OF DATA OR DATA BEING RENDERED INACCURATE OR LOSSES SUSTAINED BY YOU OR THIRD PARTIES OR A FAILURE OF THE LIBRARY TO OPERATE WITH ANY OTHER SOFTWARE), EVEN IF SUCH HOLDER OR OTHER PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

END OF TERMS AND CONDITIONS

How to Apply These Terms to Your New Libraries

If you develop a new library, and you want it to be of the greatest possible use to the public, we recommend making it free software that everyone can redistribute and change. You can do so by permitting redistribution under these terms (or, alternatively, under the terms of the ordinary General Public License).

To apply these terms, attach the following notices to the library. It is safest to attach them to the start of each source file to most effectively convey the exclusion of warranty; and each file should have at least the "copyright" line and a pointer to where the full notice is found.

one line to give the library's name and an idea of what it does.> Copyright (C) year name of author

This library is free software; you can redistribute it and/or modify it under the terms of the GNU Lesser General Public License as published by the Free Software Foundation; either version 2.1 of the License, or (at your option) any later version.

This library is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU Lesser General Public License for more details.

You should have received a copy of the GNU Lesser General Public License along with this library; if not, write to the Free Software Foundation, Inc., 51 Franklin Street, Fifth Floor, Boston, MA 02110-1301 USA

Also add information on how to contact you by electronic and paper mail.

You should also get your employer (if you work as a programmer) or your school, if any, to sign a "copyright disclaimer" for the library, if necessary. Here is a sample; alter the names:

Yoyodyne, Inc., hereby disclaims all copyright interest in the library `Frob' (a library for tweaking knobs) written by James Random Hacker.

signature of Ty Coon, 1 April 1990

Ty Coon, President of Vice

www.humaxdigital.com



Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>