

Digital Terrestrial Receiver
VIACCESS Embedded

VA-FOX T

User's Manual



HUMAN
your prime time

Notice

Copyright (Copyright © 2001 HUMAX Corporation)

Not to be copied, used or translated in part or whole without HUMAX's prior consent in writing except approval of ownership of copyright and copyright law.

Warranty

The information in this document is subject to change without notice. HUMAX does not have any responsibility for direct, indirect, accidental, necessary and other corruptions due to your offer or use of the information contained in this manual.

Trademarks

VIACCESS™ is a trademark of France Telecom.

CryptoWorks (TM) is a trademark of Philips Electronics N.V.

Irdeto is a trademark of Mindport BV.

Nagravision is a registered trademark of KUDELSKI S.A.

Conax is a trademark of Telenor Conax AS.

'Dolby' and the double-D symbol are trademarks of Dolby Laboratories.

Manufactured under license from Dolby Laboratories.

Thank you for purchasing a HUMAX digital terrestrial receiver. Please read this user manual carefully, to be able to safely install, use and maintain the receiver at maximum performance. Keep this user manual next to your receiver for future reference.

Notice

Read this manual carefully and make sure you understand the provided instructions. For your safety, know what the reaction upon each action will be.

Warnings, Cautions and Notes

Throughout the whole manual, pay special attention to the following marks that indicate hazardous situations.

- **Warning**

Indicates a hazardous situation which, if not avoided, could result in (serious) injury.

- **Caution**

Indicates a situation which, if not avoided, could damage the equipment or other apparatus.

- **Note**

Indicates additional information to the user to make the user aware of possible problems and information of any importance to help the user to understand, to use and to maintain the installation.



To reduce the risk of electric shock, do not remove cover (or back). No user serviceable parts inside. Refer servicing to qualified service personnel.

This symbol indicates **dangerous voltage** inside the product that presents a risk of electric shock or personal injury.

This symbol indicates important instructions accompanying the product.

GB 2

Safety and Warning

This digital terrestrial receiver and personal video recorder has been manufactured to satisfy international safety standards. Please read the following safety precautions carefully.

Safety Instructions and Precautions

1. MAINS SUPPLY

90 - 250V AC 50/60Hz

Operate your product only from the type of power source indicated on the marking label. If you are not sure of the type of power supplied to your home, consult local power company. Disconnect the receiver from the mains before you start any maintenance or installation procedures.

2. OVERLOADING

Do not overload a wall outlet, extension cord or adapter as this may result in electric fire or shock.

3. LIQUIDS

The receiver should not be exposed to any liquids such as dripping or splashing. In addition, no objects filled with liquids, such as vase, shall be placed on the apparatus.

4. CLEANING

Disconnect the receiver from the wall outlet before cleaning. Use a light damp cloth (no solvents) to dust the receiver.

5. VENTILATION

The slots on top of the receiver must be left uncovered to allow proper airflow to the unit. Do not stand the receiver on soft furnishings or carpets. Do not stack electronic equipments on top of the receiver.

6. ATTACHMENTS

Do not use any unsupported attachments as these may be hazardous or cause damage the receiver.

7. CONNECTION TO THE AERIAL

Disconnect the receiver from the mains before connecting or disconnecting the cable from the aerial. Failure to do so can damage the aerial.

8. CONNECTION TO THE TV

Disconnect the receiver from the mains before connecting or disconnecting the cable from the aerial. Failure to do so can damage the TV.

9. EARTHING

The aerial cable must be buried in the ground.

The buried cable of the system must comply with SABS 061.

Safety and Warning

10. LOCATION

Place the receiver indoors to avoid exposing it to lightening, rain or sun.

Do not place it near a radiator or heat register.

Make sure it has more than 10 cm clearance from any appliances susceptible to electromagnetic influences, such as TV and VCR.

Do not block these openings with any object, and do not place the product on a bed, sofa, rug, or other similar surface.

If you place the product on a rack or bookcase, ensure that there is adequate ventilation and that you have followed the manufacturer's instructions for mounting.

Do not place the product on an unstable cart, stand, tripod, bracket, or table where it can fall.

A falling product can cause serious injury to a child or adult, and serious damage to the appliance.

11. LIGHTNING, STORM, or NOT IN USE

Unplug the product from the wall outlet and disconnect the aerial during a lightning storm or when left unattended and unused for long periods of time. This will prevent damage to the unit due to lightning and power-line surges.

12. EXTRANEIOUS OBJECTS

Do not insert anything through the openings in the unit, where they can touch dangerous voltage point or damage parts.

13. REPLACEMENT of PARTS

When the replacement parts are required, be sure the service technician uses replacement parts specified by the manufacturer or those that have the same characteristics as the original part. Unauthorised substitutions may result in additional damage to the unit.

Warning

1. Follow these directions in order not to damage the power cord or plug.
Do not modify or process the power cord or plug arbitrarily.
Do not bend or twist the power cord too much.
Make sure to disconnect the power cord with the plug held.
Keep heating appliances as far as possible from the power cord in order to prevent the cover vinyl from melting.
2. Follow these directions. Failure to follow one of them may cause electrical shock.
Do not open the main body.
Do not insert metals or inflammable objects inside the product.
Do not touch the power plug with a wet hand.
Disconnect the power cord in case of lightening.
3. Do not use the product when it is out of order. If you continue to use the product when defective, serious damage can be caused to it. Make sure to contact your local product distributor if the product is out of order.

GB 4

Contents

1. Before Using the Receiver	GB7
1.1 Package Contents	GB7
1.2 Front Panel	GB8
1.3 Rear Panel	GB9
1.4 Remote Control	GB10
2. Setup	GB12
2.1 Connecting Aerial	GB12
2.2 Powering On	GB14
3. Installation Wizard	GB15
4. Basic Operation	GB16
4.1 Switching Channel	GB16
4.2 Volume Control	GB16
4.3 Motion Still	GB16
4.4 Teletext	GB16
4.5 Change the Subtitle Language	GB17
4.6 Change a Audio Language	GB17
4.7 Programme Information (I- plate)	GB18
4.8 Option List	GB20
5. Channel List	GB22
5.1 Displaying and Switching Channel List	GB22
5.2 Changing Channel List Group	GB23
5.3 Edit Channels	GB24
5.4 Edit Favourite Channels	GB26
5.5 Channel Change Mode	GB29
6. Programme Guide	GB30
6.1 Viewing Programme Guide Information	GB30
6.2 Finding a Programme	GB32
6.3 Viewing Reserved Programme	GB33

Contents

7. Setting Preferences	GB35
7.1 Parental Control	GB35
7.2 Language Setting	GB37
7.3 Time Setting	GB38
7.4 Schedule	GB40
7.5 A/V Control	GB40
7.6 UHF Tuning	GB42
7.7 Miscellaneous Settings	GB43
8. Installation	GB44
8.1 Automatic Search	GB44
8.2 Manual Search	GB45
8.3 Default Setting	GB46
8.4 Antenna Power	GB47
9. Software Update	GB48
9.1 OTA (Over the Air)	GB48
9.2 S/W Update from PC	GB51
10. System Information	GB52
10.1 Status	GB52
10.2 Signal Detection	GB52
10.3 Conditional Access	GB52
11. GAMES	GB53
12. Manipulating your TV using Remote Control	GB54
13. Menu Map	GB63
14. Trouble Shooting	GB64
14.1 Trouble Shooting	GB64
14.2 Error Message	GB65
15. Specification	GB66
16. Glossary	GB68
17. Service and Support	GB69

1.Before Using the Receiver

This chapter describes detail instructions on the product and its accessories.

1.1 Package Contents

Please check all package contents before using your receiver.



Remote Control



User's Manual



Batteries



Scart Cable




RF Cable

Note: Since faults may occur if the remote control is being left without a battery for a long time, always keep the battery inserted in the remote control.

1. Before Using the Receiver


1.2 Front Panel

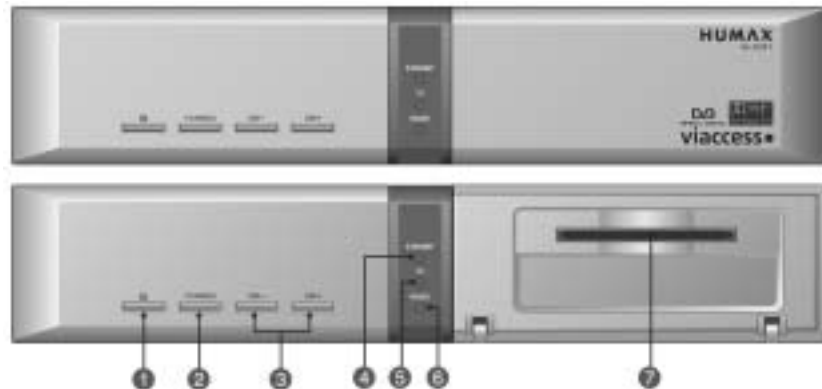

- 1. STANDBY Button**
Switches between Operation and Standby modes.
- 2. TV/RADIO Button**
Switches between TV and Radio.
- 3. CH - / CH +**
Moves the TV/Radio channel up/down.
- 4. STANDBY LED**
Red light is displayed when the product is in the Standby mode.
Green light is displayed when the product is in operation.
- 5. TV LED**
Green light is displayed when the receiver is in TV mode.
- 6. RADIO LED**
Amber light is displayed when the receiver is in Radio mode.
- 7. SMART CARD SLOT**
Slot for a smart card.

GB 8


1.3 Rear Panel

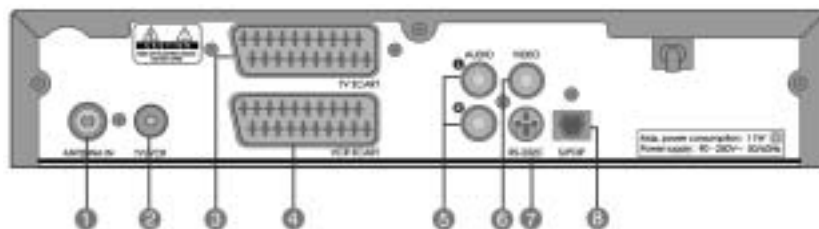

1. **ANTENNA IN**
Connects a aerial to a ANTENNA input jack on the your receiver.
2. **TV / VCR**
Connects a RF signal from your receiver to RF (ANT) input jack on your TV or VCR.
3. **TV SCART**
Connects a TV SCART cable.
4. **VCR SCART**
Connects a VCR SCART cable.
5. **AUDIO L/R**
Connects to your TV or VCR and output Audio signals.
6. **VIDEO**
Connects to your TV or VCR and output Video signals.
7. **RS-232C**
Connects to your PC to upgrade product's software programme.
8. **S/PDIF**
Outputs the digital audio signals(S/PDIF).

1. Before Using the Receiver

1.4 Remote Control

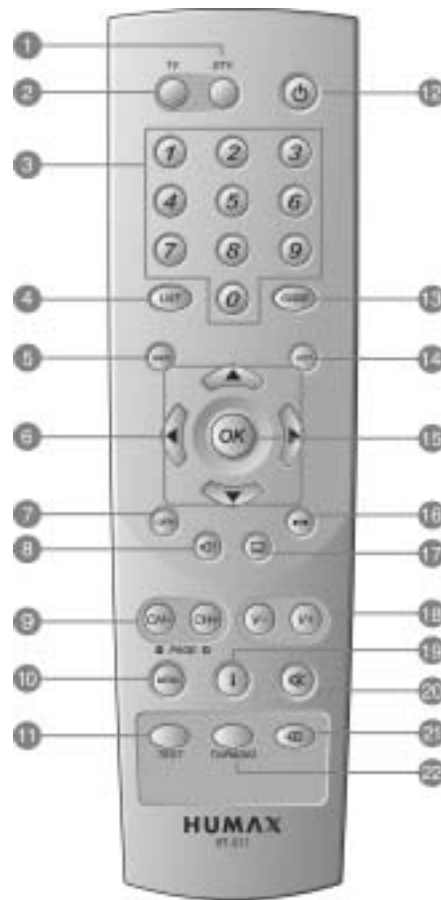

Note: This remote control can also control your TV. To set the remote control for your TV, please refer to Chapter 12.

GB 10

- 1. DTV**
Controls the Receiver.
- 2. TV**
Controls the TV.
- 3. NUMERICAL BUTTONS**
Enters a TV/Radio channel number or menu option number.
- 4. LIST**
Displays the channel list.
- 5. BACK**
Returns to the previous menu and screen.
- 6. ARROW BUTTONS**
Changes the channel or move the cursor to the up, down, left or right menu option.
- 7. OPT+ (OPTION)**
Displays the channel attributes during watching a programme.
- 8. SOUNDTRACK**
Displays the Soundtrack.
- 9. CH-/CH+ (PAGE-/PAGE+)**
Changes the Channel or Page.
- 10. MENU**
Displays the main menu.
- 11. TEXT**
Displays digital text.
- 12. STANDBY**
Switches between Operation and Standby modes.
- 13. GUIDE**
Displays the Programme Guide.
- 14. EXIT**
Exits the main menu or Guide screen.
- 15. OK**
Selects a menu, or confirm the selected operation. And display the channel list during watching a programme.
- 16. FREEZE**
Freezes the TV screen you are watching. Play the audio continuously.
- 17. SUBTITLE**
Changes the subtitle language.
- 18. V-/V+**
Adjusts the audio volume.
- 19. i (INFORMATION)**
Displays the information about the channel and programme.
- 20. MUTE**
Pauses the audio temporarily. That is, volume on/off temporarily.
- 21. AUX**
Controls input mode of TV.
- 22. TV/RADIO**
Switches between TV and Radio modes.

2. Setup

This chapter describes how to set up the receiver. Select the most appropriate procedure depending on your case.


Note: If you encounter any problem when setting up the receiver, please contact your local product distributor.

Where possible, use an outdoor roof aerial intended for receiving UHF channels between 21 and 69.

It is not advisable to use indoor or window mounted aerials, as digital channels will be difficult or even impossible to receive.

2.1 Connecting Aerial

1. Connecting TV and VCR

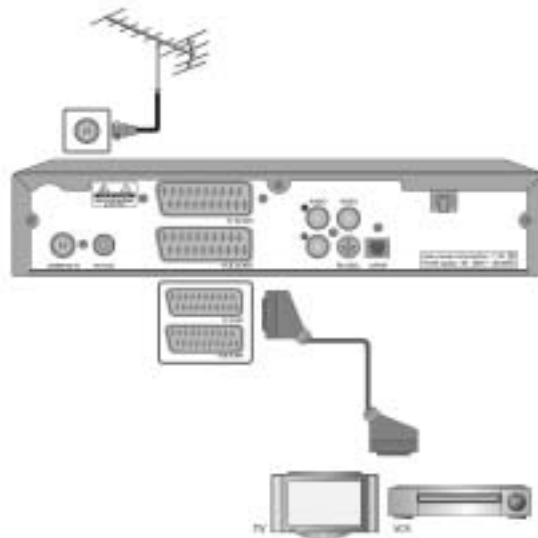


- Connect the cable of your TV aerial to the **ANTENNA IN** connector on the rear of the receiver.
- Scart and co-axial cable are connected as in the figure above.

GB 12


2. Connecting Hi-Fi system 1

Connect the outputs on this receiver to corresponding inputs on your Hi-Fi system. (left audio out to left audio in, right audio out to right audio in)

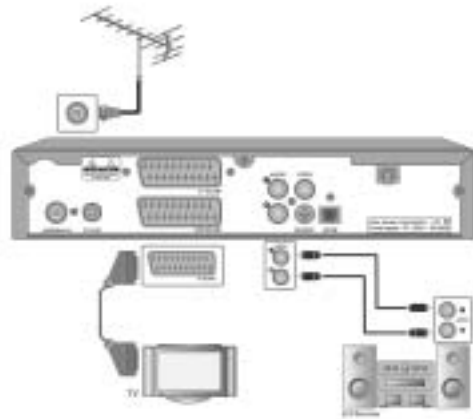

3. Connecting Hi-Fi system 2


If you wish to connect the optical S/PDIF terminal and Dolby digital decoder to listen digital audio, connect as following.

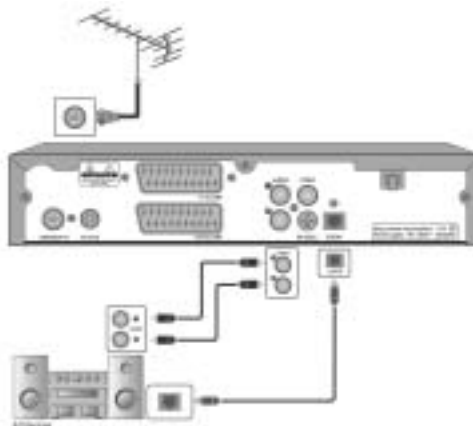

2. Setup

2.2 Powering On

1. Connect the power cord of the receiver to a wall outlet.

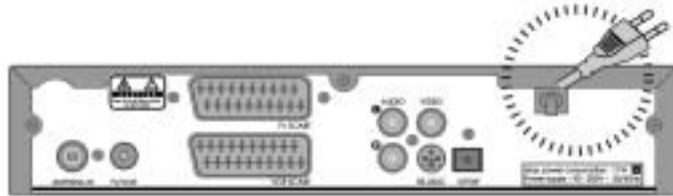

2. Power on by pressing the **STANDBY** (⏻) button at Remote Controller. The Standby LED indicator is turned on Green.



GB 14

3. Installation Wizard

When powering on your receiver for the first time after purchasing, the Installation Wizard is automatically started. It immediately performs Channel Search.(You can run the Installation Wizard in Default Setting.)

Please wait for finishing the Channel Search. If you want to stop the Channel Search, select the **OK** (OK) button.

If the Channel Search is stopped or finished, the result of Channel Search is automatically saved.



When completing Channel Search, you can enjoy programmes.



Warning: Press the **EXIT** (EXIT) button to save the previous input information and exit the installation wizard when running the installation wizard. If you exit the install wizard without fully completing the setting procedures, you may not watch any broadcasting normally. In this case, you can use the **Installation Menu** to configure your receiver as you like.

4. Basic Operation

This chapter describes functions such as switching channel, volume control, and basic features for watching programmes.



4.1 Switching Channel

You can switch the current channel using one of the following methods.

1. Press the **CH-/CH+** () button.
2. Enter your desired channel numeric using the **NUMERICAL** (0-9) buttons to move to the channel directly.
3. Press the **TV/RADIO** () button to switch between TV channel and Radio channel.



Note: You can switch channel using Programme Guide or Channel List. Please refer to Chapter 5 and 6 for more information.

4.2 Volume Control

1. Press the **V-/V+** () buttons to adjust the audio volume of your TV/DTV.
2. Press the **MUTE** () button to stop the sound of your TV/DTV temporarily.

Note: You can adjust the Volume Control in the TV when you are setting TV code. Refer to chapter 12 to set the TV.




4.3 Motion Still

Press the **FREEZE** () button at remote control to pause the current programme. Press the **FREEZE** () button again to continue the programme.

4.4 Teletext

When the channel supports teletext, the Teletext icon () is displayed on the I-plate.

It's possible to adjust in the channel supported teletext mode. Press the **TEXT** () button to change to the teletext mode.

1. Press the **MENU** () button to display teletext menu.
2. Select your desired teletext function using the  button.
3. Press the **OK** () button.

Teletext Functions

- Index** Return to index page.
- Sub-page** Search the sub-page using the sub-code. If it's not in the teletext mode, display the current time.
- MIX** Displays teletext with TV picture.
- Cancel** Displayed only when the service is a scrambled service.
- Reveal** Displays the concealed information.
- Double Size** Displays the text size as double size.
- Page Hold** Hold function during teletext display.

4.5 Change the Subtitle Language

If the current programme provides Subtitle information, you can select the language for the Subtitle.

1. Press the **SUBTITLE** (Ⓜ) button to display the subtitle language list.
2. Select your desired subtitle language using the **▲/▼** button, and press the **OK** (Ⓜ) button. Then the subtitle will be displayed in the selected language at the bottom of the screen.
3. Select **OFF** from the subtitle language list not to display subtitle from the screen.



Note: You can select a default subtitle language by selecting **MENU - Preferences - Language Setting - Subtitle Language**.

The subtitle set up as the value of **MENU** when you change channel and turn on or off power.

4.6 Change a Audio Language

If the current programme is available in multiple audio languages, you can select the language that you wish to listen in.

1. Press the **SOUNDTRACK** (Ⓜ) button to display **soundtrack list**.
2. Select your desired audio language using the **▲/▼** button to change Audio immediately.
3. Select Audio Direction(left, right, stereo) using the **◀/▶** button.



Note: you can select your desired default audio language by selecting **MENU - Preferences - Language Setting -Audio Language**.

4. Basic Operation

4.7 Programme Information (I- plate)








Programme information is always displayed for a specific period of time whenever you switch channels. You can view the programme information by pressing the **i** (ⓘ) button while watching a programme. Press the **EXIT** (⊞) button to hide the I-plate.

1. General Information


General Information is displayed as follows on the screen.



1. Channel number and channel name
2. Programme name
3. Icons


-  Displayed only if this programme is reserved.
-  Represents parental level. It indicates the minimum level of ages that the programme is targeted at.
-  Displayed only when the channel is a locked channel.
-  Displayed only when the channel is a scrambled channel.
-  Displayed only when subtitle information is available.
-  Displayed only when there is any teletext information.
-  Displayed only when the programme is a dolby digital one.

GB 18




4. Current time
5. Detail programme information: displayed if detailed programme information is provided.
6. Channel looping mode and Channel List Name : if you select **Within the current channel list** by selecting **MENU - Edit channels - Channel Change Mode** , the Icon of Channel looping mode is displayed. And channel list, which you selected, is displayed.
7. Programme broadcasting time and progress bar: displays programme playing time and progress bar.
8. Next programme Information : displayed if next programme information is provided. Press the  button to display the next programme information.


Note: If there is no available programme information, programme information is not displayed.

2. Detail Programme Information

You can see detailed information about the current programme. Press the **i**  button where I-plate is displayed to view detailed information.

Note:

- Press the **i**  button again to hide the information box.
- If the Detail information is more than one page, use  /  button to move to the previous or next page.

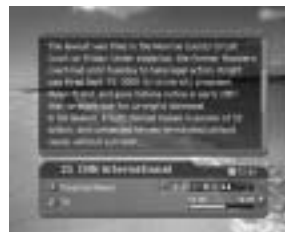

4. Basic Operation

4.8 Option List

You can view and confirm detailed information about the current channel and change the information in necessary.

Note: Press the **OPT+** (⊕) button when the channel list is displayed to view **Option List**. Then the following functions in the option list are performed to the current channel where cursor is located.

1. Add a channel to favourite group

You can add current channels to the favourite group immediately. Also, you can add a channel to multiple Favourite groups.

1. Press the **OPT+** (⊕) button.
2. Select **Favourite** using the ▲/▼ button, and press the ► or **OK** (⊙) button.
3. Select **favourite group** using the ▲/▼ button and press the **OK** (⊙) button to register for Favourite Group.
4. Press the **OK** (⊙) button again on the selected **Favourite Group** to release the registered channel.
5. Move to the parent menu using the ◀ button to save the changes automatically.

Note: For detailed information about how to change Favourite Group's name and how to register Favourite Channel for the whole channels, refer to **Chapter 5**.



2. Lock/Unlock a Channel

You can lock or unlock the current channel while watching a programme.

1. Press the **OPT+** (⊕) button.
2. Select **Lock** using the ▲/▼ button, and press the ► or **OK** (⊕) button.
3. Select **Lock** option using the ▲/▼ button, and press the **OK** (⊕) button.
4. Select **Unlock** option using the ▲/▼ button, and press the **OK** (⊕) button.
5. You will be prompted to enter your Password. Enter your password to unlock the channel.
6. Move to the parent menu using the ◀ button to save the changes automatically.

Note: When switching to the Locked Channel, you must enter the password to watch a programme.



3. Delete a Channel

You can delete the current channel while watching a programme.

1. Press the **OPT+** (⊕) button.
2. Select **Delete** using the ▲/▼ button, and press the **OK** (⊕) or ► button.
3. Select **Yes** in the confirmation message and press the **OK** (⊕) button.
4. Enter password using the **NUMERICAL** (0-9) button to delete the current channel and move to the next channel.



5. Channel List

3 types of channel lists are provided for easy and quick channel searching.

- TV** The list of all TV channels with 2 sub-groups: one is sorted by channel number, the other is sorted by channel name.
- Radio** The list of all Radio channels with 2 sub-groups: one is sorted by channel number, the other is sorted by channel name.
- Favourite** The list of the favourite channels with 5 sub-groups that You can organise channels by your private taste.

5.1 Displaying and Switching Channel List

You can display channel list using **LIST** (LIST) button and switch into other channel on the channel list.

1. Press the **LIST** (LIST) button while watching a programme to display the selected channel list.
2. Select your desired channel using the **▲/▼** button and press the **OK** (OK) button to change the channel.
3. Enter the channel numeric directly using **NUMERICAL** (0-9) button to move cursor into your desired channel. And then press the **OK** (OK) button to change into the selected channel.
4. Select **On** by going to **MENU - Preferences - Miscellaneous Settings - Option in CH List** to display scramble icon in the channel list.
Select **OFF** by going to **MENU - Preferences - Miscellaneous Settings - Optoin in CH List** to display only channel list without scramble icon.



Note:

- If there are multiple channels, press the **PAGE-/PAGE+** (PAGE-/PAGE+) button to move by channel.
- Whenever you press the **TV/RADIO** (TV/RADIO) button while the channel list is displayed, the channel list will be switched between TV and Radio channel list.

5.2 Changing Channel List Group

You can select channel list by group.

1. Press the ► button while the channel list is displayed to view the group list.
2. Select your desired channel group using the ▲/▼ button to display its sub-groups.
3. Press the OK (⊞) or ► button, select your desired sub-group using the ▲/▼ button, and then press the OK (⊞) button.
4. The channel list for the selected sub-group is displayed.



Note:

- The sub-group of Favourite channel list may exist or not depending on your configuration.
- If **Within the Current Channel List** option is selected from **MENU - Edit channels - Channel Change Mode** menu, you can only change programme within the selected channel list using the **CH-/CH+** (⊞/⊞) while your watching a programme.

5. Channel List

5.3 Edit Channels

You can edit all channels or each channel by channel list group.

1. Press the **MENU** (☰) button.
2. Select **Edit Channels** using the ▲/▼ button, and press the **OK** (⊙) or ► button.
3. Select **Edit Channel lists** using the ▲/▼ button, and press the **OK** (⊙) or ► button.
4. You will be prompted to enter your password. Enter your password using **NUMERICAL** (0-9) button.



Note:

- Press the **BACK** (◀) or ◀ button to save the changes and return to the previous menu, press the **MENU** (☰) or **EXIT** (⊙) button to exit the menu screen.
- You can easily navigate all menus using the assigned numeric for each menu. Press the **MENU - 2 - 1** in order at remote control to select **Edit Channel Lists** menu.



1. Select a Channel Group

You can select the channel list group to edit. TV and Radio sub-groups can be selected.

1. Press the **OK** (⊙) or ► button in group to display **Channel List Group**.
2. Select your desired **Channel List Group** using the ▲/▼ button, and press the **OK** (⊙) button.








Note:

- Press the **TV/RADIO** (📺) button to **move to TV or RADIO channel list** directly.
- For editing **Favourite channel list**, move to **MENU - Edit Channels - Edit Favourite Channels** menu.

2. Delete Channels




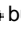

You can delete one or more channels.

1. Move the cursor to the channel list using the   button.
2. Select your desired channel, and then press the **OK**  button to delete the channel(s). You can select multiple channels.
3. Select **Delete** in the right using the  button, and press the **OK**  button.



3. Lock/Unlock Channels

You can lock or unlock one or more channels.

1. Move the cursor to the channel list using the   button.
2. Select your desired channel, and then press the **OK**  button to lock/unlock the channel(s). You can select multiple channels.
3. Select **Lock** in the right using the  button, and press the **OK**  button.





Note:

- Only if locked channel(s) is selected or all channels are locked, **Lock** is switched into **Unlock**. When you press **Unlock**, locked channel is switched into unlocked channel.
- Enter password using the **NUMERICAL** (0-9) button to watch locked channel.



4. Select/Unselect All Channels

You can select/unselect all channels at a time.

1. Select **Select All** in the right and press the **OK**  button to select all channels.
2. Select **Unselect All** in the right and press the **OK**  button to unselect all the selected channels.

5. Channel List

5.4 Edit Favourite Channels

You can edit Favourite channel or Favourite channel list.









1. Press the **MENU** (⊖) button.
2. Select **Edit Channels** using the ▲/▼ button, and press the **OK** (⊙) button.
3. Select **Edit Favourite Channels** using the ▲/▼ button, and press the **OK** (⊙) or ► button.



Note:




- Press the **BACK** (⊖) or ◀ button to save the changes and return to the previous menu. Press the **MENU** (⊖) or **EXIT** (⊖) button to exit the Menu screen.
- You can easily navigate all menu items using the assigned numerical button for each menu. Press the **MENU - 2 - 2** in order on the remote controller to select the **Edit Favourite Channels** menu.



The buttons for editing the Favourite channel list are described in the following table.

	Add	Adds Favourite channel.
	Remove	Removes from the Favourite channel.
	TV/RADIO	Switches between TV and Radio channel list.
	Fav.Group	Changes Favourite channel list group.
	Move	Moves the order of channel list within the Favourite channel list.
	Rename	Renames the name of Favourite channel list.
	Sort	Sorts channels by number or name in all TV/Radio channel list.
	Unselect All	Unselect all the selected channel.

1. Add/Remove favourite channels

You can add favourite channel(s) to a specific Favourite channel list or remove the added favourite channel(s) from the list.








1. Select **Favourite Group** using .
2. Select your desired channel(s) in all TV/Radio channel list, and press  to add Favourite channel(s).
3. Select your desired channel(s) in Favourite channel list, and press  to remove Favourite channel(s).

Note: You can switch between TV and Radio channel list using **TV/RADIO**  button or  at remote control.



2. Move favourite channels




You can move favourite channel(s) to your desired location within the Favourite channel list.

1. Select **Favourite Group** using .
2. Select your desired channel to move within the Favourite channel list and press the **OK**  button.
3. Select , and press the **OK**  button.
4. Move the cursor to your desired location using the / button, and press the **OK**  button.
5. The selected channel(s) is moved to the desired location you selected.



3. Rename a favourite channel list

You can rename Favourite channel list.

1. Select Favourite group to rename using .
2. Select , and press the **OK**  button.
3. Enter the **Favourite channel list** name using the keyboard displayed on the screen.



5. Channel List

4. When finishing entering the Favourite channel list name, select **OK**, and press the **OK** (OK) button.



4. Additional Features

Additional Features provides many useful functions which are necessary to add Favourite Channel.

Change between TV and Radio channel list

You can add not only TV channel(s) but also Radio channel(s) to Favourite channel list. Press **TV/RADIO** to switch all channel list into TV or Radio channels.

Note: You can also change into TV or Radio channel by pressing **TV/RADIO** (TV/RADIO) button at remote controller.

Select a favourite channel list

You can select your desired Favourite channel list to edit. Press **LIST** to display the Favourite channel list. Then select your desired channel list using the **UP/DOWN** button, and press the **OK** (OK) button.



Sort a channel list

You can sort all TV or Radio channel lists by channel number or name for easy Favourite channel searching. If channel lists are sorted by channel number, **NUM** is displayed. When you press this button, all the channel lists are sorted by name. Or, if channel lists are sorted by channel name, **NAME** is switched into **NUM**. Press this button to order channels by number.

Unselect all the selected channels

Press **UNSELECT** button to unselect all the selected channel.

GB 28

5.5 Channel Change Mode

You can change the channel either in the group or in the entire groups while watching a programme.

1. Press the **MENU** (⊖) button.
2. Select **Channel Change Mode** using the ▲/▼ button, and press the **OK** (⊖) or ► button.
3. Select **All Channels** or **within the current channel list** using the ▲/▼ button, and press the **OK** (⊖) button.












Note: When **Within the current channel list** in **Favourite Group** option is selected, you can only change the channel within the current channel list. To change the channel in another channel list in which the current channel list is not located, change the channel list or select **All channels** option.

6. Programme Guide

The Programme Guide displays programme information about each channel, based on the date and time. You can also schedule your watching using the information given.

6.1 Viewing Programme Guide Information








You can view programme information for all channels.

1. Press the **GUIDE** () button.
2. Move to previous or next programme within the same channel using the  /  button.
3. Move to another desired channel using the  /  button. If there are multiple channels, use **PAGE-/PAGE+** ( / ) button to move to channels by page. Also, you can enter your desired channel number using the **NUMERICAL** (0-9) button on the remote controller to move to the channel directly.
4. Select your desired programme, and press the **OK** () button. Then you can watch the programme if it is on air, or you can reserve it if it is the following programme.
5. Press the **i** () button in the selected programme to view **Extended Information** for the selected channel.



1. Viewing Guide Information by Groups

You can view programme information for desired channel list by groups.

1. Press the **GUIDE** () button.
2. Press the **Red** button to display the channel list group.
3. Select your desired channel list group using the  /  button to display the appropriate sub-group.
4. Move the cursor to the sub-group using the  button, select your desired sub-group using the  /  button, and then press the **OK** () button.
5. The Programme Guide for selected channel list is displayed.



GB 30

2. Viewing Programme Information Using Time Bar

You can quickly search for your desired time zone using the Time bar.

1. Press the **GUIDE** (GUIDE) button.
2. Press the **Green** button to display **Time Bar**.
3. Select the **Time Bar** button using the **Left/Right** button, and press the **OK** (OK) button to move as your desired amount of time. If you press the button repeatedly, the same operation is repeated.



4. Each button functions as follows.

Now	Moves to the current programme where the cursor is located.
◀	Moves to the previous programme or 30 minutes before.
▶	Moves to the next programme or 30 minutes after.
⏮	Moves to 2 hours before.
⏭	Moves to 2 hours after.
◀ Day	Moves to one day before.
Day ▶	Moves to one day after.

5. Select **Exit** button and press the **OK** (OK) button to exit the Time Bar.

Note: Guide provides programme information from the previous day to the next 7 days.

3. Reserving (Reserving a Watching)

You can automatically reserve your desired programme by selecting the scheduled programme and pressing the **OK** (OK) button.

1. Select the desired programme and press the **OK** (OK) button. The following message will be displayed.
2. Select **Yes** and press the **OK** (OK) button to reserve the programme. When a reservation has been completed, the **TV** icon is displayed on the reserved programme.
3. Select **No** and press the **OK** (OK) button not to reserve the programme.
4. If the channel is locked, parental controlled or restricted by watching time, you will be prompted to enter your Password. Enter your Password to complete the reservation.



6. Programme Guide

6.2 Finding a Programme

You can find your desired programme by programme name or genre easily.

1. Press the **GUIDE** (📺) button.
2. Press the **Blue** button to display **Find** screen.
3. Enter the programme name directly using the keyboard displayed on the screen.
4. When completing entering programme name, select the **Find** button, and press the **OK** (⊙) button.
5. If you select your desired programme from the results of finding programme screen and press the **OK** (⊙) button, you can watch the programme if it is on air, or you can reserve your programme if it is scheduled (the following programme).
6. Select **By Genre** and press the **OK** (⊙) button to search programme by genre.
7. Select your desired genre and press the **OK** (⊙) button.
8. As the result screen of Find programme by Name, select your desired programme from the Results of Finding Programme screen and press the **OK** (⊙) button to watch the programme immediately or reserve the programme.

Note: If you press **Previous** or **Next** button on the Keyboard displayed on the screen, the keyboard layout is switched.


Note: The results of the finding programme may differ depending on the provided programme information.



6.3 Viewing Reserved Programme

You can add or edit reserved programmes by viewing the reserved programme list.

1. Press the **GUIDE** (⏏) button.
2. Press the **Yellow** button to display the **Schedule** screen.
3. Select the scheduled programme and press the **OK** (⏏) button to edit the reservation information.
4. Select vacant list and press the **OK** (⏏) button to add a new reservation schedule.

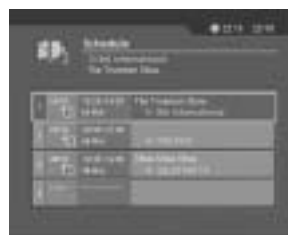

1. Editing a Reserved Programme

1. Change the reserved Start Time using the **Left/Right** (←/→) button and the **NUMERICAL** (0-9) buttons.
2. Change the reserved End Time using the **Left/Right** (←/→) button and the **NUMERICAL** (0-9) buttons.
3. Change the Repeat mode using the **Left/Right** (←/→) button. The options are **Once**, **Daily**, and **Weekly**.
4. Select the **Delete** button and press the **OK** (⏏) button to delete the reserved programme.
5. Select the **Cancel** button and press the **OK** (⏏) button to cancel the editing.
6. Select the **Save** button and press the **OK** (⏏) button to complete the editing.



6. Programme Guide

2. Adding a Reservation

1. Enter your desired channel number using the **NUMERICAL** (0-9) button. The channel name is automatically displayed by channel number.
2. Enter your desired Start Time using the ◀/▶ button and the **NUMERICAL** (0-9) button.
3. Enter your desired End Time using the ◀/▶ button and the **NUMERICAL** (0-9) button.
4. Select one of repeat mode options among **Once**, **Daily**, and **Weekly** using the ◀/▶ button.
5. Select the **Save** button and press the **OK** (⊙) button to complete entering.
6. Select the **Cancel** button and press the **OK** (⊙) button to cancel the reservation.



Note:

- You can reserve up to 20 programmes.
- If your desired programmed is already reserved, adjust the reservation appropriately.
- If the channel is locked, restricted by watching time, you will be prompted to enter your Password to complete the reservation.

7. Setting Preferences

You can set censorship, watching time, and all other items suitable for your environment.

Note:

- Press the **BACK** (⏪) or ⏪ button to save the changes and return to the previous menu. Press the **MENU** (☰) or **EXIT** (⏻) button to exit the Menu screen.
- You can easily select any item from the menu using the **NUMERICAL** (0-9) buttons.

7.1 Parental Control

You can set parental control for each programme and watching time. You can also change your Password.

1. Press the **MENU** (☰) button.
2. Select the **Preferences** using the ▲/▼ button, and press the **OK** (⏻) or ► button.
3. Select the **Parental Control** using the ▲/▼ button, and press the **OK** (⏻) or ► button.
4. When a prompting message is displayed to request your password, enter the password using the **NUMERICAL** (0-9) button.



1. Setting Censorship

Censorship Classification allows you to block programmes according to the age level you have set.

1. Select the **Censorship Classification** using the ▲/▼ button, and press the **OK** (⏻) or ► button.
2. Select your desired **age level** using the ▲/▼ button, and press the **OK** (⏻) button.



7. Setting Preferences

View All All programmes can be watched because there is no age limitation.

7 Programmes are blocked for children under the age of 7.

12 Programmes are blocked for children under the age of 12.

15 Programmes are blocked for children under the age of 15.








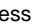
18 Programmes are blocked for children under the age of 18.

Lock All Programmes are blocked without considering the age level.

Note: You have to enter Password to watch the programme which is blocked by the age level.



2. Setting Allow Watch Time

You can block programmes according to the watching time for all the channels.

1. Select the **Allow Time Control** using the / button, and press the  or **OK** () button.
2. Select **Enable** or **Disable** the **Allow Time Control** using the / button, and press the  or **OK** () button.

Disable You can watch whenever you want regardless of Allow Time.

Enable You can watch only while the time specified by Allow Time.

3. When you have selected **Enable**, set the Start and End Time using the **NUMERICAL** (0-9) buttons, and press the **OK** () button.
4. If you wish to cancel the entered time, select the **Cancel** button, and press the **OK** () button.



Note: Once the setting has been completed, you can watch programme only while the time specified by Allow Time. Or you should enter the Password to watch any programme during unspecified time.

3. Change Password

You can change the existing Password into new one.

1. Select **Change Password** using the $\blacktriangle/\blacktriangledown$ button, and press the \blacktriangleright or **OK** (OK) button.
2. Enter **New Password** using the **NUMERICAL** (0-9) button, and press **OK** (OK) button.
3. Enter the **New Password** again to confirm the **Verify Password**, and press the **OK** (OK) button.

Note: The Default Password is "0000". If you have forgotten your Password, please contact your local product distributor.



7.2 Language Setting

You can set Language for Menu, Audio, and Subtitle.

1. Press the **MENU** (MENU) button.
2. Select **Preferences** using the $\blacktriangle/\blacktriangledown$ button, and press the **OK** (OK) or \blacktriangleright button.
3. Select **Language Setting** using the $\blacktriangle/\blacktriangledown$ button, and press the **OK** (OK) or \blacktriangleright button.



1. Menu Audio/Subtitle Language

You can set the language for Menu Audio and Subtitle. Default language is English.

1. Select **Menu Audio/Subtitle Language** using the $\blacktriangle/\blacktriangledown$ button.
2. Press the \blacktriangleright or **OK** (OK) button to display the available **Language List**.
3. Select your desired language using the $\blacktriangle/\blacktriangledown$ button, and press the **OK** (OK) button.

7. Setting Preferences

2. Subtitle Display

You can select whether or not to display the Subtitle if provided.

1. Select **Subtitle Display** using the $\blacktriangle/\blacktriangledown$ button.
2. Press the \blacktriangleright or **OK** (\odot) button to display the **Auto** or **Manual** option.
3. Select your desired option and press the **OK** (\odot) button.

Auto	Subtitles are displayed automatically in the predefined subtitle language.
Manual	Subtitles are displayed in the language when you select the subtitle language by pressing the Subtitle (CC) button at remote control.

3. Subtitle Font

You can select the Subtitle font.

1. Select **Subtitle Font** using the $\blacktriangle/\blacktriangledown$ button.
2. Press the \blacktriangleright or **OK** (\odot) button to display the **Variable** or **Fixed** option.
3. Select your desired option and press the **OK** (\odot) button.

Variable	Uses the horizontally variable Subtitle Font.
Fixed	Uses the fixed Subtitle Font.

7.3 Time Setting

You can specify the current time and Power On/Off time.

1. Press the **MENU** (☐) button.
2. Select **Preferences** using the $\blacktriangle/\blacktriangledown$ button, and press the **OK** (\odot) or \blacktriangleright button.
3. Select **Time Setting** using the $\blacktriangle/\blacktriangledown$ button, and press the **OK** (\odot) or \blacktriangleright button.



1. Setting Current Time

You can set the GMT Offset for current time.

1. Select **GMT Offset** using the ▲/▼ button.
2. Press the ► or **OK** (⊙) button to display **GMT list**. GMT is changed by from 30 minutes to 1 hour.
3. Select your GMT offset using the ◀/▶ buttons, and press the **OK** (⊙) button.



Note:

- The current time is set automatically whenever GMT Offset changes.
- The default item is **Auto**. If GMT Offset is **Auto**, it is automatically set depending on your country.

2. Power On

You can set the time when the product is automatically powered on.

1. Select **Power On** using the ▲/▼ button, and press the ► or **OK** (⊙) button.
2. Select either **Enable** or **Disable** the Power On Control.
Enable Uses the Power On Control and sets the Power on time.
Disable Not uses the Power On Control.
3. If **Enable** has been selected, enter the **Channel No** and **Time** using the **NUMERICAL** (0-9) buttons, and press the **OK** (⊙) button.



7. Setting Preferences

3. Power Off

You can set the time when the product is automatically powered off.

1. Select **Power Off** using the $\blacktriangle/\blacktriangledown$ button, and press the \blacktriangleright or **OK** (OK) button.
2. Select either **Enable** or **Disable** the **Power Off** using the $\blacktriangle/\blacktriangledown$ button, and press the **OK** (OK) button.

Enable Uses the Power Off and sets the Power Off time.
Disable Not uses the Power Off.

3. If **Enable** has been selected, enter the **Time** using the **NUMERICAL** (0-9) buttons, and press the **OK** (OK) button.

Note: Once Power On/Off is specified, it is repeated everyday.

7.4 Schedule

You can reserve a programme to watch programme at your desired time.

1. Press the **MENU** (MENU) button.
2. Select **Preferences** using the $\blacktriangle/\blacktriangledown$ button, and press the **OK** (OK) or \blacktriangleright button.
3. Select **Schedule** using the $\blacktriangle/\blacktriangledown$ button, and press the **OK** (OK) or \blacktriangleright button.
4. **Reserved Pregoramme List** is displayed on the screen. To edit the existing reservation, select your desired reservation, and press the **OK** (OK) button. To add a new reservation, select a blank list and press the **OK** (OK) button.



Note: For detailed information about Schedule, refer to **Chapter 6.3 Viewing Reserved Programme**.

7.5 A/V Control

You can set Audio or Video Output Control.



1. Press the **MENU** (MENU) button.
2. Select **Preferences** using the $\blacktriangle/\blacktriangledown$ button, and press the **OK** (OK) or \blacktriangleright button.
3. Select **AV Control** using the $\blacktriangle/\blacktriangledown$ button, and press the **OK** (OK) or \blacktriangleright button.



GB 40


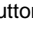

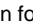
1. TV-SCART/VCR-SCART

You can set TV/VCR-SCART Output.

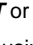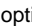1. Select **TV-SCART** or **VCR-SCART**  button, and press the **OK**  or  button.
2. Select one option using the / button, and press the **OK**  or  button.


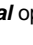
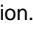

2. Audio Output

Set the Audio Output.

1. Select **Audio Output**  button, and press the **OK**  or  button.
2. Select one option from **Stereo** or **Mono** using the  button.

3. Audio Output Format

You can select the priority of audio.


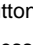



1. Select **Audio Output Format** using the  button.
2. Press the **OK**  or  button to display the **PCM** or **Dolby Digital** option.
3. Select your desired option and press the **OK**  button.


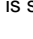
PCM Set when connecting to an audio system without a Dolby Digital, DTS, or other special decoder.

Dolby Digital You can listen sound in Dolby Digital mode. However, if you select Dolby Digital, you cannot change the audio language.

4. Screen Ratio



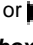
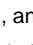

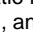
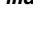
You can set the aspect ratio of your TV.

1. Select **Screen Ratio**  button, and press the **OK**  or  button.
2. Select one option from **4:3** or **16:9** using the  button, and press the **OK**  button.

Note: If 2 options are provided, you can switch the option at a time using the **OK**  button. Namely, Whenever you press the **OK**  button, Screen Ratio is switched between 4:3 and 16:9.

5. Display Format

You can select the Display Format according to TV Screen Ratio.

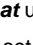1. Select **Display Format** using the  button, and press the **OK**  or  button.
2. If the Screen Ratio is set to **4:3**, you can select one from **Auto/Letter box/Center Mode** using the  button, and press the **OK**  button.
3. If the Screen Ratio is set to **16:9**, you can select one from **Auto/Pillar box/Full mode** using the  button, and press the **OK**  button.

7. Setting Preferences

7.6 UHF Tuning

You can set the UHF channel.

1. Press the **MENU** (⊖) button.
2. Select **Preferences** using the ▲/▼ button, and press the **OK** (⊙) or ► button.
3. Select **UHF Tuning** using the ▲/▼ button, and press the **OK** (⊙) or ► button.



1. UHF Channel

You can select UHF Channels for the TV. The Channel range and Frequency change according to PAL Standard.

1. Select **UHF Channel** using the ▲/▼ button, and press the **OK** (⊙) or ► button.
2. Select channel range based on the following channel criteria using the ▲/▼ button, and press the **OK** (⊙) button.

CH21-CH69	PAL I/G for Europe
CH28-CH69	PAL B for Europe/Australia

2. PAL

You can select the channel range and frequency table.

1. Select **PAL** using the ▲/▼ button, and press the **OK** (⊙) or ► button.
2. Select one option among **PAL I/PAL G/PAL B** using the ▲/▼ button, and press the **OK** (⊙) button.

3. UHF Offset

You can adjust fine tuning setting.

1. Select **UHF Offset** using the ▲/▼ button, and press the **OK** (⊙) or ► button.
2. Select a range between **-4~+4** using the ▲/▼ button, and press the **OK** (⊙) button.

GB 42

7.7 Miscellaneous Settings

1. Press the **MENU** (⊖) button.
2. Select **Preferences** using the ▲/▼ button, and press the **OK** (⊕) or ► button.
3. Select **Miscellaneous Settings** using the ▲/▼ button, and press the **OK** (⊕) or ► button.



1. i-Plate Display Time

You can set the duration during which the Information box is to be displayed when you switch the channel.

1. Select **i-Plate Display Time** using the ▲/▼ button, and press the **OK** (⊕) or ► button.
2. Select a value between 1~20 seconds using the ▲/▼ button, and press the **OK** (⊕) button.

Note: When it is set to 'Disable', the i-Plate will not be displayed when you switch the channel.

2. OSD Transparency

You can set the transparency of On Screen Display.

1. Select **OSD Transparency** using the ▲/▼ button, and press the **OK** (⊕) or ► button.
2. Select one option among **Disable/25/50/75** using the ▲/▼ button, and press the **OK** (⊕) button.

Disable	Fully opaque screen
25, 50, 75	As the number is bigger, the screen is more transparent.

3. Option in CH List

You can set the option of scrambled icon in the **Option in CH List**.

1. Select the **Option in CH List** using the ▲/▼ button, and press the **OK** (⊕) or ► button.
2. Select one option from **On/Off** using the ▲/▼ button, and press the **OK** (⊕) button.

On	Scramble icon display in the channel list.
Off	Scramble icon disappear in the channel list.

8. Installation

This chapter describes how to search for channels and a series of procedures.

8.1 Automatic Search

If your receiver is connected to the aerial and television, you can automatically search channels without entering any other information.

1. Select **MENU** (⊖) button.
2. Select **Installation** using the ▲/▼ button, and press the **OK** (⊙) or ► button.
3. Select **Automatic Search** from Installation menu using the ▲/▼ button, and press the **OK** (⊙) or ► button.
4. Receiver starts to search channels automatically.



Search

Wait while the receiver searches for the channels, this may take a few minutes.

1. During operating search, the cursor is located at **Stop**. Therefore, if you press the **OK** (⊙) button during searching, the operation is stopped and the channels found until then will be displayed.
2. If search operation is successfully completed, and the channel does not exist, press the **OK** (⊙) button and try to reset the search operation again if necessary.
3. You can delete unnecessary channels from the searched channels. Select your desired channels to delete and press the **OK** (⊙) button. Then select **Delete** and press the **OK** (⊙) button. To delete all channels, select **Select All** to select all channels, select **Delete**, and press the **OK** (⊙) button.
4. When completing Channel Search and deleting unnecessary channels, select **Save** to save the changes.




8.2 Manual Search

You can search channels manually by searching parameters, if you know the MUX information.

1. Channel Number

Enter your desired frequency channel to search. When entering frequency channel value, the appropriate frequency value is entered.

1. Select **Channel** using the ▲/▼ button, and press the **OK** (⊙) or ► button.
2. Select one of channel using the ▲/▼ button, and press the **OK** (⊙) button.

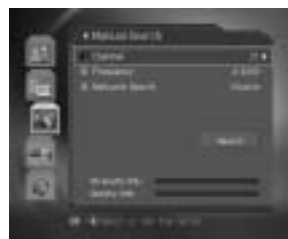

2. Frequency

Enter the your desired frequency to search directly. When entering frequency, the appropriate channel for the entered frequency is automatically displayed on Channel.

1. Select **Frequency** using the ▲/▼ button, and press the **OK** (⊙) or ► button.
2. Enter frequency using the **NUMERICAL** (0-9) button and press **OK** (⊙) button.



3. Network Search

If specified frequency channel information and other channel information are provided together, the channel, which belongs to other frequency channel, is also searched.

1. Select **Network Search** using the ▲/▼ button, and press the **OK** (⊙) or ► button.
2. Select one option between **Enable** and **Disable** using the ▲/▼ button.



8. Installation


8.3 Default Setting

Default Setting restores the receiver to the default settings.

Warning: Please note that once you perform Default Setting, all data such as Channel List, and User Configured data are deleted.

To perform Factory Default:

1. Press the **MENU** (☰) button.
2. Select **Installation** using the **▲/▼** button, and press the **OK** (⊙) or **▶** button.
3. Enter **Password** using the **NUMERICAL** (0-9) button.
4. Select **Default Setting** using the **▲/▼** button, press the **OK** (⊙) or **▶** button.
5. Select **Yes** and press the **OK** (⊙) button to restore all setting to Factory Default. Select **No** and press the **OK** (⊙) or **BACK** (⏪) button to return to the previous menu.
6. Confirm again to start loading default setting. Enter **Password** using the **NUMERICAL** (0-9) button to perform restoring.
7. When completing the default setting, press the **OK** (⊙) button to automatically run the **Installation Wizard**. When default setting is completed, Installation Wizard is automatically displayed, which helps Channel Search. For detailed information about Installation Wizard, refer to **3. Installation Wizard**.

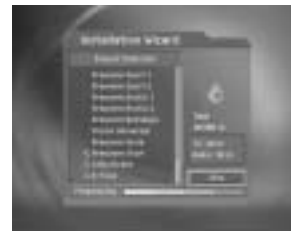

8.4 Antenna Power

When you connect an active antenna to the **ANTENNA IN** connector on the rear of the receiver.

1. Press **MENU** (⊖) button.
2. Select **Installation** using the ▲/▼ button, and press the **OK** (⊕) or ► button.
3. Select **Antenna Power** from Installation menu using the ▲/▼ button.
4. Press the **OK** (⊕) or ► button to select **On** or **Off**.
 - On** 5V power supply from the active antenna cable.
 - Off** No power supply.



9. Software Update

In order to maintain proper performance of this product, it is essential to have the most up to date software. The latest news and release of software versions may be found at Humax website - <http://www.humaxdigital.com>.

It is recommended that you periodically check for the availability of software upgrade.

9.1 OTA (Over the Air)

OTA, an abbreviation of "over the air", means that downloads the software where the manufacturer reserves the right to decide when and where to release through aerial.

Over the Air(OTA) is simply another alternative for downloading software versions. However, the manufacturer reserves the right to decide when and where this software update can take place by "beaming" latest software versions over the air via aerial. The software update via aerial will only occur under the following circumstances.

1. The equipment should have appropriate loader software.
Caution: Please note that if you don't have normal loader software, the equipment may not be updated or work after software update.
2. The manufacturer decides to release software downloading via a designated aerial
3. The equipment must be "tuned" properly to the same aerial that the manufacturer uses.
4. Update software when the quality of receiving signal strength is high. If the weather is not so good that the quality of receiving signal strength is not recommendable, perform the software upgrade later.

Caution:

- Please be careful to keep the power on and the power cord plugged in during software update. If the power is off during software update, it may cause fatal damage to the product.
- Please be careful not to pull out the Signal line (co-axial Cable) during software update. Update may be interrupted and the product may not work.

Note:

- The product cannot work at all during software update.
- It may take 5 ~10 minutes to update software.
- Scheduling operation cannot work during software update.


1. If new software is found when powering on

1. A message will be displayed to notify that new software is found.
2. Select **Yes** and press the **OK** (OK) button to update the software.
3. Starts downloading new software. Please wait until the updated is completed.
4. When completing the software update, the equipment is automatically powered off and on again.

GB 48

2. If updating software from Menu

1. Press the **MENU** (⊖) button.
2. Select **Installation** using the **▲/▼** button, and press the **OK** (⊕) or **▶** button.
3. Enter **Password** using the **NUMERICAL** (0-9) buttons.
4. Select **Software Update** using the **▲/▼** button, and press the **OK** (⊕) or **▶** button.

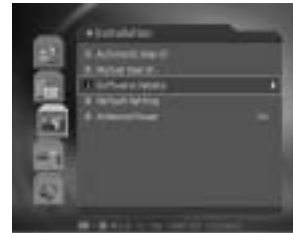

3. If new version of software is detected during watching a programme

1. A message will be displayed to notify that new software is found.
2. Select **YesOff**, and press the **OK** (⊕) button to start upgrading. Select **No** and press the **OK** (⊕) button to return to the previous menu. Select **Later** and press the **OK** (⊕) button to update later. That means the update menu display as soon as you turn on the receiver next time.

4. If using Automatic Update

You can set the product to find HUMAX software update site and update software automatically.

1. Select **Automatic** from **Software Update Menu** screen using the **▲/▼** button, and press the **OK** (⊕) or **▶** button.
2. Automatically search for new software. Select **Stop** and press the **OK** (⊕) button to finish Search.
3. When detecting update software, the following result is displayed. If new software is not found by Automatic, use Manual Update.



GB 49

9. Software Update

4. Select **Yes** and press the **OK** (OK) button to start updating. Select **No** and press the **OK** (OK) button to return to the previous menu without updating.
5. When completing the software update, the product is automatically powered off and on again.



5. Manual Update

You can perform Manual Update only if you know MUX information of software update correctly.

1. Select **Manual Update** from **Software Update** screen using the **▲/▼** button, and press the **OK** (OK) or **▶** button.

Select the channel number which provides update software. You can also enter the frequency instead of channel number in which updated software is provided.

Note: How to setting parameters in **Manual Update** is the same as how to set parameters in **Manual Search**. Refer to **Manual Search**.

2. Select **Search** and press the **OK** (OK) button to search software.
3. It is displayed whether or not New Software exist. If new software does not exist, press the **OK** (OK) button to return to the Manual Update Menu.
4. Select **Yes** and press the **OK** (OK) button to start updating. Select **No** and press the **OK** (OK) button to return to the previous menu.
5. Performs Software Update. Please wait until it is completed.
6. When completing the software update, the product is automatically powered off and on again.




GB 50

9.2 S/W Update from PC

You can connect your receiver to the PC directly and update your software by transferring the new software from the PC. Follow these steps to download new software from PC to this product.

1. Download new software file (HDF files) equivalent for this product model from our website into your computer(<http://www.humaxdigital.com>).
2. Download and install download tool file from our website into your computer.
3. Connect your PC to this product with RS-232C serial cable.
4. Execute installed download tool, and then follow the instructions contained the download tool.
5. Press the **STANDBY** (⏻) button to make this product operating.

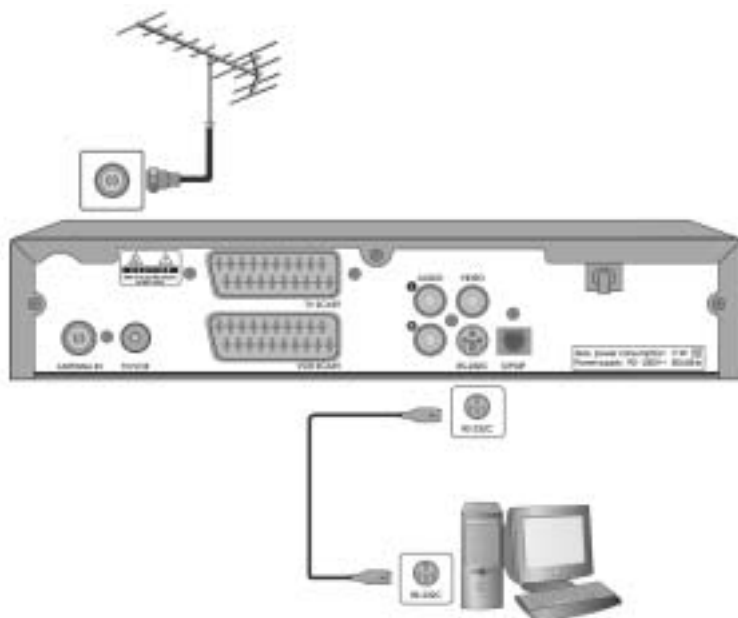

10. System Information

You can view all system information, signal strength and quality.

1. Press the **MENU** (☰) button.
2. Select **System** using the ▲/▼ button, and press the **OK** (⊞) or ► button.



10.1 Status

You can view System information

1. Select **Status** using the ▲/▼ button, and press the **OK** (⊞) or ► button.
2. Confirm the information about **Hardware Version, Software Version, Loader Version, System ID, Update Date, Terminal Serial Number and Viaccess Version.**



10.2 Signal Detection

You can view the signal strength and signal quality receiving for the channel that is currently on AV.

1. Select **Signal Detection** using the ▲/▼ button, and press the **OK** (⊞) or ► button.
2. Displays the Signal Detection information.

10.3 Conditional Access

You can view the current status of conditional access.

1. Select **Conditional Access** using the ▲/▼ button, and press the **OK** (⊞) or ► button.
2. Confirm the information.



11. Games

This product provides various games for user's entertainment.

1. Press the **MENU** (⊖) button.
2. Select **Games** using the ▲/▼ button, and press the **OK** (⊙) or ► button.
3. According to the instruction displayed on screen, you can enjoy the game using ▲/▼/◀/▶ and **OK** (⊙) button.

Note: Press the **EXIT** (⊖) or **BACK** (⊖) button to exit the game.


12. Manipulating your TV using Remote Control

You can manipulate TV using the remote control provided by Humax.

Note: This function may not be supported depending on TV model.

TV code setting

Note: While you are setting TV code, please keep pressing TV button.

1. Point remote control towards the remote control receiving parts of TV.
2. Press the **TV** () button, and the TV button LED blinks once.
Keep pressing **TV** button for 3 seconds, then TV button LED turn on.
Press three numbers of TV code using the **NUMERICAL** (0~9) button orderly.
Refer to the following **Code for TV manufacturer**.
3. TV button LED blink twice when you detach your finger from the TV button.
4. TV power turns on or off when the setting is completed.

[Code for TV manufacturer] Table

Brand	Code	Brand	Code
A MARK	002	ARCAM	062,063
ABEX	016	ARCHER	002
ACTION	110,124	ASUKA	064,071
ACURA	004	ATLANTIC	098
ADMIRAL	030,042,076,099,123	AUDINAC	081
ADYSON	016,063	AUDIOSONIC	018,071
AIKO	029	AUDIOVOX	002,029,052,084
AKAI	015,099,109,124	AUMARK	026
AKURA	064,071	AUTOVOX	068,076,097
ALARON	051,055,062	BARCO	086
ALBA	004,017,018,064,123	BASIC LINE	004,064
ALLOGAN	118	BAUR	018,087,097,099,102, 108
AMBASSADOR	049	BAYSONIC	052
AMPLIVISION	063	BEAUMARK	050
AMSTRAD	004,018,047,049,145	BEC	099,110,124
ANAM	003,004,052	BECRESE	040,099,108,109,110
ANAM NATIONAL	024	BELCOR	009
ANITECH	004,071	BELL & HOWELL	006,038,106
ANITECH	071	BEON	018
ANSONIC	127	BINATONE	063
AOC	002,009,015,056		

GB 54

Brand	Code	Brand	Code
BLACKSTRIPE	040	CITIZEN	040,057,074
BLACKSTRIPE	106	CLAIRTONE	056
BLACKSTRIPE	108	CLARIVOX	018
BLAUPUNKT	059,060,061	CLARIVOX	125
BLUE SKY	064	CLATRONIC	098
BLUE STAR	075	CLATRONIC	127
BOOTS	063	CME	004,005,017,018,028, 042,049,063,065,066, 068,076,079,087
BOSCH-BAUER	098	CONCERTO	025
BPL	075	CONDOR	098
BRADFORD	052	CONIC	110
BRINKMANN	123	CONTEC	004,017,052,056,062
BRITANNIA	062	CONTINETAL	141
BROCKWOOD	009	CRAIG	105
BROKSONIC	002,067,085	CRIPTOVISION	023
ROTHER	071	CROSLEY	110
BRUNS	126	CROSLEY	004,018,019,052,127
BSR	093,118	CROWN	098
BTC	064	CTC	006,015,019,020,021, 023
BUSH	004,017,018,064,075, 093,099,117	CURTIS MATHES	026,030,035,038,025, 040,044,084,106
CANDLE	015,025,057	CXC	052
CAPEHART	124	CYBERTON	064
CAPSONIC	071	DAEWOO	004,009,018,019,029, 084,133
CARNIVALE	015	DAINICHI	064
CARREFOUR	017	DANSAI	018
CARVER	023,046	DAYTON	004,009,019,018
CASCADE	004	DE GRAAF	006
CATHAY	018	DECCA	018,028,129
CCE	063,018,078	DENON	035
CCI	115	DESMET	098
CENTURION	018	DIXI	003,004,018,126
CGE	101,123	DUAL	097
CIE	133		
CIMLINE	004,117		
CINERAL	029,064		
CITIZEN	015,019,025,026,029,		

12. Manipulating your TV using Remote Control

Brand	Code	Brand	Code
DUAL TEC	063	FUNAI	047,051,052,071,118
DUMINT	127	FUTURETECH	052
DUMONT	007,009	GALAXIS	123,142
DYNATECH	063	GBC	099
EB TELECOM	105	GE	011,013,020,021,024, 030,034,050,075,084
EC	018,028,063,095,110, 129	GELOSO	004,099
ECTEC	081	GENEXXA	042,064
EDISON	052	GIBRALTER	007,009,015
ELECTROBAND	056	GO VIDEO	026
ELECTROHOME	080,106,110	GOLDSTAR	000,001,009,015,016, 018,019,025,033,050, 063,071,093,110,124, 140
ELECTRONIC	071,133,146,018,028,	GOODMANS	017,018,028,051,063, 133
ELEKTA	071	GPM	064
ELIN	018	GRADIENTE	022,025,046,082
ELITE	040,064,098,106	GRADIN	098
ELMAN	127	GRAETZ	042,099
ELTA	004	GRANADA	018,028,063,109,124
EMERSON	009,019,038,049,050, 051,051,053,054,055, 056,067,072,074,075, 085	GRANDIN	075
ENVISION	015	GRUNDIG	018,059,060,068,137
ERRES	018	GRUNPY	051
EURO-FEEL	071	GRUNPY	052
EUROMANN	071	HALIEAX	071
EUROPHON	127	HALLMARK	050
FERGUSON	018	HANSEATIC	018,089,097,098,099, 118,119
FIDELITY	062,097,104	HARLY DAVIDSON	051
FINLADIA	106	HARMAN KARDON	023
FINLUX	018,028,051,093,129	HARVARD	052
FIRST LINE	118,004,062,063	HCM	004,071,075
FISHER	038,041,063,097,106, 108,126	HEMMERMANN	097
FORMENTI	018,098,103	HINARI	004,017,018,051,064
FRONTECH	042,071,099	HITACHI	094,095,096,099,102,
FUJITSU	028,051,124		

GB 56

Brand	Code	Brand	Code
HITACHI	108,109,110,111,112, 113,114,124,148,016, 017,025,031,032,035, 037,042,048,063,066, 090,091	KEC	052
HUANYU	062	KENDÓ	018,099,117,119,127
HUSPI ELEKTRONIK	123	KENWOOD	009,015
HYPERSION	134	KINGSLEY	062
HYPSON	018,071,075	KLH	124
HYPSON	071,075	KLOSS	012
ICE	063,071	KMC	033
ICES	064	KONIG	004,005,017,018,042, 061,068
IMPERIAL	092,099,101,123	KORPEL	018
INDESIT	068	KORTING	098
INDIANA	018	KOYODA	004
INFINITY	023	KTV	015,019,052,055,056, 063,074
INGEKEN	139	KUBA	097
INGELEN	042	LENCO	071,118,124
INNOHIT	028,124	LG	025
INNOVA	018	LIESENK & TTER	018
INTEQ	007	LIFETEC	071
INTERBUY	071	LLOYTRON	016
INTERFUNK	018,042,095,099	LOGIK	000,006
INTERVISION	018,063,071,127,144	LUMA	099
ISUKAI	064	LUXMAN	025
ITT	042,099,108	LUXOR	068,094,099,102,124
JACSON	129	LXI	007,020,023,038,040, 050,106
JBL	023	M ELECTRONIC	004,018,042,063,097, 127
JCB	137	MAGNAFON	127
JEC	040	MAGNASONIC	106
JVC	017,022,045,054	MAGNAVOX	010,012,014,015,017, 023,051,057,058,110
KAISUI	004,062,063,064,075	MAJESTIC	006
KAMP	062	MANDOR	071
KAPSCH	042,095,099	MANESTH	063,071,098,117
KATHREIN	089	MARANTZ	015,018,023,089
KAWASHO	062,077		

12. Manipulating your TV using Remote Control

Brand	Code	Brand	Code
MARK	018	NIKKAI	016,018,028,040,062, 064,071,124
MATSUI	004,005,018,049,063, 092,097,117	NIKKO	007,015,020,029,038, 040,050
MATSUSHITA	021,070	NISATO	081
MC MICHAEL	110	NOBLEX	083
MEDIATOR	018	NOKIA	071,094,095,096,099, 106,108,143
MEGATRON	002,035,050,109	NOSHI	008
MEI	056	NTC	029
MEMOREX	004,006,025,026,033, 036,038,050,070,071, 106	OCEANIC	042,099,106,118
MEMPHIS	124	ONWA	052
MGA	009,015,036,039,050	OPTIMUS	038,044,070
MIDLAND	007,016,019,020,021, 034	OPTIONICA	030,043
MINERVA	068	ORION	018,049,051,067,085, 097,098,118
MINUTZ	011	OSAKI	016
mitsubishi	009,017,030,036,039, 050,068	OSAKI	028
MIVAR	062	OSAKI	063
MOTOROLA	024,030	OSAKI	064
MTC	009,015,025,026,056, 062	OSAKI	071
MULTISTANDARD	127	OSAKI	124
MULTITECH	004,052,062,063,099, 127	OSO	064
MUTIMEDIA	132	OSUME	016,028,124
NAD	040,044,050	OTTO VERSAND	017,018,059,063,087, 089,093,097,098,099, 102,108,117,118
NAONIS	099	PALLADIUM	099
NATIONAL	068	PANAMA	063,071
NEC	009,015,017,025,046	PANASONIC	000,020,021,022,023, 024,026,030,035,036, 038,040,042,043,050, 065,068,070,079,099
NECKERMANN	018,059,087,089,099, 102	PATHE CINEMA	062,098
NEI	018	PAUSA	004
NESCO	051	PCE/PEC	040,106,108
NETSAT	018		

GB 58

Brand	Code	Brand	Code
PENNEY	001,102,008,009,011, 013,015,016,019,020, 021,025,026,034,040, 050	RADIOTONE	071
PHASE	016	RADIX	108
PHILCO	009,010,012,014,015, 023,035,057,058,065, 123	RANK ARENA	017
PHILIPS	007,008,009,010,011, 012,013,018,019,023, 089,110,124,138	RCA	008,009,020,021,030, 034
PHONOLA	018,098	REALISTIC	009,015,016,019,025, 038,043,050,052,106
PILOT	009,015,019	REKORD	149
PIONEER	042,044	REVOX	018
POLICOM	068	REX	042,071,076,099
POLYRON	071	RFT	088,126
PORTLAND	009,019,029	RHAPSODY	055,056,062
PRANONI PRINCE	099	R-LINE	018
PRIMA	040,106	ROADSTAR	004,064,071
PRINZ	124	ROYAL LUX	131
PRISM	021	RTF	018
PROFEX	004	RUNCO	007,015
PROLINE	119	SABA	042,095,099
PROSCAN	015,020	SAGEM	139
PROTEC	099,127	SAISHO	004,005,049,071,117
PROTECH	004,018,063,071	SAKIO	071
PROTON	002,050	SALORA	042,094,099,102,106, 124
PULSAR	007,009,110,124	SAMBERS	127
QUASAR	021,024,043,070	SAMPO	015,016,019
QUELLE	005,018,087,093,097, 099,108,117,118	SAMSUNG	004,009,015,016,018, 019,025,026,050,063, 071,078,089,124,137
QUESTA	017	SAMSUX	019
RADIO SHACK	009,015,016,019,020, 025,038,043,050,052, 106	SANDRA	062
RADIOLA	018	SANSEI	084
		SANSUI	085
		SANYO	005,017,028,038,041, 106,107,108,124,129
		SBR	018
		SCHAUB LORENZ	099

12. Manipulating your TV using Remote Control

Brand	Code	Brand	Code
PENNEY	001,102,008,009,011, 013,015,016,019,020, 021,025,026,034,040, 050	RADIOTONE	071
PHASE	016	RADIX	108
PHILCO	009,010,012,014,015, 023,035,057,058,065, 123	RANK ARENA	017
PHILIPS	007,008,009,010,011, 012,013,018,019,023, 089,110,124,138	RCA	008,009,020,021,030, 034
PHONOLA	018,098	REALISTIC	009,015,016,019,025, 038,043,050,052,106
PILOT	009,015,019	REKORD	149
PIONEER	042,044	REVOX	018
POLICOM	068	REX	042,071,076,099
POLYRON	071	RFT	088,126
PORTLAND	009,019,029	RHAPSODY	055,056,062
PRANONI PRINCE	099	R-LINE	018
PRIMA	040,106	ROADSTAR	004,064,071
PRINZ	124	ROYAL LUX	131
PRISM	021	RTF	018
PROFEX	004	RUNCO	007,015
PROLINE	119	SABA	042,095,099
PROSCAN	015,020	SAGEM	139
PROTEC	099,127	SAISHO	004,005,049,071,117
PROTECH	004,018,063,071	SAKIO	071
PROTON	002,050	SALORA	042,094,099,102,106, 124
PULSAR	007,009,110,124	SAMBERS	127
QUASAR	021,024,043,070	SAMPO	015,016,019
QUELLE	005,018,087,093,097, 099,108,117,118	SAMSUNG	004,009,015,016,018, 019,025,026,050,063, 071,078,089,124,137
QUESTA	017	SAMSUX	019
RADIO SHACK	009,015,016,019,020, 025,038,043,050,052, 106	SANDRA	062
RADIOLA	018	SANSEI	084
		SANSUI	085
		SANYO	005,017,028,038,041, 106,107,108,124,129
		SBR	018
		SCHAUB LORENZ	099

GB 60

Brand	Code	Brand	Code
SCHNEIDER	018,064,071,097,136, 143,147	SOUND&VISION	127
SCIMITSU	009	SOUNDESIGN	050,051,052,057
SCOTCH	050	SOUNDWAVE	018
SCOTT	009,050,051,052,067	SPECTRA	133
SEARS	020,023,025,038,040, 041,047,050,051,106	SPECTRICON	002
SEG	017,063,071,126,127	SQUAREVIEW	047
SEI	049	SR2000	106
SEI-SINUDYNE	097,099,117,118,127	SSS	009,052
SELECO	042,076,099,100,119, 120,122	STANDARD	004,063,064,098
SEMIVOX	052	STARLITE	052
SEMP	040	STERN	042,076,099
SENTRA	040	SUNKAI	117,118
SHARP	017,019,030,043	SUPERTECH	097
SHOGUN	009	SUPRA	025
SHORAI	118	SUSUMU	064,010,012,014,015, 023,057,058,080
SIAREM	127	SYMPHONIC	047
SICATEL	121	SYSLINE	018
SIEMENS	018,059,060,061	TADNDY	124
SIGNATURE	006,040	TANDY	028,030,042,063,064
SILVER	017	TASHIKO	110
SIMPSON	057,058	TASHKO	017,063
SINGER	127	TATUNG	002,018,024,028,063, 124
SINUDYNE	049	TEC	063,133
SKANTIC	099	TECHLINE	127
SKY	018	TECHNEMA	098
SOGERA	098	TECHNICS	007,020,021,070
SOLAVOX	016	TECHNISAT	130
SOLAVOX	042	TECHNOL ACE	051
SONITRON	108	TECHWOOD	002,021,025
SONOKO	004,018,071	TEKNIKA	006,009,019,023,025, 026,029,036,051,052, 057
SONOLOR	042	TELECO	135
SONTEC	018	TELEFUNKEN	025
SONY	005,017,073,087		

12. Manipulating your TV using Remote Control

Brand	Code	Brand	Code
TELEMEISTER	098	VECTRO RESEARCH	015
TELETECH	004	VESTEL	018
TELETON	017,057,063,099	VICTOR	022
TELEVIDEON	098	VIDEOTECHNIC	063
TENSAI	064,093,098,118	VIDEOTON	094
TESLA	135	VIDIKRON	023
TEXET	062,064	VIDTECH	009,017,050
THOMAS	110	VISA	004,005,017,018,042, 068
THOMAS	124	VISION	098
THOMSON	068	VOXSON	042,099
THORN	018,028,040,087,107, 108,110,112,128,129	VTQ	126
TMK	025,049,050	WALTHAM	063,094,099
TOKAI	124	WARDS	006,009,010,011,013, 014,015,023,025,034, 040,043,050,051,058
TOMASHI	075	WATSON	018,098
TOSHIBA	017,026,038,040,069, 106,108	WATT RADIO	097,127
TOSONIC	056	WEGA	017
TOTEVISION	019	WHITE	018,062,098,106
TOWADA	099,127	WESTINGHOUSE	
TRIUMPH	049,069	WORLD-TECH	133
TV TEXT	089	YAMAHA	009,015
UHER	098	YOKO	018,063,071,133
UHER	127	YORK	108
ULTRA	081,124	ZANUSSI	076,099
ULTRAVOX	127	ZENITH	006,007,029
UNIVERSAL	011	ZONDA	002
UNIVERSAL	013		
UNIVERSUM	018,071		

GB 62

13. Menu Map



14. Trouble Shooting

14.1 Trouble Shooting

Before contacting your local service, please make sure following instructions. If the product does not work normally after completing the following trouble shooting, please contact your local product distributor or service center.

1. No message is displayed on the front panel or product has no power
 - Check the main power cable and check that it is plugged into a suitable power outlet.
 - Check whether Power Switch is On.
2. No picture
 - Make sure that the product is in Operation Mode.
 - Make sure that the AV Cable is firmly connected to the TV.
 - Make sure that aerial line is correctly connected to the equipment.
 - Check the brightness level of TV.
 - Check the channel is on air.
3. Poor picture & sound quality
 - Install aerial where there is not obstacle ahead.
 - Make sure to avoid putting mobile phone or microwave oven near around the equipment.
 - Use 75 Ω coaxial cable to connecting TV and aerial.
4. No or poor sound
 - Check the volume level of the TV.
 - Check the Mute status of the TV and product.
 - Press the Audio button to change the Sound Track type.
5. Remote control does not operate
 - To manipulate the equipment with remote control, the remote control's emitting part should directly point towards the receiving part of receiver's remote control.
 - Check the battery of Remote control.
6. Reservation is unavailable
 - Check whether it is not overlapped with other reservation.
 - Check whether the power switch is off.

GB 64

14.2 Error Message

Error message	Possible causes	What to do
No or bad signal	The aerial is not pointing properly.	Adjust aerial. Check the cable from the aerial. If you cannot resolve the problem you may need to have your aerial and installation tested by a professional.
The channel is scrambled or not available.	The channel has signal, but no audio or video. The channel is not deleted by broadcasting company. The channel is for data broadcasting.	Confirm if the channel is currently on air. Cannot watch the channel in usual way.
The channel is scrambled.	This digital terrestrial receiver does not support the service that enables to descramble the scrambled channels.	
The audio is not available.	The channel has signal, but no Audio.	Press the Audio button to confirm if the channel has Audio.

15. Specification

Tuner & Channel	
Input Connector	IEC-Type, IEC 169-24, Female
RF Loop through Output connector	IEC-Type, IEC 169-24, male
Frequency Range	470MHZ to 862MHz (UHF)
Signal Level	-10 to -70dBm
Demodulation	OFDM
Mode	2K, 8K
FEC mode	1/2, 2/3, 3/4, 5/6 & 7/8
Guard Intervals	1/4, 1/8, 1/16 & 1/32
MPEG Transport Stream A/V Decoding	
Transport Stream	MPEG-2 ISO/IEC 13818
Profile Level	MPEG2 MP@ML
Input Rate	15 Mbit/s Max
Aspect Ratio	4:3, 16:9 Letter box
Video Resolution	720 x 576
Audio Decoding	MPEG/MusiCam Layer I & II
Audio Mode	Single /Dual mono/ Stereo /Joint stereo

GB 66

Memory	
Flash Memory	2 Mbytes
Graphics (MPEG) & System Memory	8 Mbytes
EEPROM	8 Kbytes
RF-Modulator	
RF/Loop-through Output Connector	75 Ω , IEC 169-2
Frequency	470 ~ 862 MHz
Output Channel	CH 21 ~ 69
TV standard	PAL I/G/B
Preset Channel	CH 36
A/V & Data In/Out	
Video	1 Output RCA
Audio R/L	2 Output RCA
RS-232C	Transfer Rate: 115,200 bps, 3 pin Socket type
Power Supply	
Input Voltage	AC 90 ~ 250V, 50/60Hz
Type	Switching Mode Power Supply (SMPS)
Power Consumption	Operation mode : Max. 10 W Stand-by mode : Max. 5 W
Protection	Separate internal fuse & Lightning protection
Physical Specification	
Size	260 mm X 50 mm X 182 mm
Weight (Net)	1.2 kg
Operating Temperature	0 °C to +45 °C
Storage Temperature	-10 °C to +70 °C

GB 67

16. Glossary

Aerial

A device that collects and amplifies electromagnetic waves. Also called "Antenna"

Coaxial cable

A specially designed and shields cable that can transport signals with high frequency.

Frequency

The number of cycles or events per one second, which is expressed in the unit of hertz

FTA (Free- To-Air)

An unscrambled broadcast, which you can view without additional payments to a service provider.

MUX

The transmitter/frequency/channel where the programme provider/operator transmit a package of digital channels/services. Usually there are several MUX frequencies with different or same content.

Network

The collection of channels/services that a programme provider/operator offer. These services may be transmitted from one or several MUXes. In the transmitted data stream the operator may transmit a service information table(network information) that is informing the digital terrestrial receiver about all available services in the network

OSD (On Screen Display)

The function that displays the information about the monitor that the user needs or has to know on the screen directly. OSD information includes brightness, contrast, tuning, RGB adjustment, and screen size and positions (top, left, width, and height), and so on.

OTA (Over The Air)

Means that software downloads where the manufacturer reserves the right to decide when and where to release them through aerial.

SCART

A 21-pin connector used for connection of this product, VCR and TV. Also called Euroconnector or Peritel connector.

GB 68

17. Service and Support

You can get information such as a troubleshooting guide, software upgrades and product support guide from the following web sites and call center (Hotline).

Please try to contact to your local dealers first when you have any problem.

Web site and e-mail

Homepage

http://www.humaxdigital.com	English
http://www.humaxdigital.com/Deutsch/	Deutsch
http://www.humaxarabia.com	Arabic

HCSA (Humax Customer Service Area)

Software Download, Information and Technical Q&A	
http://www.humaxdigital.com/hcsa/	English
http://www.humaxdigital.com/Deutsch/hcsa/	Deutsch

E-mail (Technical Q&A)

tech-info@humax-digital.co.uk	Europe & North Africa
techinfo@humax-digital.de	Germany
callcenterME@humaxdigital.com	Middle East
Webmaster@humaxdigital.com	Asia & Other area

17. Service and Support

Call Center

Humax Middle East Call Center (Dubai, UAE)

Tel: +971 (0)4 359 2323 (Open: 9:00 - 20:00 / close on Friday)

E-mail: callcenterME@humaxdigital.com

Open: Local Time in Dubai (GMT+4)

9:00 - 20:00 (Saturday - Thursday, close on Friday)

Support Language: English/Arabic

Humax Hotline (Germany)

Germany: 01805 778 870 (€0,12/Min)

Other Countries: + 49 1805 778 870 (€0,12/Min+ International Call Charge)

Open: Local Time in Germany (GMT+1)

8:00 - 20:00 (Monday - Friday)

8:00 - 18:00 (Saturday)

Support Language: Deutsch/English

Humax BTCL Hotline (Premiere Model)

Germany: 01805-778900 (€0,12/Min)

Austria: 0900-900633 (€0,33/Min)

For hardware repair, please refer to support website. (Homepage or HCSA)

GB 70

www.humaxdigital.com

HNVAFOXT.100GB

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>