

# Tek Partner Universal Remote Control User's Manual BW-0561-RD

Your Tek Partner Universal Remote Control is a state of the art device that integrates many different infrared (IR) remote controls into one. The Tek Partner is pre-programmed at the factory so all you need to do is follow the instructions in this manual and you will be ready to go! The Tek Partner replaces up to 4 separate remote controls to operate your television (TV), video cassette recorder (VCR), digital video disc (DVD) and cable box or satellite receiver (CBL/SAT). Once programmed, the Tek Partner functions just like your original remote control. Just aim the Tek Partner at your device and press the desired functions. It's that easy! In addition, the Tek Partner has large, soft buttons that illuminate bright red when they are pressed. No other remote control is as user friendly as the Tek Partner.

## Specifications

**Operating System:** Pre-programmed infrared (IR) remote control.

**Compatibility:** Replaces most brands of IR remote controls for TVs, VCRs, DVDs, Cable Boxes and Satellite Receivers.

**Power Requirements:** 4 AA size batteries (not included).

**Size:** 8-1/2" x 5-1/2" x 2-1/2" (LxWxH)

NOTE: The Tek Partner is not compatible with radio frequency (RF) devices or digital converter boxes.

## Table of Contents

Introduction.....	1
Specifications.....	1
Setup.....	2
Programming.....	2
Power Scan.....	2-3
ID Recall.....	3
Volume Punch Through.....	3-4
Master Power.....	4
Menu Mode.....	4
Frequently Asked Questions.....	5
Care & Maintenance.....	5
Device Codes.....	6-9
Function Table.....	10

BW-0561-RD  
0813

Visit our website at:  
[www.bigbuttonremotes.com](http://www.bigbuttonremotes.com)

Bay Products, L.L.C.  
803 West Alfred Street  
Tampa, FL 33603-5405  
Tel: (813) 871-0389  
Fax: (888) 260-5370

## **Setup**

1. Remove the battery cover from the back of the remote control.
2. Insert 4 new AA batteries.
  - a. Make sure the polarity of the batteries matches the diagram inside the battery compartment (- matches with - and + matches with +).
3. Push the battery cover back into place.

## **Programming**

MODE (3 seconds) → digit → digit → digit

1. Make sure you are in front of the device you want to program with the power turned on.
2. Using Device Codes (see pages 6-9), locate the brand name of your device.

NOTE: All codes are 3 digits and there may be more than 1 code listed for your device.

3. On the remote control, press and hold the MODE button (TV, VCR, DVD or CBL/SAT) until the indicator light in the upper left hand corner begins to blink (this takes about 3 seconds).
4. As soon as the indicator light begins to blink, release the MODE button.
5. On the remote control, enter the 3 digit code for your device found in Device Codes.
6. Try different functions on the remote control to make sure the correct code was entered.
  - a. If only some or none of the functions work, repeat the steps above and try the next code located in Device Codes. If there are no more codes listed, try Power Scan.

## **Power Scan**

MODE (3 seconds) → PWR → ▲ (PLAY) → ENTER (SELECT)

The Power Scan function checks every pre-programmed code in the remote control. Use Power Scan if:

- A. Your device is not listed in Device Codes.  
or
  - B. You cannot program the remote control using codes located in Device Codes.
1. Make sure you are in front of the device you want to program with the power turned on.

2. On the remote control, press and hold the MODE button (TV, VCR, DVD or CBL/SAT) until the indicator light in the upper left hand corner begins to blink (this takes about 3 seconds).
3. As soon as the indicator light begins to blink, release the MODE button.
4. On the remote control, press and release the PWR button.
5. On the remote control, slowly press and release the ▲ (PLAY) button until the device (TV, VCR, DVD or CBL/SAT) powers off.
  - a. Each time you press the ▲ (PLAY) button, the remote control is checking the next code and trying to turn off the device.
6. As soon as the device powers off, press and release the ENTER (SELECT) button on the remote control.
  - a. Make sure that you do not press the ▲ (PLAY) button after the device powers off. If you do this, the remote control will move to the next code. When you press the ENTER (SELECT) button, the code is programmed into the remote control.
7. Try different functions on the remote control to make sure it is programmed properly.
  - a. If only some or none of the functions work, repeat the steps above.

NOTE: Be patient, there are dozens of codes for each type of device.

### **ID Recall**

MODE (3 seconds) → MENU/PREV. CH (RECALL)

The ID Recall function will show you the code for any programmed device.

1. On the remote control, press and hold the MODE button (TV, VCR, DVD or CBL/SAT) until the indicator light in the upper left hand corner begins to blink (this takes about 3 seconds).
2. As soon as the indicator light begins to blink, release the MODE button.
3. On the remote control, press and release the MENU/PREV. CH (RECALL) button.
4. As soon as you release the MENU/PREV. CH (RECALL) button, the indicator light in the upper left hand corner will show you the code for your device by blinking the 100's, 10's and 1's of your code.
5. Count the number of blinks to determine the code. A '0' in any location is represented by a fast flicker.

Example: Code 102 is shown as BLINK <pause> FLICKER <pause> BLINK, BLINK.

### **Volume Punch Through**

CBL/SAT (3 seconds) → CBL/SAT (hold) → TV

The Volume Punch Through function allows you to change the volume on your TV while in CBL/SAT mode.

1. Make sure that you program the remote control for your TV and Cable Box/Satellite Receiver.
2. On the remote control, press and hold the CBL/SAT button until the indicator light in the upper left hand corner begins to blink (this takes about 3 seconds).
3. As soon as the indicator light begins to blink, release the CBL/SAT button.
4. On the remote control, press and hold the CBL/SAT button and then press the TV button (while holding the CBL/SAT button) and then release both buttons.

### **Master Power**

MODE (3 seconds) → PWR → PWR

The Master Power function allows you to turn the power on or off for all programmed devices at the same time.

1. Make sure that you program the remote control for all of your devices.
2. Turn on all of your devices.
3. On the remote control, press and hold the MODE button (TV, VCR, DVD or CBL/SAT) until the indicator light in the upper left hand corner begins to blink (this takes about 3 seconds).
4. As soon as the indicator light begins to blink, release the MODE button.
5. On the remote control, press and release the PWR button.
6. Again, on the remote control, press and release the PWR button.
7. To disable Master Power, repeat the steps above.

### **Menu Mode**

The Menu Mode allows you to use the blue arrow buttons (▲, ▼, ◀, ▶) to navigate a programmed device.

1. Make sure that the device you want to use has been programmed into the remote control.
2. Press and release the MENU/PREV. CH (RECALL) button.
  - a. In Menu Mode, use arrow buttons (▲, ▼, ◀, ▶) to navigate.
  - b. Once the desired menu item is reached, press and release the ENTER (SELECT) button to select it.

NOTE: If any button other than ▲, ▼, ◀, ▶ or ENTER (SELECT) is pressed or if no buttons are pressed within 20 seconds, the remote control will exit Menu Mode.

## **Frequently Asked Questions**

### ***Q. Why won't my Tek Partner work?***

A. Make sure you have fresh batteries and that they are installed correctly (see Setup on Page 2). If this does not solve the problem, please call (813) 871-0389 for technical support. We are more than happy to help you.

### ***Q. How do I know which code will work for my device?***

A. Look up the brand name of your device in Device Codes (see Pages 6-9). Each code is 3 digits. Enter one code at a time and test the remote control after each code is entered until you have one that controls all the functions properly. If you do not find a code to match your brand, proceed to Power Scan (see Pages 2-3).

### ***Q. I want my devices to come on all at the same time, what do I do?***

A. Program each of your devices separately and make sure they are all functioning properly. Once they are all programmed, power on all devices. Hold down the device button (TV, VCR, DVD or CBL/SAT) until the indicator light starts to blink, release the device button and press and release the PWR button twice. Repeat for each device (TV, VCR, CBL/SAT or DVD). Master Power should now be enabled. To disable Master Power just repeat the process again (see Master Power on Page 4).

### ***Q. I used the Power Scan option to find a code for my device. How do I know what the code is?***

A. Please follow the instructions on Page 3 for ID Recall.

### ***Q. I cannot get my volume to work on my satellite receiver or cable box, what should I do?***

A. You need to set up Volume Punch Through. See the instructions on Pages 3-4.

## **Care & Maintenance**

1. Do not expose the remote control to direct sunlight, extreme high or low temperatures, liquids or mechanical shock.
2. Do not mix old and new batteries as old batteries have a tendency to leak.
3. Do not use corrosive or abrasive cleaners on the remote control.
4. Do not disassemble the remote control as it contains no user serviceable parts.
5. To keep the remote control clean, periodically wipe it with a dry, soft cloth.

**TV CODES**

**ACER** 131  
**ADMIRAL** 069, 192  
**ADVENT** 159, 241  
**AIWA** 126  
**AKAI** 001, 006, 014, 020, 042, 052, 098, 160, 216  
**AKURA** 361, 362, 363, 364  
**AMPRO** 070  
**ANAM** 045, 055, 057, 076, 095, 106, 109, 112  
**AOC** 001, 132, 135  
**APEX** 164, 216, 365  
**AUDIOVOX** 087, 165  
**BELL&HOWELL** 069  
**BENQ** 309, 310  
**BLU:SENS** 166, 169, 171  
**BROKSONIC** 091, 255  
**CANDLE** 001, 002, 003  
**CENTURION** 038, 170  
**CETRONIC** 045  
**CITIZEN** 001, 002, 003, 045, 092  
**CLASSIC** 045  
**COBY** 311  
**CONTEC** 045  
**CORANDO** 172  
**CRAIG** 045, 055, 157  
**CROWN** 045  
**CURTIS MATHES** 001, 092, 123, 128  
**CXC** 045  
**DAEWOO** 022, 023, 045, 046, 056, 068, 102, 108, 111, 114, 116, 118, 119, 127  
**DELL** 330  
**DIBOSS** 174  
**DISH NETWORK** 176  
**DYNASTY** 045  
**DYNATECH** 063  
**DYNEX** 083, 129, 185, 312  
**ELECTROGRAPH** 187  
**ELECTROHOME** 167  
**ELEMENT** 313  
**EMERSON** 001, 029, 033, 045, 048, 049, 091, 094, 139, 141, 157, 162, 214, 314, 315  
**ENVISION** 001  
**EPSON** 188  
**FUJITSU** 331, 332, 333

**TV CODES**

**FUNAI** 033, 045, 193  
**FUTURETECH** 045  
**GATEWAY** 017, 195, 196  
**GE** 001, 015, 021, 057, 070, 121, 133, 141, 145, 163, 199  
**GOLDSTAR (LG)** 043, 066, 067, 101, 104, 105, 110, 113, 118  
**GRADIENTE** 238  
**GRUNDIG** 334, 349, 350, 351, 352, 353, 354, 355, 356, 357, 358, 359, 360  
**GVA** 316  
**HAIER** 197, 317  
**HARMAN KARDON** 201  
**HISENSE** 148, 200, 318, 319  
**HITACHI** 001, 015, 016, 018, 029, 072, 147, 204, 207, 226  
**HP** 203, 336  
**HUMAX** 337  
**HY-TEK** 093  
**HYUNDAI** 115, 208  
**ILO** 082, 103  
**INFINITY** 247  
**INKEL** 120  
**INSIGNIA** 050, 152, 312  
**JBL** 247  
**JCPENNY** 001, 015, 035, 092, 145  
**JENSEN** 019  
**JVC** 040, 079, 251  
**KAWASHO** 173  
**KEC** 045  
**KENWOOD** 001  
**KLEGG** 209  
**KLH** 075  
**KLOSS** 002, 060  
**KNOLL SYSTEMS** 338  
**KONKA** 339  
**KTV** 001, 045, 162, 248  
**LG (GOLDSTAR)** 043, 066, 067, 101, 104, 105, 110, 113, 118  
**LLOYTRON** 172, 173  
**LODGENET** 069  
**LOEWEE** 211, 247  
**LOGIK** 069  
**LXI** 145, 247  
**MAGNASONIC** 089  
**MAGNAVOX** 001, 003, 005, 010, 011, 012, 013, 014, 015, 016, 017, 018, 019, 020, 021, 022, 023, 024, 025, 026, 027, 028, 029, 030, 031, 032, 033, 034, 035, 036, 037, 038, 039, 040, 041, 042, 043, 044, 045, 046, 047, 048, 049, 050, 051, 052, 053, 054, 055, 056, 057, 058, 059, 060, 061, 062, 063, 064, 065, 066, 067, 068, 069, 070, 071, 072, 073, 074, 075, 076, 077, 078, 079, 080, 081, 082, 083, 084, 085, 086, 087, 088, 089, 090, 091, 092, 093, 094, 095, 096, 097, 098, 099, 100, 101, 102, 103, 104, 105, 106, 107, 108, 109, 110, 111, 112, 113, 114, 115, 116, 117, 118, 119, 120, 121, 122, 123, 124, 125, 126, 127, 128, 129, 130, 131, 132, 133, 134, 135, 136, 137, 138, 139, 140, 141, 142, 143, 144, 145, 146, 147, 148, 149, 150, 151, 152, 153, 154, 155, 156, 157, 158, 159, 160, 161, 162, 163, 164, 165, 166, 167, 168, 169, 170, 171, 172, 173, 174, 175, 176, 177, 178, 179, 180, 181, 182, 183, 184, 185, 186, 187, 188, 189, 190, 191, 192, 193, 194, 195, 196, 197, 198, 199, 200, 201, 202, 203, 204, 205, 206, 207, 208, 209, 210, 211, 212, 213, 214, 215, 216, 217, 218, 219, 220, 221, 222, 223, 224, 225, 226, 227, 228, 229, 230, 231, 232, 233, 234, 235, 236, 237, 238, 239, 240, 241, 242, 243, 244, 245, 246, 247, 248, 249, 250, 251, 252, 253, 254, 255, 256, 257, 258, 259, 260, 261, 262, 263, 264, 265, 266, 267, 268, 269, 270, 271, 272, 273, 274, 275, 276, 277, 278, 279, 280, 281, 282, 283, 284, 285, 286, 287, 288, 289, 290, 291, 292, 293, 294, 295, 296, 297, 298, 299, 300, 301, 302, 303, 304, 305, 306, 307, 308, 309, 310, 311, 312, 313, 314, 315, 316, 317, 318, 319, 320, 321, 322, 323, 324, 325, 326, 327, 328, 329, 330, 331, 332, 333, 334, 335, 336, 337, 338, 339, 340, 341, 342, 343, 344, 345, 346, 347, 348, 349, 350, 351, 352, 353, 354, 355, 356, 357, 358, 359, 360, 361, 362, 363, 364, 365, 366, 367, 368, 369, 370, 371, 372, 373, 374, 375, 376, 377, 378, 379, 380, 381, 382, 383, 384, 385, 386, 387, 388, 389, 390, 391, 392, 393, 394, 395, 396, 397, 398, 399, 400, 401, 402, 403, 404, 405, 406, 407, 408, 409, 410, 411, 412, 413, 414, 415, 416, 417, 418, 419, 420, 421, 422, 423, 424, 425, 426, 427, 428, 429, 430, 431, 432, 433, 434, 435, 436, 437, 438, 439, 440, 441, 442, 443, 444, 445, 446, 447, 448, 449, 450, 451, 452, 453, 454, 455, 456, 457, 458, 459, 460, 461, 462, 463, 464, 465, 466, 467, 468, 469, 470, 471, 472, 473, 474, 475, 476, 477, 478, 479, 480, 481, 482, 483, 484, 485, 486, 487, 488, 489, 490, 491, 492, 493, 494, 495, 496, 497, 498, 499, 500, 501, 502, 503, 504, 505, 506, 507, 508, 509, 510, 511, 512, 513, 514, 515, 516, 517, 518, 519, 520, 521, 522, 523, 524, 525, 526, 527, 528, 529, 530, 531, 532, 533, 534, 535, 536, 537, 538, 539, 540, 541, 542, 543, 544, 545, 546, 547, 548, 549, 550, 551, 552, 553, 554, 555, 556, 557, 558, 559, 560, 561, 562, 563, 564, 565, 566, 567, 568, 569, 570, 571, 572, 573, 574, 575, 576, 577, 578, 579, 580, 581, 582, 583, 584, 585, 586, 587, 588, 589, 590, 591, 592, 593, 594, 595, 596, 597, 598, 599, 600, 601, 602, 603, 604, 605, 606, 607, 608, 609, 610, 611, 612, 613, 614, 615, 616, 617, 618, 619, 620, 621, 622, 623, 624, 625, 626, 627, 628, 629, 630, 631, 632, 633, 634, 635, 636, 637, 638, 639, 640, 641, 642, 643, 644, 645, 646, 647, 648, 649, 650, 651, 652, 653, 654, 655, 656, 657, 658, 659, 660, 661, 662, 663, 664, 665, 666, 667, 668, 669, 670, 671, 672, 673, 674, 675, 676, 677, 678, 679, 680, 681, 682, 683, 684, 685, 686, 687, 688, 689, 690, 691, 692, 693, 694, 695, 696, 697, 698, 699, 700, 701, 702, 703, 704, 705, 706, 707, 708, 709, 710, 711, 712, 713, 714, 715, 716, 717, 718, 719, 720, 721, 722, 723, 724, 725, 726, 727, 728, 729, 730, 731, 732, 733, 734, 735, 736, 737, 738, 739, 740, 741, 742, 743, 744, 745, 746, 747, 748, 749, 750, 751, 752, 753, 754, 755, 756, 757, 758, 759, 760, 761, 762, 763, 764, 765, 766, 767, 768, 769, 770, 771, 772, 773, 774, 775, 776, 777, 778, 779, 780, 781, 782, 783, 784, 785, 786, 787, 788, 789, 790, 791, 792, 793, 794, 795, 796, 797, 798, 799, 800, 801, 802, 803, 804, 805, 806, 807, 808, 809, 810, 811, 812, 813, 814, 815, 816, 817, 818, 819, 820, 821, 822, 823, 824, 825, 826, 827, 828, 829, 830, 831, 832, 833, 834, 835, 836, 837, 838, 839, 840, 841, 842, 843, 844, 845, 846, 847, 848, 849, 850, 851, 852, 853, 854, 855, 856, 857, 858, 859, 860, 861, 862, 863, 864, 865, 866, 867, 868, 869, 870, 871, 872, 873, 874, 875, 876, 877, 878, 879, 880, 881, 882, 883, 884, 885, 886, 887, 888, 889, 890, 891, 892, 893, 894, 895, 896, 897, 898, 899, 900, 901, 902, 903, 904, 905, 906, 907, 908, 909, 910, 911, 912, 913, 914, 915, 916, 917, 918, 919, 920, 921, 922, 923, 924, 925, 926, 927, 928, 929, 930, 931, 932, 933, 934, 935, 936, 937, 938, 939, 940, 941, 942, 943, 944, 945, 946, 947, 948, 949, 950, 951, 952, 953, 954, 955, 956, 957, 958, 959, 960, 961, 962, 963, 964, 965, 966, 967, 968, 969, 970, 971, 972, 973, 974, 975, 976, 977, 978, 979, 980, 981, 982, 983, 984, 985, 986, 987, 988, 989, 990, 991, 992, 993, 994, 995, 996, 997, 998, 999, 1000

**TV CODES**

**118, 122, 145, 210, 225, 247, 321**  
**MAJESTIC** 069  
**MARANTZ** 001, 167, 247  
**MAXENT** 196  
**MEMOREX** 053, 069  
**MGA** 001, 033, 167  
**MIDLAND** 199  
**MINTEK** 213  
**MISAKI** 193  
**mitsubishi** 001, 011, 033, 039, 100, 154, 160, 167, 168  
**MOTOROLA** 237  
**MTC** 001  
**NAD** 031  
**NATIONAL** 177, 178, 179, 180, 181, 182  
**NEC** 001, 022, 025, 042, 057, 084, 121, 125  
**NIKEI** 045  
**OLEVIA** 077  
**ONKING** 045  
**ONWA** 045  
**OPTIMUS** 031  
**OPTOMA** 218  
**OPTONICA** 025  
**ORION** 091, 219  
**PANASONIC** 008, 051, 057, 076, 149, 247, 248, 249, 250, 252  
**PENNEY** 199  
**PHILCO** 001, 003, 045, 057, 060, 061, 064, 065, 118  
**PHILIPS** 001, 003, 040, 060, 088, 130, 145, 231, 232, 233, 234, 235, 236, 247  
**PIONEER** 001, 024, 029, 031, 032  
**POLAROID** 071, 073, 074, 075, 078  
**PORTLAND** 220  
**PROSCAN** 133, 195  
**PROTON** 081  
**QUASAR** 034, 057, 227, 232, 248  
**RADIO SHACK** 025, 043, 045, 048, 118, 163, 198  
**RCA** 001, 007, 029, 057, 130, 133, 145, 155, 161, 163, 176, 199, 205, 206, 222  
**REALISTIC** 025, 043, 045, 048, 163  
**RUNCO** 186, 223  
**SAMPO** 001

**TV CODES**

**SAMSUNG** 001, 044, 085, 092, 096,  
104, 118, 124, 134, 136, 145, 156  
**SANSUI** 091  
**SANYO** 026, 037, 038, 054, 058, 137  
**SCEPTRE** 224, 366  
**SCOTT** 033, 045, 049  
**SEARS** 033, 035, 058, 092, 145  
**SELECO** 340  
**SHARP** 025, 028, 033, 138, 154, 253  
**SHERWOOD** 228  
**SIGNATURE** 069  
**SOLE** 229, 341  
**SONY** 004, 012, 117, 140, 194, 230,  
245  
**SOUNDESIGN** 003, 033, 045  
**SSS** 045  
**SUPERSCAN** 193  
**SUPRE MACY** 002  
**SYLVANIA** 001, 003, 009, 027, 060,  
061, 064, 065, 107, 118, 142, 145,  
146, 150, 153, 240, 247, 254, 323  
**SYMPHONIC** 184, 193  
**SYNTAX OLEVIA** 077  
**TATUNG** 057, 063  
**TCL** 243  
**TEAC** 143, 325  
**TECHNICS** 080  
**TEKNIKA** 001, 002, 003, 033, 036,  
045, 069, 092, 167  
**TELEFUNKEN** 047  
**TELERENT** 069  
**THOMSON** 190, 191  
**TOSHIBA** 013, 035, 042, 063, 092,  
144, 158, 202, 246  
**TRUTECH** 099  
**UNIVERSAL** 015  
**VIDEO CONCEPTS** 160  
**VIDIKRON** 244, 342  
**VIEWSONIC** 086, 301, 343, 344  
**VIORE** 302, 326  
**VITO** 303  
**VIZIO** 062, 066, 097, 327  
**WARDS** 015, 025, 033, 061, 064,  
065, 069, 247  
**WHITE WESTINGHOUSE** 151, 347, 348  
**WINBOOK** 305  
**WAMARR** 801, 308, 387

**TV CODES**

**YUPITERU** 045  
**ZENITH** 069, 070, 090, 308  
**VCR CODES**  
**AIWA** 040  
**AKAI** 022, 048, 050, 109  
**AMPRO** 076  
**AMSTRAD** 133  
**ANAM** 037, 039, 089  
**ASA** 134  
**AUDIO DYNAMICS** 018, 029, 044,  
048  
**BROKSONIC** 005, 041, 043, 110,  
166  
**CANDLE** 134  
**CANON** 037, 039, 140  
**CAPEHART** 094  
**CITIZEN** 134  
**CRAIG** 003, 116  
**CURTIS MATHES** 037, 039  
**DAEWOO** 012, 014, 094, 096, 098,  
102  
**DAYTRON** 094  
**DBX** 018, 029, 044, 048  
**DUAL** 136  
**DYNATECH** 040, 057  
**ELECTROHOME** 063  
**EMERSON** 033, 037, 040, 041, 042,  
043, 050, 110, 112, 171, 182, 183,  
184, 191, 193, 195  
**FERGUSON** 136  
**FINLUX** 133  
**FISHER** 003, 016, 142  
**FUNAI** 040, 133  
**GE** 037, 039, 067, 076, 093, 095,  
124, 127  
**GOLDSTAR** 011, 018, 092, 100, 107  
**GO VIDEO** 113, 117  
**GRAETZ** 136  
**HARMAN KARDON** 018, 049  
**HITACHI** 011, 040, 048, 067  
**INSTANTREPLAY** 037, 039  
**ITT** 136  
**JCL** 037, 039  
**JCPENNY** 011, 018, 039  
**JENSEN** 048

**VCR CODES**

**JVC** 018, 037, 039, 048, 052, 054,  
059, 111, 132  
**KENWOOD** 020, 044, 048, 052  
**LLOYD** 040  
**LXI** 011, 020, 040  
**MAGNAVOX** 007, 008, 035, 036,  
037, 039, 040, 072,  
**MARANTZ** 018, 037, 039, 073  
**MATSUI** 033  
**MEI** 037, 039  
**MEMOREX** 003, 020, 037, 039, 040,  
057, 076, 115  
**MGA** 049, 050, 063  
**MINOLTA** 011  
**MITSUBISHI** 011, 026, 032, 049, 050,  
055, 063, 065, 131, 145, 146  
**MOTOROLA** 196, 197  
**MTC** 133  
**MULTITECH** 030, 040  
**NAD** 139  
**NATIONAL** 140  
**NEC** 018, 029, 044, 048, 052  
**NORDMENDE** 048  
**OPTIMUS** 057  
**OPTONICA** 057  
**ORION** 005, 166  
**PANASONIC** 017, 024, 037, 078, 150,  
167, 173, 176, 188, 189, 201, 203, 206  
**PENTAX** 011, 026, 037, 039, 067  
**PHILCO** 037, 039, 040  
**PHILIPS** 037, 039, 040, 075  
**PIONEER** 011, 018, 027, 052  
**PORTLAND** 094  
**PROSCAN** 121  
**PULSAR** 076  
**QUARTZ** 002, 020  
**QUASAR** 039, 167  
**RADIO SHACK** 003, 020, 057, 093,  
133, 134, 140, 142, 160, 167  
**RCA** 006, 011, 026, 039, 066, 067,  
093, 095, 124, 127  
**REALISTIC** 003, 020, 037, 039, 040,  
057, 093, 142, 160  
**SABA** 136  
**SALORA** 020  
**SAMSUNG** 004, 009, 028, 038, 090,  
095, 099, 099, 108, 109, 207

**VCR CODES**

**SANSUI** 005, 048, 052, 116, 166  
**SANYO** 003, 014, 020, 115  
**SCHAUB LORENZ** 136  
**SCOTT** 043, 098, 110, 112  
**SEARS** 003, 011, 016, 020, 026, 037, 142  
**SHARP** 010, 019, 037, 156, 196, 205  
**SHINTOM** 030  
**SONY** 003, 015, 016, 021, 037, 056, 060, 061, 082, 187, 196, 199, 202  
**SOUNDESIGN** 040  
**STS** 011  
**SYLVANIA** 001, 037, 039, 040, 063, 200, 208  
**SYMPHONIC** 040  
**TANDY** 040  
**TASHICO** 134  
**TATUNG** 044, 048  
**TEAC** 040, 044, 048  
**TECHNICS** 037, 039  
**TEKNIKA** 037, 039, 040  
**TELEFUNKEN** 136  
**THOMAS** 040  
**THOMSON** 136  
**THORN** 136  
**TOSHIBA** 004, 011, 013, 023, 025, 051, 063, 085, 098, 112, 142, 174, 185, 193, 195, 198  
**VECTOR RESEARCH** 018  
**VICTOR** 052  
**VIDEO CONCEPTS** 018, 040, 050  
**WARDS** 003, 011, 030, 037, 039, 040, 057, 058, 112  
**YAMAHA** 018, 040, 044, 048  
**ZENITH** 005, 040, 052, 060, 076

**CBL CODES**

**ABC** 001, 003, 045, 048, 052, 059, 130  
**ADB** 089  
**ALLEGRO** 111  
**AMERICAST** 212  
**AMINO** 067  
**ANTRONIX** 021  
**ARCHER** 012, 014, 021, 031, 112  
**BELCOR** 113  
**CABLE STAR** 033, 113

**CBL CODES**

**CENTURION** 092  
**CENTURY** 014  
**CISCO** 051, 060, 078  
**CITIZEN** 014, 111  
**COLOUR VOICE** 090  
**COMCAST** 026, 032  
**COMTRONICS** 037  
**CONTEC** 228  
**DIAMOND** 030  
**DIGI** 114  
**EAGLE** 027, 037, 046, 186  
**EASTERN** 063, 066, 070, 115  
**ECHOSTAR** 011  
**ELECTRICORD** 039  
**EMERSON** 112  
**FOXTEL** 038  
**GC ELETRONICS** 113  
**GE** 009, 076  
**GEMINI** 015  
**GENERAL** 210  
**GENERAL INSTRUMENT** 032, 226, 227  
**G.I** 001, 003, 015, 017, 096, 097, 141  
**GOLDEN CHANNEL** 037  
**GOLD STAR** 224  
**GOODMIND** 112  
**HAMLIN** 055, 056, 061, 099, 100, 101, 117, 152, 175, 207, 208  
**HITACHI** 001, 061  
**HOSPITALITY** 074, 080  
**JASCO** 111  
**JERROLD** 001, 002, 003, 007, 015, 016, 017, 073, 096, 097, 140, 141, 162, 166, 167, 210  
**MACOM** 040, 191  
**MAGNAVOX** 017, 019, 068, 082  
**MEMOREX** 058  
**MOTOROLA** 004, 005, 006, 043, 049, 060, 064, 069, 077, 215, 216  
**MOVIE TIME** 039  
**NSC** 044, 075, 190  
**OAK** 023, 043, 059, 196, 197, 223  
**PACE** 029, 078, 079, 083, 084, 086, 087, 088  
**PANASONIC** 050, 053, 155, 176, 177, 189, 214, 225

**CBL CODES**

**PANTHER** 114  
**PARAGON** 058  
**PHILIPS** 013, 019, 020, 027, 085, 090  
**PIONEER** 001, 041, 057, 119, 147, 148, 171, 209, 217, 219, 224  
**POST NEWS WEEK** 023  
**PRIMESTAR** 162  
**PTS** 018, 054, 075, 076  
**PULSAR** 058  
**QUASAR** 058  
**QUEST** 035  
**RADIO SHACK** 111, 112, 213  
**RCA** 053, 214  
**REALISTIC** 012  
**REGAL** 055, 056, 061, 099, 100, 101, 158, 207  
**REGENCY** 063, 115  
**RUNCO** 058  
**SAMSUNG** 008, 037, 072, 186, 224  
**SCIENTIFIC ATLANTA** 003, 018, 022, 047, 048, 052, 079, 130, 145, 159, 160, 183, 203, 204  
**SIGNAL** 037  
**SIGNATURE** 001  
**SL MARX** 037  
**SONY** 098, 229, 231  
**SPRUCER** 053, 081, 177, 189  
**STARCOM** 002, 015, 016, 141, 163  
**STARGATE** 015, 037  
**SYLVANIA** 071  
**TADIRAN** 037  
**TANDY** 024  
**TELECAPATION** 028  
**TEXSCAN** 036, 071  
**TIMELESS** 123  
**TOCOM** 045, 046, 062, 170, 205  
**TOSHIBA** 058  
**UNIKA** 014, 021, 031  
**UNITED CABLE** 059  
**UNIVERSAL** 012, 014, 021, 031, 033, 034, 039, 042, 113  
**VENTURER** 010  
**VIDEOWAY** 124  
**VIEWSTAR** 019, 025, 190  
**ZENITH** 058, 065, 098, 212, 222

**SAT CODES**

ALHASTAR DSR 422  
 CANAL 399  
 CANAL+ 399  
 CHANNEL MASTER 317, 320, 321, 361  
 CHAPARRAL 315, 316, 451  
 DIRECTV 312, 360  
 DISH NETWORK 401  
 DRAKE 317, 318, 413  
 DX ANTENNA 331, 352, 369  
 ECHOSTAR 475  
 ECHOSTAR 309, 319, 322, 380, 395, 396, 400, 401, 406, 410, 463, 467, 475, 477, 483, 484, 490 493  
 ELECTRO HOME 392  
 FOXTEL 397  
 FUJITSU 334  
 GENERAL ELECTRIC 474  
 GENERAL INSTRUMENT 301, 303, 311, 323, 365, 403, 454, 468  
 GRUNDIG 393  
 HITACHI 372  
 HITACHI DBS 455  
 HOUSTON TRACKER 463, 467  
 HUGHES 306, 314, 385, 455, 480, 485, 488  
 HUMAX 388  
 JANIEL 366  
 JERROLD 367, 454, 464, 468  
 JERROLD PRIMESTAR 456  
 KCPI 408  
 LEGEND 453  
 MACOM 317, 365, 370, 371  
 MAGNAVOX 473  
 MEMOREX 453  
 MITSUBISHI 372  
 MOTOROLA 402  
 NEXTWAVE 423  
 NORSAT 374  
 OPTIMUS 466  
 PAC DSS 478  
 PACE 328, 329, 336, 337, 338, 340, 342, 343, 344, 345, 346, 347, 356, 357, 363, 386  
 PANASONIC 366, 469  
 PANASONIC DBS 457

**SAT CODES**

PHILIPS 305, 375, 480, 485, 487, 488, 492, 494  
 PREMIERE 376  
 PRESIDENT 381, 404  
 PRIMESTAR 412, 454, 464  
 RCA 307, 308, 310, 379, 465, 474, 481, 482, 491  
 RCA DSS 458, 476  
 REALISTIC 325, 349, 377  
 SAMSUNG 313, 359, 362, 368, 373, 422, 489  
 SATELLITE SERVICE CO 331, 335, 341, 353  
 SCIENTIFIC ATLANTA 339  
 SKY 363, 364  
 SONY 304, 405, 407, 486  
 STAR CHOICE DBS 459  
 SUPER GUIDE 327, 423  
 TEECOM 330, 333, 390, 391, 409  
 TOPFIELD 378  
 TOSHIBA 302, 426, 462, 470, 473  
 UEC 358  
 UNIDEN 323, 324, 325, 326, 332, 348, 349, 350, 351, 354, 355, 381, 382, 383, 389, 403, 466  
 VIASAT 398  
 ZENITH 371, 384, 387, 394, 419, 479

**DVD CODES**

APEX DIGITAL 056, 216, 233, 239  
 CALIFORNIA AUDIO 176  
 COBY 042, 048  
 CYBERHOME 001  
 DAEWOO 246  
 DENON 150, 162, 201, 208  
 DVD-VIDEO 231  
 DYNEX 041  
 EMERSON 007  
 GE 196, 197  
 GO VIDEO 002  
 GRADIENTE 228, 229  
 HARMAN KARDON 148, 149, 186, 220  
 HITACHI 193  
 INSIGNIA 029, 033, 045

**DVD CODES**

JVC 192, 199  
 KENWOOD 151, 183, 225  
 KLH 224  
 LG 046, 198, 211, 219, 226  
 LOTTE 152  
 MAGNAVOX 007, 017, 024, 028, 031, 051, 057, 169, 212, 234  
 MARANTZ 169, 214  
 MEMOREX 012  
 MITSUBISHI 172, 202  
 NAD 217  
 ONKYO 200, 207  
 OPTIMUS 153, 183  
 PACIFIC 018  
 PANASONIC 044, 163, 171, 179, 181, 184, 189, 203, 205, 238, 240, 243  
 PHILIPS 005, 169, 188, 212  
 PIONEER 154, 160, 174, 180, 221, 222  
 POLAROID 023  
 PROCEED 215  
 PROSCAN 173, 196, 197  
 RCA 159, 173, 196, 197, 232  
 RUNCO 165  
 SAMSUNG 002, 003, 016, 021, 025, 043, 050, 168, 195, 209, 210, 241, 244, 245  
 SANYO 004, 022, 155, 156, 182  
 SHARP 036, 037, 047, 161, 166, 183, 204, 230  
 SONY 013, 019, 038, 156, 167, 178, 187, 191, 206, 223, 232, 242  
 SYLVANIA 006, 020, 032, 034, 235  
 SYMPHONIC 027  
 TECHNICS 164  
 THOMPSON 196, 197  
 TIVO 008, 009, 010, 011, 014, 015  
 TOSHIBA 026, 035, 039, 040, 049, 169, 181, 185, 190, 200, 213, 227, 236  
 TRUTECH 030  
 YAMAHA 157, 158, 205, 218  
 ZENITH 169, 194, 198, 211, 219  
 ZENITH DIVX 175

Tek Partner Function Table

Button Name	TV	VCR	DVD	CBL/SAT
TV	TV MODE	TV MODE	TV MODE	TV MODE
VCR	VCR MODE	VCR MODE	VCR MODE	VCR MODE
DVD	DVD MODE	DVD MODE	DVD MODE	DVD MODE
CBL (SAT)	CBL/SAT MODE	CBL/SAT MODE	CBL/SAT MODE	CBL/SAT MODE
PWR	ON/OFF	ON/OFF	ON/OFF	ON/OFF
0 - 9	0 - 9	0 - 9	0 - 9	0 - 9
MENU/PREV. CH (RECALL)	LAST CHANNEL/RECALL	LAST CHANNEL/RECALL	OPEN/CLOSE	LAST CHANNEL/RECALL
ENTER (SELECT)	ENTER	ENTER	ENTER	SELECT/ENTER
TV/VCR (TV/SAT)	TV/VCR	TV/VCR	TV/DVD	TV/SAT
MUTE (INFO/VIEW)	MUTE	MUTE	MUTE	INFO/VIEW
CH +	CHANNEL UP	CHANNEL UP	SKIP +	CHANNEL UP
CH -	CHANNEL DOWN	CHANNEL DOWN	SKIP -	CHANNEL DOWN
STOP (EXIT)	STOP (VCR)	STOP	STOP/EXIT	EXIT
PLAY (▲)	PLAY (VCR)	PLAY	PLAY	UP
PAUSE (GUIDE)	PAUSE (VCR)	PAUSE	PAUSE	GUIDE
REW (▶)	REWIND (VCR)	REWIND	REWIND	LEFT
FF (▼)	FAST FORWARD (VCR)	FAST FORWARD	FAST FORWARD	DOWN
REC (▶)	RECORD (VCR)	RECORD	RECORD	RIGHT
VOL +	VOLUME UP	VOLUME UP	VOLUME UP	VOLUME UP
VOL -	VOLUME DOWN	VOLUME DOWN	VOLUME DOWN	VOLUME DOWN

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>