

ENGLISH



Canon DIGITAL CAMERA

Canon

PowerShot SD500
DIGITAL ELPH

DIGITAL
IXUS 700

Canon

PowerShot SD500 DIGITAL ELPH
DIGITAL IXUS 700

Camera User Guide




DiGiC II



Camera User Guide

Please read the *Read This First* section (p. 6).
Please also read the *Software Starter Guide* and the *Direct Print User Guide*.

Flowchart and Reference Guides

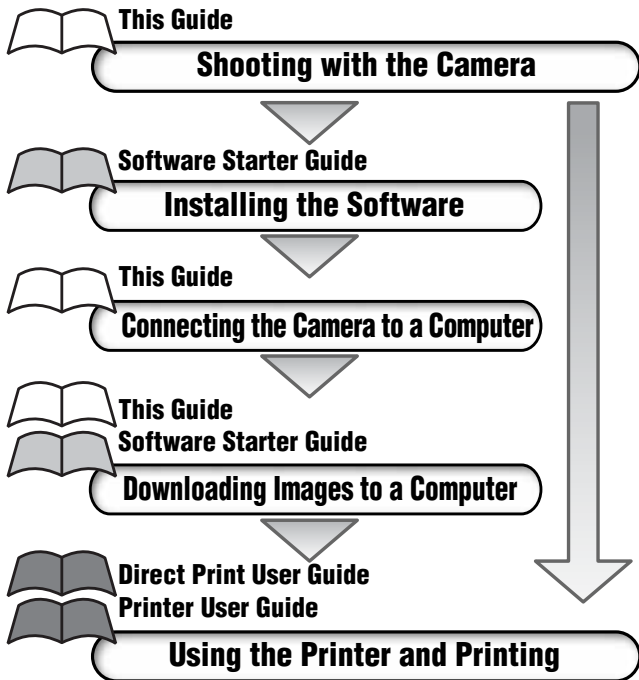

Use of genuine Canon accessories is recommended.

This product is designed to achieve excellent performance when used with genuine Canon accessories. Canon shall not be liable for any damage to this product and/or accidents such as fire, etc., caused by the malfunction of non-genuine Canon accessories (e.g., a leakage and/or explosion of a battery pack). Please note that this warranty does not apply to repairs arising out of the malfunction of non-genuine Canon accessories, although you may request such repairs on a chargeable basis.

Camera Body Temperature

If your camera is used for prolonged periods, the camera body may become warm. Please be aware of this and take care when operating the camera for an extended period.

About the LCD Monitor

The LCD monitor is produced with extremely high-precision manufacturing techniques. More than 99.99% of the pixels operate to specification. Less than 0.01% of the pixels may occasionally misfire or appear as red or black dots. This has no effect on the recorded image and does not constitute a malfunction.

Video Format

Please set the camera's video signal format to the one used in your region before using it with a TV monitor (p. 156).

Charging the Date/Time Battery

- The camera has a built-in rechargeable lithium-ion battery that maintains the date, time and other camera settings. This battery recharges when the main battery pack is inserted into the camera. When you first purchase the camera, place a charged battery pack in it for at least 4 hours to charge the date/time battery. It will charge even when the camera power is turned off.
- If the Date/Time menu appears when the camera power is turned on, it means that the date/time battery charge is depleted. Recharge it as described above.

Conventions Used in the Text

Icons appearing beside or below titles indicate the modes in which the procedure can be used. In the example below, the Self-timer mode can be used in the following shooting modes.

-  Auto
-  Movie
-  Stitch Assist
-  M Manual
-  Digital Macro
-  SCN Special Scene
-  My Colors

Using the Self-timer



: This mark denotes issues that may affect the camera's operation.



: This mark denotes additional topics that complement the basic operating procedures.

In this guide an SD memory card (Secure Digital, a copyright protection system) is referred to as an SD card.

Table of Contents

Items marked with ☆ are lists or charts that summarize camera functions or procedures.

Read This First

| | |
|-------------------------------|----|
| Please Read..... | 6 |
| Safety Precautions | 7 |
| Preventing Malfunctions | 12 |

Components Guide

| | |
|-----------------------|----|
| Components Guide..... | 13 |
|-----------------------|----|

Preparing the Camera





| | |
|----------------------------------|----|
| Charging the Battery Pack | 19 |
| Installing the Battery Pack..... | 22 |
| Installing the SD Card | 24 |
| Formatting SD Cards..... | 26 |
| Setting the Date and Time | 29 |
| Setting the Language | 32 |

Basic Functions



| | |
|--|----|
| Turning the Power On | 34 |
| Using the LCD Monitor | 36 |
| LCD Monitor Brightness..... | 38 |
| Information Displayed on the LCD Monitor | 39 |
| Using the Viewfinder | 43 |
| Using the Zoom..... | 44 |
| Pressing the Shutter Button | 45 |
| ☆ Selecting Menus and Settings | 47 |
| ☆ Menu Settings and Factory Defaults..... | 52 |
| Resetting Settings to Their Default Values | 58 |

Shooting


| | |
|--|----|
| 📷 Shooting in Auto Mode | 59 |
| Reviewing an Image Right After Shooting..... | 60 |
| Changing Resolution/Compression Settings | 62 |
| ⚡ Using the Flash | 64 |
| SCN Shooting in a Special Scene Mode | 66 |
| 📷M Shooting in Manual Mode | 69 |
| 🌸 Shooting Close-Ups/▲ Infinity Shots | 70 |
| Magnified Close-Up Shooting (Digital Macro)..... | 72 |

| | |
|--|-----|
| Using the Digital Zoom | 74 |
|  Continuous Shooting | 75 |
| Postcard Date Imprint Mode..... | 76 |
|  Using the Self-timer | 78 |
|  Shooting a Movie..... | 81 |
| Shooting Panoramic Images (Stitch Assist) | 86 |
| Switching between Focusing Modes..... | 89 |
| Shooting Hard-to-Focus Subjects (Focus Lock, AF Lock)..... | 90 |
| Locking the Exposure Setting (AE Lock)..... | 92 |
| Locking the Flash Exposure Setting (FE Lock)..... | 93 |
|  Switching between Metering Modes | 94 |
| Adjusting the Exposure Compensation | 95 |
| Shooting in Long Shutter Mode..... | 96 |
| Adjusting the Tone (White Balance)..... | 98 |
| Changing the Photo Effect | 101 |
| Shooting in a My Colors Mode | 102 |
| Adjusting the ISO Speed..... | 109 |
| Setting the Auto Rotate Function | 110 |
| Resetting the File Number | 111 |

Playback

| | |
|---|-----|
| Displaying Images Individually | 113 |
|  Magnifying Images | 114 |
|  Viewing Images in Sets of Nine (Index Playback) | 115 |
| JUMP Jumping to Images..... | 117 |
| Viewing Movies | 118 |
| Editing Movies..... | 121 |
| Rotating Images in the Display..... | 123 |
| Attaching Sound Memos to Images..... | 124 |
| Automated Playback (Slide Shows)..... | 126 |
| Protecting Images | 130 |

Erasing

| | |
|--|-----|
|  Erasing Single Images..... | 131 |
| Erasing All Images..... | 132 |

Print Settings

| | |
|--------------------------------------|-----|
| About Printing | 134 |
| Setting the DPOF Print Settings..... | 136 |

Image Transmission Settings (DPOF Transfer Order)

| | |
|---|-----|
| Selecting Images for Transferring | 142 |
|---|-----|

Connecting the Camera to a Computer

| | |
|---|-----|
| Connecting the Camera to a Computer | 146 |
| Computer System Requirements | 146 |
| Downloading Images by Direct Transfer | 152 |
| Connecting the Camera to the Computer to Download Images Without Installing Software | 154 |
| Downloading from an SD Card | 154 |

Viewing Images on a TV set

| | |
|----------------------------------|-----|
| Viewing Images on a TV set | 155 |
|----------------------------------|-----|

Customizing the Camera (My Camera Settings)

| | |
|--------------------------------------|-----|
| Changing My Camera Settings | 157 |
| Registering My Camera Settings | 159 |

List of Messages

| | |
|------------------------|-----|
| List of Messages | 162 |
|------------------------|-----|

Troubleshooting

| | |
|-----------------------|-----|
| Troubleshooting | 164 |
|-----------------------|-----|

Appendix

| | |
|---|-----|
| Using an AC Adapter Kit (Sold Separately) | 169 |
| Using an Externally Mounted Flash (Sold Separately) | 170 |
| Camera Care and Maintenance | 172 |
| Specifications | 173 |
| Photo Tips and Information | 181 |
| Index | 183 |
| ☆ Functions Available in Each Shooting Mode | 192 |

Please Read

Test Shots

Before you try to photograph important subjects, we highly recommend that you shoot several trial images to confirm that the camera is operating and being operated correctly.

Please note that Canon Inc., its subsidiaries and affiliates, and its distributors are not liable for any consequential damages arising from any malfunction of a camera or accessory, including SD memory cards, that results in the failure of an image to be recorded or to be recorded in a way that is machine readable.

Warning Against Copyright Infringement

Please note that Canon digital cameras are intended for personal use and should never be used in a manner that infringes upon or contravenes international or domestic copyright laws and regulations. Please be advised that in certain cases the copying of images from performances, exhibitions, or commercial properties by means of a camera or other device may contravene copyright or other legal rights even if the image was shot for personal use.

Warranty Limitations

This camera's warranty is only effective in the country of sale. If a problem arises while the camera is in use abroad, please convey it back to the country of sale before proceeding with a warranty claim to a Canon Customer Support Help Desk.

For Canon Customer Support contacts, please see the Canon Limited Warranty supplied with your camera.

Safety Precautions

- Before using the camera, please ensure that you read and understand the safety precautions described below. Always ensure that the camera is operated correctly.
- The safety precautions noted on the following pages are intended to instruct you in the safe and correct operation of the camera and its accessories to prevent injuries or damage to yourself, other persons and equipment.
- In the next few pages, the term equipment refers primarily to the camera and its power supply accessories, such as the battery charger and separately sold compact power adapter. See the *System Map* for power supply accessory details.

Storing SD cards

Store the SD memory card out of the reach of children and infants.

It may be swallowed accidentally. If this occurs, consult a doctor immediately.

Warnings

-
- **Do not aim the camera directly into the sun or at other intense light sources that could damage your eyesight.**
-
- **Do not trigger the flash in close proximity to human or animal eyes.** Exposure to the intense light produced by the flash may damage eyesight. In particular, remain at least one meter (39 inches) away from infants when using the flash.
-
- **Store this equipment out of the reach of children and infants.** Accidental damage to the camera or battery pack by a child could result in serious injury. In addition, placement of the strap around the child's neck could result in asphyxiation.
-
- **Do not attempt to disassemble or alter any part of the equipment that is not expressly described in this guide.** Disassembly or alteration may result in high-voltage electrical shock. Internal inspections, alterations and repairs should be conducted by qualified service personnel authorized by your camera distributor or a Canon Customer Support Help Desk.
-

-
- **To avoid the risk of high-voltage electrical shock, do not touch the flash portion of the camera if it has been damaged.** Similarly, never touch internal portions of the equipment that become exposed as a result of damage. There is a risk of high-voltage electrical shock. Please take the first opportunity to consult your camera distributor or the closest Canon Customer Support Help Desk.
-
- **Stop operating the equipment immediately if it emits smoke or noxious fumes.** Failure to do so may result in fire or electrical shock. Immediately turn the camera power off, remove the battery pack or unplug the battery charger from the power outlet. Confirm that smoke or fume emissions have ceased. Please consult your camera distributor or the closest Canon Customer Support Help Desk.
-
- **Stop operating the equipment if it is dropped or the casing is damaged.** Failure to do so may result in fire or electrical shock. Immediately turn the camera power off, remove the battery pack or unplug the power cable from the power outlet. Please consult your camera distributor or the closest Canon Customer Support Help Desk.
-
- **Do not allow the equipment to come into contact with, or become immersed in, water or other liquids.** Do not allow liquids to enter the interior. The camera has not been waterproofed. If the exterior comes into contact with liquids or salt air, wipe it dry with a soft, absorbent cloth. If water or other foreign substances enter the interior, immediately turn the camera power off and remove the camera battery pack or unplug the power cord from the power outlet. Continued use of the equipment may result in fire or electrical shock. Please consult your camera distributor or the closest Canon Customer Support Help Desk.
-
- **Do not use substances containing alcohol, benzene, thinners or other flammable substances to clean or maintain the equipment.** The use of these substances may lead to fire.
-
- **Remove the power cord on a regular periodic basis and wipe away the dust and dirt that collects on the plug, the exterior of the power outlet and the surrounding area.** In dusty, humid or greasy environments, the dust that collects around the plug over long periods of time may become saturated with humidity and short-circuit, leading to fire.
-

-
- **Do not cut, damage, alter or place heavy items on the power cord.** Any of these actions may cause an electrical short circuit, which may lead to fire or electrical shock.
-
- **Do not handle the power cord if your hands are wet.** Handling it with wet hands may lead to electrical shock. When unplugging the cable, ensure that you hold the solid portion of the plug. Pulling on the flexible portion of the cable may damage or expose the wire and insulation, creating the potential for fires or electrical shocks.
-
- **Use only recommended power accessories.** Use of power sources not expressly recommended for this equipment may lead to overheating, distortion of the equipment, fire, electrical shock or other hazards.
-
- **Do not place the battery pack near a heat source or expose it to direct flame or heat.** Neither should you immerse it in water. Such exposure may damage the battery pack and lead to the leakage of corrosive liquids, fire, electrical shock, explosion or serious injury.
-
- **Do not attempt to disassemble, alter or apply heat to the battery pack.** There is serious risk of injury due to an explosion. Immediately flush with water any area of the body - including the eyes and mouth, or clothing - that comes into contact with the inner contents of a battery. If the eyes or mouth contact these substances, immediately flush with water and seek medical assistance.
-
- **Avoid dropping or subjecting the battery pack to severe impacts that could damage the casings.** It could lead to leakage and injury.
-
- **Do not short-circuit the battery terminals with metallic objects, such as key holders.** It could lead to overheating, burns and other injuries. Use the supplied terminal cover to transport or store the battery pack.
-
- **Before you discard a battery, cover the terminals with tape or other insulators to prevent direct contact with other objects.** Contact with the metallic components of other materials in waste containers may lead to fire or explosions. Discard the battery pack in specialized waste facilities if available in your area.
-
- **Use only recommended battery pack and accessories.** Use of battery pack not expressly recommended for this equipment may cause explosions or leaks, resulting in fire, injury and damage to the surroundings.
-

-
- **Use the specified battery charger to charge Battery Pack NB-3L.** Use of other chargers may lead to overheating, distortion of the equipment, fire or electrical shock.
 - **Disconnect the battery charger and compact power adapter from both the camera and the power outlet after recharging and when they are not in use to avoid fire and other hazards.** Continuous use over a long period may cause a unit to overheat and distort, resulting in fire.
 - **The battery charger and compact power adapter are designed for exclusive use with your camera.** Do not use it with other products or batteries. There is a risk of fire and other hazards.
-

Caution about magnetic fields

Keep objects that are sensitive to magnetic fields (such as credit cards) away from the speaker of the camera (p. 13). Such items may lose data or stop working.

Cautions

- **Avoid using, placing or storing the equipment in places subject to strong sunlight or high temperatures, such as the dashboard or trunk (boot) of a car.** Exposure to intense sunlight and heat may cause the batteries to leak, overheat or explode, resulting in fire, burns or other injuries. High temperatures may also cause deformation of the casing. Ensure that there is good ventilation when using the battery charger to charge the battery pack.

 - **Do not store the equipment in humid or dusty areas.** Storage in such areas could lead to fire, electrical shock or other damage.

 - **Be careful not to bang the camera or subject it to strong impacts or shocks that could lead to injury or damage the equipment when wearing or holding it by the strap.**

 - **Be careful not to cover the flash with your fingers or clothing when shooting.** The flash may be damaged and emit smoke or noise. In addition, do not touch the surface of the flash after taking several pictures in rapid succession. Either action could result in burns.

 - **Do not operate the flash with dirt, dust or other items stuck to its lens.** The resulting heat build-up could damage the flash.

 - **Ensure that the battery charger is plugged into a power outlet of the specified rating, not over the specified rating.** The plug of the battery charger varies according to region.

 - **Do not use the battery charger or compact power adapter if the plug or cable is damaged, or if the plug is not fully inserted into the power outlet.**

 - **Do not allow metal objects (such as pins or keys) or dirt to contact the charger terminals or plug.**

 - **If your camera is used for prolonged periods, the camera body may become warm.** Please take care when operating the camera for extended periods as your hands may experience a burning sensation.
-

Preventing Malfunctions

Avoid Strong Magnetic Fields

Never place the camera in close proximity to electric motors or other equipment generating strong electromagnetic fields. Exposure to strong magnetic fields may cause malfunctions or corrupt image data.

Avoid Condensation Related Problems

Moving the equipment rapidly between hot and cold temperatures may cause condensation (water droplets) to form on its external and internal surfaces. You can avoid this by placing the equipment in an airtight, resealable plastic bag and letting it adjust to temperature changes slowly before removing it from the bag.



If Condensation Forms Inside the Camera

Stop using the camera immediately if you detect condensation. Continued use may damage the equipment. Remove the SD card and battery pack or compact power adapter from the camera and wait until the moisture evaporates completely before resuming use.

Extended Storage

When not using the camera for extended periods of time, remove the battery pack from the camera or battery charger and store the equipment in a safe place. Storing the camera for extended periods with a battery pack installed will run down the battery pack. However the date, time and other camera settings may reset to default settings if the battery pack has been removed for more than three weeks.

Front View

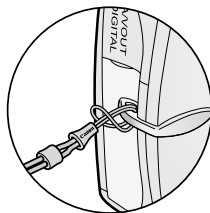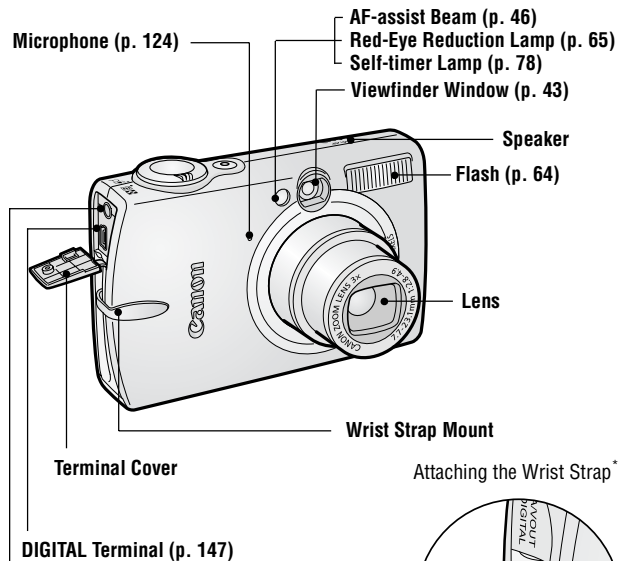


* When carrying the camera by the strap, be careful not to swing the camera or catch it on other items.





The interface cable and AV cable cannot be connected simultaneously.


Back View

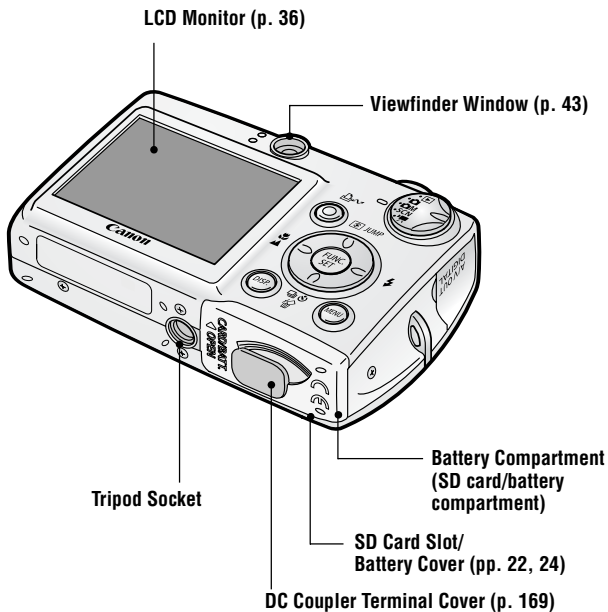

Operation Panel

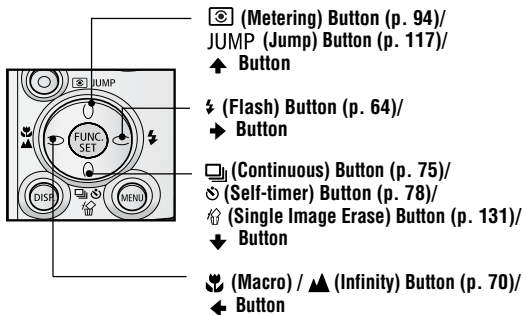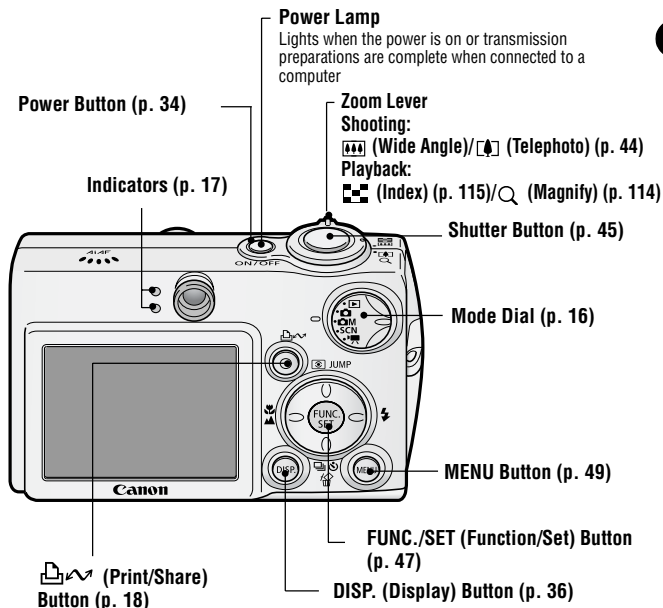

Mode Dial

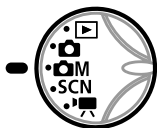

Use the mode dial to select a shooting or playback function.




To Shoot Still Images (Shooting Mode)

| | | |
|------------|----------------------|---|
| | Auto | Shoots with settings selected by the camera (p. 59). |
| | Manual | You select the exposure compensation, white balance or photo effect settings (p. 69). |
| SCN | Special Scene | Effective for shooting in 9 varying conditions (p. 66). |
| | Movie | Shoots movies with sound (p. 81). |

To Play Back Images (Playback Mode)

| | | |
|--|-----------------|---|
| | Playback | <ul style="list-style-type: none">• Play back or delete images from the SD card (pp. 113, 131)• The lens retracts approximately 1 minute after the mode dial is turned from a shooting mode to playback mode.• When a printer is connected, images can be printed (see the <i>Direct Print User Guide</i>).• When a camera is connected, recorded images can be downloaded to and viewed with a computer (p. 146). |
|--|-----------------|---|



When a printer is properly connected, the ,  or  icon appears on the LCD monitor.

Holding the Camera

Images become blurred if the camera moves when the shutter button is pressed. Hold the camera as shown below to avoid camera movement when shooting.



Hold the camera firmly with both hands and let your elbows rest at your sides. Place your finger on the shutter button as you hold the camera.

- Make sure that your hair or fingers do not obstruct the lens, flash, self-timer lamp, microphone or speaker.
- Fix the camera onto a tripod when shooting infinity shots or in dark places.

Indicators

The indicators light or blink when the power button or shutter button is pressed.

Upper Indicator

Green: Ready to shoot

Blinking Green: Recording to SD card / Reading SD card / Erasing from SD card/Transmitting data (during a computer connection)

Orange: Ready to shoot (flash on)


Blinking Orange: Ready to shoot (camera shake warning)

Lower Indicator

Yellow: Macro mode / Infinity mode/ AF lock

Blinking Yellow: Focusing difficulty (single beep).

Although you can still press the shutter button when the indicator blinks yellow, you are recommended to shoot using the focus lock or AF lock (p. 90).

The following operations are accessible through one easy press of the  (Print/Share) button.

- Printing: See the *Direct Print User Guide* (supplied with the camera)
- Downloading images: See p.145 of this guide and the *Software Starter Guide* (supplied with the camera)

The indicator blinks or lights during a printer or computer connection.

Blue: Ready to print/Ready to transfer images

Blinking blue: Printing/Transferring

The following cables are used to connect the camera to a computer or printer.

Computer (p. 145)

Interface Cable IFC-400PCU (supplied with the camera)


Direct Print Compatible Printers (Sold Separately)

- Compact Photo Printer (SELPHY CP series)/Card Photo Printer
Interface Cable IFC-400PCU (supplied with the camera) or the Direct Interface Cable DIF-100 (supplied with the printer).
- Bubble Jet Printers (PIXMA series/SELPHY DS series)
 - *PictBridge* Compliant Printers:
Interface Cable IFC-400PCU (supplied with the camera)
 - *Bubble Jet Direct* Compatible Printers:
Please refer to your Bubble Jet printer user guide.
- *PictBridge* Compliant Non-Canon Printers
Interface Cable IFC-400PCU (supplied with the camera)

Please refer to the *System Map* or the *Direct Print User Guide* supplied with the camera for direct print compatible printer information.


Charging the Battery Pack

Use the following procedures to charge the battery pack the first time you use the camera or when the "Change the battery pack" message displays.

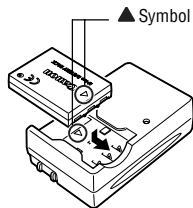

1 Insert the battery pack into the battery charger.

Align the ▲ on the battery pack and battery charger and insert it correctly.

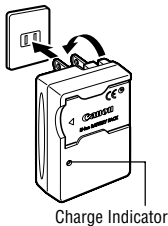

2 Battery charger model names and types vary by region.

(For CB-2LU)

Plug the battery charger into a power outlet.

(For CB-2LUE)

Attach the power cord to the battery charger and plug it into a power outlet.

- The charge indicator will light red while the battery pack is charging. It will change to green when the charge is complete.
- After charging, unplug the battery charger and immediately remove the battery pack.



To protect the battery pack and prolong its life, do not charge it for longer than 24 hours continuously.



- Since this is a lithium-ion battery pack, you need not completely discharge it before recharging. It can be recharged at any point. However, since the maximum number of charge cycles is approximately 300 times (battery life based on Canon's testing standards), you are recommended to charge the battery pack after having discharged it completely to prolong battery life.
- It takes approximately 95 minutes to fully charge the battery pack from a fully discharged state (based on Canon's testing standards). Charging it within a temperature range of 5° to 40 °C (41° to 104 °F) is recommended.
- Charge times may vary according to the ambient temperature and the battery pack's charge state.
- You may hear a noise during charging. This is not a malfunction.
- See *Battery Capacity (Battery Pack NB-3L (Fully charged))* (p. 177).

Battery Pack Handling Precautions

- Keep the battery pack terminals (+ ⊕ -) clean at all times. Dirty terminals may cause poor contact between the battery pack and camera. Polish the terminals with a soft cotton swab before charging or using the battery pack.
- Do not rapidly overturn or wave the battery charger around when it contains the battery pack. The battery pack could fly out.
- At low temperatures, battery pack performance may be reduced and the low battery icon may appear earlier than usual. Under these conditions, resuscitate the battery pack by warming it in a pocket immediately before use. However, ensure that there are no metallic items in the pocket that could cause a short circuit, such as a key holder, etc.
- Do not place anything, such as tablecloths, carpets, bedding or cushions, on top of the battery charger while it is charging. Heat will build up and could result in a fire.
- Do not charge batteries other than Battery Pack NB-3L in this charger.
- The battery pack continues to discharge a minimal portion of its power while installed in the camera, even with the power off, or in the charger. This will shorten battery life.

- Do not allow any metal objects such as key rings to touch the ⊕ and ⊖ terminals (Fig. A), as this can damage the battery pack. To carry the battery pack or store it during periods of disuse, always replace the terminal cover (Fig. B).

Fig. A

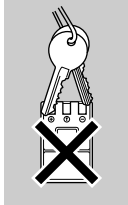


Fig. B




- Even charged battery packs continue to discharge naturally. You are advised to charge the battery on the day of use, or one day before, to ensure a full charge.
- Since storing a fully charged battery pack for long periods of time (about one year) may shorten its life cycle or affect its performance, you are recommended to use it in the camera until it is completely discharged and to store it in an indoor location with low relative humidity and between the temperatures of 0 to 30 °C (32 to 86 °F). If you do not use the battery pack for long periods of time, charge it fully and discharge it fully in the camera about once a year before returning it to storage.
- If the performance of the battery pack diminishes substantially even when it is fully charged, its life has been exceeded and it should be replaced.

Installing the Battery Pack


Install Battery Pack NB-3L (supplied).



Please recharge the battery pack (p. 19) before you use it for the first time.

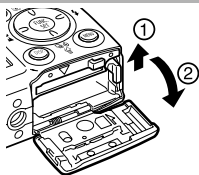


1 Slide the SD card slot/battery cover in the direction of the arrows.

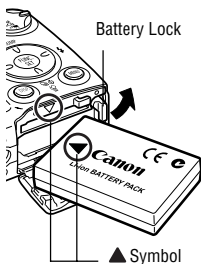

2 Press the battery lock while inserting the battery pack all the way in until the lock clicks.

Align the ▲ on the battery pack and battery chamber and insert it correctly.

To remove the battery pack, press the battery lock in the direction of the arrow and hold it while pulling the battery pack out.

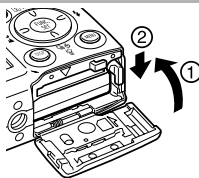

3 Slide the SD card slot/battery cover closed.





- Please watch the loading slot area carefully as you insert and remove the battery pack.
- Do not turn off the power or open the SD card slot/battery cover while the indicator blinks green. The camera is writing, reading, erasing or transmitting an image to or from the SD card.
- Remove the battery pack when the camera is not in use. Please note, however, that the date, time and other camera settings may be lost if the battery pack has been removed for more than three weeks.



Please use an AC Adapter Kit ACK900 (sold separately) for extended use of the camera (p. 169).

Battery Pack Charge

The following icons and messages will display when the battery pack charge is low.

| | |
|---|---|
|  | <p>Battery pack charge is low. Recharge it as soon as possible before it is required for an extended period.</p> <p>When the LCD monitor is off, this icon will display when you press any button other than the power or  (Print/Share) button.</p> |
| <p>Change the battery pack</p> | <p>Battery charge is insufficient to operate the camera. Replace the battery pack immediately.</p> |




See *Battery Capacity (Battery Pack NB-3L (Fully charged))* (p. 177).

Installing the SD Card


Write-Protect Tab

The SD card has a write-protect tab. Sliding the tab downward prevents recording of data and protects existing data (e.g. images). When recording to, erasing from or formatting the SD card, slide the tab upward.

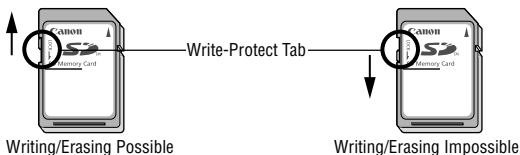


Ensure that the SD card is correctly oriented before inserting it in the camera. It may damage the camera if inserted backward by mistake.

Turn the camera power off and insert the SD card with the following procedures.

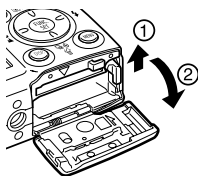


1 Slide the SD card slot/battery cover in the direction of the arrows.

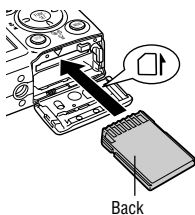

2 Insert the SD card.


- Push it according to the diagram on the SD card slot/battery cover until it clicks into place.
- Do not touch or allow metal objects to contact the terminals on the back of the SD card.

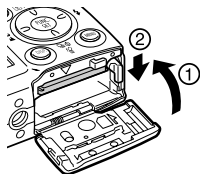

3 Slide the SD card slot/battery cover closed.

To Remove the SD card

Push in the SD card until you hear it click, then release it.

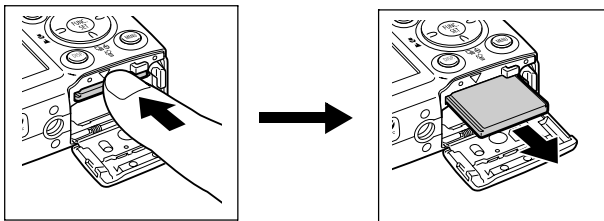

- Please watch the loading slot area carefully as you insert and remove the SD card.
- Since the camera is writing, reading, erasing or transmitting data to or from the SD card when the indicator blinks green, never perform the following actions during this time. It could corrupt the image data.
 - Subject the camera body to vibration or shocks.
 - Turn the camera's power off, or open the SD card slot/battery cover.
- Please note that SD cards formatted with other manufacturers' cameras or a computer, or formatted or edited with application programs, may slow down writing to the SD card or may not operate correctly in the camera.
- You are recommended to use SD cards that have been formatted in your camera (p. 26). The card supplied with the camera may be used without further formatting.




See *SD Cards and Estimated Capacities* (p. 178).

Formatting SD Cards

You should always format a new SD card or one from which you wish to erase all images and other data.



Please note that formatting (initializing) an SD card erases all data, including protected images and other file types.

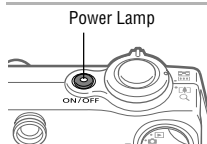

1 Press the power button until the power lamp lights green.




2 Press the MENU button.


The (Rec.) or (Play) menu is displayed.




3 Use the button to select the (Set up) menu.

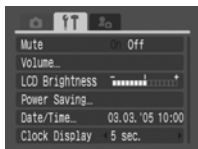

4 Use the or button to select [Format] and press the FUNC./SET button.

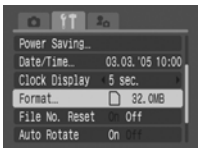

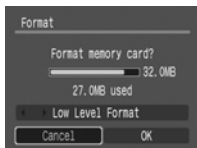

5 Use the **→** button to select [OK] and press the **FUNC./SET** button.

- To perform a low level format, use the **↑** button to select [Low Level Format] and the **←** or **→** button to add a check mark.
- To exit instead of formatting, select [Cancel].
- If [Low Level Format] is selected, you can stop formatting partway by pressing the **FUNC./SET** button. You can still use the SD card without problem even if formatting was halted partway.
- The capacity of the SD card displayed after formatting will be less than the rated capacity of the SD card. This is not a malfunction of the SD card or camera.



• Low Level Format

You should select the Low Level Format option if you suspect the read/write speed of an SD card has dropped or if you wish to completely erase its data. A low level format may require 2 to 3 minutes with some SD cards.

- When the camera is malfunctioning, a corrupted SD card might be the cause. Reformatting the SD card may solve the problem.
- When a non-Canon brand SD card is malfunctioning, reformatting it may solve the problem.
- SD cards formatted in other cameras, computers, or peripheral devices may not operate correctly in this camera. When that happens, reformat the SD card with this camera. If formatting in the camera does not work properly, turn the camera off and re-insert the SD card. Then turn the camera back on and format again.

SD Card Handling Precautions






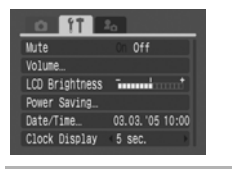




- SD cards are high-precision electronic devices. Do not bend them, apply force to them, or subject them to shocks or vibration.
- Do not attempt to disassemble or alter the SD card.
- Do not allow dirt, water or foreign objects to contact the terminals on the back of the card. Do not touch the terminals with your hands or metal objects.
- Do not peel away the original label on the SD card or cover it with another label or sticker.
- When writing on the SD card, use a soft point pen (e.g. felt-tip pen). Using a sharp point pen (e.g. ball-point pen) or pencil may damage the SD card or corrupt the recorded data.
- Since some or all of the data recorded on the SD card may be corrupted or erased by electrical noise, static electricity or card malfunction, making a backup copy of important data is recommended.
- Moving an SD card rapidly between temperature extremes will cause condensation to form in the card and lead to a malfunction. To avoid condensation, place the SD card in a sealed plastic bag before moving it into a different temperature zone and allow it to adjust slowly to the new temperature.
- If condensation forms on the SD card, store it at room temperature until the water droplets have evaporated naturally.
- Do not use or store SD cards in the following locations.
 - Locations subject to dust or sand
 - Locations subject to high humidity and high temperatures


Precaution for Multi Media Cards

This camera is designed to perform optimally when used with genuine Canon-brand SD cards. You may use multi media cards with this camera. However, Canon makes no warranties concerning the use of multi media cards.

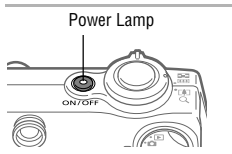Setting the Date and Time

The Date/Time menu will appear the first time the camera power is turned on or whenever the built-in rechargeable lithium-ion date/time battery charge is low. Start from Step 5 to set the date and time.

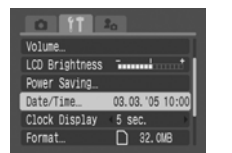- | | |
|--|--|
|  | <p>1 Press the power button until the power lamp lights green.</p> |
|  | <p>2 Press the MENU button. The  (Rec.) or  (Play) menu is displayed.</p> |
|   | <p>3 Use the → button to select the  (Set up) menu.</p> |
|    | <p>4 Use the ↑ or ↓ button to select [Date/Time] and press the FUNC./SET button.</p> |

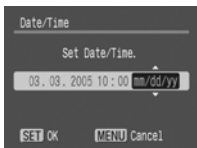

5 Set the date and time.

- Use the ◀ or ▶ button to select a field (year, month, day, hour, minute and date format).
- Use the ▲ or ▼ button to change its value.
- The date can be set up to the year 2037.



6 Press the FUNC./SET button.

The setting is complete.



7 Press the MENU button.

The display will return to the shooting or playback screen.



- Please note that the date and time settings may be lost if the camera battery has been removed for more than three weeks. Reset them when this occurs.
- For embedding the date on the image data, refer to page 77.
- To set the camera so that the date and time will not appear on the image when it is being shot but only when it is printed, see *Setting the Print Style* (p. 140), the *Direct Printer User Guide* or the *Software Starter Guide* supplied with the camera.



Charging the Date/Time Battery

- The camera has a built-in rechargeable lithium-ion battery for saving settings such as the date and time. This battery is recharged by the battery pack while it is in the camera. Right after purchasing the camera, leave a charged battery pack in the camera, or plug in AC Adapter Kit ACK900 (sold separately), for about 4 hours to charge the date/time battery. It will charge even when the camera power is turned off.
- If the Date/Time menu appears when the camera power is turned on, the date/time battery charge is low. Use the above method to recharge it.

Using the Clock

You can display the current date and time for a 5-second* interval using the following methods. This is convenient for confirming the shooting date and time.

* Default setting




- **Holding the FUNC./SET Button While Pressing the Power Button**
 - The start-up image will not display at startup, also the start-up sound will not play.
 - The Date/Time menu will display if the time has not been set.
 - The Display Off function will not work while the clock display is on.
- **Pressing and Holding the FUNC./SET Button in Shooting Mode**


The clock display will differ according to the camera orientation.

- Camera held horizontally: only the time displays
- Camera held vertically: both the time and date display

While the clock display is on, you can change the display color by pressing the **←** or **→** button or by firmly holding and gently shaking the camera as shown in the illustration. Feel free to change to your preferred color.

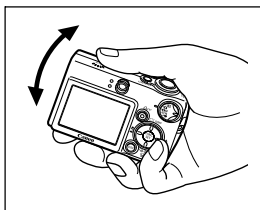











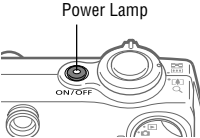


The clock display will cease when the display interval is over or when you operate any one of the **FUNC./SET**, **MENU** or Shutter buttons or the mode dial.

- The clock cannot be displayed when menus are displayed with the **MENU** button.
- The clock's display interval can be changed in the  (Set up) menu (p. 55).

Setting the Language

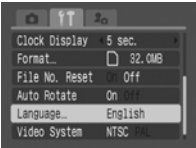Use this feature to select the language for the LCD monitor display.

| | |
|--|---|
|  | 1 Press the power button until the power lamp lights green. |
|  | 2 Press the MENU button. The  (Rec.) or  (Play) menu is displayed. |
|   | 3 Use the  button to select the  (Set up) menu. |
|    | 4 Use the  or  button to select [Language] and press the FUNC./SET button. |



- 5** Use the **↑**, **↓**, **←** or **→** button to select a language and press the **FUNC./SET** button.

| | | |
|------------|-----------|---------|
| English | Norsk | Polski |
| Deutsch | Svenska | Čeština |
| Français | Español | Magyar |
| Nederlands | 简体中文 | Türkçe |
| Dansk | Русский | 繁體中文 |
| Suomi | Português | 한국어 |
| Italiano | Ελληνικά | 日本語 |



- 6** Press the **MENU** button.




The display will return to the shooting or playback screen.



You can display the Language menu directly by holding down the **FUNC./SET** button and pressing the **MENU** button while in single image playback or index playback mode.

Turning the Power On

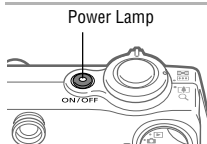

Press the power button until the indicator lights green.

The lens extends when the mode dial is set to , , or .

To Turn the Power Off

Press the power button again.



- If the "Card locked!" message appears right after the power is turned on, the SD card cannot record (p. 24).
- The Date/Time menu will appear the first time the camera power is turned on or whenever the built-in rechargeable lithium-ion battery charge is low. Reset the date and time when this occurs (p. 29).
- If the power saving function activates, press the power button to restore power.
- You will hear a start-up sound and see the start-up image when the power is turned on. To change the start-up sound and image, see pp. 54, 57, 157.
- The start-up image does not display when the camera is connected to a TV via the A/V OUT terminal.

Turning On the Power without the Start-Up Sound

Hold the **MENU** button while pressing the power button. This will set the [Mute] setting to [On] and silence the operation sound and the shutter sound. This is convenient when you wish to shoot silently.

Power Saving Function

This camera is equipped with a power saving function.

When this function is turned on and it activates, restore power by pressing the power button.

Shooting Mode: Powers down approximately 3 minutes after the last control is accessed on the camera.
The LCD monitor automatically turns off 1 minute* after the last control is accessed even if [Auto Power Down] is set to [Off]. Press any button other than the power button or change the camera orientation to turn the LCD monitor back on.

* This time can be changed (p. 55).

Playback Mode: Powers down approximately 5 minutes after the last control is accessed on the camera.

Connected to a Printer (sold separately):

Powers down approximately 5 minutes after the last control is accessed on the camera.

- The power saving function will not activate during a slide show or while the camera is connected to a computer.
- The power saving function can be turned off (p. 55).

Using the LCD Monitor

The LCD monitor can be used to compose images while shooting, adjust menu settings and play back recorded images. Icons showing the camera's status and setting contents appear on the LCD monitor.



The image in the LCD monitor will darken in strong sunlight or bright light. This does not constitute a malfunction.

Shooting Mode (📷, 📷M, SCN, 📷) (p. 40)



Press the DISP. button.

The display mode changes as follows with each press.

▶ Standard (No Information)



▶ Detailed (Information View)



Off



- The LCD monitor setting (On or Off) is saved by the camera when the power is turned off so that the same setting is automatically available when the power is turned on again. However, the setting may be lost when the power has been turned off after the "Change the battery pack" message has displayed, while the LCD monitor was on in Shooting mode.
- The LCD monitor does not shut off in the 📷, 📷M, 📷 or 📷 mode.


Playback Mode (▶) (p. 41)

When the mode dial is set to ▶, the LCD monitor will turn on.



Press the DISP. button.

The display mode changes as follows with each press.

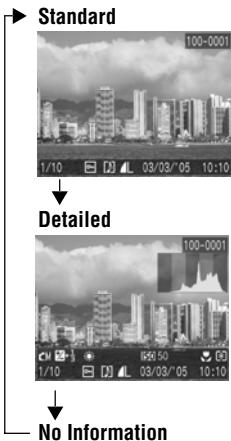

In index playback mode (p. 115), the detailed display is not available.

LCD Monitor Brightness

The brightness of the LCD monitor can be adjusted to better suit the shooting conditions. When shooting in dark conditions, the camera will also automatically brighten the LCD monitor.

LCD Monitor Brightness Settings

The brightness of the LCD monitor can be changed in the following two ways.

- **Changing Settings Using the Set up Menu (p. 54)**
- **Changing Settings Using the DISP. Button (Quick-bright LCD Function)**

Pressing the **DISP.** button for at least 1 second switches the brightness to the highest setting. Pressing it again for at least 1 second restores it to the original setting.

If you set the brightness to the highest setting using this method and turn the camera power off, the brightness setting will revert to the value set in the Set up menu.

Night Display

When shooting in dark conditions, the camera automatically brightens the LCD monitor to suit the brightness of the subject*, making it easier to frame the subject.

* Noise will appear, and the movements of the subject will appear irregular in the LCD monitor. The brightness of the image displayed in the monitor, and the brightness of the actual image recorded will be different.




Information Displayed on the LCD Monitor

When shooting or playing back images, the shooting information, review information or replay information appears on the LCD monitor.

Shooting Information (Shooting Mode)


When setting the flash, continuous mode, self-timer, macro mode, infinity mode, or the metering method, the shooting information displays on the LCD monitor for approximately 6 seconds even if the LCD monitor is set to Standard (No Information) or Off. It may not display under some circumstances, depending on the selected settings.



A slow shutter speed has likely been selected because of insufficient lighting if the upper indicator beside the viewfinder blinks orange after the metering preparations are complete and the camera shake icon  appears in the LCD monitor. Set the flash to  or , or affix the camera to a tripod to shoot.



- Right after a shot is taken, the image and its information appear in the LCD monitor for 2 seconds (or the selected number of seconds if the review time was changed or until the shutter button is pressed again if the Hold option is selected) even if you release the shutter button (p. 61). If you continue to press the shutter button right after shooting an image, or press the **FUNC./SET** button while the image is displayed, the image will continue to display.
- While a recorded image is displayed on the LCD monitor, you can check the exposure with the graph (see *Histogram Function* p. 42) that shows the distribution of the brightness data. If the exposure requires adjustment, set the exposure compensation and reshoot. Press the **DISP.** button if the histogram and other information are not shown.

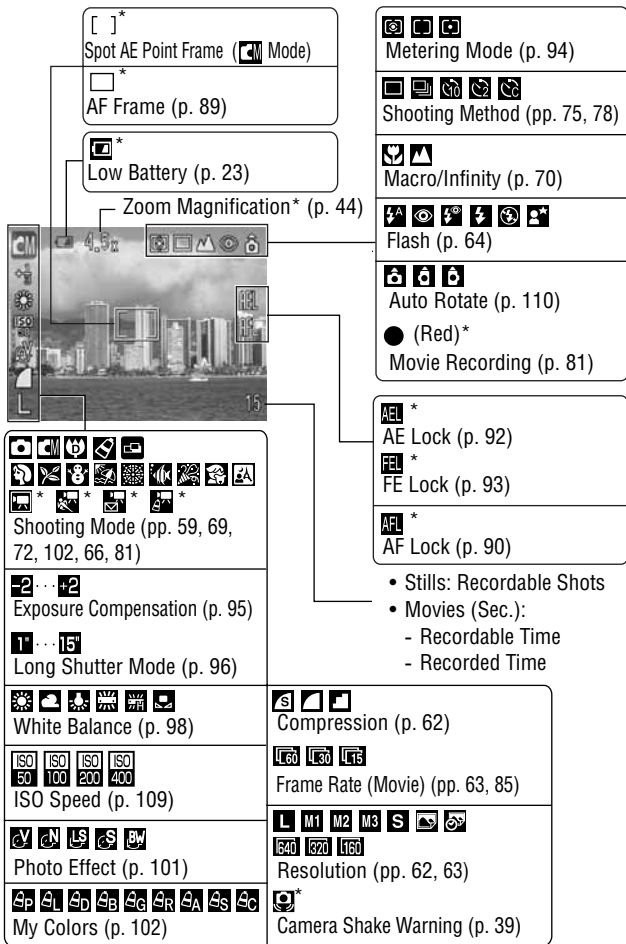

* Appears even if the LCD monitor is set to Standard (No Information).

Zoom powers indicate the combined optical and digital amount of zoom. These figures appear when the digital zoom is activated.

Playback Information—Standard (Playback Mode)

File Number

Compression (Still Images) (p. 62)

Resolution (Still Images) (p. 62)

AVI
Movie (p. 118)

Shooting Date/Time

WAVE Format Sound (p. 125)

Protection Status (p. 130)

Total number of images

Displayed image number

Playback Information—Detailed (Playback Mode)

Histogram

Shooting Mode (pp. 59, 69, 72, 102, 66, 81)

Exposure Compensation (p. 95)

Long Shutter Mode (p. 96)

Flash (p. 64)

Macro/Infinity (p. 70)

Metering Mode (p. 94)

Movie Length Shown on Movies (p. 81)

White Balance (p. 98)

Photo Effect (p. 101)





My Colors (p. 102)

ISO Speed (p. 109)

Resolution (Movies) (p. 63)

Frame Rate (Movie) (pp. 63, 85)

The following information may also be displayed with some images.

| | |
|---|---|
|  | A sound file in a format other than the WAVE format is attached or the file format is not recognized. |
|  | JPEG image not conforming to Design rule for Camera File System Standards |
|  | RAW image |
|  | Unrecognized data type |



Please note that image information recorded by this camera may not display correctly on other cameras and image information recorded by other cameras may not display correctly on this camera.

Histogram Function

The histogram is a graph that allows you to judge the brightness of the shot image. The greater the bias toward the left in the graph, the darker the image. The greater the bias toward the right, the brighter the image. If the image is too dark, adjust the exposure compensation to a positive value. Similarly, adjust the exposure compensation to a negative value if the image is too bright (p. 95).


Sample Histograms



Dark Image




Balanced Image



Bright Image

Using the Viewfinder

The viewfinder can be used to conserve power by turning the LCD monitor off (p. 36) while shooting.

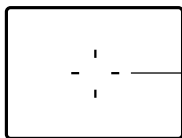

Shows the center of the image

Viewfinder



Image Seen in Viewfinder vs. Recorded Image

Usually the recorded image contains more of the scene than is seen in the viewfinder. Confirm the actual image size with the LCD monitor. The image recorded may differ from what is seen in the viewfinder due to the distance between the viewfinder and lens (especially with close-ups). If you use the viewfinder to take close-up shots, portions of the close-up subject may not appear in the recorded image. Use the LCD monitor when taking close-up shots (p. 70).

About the Autofocus Function


This camera employs AiAF (artificial intelligence autofocus) technology which uses a broad metering field to calculate the focal distance with high precision. It delivers a crisp focus even when the photographic subject is slightly off-center.

The AiAF function can be turned off so that the autofocus is metered from a fixed AF frame at the center of the field (p. 89).



Using the Zoom

The zoom can be adjusted from 37 mm to 111 mm in 35mm film equivalent terms.

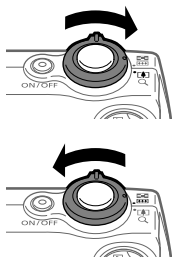Telephoto/Wide Angle



1 Press the zoom lever toward  or .

- Press the zoom lever toward  to zoom in (telephoto).
- Press the zoom lever toward  to zoom out (wide angle).

Digital Zoom

When the LCD monitor is on, you can shoot with a combined optical and digital zoom up to approximately 12x (p. 74).




Images become coarser the more they are digitally zoomed.

Pressing the Shutter Button

The shutter button features a two-stage action.

1. Pressing Halfway

Automatically sets such settings as the exposure and focus.

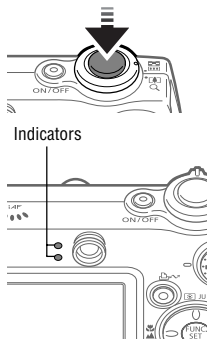

Press the shutter button halfway.

● Beep

- Focused: 2 beeps
- Focusing difficulty: 1 beep

● Indicator Status

Upper Indicator

- Green: Metering complete
- Orange: Flash will fire
- Blinking Orange: Camera shake warning/
Insufficient exposure

Lower Indicator

- Yellow: Macro mode/Infinity
mode/AF lock (p. 70,
90)

- Blinking Yellow: Focusing difficulty*

* Use the focus lock or AF lock to shoot when the indicator blinks yellow (p. 90).

● AF Frame Status (LCD Monitor On)

AiAF On (p. 89)


- Green Frame: Metering complete
(focused AF frame)
- No Frame: Focusing difficulty

AiAF Off (p. 89) (Center AF Frame)

- Green Frame: Metering complete
- Yellow Frame: Focusing difficulty

2. Pressing Fully

Pressing the shutter button down fully activates the shutter and causes the shutter sound to play.






Press the shutter button fully.

While the image is being recorded to the SD card, the indicator blinks green.



Shots cannot be taken while the flash is charging.

AF-assist Beam

- The AF-assist Beam will sometimes emit when the shutter button is pressed halfway to assist focusing in certain conditions, e.g., dark conditions.
- The AF-assist Beam can be turned off (p. 52).
For example, if animals are your subject, turn off the beam when shooting in the dark to avoid startling them.
However, please keep in mind the following facts.
 - Turning the AF-assist Beam off or shooting in dark places may make it more difficult for the camera to focus.
 - The red-eye reduction lamp may emit when the flash is set to ,  or  even if the AF-assist Beam is turned off.

Selecting Menu and Settings

Menus are used to adjust shooting and playback settings, as well as other camera settings like the Date/Time and sounds. Menus are displayed by pressing the **FUNC./SET** or **MENU** button according to the circumstances. Use the following procedures to select settings.



Some menu options may not be selectable in certain shooting modes (p. 192).

Selecting Menu Settings with the FUNC./SET Button (Shooting Mode only)

| | |
|--|--|
| | 1 Turn the mode dial to , M , SCN or . |
| | 2 Press the FUNC./SET button. |
| | 3 Select the shooting mode with the or button (except in Auto mode). |
| | 4 Use the or button to select an item. Please see the <i>FUNC. Menu</i> topic on the next page for the selectable menu items. |
| | 5 Use the or button to select an option. <ul style="list-style-type: none">• Some menu items allow you to make further settings by pressing the MENU button.• You can shoot right after performing these steps. The menu displays again after the shot, allowing you to change the settings easily. |
| | 6 Press the FUNC./SET button. |

FUNC. Menu

() Manual Mode (p. 69)



() Special Scene Mode (p. 66)




() Movie Mode (p. 81)




() Exposure Compensation (p. 95)



() Long Shutter Mode (p. 96)




() White Balance (p. 98)





() ISO Speed (p. 109)



() Photo Effect (p. 101)



() My Colors (p. 102)



() Compression (p. 62)




() Frame Rate (p. 85)



() Resolution (p. 62)






















() Resolution (Movie) (p. 63)



() Items in parentheses show default settings.

Selecting Menu Settings with the MENU Button

| | |
|---|---|
|  | 1 Turn the mode dial to  ,  , M , SCN ,  or  . |
|  | 2 Press the MENU button. In Shooting mode, the  (Rec.) menu appears. In Playback mode, the  (Play) menu appears. |
|  | 3 Use the ← or → button to select the Rec./Play , Set up , or My Camera menu. <ul style="list-style-type: none">• Select the menu with the  / ,  or  icon in the upper left corner of the LCD monitor selected.• The zoom lever lets you select the menu even if the  / ,  or  icon is not selected. |
|  | 4 Use the ↑ or ↓ button to select an item. <i>See Menu Settings and Factory Defaults (p. 52).</i> |
|  | 5 Use the ← or → button to select an option. Menu items followed by an ellipsis (...) can only be selected after pressing the FUNC./SET button to display the next menu. Press the FUNC./SET button again to confirm the setting. |



6 Press the MENU button.

- The menu will close.
 - In Shooting mode, the menu can be closed by pressing the shutter button halfway.
-

Shooting Mode



Playback Mode




Rec. Menu




(The menu will appear slightly different depending on the Shooting mode)


Play Menu

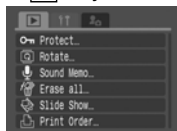

Set up Menu

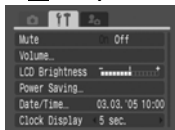

My Camera Menu

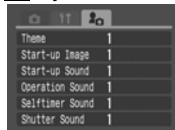

- When the My Camera menu is displayed, pressing the button displays the Rec./Play menu.
- When the Rec./Play menu is displayed, pressing the button displays the My Camera menu.

Shooting Mode
Playback Mode




: Selects items.
 : Selects options.





Menu Settings and Factory Defaults








This chart shows the options and default settings for each menu.

* Default setting








| Rec. Menu | | |
|-----------------------|--|----------------|
| Menu Item | Options | Reference Page |
| AiAF | Sets whether or not the camera automatically selects the AF frame or a fixed center AF frame. <ul style="list-style-type: none"> • On* • Off | p. 89 |
| Self-timer | Sets the duration of the self-timer delay. <ul style="list-style-type: none"> •  10 seconds* •  2 seconds •  Custom Timer Delay: 0-10*, 15, 20, 30 sec. Shots: 1-10 (3*) | p. 78 |
| AF-assist Beam | Sets the AF-assist Beam to on or off. <ul style="list-style-type: none"> • On* • Off | p. 46 |
| Digital Zoom | Sets the digital zoom to on or off. It can be set to [On] or [Off] for a movie in standard mode, but the default setting is [On]. <ul style="list-style-type: none"> • On • Off* | p. 74 |
| Review | Sets the duration images display on the LCD monitor after the shutter button releases. <ul style="list-style-type: none"> • Off • 2* to 10 seconds • Hold | p. 60 |
| Date Stamp | Sets the date stamp for postcard prints with embedded date stamps. <ul style="list-style-type: none"> • Off* • Date • Date & Time | p. 77 |
| Save Original | Sets whether or not to save the original image (normal image) when shooting in a My Colors mode. <ul style="list-style-type: none"> • On • Off* | p. 104 |

| Menu Item | Options | Reference Page |
|----------------------|--|----------------|
| Long Shutter | Sets the shutter speed to slow settings. <ul style="list-style-type: none"> • On • Off* | p. 96 |
| Stitch Assist | Images are shot in overlapping series to create single panoramic images. <ul style="list-style-type: none"> •  Left to right* •  Right to left | p. 86 |

Play Menu

| Menu Item | Options | Reference Page |
|---|--|----------------|
|  Protect | Protects images from accidental erasure. | p. 130 |
|  Rotate | Rotates images clockwise 90° or 270° in the display. | p. 123 |
|  Sound Memo | Adds sound memos to images. | p. 124 |
|  Erase all | Deletes all images from an SD card (except for protected images). | p. 132 |
|  Slide Show | Plays images automatically one after the other. | p. 126 |
|  Print Order | Selects images and the number of print copies for output to a direct print compatible printer or photo developing service. | p. 136 |
|  Transfer Order | Specifies settings for images before downloading to a computer. | p. 142 |

Set up Menu



| Menu Item | Options | Reference Page |
|-----------------------|--|------------------|
| Mute | <p>Set to [On] to silence the start-up, shutter, operation and self-timer sounds all at once.</p> <p>See <i>How the [Mute] option in the  (Set up) Menu and Sounds in the  (My Camera) Menu Interact</i> (p. 57).</p> <ul style="list-style-type: none"> • On • Off* <p>However, a warning will still sound when the SD card slot/battery cover is opened while an image is being written to the SD card even if the Mute function is set to [On].</p> | - |
| Volume | <p>Adjusts the volume of the start-up sound, operation sound, self-timer sound, shutter sound and playback sound. The volume cannot be adjusted if [Mute] is set to [On].</p> <p style="text-align: center;">  Off 1 2* 3 4 5 </p> | - |
| Start-up Vol. | Adjusts the volume of the start-up sound when the camera power is turned on. | p. 34 |
| Operation Vol. | Adjusts the volume of the operation sound that beeps when any button other than the shutter button is pressed. | - |
| Selftimer Vol. | Adjusts the volume of the self-timer sound played 2 sec. before the shutter is released. | p. 78 |
| Shutter Volume | Adjusts the volume of the sound played when the shutter releases. The shutter sound does not play when a movie is recording. | p. 45 |
| Playback Vol. | Adjusts the volume of movie sounds and sound memos. | p. 118 p. 124 |
| LCD Brightness | <p>Adjusts the LCD brightness of the LCD monitor.</p> <ul style="list-style-type: none"> • -7 to 0* to +7 <p>Use the  or  button to adjust the brightness. If you press the  or  button, the display returns to the Set up menu. You can check the brightness in the LCD monitor while you are adjusting the setting.</p> | p. 38 |

| Menu Item | Options | Reference Page |
|------------------------|---|----------------|
| Power Saving | Sets the [Auto Power Down] and [Display Off] options. | |
| Auto Power Down | Sets whether or not the camera automatically powers down after a set period of time elapses without something being pressed. • On* • Off | p. 35 |
| Display Off | Sets the length of time before the LCD monitor turns off when no camera operation is performed. • 10 sec. • 20 sec. • 30 sec. • 1 min.* • 2 min. • 3 min. | |
| Date/Time | Sets the date and time and the date format. | p. 29 |
| Clock Display | Sets the length of time for which the clock displays. • 0 – 5* – 10 sec. • 20 sec. • 30 sec. • 1 min. • 2 min. • 3 min. | p. 31 |
| Format | Formats (initializes) SD cards. | p. 26 |
| File No. Reset | Sets how file numbers are assigned to images when new SD cards are inserted. • On • Off* | p. 111 |
| Auto Rotate | Sets whether or not images shot with the camera held vertically are automatically rotated in the display. • On* • Off | p. 110 |











| Menu Item | Options | Reference Page |
|---------------------|--|----------------|
| Language | Sets the language used in menus and messages on the LCD monitor. <ul style="list-style-type: none"> • English* • Deutsch (German) • Français (French) • Nederlands (Dutch) • Dansk (Danish) • Suomi (Finnish) • Italiano (Italian) • Norsk (Norwegian) • Svenska (Swedish) • Español (Spanish) • 简体中文 (Simplified Chinese) • Русский (Russian) • Português (Portuguese) • Ελληνικά (Greek) • Polski (Polish) • Čeština (Czech) • Magyar (Hungarian) • Türkçe (Turkish) • 繁體中文 (Traditional Chinese) • 한국어 (Korean) • 日本語 (Japanese) | p. 32 |
| Video System | Sets the video output signal standard. <ul style="list-style-type: none"> • NTSC • PAL | p. 156 |

My Camera Menu


You can select the start-up image and sound, operation sound, self-timer sound and shutter sound used on this camera.

These are called the My Camera settings. You can also customize the  and  options for each item with images recorded on the SD card and newly recorded sounds or by using the supplied software.

See the *Software Starter Guide* for details.



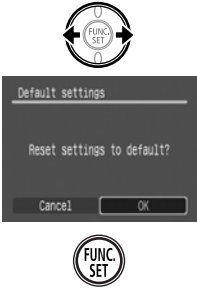
| Menu Item | Available Settings | Reference Page |
|--|--|----------------|
|  Theme | Selects a common theme for each My Camera settings item. | p. 157 |
|  Start-up Image | Sets the image displayed when the camera power is turned on. | |
|  Start-up Sound | Sets the sound played when the camera power is turned on. | |
|  Operation Sound | Sets the sound played when any button other than the shutter button is pressed. | |
|  Selftimer Sound | Sets the sound played 2 seconds before the shutter releases in self-timer mode. | |
|  Shutter Sound | Sets the sound played when the shutter button is pressed. There is no shutter sound for movies. | |
| My Camera Menu Contents | <ul style="list-style-type: none"> •  (Off) •  * •  •  | |

• How the (Set up) Menu and Sounds in the (My Camera) Menu Interact

To turn off each sound, such as the start-up sound, shutter sound, operation sound and self-timer sound, [Mute] must first be set to [On] in the  (Set up) menu. When [Mute] is set to [On], each sound option will not play even if they are set individually to [On]. The warning sound, however, will play even when [Mute] is set to [On].

Resetting Settings to Their Default Values

You can reset the menu and button settings to the default settings in one operation.
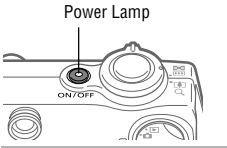
| | |
|---|--|
|  | <p>1 Press the power button. The mode dial can be in any position.</p> |
|  | <p>2 Press and hold the MENU button for more than 5 seconds.</p> |
|  | <p>3 Use the ← or → button to select [OK] and press the FUNC./SET button. To exit without resetting, select [Cancel].</p> |








- Settings cannot be reset when the camera is connected to a computer or to a printer.
- The following cannot be reset.
 - Shooting mode
 - The Date/Time, Language and Video System options in the **IT** (Set up) menu (p. 55, p. 56)
 - White balance data recorded with the custom white balance function (p. 98)
 - Colors specified in the Color Accent (p. 105) or Color Swap (p. 106) modes of My Colors.
 - Newly added My Camera settings (p. 159)

Shooting in Auto Mode



In this mode, all you have to do is press the shutter button and let the camera do everything else.

- | | |
|--|---|
|  | <p>1 Turn the mode dial to  (Auto).</p> |
| | <p>2 Aim the camera at the subject.</p> |
|  | <p>3 Use the zoom lever to achieve the desired composition (relative size of subject in viewfinder) (p. 44).</p> |
|  | <p>4 Press the shutter button halfway (p. 45).</p> <ul style="list-style-type: none"> • Two beeps will play when the camera has finished metering, and the upper indicator beside the viewfinder will light green or orange. If the LCD monitor is on, the AF frame will appear green. • If the subject is difficult to focus on, the lower indicator beside the viewfinder will blink yellow and the beep will play one time. |
|  | <p>5 Press the shutter button fully (p. 46).</p> <ul style="list-style-type: none"> • You will hear the sound of the shutter when the shutter activates. • The picture appears for two seconds on the LCD monitor. |




- See *Functions Available in Each Shooting Mode* (p. 192).
- With the Review function, you can change the length of time images show on the LCD monitor after shooting, or set it so they do not show at all (p. 60).

Reviewing an Image Right After Shooting




Right after a shot is taken, the image appears in the LCD monitor for 2 seconds. In addition, the images will keep on displaying regardless of the review duration setting if one of the following operations is performed.

- **Keeping the shutter button pressed after a shot.**
- **Pressing the FUNC./SET button while the image is displayed on the LCD monitor (except in  mode).**


Press the shutter button halfway to stop displaying it so that you can shoot the next frame.



- You can do the following while the image is displayed (except in  mode).
 - Display the image's information (p. 39).
 - Erase the image (p. 131).
 - Display the magnified image (p. 114).
(when the image is displayed with the **FUNC./SET** button or the Hold option has been selected)

Changing the Review Duration

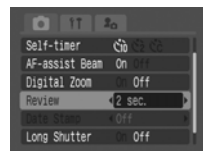

The default review time is 2 seconds. You can set the review time for an image to [Off], a range between 2 and 10 seconds, or [Hold].



1 In the  (Rec.) menu, select [Review].

See *Selecting Menus and Settings* (p. 47).



2 Use the  or  button to select the review setting and press the MENU button.



- With the [Off] option, the image will not automatically display.
- In the [2 sec.] to [10 sec.] range, the image will continue to display for the specified time even if the shutter button is released.
- With the Hold option, the image displays until the shutter button is next pressed.
- You can shoot the next image while an image is still displayed.

Changing Resolution/Compression Settings














You can change the compression (excluding movies) and resolution settings to suit the purpose of the image you are about to shoot.


| Resolution | | Purpose |
|---|-----------------|--|
| L (Large) 3072 x 2304 pixels | High Low | <ul style="list-style-type: none"> Print up to A3-size prints 297 mm x 420 mm (11.7 x 16.5 in.) |
| M1 (Medium 1) 2592 x 1944 pixels | | <ul style="list-style-type: none"> Print larger than A4-size prints* 210 x 297 mm (8.3 x 11.7 in.) Print larger than Letter-size prints* 216 x 279 mm (8.5 x 11 in.) |
| M2 (Medium 2) 2048 x 1536 pixels | | <ul style="list-style-type: none"> Print up to A4-size prints* 210 x 297 mm (8.3 x 11.7 in.) Print up to Letter-size prints* 216 x 279 mm (8.5 x 11 in.) |
| M3 (Medium 3) 1600 x 1200 pixels | | <ul style="list-style-type: none"> Print postcard-size prints 148 x 100 mm (6 x 4 in.) Print L-size prints 119 x 89 mm (4.7 x 3.5 in.) |
| S (Small) 640 x 480 pixels | | <ul style="list-style-type: none"> Send images as e-mail attachments Shoot more images |
| (Postcard Date Imprint Mode) 1600 x 1200 pixels | | <ul style="list-style-type: none"> The resolution is set to M3 (1600 x 1200) and the compression to (Fine). See <i>Postcard Date Imprint Mode</i> (p. 76). |

* Paper sizes vary according to region.

| Compression | | Purpose |
|------------------|----------------------------|---|
| Superfine | High Quality Normal | <ul style="list-style-type: none"> Shoot higher quality images |
| Fine | | <ul style="list-style-type: none"> Shoot normal quality images |
| Normal | | <ul style="list-style-type: none"> Shoot more images |

Movies can be shot with the following resolutions.

| | Resolution | Frame Rate | | |
|--|--|---|---|---|
| | |  frames/sec. |  frames/sec. |  frames/sec. |
|  Standard |  640 x 480 pixels | – | <input type="radio"/> | <input type="radio"/> |
|  My Colors |  320 x 240 pixels | – | <input type="radio"/> | <input type="radio"/> |
|  Fast Frame Rate |  320 x 240 pixels | <input type="radio"/> | – | – |
|  Compact |  160 x 120 pixels | – | – | <input type="radio"/> |

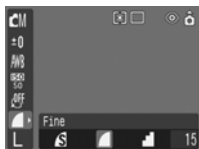



1 In the **FUNC.** menu, select * or .

See *Selecting Menus and Settings* (p. 47).

* The current setting is displayed.



2 Use the  or  button to select an option.

- For movies, see page p.81.
- You can shoot right after selecting an option. The menu displays again after the shot, allowing you to change the settings easily.



3 Press the **FUNC./SET** button.

The display will return to the shooting screen.



- See *Image Data Sizes (Estimated)* (p. 179).
- See *SD Cards and Estimated Capacities* (p. 178).

⚡ Using the Flash



Use the flash according to the guidelines below.

| | | |
|--|--|---|
| | Auto | The flash fires automatically as required by the light level. |
| | Auto with red-eye reduction | The flash fires automatically as required by the lighting level, and the red-eye reduction lamp fires each time the main flash fires. |
| | Flash on with red-eye reduction | The flash and red-eye reduction lamp fire with each shot. |
| | Flash on | The flash fires with every shot. |
| | Flash off | The flash will not fire. |
| | Slow Synchro | The flash timing is adjusted to slow shutter speeds. This reduces the chance that only the background will appear dark when a person is shot against a twilight background or night scene or when a night scene or interior shot is taken. The red-eye reduction lamp fires with each shot. Use of a tripod is recommended. |

| | M | | | | |
|--|---|---|---|---|---|
| | | | | | |
| | ○ | ○ | — | ○ | — |
| | ○ | ○ | — | ○ | — |
| | — | — | — | — | — |
| | — | ○ | — | ○ | △ |
| | ○ | ○ | ○ | ○ | △ |
| | — | ○ | — | ○ | △ |

| | SCN | | | | | | | | | |
|--|-----|---|---|---|---|---|---|---|---|---|
| | | | | | | | | | | |
| | ○ | ○ | ○ | ○ | — | ○ | ○ | ○ | ○ | ○ |
| | ○ | ○ | ○ | ○ | — | ○ | ○ | ○ | ○ | ○ |
| | ○ | ○ | ○ | ○ | — | ○ | ○ | ○ | ○ | ○ |
| | ○ | ○ | ○ | ○ | — | ○ | ○ | ○ | ○ | ○ |
| | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ |
| | — | — | — | — | — | — | — | — | — | — |


○ Setting available △ Can be selected for the first image only



1 Press the button to switch between flash modes.

The selected flash mode appears on the LCD monitor.






- When you use the flash at higher ISO speeds, the chances of white streaks appearing in the image increase the closer you approach to the subject.
- Since a slow shutter speed is selected in dark places when the flash is set to Off or Slow Synchro, take care to avoid camera shake. You are recommended to shoot with the camera fixed to a tripod or other device if the camera shake warning icon  appears.



- The flash can be fired when the indicator lights a steady orange after pressing the shutter button halfway.
- The flash may take up to approximately 10 seconds to charge. The recharging time will vary with such factors as the shooting conditions and battery charge. Shots cannot be taken while the flash is charging.
- The flash fires twice. The main flash follows a pre-flash. The exposure reading obtained from the subject with the pre-flash is used to set the optimal flash intensity for the main flash, which is used to capture the image.
- When using the flash for standard photography, be sure to shoot from a distance of at least 50 cm (1.6 ft.) away from your subject.










Red-Eye Reduction

- Light reflecting back from eyes can make them appear red when the flash is used in dark areas. Under these conditions, use the red-eye reduction mode. For this mode to be effective, the subject must be looking right at the red-eye reduction lamp. Try asking them to look directly at the lamp. Even better results can be obtained by increasing the lighting in indoor settings or approaching closer to the subject.
- The shutter will not activate for approximately 1 second after the red-eye reduction lamp fires in order to improve the effect. If you want a more immediate shutter response, set the flash to ,  or .

SCN Shooting in a Special Scene Mode

SCN


You can take an optimal picture simply by selecting the appropriate shooting mode.

| | | |
|---|-----------------------|---|
|  | Portrait | Blurs the background and makes a person stand out. |
|  | Foliage | Shoots trees and leaves—such as new growth, autumn leaves or blossoms—in vivid colors. |
|  | Snow | Shoots without a blue tinge and without making people appear dark against a snowy background. |
|  | Beach | Shoots without making people appear dark near water or sand where reflected sunlight is strong. |
|  | Fireworks | Captures fireworks in the sky crisply and at an optimal exposure. |
|  | Underwater | Appropriate for shooting images with the Waterproof Case WP-DC70 (sold separately). This mode uses an optimal white balance setting to reduce bluish tones and record images with natural hues. It controls the settings so that it limits the firing of the flash to the greatest possible extent. |
|  | Indoor | Prevents camera shake and maintains the subject's true color when shooting under florescent or tungsten lightning. The exposure is regulated so as to avoid the use of flash as much as possible. |
|  | Kids&Pets | Allows you to capture subjects that move around, such as children and pets, without missing photo opportunities. |
|  | Night Snapshot | Use this to take snapshots of people against twilight or night backgrounds to reduce the effects of camera shake even without using a tripod. |

 **Portrait**



 **Foliage**

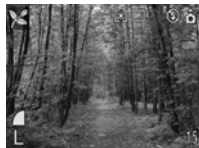


 **Snow**





1 Turn the mode dial to **SCN (Special Scene Mode)**.

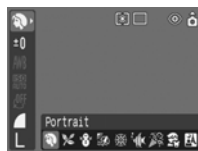

2 Choose a shooting mode from the **FUNC. menu**.







- See *Selecting Menus and Settings* (p. 47).
- You can shoot right after selecting an option. The menu displays again after the shot, allowing you to change the settings easily.






3 Press the **FUNC./SET** button.

- The display will return to the shooting screen and the icon of the selected shooting mode will appear on the LCD monitor.
- Except for the **📷** mode, the shooting procedures are the same as for *Shooting in Auto Mode* (p. 59).
- To shoot in **📷** mode, refer to the *Waterproof Case User Guide* that accompanies Waterproof Case WP-DC70 (sold separately).



-
- The shutter speed is slow in  (fireworks) mode. Always use a tripod to avoid camera shake.
 - In , ,  and  modes (depending on the scene being shot), the ISO speed may increase and cause noise in the image.
 - In  mode, shoot with the subject 1 m (3.3 ft.) – infinity from the end of the lens.



-
- See *Functions Available in Each Shooting Mode* (p. 192).
 - Results may vary depending on the subject.
 - In  mode, you are recommended to use the LCD monitor to shoot.
 - To shoot underwater, install the camera in Waterproof Case WP-DC70 (sold separately).
 - You are recommended to place the camera in Waterproof Case WP-DC70 (sold separately) for the  (Snow) and  (Beach) modes.

📷 Shooting in Manual Mode



The following three modes are available.

| | | |
|--|----------------------|--|
| | Manual | Use this mode to select settings yourself, such as the exposure compensation, white balance or photo effect. |
| | Digital Macro | Use this mode when the distance from the lens to the subject is within 5 – 50 cm (2.0 in. – 1.6 ft.) (at maximum wide angle). The subject can be shown larger than in standard macro mode because it trims the image edges and zooms in with the digital zoom (p. 72). |
| | My Colors | Use these modes to change image colors and then shoot (p. 102). |



1 Turn the mode dial to 📷 (Manual).




2 In the FUNC. menu, select 📷.

- See *Selecting Menus and Settings* (p. 47).
- You can shoot right after selecting an option. The menu displays again after the shot, allowing you to change the settings easily.

3 Change the settings.

- See *Functions Available in Each Shooting Mode* (p. 192).



4 Shoot (p. 45).

- If the subject is difficult to focus on when the shutter button is pressed halfway, the beep will sound one time and the lower indicator beside the viewfinder will blink yellow.
- When the AiAF option is set to [Off] (p. 89), the AF frame will appear yellow. (If the AiAF option is set to [On], the AF frame will not appear.)



See *Functions Available in Each Shooting Mode* (p. 192).

🌸 Shooting Close-Ups/▲ Infinity Shots



| | | |
|--|-----------------|--|
| | Macro | Use this mode to record subjects in the range of 5 to 50 cm (2.0 in. to 1.6 ft.) from the end of the lens at the maximum wide angle setting and in the range of 30 to 50 cm (1.0 to 1.6 ft.) at the maximum telephoto setting. |
| | Infinity | Use this mode to record landscapes and distant subjects. It can also be used for compositions combining both near and distant subjects. |

| | ○ | ○ | – | ○ | △ | ○ | |
|--|---|---|---|---|---|---|--|
| | – | ○ | – | ○ | △ | ○ | |

| | SCN | | | | | | | | | |
|--|------------|---|---|---|---|---|---|---|---|--|
| | | | | | | | | | | |
| | ○ | ○ | ○ | ○ | – | ○ | ○ | – | ○ | |
| | ○ | ○ | ○ | ○ | – | ○ | ○ | – | ○ | |

○ Setting available △ Can be selected for the first image only



1 Press the 🌸 / ▲ button to select the macro/infinity mode.

The selected macro/infinity mode appears on the LCD monitor.

To cancel the macro/infinity mode

Press the 🌸 / ▲ button to remove or from the display.



- Use the LCD monitor to compose close-ups in macro mode since images composed with the viewfinder may be off-center (p. 43).
- The exposure may not be optimal when the flash is used in macro mode in the range of 5 to 30 cm (2.0 in. to 1.0 ft.).



See *Photo Tips and Information* (p. 181).

Image Area in Macro Mode

When the zoom is set between the maximum telephoto and wide-angle settings, the effective distance from the lens to the subject becomes the same as for the maximum telephoto setting.

| Zoom Setting | Distance from Lens to Subject | Image Area |
|-----------------|-------------------------------|-----------------------------|
| Max. Telephoto | 30 cm (1.0 ft.) | 105 x 79 mm (4.1 x 3.1 in.) |
| Max. Wide Angle | 5 cm (2.0 in.) | 56 x 42 mm (2.2 x 1.7 in.) |

Magnified Close-Up Shooting (Digital Macro)

Use this mode to shoot a subject in the range of 5 to 50 cm (2.0 in. to 1.6 ft.) from the end of the lens (zoom fixed at maximum wide angle). Since this mode trims all but the image center and magnifies it with the digital zoom, you can make a subject appear even larger than in the normal macro mode.

Images can be zoomed to the following powers in the digital macro mode.
Approx. 1.2x, 1.5x, 1.9x, 2.4x, 3.0x, 4.0x



1 Turn the mode dial to  (Manual).




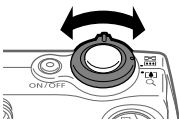
2 In the FUNC. menu, select .

- See *Selecting Menus and Settings* (p. 47).
- You can shoot right after selecting an option. The menu displays again after the shot, allowing you to change the settings easily.



3 Press the FUNC./SET button.

The display will return to the shooting screen and  will appear on the LCD monitor.



4 Use the zoom lever to adjust the zoom to achieve the desired composition.



-
- See *Functions Available in Each Shooting Mode* (p. 192).
 - The image area at the maximum digital zoom setting is 14 x 11 mm (0.55 x 0.43 in.).

Using the Digital Zoom




When the LCD monitor is on, images can be zoomed to approximately 3.6, 4.5, 5.8, 7.2, 9.0 or 12x with the combined optical and digital zoom functions.




The digital zoom cannot be used when the LCD monitor is turned off.



1 Press the **DISP.** button to turn the LCD monitor on.

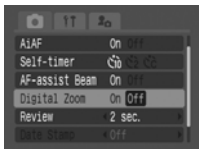


2 In the  (Rec.) menu, select **[Digital Zoom]**.

See *Selecting Menus and Settings* (p. 47).






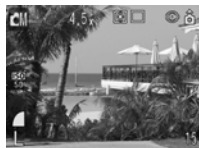
3 Use the **←** or **→** button to select **[On]** and press the **MENU** button.

The display will return to the Shooting screen.



4 Press the zoom lever toward .

- The combined optical and digital zoom factor appears on the LCD monitor.
- When you press the zoom lever toward , the zoom stops when the lens reaches the maximum optical telephoto setting (when shooting still images). Press the zoom lever toward  again to activate the digital zoom and further zoom the image digitally.
- Press the zoom lever toward  to zoom out.



- The digital zoom can also be used in movie mode (standard).
- **Images become coarser the more they are digitally zoomed.**

Continuous Shooting




In this mode, the camera shoots continuously while the shutter button is held down. Recording ceases when the shutter button is released.

In addition, continuous shooting (smooth continuous shooting) is possible at a consistent interval until the SD card is full under the following conditions*.



- A resolution and compression combination other than **L** and **S** is selected.
- The recommended super high-speed SDC-512MSH SD card (sold separately) is used and formatted with a low level format (p. 26).

* This figure reflects standard shooting criteria established by Canon. Actual figures may vary according to the subject and shooting conditions.

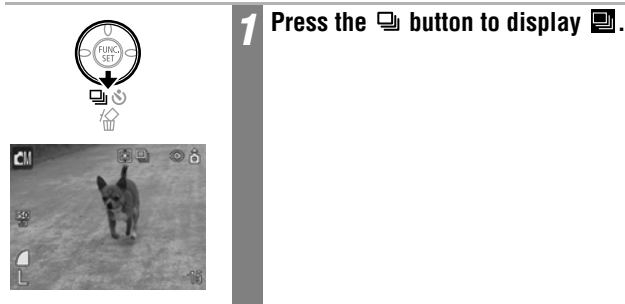* If continuous shooting suddenly stops, the SD card may be full.



To Cancel Continuous Shooting

Press the  button twice to display .



To enhance the continuous shooting performance when you suspect the speed has dropped, you are recommended to format the SD card in the camera (Low Level Format) after you save all its images to your computer.




- The interval between shots may lengthen slightly when the camera's built-in memory fills.
- If the flash is firing, the interval between shots will lengthen to accommodate the flash's charging requirements.

Postcard Date Imprint Mode



You can shoot images with the optimal resolution and compression for postcard size printing.

- When printing standard image data to postcard size, sometimes the top, bottom and sides may not get printed.
- By shooting images in the Postcard Date Imprint mode, you can check the printing area (horizontal/vertical ratio of 3:2) beforehand. In addition, the resolution locks to 1600 x 1200 pixels and the compression to the Fine setting, rendering smaller file sizes.

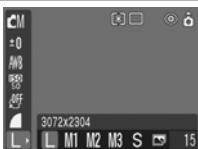

1 In the FUNC. menu, select **L** *.

- See *Selecting Menus and Settings* (p. 47).
- * The current setting is displayed.




2 Use the **←** or **→** button to select .

You can shoot the image right after selecting settings by pressing the shutter button. The menu displays again after the shot, allowing you to change the settings easily.




3 Press the FUNC./SET button.

- The display will return to the shooting screen and  will appear on the LCD monitor.
- When you press the shutter button halfway, the area that will not get printed grays out.




Selecting  cancels the digital zoom when it is set to [On].




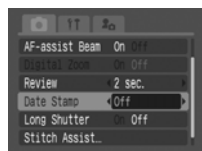
- The  icon appears in the LCD monitor when the date stamp setting (see below) is set to Date or Date & Time.
- For printing instructions, refer to the *Direct Print User Guide*.

Embedding the Date in the Image Data

You can embed the date in image data when  (Postcard Date Imprint Mode) is selected. The date will be printed on your images even if it has not been set with a computer or printer.



- Ensure that the camera's date/time is set beforehand (p. 29).
- You cannot embed the date in image data when  (Postcard Date Imprint mode) is not selected.




1 In the (Rec.) menu, select [Date Stamp].

See *Selecting Menus and Settings* (p. 47).



2 Use the or button to select [Date] or [Date & Time] and press the MENU button.

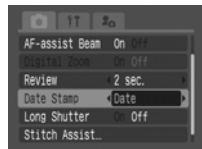

- The display will return to the shooting screen.
- When you do not want to print the date, select [Off].



- The date stamp cannot be deleted from the image data once it has been set.
- A portion of the date may not print when selecting the credit card size print (54 x 86 mm (2.1 x 3.4 in)) to print on a compact photo printer (SELPHY CP series) or card photo printer.

Using the Self-timer



With this function, images are shot 10 or 2 seconds after the shutter button is pressed. This is useful when you want to take a memorable photo with everyone including yourself in the picture. In addition, you can set the delay time and number of shots (Custom Timer).




1 Press the button to display or .

- When the shutter button is pressed fully, the self-timer will activate and the self-timer lamp will blink.
- When the self-timer is set to () , the shutter activates 10 (2) seconds after the shutter button is pressed fully.
- With the (Custom Timer) option, the specified number of shots are taken after the specified delay when the shutter button is pressed fully.

To Cancel the Self-Timer

Press the button to display .

Changing the Self-timer Countdown Time

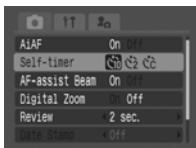





1 In the (Rec.) menu, select [Self-timer].

See *Selecting Menus and Settings* (p. 47).


Changing to a 10 or 2 second delay.




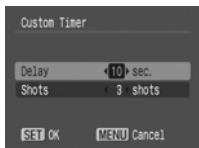
2 Use the **←** or **→** button to select  or  and press the **MENU** button.

- The display will return to the shooting screen.
- When  is selected, the self-timer sounds and the blinking gets faster 2 seconds before the shutter activates.
- When  is selected, the self-timer sounds at the same time as the shutter button is pressed. The shutter activates in 2 seconds.

Changing the delay time and number of shots (Custom Timer).

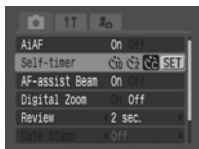

2 Use the **←** or **→** button to select  and press the **FUNC./SET** button.



3 **Setting the delay time and number of shots.**

- Use the **↑** or **↓** button to select [Delay] or [Shots].
- Use the **←** or **→** button to change the delay time (0-10, 15, 20, 30 sec.) or number of shots (1-10).



4 Press the FUNC./SET button.

The setting is now set.



5 Press the MENU button.

- The display will return to the shooting screen.
- If the number of shots is set to 2 or more, the exposure and white balance settings are locked after the first shot. Shooting will cease if the SD card becomes full.
- Between shots the self-timer lamp will flash and the self-timer sound will play as follows. If multiple shots are selected, the self-timer sound will play for the first shot only.
 - 0 seconds: no self-timer sound
 - 1 second: no self-timer sound, but the camera beeps
 - 2-10 seconds: self-timer sound starts to play 2 seconds before the shutter releases



- The self-timer sound can be changed with the Selftimer Sound item in the (My Camera) menu (p. 57).
- The option cannot be set in the Stitch Assist or movie mode or in a My Colors mode.
- The following may occur when the Shots category is set to 2 or more.
 - if the internal memory is full, the interval between shots may lengthen.
 - if the flash is firing, the interval between shots may lengthen to allow the flash to recharge.
- See *Photo Tips and Information* (p. 181).

Shooting a Movie



The following four movie modes are available.

| | | |
|--|------------------------|---|
| | Standard | <p>You can select the resolution and frame rate* yourself and record until the SD card is full (when a super high-speed SD card is used, such as the recommended SDC-512MSH model). The digital zoom can be used while shooting in this mode.</p> <ul style="list-style-type: none">• Resolution: (640 x 480), (320 x 240)• Frame Rate: (30 frames/sec.), (15 frames/sec.)• Maximum Size: 1 GB/movie |
| | Fast Frame Rate | <p>Use this mode to record fast moving subjects, such as in sports photography.</p> <ul style="list-style-type: none">• Resolution: (320 x 240)• Frame Rate: (60 frames/sec.)• Max. Clip Length: 1 minute |
| | Compact | <p>Since the resolution is low, this mode is convenient for sending movies as e-mail attachments or when the SD card capacity is low.</p> <ul style="list-style-type: none">• Resolution: (160 x 120)• Frame Rate: (15 frames/sec.)• Max. Clip Length: 3 minutes |
| | My Colors | <p>You can change image colors and then shoot (p. 102). As with the Standard mode, you can also select the resolution and frame rate* yourself and record until the SD card is full (when a super high-speed SD card is used, such as the recommended SDC-512MSH model).</p> <ul style="list-style-type: none">• Resolution: (640 x 480), (320 x 240)• Frame Rate: (30 frames/sec.), (15 frames/sec.)• Maximum Size: 1 GB/movie |

* The frame rate indicates the number of frames recorded/replayed in one second. The higher the frame rate, the smoother the motion.

* The recording time will vary according to the capacity of the SD card you use. See page 178 for details.





1

Turn the mode dial to (Movie).

The maximum recording time (in seconds) is displayed.



2 In the FUNC. menu, select a movie mode.

- See *Selecting Menus and Settings* (p. 47).
- You can shoot the image right after selecting settings by pressing the shutter button. The menu displays again after the shot, allowing you to change the settings easily.
- In  or  mode, you can change the resolution (p. 63) and frame rate (p. 85).




3 Press the FUNC./SET button.

The display will return to the shooting screen and the icon of the selected movie mode will appear in the LCD monitor.




4 Press the shutter button halfway.

The camera will automatically set the exposure, focus and white balance.

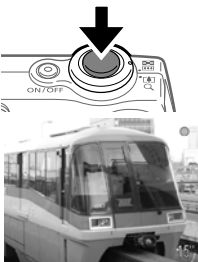

5 Press the shutter button fully.

- Shooting and sound recording starts simultaneously.
- During shooting the recording time (in seconds) and a red circle appear on the LCD monitor.








6 Press the shutter button fully again to stop recording.

The maximum recording time may vary with the subject and shooting conditions. Just before the maximum is reached, or just before the SD card fills to capacity, the counter at the bottom right of the LCD monitor will display in red and recording will stop automatically after approximately 10 seconds.















- The recording time may not display properly during shooting or filming may stop unexpectedly with the following types of SD cards.
 - Slow recording cards
 - Cards formatted on a different camera or a computer
 - Cards which have had images recorded and erased repeatedly
 Although the recording time may not display properly during shooting, the movie will be recorded correctly on the SD card. Recording time will display properly if you format the SD card in this camera (excluding slow recording SD cards).
- You are recommended to use an SD card that has been formatted in your camera to shoot movies (p. 26). The card supplied with the camera may be used without further formatting.
- Be careful not to touch the microphone while recording.
- Do not press buttons other than the shutter button while filming to avoid inadvertent recording of the operation sounds.
- The AF and zoom settings remain fixed for subsequent frames at the values selected for the first frame.
- During filming, the camera will automatically correct the exposure and white balance settings to suit the shooting conditions. Please note, however, that the sounds made by the automatic settings adjustment may also be recorded.
- After a clip is shot, the indicator will blink green while the clip is being written to the SD card. You cannot shoot again until the blinking stops.



- See *Functions Available in Each Shooting Mode* (p. 192).
- Sound is recorded monaurally.
- There is no shutter sound in movie mode.
- You can lock the exposure (AE lock) setting or adjust the exposure compensation setting before shooting. Press the  button to lock the exposure setting (AE lock) and display the exposure compensation bar in the LCD monitor. Use the  or  button to adjust the setting. The exposure compensation setting will cancel if you press the **MENU** button or change the white balance, photo effect or shooting mode.
- The recording time and capacity may vary according to camera usage and SD card performance. If free space in the camera's internal memory becomes too scarce, even if there is surplus recording time or capacity available, the "!" symbol will display at the bottom right of the LCD monitor in red and the camera will automatically cease filming shortly thereafter. If the "!" warning displays frequently, try the following procedures.
 - Reformat the SD card before filming (p. 26)
 - Set the resolution to  (320 x 240) or the frame rate to  (15 frames/sec.)
 - Use a super high-speed SD card (SDC-512MSH, etc.)
- QuickTime 3.0 or later is required to play back movies (Data type: AVI/ Compression method: Motion JPEG) on a computer. QuickTime (for Windows) is included on the Canon Digital Camera Solution Disk. On the Macintosh platform, this program is standard with Mac OS X or later.


Changing the Frame Rate

In the  (Standard) or  (My Colors) mode, you can select between one of two frame rates (number of frames recorded each second):  (30 frames/sec.) or  (15 frames/sec.).

| | |
|---|---|
|  | <p>1 In the FUNC. menu, select *.</p> <ul style="list-style-type: none">• See <i>Selecting Menus and Settings</i> (p. 47).* The current setting is displayed. |
|  | <p>2 Use the  or  button to select  or .</p> <p>You can shoot the image right after selecting settings by pressing the shutter button. The menu displays again after the shot, allowing you to change the settings easily.</p> |
|  | <p>3 Press the FUNC./SET button.</p> <p>The display will return to the shooting screen.</p> |

Shooting Panoramic Images (Stitch Assist)

Stitch Assist can be used to shoot overlapping images that can later be merged (stitched) to create one panoramic image on a computer.

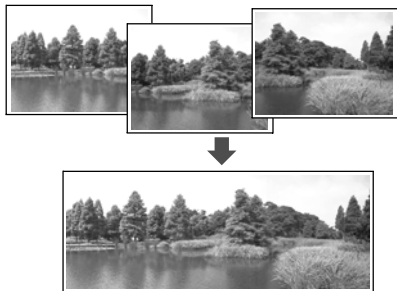

The overlapping seams of several adjacent images can be joined into a single panoramic image.



To merge the images on a computer, use PhotoStitch, one of the supplied programs.

Framing a Subject

The PhotoStitch program detects the overlapping portions of adjoining images and merges them. When shooting, try to include a distinctive item (landmark) in the overlapping portions.



- Compose each frame so that it overlaps 30 - 50% of the adjoining image. Try to keep the vertical misalignment to less than 10% of the image height.
- Do not include moving items in the overlap.
- Do not try to stitch images that include both distant and close items. These items may appear warped or doubled up in the merged image.
- Make the brightness in each image consistent. The final image will appear unnatural if the contrast in brightness is too great.
- To shoot landscapes, swivel (pan) the camera around its own vertical axis.
- To shoot close-ups, slide the camera over the subject, keeping it parallel to the subject as you move it.

Shooting

Images can be shot in two sequences in Stitch Assist mode.



Left to right horizontally




Right to left horizontally





1 Turn the mode dial to **M** (Manual).



2 In the FUNC. menu, select .

• See *Selecting Menus and Settings* (p. 47).

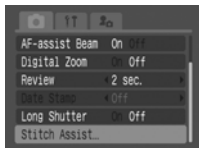




3 In the  (Rec.) menu, select [Stitch Assist] and press the FUNC./SET button.

See *Selecting Menus and Settings* (p. 47).




4 Use the **←** or **→** button to select a shooting direction and press the FUNC./SET button.

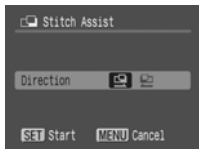

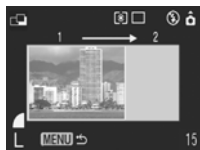


5 Shoot the first frame in the sequence.

The exposure and white balance are set and locked with the first image.



6 Compose the second image so that it overlaps a portion of the first and shoot.

- Use the ◀ or ▶ button to check or retake the recorded images.
- Minor discrepancies in the overlapping portions can be corrected when the images are stitched together.



7 Repeat the procedure for additional images.

A sequence may contain up to 26 images.



8 Press the MENU button after the last shot.

The Stitch Assist session ends. Press the **MENU** button again to return to the shooting screen.



- A custom white balance setting cannot be set in Stitch Assist mode. To use a custom white balance setting, set it before selecting [Stitch Assist] in the Rec. menu (p. 99).
- The settings for the first image are used to take subsequent images in the sequence.
- It is not possible to display images on the TV when shooting in Stitch Assist mode.



See *Functions Available in Each Shooting Mode* (p. 192).


Switching between Focusing Modes

Although the autofocus function is preset to the AiAF setting (9 AF frames), you can set it to the center AF frame.

When [AiAF] is set to [On], the AF frame does not appear. When [AiAF] is set to [Off], however, the AF frame will appear.

| | | |
|--------------------------|-----|---|
| No frame | On | The camera detects the subject and highlights the AF frames, from 9 available points, that it will use to determine the focus. |
| <input type="checkbox"/> | Off | The camera focuses using the center AF frame. This is convenient for focusing on a specific part of a subject with greater certainty. |

The symbol represents the AF frames as they appear in the LCD monitor.

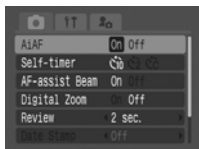

1 In the  (Rec.) menu, select [AiAF].

See *Selecting Menus and Settings* (p. 47).



2 Use the **←** or **→** button to select [On] or [Off].

You can shoot right after selecting an option.



3 Press the **MENU** button.

The display will return to the shooting screen.



The focus is locked to the center AF frame when the digital zoom is used.

Shooting Hard-to-Focus Subjects (Focus Lock, AF Lock)



It may be difficult to focus on the following types of subjects. Use the focus lock or AF lock in these situations.


- Subjects with extremely low contrast to the surroundings
- Scenes with a mixture of near and far subjects.
- Subjects with extremely bright objects at the center of the composition
- Subjects that are moving quickly
- Subjects through glass:

Try to shoot as close to the glass as possible to reduce the chances of light reflecting back off the glass.

Shooting with the Focus Lock


The focus lock can be used in any shooting mode.

1 Aim the camera so that an object at the same focal distance as the main subject is centered in the viewfinder or in the AF frame displayed on the LCD monitor.







2 Press the shutter button halfway (two beeps will play).







The focal distance to the object is locked.



3 Re-aim the camera to compose the shot as desired and press the shutter button fully.

Shooting with the AF Lock

The AF lock can only be used in the , ,  or  mode.

| | |
|---|---|
|  | <p>1 Press the DISP. button to turn the LCD monitor on.</p> |
| | <p>2 Aim the camera so that an object at the same focal distance as the main subject is centered in the AF frame.</p> |
|   | <p>3 Press the shutter button halfway (two beeps will play) and press the  /  button.</p> <ul style="list-style-type: none"> • The focal distance to the object is locked. • The AFL icon will display and the lower indicator beside the viewfinder will light yellow. |
|  | <p>4 Re-aim the camera to compose the shot as desired and shoot.</p> |

To Release the AF Lock

Press the  /  button.



- When shooting with the focus lock or AF lock using the LCD monitor, setting [AiAF] to [Off] (p. 89) is recommended since the camera focuses using the center AF frame only.
- The AF lock is convenient because you can let go of the shutter button to compose the image. Moreover, the AF lock is still effective after the picture is taken, allowing you to capture a second image with the same focus.
- The AF lock can be released by pressing the zoom lever (when shooting still images) or **MENU** button, by changing the shooting mode or by turning the LCD monitor off.

Locking the Exposure Setting (AE Lock)

You can set the exposure and focus separately. This is effective when the contrast is too strong between the subject and background or when a subject is backlit.




You must set the flash to . The AE lock cannot be set if the flash fires.



1 Press the **DISP.** button to turn the LCD monitor on.

2 Focus on the part of the subject on which you wish to lock the exposure setting.




3 Press the shutter button halfway (two beeps will play) and press the  button.

- The exposure setting is locked.
- The **AEL** icon will display.





4 Re-aim the camera to compose the shot as desired and press the shutter button fully.



To Release the AE Lock







Press the  button.



- AE lock can also be set and released in  mode (p. 84).
- The AE lock may be released by pressing the zoom lever, **MENU** button or  button, or by changing the white balance, ISO speed, photo effect or the shooting mode, or by turning the LCD monitor off.

Locking the Flash Exposure Setting (FE Lock)

You can lock the flash exposure so that the exposure settings are correctly set for a particular portion of your subject.

| | |
|---|---|
|  | 1 Press the DISP. button to turn the LCD monitor on. |
|   | 2 Press the ⚡ button to set the flash to ⚡ . |
| | 3 Focus on the part of the subject on which you wish to lock the flash exposure setting. |
|   | 4 Press the shutter button halfway (two beeps will play) and press the 👁 button. <ul style="list-style-type: none">• The flash will fire a pre-flash and lock the flash exposure to the required intensity to illuminate the subject.• The FEL icon will display. |
|  | 5 Re-aim the camera to compose the shot as desired and press the shutter button fully. |

To Release the FE Lock

Press the **👁** button.



The FE lock may be released by pressing the zoom lever, **MENU** button or button, or by changing the white balance, ISO speed, photo effect or the shooting mode, or by turning the LCD monitor off.




Switching between Metering Modes



You can switch between metering modes to shoot.

| | | |
|--|--------------------------------|--|
| | Evaluative | Appropriate for standard shooting conditions, including backlit scenes. The camera divides images into several zones for light metering. It evaluates complex lighting conditions, such as the position of the subject, the brightness, the direct light, and the backlighting, and adjusts the settings to the correct exposure for the main subject. |
| | Center Weighted Average | Averages the light metered from the entire frame, but gives greater weight to the subject matter at the center. |
| | Spot | Meters the area within the spot AE point at the center of the LCD monitor. Use this setting when you want to set the exposure on the subject in the center of the monitor. |

JUMP

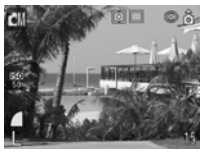

1 Press the button to switch between metering modes.

The selected metering mode appears on the LCD monitor.

Adjusting the Exposure Compensation

Adjust the exposure compensation setting to avoid making the subject too dark when it is backlit or shot against a bright background or to avoid making lights appear too bright in night shots.

| | |
|--|--|
| | <p>1 In the FUNC. menu, select ±0 *.</p> <p>See <i>Selecting Menus and Settings</i> (p. 47). * The current setting is displayed.</p> |
| | <p>2 Use the ← or → button to adjust the exposure compensation.</p> <ul style="list-style-type: none">• The settings can be adjusted in 1/3 stops in the range -2 to +2.• You can confirm the effect of the setting in the LCD monitor.• You can shoot right after selecting an option. The menu displays again after the shot, allowing you to change the settings easily. |
| | <p>3 Press the FUNC./SET button.</p> <p>The display will return to the shooting screen.</p> |

To Reset the Exposure Compensation

Return the setting to 0.




- See *Photo Tips and Information* (p. 181).
- Exposure compensation is not available in the **SA** and **SS** My Colors modes.
- The exposure compensation can also be set or reset in a movie mode (p. 84)

Shooting in Long Shutter Mode



You can set the shutter speed to a slow setting to make dark subjects appear brighter.

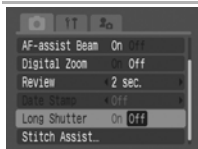

1 In the (Rec.) menu, select [Long Shutter].

See *Selecting Menus and Settings* (p. 47).



2 Use the or button to select [On] and press the MENU button.

The display will return to the shooting screen.



3 In the FUNC. menu, select and press the MENU button.

See *Selecting Menus and Settings* (p. 47).

* The current setting is displayed.



4 Use the or button to select a shutter speed.

- The higher the value, the brighter the image and the lower the value, the darker the image.
- You can shoot right after selecting a value. The menu displays again after the shot, allowing you to change the settings easily.





5 Press the FUNC./SET button.

The display will return to the shooting screen.



To Cancel the Long Shutter mode

While [Long Shutter] is displayed in the FUNC. menu, press the **MENU** button.



The nature of CCD image sensors is such that noise in the recorded image increases at long shutter speeds. This camera, however, applies special processing to images shot at shutter speeds slower than 1.3 seconds to eliminate the noise, thereby producing high-quality images. Nevertheless, a certain amount of processing time may be required before the next image can be shot.



- Use the LCD monitor to confirm that the image was recorded at the desired brightness.
- Please note that camera shake becomes a factor at low shutter speeds. If the camera shake warning  appears on the LCD monitor, secure the camera to a tripod before shooting.
- Use of the flash may result in an over-exposed image. If that occurs, shoot with the flash set to .
- The following are unavailable:
 - Exposure Compensation
 - Light Metering
 - AE Lock
 - FE Lock
 - ISO speed: AUTO
 - Flash: Auto, Auto with Red-Eye Reduction, Flash on with Red-Eye Reduction

Available Shutter Speeds

The following shutter speeds (in seconds) are available.

15 13 10 8 6 5 4 3.2 2.5 2 1.6 1.3 1

Adjusting the Tone (White Balance)



When the white balance mode is set to match the light source, the camera reproduces colors more accurately.

Combinations of setting contents and light source are as follows.

| | | |
|--|----------------------|---|
| | Auto | Settings are automatically set by the camera |
| | Day Light | For recording outdoors on a bright day |
| | Cloudy | For recording under overcast, shady or twilight skies |
| | Tungsten | For recording under tungsten and bulb-type 3-wavelength fluorescent lighting |
| | Fluorescent | For recording under warm-white, cool-white or warm-white (3-wavelength) fluorescent lighting |
| | Fluorescent H | For recording under daylight fluorescent, or daylight fluorescent-type 3-wavelength fluorescent lighting |
| | Custom | For recording with the optimal white balance data memorized in the camera from a white-colored object, such as white paper or cloth |



1 In the FUNC. menu, select **AWB** *.

See *Selecting Menus and Settings* (p. 47).

* The current setting is displayed.



2 Use the **←** or **→** button to select an option.

- See *Setting a Custom White Balance* (p. 99).
- You can confirm the effect of the setting in the LCD monitor.
- You can shoot right after selecting an option. The menu displays again after the shot, allowing you to change the settings easily.



3 Press the FUNC./SET button.

The display will return to the shooting screen.



This setting cannot be adjusted when the **CS** (Sepia) or **BW** (B/W) photo effects are selected.

Setting a Custom White Balance

You can set a custom white balance to obtain the optimal setting for the shooting conditions by having the camera evaluate an object, such as a piece of white paper or cloth, or a photo-quality gray card that you wish to establish as the standard white color.

In particular, take a custom white balance reading for the following situations that are difficult for the **AWB** (Auto) setting to detect correctly.

- Shooting close-ups
- Shooting subjects of monotone color (such as sky, sea or forest)
- Shooting with a peculiar source of light (such as a mercury-vapor lamp)




1 In the FUNC. menu, select **AWB** *.

See *Selecting Menus and Settings* (p. 47).

* The current setting is displayed.



2 Use the **←** or **→** button to select

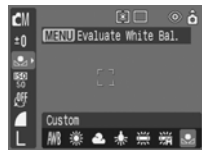



3 Aim the camera at the white paper, cloth or gray card and press the MENU button.

- If you are using the LCD monitor, compose the image so the paper or cloth completely fills the center frame in the display, or the entire viewfinder, before pressing the **MENU** button. The camera reads the white balance data when you press the **MENU** button.
- You can shoot right after selecting an option. The menu displays again after the shot, allowing you to change the settings easily.



4 Press the FUNC./SET button.

The display will return to the shooting screen.



- You are recommended to set the shooting mode to and the exposure compensation setting to zero (± 0) before setting a custom white balance. The correct white balance may not be obtained when the exposure setting is incorrect (image appears completely black or white).
- Shoot with the same settings as when reading the white balance data. If the settings differ, the optimal white balance may not be set. In particular, the following should not be changed.
 - ISO Speed
 - Flash
Setting the flash to on or off is recommended. If the flash fires when reading the white balance data with the flash set to (Auto) or (Auto with Red-Eye Reduction), make sure that you also use the flash when you shoot.
- Since the white balance data cannot be read in Stitch Assist mode, preset the white balance before selecting [Stitch Assist] in the (Rec.) menu.
- The camera will retain the custom white balance setting that you record even if you reset the camera to the default settings (p. 58).

Changing the Photo Effect



By setting a photo effect before you shoot, you can change the look and feel of the pictures you take.

| | | |
|--|-----------------------|--|
| | Effect Off | Records normally with this setting. |
| | Vivid | Emphasizes the contrast and color saturation to record bold colors. |
| | Neutral | Tones down the contrast and color saturation to record neutral hues. |
| | Low Sharpening | Records subjects with softened outlines. |
| | Sepia | Records in sepia tones. |
| | B/W | Records in black and white. |



1 In the FUNC. menu, select *.

See *Selecting Menus and Settings* (p. 47).

* The current setting is displayed.

2 Use the or button to select an effect.

- You can confirm the photo effect in the LCD monitor.
- You can shoot right after selecting an option. The menu displays again after the shot, allowing you to change the settings easily.



3 Press the FUNC./SET button.

The display will return to the shooting screen.












Shooting in a My Colors Mode



A My Colors mode easily changes the colors in an image when it is shot, allowing you to alter the balance between red, green and blue, transform pale or tanned skin or change a color specified in the LCD monitor into a different color. Since they work with both stills and movies, these modes let you enjoy producing various image or movie effects.

However, depending on the shooting conditions, the images may appear rough or you may not get the expected color. Before you try to photograph important subjects, we highly recommend that you shoot trial images and check the results.

Moreover, the camera will record both the My Colors image and the original unaltered image if you set [Save Original] (p. 104) to [On].


| | | |
|---|---------------------------|---|
|  | Positive Film | Use this option to make red, green or blue colors more intense like the Vivid Red, Vivid Green or Vivid Blue effects. It can produce intense natural-appearing colors like those obtained with positive film. |
|  | Lighter Skin Tone* | Use this option to make skin tones lighter. |
|  | Darker Skin Tone* | Use this option to make skin tones darker. |
|  | Vivid Blue | Use this option to emphasize blue tints. It makes blue subjects, such as the sky or ocean, more vivid. |
|  | Vivid Green | Use this option to emphasize green tints. It makes green subjects, such as mountains, new growth, flowers and lawns, more vivid. |
|  | Vivid Red | Use this option to emphasize red tints. It makes red subjects, such as flowers or cars, more vivid. |
|  | Color Accent | Use this option to have only the color specified in the LCD monitor remain and to transform all others to black and white. |
|  | Color Swap | Use this option to transform a color specified in the LCD monitor into another. The specified color can only be swapped into one other color, multiple colors cannot be chosen. |
|  | Custom Color | Use this option to freely adjust the color balance between red, green, blue and skin tones*. It can be used to make subtle adjustments, such as making blue colors more vivid or face colors brighter. |

* The skin colors of non-human subjects may also be altered.

* You may not obtain the expected results depending on the skin color.



1 Turn the mode dial to **CM** or **SCN**.

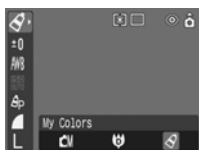

2 In the **FUNC.** menu, select **CM** or **SCN**.
See *Selecting Menus and Settings* (p. 47).



3 Use the **↓** button to select **CM***.
* The current setting will display.



4 Use the **←** or **→** button to select a **My Colors** mode.



- **CM SCN Modes**
Press the **FUNC./SET** button. The display will return to the shooting screen and you can shoot.
- **CM SCN Modes**
CM: See *Shooting in the Color Accent Mode* (p. 105).
SCN: See *Shooting in the Color Swap Mode* (p. 106).
SCN: See *Shooting in the Custom Color Mode* (p. 108).



- See *Functions Available in Each Shooting Mode* (p. 192).
- In the My Colors modes (depending on the scene being shot), the ISO speed may increase and cause noise in the image.

Changing the Save Method for the Original Image



When you are shooting still images in a My Colors mode, you can specify whether or not both the altered image and the original image are recorded.



1 In the  (Rec.) menu, select [Save Original].

See *Selecting Menus and Settings* (p. 47).



2 Use the  or  button to select [On] or [Off], then press the MENU button.

- The display will return to the shooting screen.
- Select [On] to record the original image too or [Off] to not record it.
- If [On] is selected, the two images will be numbered consecutively with the altered image following the original.










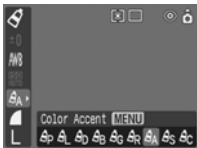

Save Original is Set to [On]

- Only the altered image is shown in the LCD monitor during shooting.
- The image that appears in the LCD monitor immediately after recording is the altered image (p. 60). If you erase the image at this point, the original image is erased along with the altered image. Exercise adequate caution before deleting a file.
- Since two images are recorded with each shot, the number of shots remaining is approximately half the number displayed when this function is set to [Off].

Shooting in the Color Accent Mode

Colors other than the color specified in the LCD monitor are shot in black and white.



| | |
|---|---|
|  | <p>1 In the FUNC. menu, select .</p> <ul style="list-style-type: none">• See <i>Shooting in a My Colors Mode</i> (p. 102).• All colors but the previously specified one display in black and white. |
|  | <p>2 Press the MENU button.</p> <p>The camera will switch to color input mode and the display will alternate between the original image and the color accent image.</p> |
|  | <p>3 Aim the camera so that the color you wish to retain appears at the center of the LCD monitor and press the  button.</p> <ul style="list-style-type: none">• Only one color can be specified.• You can use the  or  button to change the color that is retained.• You can shoot immediately after this step. The screen will reappear after the shot allowing you to change the settings and shoot again. |
|  | <p>4 Press the MENU button.</p> <p>The color input mode will no longer be in effect.</p> |
|  | <p>5 Press the FUNC./SET button.</p> <p>The display will return to the shooting screen.</p> |




- The default color accent is green.
- You may not obtain the expected results after color input mode if you use the flash, or change the white balance or metering settings.
- The chosen Color Accent is retained even if the camera's power is turned off.

Shooting in the Color Swap Mode

This mode allows you to transform a color specified in the LCD monitor into another.

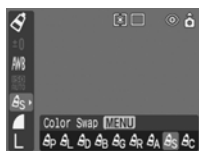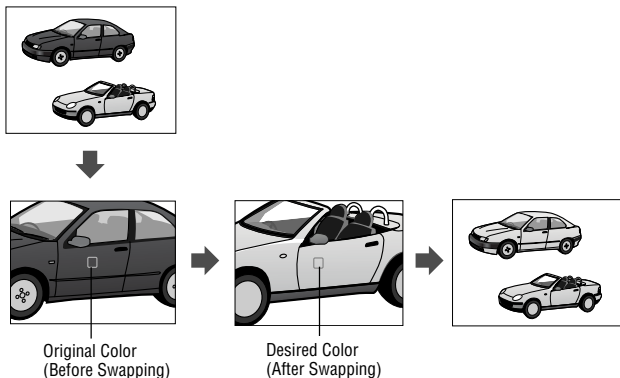




- 1 In the FUNC. menu, select .**
See *Shooting in a My Colors Mode* (p. 102).



- 2 Press the MENU button.**
The camera will switch to color input mode and the display will alternate between the original image and the color swap image.



- 3 Aim the camera so that the original color appears at the center of the LCD monitor and press the  button.**
 - Only one color can be specified.
 - You can use the  or  button to change the color that is swapped.



4 Aim the camera so that the desired color appears at the center of the LCD monitor and press the → button.

- Only one color can be specified.
- You can shoot immediately after this step. The screen will reappear after the shot allowing you to change the settings and shoot again.



5 Press the MENU button.

The color input mode will no longer be in effect.



6 Press the FUNC./SET button.


The display will return to the shooting screen.



- The default setting for color swap mode changes green into white.
- You may not obtain the expected results after color input mode if you use the flash, or change the white balance or metering settings.
- The colors specified in the color swap mode are retained even if the camera's power is turned off.

Shooting in the Custom Color Mode

This mode allows you to adjust the color balance for red, green, blue and skin tones.

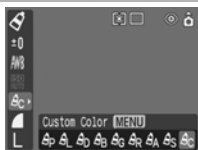





- 1** In the FUNC. menu, select  and press the MENU button.

See *Shooting in a My Colors Mode* (p. 102).



Select a color. Adjust the color balance.

- 2** Use the  or  button to select [Red], [Green], [Blue] or [Skin Tone] and the  or  button to adjust the color balance.

The display will alternate between the original image and the custom color image.



- 3** Press the MENU button.



- 4** Press the FUNC./SET button.

The display will return to the shooting screen.

Adjusting the ISO Speed



Raise the ISO speed when you wish to reduce the effects of camera shake, turn the flash off when shooting in a dark area, or use a fast shutter speed.



1 In the FUNC. menu, select *.

See *Selecting Menus and Settings* (p. 47).

* The current setting is displayed.



2 Use the or button to select a speed.

You can shoot right after selecting an option. The menu displays again after the shot, allowing you to change the settings easily.



3 Press the FUNC./SET button.

The display will return to the shooting screen.




- Higher ISO speeds increase image noise. To take clean images, use as low an ISO speed as possible.
- The AUTO setting selects the optimal speed. It will automatically raise the speed when the light from the flash is insufficient to illuminate the subject matter.



See *Photo Tips and Information* (p. 181).

Setting the Auto Rotate Function

Your camera is equipped with an Intelligent Orientation sensor that detects the orientation of an image shot with the camera held vertically and automatically rotates it to the correct viewing orientation in the display. You can set this function on/off.

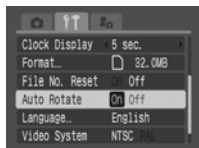




1 In the (Set up) menu, select [Auto Rotate].


See *Selecting Menus and Settings* (p. 47).



2 Use the or button to select [On] and press the MENU button.

- The display will return to the shooting screen.
- When the Auto Rotate function is set to [On] and the LCD monitor is set to the detailed display mode, the  (normal),  (right end is down) or  (left end is down) will appear in the upper right of the display.



- This function may not operate correctly when the camera is pointed straight up or down. Check that the arrow  is pointing in the right direction and if it is not, then set the Auto Rotate function to [Off].
- Even if the Auto Rotate function is set to [On], the orientation of images downloaded to a computer will depend upon the software used to download the images.




- When the camera is held vertically to shoot, the Intelligent Orientation sensor judges the upper end to be “up” and the lower end to be “down.” It then regulates the optimal white balance, exposure and focus for vertical photography. This function operates regardless of the On/Off status of the Auto Rotate function.

Resetting the File Number



The images you shoot are automatically assigned file numbers. You can select how the file number is assigned.

| | |
|------------|---|
| On | The file number is reset to the start (100-0001) each time a new SD card is inserted. New images recorded on SD cards with existing files are assigned the next available number. |
| Off | The file number of the last image to be shot is memorized so that images recorded to a new SD card start from the next number. |

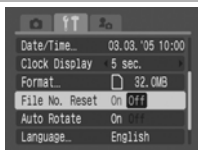

1 In the **[1]** (Set up) menu, select **[File No. Reset]**.

See *Selecting Menus and Settings* (p. 47).



2 Use the **←** or **→** button to select **[On]** or **[Off]** and press the **MENU** button.




The display will return to the shooting screen.



Setting the File No. Reset to [Off] is useful for avoiding file name duplication when images are downloaded to a computer.

About File Numbers and Folder Numbers

Images are assigned file numbers from 0001 to 9900, and folders are assigned folder numbers from 100 to 998 (Folder numbers cannot contain 99 in the last two digits).

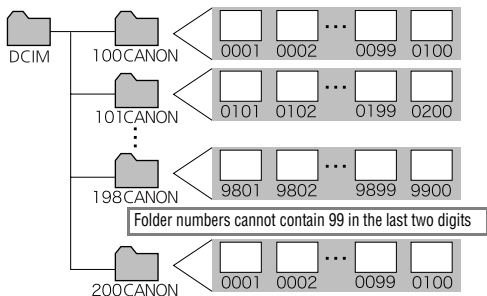

Folder File Capacity

Each folder usually contains up to 100 images.

However, since images shot in continuous shooting and Stitch Assist mode are always saved into the same folder, a folder may contain more than 100 images. The number of images may also exceed 100 if a folder contains images copied from a computer or images shot with other cameras. Please note, however, that the images in folders containing 2001 or more images cannot be played back in this camera.

Displaying Images Individually





1 Turn the mode dial to (Playback).


The last recorded image will appear in the display (single image playback).



2 Use the or button to move between the images.

Use the  button to move to the previous image and the  button to move the next image.

Holding the button down advances the images more rapidly, but the images will not appear as clearly.



Approximate Location of the Magnified Area

1 Press the zoom lever toward Q.

SET will appear on the monitor. You can press the zoom lever toward Q to display the image at a magnification of up to 10x.



2 Use the ←, →, ↑ or ↓ button to move around the image.



3 Press the FUNC./SET button.



- The image advance mode will become active and **SET** will display in the LCD monitor. Press the ← or → button to display the preceding or next image at the same level of magnification (holding the ← or → button will not move through the images any quicker).
- You can change the magnification level with the zoom lever.



4 Press the FUNC./SET button.

The image advance mode will cancel.


To Cancel the Magnified Display

Press the zoom lever toward . You can also cancel it immediately by pressing the **MENU** button.



Movie frames and index playback images cannot be magnified.

▣ Viewing Images in Sets of Nine (Index Playback)

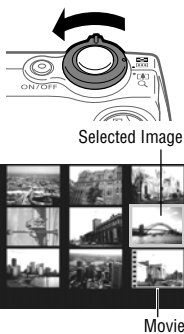


1 Press the zoom lever toward .

Up to nine images can be viewed at once in index playback.



2 Use the , , or button to change the image selection.

Switching between Sets of Nine Images







Jump Bar

- 1 Press the zoom lever toward  while in index playback.**

The jump bar will display.



- 2 Use the  or  button to move to the previous set or the next set of images.**

Hold the **FUNC./SET** button down and press the  or  button to jump to the first or last set.

To Return to Single Image Playback

Press the zoom lever toward  twice.

JUMP **Jumping to Images**



When you have many images recorded onto an SD card, it is handy to use the four search keys below to jump over images to find the object of your search.

- Jump 10 Images: jumps over 10 images at a time
- Jump 100 Images: jumps over 100 images at a time
- Jump Shot Date: jumps to the first image with the next shooting date
- Jump to Movie: jumps to a movie



The camera will switch to jump search mode.

Number of images matching search key.

1 **In single image playback mode, press the JUMP button.**

- The camera will switch to jump search mode.
- The screen sample will vary slightly according to the search key.



2 **Use the ↑ or ↓ button to select [10], [100], [Shot Date] or [Movie] and press the ← or → button.**

To change the search key, press the ↑ or ↓ button.

To Return to Single Image Playback

Press the MENU button.

Viewing Movies



You can play movie clips shot in mode.



Movies cannot be played in the index playback mode.



1 Use the or button to select a movie.

Images with a **SET** icon are movies.



Movie Control Panel Volume Level

2 Press the **FUNC./SET** button.

- The movie control panel will display.
- Use the or button to adjust the sound volume.



3 Use the or button to select (Play) and press the **FUNC./SET** button.

- The movie and sound will play.
- When playback ends, the movie stops at the last frame displayed. Press the **FUNC./SET** button to display the movie control panel. Press the **FUNC./SET** button again to play from the beginning.

Pausing and Resuming Play



Press the **FUNC./SET** button during playback.

The movie playback pauses. Press the **FUNC./SET** button again to resume.

Operating the Movie Control Panel



1 Select a movie and press the **FUNC./SET** button (p. 118).


The movie control panel will display.




2 Use the **←** or **→** button to select one of the following and press the **FUNC./SET** button.

- : Exit (Ends playback and returns to single image playback. Pressing the **MENU** button also returns to single image playback.)
- : Play
- : Slow Motion Playback
The playback speed will change if you press the **←** or **→** button in slow motion playback. Pressing the **←** button makes it slower and the **→** button makes it faster.
- : First Frame
- : Previous Frame (Rewinds if the **FUNC./SET** button is held down)
- : Next Frame (Fast Forwards if the **FUNC./SET** button is held down)
- : Last Frame
- : Edit (Switches to movie editing mode) (p. 121)




-
- Movies recorded with high resolutions and frame rates may momentarily stop playing if played on slow reading SD cards.
 - Movies recorded at the  Fast Frame Rate setting and with the video signal set to the PAL format, may play back with a frame rate lower than the recorded one when output to a TV or video. You can play every frame by using the slow motion playback. To check the images at the original frame rate, you are recommended to play the movie back on the camera's LCD monitor or on a computer.
 - You may experience frame dropping and audio breakup when playing back a movie on a computer with insufficient system resources.
 - Movies shot with other cameras may not play back on this camera. See *List of Messages* (p. 162).



-
- You can adjust the playback volume of movie clips in the  (Set up) menu.
 - Use the television's controls to adjust the volume when playing a movie on a TV set (p. 155).
 - The audio cannot be played in slow motion playback.

Editing Movies





Selecting  (Edit) in the movie control panel enables you to cut unwanted portions at the start or end of a movie clip.



Protected movies and movies less than 1 second in duration cannot be edited.



1 Use the  or  button to select a movie and press the **FUNC./SET** button.

Movie Editing Panel









Movie Editing Bar

2 Switch to the movie editing mode.

- See *Operating the Movie Control Panel* (p. 119).
- The movie editing panel and the movie editing bar will display.




3 Use the  or  button to select  or  and the  or  button to set the portion to which the cut is applied.

 : Cut Beginning

 : Cut End


 : Cursor




4 Use the \uparrow or \downarrow button to select  (Play) and press the **FUNC./SET button.**

- A preview of the temporarily edited movie clip plays.
- To stop it, press the **FUNC./SET** button again.



5 Use the \uparrow or \downarrow button to select  (Save) and press the **FUNC./SET button.**

Selecting  (Exit) cancels the edits and returns to the movie control panel display.



6 Use the \leftarrow or \rightarrow button to select [New File] or [Overwrite] and press the **FUNC./SET button.**

- [New File] saves the edited movie under a new file name. The pre-edit data is left unchanged.
Note, if you press the **FUNC./SET** button while saving the movie, saving is canceled.
- [Overwrite] saves the edited movie with its original name. The pre-edit data is lost.
- When the SD card lacks sufficient space to create a new movie, only [Overwrite] can be selected.



- The minimum duration of a movie that can be edited is 1 second.
- It may take approximately 3 minutes to save an edited movie. If the battery pack runs out of charge partway through, edited movie clips cannot be saved. When editing movies, use a fully charged battery pack or the separately sold AC Adapter Kit ACK900 (p. 169).


Rotating Images in the Display



Images can be rotated clockwise 90° or 270° in the display.




0° (Original)

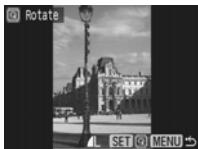

90°



270°

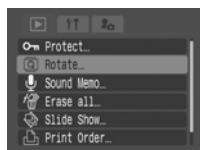

1 In the  (Play) menu, select  and press the **FUNC./SET** button.

See *Selecting Menus and Settings* (p. 47).



2 Use the **←** or **→** button to select the image to be rotated and press the **FUNC./SET** button.

Cycle through the 90°/270°/0° orientations with each press of the **FUNC./SET** button.



3 Press the **MENU** button.

The display will return to the Play menu. Pressing the **MENU** button again returns to the playback screen.



- Movies cannot be rotated.
- When images are downloaded to a computer, the orientation of images rotated by the camera will depend upon the software used to download the images.




- Images can be magnified when rotated (p. 114).
- Images taken vertically with Auto Image Rotate (p. 110) set to [On] will automatically be rotated to the vertical position when viewed on the camera's LCD monitor.

Attaching Sound Memos to Images



In playback mode (including single image playback and index playback, you can attach sound memos (up to 60 seconds) to an image. The sound data is saved in the WAVE format.

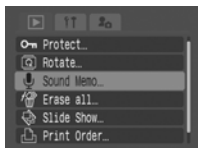

1 In the (Play) menu, select and press the **FUNC./SET** button.

See *Selecting Menus and Settings* (p. 47).



2 Use the or button to select an image and press the **FUNC./SET** button.

The sound memo control panel will display.



Sound Memo Panel



3 Use the or button to select (Record) and press the **FUNC./SET** button to record.

- The recording starts and the elapsed time is displayed.
- Press the **FUNC./SET** button again to stop recording. To resume recording, press the **FUNC./SET** button again.
- Up to 60 seconds of recordings may be added to any one image.
- To return to the previous screen, select (Exit) and press the **FUNC./SET** button.

Exiting Sound Memos

Press the **MENU** button.

Playing/Erasing Sound Memos



1 Display an image with a sound memo attached (p. 124) and press the **FUNC./SET** button.

- Images with sound memos attached have the icons displayed on them.
- The sound memo control panel will display.



Sound Memo Panel



2 Use the or button to select (Play) or (Erase) and press the **FUNC./SET** button.

(Play)

- The sound memo will play. Playback will stop when you press the **FUNC./SET** button. Press the **FUNC./SET** button again to resume playback.
- Use the or button to adjust the sound volume.

(Erase)

A confirmation menu will display. Use the or button to select [Erase] and press the **FUNC./SET** button.

To return the playback to the beginning, select (Pause) while stopped and press the **FUNC./SET** button.



- You cannot attach sound memos to movies.
- The “Memory card full” message will display when the SD card is full and you will be unable to record sound memos to that card.
- If an incompatible sound memo is attached to an image, you will be unable to record or play sound memos for that image, and the “Incompatible WAVE format” message will display. You can erase incompatible sound data using the camera.
- Sound memos for protected images cannot be erased.



The volume can be adjusted in the (Set up) menu (p. 54).

Automated Playback (Slide Shows)



Starting a Slide Show

A selection of images or all the images on an SD card can be displayed one-by-one in an automated slide show.

Slide show image settings are based on DPOF standards (p. 136).

| | |
|-----------------------|--|
| All Images | Plays all images on the SD card in order. |
| Slide Show 1-3 | Plays the images selected for each slide show in order (p. 127). |




1 In the  (Play) menu, select  and press the **FUNC./SET** button.

- See *Selecting Menus and Settings* (p. 47).
- The Slide Show menu will display.



2 Use the **↑** or **↓** button to select [Program] and the **←** or **→** button to select [All Images], [Show 1], [Show 2] or [Show 3].

- See p.128 from step 3, for selecting the playback images in slide shows 1-3.
- Selecting Reset cancels all the slideshow settings.

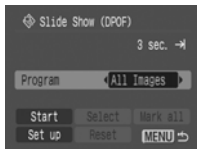

3 Use the **↑** or **↓** button to select [Start] and press the **FUNC./SET** button.

The slide show starts. The Slide Show menu will reappear after the playback ends.





4 Press the MENU button.

The display will return to the Play menu. Pressing the **MENU** button again returns to the playback screen.



- Movies play for their entire recorded length regardless of the time set in the slide show settings.
- The power-saving function does not activate during a slide show (p. 55).

Pausing/Resuming a Slide Show



Press the FUNC./SET button.

The slide show pauses. Press the **FUNC./SET** button again to restart it.

Fast Forwarding/Rewinding a Slide Show



Press the ← or → button.

The previous or next image displays. Hold down the button to advance through the images more rapidly.

Stopping a Slide Show




Press the MENU button.

The slide show stops and the Slide Show menu reappears.

Selecting Images for Slide Shows

You can mark images for inclusion in slide shows 1-3. Up to 998 images may be marked per slide show. Images display in the order of their selection.

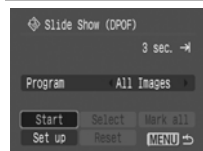

1 Display the Slide Show menu.

See *Starting a Slide Show* (p. 126).



- 2** Use the **↑** or **↓** button to select [Program] and the **←** or **→** button to select [Show 1], [Show 2] or [Show 3].

A white checkmark will appear beside a show already containing images.




- 3** Use the **↑** or **↓** button and the **←** or **→** button to choose [Select] and press the **FUNC./SET** button.

You can select all the images by choosing All Images, pressing the **FUNC./SET** button and selecting [OK] in the next screen.



- 4** **Select images for the Slide Show**

- Use the **←** or **→** button to move to an image and the **FUNC./SET** button to select or deselect it. Selected images display a number corresponding to their selection order and a checkmark .
- You can press the zoom lever toward  to switch to the index mode (9 images) and use the same procedures to select images.




- 5** **Press the MENU button.**

Press the **MENU** button repeatedly until the Playback screen reappears to finish the procedure.

Adjusting the Play Time and Repeat Settings

You can change the play time for all the images in a show and have the show repeat continuously.

| | |
|------------------|---|
| Play Time | Sets the duration that each image displays. Choose between 3-10 seconds, 15 seconds, 30 seconds and Manual. |
| Repeat | Sets whether the slide show stops when all the slides have been displayed or continues until stopped. |

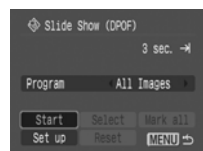

1 Display the Slide Show menu.


See *Starting a Slide Show* (p. 126).



2 Use the \uparrow , \downarrow , \leftarrow or \rightarrow button to select [Set up] and press the FUNC./SET button.



3 Use the \uparrow or \downarrow button to select [Play Time] or [Repeat] and the \leftarrow or \rightarrow button to select an option.

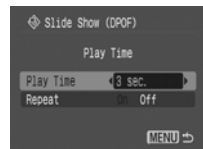

4 Press the MENU button.

The set up menu will close. Pressing the **MENU** button again returns to the Play menu. Press it again to go back to the playback screen.




- The display interval may vary slightly from the set time for some images when played.
- Slide shows are easy to arrange on a computer with the supplied software (ZoomBrowser EX/ImageBrowser). See the *Software Starter Guide*.

Protecting Images



You can protect important images and movies from accidental erasure.

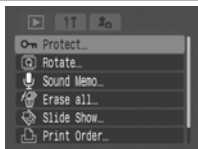

- 1** In the (Play) menu, select and press the **FUNC./SET** button.

See *Selecting Menus and Settings* (p. 47).



Protection Icon



- 2** Use the **←** or **→** button to select an image to protect and press the **FUNC./SET** button.

- The icon appears on protected images.
- You can make the selection of images easier by toggling between single image playback and index playback by pressing the zoom lever toward or



- 3** Press the **MENU** button.

The Play menu displays again. Press it again to return to the playback screen.

To Cancel Protection

After step 1, select an image to remove protection from and press the **FUNC./SET** button.



Please note that formatting (initializing) an SD card erases all data, including protected images (p. 26).


Erasing Single Images



- Please note that erased images cannot be recovered. Exercise adequate caution before erasing an image.
- Protected images cannot be erased with this function.



1

Use the **←** or **→** button to select an image for deletion and press the  button.



2

Use the **←** or **→** button to select [Erase] and press the **FUNC./SET** button.



To exit instead of erasing, select [Cancel].



This is not available during index playback.


Erasing All Images



You can erase all the images saved on the SD card.



- Please note that erased images cannot be recovered. Exercise adequate caution before erasing an image.
- Protected images cannot be erased with this function.

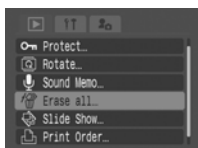


1 In the  (Play) menu, select  and press the **FUNC./SET** button.

See *Selecting Menus and Settings* (p. 47).



2 Use the **←** or **→** button to select **[OK]** and press the **FUNC./SET** button.

To exit instead of erasing, select **[Cancel]**.

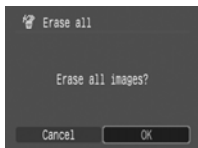

You should format the SD card when you want to erase not only image data but also all the data contained on the card (p. 26).




Erasing

About Printing




Images shot with this camera can be printed using one of the following methods.

- Connecting the camera to a direct print compatible printer*¹ with a single cable and pressing the  button on the camera.
- Selecting images and specifying the number of print copies (DPOF*² print settings) with the camera before sending the images (SD card) to a photo developing center

*¹ Since this camera uses a standard protocol (PictBridge), you can use it with other PictBridge-compliant printers in addition to Canon-brand compact photo printers (SELPHY CP series), card photo printers and Bubble Jet Printers (PIXMA series/SELPHY DS series).

*² Digital Print Order Format

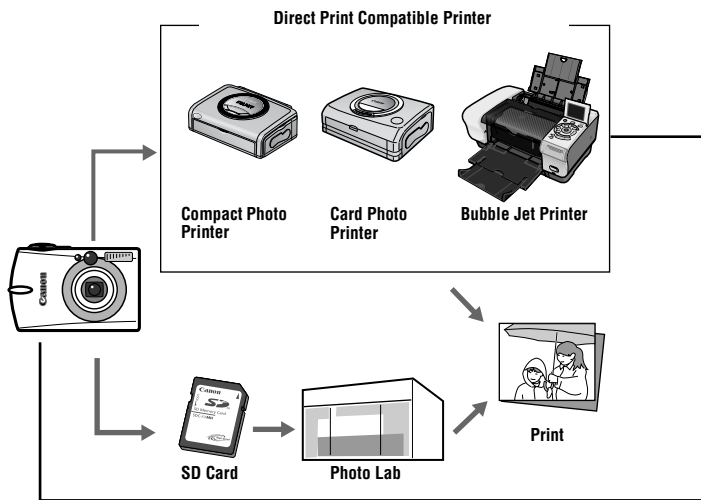

This guide explains DPOF print settings. For information on how to print images, refer to the *Direct Print User Guide* supplied with the camera. Also, refer to your printer's manual.

Please check the *System Map* to confirm the compact photo printer (SELPHY CP series), card photo printer models and Bubble Jet Printers (PIXMA series/SELPHY DS series) that can be used with this camera.

Direct Print Compatible Printing

For details, see the *Direct Print User Guide* or the users manual for your printer.

DPOF Print Settings (p. 136)

DPOF Transfer Order (p. 142)

Setting the DPOF Print Settings



You can select images on an SD card for printing and specify the number of print copies in advance using the camera. This is extremely convenient for sending the images to a photo developing service that supports DPOF, or for printing on a direct print compatible printer.


See the *Direct Print User Guide* for instructions on how to print.

Selecting Images for Printing

There are two ways to select images.

- Singly
- All images on an SD card (the number of print copies is set to one per image)

Single Images

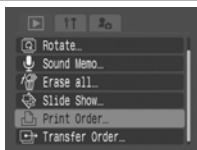


1 In the (Play) menu, select and press the **FUNC./SET** button.

See *Selecting Menus and Settings* (p. 47).



2 Use the **↑**, **↓**, **←** or **→** button to select **[Order]** and press the **FUNC./SET** button.

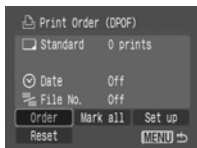

To cancel the Print Order settings, select **[Reset]**.



Number of Print Copies



Selected for an Index Print



3 Select images for printing.

As shown below, selection methods differ according to the options chosen for the Print Type settings (p. 140).

Print Type

- (Standard)/ (Both)

Use the or button to select an image, press the **FUNC./SET** button and use the or button to select the number of print copies (up to maximum of 99).

- (Index)

Use the or button to move to an image and the **FUNC./SET** button to select or deselect it.

A checkmark displays on selected images.


You can press the zoom lever toward to switch to the index mode (9 images) and use the same procedures to select images.

4 Press the MENU button.

The Print Order menu will reappear. Pressing the **MENU** button again returns to the Play menu. Press it again to go back to the playback screen.




All the Images on an SD Card

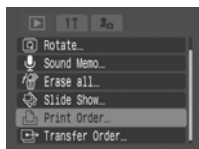


1 In the (Play) menu, select and press the **FUNC./SET** button.

See *Selecting Menus and Settings* (p. 47).

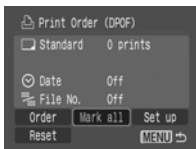

2 Use the **↑**, **↓**, **←** or **→** button to select **[Mark all]** and press the **FUNC./SET** button.

All print settings for the image are canceled when you select **[Reset]**.

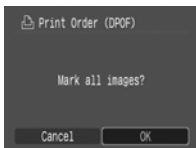

3 Use the **←** or **→** button to select **[OK]** and press the **FUNC./SET** button.

The display returns to the Print Order (DPOF) menu.



4 Press the **MENU** button.

The display returns to the Play menu. Press the **MENU** button again to go back to the playback screen.








- The **!** symbol will display on images that have had print settings set by other DPOF-compliant cameras. These settings will be overwritten by those set by your camera.
- The output of some printers or photo developing services may not reflect the specified print settings.
- Print settings cannot be set for movie images.




-
- Images are printed in order from oldest to newest by the shooting date.
 - A maximum of 998 images can be selected per SD card.
 - When [Both] is selected, the number of print copies can be set, but it applies to Standard prints only. The Index setting only produces one print copy.
 - Print settings can also be assigned to images with the bundled software (ZoomBrowser EX/Image Browser) on a computer. However, do not set the date in the DPOF print settings when printing images that have had the date embedded with the [Date Stamp] function. This may cause the date to be printed twice.

Setting the Print Style

Set the print style after selecting the image to print. The following print settings can be selected.

| | | |
|---|---|---|
| Print Type |  Standard | Prints one image per page. |
| |  Index | Prints the selected images together at a reduced size in an index format. |
| |  Both | Prints the images in both the standard and index formats. |
|  Date | Adds the date to the print. | |
|  File No. | Adds the file number to the print. | |

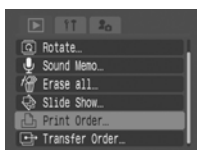


1 In the  (Play) menu, select  and press the **FUNC./SET** button.




See *Selecting Menus and Settings* (p. 47).



2 Use the , ,  or  button to select **[Set up]** and press the **FUNC./SET** button.

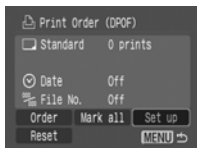

All print settings for the image are canceled when you select **[Reset]**.

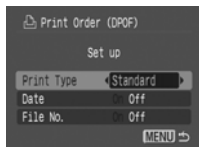

3 Use the **↑** or **↓** button to select [Print Type], [Date] or [File No.] and the **←** or **→** button to select an option.

Print Type

Select [Standard], [Index] or [Both].

Date

Select [On] or [Off].

File No.


Select [On] or [Off].



4 Press the **MENU** button.

The Print Order menu will reappear. Pressing the **MENU** button again returns to the Play menu. Press it again to go back to the playback screen.



- When the print type is set to [Index], the [Date] and [File No.] options cannot be set to [On] at the same time.
- If you selected [Standard] or [Both] as the Print Type, you can also set the Date and File No. settings to [On] at the same time. However, the data that is supported may vary among printers.
- Embedded dates in  (Postcard Date Imprint mode, p. 76) print out even when [Date] is set to [Off].




The date prints in the format specified in the Date/Time menu (p. 29).

Image Transmission Settings (DPOF Transfer Order)

You can use the camera to specify settings for images before downloading to a computer. Refer to the *Software Starter Guide* for instructions on how to transfer images to your computer.

The settings used on the camera comply with the Digital Print Order Format (DPOF) standards.




The  icon may display for an SD card that has had transfer settings set by a different DPOF-compliant camera. These settings will be overwritten by those set by your camera.

Selecting Images for Transferring

There are two ways to select images.

- Singly
- All images on an SD card

Single Images

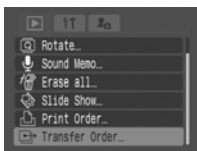

- 1** In the  (Play) menu, select  and press the **FUNC./SET** button.

See *Selecting Menus and Settings* (p. 47).

- 2** Use the **←** or **→** button to select **[Order]** and press the **FUNC./SET** button.

All transfer settings for the image are canceled when you select **[Reset]**.



Selected for Transfer



3 Use the ← or → button to move between images and the FUNC./SET button to select and deselect them.

- A checkmark displays on selected images.
- You can press the zoom lever toward to switch to the index mode (9 images) and use the same procedures to select images.



4 Press the MENU button.


The Transfer Order menu reappears. Pressing the **MENU** button again returns to the Play menu. Press it again to go back to the playback screen.

All the Images on an SD Card




1 In the (Play) menu, select and press the FUNC./SET button.

See *Selecting Menus and Settings* (p. 47).

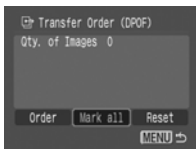

2 Use the **←** or **→** button to select **[Mark all]** and press the **FUNC./SET** button.

All transfer settings for the image are canceled when you select **[Reset]**.

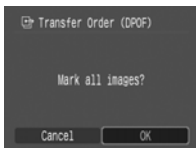

3 Use the **←** or **→** button to select **[OK]** and press the **FUNC./SET** button.

The display returns to the Transfer Order (DPOF) menu.



4 Press the **MENU** button.

The display returns to the Play menu. Press the **MENU** button again to go back to the playback screen.



- Images are transferred in order from oldest to newest by the shooting date.
- A maximum of 998 images can be selected per SD card.

Connecting the Camera to a Computer

The following methods can be used to download images recorded by the camera to a computer. Depending on the OS used, some methods may not be available. Please read *Computer System Requirements* (p. 146) in advance.

• Downloading via a Camera to Computer Connection

| | | | | |
|---------------|---------------|-----------------|---------------|-------------|
| Windows 98 | Windows Me | Windows 2000 | Windows XP | Mac OS X |
|---------------|---------------|-----------------|---------------|-------------|

With this method, you download images using computer commands after you have installed the appropriate software.

See *Connecting the Camera to a Computer* (p. 146), and the separate *Software Starter Guide*.

| | | | | |
|---------------|---------------|-----------------|---------------|-------------|
| Windows 98 | Windows Me | Windows 2000 | Windows XP | Mac OS X |
|---------------|---------------|-----------------|---------------|-------------|

With this method, you download images using camera button operations after you have installed the appropriate software (the computer settings only need to be adjusted for the first download).

See *Connecting the Camera to a Computer* (p. 146) and *Downloading Images by Direct Transfer* (p. 152).

| | |
|---------------|-------------|
| Windows XP | Mac OS X |
|---------------|-------------|

With this method, you download images using computer commands without installing any software.

See *Connecting the Camera to a Computer* (p. 146) (Software Installation Not Required) and *Connecting the Camera to the Computer to Download Images without Installing Software* (p. 154).

• Downloading from an SD Card

See *Downloading from an SD Card* (p. 154).

Connecting the Camera to a Computer

Computer System Requirements

Please install and use the software on a computer which meets the requirements below.

Windows

| | |
|-----------------------------|--|
| OS | Windows 98 Second Edition (SE) Windows Me Windows 2000 Service Pack 4 Windows XP (Including Service Pack 1 and Service Pack 2) |
| Computer Model | The above OS should be pre-installed on computers with built-in USB ports. |
| CPU | Pentium 500 MHz or higher processor is required |
| RAM | Windows 98 SE/Windows Me: 128 MB or more Windows 2000/Windows XP: 256 MB or more |
| Interface | USB |
| Free Hard Disk Space | <ul style="list-style-type: none">• Canon Utilities<ul style="list-style-type: none">- ZoomBrowser EX: 250 MB or more (Including the PhotoRecord printing program)- PhotoStitch: 40 MB or more• Canon Camera TWAIN Driver: 25 MB or more• Canon Camera WIA Driver: 25 MB or more• ArcSoft PhotoStudio: 50 MB or more |
| Display | 1,024 x 768 pixels / High Color (16 bit) or better is required |

Macintosh

| | |
|-----------------------------|---|
| OS | Mac OS X (v10.1.5 – v10.3) |
| Computer Model | The above OS should be pre-installed on computers with built-in USB ports. |
| CPU | PowerPC G3/G4/G5 |
| RAM | 256 MB or more |
| Interface | USB |
| Free Hard Disk Space | <ul style="list-style-type: none">• Canon Utilities<ul style="list-style-type: none">- ImageBrowser: 200 MB or more- PhotoStitch: 40 MB or more• ArcSoft PhotoStudio: 50 MB or more |
| Display | 1,024 x 768 pixels / 32,000 colors or better is required |

IMPORTANT

You must install the software and driver bundled on the supplied Canon Digital Camera Solution Disk onto your computer before connecting the camera to a computer.



- The camera will not operate correctly if you connect it to your computer before installing the driver and software. If this happens, please refer to the Troubleshooting section of the *Software Starter Guide*.
- Even when system requirements are met, not all computer functions can be guaranteed.



- You do not need to turn off the camera or computer power when making a USB connection.
- Please refer to your computer's manual for information regarding the location of the USB port.
- You are recommended to use a fully charged battery pack or the AC Adapter Kit ACK900 (sold separately) to power the camera when connecting to a computer (p. 19).


Windows

1 Install the driver and the software applications bundled on the Canon Digital Camera Solution Disk (first time only).

Please see the *Software Starter Guide* for the installation procedures.

2 Use the supplied interface cable to connect the computer's USB port to the camera's DIGITAL terminal.

- Slip a fingernail under the bottom edge of the camera's DIGITAL Terminal cover, lift it up and plug the interface cable in all the way.
- Treat the connector area with great care while you attach and remove the interface cable.

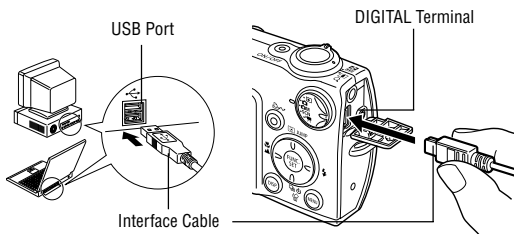

- Always grasp the connector's sides to remove the interface cable from the camera's DIGITAL terminal.

3 Turn the mode dial to (Playback).

4 Press the power button until the power lamp lights green.

5 Select [Canon CameraWindow] in the event dialog that appears on the computer and click [OK] (first time only).



If the event dialog fails to appear, click the [Start] menu, and select [Programs] or [All Programs], followed by [Canon Utilities], [CameraWindow], and [CameraWindow].

The following window will display.



- **Using the software and computer to download images:**
See the *Software Starter Guide*.
- **Using the Camera to Download Images (Direct Transfer Function)**
See *Downloading Images by Direct Transfer* (p. 152).

Macintosh

1 Install the driver and the software applications bundled on the Canon Digital Camera Solution Disk (first time only).


Please see the *Software Starter Guide* for the installation procedures.

2 Set the auto start settings for ImageBrowser.

- Set the ImageBrowser auto start settings before you connect the camera to the computer for the first time.
- This step is not required from the second connection onward.

ImageBrowser Auto Start Settings – OS X (v10.2/v10.3)

1. Start Image Capture, click the [Image Capture] menu and select [Preferences].
2. In the next menu, click the [When a camera is connected, open:] list box and select [Other].




3. Select [CameraWindow] in the program selection window.

CameraWindow is generally installed into the folder opened by selecting the [Applications], [Canon Utilities] and [CameraWindow] folders.

4. Click [OK] and then close Image Capture.

ImageBrowser Auto Start Settings – OS X (v10.1)

1. Start Image Capture and select [Other] from the Hot Plug Action list box.

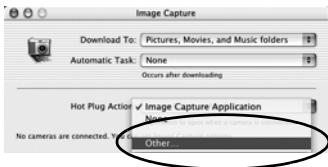

2. Select [CameraWindow] in the program selection window.

CameraWindow is generally installed into the folder opened by selecting the [Applications], [Canon Utilities] and [CameraWindow] folders.

3. Close Image Capture.

3 Perform steps 2-4 on page 147.






The following window will display.



- **Using the software and computer to download images:**
See the *Software Starter Guide*.
- **Using the Camera to Download Images (Direct Transfer Function)**
See *Downloading Images by Direct Transfer* (p. 152).


Downloading Images by Direct Transfer

Use this method to download images using camera operations. Install the supplied software and adjust the computer settings before using this method for the first time (p. 147).


| | | |
|---|------------------------------|--|
|  | All Images | Transfers and saves all images to the computer. |
|  | New Images | Transfers and saves to the computer only the images that have not been previously transferred. |
|  | DPOF Trans. Images | Transfers and saves to the computer only the images with DPOF Transfer Order settings (p. 142). |
|  | Select & Transfer | Transfers and saves single images to the computer as you view and select them. |
|  | Wallpaper | Transfers and saves single images to the computer as you view and select them. The transferred images display on the computer desktop. |



1 Confirm that the Direct Transfer menu is displayed on the camera's LCD monitor.


- The  button will light blue.
- Press the **MENU** button if the Direct Transfer menu fails to appear.

All Images/New Images/DPOF Trans. Images

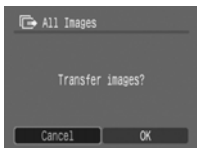




2 Use the **↑** or **↓** button to select , or , and press the button.

- To cancel the transfer, press the **FUNC./SET** button.

The images will download. The  button will blink blue while downloading is in progress. The display will return to the Direct Transfer menu when the download is complete.

Select & Transfer/Wallpaper

| | |
|---|---|
|  | <p>2 Use the ↑ or ↓ button to select ☐ or 🖼️, and press the 📄 button (or FUNC./SET button).</p> |
|  | <p>3 Use the ← or → button to select images to download and press the 📄 button (or FUNC./SET button).</p> <ul style="list-style-type: none"> • The images will download. The 📄 button will blink blue while downloading is in progress. • Images can also be selected during index playback. |
|  | <p>4 Press the MENU button. The Direct Transfer menu will reappear.</p> |



Only JPEG images can be downloaded as wallpaper for the computer. On the Windows platform, the files are automatically created in the BMP images.



The option selected with the **📄** button is retained even when the camera's power is turned off. The previous setting will be in effect the next time the Direct Transfer menu is displayed. The image selection screen will appear directly when the [Select & Transfer] or the [Wallpaper] option was last selected.

Connecting the Camera to the Computer to Download Images Without Installing Software

If you are using Windows XP or Mac OS X (v10.1.5 – v10.3), you can use the software distributed with these operating systems to download images without installing the software bundled on the Canon Digital Camera Solution Disk. This is useful for downloading images to a computer in which the software is not installed.

However, please note that there are certain limitations to downloading with this method. For more details, please refer to the supplied leaflet entitled *For Windows® XP and Mac OS X Users*.

1 Use the supplied interface cable to connect the computer's USB port to the camera's DIGITAL terminal.

See steps 2-4 starting on p.147.

2 Follow the onscreen instructions to proceed with downloading.

Downloading from an SD Card

1 Eject the SD card from the camera and insert it into an SD card reader connected to the computer.

Refer to your card adapter's or card reader's manual for information regarding the connection between the computer and card adapter or card reader.

2 Double-click the icon of the drive containing the SD card.


Depending on the operating system, the drive containing the SD card may display automatically.

3 Copy the SD card's images to the desired folder on the hard disk.


The images are contained in the [xxxCANON] folder, which is a subfolder of the [DCIM] folder on the SD card. The xxx represents a number from 100 to 998 (p. 112).

Viewing Images on a TV set

You can use a video-compatible television as a monitor to shoot or play back images when it is connected to the camera with the supplied AV Cable AVC-DC300.

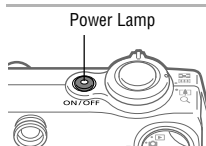


1 Turn off the Camera and the TV.
(p. 34)

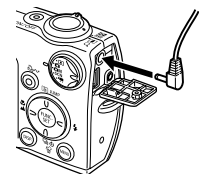


2 Connect the AV cable to the camera's A/V OUT terminal.

- Open the terminal cover by slipping a fingernail under the lower edge and plug the AV cable in all the way.
- Treat the connector area with great care while you attach and remove the AV cable.

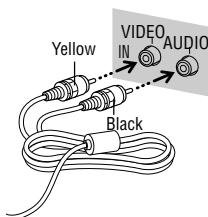

3 Plug the other ends of the AV cable to the VIDEO IN and AUDIO IN jacks on the TV.

4 Turn on the TV and switch it to Video mode.

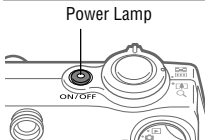

5 Press the power button until the power lamp lights green.

- The image will appear on the TV. Shoot or play back images as usual.
- Press the **DISP.** button when images are not being displayed on the TV when shooting.



- A TV set cannot be used in Stitch Assist mode.
- Refer to pp. 49, 56 for instructions regarding the video output signal.
- No image will appear on the LCD monitor when the camera is connected to a TV.
- If the TV is a stereo model, you can plug the audio plug into either the left or right Audio In jack. Please refer to the TV's manual for details.



The video output signal can be switched (NTSC or PAL) to accommodate different regional standards (p. 56). The default setting varies between regions.


- NTSC: Japan, U.S.A., Canada, Taiwan and others
- PAL: Europe, Asia (excluding Taiwan), Oceania and others

If the video system is set incorrectly, the camera output may not display properly.


Customizing the Camera (My Camera Settings)

My Camera allows you to customize the start-up image and start-up, operation, self-timer and shutter sounds. Each menu item has three choices.


Example: Start-up Image

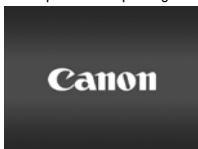

1

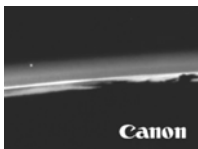


2

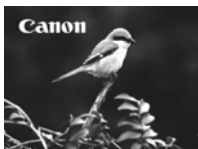

3

The **2** option features science fiction related images and sounds. The **3** option features animals.

Changing My Camera Settings

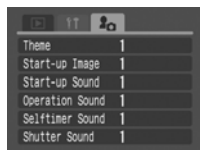

1 Select the **My Camera** menu.


See *Selecting Menus and Settings* (p. 47).



2 Use the **↑** or **↓** button to select an item.



3 Use the **←** or **→** button to select an option.

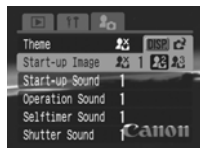







4 Press the MENU button.

- The menu will close.
- In Shooting mode, the menu can be closed by pressing the shutter button halfway.



- If you select  (Theme) in Step 2, you can select a consistent theme for each of the My Camera settings.
- The beep will not play but the start-up image will display if the [Mute] option in the  (Set up) menu is set to [On] even if a setting has been selected in the My Camera menu.

Registering My Camera Settings

Images recorded onto the SD card and newly recorded sounds can be added as My Camera settings to the  and  menu items. You can also use the supplied software to upload your computer's images and sounds to the camera.









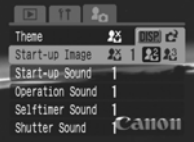




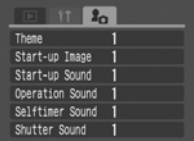

The following menu items can be saved to the camera.

- Start-up Image
- Shutter Sound
- Selftimer Sound
- Operation Sound
- Start-up Sound



A computer is required to restore the My Camera Settings to the defaults. Use the supplied software (ZoomBrowser EX/ImageBrowser) to add the default settings to the camera.

Registering SD Card Images and Sounds

| | |
|--|---|
|  | 1 Turn the mode dial to  (Playback). |
|  | 2 Select the  (My Camera) menu. See <i>Selecting Menus and Settings</i> (p. 47). |
|  | 3 Use the  or  button to select an item. |
|   | 4 Use the  or  button to select  or  . The   icon will display. |



5 Press the **DISP.** button.



6 Select an image or record a sound.

Start-up Image

Use the **←** or **→** button to select the image you wish to register and press the **FUNC./SET** button.



Start-up, Operation, Self-timer and Shutter Sounds

- Use the **←** or **→** button to select  (Record) and press the **FUNC./SET** button. Recording will start and automatically stop when the time is exceeded.
- After recording, use the **←** or **→** button to select  (Register Sound) and press the **FUNC./SET** button.
- Select  (End) to return to the My Camera menu without registering.
- Select  (Play) to play the recorded sound.



7 Use the **←** or **→** button to select **[OK]** and press the **FUNC./SET** button.

To cancel the change, select **[Cancel]**.





- The following cannot be registered as My Camera Settings.
 - Movies
 - Sounds recorded with the sound memo function (p. 124)
- The prior setting is erased when a new My Camera setting is added.

Data that can be Registered as My Camera Settings

My Camera settings should conform to the data types below. However, SD card images shot with this camera can be registered as My Camera settings regardless of the below data types. (Excluding sounds recorded as a movie or with the sound memo function (p. 124).)

Start-up Image

- Compression Method: JPEG (Baseline JPEG)
- Sampling Rate: 4:2:0 or 4:2:2
- Dimensions: 320 x 240 pixels
- Data Size: 20 KB or less

Start-up, Operation, Self-timer and Shutter Sounds

- Compression Method: WAVE (monaural)
- Quantization Bits: 8 bit
- Sampling Frequency: 11.025 kHz or 8.000 kHz
- Recorded Length

| | 11.025 kHz | 8.000 kHz |
|------------------|------------------|------------------|
| Start-up Sound | 1.0 sec. or less | 1.3 sec. or less |
| Operation Sound | 0.3 sec. or less | 0.4 sec. or less |
| Self-timer Sound | 2.0 sec. or less | 2.0 sec. or less |
| Shutter Sound | 0.3 sec. or less | 0.4 sec. or less |

* Any data types other than those described above cannot be used with this camera.

An example of this function is to record “Say Cheese” as a self-timer sound so that the camera will replay this sound 2 seconds before the photo is taken. You could also record cheerful music to bring out the natural smiles of your subjects, or so they can strike a pose fitting the music. In these ways you can customize your camera by creating and adding new My Camera settings.








See the supplied *Software Starter Guide* for more information on creating and adding to the My Camera data.

List of Messages

The following messages may appear on the LCD monitor during shooting or playback. Please refer to the *Direct Print User Guide* for the messages that display during a printer connection.

| | |
|----------------------------------|---|
| Busy... | Image is being recorded to, or read from, SD card. |
| No memory card | You attempted to shoot or play back images without an SD card installed. |
| Card locked! | The SD card is write-protected. |
| Cannot record | You attempted to shoot an image without an SD card installed, or attempted to attach a sound memo to a movie. |
| Memory card error! | SD card has experienced an anomaly. |
| Memory card full | SD card is full of images and no more can be recorded or saved. Or no more image settings (slide show and printing settings, etc.) or sound memos can be recorded. |
| Naming error! | The image could not be created because there is an image with the same name as the directory that the camera is attempting to create, or the highest possible file number has already been reached. In the [M] Set up Menu, set the File Reset option to [On]. Save all the images you wish to retain onto a computer, then reformat the SD card. Please note that formatting will erase all the existing images and other data. |
| Change the battery pack. | Battery charge is insufficient to operate the camera. Replace it at once with a charged one or recharge the battery pack. |
| No image. | No images recorded on SD card. |
| Image too large. | You attempted to play back an image larger than 4492 x 3328 pixels or with a large data size. |
| Incompatible JPEG format. | You attempted to play back an incompatible JPEG image. |
| Corrupted Data. | You attempted to play back an image with corrupted data. |

| | |
|------------------------------------|---|
| RAW | You attempted to play back a RAW image. |
| Unidentified Image | You attempted to play back an image that was recorded in a special data type (proprietary data type used by the camera of another manufacturer, etc.) or a movie clip recorded by another camera. |
| Cannot magnify! | You attempted to magnify an image recorded in a different camera or data type, an image edited with a computer, or a movie. |
| Cannot rotate | You attempted to rotate an image recorded in a different camera or data type, an image edited with a computer, or a movie. |
| Incompatible WAVE format. | A sound memo cannot be added to this image since the data type of the existing sound memo is incorrect. |
| Cannot register this image! | You attempted to add a start-up image or a movie that was created with another camera. |
| Protected! | You attempted to erase a protected image or movie. |
| Too many marks. | Too many images have been marked with print settings or transfer settings. Cannot process any more. |
| Cannot complete! | Could not save the print or transfer settings. |
| Unselectable image. | You attempted to set the print settings for a non-JPEG image. |
| Exx | (xx: number) Camera malfunction. Turn the power off and then back on, then shoot or play back. A problem exists if the error code reappears. Note the number and contact your Canon Customer Support Help Desk. If an error code displays directly after taking a picture, the shot may not have been recorded. Check image in playback mode. |

| Problem | Cause | Solution |
|-------------------------|---|---|
| Camera will not operate | Power is not turned on | <ul style="list-style-type: none"> • Press the power button for a moment. |
| | SD card slot/battery cover is open | <ul style="list-style-type: none"> • Confirm that the SD card slot/ battery cover is securely closed. |
| | Insufficient battery voltage | <ul style="list-style-type: none"> • Insert a fully charged battery into the camera. • Use the AC Adapter Kit ACK900 (sold separately). |
| | Poor contact between camera and battery terminals | <ul style="list-style-type: none"> • Wipe the terminals with a clean dry cloth. |
| Camera will not record | Mode dial is set to  (Playback) | <ul style="list-style-type: none"> • Set the mode dial to , , SCN or . |
| | Flash is charging (Blinking  in the LCD monitor) | <ul style="list-style-type: none"> • The indicator will light orange when it is charged. You can then press the shutter button. |
| | SD card is full | <ul style="list-style-type: none"> • Insert a new SD card. • If required, download the images to a computer and erase them from the SD card to make space. |
| | SD card is not formatted correctly | <ul style="list-style-type: none"> • Format SD card. • If reformatting does not work, the SD card logic circuits may be damaged. Consult the nearest Canon Customer Support Help Desk. |
| | SD card is write-protected. | <ul style="list-style-type: none"> • Slide the write-protect tab of the SD card upward (p. 24). |
| Cannot play back | You attempted to play back images shot with another camera or images edited with a computer | <ul style="list-style-type: none"> • Computer images that cannot be played back will play back if they are added to the camera using the bundled software program ZoomBrowser EX or ImageBrowser. See <i>ZoomBrowser EX/ImageBrowser Software User Guide</i> (PDF). |

| Problem | Cause | Solution |
|--------------------------------------|--|---|
| Cannot play back | File name was changed with a computer or file location was changed | <ul style="list-style-type: none"> Set the file name or file number according to the Design rule for Camera File system standards. ➔ See <i>About File Numbers and Folder Numbers</i> (p. 112). |
| Lens will not retract | SD card slot/battery cover was opened with power on | <ul style="list-style-type: none"> First close the SD card slot/battery cover and then turn the power off. |
| | SD card slot/battery cover was opened while recording to the SD card (warning signal sounds) | <ul style="list-style-type: none"> First close the SD card slot/battery cover and then turn the power off. |
| Battery pack consumed quickly | Battery life exceeded if battery pack loses its charge quickly at normal temperature (23 °C/73 °F) | <ul style="list-style-type: none"> Replace the battery pack with a new one. |
| Battery pack will not charge | Battery pack life exceeded | <ul style="list-style-type: none"> Replace the battery pack with a new one. |
| | Poor contact between battery pack and battery charger | <ul style="list-style-type: none"> Insert battery pack securely into battery charger. Ensure that battery charger plug is securely plugged into the power outlet. |
| Sounds come from the camera interior | The camera's horizontal/vertical orientation was changed | <ul style="list-style-type: none"> The camera's orientation mechanism is operating. There is no malfunction. |
| Image is blurred or out of focus | Camera moved | <ul style="list-style-type: none"> Be careful not to move the camera while pressing the shutter button. |
| | Autofocus function hampered by obstruction to AF-assist Beam | <ul style="list-style-type: none"> Be careful not to block the AF-assist Beam with fingers or other items. |
| | AF-assist Beam is set to [Off] | <ul style="list-style-type: none"> Set the AF-assist Beam to [On] (p. 52). |

| Problem | Cause | Solution |
|---|---|--|
| Image is blurred or out of focus | Subject is out of focal range | <ul style="list-style-type: none"> • For normal shooting conditions, stay at least 50 cm (1.6 ft.) from the subject. • In macro mode, stay in the range of 30 – 50 cm (1.0 – 1.6 ft.) from the subject (5 - 50 cm (2.0 in. – 1.6 ft.) at maximum wide angle). • In digital macro mode, stay in the range of 5 - 50 cm (2.0 in. – 1.6 ft.) from the subject at maximum wide angle. • Use the infinity mode to shoot distant subjects. |
| | The subject is hard to focus on | <ul style="list-style-type: none"> • Use the focus lock or AF lock to shoot. ➡ See <i>Shooting Hard-to-Focus Subjects (Focus Lock, AF Lock)</i> (p. 90). |
| Subject in recorded image is too dark | Insufficient light for shooting | <ul style="list-style-type: none"> • Set the flash to on. |
| | Subject is dark in contrast to the background | <ul style="list-style-type: none"> • Set the exposure compensation to a positive (+) setting, use AE lock or use the spot metering function. |
| | Subject is too far away for flash to reach | <ul style="list-style-type: none"> • Shoot within 5.0 m (16.4 ft.) of the subject at the maximum wide angle or 3.0 m (9.8 ft.) of the subject at the telephoto end setting using the flash. • Raise the ISO sensitivity and then shoot. |
| Subject in recorded image is too bright | Subject is too close, making the flash too strong | <ul style="list-style-type: none"> • When using the flash, stay at least 50 cm (1.6 ft.) from the subject. |
| | Subject is bright in contrast to the background | <ul style="list-style-type: none"> • Set the exposure compensation to a negative (-) setting, use AE lock or use the spot metering function. |

| Problem | Cause | Solution |
|---|--|--|
| Subject in recorded image is too bright | Light is shining directly on the subject or reflected off the subject into the camera | <ul style="list-style-type: none"> • Change the shooting angle. |
| | Flash is set to on | <ul style="list-style-type: none"> • Set the flash to off. |
| A bar of light (red, purple) appears on the LCD monitor | Subject is too bright | <ul style="list-style-type: none"> • This is a normal occurrence in devices containing CCDs and does not constitute a malfunction. (This bar of light will not be recorded when shooting still photos, but it will be recorded when shooting movies.) |
| Noise displays on the LCD monitor Subject's movements on LCD monitor are irregular | Camera automatically lightened the image displayed on the LCD monitor to make it easier to see when shooting in a dark area. | <ul style="list-style-type: none"> • There is no effect on the recorded image. |
| White dots appear on the image | Light from the flash has reflected off dust particles or insects in the air. (This is especially noticeable when shooting at wide angle) | <ul style="list-style-type: none"> • This is a phenomenon that occurs with digital cameras and does not constitute a malfunction. |
| Flash does not fire | Flash is set to off | <ul style="list-style-type: none"> • Set the flash to on. |
| Image not showing on TV monitor | Incorrect video system setting | <ul style="list-style-type: none"> • Set the video system to the appropriate setting, NTSC or PAL, for your TV (p. 56). |
| | Shooting in Stitch Assist mode | <ul style="list-style-type: none"> • The output will not appear on a TV in Stitch Assist mode. Cancel the Stitch Assist mode. |


| Problem | Cause | Solution |
|---|--|---|
| Zoom does not operate | Zoom lever was pressed while shooting in a movie mode other than Standard. | <ul style="list-style-type: none"> • Operate the zoom before shooting in movie mode. |
| Reading images from SD card is slow | SD card was formatted in another device | <ul style="list-style-type: none"> • Use an SD card formatted in your camera. |
| Recording images to SD card takes a long time | | |

Using an AC Adapter Kit (Sold Separately)

It is best to power the camera with AC Adapter Kit ACK900 (sold separately) when you are using it for long periods of time or connecting it to a computer.




Turn the camera power off before connecting or disconnecting the AC adapter.



Compact Power Adapter
CA-PS500

1

Connect the power cord to the compact power adapter first and then plug the other end into the power outlet.

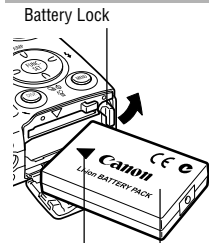

Battery Lock

▲ Symbol


DC Coupler DR900

2

Open the SD card slot/battery cover, then insert the DC coupler until it is locked.

Press the battery lock in the direction of the arrow and hold it while aligning the ▲ on the DC coupler and battery chamber and insert the DC coupler correctly.

- Slide the SD card slot/battery cover closed.

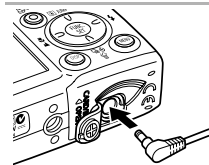

3

Open the DC coupler terminal cover and attach the cord to the DC terminal.

After you have finished using the camera, unplug the AC adapter from the power outlet.




Use of an AC adapter kit other than ACK900 (sold separately) may cause a malfunction in the camera or kit.

Using an Externally Mounted Flash (Sold Separately)

High-Power Flash HF-DC1

This flash is used to supplement the camera's built-in flash when the subject is too far away for proper illumination. Use the following procedures to affix the camera and High-Power Flash to the supporting bracket. Please read the instructions accompanying the flash along with this explanation.

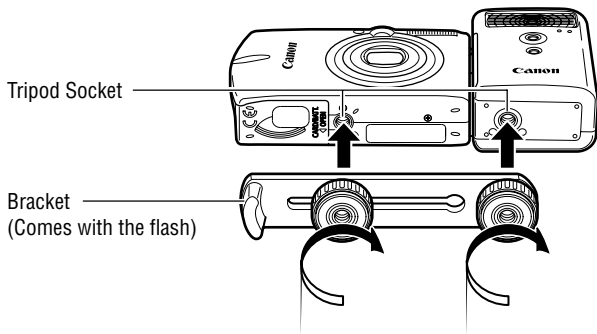

- The flash charge time will lengthen as the battery charge gets weaker. Always set the power/mode switch to [OFF] when you finish using the flash.
- Be careful not to touch the flash window or sensor windows with your fingers while the flash is in use.
- In outdoor settings in the daylight, the flash may not detect illumination from the camera's built-in flash and may not fire.
- The flash may fire if another flash is being used in close proximity.
- The flash may not fire if there are no reflective items in its metering field.
- For continuous shooting, although the flash fires for the first shot, it does not fire for subsequent shots.
- If the battery usage time has considerably diminished, wipe the battery terminals well with a dry cloth as the terminals may be soiled with oil from one's skin or other dirt.



-
- If the battery is used in cold regions (0 °C /32 °F or lower), you are recommended to carry a spare lithium battery (CR123A or DL123). Keep the spare battery warm in your pocket until immediately before using it, and exchange it frequently with the battery in the flash.
 - Remove the battery from the flash and store it in a dry and cool location if you will not use it for extended periods. Leaving it in the flash could lead to the battery leaking and damaging the flash.
 - Fasten the attachment screws securely so that they do not loosen. Failure to do so may lead to the dropping of the camera and flash resulting in damage to both.



-
- Before affixing the bracket to the flash, check that the lithium battery (CR123A or DL123) is installed.
 - To illuminate the subjects properly, install the flash so that it is up against the side of the camera and parallel with the camera's front panel.
 - A tripod can be used even when the flash is attached.

Camera Care and Maintenance

Use the following procedures to clean the camera body, lens and LCD monitor.



Never use thinners, benzene, synthetic cleansers or water to clean the camera. These substances may distort or damage the equipment.

Camera Body

Gently wipe dirt off the camera body with a soft cloth or eyeglass lens wiper.

Lens

First use a lens blower brush to remove dust and dirt, then remove any remaining dirt by wiping the lens lightly with a soft cloth.



Never use synthetic cleansers on the camera body or lens. If dirt remains, contact the closest Canon Customer Support Help Desk as listed on the separate *Canon Customer Support* leaflet.

Viewfinder and LCD Monitor

Use a lens blower brush to remove dust and dirt. If necessary, gently wipe with a soft cloth or an eyeglass lens wiper to remove stubborn dirt.



Never rub or press strongly on the LCD monitor. These actions may damage it or lead to other problems.

Specifications

All data is based on Canon's standard testing methods. Subject to change without notice.

PowerShot SD500 DIGITAL ELPH/DIGITAL IXUS 700

(W): wide angle (T): telephoto

| | |
|---|---|
| Camera Effective Pixels | Approx. 7.1 million |
| Image Sensor | 1/1.8-inch CCD (Total number of pixels: Approx. 7.4 million) |
| Lens | 7.7 (W) – 23.1 (T) mm (35mm film equivalent: 37 (W) – 111 (T) mm) f/2.8 (W) – f/4.9 (T) |
| Digital Zoom | Approx. 4.0x (Up to approx. 12x in combination with the optical zoom) |
| Optical Viewfinder | Real-image zoom viewfinder |
| LCD Monitor | 2.0-inch, low-temperature polycrystalline silicon TFT color LCD, approx. 118,000 pixels (Picture coverage 100%) |
| AF System | TTL autofocus Focusing frame: 9-point AiAF/1-point AF (fixed to center) |
| Shooting Distance (From the front of the lens) | Normal: 50 cm (1.6 ft.) – infinity Macro: 5 – 50 cm (W)/30 – 50 cm (T) (2.0 in. – 1.6 ft. (W)/1.0 – 1.6 ft. (T)) Infinity: 3.0 m (9.8 ft) – infinity |
| Shutter | Mechanical shutter + electronic shutter |
| Shutter Speeds | 15 – 1/2000 sec. The shutter speed varies according to the shooting mode. Slow shutter speeds of 1.3 sec. or slower operate with noise reduction. |
| Light Metering System | Evaluative, Center-weighted average or Spot (fixed to center) |
| Exposure Control System | Program AE |
| Exposure Compensation | ± 2.0 stops in 1/3-stop increments |

| | |
|-----------------------------------|--|
| Sensitivity | Auto*, ISO 50/100/200/400 equivalent *Camera automatically sets the optimal speed. |
| White Balance | TTL auto, pre-set (available settings: Daylight, Cloudy, Tungsten, Fluorescent or Fluorescent H) or custom |
| Built-in Flash | Auto, auto with red-eye reduction, flash on with red-eye reduction, flash on, flash off, slow synchro |
| Flash Range | Normal: 50 cm – 5.0 m (1.6 – 16.4 ft.) (W), 50 cm – 3.0 m (1.6 – 9.8 ft.) (T) Macro: 30 cm – 50 cm (1.0 – 1.6 ft.) (W/T) (When sensitivity is set to AUTO.) |
| Shooting Modes | Still images: Auto, Manual* ¹ , Digital macro* ² , My Colors* ² , Special Scene* ³ , Stitch assist* ⁴ Movie: Standard, Fast Frame Rate, Compact, My Colors * ¹ Long shutter mode available * ² Selectable in Manual mode. * ³ Portrait, Foliage, Snow, Beach, Fireworks, Underwater, Indoor, Kids&Pets, Night Snapshot * ⁴ Selectable from the Rec. menu |
| Continuous Shooting | Approx. 2.0 shots/sec. (Large/Fine mode) |
| Self-timer | Activates shutter after an approx. 10-sec./approx. 2-sec. delay, Custom Timer |
| Recording Media | SD memory card |
| File Format | Design rule for camera file system and DPOF compliant |
| Data Type | Still images: Exif 2.2 (JPEG)* ¹ Movies: AVI (Image data: Motion JPEG; Audio data: WAVE (monaural)) |
| Compression | Superfine, Fine, Normal |
| Number of Recording Pixels | Still images: Large: 3072 x 2304 pixels Medium 1: 2592 x 1944 pixels Medium 2: 2048 x 1536 pixels Medium 3: 1600 x 1200 pixels Small: 640 x 480 pixels Postcard Date Imprint Mode: 1600 x 1200 pixels |

| | |
|-----------------------------------|--|
| Number of Recording Pixels | <p>Movies: Standard, My Colors: (recording can continue until the SD card is full^{*1} (can record up to a maximum of 1 GB at one time))</p> <p>640 x 480 pixels (30 frames/sec., 15 frames/sec.)</p> <p>320 x 240 pixels (30 frames/sec., 15 frames/sec.)</p> <p>Fast Frame Rate: (can record for 1 min.) ^{*2} 320 x 240 pixels (60 frames/sec.)</p> <p>Compact: (can record for 3 min.) ^{*2} 160 x 120 pixels (15 frames/sec.)</p> <p>^{*1} Using super high-speed SD cards (SDC-512MSH recommended).</p> <p>^{*2} The data in parentheses refer to the maximum movie clip length.</p> |
| Playback Modes | Single (histogram displayable), Index (9 thumbnail images), Magnified (approx. 10x (max.) in LCD monitor, advance or reverse through magnified images possible), Image search (jumps over 10 or 100 images, to a movie or to the next shooting date, or 9 images at a time when in index playback), Sound memos (up to 60 sec.), Slide show or Movie (slow motion play back possible). |
| Direct Print | <i>PictBridge</i> compliant, and <i>Canon Direct Print</i> and <i>Bubble Jet Direct</i> compatible |
| Display Languages | 21 languages available for menus and messages (English, German, French, Dutch, Danish, Finnish, Italian, Norwegian, Swedish, Spanish, Simplified Chinese, Russian, Portuguese, Greek, Polish, Czech, Hungarian, Turkish, Traditional Chinese, Korean and Japanese) |
| My Camera Settings | The start-up image, start-up sound, operation sound, self-timer sound, and shutter sound can be customized using the following methods: <ol style="list-style-type: none">1. Using the images and sounds recorded on a camera.2. Using the downloaded data from your computer using the supplied software. |
| Interface | USB 2.0 Hi-Speed (mini-B), PTP (Picture Transfer Protocol) Audio/Video output (NTSC or PAL selectable, monaural audio) |

| | |
|--------------------------------------|--|
| Power Source | Rechargeable lithium-ion battery (type: NB-3L) AC Adapter Kit ACK900 |
| Operating Temperature | 0 – 40 °C (32 – 104 °F) |
| Operating Humidity | 10 – 90% |
| Dimensions | 89.5 (85.6) x 57.0 x 26.5 mm (3.52 (3.37) x 2.24 x 1.04 in.) Values in () do not include the curve on the grip side. |
| Weight (camera body only) | Approx. 170 g (6.00 oz.) |

*1 This digital camera supports Exif 2.2 (also called “Exif Print”). Exif Print is a standard for enhancing the communication between digital cameras and printers. By connecting to an Exif Print-compliant printer, the camera’s image data at the time of shooting is used and optimized, yielding extremely high quality prints.

Battery Capacity (Battery Pack NB-3L (Fully charged))

| Number of Images Shot | | Playback Time |
|--|--------------------|---------------------|
| LCD Monitor ON (Based on the CIPA standard) | LCD Monitor Off | |
| Approx. 160 images | Approx. 550 images | Approx. 210 minutes |

- The actual figures will vary according to the shooting conditions and settings.
- Movie data is excluded.
- At low temperatures, the battery pack performance may diminish and the low battery icon appears very rapidly. In these circumstances, the performance can be improved by warming the battery pack in a pocket before use.

Test Conditions

Shooting: Normal temperature ($23\text{ }^{\circ}\text{C} \pm 2\text{ }^{\circ}\text{C}/73\text{ }^{\circ}\text{F} \pm 3.6\text{ }^{\circ}\text{F}$), normal relative humidity ($50\% \pm 20\%$), alternating wide angle end and telephoto end shots at 30 second intervals with the flash fired once every two shots and the camera power turned off after every tenth shot.

Power is left off for a sufficient amount of time*, then the power is turned back on and the testing procedure is repeated.

- A Canon-brand SD memory card is used.

*Until the battery returns to normal temperature

Playback: Normal temperature ($23\text{ }^{\circ}\text{C} \pm 2\text{ }^{\circ}\text{C}/73\text{ }^{\circ}\text{F} \pm 3.6\text{ }^{\circ}\text{F}$), normal relative humidity ($50\% \pm 20\%$), continuous playback at 3 seconds per image.



See *Battery Pack Handling Precautions* (p. 20).

SD Cards and Estimated Capacities

Still Images : With card included with the camera

| | | SDC-32MH | SDC-128M | SDC-512MSH |
|--------------------------------|--|----------|----------|------------|
| L (3072 x 2304 pixels) | | 9 | 40 | 156 |
| | | 15 | 64 | 251 |
| | | 31 | 134 | 520 |
| M1 (2592 x 1944 pixels) | | 11 | 49 | 190 |
| | | 20 | 87 | 339 |
| | | 40 | 173 | 671 |
| M2 (2048 x 1536 pixels) | | 17 | 76 | 295 |
| | | 32 | 136 | 529 |
| | | 63 | 269 | 1041 |
| M3 (1600 x 1200 pixels) | | 28 | 121 | 471 |
| | | 51 | 217 | 839 |
| | | 97 | 411 | 1590 |
| S (640 x 480 pixels) | | 109 | 460 | 1777 |
| | | 168 | 711 | 2747 |
| | | 265 | 1118 | 4317 |

Movie

| | | | SDC-32MH | SDC-128M | SDC-512MSH |
|-----------------|----------------------------|----|----------------|-----------------|-----------------|
| Standard | 1640 (640 x 480 pixels) | 30 | 14 sec. | 1 min. 4 sec. | 4 min. 9 sec. |
| | | 15 | 30 sec. | 2 min. 7 sec. | 8 min. 14 sec. |
| My Colors | 320 (320 x 240 pixels) | 30 | 42 sec. | 3 min. 1 sec. | 11 min. 42 sec. |
| | | 15 | 1 min. 24 sec. | 5 min. 55 sec. | 22 min. 53 sec. |
| Fast Frame Rate | 320 (320 x 240 pixels) | 60 | 21 sec. | 1 min. 32 sec. | 5 min. 59 sec. |
| Compact | 160 (160 x 120 pixels) | 15 | 3 min. 26 sec. | 14 min. 29 sec. | 55 min. 57 sec. |






























- Maximum movie clip length at  (Fast Frame Rate): 1 min., at  (Compact): 3 min. The figures indicate the maximum continuous recording time.
- **L** (Large), **M1** (Medium 1), **M2** (Medium 2), **M3** (Medium 3), **S** (Small), ,  and  indicate the recording resolution.
-  (Superfine),  (Fine) and  (Normal) indicate the compression setting.
- ,  and  indicate the number of frames per second.

Image Data Sizes (Estimated)

Still Images

| Resolution | Compression | | |
|--|---|---|---|
| |  |  |  |
| L (3072 x 2304 pixels) | 3045 KB | 1897 KB | 902 KB |
| M1 (2592 x 1944 pixels) | 2503 KB | 1395 KB | 695 KB |
| M2 (2048 x 1536 pixels) | 1602 KB | 893 KB | 445 KB |
| M2  (1600 x 1200 pixels) | 1002 KB | 558 KB | 278 KB |
| S (640 x 480 pixels) | 249 KB | 150 KB | 84 KB |

Movie

| | Resolution | Frame Rate | File size |
|---|--|---|--------------|
|  Standard |  (640 x 480 pixels) |  | 1980 KB/sec. |
| | |  | 990 KB/sec. |
|  My Colors |  (320 x 240 pixels) |  | 660 KB/sec. |
| | |  | 330 KB/sec. |
|  Fast Frame Rate |  (320 x 240 pixels) |  | 1320 KB/sec. |
|  Compact |  (160 x 120 pixels) |  | 120 KB/sec. |

SD Memory Card

| | |
|------------|--|
| Interface | Compatible with SD memory card standards |
| Dimensions | 32.0 x 24.0 x 2.1 mm (1.3 x 0.9 x 0.1 in.) |
| Weight | Approx. 2 g (0.07 oz.) |

Battery Pack NB-3L

| | |
|------------------------|--|
| Type | Rechargeable lithium-ion battery |
| Nominal Voltage | 3.7 V DC |
| Typical Capacity | 790 mAh |
| Cycle Life | Approx. 300 times |
| Operating Temperatures | 0 – 40 °C (32 – 104 °F) |
| Dimensions | 32.0 x 44.8 x 9.0 mm (1.3 x 1.8 x 0.4 in.) |
| Weight | Approx. 22 g (0.8 oz.) |

Battery Charger CB-2LU/CB-2LUE

| | |
|------------------------|---|
| Rated Input | 100 – 240 V AC (50/60 Hz) 0.085 A (100 V)-0.05 A (240 V) |
| Rated Output | 4.2 V DC, 0.7 A |
| Charging Time | Approx. 95 minutes |
| Operating Temperatures | 0 – 40 °C (32 – 104 °F) |
| Dimensions | 52.0 x 71.0 x 25.8 mm (2.0 x 2.8 x 1.0 in.) |
| Weight | Approx. 56 g (2.0 oz.) (CB-2LU) Approx. 58 g (2.0 oz.) (CB-2LUE) |


Compact Power Adapter CA-PS500

(Included with the separately sold AC Adapter Kit ACK900)

| | |
|------------------------|---|
| Rated Input | 100 – 240 V AC (50/ 60 Hz) 0.16 A (100 V)-0.11 A (240 V) |
| Rated Output | 4.3 V DC, 1.5 A |
| Operating Temperatures | 0 – 40 °C (32 – 104 °F) |
| Dimensions | 42.6 x 104.4 x 31.4 mm (1.7 x 4.1 x 1.2 in.) |
| Weight | Approx. 180 g (6.3 oz.) |

Photo Tips and Information

Tip for Using the Self-timer (p.78)

Normally the camera shakes a little when you press the shutter button. Setting the self-timer to  delays the shutter release for 2 seconds and allows the camera to stop shaking, thus preventing a blurred image. Even better results can be obtained by placing the camera on a stable surface or by using a tripod to shoot.

How to Adjust the Exposure (p.95)

This camera automatically adjusts the exposure to shoot images with the optimal brightness. However, recorded images may sometimes be brighter or darker than the actual image depending on the shooting conditions. If this happens, adjust the exposure compensation manually.



Underexposure

The whole recorded image is dark, which makes white elements of the image appear gray. Shooting bright subjects or in backlit conditions may cause the image to be underexposed. Adjust the exposure compensation towards the + end.



Optimal Exposure



Overexposure

The whole recorded image is bright, which makes black elements of the image appear gray. Shooting dark subjects or in dark places may cause the image to be overexposed. Adjust the exposure compensation towards the - end.

ISO Speed (p.109)

The ISO speed is the numeric representation of the camera's sensitivity to light. The higher the ISO speed, the higher the sensitivity. A high ISO speed allows you to shoot images in dark indoor or outdoor conditions without a flash and also helps prevent blurred images due to camera shake. This is convenient when shooting images in places where flash photography is prohibited. The ISO speed setting makes full use of the available light, resulting in images that convey the feel of the place they were shot.



ISO 50 equivalent



ISO 400 equivalent

Advanced Technique for the Macro mode (p.70)

Macro mode can make unique images when used with the zoom function. For example, shooting a flower at maximum wide angle in Macro mode allows the camera to bring both the flower and the background into focus. However, shooting at maximum telephoto can throw the background out of focus to make the flower stand out.



Macro with the wide angle zoom



Macro with the telephoto zoom

A

| | |
|-----------------------------|-----|
| AC Adapter Kit ACK900 | 169 |
| AE Lock | 92 |
| AF Frame | 45 |
| AF Lock | 91 |
| AF-assist Beam..... | 46 |
| AiAF | 43 |
| Auto Play (Slide Show)..... | 126 |
| Auto Rotate Function..... | 110 |
| Autofocus | 43 |
| AV Cable AVC-DC300 | 155 |

B

Battery

| | |
|-----------------|-----|
| Capacity | 177 |
| Charging | 19 |
| Handling | 20 |
| Installing..... | 22 |

C

| | |
|--|-----|
| Clock Display..... | 31 |
| Compression | 62 |
| Computer System Requirements | 146 |
| Connecting the Camera to a Computer | 145 |
| Continuous Shooting..... | 75 |
| Custom White Balance | 99 |

D

| | |
|------------------------------|-----|
| Date/Time | 29 |
| DIGITAL Terminal..... | 147 |
| Digital Zoom..... | 74 |
| Direct Interface Cable | 18 |
| Direct Transfer | 152 |
| DPOF Print Order..... | 136 |
| Print Style | 140 |
| Selecting Images | 136 |
| DPOF Transfer Order | 142 |

E

| | |
|--------------------|-----|
| Erasing | 131 |
| All Images..... | 132 |
| Single Images..... | 131 |
| Exposure | 95 |

F

| | |
|------------------|-----|
| FE Lock | 93 |
| File Number..... | 111 |
| Flash..... | 64 |
| Focus Lock..... | 90 |
| FUNC. Menu | 48 |

H

| | |
|-----------------|-----|
| HF-DC1..... | 170 |
| Histogram | 42 |

I

| | |
|-----------------------|--------|
| Image Data Sizes..... | 179 |
| Index Playback | 115 |
| Indicator | 17, 34 |
| Infinity | 70 |
| Interface Cable | 148 |
| ISO Speed | 109 |

J

| | |
|--------------------------|-----|
| JUMP (JUMP Search) | 117 |
|--------------------------|-----|

L

| | |
|-----------------------------|----|
| Language | 32 |
| LCD Monitor..... | 36 |
| Information Displayed | 39 |
| Night Display | 38 |
| Quick-bright LCD..... | 38 |
| Using the LCD Monitor | 36 |

M

| | |
|---|-----|
| Macro..... | 70 |
| Magnifying | 114 |
| Menu | |
| Menu Settings and Factory Defaults | 52 |
| My Camera Menu | 57 |
| Play Menu..... | 53 |

| | |
|-----------------------------|-----|
| Rec. Menu..... | 52 |
| Set up Menu..... | 54 |
| Messages..... | 162 |
| Metering Modes..... | 94 |
| Mode Dial | 16 |
| Movie | |
| Editing..... | 121 |
| Playback..... | 118 |
| Shooting | 81 |
| Mute Mode | 54 |
| My Camera Menu | |
| Changing..... | 157 |
| Registering..... | 159 |
| My Camera Settings..... | 157 |
| Recordable Data Types | 161 |
| My Colors | 102 |

P

| | |
|---------------------------------|-----|
| Photo Effect | 101 |
| Play Menu..... | 53 |
| Playback Mode | 16 |
| Postcard Date Imprint Mode..... | 76 |
| Power Button | 34 |
| Power-saving..... | 35 |
| Print/Share Button | 15 |
| Protect..... | 130 |

R

| | |
|---------------------------------|-----|
| Rec. Menu | 52 |
| Red-Eye Reduction Function..... | 65 |
| Resolution | 62 |
| Review Duration | 61 |
| Rotate | 123 |

S

| | |
|-------------------|-----|
| SD Card | 24 |
| Capacities..... | 178 |
| Formatting..... | 26 |
| Handling..... | 28 |
| Installing | 24 |
| Self-Timer | 78 |
| Set up Menu | 54 |

| | |
|--------------------------------|--------|
| Shooting Mode | |
| Auto | 59 |
| Digital Macro..... | 72 |
| Functions Available in Each | |
| Shooting Mode | 192 |
| Manual | 69 |
| Movie | 81 |
| Special Scene Mode..... | 66 |
| Beach | 66 |
| Fireworks..... | 66 |
| Foliage..... | 66 |
| Indoor | 66 |
| Kids&Pets | 66 |
| Night Snapshot..... | 66 |
| Portrait | 66 |
| Snow | 66 |
| Underwater..... | 66 |
| Stitch Assist..... | 86 |
| Shutter Button | 45 |
| Pressing Fully | 46 |
| Pressing Halfway | 45 |
| Shutter Speed..... | 96 |
| Single Image Playback..... | 113 |
| Slide Show | |
| Play Time | 129 |
| Repeat Settings..... | 129 |
| Smooth Continuous Shooting.... | 75 |
| Sound Memo | 124 |
| Spot AE Point Frame..... | 40, 94 |

T

| | |
|----------------|----|
| Telephoto..... | 44 |
|----------------|----|

U

| | |
|---------------|-----|
| USB port..... | 147 |
|---------------|-----|

V

| | |
|--------------------------|-----|
| Video Output System..... | 156 |
|--------------------------|-----|

W

| | |
|---------------------|----|
| White Balance | 98 |
| Wide Angle | 44 |
| Wrist Strap | 13 |

MEMO

MEMO

MEMO

MEMO

MEMO

Disclaimer


- While every effort has been made to ensure that the information contained in this guide is accurate and complete, no liability can be accepted for any errors or omissions.
- Canon reserves the right to change the specifications of the hardware and software described herein at anytime without prior notice.
- No part of this guide may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language in any form, by any means, without the prior written permission of Canon.
- Canon makes no warranties for damages resulting from corrupted or lost data due to a mistaken operation or malfunction of the camera, the software, SD memory cards (SD cards), personal computers, peripheral devices, or use of non-Canon SD cards.

Trademark Acknowledgments

- Canon, PowerShot, PIXMA and SELPHY are trademarks of Canon Inc.
- Macintosh, Mac OS and QuickTime are trademarks of Apple Computer Inc., registered in the United States and/or other countries.
- Microsoft® and Windows® are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.
- SD is a trademark.
- Other names and products not mentioned above may be registered trademarks or trademarks of their respective companies.

FCC Notice

(Digital Camera, Model PC1114)



This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions;

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for Class B digital devices, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The cable with the ferrite core provided with the digital camera must be used with this equipment in order to comply with Class B limits in Subpart B of Part 15 of the FCC rules.

Do not make any changes or modifications to the equipment unless otherwise specified in the manual. If such changes or modifications should be made, you could be required to stop operation of the equipment.

Canon U.S.A. Inc.

One Canon Plaza, Lake Success, NY 11042, U.S.A.

Tel No. (516) 328-5600

Canadian Radio Interference Regulations

This Class B digital apparatus complies with Canadian ICES-003.

Réglementation canadienne sur les interférences radio

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Functions Available in Each Shooting Mode

The chart below is a reference for the settings available for various shooting conditions. The settings selected in each shooting mode are saved after you finish shooting.

| Function | Function Icon | Camera | | CAM | | | SCN | | | Speaker Icon | Page |
|------------------------|-----------------------------|-------------|-------------|-------------|-------------|-------------|------------------|------------|------------------|------------------|-------|
| | | Camera Icon | Camera Icon | Camera Icon | Camera Icon | Camera Icon | SCN Icon 1 | SCN Icon 2 | SCN Icon 3 | | |
| | | Camera Icon | Camera Icon | Camera Icon | Camera Icon | Camera Icon | SCN Icon 4 | SCN Icon 5 | SCN Icon 6 | | |
| Resolution | Large | L | ○* | ○* | ○* | ○* | △* | ○* | ○ | - | p. 62 |
| | Medium 1 | M1 | ○ | ○ | ○ | ○ | △ | ○ | ○ | - | |
| | Medium 2 | M2 | ○ | ○ | ○ | ○ | △ | ○ | ○ | - | |
| | Medium 3 | M3 | ○ | ○ | ○ | ○ | △ | ○ | ○ | - | |
| | Small | S | ○ | ○ | ○ | ○ | △ | ○ | ○ | - | |
| | Postcard | PC | ○ | ○ | - | ○ | - | ○ | ○ | - | |
| | Movie | MV | - | - | - | - | - | - | - | ○ ⁽¹⁾ | |
| Compression | Superfine | SF | ○ | ○ | ○ | ○ | △ | ○ | ○ | - | p. 62 |
| | Fine | F | ○* | ○* | ○* | ○* | △* | ○ | ○ | - | |
| | Normal | N | ○ | ○ | ○ | ○ | △ | ○ | ○ | - | |
| Frame Rate | | - | - | - | - | - | - | - | ○ ⁽²⁾ | p. 85 | |
| Flash (3) | Auto | ⚡A | ○ | ○ | - | ○ | - | ○ | ○ | - | p. 64 |
| | Auto with Red-Eye Reduction | ⦿ | ○* | ○* | - | ○* | - | ○ | ○ | - | |
| | On with Red-Eye Reduction | ⚡⦿ | - | - | - | - | - | ○ | ○ | - | |
| | On | ⚡ | - | ○ | - | ○ | △ | ○ | ○ | - | |
| | Off | ⦿ | ○ | ○ | ○* | ○ | △* | ○ | ○ | - | |
| | Slow Synchro | ⚡* | - | ○ | - | ○ | △ | - | ○ | - | |
| Macro Mode | 📷 | ○ | ○ | - | ○ | △ | ○ ⁽⁴⁾ | ○ | ○ | p. 70 | |
| Infinity Mode | 📷 | - | ○ | - | ○ | △ | ○ ⁽⁴⁾ | ○ | ○ | | |
| AF Lock | AFL | - | ○ | ○ | ○ | - | - | ○ | ○ | p. 90 | |
| AE Lock | AEL | - | ○ | ○ | ○ | - | - | ○ | ○ | p. 92 | |
| FE Lock | FEL | - | ○ | - | ○ | - | - | ○ | ○ | p. 93 | |
| Shooting Method | Single | 📷 | ○* | ○* | ○* | ○* | △* | ○* | ○* | - | |
| | Continuous shooting | 📷 | - | ○ | ○ | - | - | ○ | ○ | p. 75 | |
| | 10-sec. self-timer | 🕒 | ○ | ○ | ○ | ○ | △ | ○ | ○ | p. 78 | |
| | 2-sec. self-timer | 🕒 | ○ | ○ | ○ | ○ | △ | ○ | ○ | | |
| | Custom Timer | 🕒 | ○ | ○ | ○ | - | - | ○ | ○ | | |
| Date Stamp | | ○ | ○ | - | ○ | - | ○ | ○ | - | p. 77 | |
| Autofocus Modes | | - | ○ | ○ | ○ | - | ○ ⁽⁵⁾ | ○ | - | p. 89 | |
| AF-assist Beam | | ○ | ○ | ○ | ○ | △ | ○ | ○ | ○ | p. 46 | |

| Function | | | | | | SCN | | | | Page |
|-------------------------------------|-------------------------|---|----|------------------|------------------|------------------|---|-------------------|------------------|--------|
| | | | | | | | | | | |
| Digital Zoom | ○ | ○ | - | - | - | ○ | | | ○ ⁽⁶⁾ | p. 74 |
| Metering Method | Evaluative | - | ○* | ○* | ○* | - | - | - | - | p. 94 |
| | Center-Weighted Average | - | ○ | ○ | ○ | - | - | - | - | |
| | Spot | - | ○ | ○ | ○ | - | - | - | - | |
| Exposure Compensation | - | ○ | ○ | ○ ⁽⁷⁾ | △ | ○ | | ○ ⁽⁷⁾ | | p. 95 |
| Long Shutter | - | ○ | - | - | - | - | | - | | p. 95 |
| White Balance ⁽⁸⁾ | - | ○ | ○ | ○ | △ | - ⁽⁹⁾ | | ○ | | p. 98 |
| Photo Effect | - | ○ | ○ | - | △ | - ⁽⁹⁾ | | ○ ⁽¹⁰⁾ | | p. 101 |
| ISO Speed | - ⁽⁹⁾ | ○ | ○ | - ⁽⁹⁾ | - ⁽⁹⁾ | - ⁽⁹⁾ | | - ⁽⁹⁾ | | p. 109 |
| Auto Rotate | ○ | ○ | ○ | ○ | △ | △ | | - | | p. 110 |

* Default setting ○Setting available △Setting can only be selected for the first image.

(Shaded Area): Setting is memorized even when the camera power is shut off.

With the exception of the [Date/Time], [Language] and [Video System] settings, all the other menu settings and changes made with the camera buttons can be reset to the default values in a single operation (p. 58).

(1)(2) The resolutions and frame rates for the (Movie) mode are as follows.

| Resolution | 640 x 480 pixels | ○* | - | - | - |
|-------------------|------------------|----|---|---|---|
| | 320 x 240 pixels | ○ | ○ | - | - |
| | 160 x 120 pixels | - | - | ○ | - |
| Frame Rate | 60 frames/sec. | - | ○ | - | - |
| | 30 frames/sec. | ○* | - | - | - |
| | 15 frames/sec. | ○ | - | ○ | - |

(3) The default flash setting is Auto with Red-Eye Reduction in the modes, Auto in the modes, and Off in the modes.

- The flash cannot be set in mode.

- When the flash fires in mode, the camera will automatically use Slow Synchro mode.

(4) You cannot switch between the Macro/Infinity modes when the camera is in the modes.

(5) AF cannot be selected in the modes.

(6) Can be set during shooting (only in Standard mode).

(7) Exposure compensation not available in or modes.

(8) This cannot be set when the Photo Effect is set to Sepia or B/W.

(9) Automatically set by the camera.

(10) The Photo Effect cannot be set in the mode.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>