

# SOFTWARE INSTALLATION AND USB CONNECTION GUIDE

LYT1085-001A  
COPYRIGHT © 2003 VICTOR COMPANY OF JAPAN, LTD.

M3D7/D3/D1



Printed in Japan  
0103-FO-ID-VP

## JVC SOFTWARE LICENSE AGREEMENT

### IMPORTANT

#### TO CUSTOMERS:

**PLEASE MAKE SURE TO READ THIS CAREFULLY BEFORE INSTALLING OR USING THE SOFTWARE PROGRAM NAMED "DIGITAL PHOTO NAVIGATOR" ("Program") ON YOUR PC.**

The right to use the Program is granted by Victor Company of Japan, Limited ("JVC") to You only on the condition that You agree to the following.

Should You not agree to the terms hereof, You may not install or use the Program. HOWEVER, INSTALLING OR USING THE PROGRAM INDICATES YOUR ACCEPTANCE OF THESE TERMS AND CONDITIONS.

### 1 COPYRIGHT; OWNERSHIP

You acknowledge that all copyrights and other intellectual property rights in the Program are owned by JVC and its licensor, and remain vested in JVC and such licensor. The Program is protected under the copyright law of Japan and other countries, and related Conventions.

### 2 GRANT OF LICENSE

- (1) Subject to the conditions of this Agreement, JVC grants to You a non-exclusive right to use the Program. You may install and use the Program on a HDD or other storage devices incorporated in Your PC.
- (2) You may make one (1) copy of the Program solely for your personal backup or archival purposes.

### 3 RESTRICTION ON THE PROGRAM

- (1) You may not reverse engineer, decompile, disassemble, revise or modify the Program, except to the extent that expressly permitted by applicable law.
- (2) You may not copy or use the Program, in whole or in part, other than as expressly specified in this Agreement.
- (3) You have no right to grant a license to use the Program, and may not distribute, rent, lease or transfer the Program to any third party or otherwise let them use the Program.

### 4 LIMITED WARRANTY

JVC warrants that any media in which the Program is embodied are free from any defects in materials and workmanship for a period of thirty (30) days from the date of Your purchasing any our products accompanying the Program. JVC's entire liability and your exclusive remedy in connection with the Program shall be replacement of such defective media. EXCEPT FOR THE EXPRESS WARRANTIES STATED HEREIN AND TO THE EXTENT PERMITTED BY APPLICABLE LAW, JVC AND ITS LICENSORS DISCLAIM ANY OTHER WARRANTIES, EITHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE IN REGARD TO THE PROGRAM AND THE ACCOMPANYING PRINTED MATERIALS. SHOULD THERE BE ANY PROBLEM ARISING FROM OR CAUSED BY THE PROGRAM, YOU SHOULD SETTLE ALL SUCH PROBLEM AT YOUR OWN COST AND EXPENSE.

## 5 LIMITED LIABILITY

TO THE EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT SHALL JVC AND ITS LICENSORS BE LIABLE FOR ANY INDIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES WHATSOEVER, REGARDLESS OF THE FORM OF ACTION WHETHER IN CONTRACT, TORT OR OTHERWISE ARISING OUT OF OR IN CONNECTION WITH THE USE OF OR INABILITY TO USE THE PROGRAM, EVEN IF JVC HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. YOU WILL INDEMNIFY AND HOLD HARMLESS JVC FROM ANY LOSS, LIABILITY OR COST ARISING OUT OF OR IN ANY WAY CONNECTED TO CLAIMS FROM ANY THIRD PARTY RELATING TO THE USE OF THE PROGRAM.

## 6 TERM

This Agreement will become effective on the date when You install and use the Program on Your machine, and continue to be in effect until the termination under the following provision.

Should You breach any provision of this Agreement, JVC may terminate this Agreement without giving any notice to You. In this event, JVC may claim against You for any damages caused by Your breach. Should this Agreement be terminated, You must immediately destroy the Program stored in Your machine (including the erasing from any memory in Your PC), and no longer own such Program.

## 7 EXPORT CONTROL

You agree that You will not ship, transfer or export the Program or underlying information and technology to any countries to which Japan and other relevant countries have initiated an embargo on such goods.

## 8 U.S. GOVERNMENT USER

If You are an agency of the United States of America (the "Government"), You acknowledge JVC's representation that the Program is a "Commercial Item" as defined in Federal Acquisition Regulation (FAR) part 2.101 (g) consisting unpublished "Commercial Computer Software" as those items are used at FAR part 12.212 and is only licensed to You with the same use rights JVC grants all commercial end users pursuant to the terms of this Agreement.

## 9 GENERAL

- (1) No modification, change, addition, deletion or other alternation of or to this Agreement will be valid unless reduced to writing and signed by an authorized representative of JVC.
- (2) If any part of this Agreement is held invalid by or in conflict with any law having jurisdiction over this Agreement, the remaining provisions will remain in full force and effect.
- (3) This Agreement shall be governed by and interpreted under the laws of Japan. The Tokyo District Court has jurisdiction over all disputes which may arise with respect to the execution, interpretation and performance of this Agreement.

Victor Company of Japan, Limited

### Note:

*If You acquired the Program in Germany, the provisions of Sections 4 (Limited Warranty) and 5 (Limited Liability) provided above will be replaced with those of the German version of this Agreement.*

### CAUTION:

- Operate this equipment according to the operating procedures described in this manual.
- Use only the provided CD-ROM. Never use any other CD-ROM to run this software.
- Do not attempt to modify this software.
- Changes or modifications not approved by JVC could void user's authority to operate the equipment.

### How to handle a CD-ROM

- Take care not to soil or scratch the mirror surface (opposite to the printed surface). Do not write anything or put a sticker on either the front or back surface. If the CD-ROM gets dirty, gently wipe it with a soft cloth outward from the center hole using a circular motion.
- Do not use conventional disc cleaners or cleaning spray.
- Do not bend the CD-ROM or touch its mirror surface.
- Do not store your CD-ROM in a dusty, hot or humid environment. Keep it away from direct sunlight.

- You can find the latest information (in English) on the provided software program at our world wide web server at <http://www.jvc-victor.co.jp/english/index-e.html>

## Notice for Users

Use of this software is authorized according to the terms of the software license.

When contacting the nearest JVC office or agency in your country about this software (refer to the JVC Worldwide Service Network at <http://www.jvc-victor.co.jp/english/worldmap/index-e.html>), please fill out the following and have the appropriate information ready.

Product Name		
Model		
Problem		
Error Message		
PC	Manufacturer	
	Model	<input type="checkbox"/> Desktop <input type="checkbox"/> Laptop
	CPU	
	OS	
	Memory	MB
	Available Hard Disk Space	MB

Please note that it may take some time to respond to your questions, depending on their subject matter. **JVC cannot answer questions regarding basic operation of your PC, or questions regarding specifications or performance of the OS, other applications or drivers.**

## Operating Environment

The following requirements must be satisfied to connect a camcorder to a PC and to use Digital Photo Navigator.

### Windows®

- OS** : Windows® 98 (pre-installed),  
Windows® 98 Second Edition (98SE) (pre-installed),  
Windows® Millennium Edition (Me) (pre-installed),  
Windows® 2000 Professional (2000) (pre-installed),  
Windows® XP Home Edition (XP) (pre-installed),  
or Windows® XP Professional (XP) (pre-installed)
- CPU** : Intel MMX® Pentium®, at least 200 MHz
- RAM** : At least 64 MB recommended
- Free hard disk space** : At least 10 MB for installation, at least 500 MB recommended
- Connector** : USB connector
- Display** : Must be capable of displaying 800 x 600 dots with 16-bit color
- Miscellaneous** : Internet Explorer 5.5 or later

## ■ For ImageMixer with VCD

In addition to the requirements on the previous page, the following requirements must be satisfied to use ImageMixer with VCD.

<b>OS</b>	: The same as requirements on the previous page. However, Windows® 98 cannot be used when you connect a camcorder to the PC with a USB cable. Windows® 98, Windows® 98SE cannot be used when you connect a camcorder to the PC with a IEEE1394 (DV) cable.
<b>CPU</b>	: For capturing video via a USB cable or IEEE1394 (DV) cable, Intel Pentium® III, at least 500 MHz, at least 800 MHz recommended
<b>Free hard disk space</b>	: At least 300 MB for installation, at least 1 GB recommended
<b>Connector</b>	: IEEE1394 (i.LINK) connector
<b>Miscellaneous</b>	: DirectX 8.0a or later

## Macintosh

<b>Hardware</b>	: iMac, iBook, eMac, Power Mac G4, PowerBook G3 or G4 equipped with a USB connector
<b>OS</b>	: Mac OS 9.0.4 to 9.2.2 Exclude Mac OS X and Mac OS X [Classic]
<b>RAM</b>	: At least 64 MB recommended

## ■ For ImageMixer with VCD

In addition to the requirements above, the following requirements must be satisfied to use ImageMixer with VCD.

<b>CPU</b>	: At least PowerPC G3/400 MHz or PowerPC G4/400 MHz
<b>RAM</b>	: At least 128 MB recommended
<b>Free hard disk space</b>	: At least 150 MB for installation, at least 1 GB recommended
<b>Display</b>	: Must be capable of displaying 800 x 600 dots with 32,000 color
<b>Miscellaneous</b>	: QuickTime 4 or later

- The system requirements information above is not a guarantee that the provided software will work on all personal computers meeting those requirements.
- If your PC does not meet the system requirements above, you can use the optional USB reader/writer CU-VUSD70, the PC card adapter CU-VPD60 or the floppy disk adapter CU-VFSD50 to load the files in the memory card to the hard disk on your PC.  
(Refer to "JVC Accessories" on our world web site at: <http://www.jvc-victor.co.jp/english/accessory/>)
- Microsoft® and Windows® are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.
- Macintosh is a registered trademark of Apple Computer, Inc.
- Other product and company names included in this instruction manual are trademarks and/or registered trademarks of their respective holders.

## Software Installation (Windows®)

Follow the procedure described below to install the software. From the [Setup] screen in step 3, you can install the following drivers or software. Quit any other software you are using. (Check that there are no other application icons on the status bar.)

### USB Mass Storage Class driver

This driver allows your PC to read and write memory cards in the camcorder.

#### Windows® Me/2000/XP:

Since there is no need to install this driver, the item is not displayed. Simply connect the camcorder to the PC with a USB cable, and you can read and write memory cards in the camcorder.

#### Windows® 98/98SE:

Be sure NOT to connect the USB cable between the camcorder and the PC before installing the driver.

### USB Video Streaming driver

This driver allows you to record camcorder's audio and video output on your PC's hard disk instead of camcorder's video tape. You can also use the camcorder to conduct a video conference over the Internet.

#### NOTES:

- **Windows® 98/98SE/Me/2000:** Be sure not to connect the USB cable between the camcorder and the PC before installing the driver.
- **Windows® XP:** The installation procedure differs from that of other operating systems and the item is not displayed. For details, see "Installing USB Video Streaming driver for Windows® XP users" (→ pg. 8).

### ImageMixer with VCD 1.1

This application is used to capture still images and video clips from a camcorder through a USB connector or IEEE1394 (i.LINK) connector, and is also used to manage and edit the still images and video clips, and to create Video CDs.

### Digital Photo Navigator 1.0

This application is used to capture still images and convert them into a variety of formats.

### G.726 decoder

This is an audio decoder for video clips created by the camcorder (extension ".asf").

#### NOTE:

Install G.726 decoder only when the camcorder is equipped with E-Mail Clip Recording function.

### Adobe® Acrobat® Reader 5.0

This application is used to read PDF files.


- 1 Load the provided CD-ROM in the PC.  
After a moment, the [Important Notice] screen appears.
  - If the [Important Notice] screen does not appear, double-click [My Computer] and then double-click the CD-ROM icon.
- 2 Confirm the contents and then click [Next].  
After a moment, the [Setup] screen appears.  
From the [Setup] screen, you can install the desired driver or software.

**3** Click [Install] on the right side of the desired software and follow the on screen instructions to complete the installation.

The installation of the selected driver or software starts. The procedure differs depending on the driver or the software.


### The following is the example of Digital Photo Navigator on Windows® 98SE.

[License Agreement] screen appears.

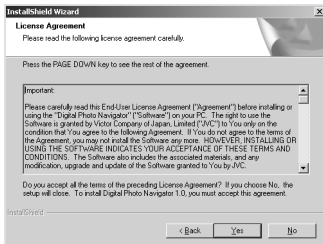


Click [Yes].

Then, [Choose Destination Location] screen appears.

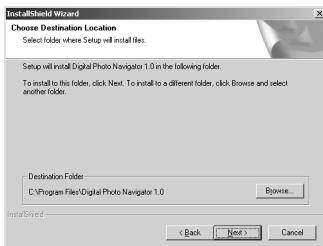

Click [Next].


Next, [Select Program Folder] screen appears.

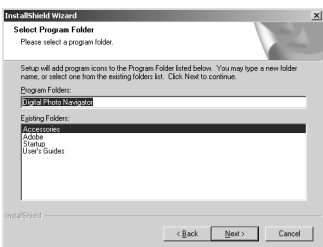

Click [Next].


### The following is the example of USB Mass Storage Class driver on Windows® 98SE.

[Installation Folder] screen appears.

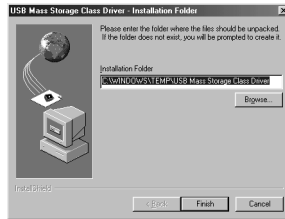


Click [Finish].

Then, [InstallShield Wizard] screen appears.

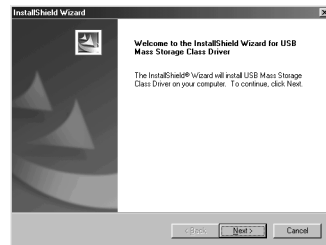


Click [Next].

When the installation is finished, [InstallShield Wizard Complete] screen appears.

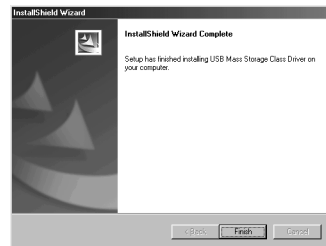

Click [Finish] and then [Setup] screen appears.

[Setup Status] screen appears. Wait for a moment until the installation is finished.

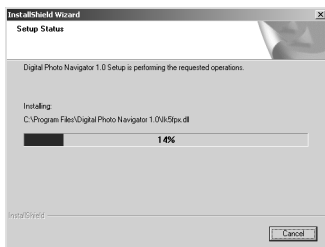

When the installation is finished, [Digital Photo Navigator Setup] screen appears and asks you if you want to create the icon on the desktop.




If you need it, click [Yes]. If not, click [No].

- 4 When the message asking whether it is OK to restart the PC appears, click [Yes]. The PC restarts, and after a moment the [Setup] screen from step 1 appears.
- 5 Repeat steps 3 and 4 to install all of the desired software.

#### Installing [ImageMixer with VCD 1.1]

When the error message below appears while installing ImageMixer, click [OK] to complete installation.

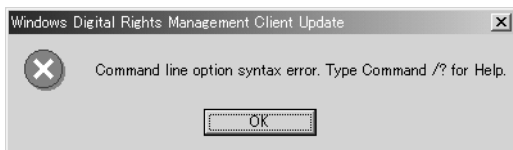

#### NOTES:

- The Digital Photo Navigator and ImageMixer with VCD instruction manual is included on the CD-ROM in PDF format. Double-click the [JVC] folder and then double-click the [Docs] folder. Open the "Start.pdf" file and click the button of the desired language. Note that Adobe® Acrobat® Reader must be installed to read PDF files.
- For details on how to use **Windows® NetMeeting®** or **Windows® Messenger** (Windows® XP only), refer to "Appendix" in the Digital Photo Navigator instruction manual on the CD-ROM.
- When installing the [ImageMixer with VCD 1.1], select the desired language in the [Choose Setup Language] screen.
- If you perform installation of a software that is already installed, uninstallation will start. In this case, perform the installation again after uninstallation is finished.
- DirectX is necessary so that USB Video Streaming driver works properly. To install DirectX, select "DirectX" on the installation screen of ImageMixer with VCD 1.1.
- When you install USB Video Streaming driver with Windows® 2000 and Windows® XP, a warning message dialog box on digital signature may appear. In this case, click [OK] to continue installation because this problem has no effect on the use of the driver.
- When you install ImageMixer with VCD 1.1 with Windows® 2000 and Windows® XP, the [Microstaff WINASPI] screen appears. Click [Next] to continue installation.

## Installing USB Video Streaming driver for Windows® XP users

When you connect the camcorder to the PC, four drivers are installed in succession by following the procedures below.

### NOTES:

Click [Continue Anyway] when the message [Has not passed Windows Logo testing] appears. Be sure not to select [Stop Installation]. If you do so, the USB Video Streaming drivers will not be installed correctly.

- 1** Connect the camcorder to the PC with a USB cable.  
After a moment, the [Found New Hardware Wizard] screen appears.
  - Refer to “Connecting the USB cable” (☞ pg. 9).
- 2** Click [Install from a list or specific location (Advanced)] and then click [Next].  
The driver search screen appears.
- 3** Click the next three items in the order below.
  - [Search for the best driver in these location]
  - [Include this location in the search]
  - [Browse]
- 4** Double-click [My Computer] on the desktop.
- 5** Double-click the CD-ROM drive icon and the [XP] folder, and then click [OK].
- 6** Click [Next].
  - The warning message dialog box appears.
- 7** Click [Continue Anyway].  
After a moment, the [Found New Hardware Wizard] screen appears.
- 8** Click [Finish].  
After a moment, the [Found New Hardware Wizard] screen appears again.
- 9** Repeat steps **2** to **8** until the [Found New Hardware Wizard] screen is cleared.  
After you repeat steps **2** to **8** four times, the installation of the USB Video Streaming driver is complete.

## Updating [Device Manager] (Windows®)

If the camcorder is connected to the PC with the USB cable before installing [USB Mass Storage Class driver] or [USB Video Streaming driver], the installation might not be performed properly.

In this case, follow the procedure described below to update the [Device Manager] and install [USB Mass Storage Class driver] and [USB Video Streaming driver] properly.

### NOTE:

Disconnect any other USB audio devices from PC before performing the following procedure.

## Installing [USB Mass Storage Class driver] (Windows® 98/98SE only)

- 1** Use the USB cable to connect the camcorder to the PC. (☞ pg. 9)
- 2** Select [Start] – [Settings] – [Control Panel]. Double click the [System] icon.
- 3** Select the [Device Manager] tab.
- 4** Delete [GR-DVP9\*] in [Other devices].  
\* The model name depends on the connected camcorder.
- 5** Disconnect the USB cable from the camcorder. Restart the PC.



- 6** Load the provided CD-ROM in the PC. Install [USB Mass Storage Class driver]. (☞ pg. 5)
- 7** Use the USB cable to connect the camcorder to the PC.  
Device driver is installed.
- 8** Confirm the [Removable Disk] icon is displayed in [My Computer].


### Installing [USB Video Streaming driver]

- 1** Use the USB cable to connect the camcorder to the PC. (☞ pg. 9)
- 2** Select [Start] – [Settings] – [Control Panel]. Double click the [System] icon.
- 3** **Windows® 98/98SE/Me:** Select the [Device Manager] tab.  
**Windows® 2000/XP:** Select the [Hardware] tab and click [Device Manager].
- 4** Delete [GR-DVP9\*] in [Other devices].  
\* The model name depends on the connected camcorder.
- 5** Disconnect the USB cable from the camcorder. Restart the PC.
- 6** Load the provided CD-ROM in the PC. Install [USB Video Streaming driver]. (☞ pg. 5)
  - **Windows® XP:** Refer to “Installing USB Video Streaming driver for Windows® XP users” (☞ pg. 8) for installation.
- 7** Use the USB cable to connect the camcorder to the PC.  
Device driver is installed.
  - **Windows® 2000:** When a warning message dialog box on digital signature appears, click [OK] to continue installation.
- 8** Confirm the following devices are displayed in [Device Manager] by performing steps **2 – 3**.
  - [JVC PIX-MCV Video Capture] in [Imaging Devices]
  - [JVC PIX-MCV Audio Capture] in [Sound, video and game controllers]
  - [JVC Composite PIX-MCV Device] and [JVC Communication PIX-MCV Video Driver] in [Universal Serial Bus Controllers]

## Connections (Windows®)

### Connecting the USB cable

Connect the USB cable to copy still image and video clip files in a memory card to the PC or to use ImageMixer in capturing video.

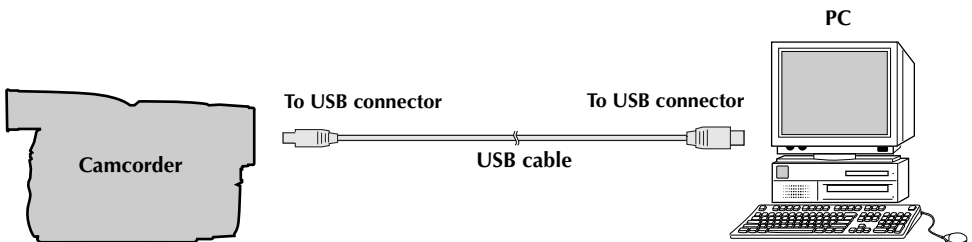

- 1** To assure safety, make sure all units are turned off before making any connections.
- 2** Use the USB cable to connect the camcorder to the PC.
  - We recommend that you use the AC Adapter.

## NOTES:

- When the USB cable is connected, turning on or off the camcorder or switching the VIDEO/MEMORY (DSC) mode on the camcorder causes malfunctions of the PC.
- If you connect the camcorder to the PC through a USB hub, compatibility issues between the hub and the PC may result in instability in the operation of the PC. If this happens, connect the camcorder directly to the PC, not through the hub.
- Do not use an extension USB cable.
- You can also use a DV cable instead of a USB cable to capture video from a tape when using ImageMixer. For more details, refer to the online help. (☞ "For more detailed information" in the ImageMixer instruction manual on the CD-ROM)

## Viewing the Contents of a Memory Card (Windows®)

- 1 Install [USB Mass Storage Class driver]. (☞ pg. 5)
  - **Windows® Me/2000/XP:** There is no need to install this driver. Simply connect the camcorder to the PC with a USB cable, and you can read and write memory cards in the camcorder.
- 2 Connect the camcorder to the PC with a USB cable. (☞ pg. 9)
- 3 Make sure that there is a memory card in the camcorder.
- 4 Set the camcorder to the memory card playback mode.
  - Refer to the camcorder's instruction manual for details. [USB MODE] appears on the camcorder's LCD monitor.
- 5 Double-click the [My Computer] icon on the desktop. The [Removable Disk] icon which represents the memory card in the camcorder appears in the [My Computer] window.




### NOTE:

#### **Windows® 98/98SE:**

[Removable Disk] icon does not appear if USB Mass Storage Class driver is not installed properly. In this case, refer to "Updating [Device Manager] (Windows®)" (☞ pg. 8).

- 6 Double-click the [Removable Disk] icon. The following folders are automatically created in the memory card. Different file types are stored in different folders.

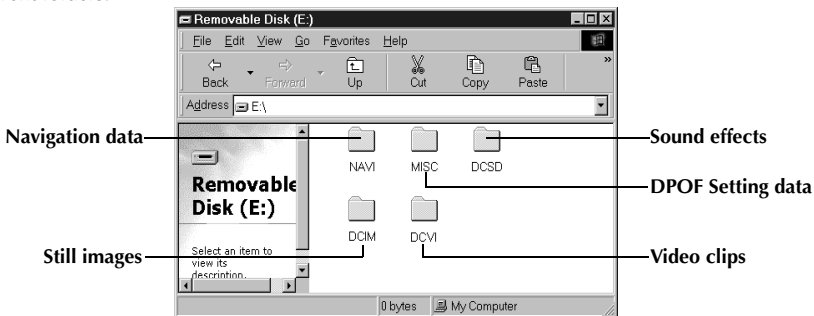

**Still images**  
(extension ".jpg") : Folders within the [DCIM] folder

**Video clips**  
(extension ".asf") : Folders within the [DCVI] folder

- The [DCVI] folder is displayed only when the camcorder is equipped with E-Mail Clip Recording function.

CONTINUED ON NEXT PAGE

- Sound effects (extension “.mp3”)** : [100]VCGR folder within the [DCSD] folder
- The [DCSD] folder is displayed only when the camcorder is equipped with Digital Sound Effects function.
- DPOF setting data** : Folders within the [MISC] folder
- Navigation data** : Folders within the [NAVI] folder
- The [NAVI] folder is displayed only when the camcorder is equipped with NAVIGATION function.

**NOTES:**

- Saving the wrong kinds of files in a memory card or deleting files or folders from a memory card can cause problems with the operation of the camcorder. When it is necessary to delete a file from a memory card, delete it through the camcorder.
- Never disconnect the USB cable while the message [ACCESSING FILES] is displayed on the camcorder’s LCD monitor.
- If you are using a brand new memory card, you need to initialize the memory card with the camcorder first. You may not be able to copy files from the memory card to the PC without doing so.

**For owners of camcorders equipped with Digital Sound Effect function;**


The CD-ROM contains digital sound files (data saved on the provided memory card at the factory). When the memory card has been formatted, follow the step below to save the files on the memory card.

- Copy the “DCSD” folder on the CD-ROM into the root directory (volume) of the memory card.


## Copying Files to the PC (Windows®)

Still image and video clip files that are stored in a memory card can be copied to the PC and played back on the PC.

- 1 Double-click the [My Computer] icon on the desktop. If the camcorder is connected to the PC correctly, the [Removable Disk] icon appears.
- 2 Double-click the [Removable Disk] icon. The folders in the memory card appear.

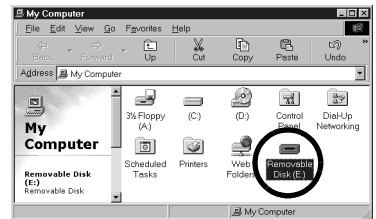

- 3 Double-click the destination folder.
- 4 Select the folder to be copied, and then drag and drop that folder in the destination folder.
  - To copy still images: Copy the folder within the [DCIM] folder.
  - To copy video clips: Copy the folder within the [DCVI] folder.
 The message [ACCESSING FILES] appears on the LCD monitor of the camcorder, and the folder is copied from the memory card to the PC.

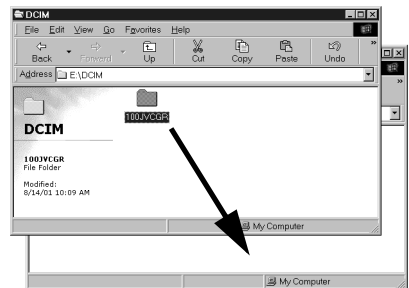

**NOTE:**

Never disconnect the USB cable while the message [ACCESSING FILES] is displayed on the camcorder’s LCD monitor.

# Playing Back Files on the PC (Windows®)

## Still images

Use an application that can handle the JPEG file format. To view a still image, double-click the still image file (extension “.jpg”).

## Video clips (Only for the camcorder equipped with E-Mail Clip Recording function)

Use the Windows Media™ Player (version 6.4 or later). You can download the Windows Media™ Player from the Microsoft web site at:

<http://www.microsoft.com/>

If you cannot play back a video clip file (extension “.asf”) that you have opened with the Windows Media™ Player, connect to the Internet and then try opening the file. The software that is needed in order to play back the file will be downloaded automatically, and then the file will be played back.


If the video clip plays but without the audio, install the G.726 decoder from the CD-ROM.

# Disconnecting the USB Cable (Windows®)

Before loading or unloading memory cards or turning off the PC, first disconnect the USB cable and turn off the camcorder.

## When using Windows® 98/98SE

- 1 Confirm that the message [ACCESSING FILES] is not currently displayed on the LCD monitor of the camcorder.
  - If the message [ACCESSING FILES] is currently displayed, wait until it disappears before proceeding.
- 2 Double-click the [My Computer] icon on the desktop.  
If the camcorder is connected to the PC correctly, the [Removable Disk] icon appears.
- 3 Right-click the [Removable Disk] icon in the [My Computer] window.  
A menu appears.
- 4 Click [Eject] in the menu.  
The [Removable Disk] icon disappears.
  - If the icon does not disappear, wait for a while, and then proceed to step 5.
- 5 Disconnect the USB cable.
  - If any message appears, click [OK].
- 6 Set the Power Switch on the camcorder to “OFF”.  
The camcorder turns off.

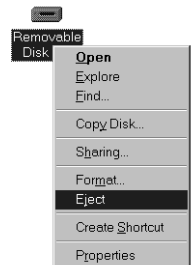


## When using Windows® 2000/Me/XP

- 1 Confirm that the message [ACCESSING FILES] is not currently displayed on the LCD monitor of the camcorder.
  - If the message [ACCESSING FILES] is currently displayed, wait until it disappears before proceeding.
- 2 Double-click the [Unplug or Eject Hardware] icon in the status bar.  
The [Unplug or Eject Hardware] or [Safely Remove Hardware] dialog box appears.




**3** Select [USB Mass Storage Device] or [USB Disk], and then click [Stop].

• **Windows® 2000/XP**

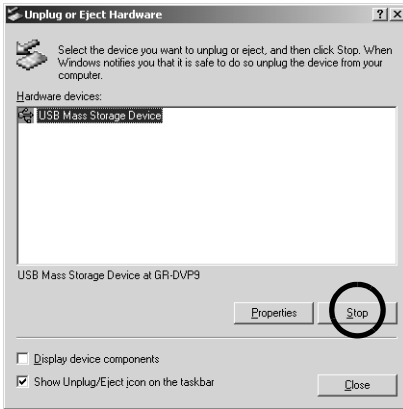


• **Windows® Me**

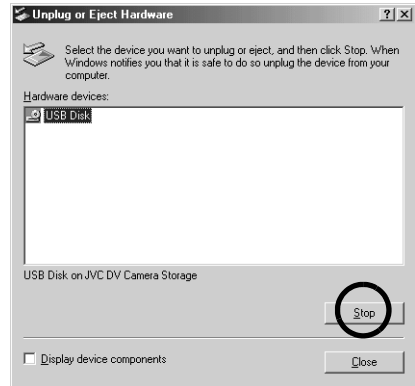


The [Stop a Hardware device] dialog box appears.

**4** Click [OK].

• **Windows® 2000/XP**

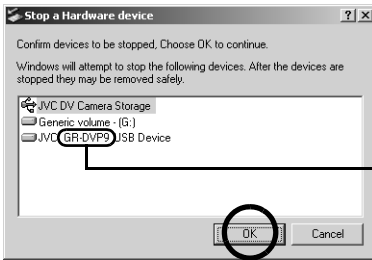

• **Windows® Me**

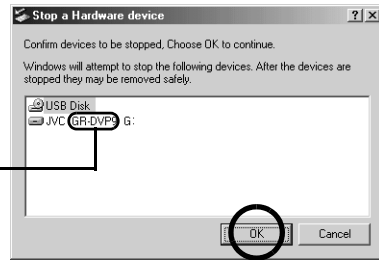

The model name depends on the connected camcorder.

• If a message indicating that the device can be safely removed appears, click [OK].


**5** Click [Close], and then disconnect the USB cable.

**6** Set the Power Switch on the camcorder to "OFF".

The camcorder turns off.

## Connections (Macintosh)

Connect the USB cable to copy still image and video clip files in a memory card to the PC or to use ImageMixer in capturing video.

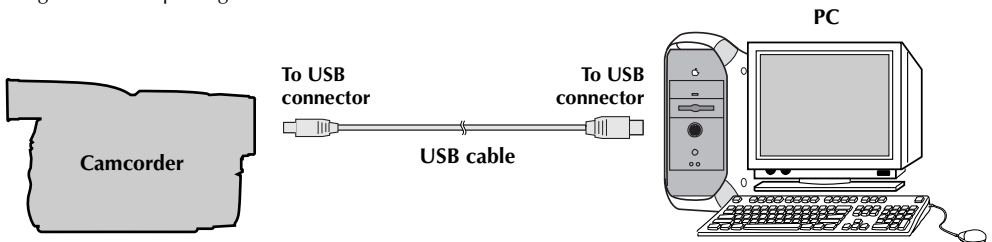

CONTINUED ON NEXT PAGE

- 1 To assure safety, make sure all units are turned off before making any connections.
- 2 Use the USB cable to connect the camcorder to the PC.
  - We recommend that you use the AC Adapter.

**NOTES:**

- When the USB cable is connected, turning on or off the camcorder or switching the VIDEO/MEMORY (DSC) mode on the camcorder causes malfunctions of the PC.
- If you connect the camcorder to the PC through a USB hub, compatibility issues between the hub and the PC may result in instability in the operation of the PC. If this happens, connect the camcorder directly to the PC, not through the hub.
- Do not use an extension USB cable.

## Software Installation (Macintosh)

Follow the procedure described below to install the software.  
Quit any other software you are using.

- 1 Load the provided CD-ROM into the PC. Double click the CD-ROM icon.
- 2 Double-click the [ImageMixer] folder in the CD-ROM.



- 3 Double-click the [Install ImageMixer with VCD] icon.  
The installer starts up. Follow the instructions which appear on the screen.



Install ImageMixer with VCD

**NOTE:**

The ImageMixer with VCD instruction manual is included on the CD-ROM in PDF format. Double-click the [Docs] folder. Open the "Start.pdf" file and click the button of the desired language. Note that Adobe® Acrobat® Reader must be installed to read PDF files. The Installer of Adobe® Acrobat® Reader is included within the [Reader] folder on the CD-ROM.

## Viewing the Contents of a Memory Card (Macintosh)


- 1 Connect the camcorder to the PC with a USB cable. (☞ pg. 13)
- 2 Make sure that there is a memory card in the camcorder.
- 3 Set the camcorder to the memory card playback mode.
  - Refer to the camcorder's instruction manual for details.
  - [USB MODE] appears on the camcorder's LCD monitor. The memory card icon appears on the desktop.
  - The name of the memory card icon is "untitled". We recommend that you name the icon to tell it from the other removable disks or folders.



#### 4 Double-click the memory card icon on the desktop.

The folders in the memory card appear.

The following folders are automatically created in the memory card. Different file types are stored in different folders.

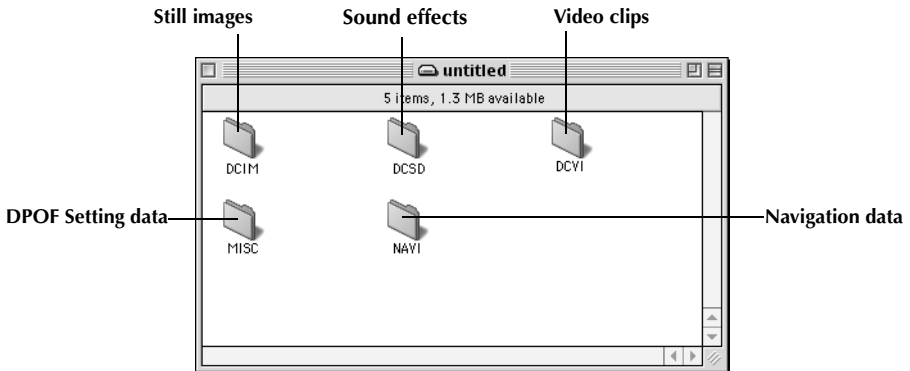

#### Still images (extension “.jpg”)

: Folders within the [DCIM] folder

#### Video clips (extension “.asf”)

: Folders within the [DCVI] folder

- The [DCVI] folder is displayed only when the camcorder is equipped with E-Mail Clip Recording function.

#### Sound effects (extension “.mp3”)

: [100]VCGR] folder within the [DCSD] folder

- The [DCSD] folder is displayed only when the camcorder is equipped with Digital Sound Effects function.

#### DPOF setting data

: Folders within the [MISC] folder

#### Navigation data

: Folders within the [NAVI] folder

- The [NAVI] folder is displayed only when the camcorder is equipped with NAVIGATION function.

#### NOTES:

- Saving the wrong kinds of files in a memory card or deleting files or folders from a memory card can cause problems with the operation of the camcorder. When it is necessary to delete a file from a memory card, delete it through the camcorder.
- Never disconnect the USB cable while the message [ACCESSING FILES] is displayed on the camcorder's LCD monitor.
- If you are using a brand new memory card, you need to initialize the memory card with the camcorder first. You may not be able to copy files from the memory card to the PC without doing so.

#### For owners of camcorders equipped with Digital Sound Effect function;


The CD-ROM contains digital sound files (data saved on the provided memory card at the factory). When the memory card has been formatted, follow the step below to save the files on the memory card.

- Copy the “DCSD” folder on the CD-ROM into the root directory (volume) of the memory card.

## Copying Files to the PC (Macintosh)

Still image and video clip files that are stored in a memory card can be copied to the PC and played back on the PC.

- 1 Double-click the memory card icon on the desktop.  
The folders in the memory card appear.
- 2 Double-click the destination folder.
- 3 Select the folder to be copied, and then drag and drop that folder in the destination folder.
  - To copy still images: Copy the folder within the [DCIM] folder.
  - To copy video clips: Copy the folder within the [DCVI] folder.The message [ACCESSING FILES] appears on the LCD monitor of the camcorder, and the folder is copied from the memory card to the PC.

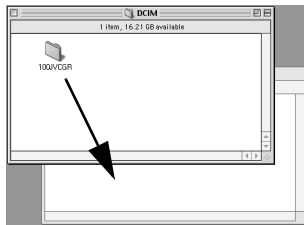

### NOTE:

*Never disconnect the USB cable while the message [ACCESSING FILES] is displayed on the camcorder's LCD monitor.*

## Playing Back Files on the PC (Macintosh)

### Still images

Use an application that can handle the JPEG file format. To view a still image, either double-click the still image file (extension ".jpg"), or drag and drop the file on the application icon.

### Video clips (Only for the camcorder equipped with E-Mail Clip Recording function)

Use the Windows Media™ Player for Mac (version 6.4 or later). You can download the Windows Media™ Player for Mac from the Microsoft web site at:

<http://www.microsoft.com/>

## Disconnecting the USB cable (Macintosh)

Before loading or unloading memory cards or turning off the PC, first disconnect the USB cable and turn off the camcorder.

- 1 Drop the memory card icon on the desktop into the [Trash] icon.
  - If the confirmation message appears, click [OK].
- 2 Confirm that the message [ACCESSING FILES] is not currently displayed on the LCD monitor of the camcorder.
  - If the message [ACCESSING FILES] is currently displayed, wait until it disappears before proceeding.
- 3 Disconnect the USB cable.
- 4 Set the Power Switch on the camcorder to "OFF".  
The camcorder turns off.





## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>