

**Owner's Manual**  
**Manual Del Propietario**  
**Manuel Du Propriétaire**



**Vacuum Cleaner**  
**Aspiradora**  
**Aspirateur**

Model, Modelo, Modèle  
216.37030, 37035 (US)  
216.31703 (Canada)

**CAUTION:**


Read and follow all  
safety and operating  
instructions before first  
use of this product.

**CUIDADO:**

Lea y sigue todas las  
instrucciones de operación  
y seguridad antes del uso de  
este producto.

**ATTENTION :**

Veuillez lire toutes les  
consignes de sécurité et le  
mode d'emploi avant d'utiliser  
ce produit.

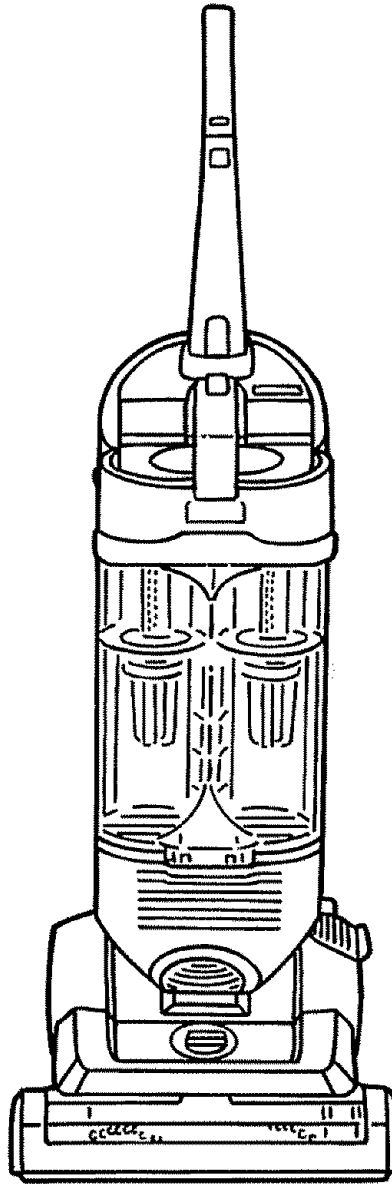

ENGLISH

ESPAÑOL

FRANÇAIS

**Sears Brands, LLC, Hoffman Estates, IL 60179 U.S.A.**  
**www.sears.com**

Part # 1-113884-000 Rev. 9/07

Printed in China  
*Impreso en China*  
*Imprimé en Chine*

## TABLE OF CONTENTS

<b>Before Using Your New Vacuum Cleaner</b> . . . . .	2	<b>Vacuum Cleaner Care</b> . . . . .	10-14
<b>Kenmore Vacuum Cleaner Warranty</b> . . . . .	3	Dirt Container, Filter and Air Director Removal and Replacement . . . . .	11-12
<b>Important Safety Instructions</b> . . . . .	4-5	Exhaust Filter Removal And Replacement . . . . .	12
<b>Parts and Features</b> . . . . .	6	Belt or Brushroll Removal And Replacement . . . . .	13
<b>Assembly Instructions</b> . . . . .	7	Light Bulb Replacement . . . . .	14
<b>Operating Instructions</b> . . . . .	8-10	Debris Removal: Intake Hose . . . . .	14
Power Cord . . . . .	8	Debris Removal: Nozzle Valve . . . . .	14
Floor/ Carpet Cleaning . . . . .	9	Vacuum Cleaner Storage . . . . .	15
Above Floor Cleaning . . . . .	10	<b>Troubleshooting</b> . . . . .	15
Pet Handi-Mate . . . . .	10	<b>Master Protection Agreements</b> . . . . .	16
		<b>Requesting Service</b> . . . . .	(back page)

## BEFORE USING YOUR NEW VACUUM CLEANER

Please read this guide. It will help you assemble and operate your new Kenmore vacuum cleaner in the safest and most effective way.

For more information about vacuum cleaner care and operation, call your nearest Sears store. You will need the complete model and serial numbers when requesting information. Your vacuum cleaner's model and serial numbers are located on the Model and Serial Number Plate.

Use the space below to record the model number and serial number of your new Kenmore vacuum cleaner.

Model No. \_\_\_\_\_

Serial No. \_\_\_\_\_

Date of Purchase \_\_\_\_\_

Keep this book and your sales check (receipt) in a safe place for future reference.

# KENMORE VACUUM CLEANER WARRANTY

## ONE YEAR LIMITED WARRANTY ON KENMORE VACUUM CLEANER

When installed, operated and maintained according to all instructions supplied with the product, if this appliance fails due to a defect in material and workmanship within one year from the date of purchase, return it to any Sears store, Sears Parts & Repair Service Center, or other Kenmore outlet for free repair.

If this appliance is ever used for other than private family purposes, this warranty applies for only 90 days from the date of purchase.

**This warranty covers only defects in material and workmanship. Sears will NOT pay for:**

1. Expendable items that can wear out from normal use, including but not limited to filters, belts, light bulbs, and bags.
2. A service technician to instruct the user in correct product installation, operation or maintenance.
3. A service technician to clean or maintain this product.
4. Damage to or failure of this product if it is not installed, operated or maintained according to the all instructions supplied with the product.
5. Damage to or failure of this product resulting from accident, abuse, misuse or use for other than its intended purpose.
6. Damage to or failure of this product caused by the use of detergents, cleaners, chemicals or utensils other than those recommended in all instructions supplied with the product.
7. Damage to or failure of parts or systems resulting from unauthorized modifications made to this product.



### **Disclaimer of implied warranties; limitation of remedies**

Customer's sole and exclusive remedy under this limited warranty shall be product repair as provided herein. Implied warranties, including warranties of merchantability or fitness for a particular purpose, are limited to one year or the shortest period allowed by law. Sears shall not be liable for incidental or consequential damages. Some states and provinces do not allow the exclusion or limitation of incidental or consequential damages, or limitation on the duration of implied warranties of merchantability or fitness, so these exclusions or limitations may not apply to you.

This warranty applies only while this appliance is used in the United States or Canada. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

**Sears, Roebuck and Co., Hoffman Estates, IL 60179**  
**Sears Canada Inc., Toronto, Ontario, Canada M5B 2B8**

# IMPORTANT SAFETY INSTRUCTIONS



**WARNING** Your safety is important to us. To reduce the risk of fire, electrical shock, injury to persons or damage when using your vacuum cleaner, follow basic safety precautions including the following:

**READ ALL INSTRUCTIONS IN THIS MANUAL BEFORE ASSEMBLING OR USING YOUR VACUUM CLEANER.**

**Do not** use outdoors or on wet surfaces. Electrical shock could occur.

**Do not** allow to be used as a toy. Close attention is necessary when used by or near children.

**Use** only as described in this manual. Use only manufacturer's recommended attachments.

**Do not** use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center for inspection. Call 1-877-839-2046 to locate the nearest service center.

**Do not** pull or carry by cord, use cord as handle, close a door on a cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.

**Do not** unplug by pulling on cord. To unplug, grasp the plug, not the cord.

**Do not** leave appliance when plugged in. Unplug from outlet when not in use and before servicing.

**Do not** handle plug or appliance with wet hands.

**Do not** put any objects into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.

**Keep** hair, loose clothing, fingers, and all parts of body away from openings and moving parts.

**Do not** pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.

**Do not** use without dirt container and filters in place.

**Turn off** all controls before unplugging.

**Do not** use to pick-up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.

**Keep** the vacuum cleaner on the floor. Do not use on stairs.

**Do not** use an extension cord with this vacuum cleaner.

**Store** the vacuum cleaner indoors. Put vacuum cleaner away after use to prevent tripping accidents.

# IMPORTANT SAFETY INSTRUCTIONS

**Using** improper voltage may result in damage to the motor and possible injury to the user. Proper voltage is listed on the data plate.

**Unplug** before connecting Pet Handi-Mate.

**WARNING:** The cords, wires, and/or cables supplied with this product contains chemicals, including lead or lead compounds, known to the state of California to cause cancer and birth defects or other reproductive harm. Wash hands after using.

## SAVE THESE INSTRUCTIONS


Proper assembly and safe use of your vacuum cleaner are your responsibilities. Your vacuum cleaner is intended only for **Household Use**. Read this Owner's Manual carefully for important use and safety information. This guide contains safety statements under warning and caution symbols. Please pay special attention to these boxes and follow any instructions given.

Your cleaner contains a thermal protective device to shut off the motor to avoid overheating. If this happens, turn switch off and unplug the cleaner. Inspect the exhaust, inlet, and filters for any blockage. Empty the dirt container and clean filters. After approximately 30 minutes the motor will have cooled and the vacuum will be ready to use. **Note:** The cleaner must remain unplugged during the 30 minute cooling period.

## PARTS AND FEATURES

It is important to know your vacuum cleaner's parts and features to assure its proper and safe use. Review these before using your vacuum cleaner.

Item	Part No.	Style No. In U.S.
Pleated Filter	K-500000-000	DCF-3
Exhaust Filter	K-700000-000	EF-3
Belt	1-860140-600	UB-11

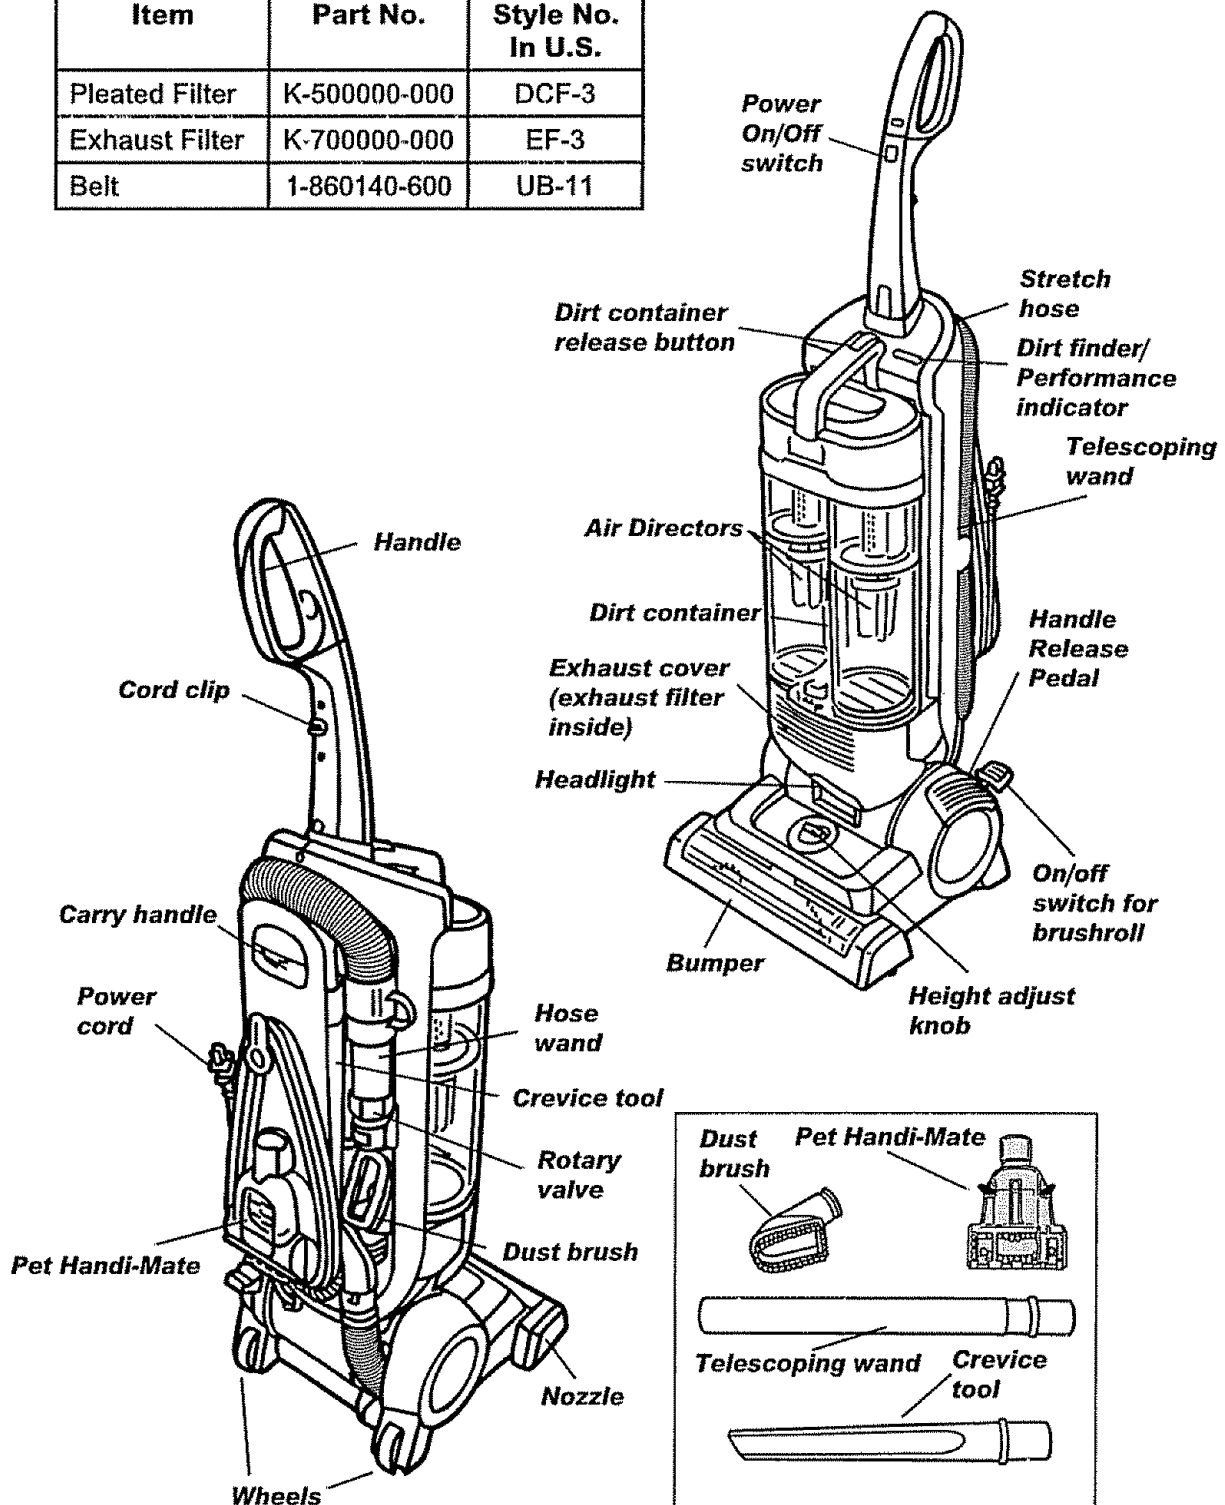



Please pay special attention to these hazard alert boxes, and follow any instructions given. **WARNING** statements alert you to such dangers as fire, electric shock, burns and personal injury. **CAUTION** statements alert you to such dangerous personal injury and/or property damage.

## ASSEMBLY INSTRUCTIONS




### WARNING

#### Electrical Shock Hazard


Do not plug into the electrical supply until the assembly is complete. Failure to do so could result in electrical shock or injury.

Before assembling the vacuum cleaner, check the **PACKING LIST** on the cover of the separate **REPAIR PARTS LIST** or on the carton. Use this list to verify that you have received all the components of your new Kenmore vacuum cleaner.

### HANDLE ASSEMBLY

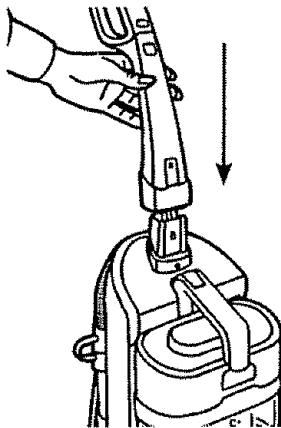

1. Attach upper handle to main body of cleaner.

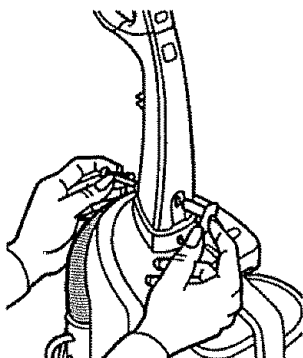

2. Push handle plug onto the front of cleaner. Insert the one (1) screw into the back of the handle and tighten, making sure the handle plug is secure.



### CAUTION


Do not overtighten.

Overtightening could strip the screw holes.

Do not operate the vacuum cleaner without the screws in place.

### EXTENSION WAND/ CREVICE TOOL PLACEMENT


Place the telescoping wand (A) into the wand holder on the left side of the vacuum cleaner. Place the crevice tool (B) in the crevice tool holder on the right side of the vacuum cleaner.

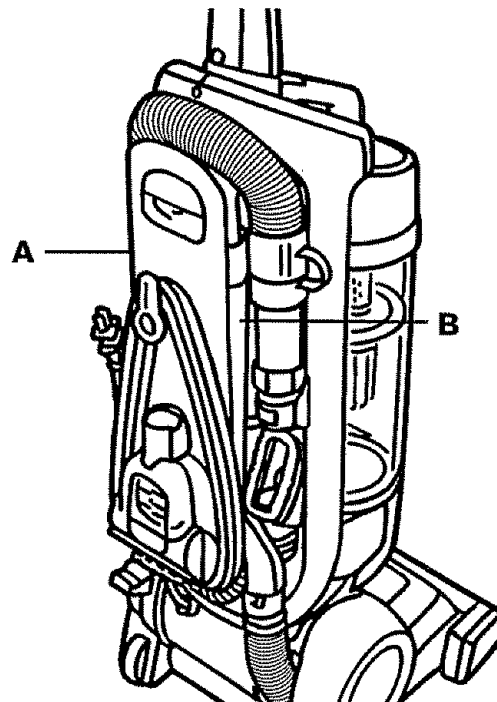


# OPERATING INSTRUCTIONS

## POWER CORD

1. Rotate the quick release upper cord hook to either side and down to release the power cord.

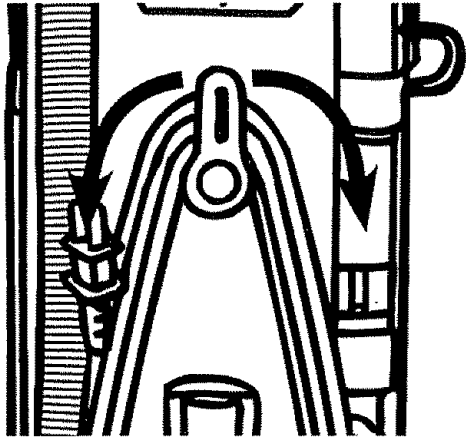

2. Unclip the power cord plug from the power cord. Make sure the power cord is placed into the cord clip on the body as shown. This helps keep the power cord out from under the vacuum cleaner nozzle.

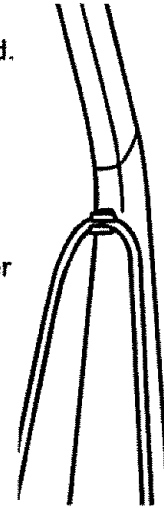

3. Plug the polarized power cord into a 120 Volt outlet located near the floor.

4. To store cord, turn upper cord hook to the up position, then wrap cord.



### WARNING

To reduce the risk of electric shock, this appliance has a polarized plug (one blade is wider than the other). This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet. Do not change the plug in any way.



### WARNING

#### Personal Injury and Product Damage Hazard


- **DO NOT** plug in if switch is in the **ON** position. Personal injury or damage could result.
- **DO NOT** use outlets above counters. Damage from cord to items in surrounding area could occur.



## FLOOR/CARPET CLEANING

### HEIGHT ADJUST KNOB

**IMPORTANT:** For easiest adjustment, place cleaner in full upright position. Turn the height adjust knob to match the surface being cleaned.

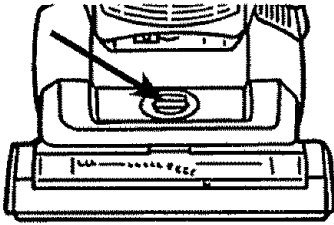


### ON/OFF BUTTON



Turn cleaner on by depressing the power on/off switch on the front of the handle.


### PERFORMANCE INDICATOR AND DIRT FINDER

The Performance Indicator light turns red when vacuum needs to be serviced. Please see Troubleshooting Section on page 15 for Service Instructions. Dirt Finder lights up as dirt is collected. When light turns off, the carpet is clean.

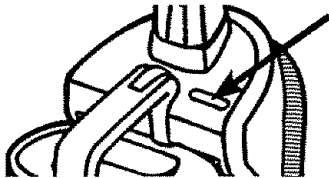


### HANDLE RELEASE

To release handle, push the handle release pedal located on the lower left side of the cleaner.

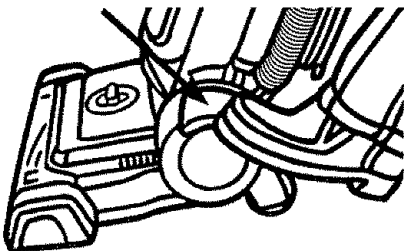


### ON/OFF BRUSHROLL

Depress pedal to turn off brushroll for bare floor cleaning. Press pedal again to re-engage brushroll.

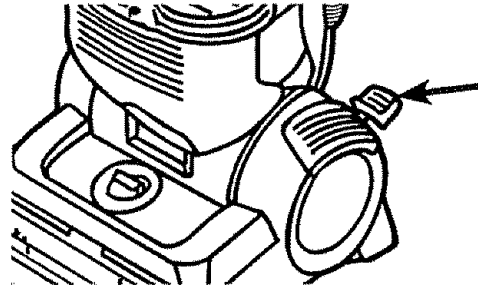


Rotate the handle and adjust it to the desired position for (A) storing the upright, (B) operating the cleaner, and (C) to clean under furniture. **NOTE:** Rotating brush could cause area rug fringe to become tangled within cleaner. Use caution when vacuuming any rugs with fringe.

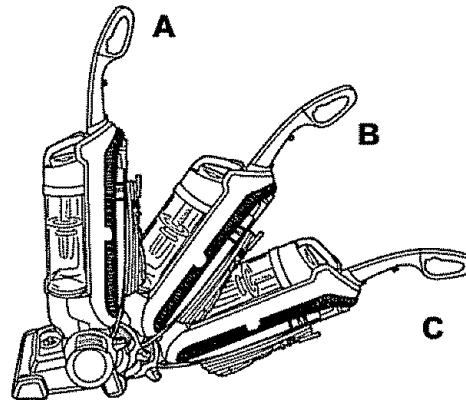

### CARRY HANDLE

Use the carry handle located on the back of the cleaner to carry from room to room.

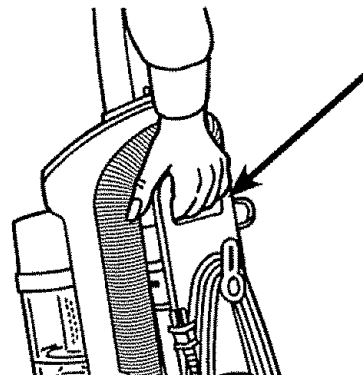


## ABOVE FLOOR CLEANING



### CAUTION

Brush agitator continues to rotate while hose is removed or in use and at all times while cleaner is on. Keep hair, loose clothing, fingers, and all parts of body away from brush area while cleaner is on. Cleaner must be in the upright position to lift the rotating brushroll off the carpet when cleaning above the floor.

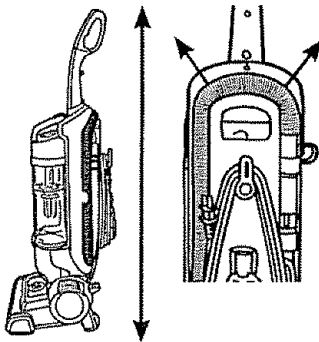


Cleaner must be in its upright position to raise brushroll from floor. Remove the hose from the tool caddy.

Choose any of the handy accessories or use the hose alone. Simply push the attachment firmly onto the end of the wand or hose handle. To remove tool, twist and pull apart gently.




If additional length is needed, use the telescoping wand and crevice tool. Use telescoping wand and crevice tool together or separately.

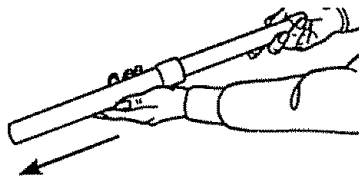


Twist and pull wand to extend.

Rotate the rotary valve in either direction to adjust the suction at the end of the hose as required. When finished, secure the hose wand into the rest. Close the rotary valve on the hose wand to ensure that nozzle cleaning performance is at its maximum.

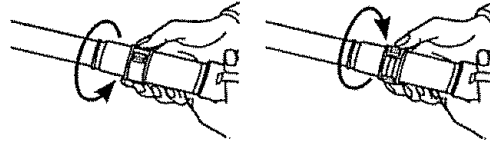

### PET HANDI-MATE


Attach the Pet Handi-Mate to the hose wand or telescoping wand. Brushroll will start automatically.

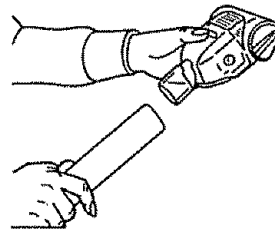


The Pet Handi-Mate can be used for cleaning stairs and upholstery.

### DEBRIS REMOVAL

Slide locking tabs to outward position to unlock. Pivot lower housing and remove clog.

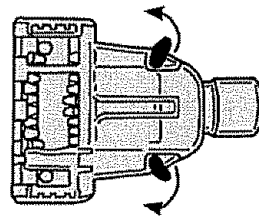

To reassemble, align tabs on the lower housing with the slots on the cover and pivot cover back into position on top of lower housing. Rotate locking tabs inward into locking position.

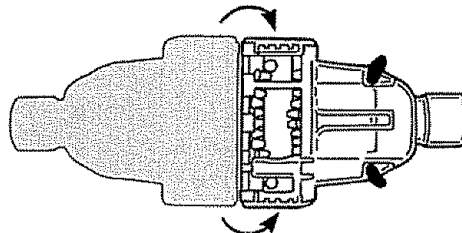

# VACUUM CLEANER CARE

## DIRT CONTAINER REMOVAL AND REPLACEMENT




### WARNING

**Electrical Shock and Personal Injury Hazard**


Disconnect electrical supply before servicing or cleaning the unit. Failure to do so could result in electrical shock or personal injury from vacuum cleaner suddenly starting.

**Note:** For best performance, replace filter a minimum of every 6 months.

### EMPTY DIRT CONTAINER

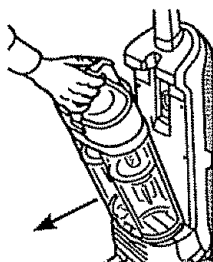


Press dirt container release button and remove dirt container from cleaner.

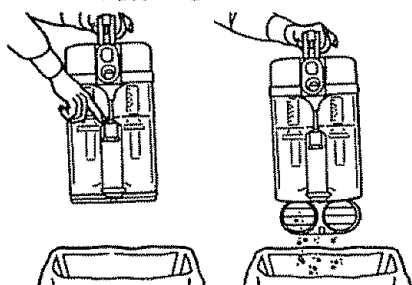


Hold dirt container over garbage can and press the dirt container release button to empty. Snap dirt container bottom back into place after emptying.


### REMOVE FILTER

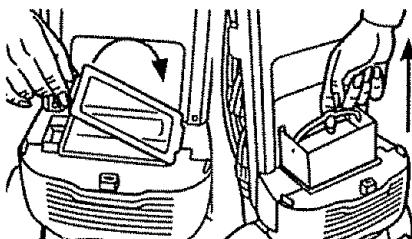

Squeeze and lift latch to unlock filter cage. Lift filter cartridge out of base of cleaner using metal handle.

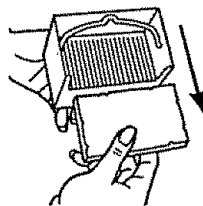


Remove foam filter from filter cartridge.

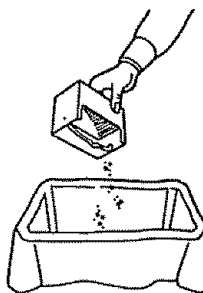


Tap the pleated filter on the inside of a garbage can to remove excess dust and dirt from filter. If filter is still clogged, rinse under running water and allow to dry for at least 24 hours before replacing in cleaner.


### RETURN FILTER

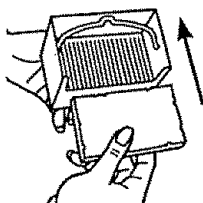

Return foam filter to filter cartridge.

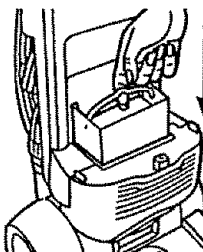


Return filter cartridge to base of the cleaner. Be sure that the open side of the filter cartridge faces the back side of the cleaner.

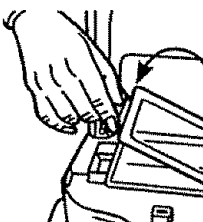


Squeeze and lower latch to lock filter cage.

### FOAM FILTER CARE

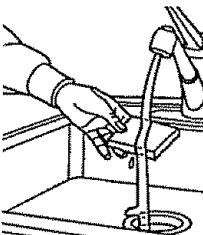


Hold foam filter under running water to wash. Ring excess water out of filter. Allow filter to dry for at least 24 hours before replacing in filter cartridge.


## CLEAN AIR DIRECTORS

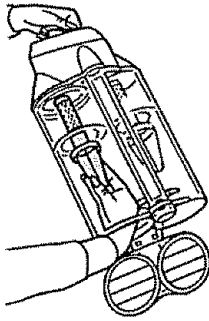


To remove Air Directors, rotate 1/4 turn counterclockwise.

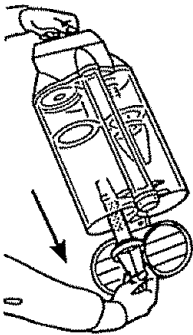

Pull out and wipe with a damp cloth to clean.

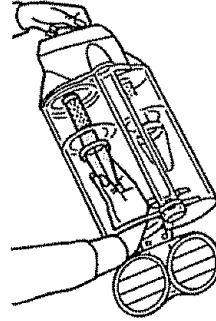


Dry and return the Air Directors to the dirt container. Rotate 1/4 turn clockwise to lock in place.

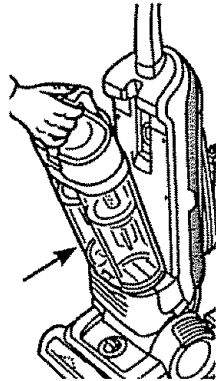


Return dirt container by aligning the post on the cleaner with the opening in the bottom of the dirt cup. Rotate dirt cup back into position and latch.

## EXHAUST FILTER REMOVAL AND REPLACEMENT


**Note:** For best performance, replace filter a minimum of every 6 months.

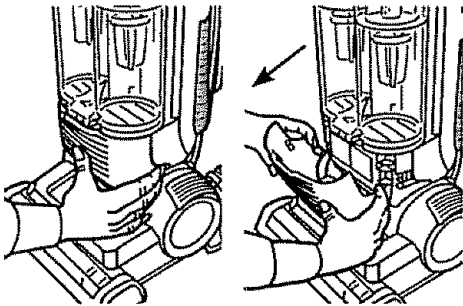


Grasp edges on exhaust filter cover pull towards you to remove.

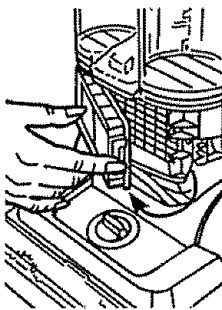

Depress tab and pull toward you. Remove exhaust filter from cleaner. Tap filter on inside of garbage can to remove excess dust and dirt from filter.

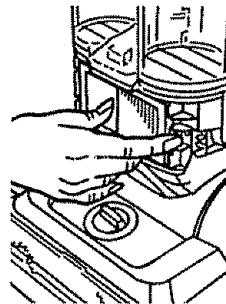

Return exhaust filter to cleaner.

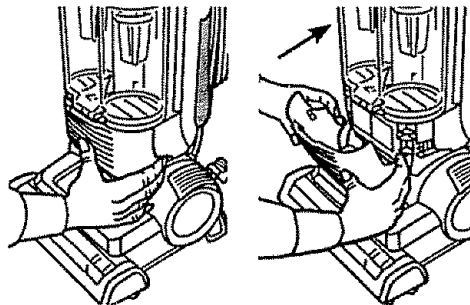

Replace exhaust filter cover by pivoting toward cleaner until cover snaps into place.

# BELT OR BRUSHROLL REMOVAL AND REPLACEMENT





## WARNING

**Electrical Shock and Personal Injury Hazard**


Disconnect electrical supply before servicing or cleaning the unit. Failure to do so could result in electrical shock or personal injury from vacuum cleaner suddenly starting.

## TO REMOVE BELT

Lay cleaner flat and flip cleaner to expose nozzle base. To remove nozzle guard, slide lock A to unlock position, to the left. Then depress lock B to unlock nozzle guard.

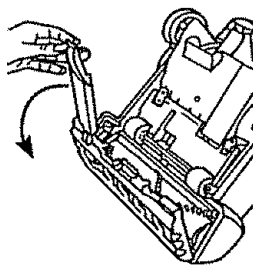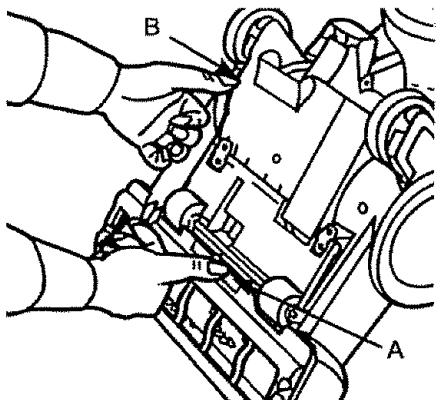


Rotate/pivot the nozzle guard and pull off

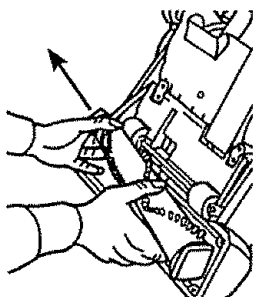


Lift and remove brushroll. Dispose of old belt.



## TO REPLACE BELT OR BRUSHROLL

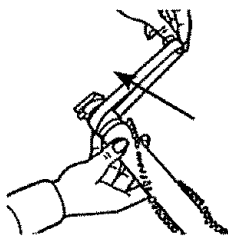


Place new belt in area of brushroll without bristles.

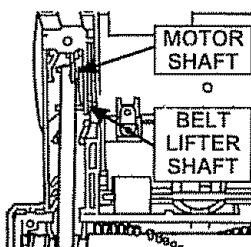


Place brushroll shutoff pedal in "Carpet" position. Slide belt onto motor shaft. Ensure to loop the belt around the belt lifter shaft.

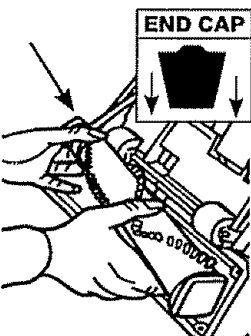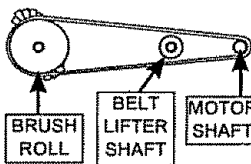

With new belt in place, pull and slide brushroll into nozzle making sure that the brushroll end caps are in the correct orientation (see diagram for end cap orientation). Rotate brushroll manually to make sure belt is properly aligned.

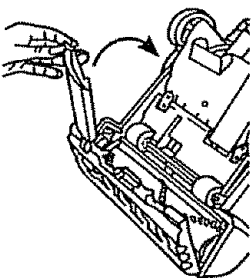

Secure by aligning the three (3) tabs in the base slots. To reattach nozzle guard, rotate/pivot back into position.

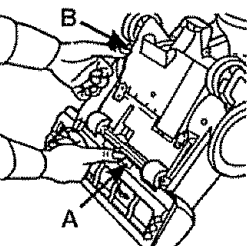

To secure nozzle guard, push lock B down to lock position. Slide lock A into lock position, to the right.

## LIGHT BULB REPLACEMENT




### WARNING

**Electrical Shock and Personal Injury Hazard**

Disconnect electrical supply before servicing or cleaning the unit. Failure to do so could result in electrical shock or personal injury from vacuum cleaner suddenly starting.

### TO REMOVE LIGHT BULB

1. Disconnect power cord from electrical outlet.
2. Press handle release pedal and lay vacuum cleaner back.

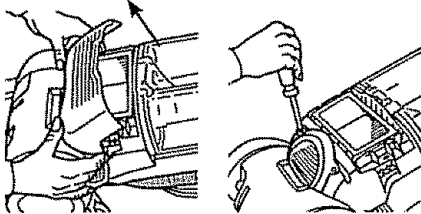


3. Grasp the edge of the exhaust cover. Pull out edges of exhaust cover and lift off.
4. Remove the two (2) screws from the lens cover.




### CAUTION


Do not use a bulb rated over 9W (13V). During extended use, heat from the bulb could overheat surrounding plastic parts.

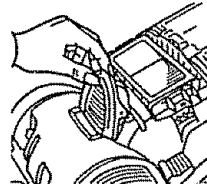

5. Insert flat blade of screwdriver into slot at top of the lens. Lift the lens cover to remove.

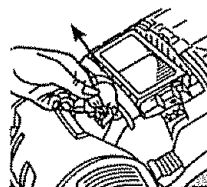


6. Pull bulb out of socket. Do NOT twist. Gently push replacement bulb into socket to replace.

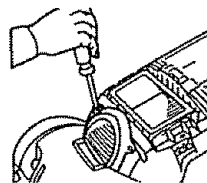


7. Snap lens cover back into place and secure the headlight lens by replacing the two screws. Replace exhaust cover.

**Note:** See separate **PARTS LIST** for bulb number.

## DEBRIS REMOVAL: INTAKE HOSE

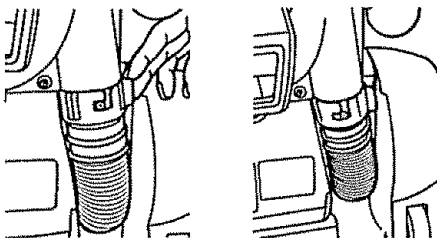


1. Locate the lower intake hose.
2. Rotate lower intake hose cuff clockwise into the unlock position.

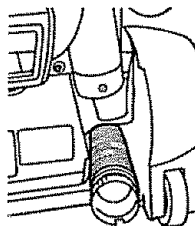


3. Disconnect the hose by pulling down on the lower intake hose cuff.
4. Remove debris from inside the hose.

## DEBRIS REMOVAL: NOZZLE VALVE

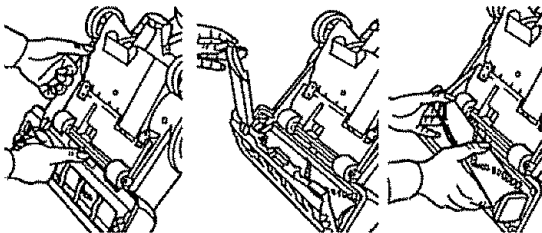

1. Follow instructions on page 13 for removing nozzle guard and brushroll.

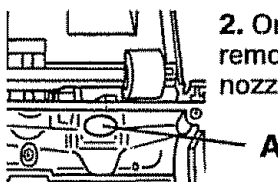

2. Once brushroll is removed, locate the nozzle valve.

3. Remove debris from inside the nozzle valve.
4. Return brushroll and nozzle guard.

## VACUUM CLEANER STORAGE

Gather the cord and wrap it loosely around the upper and lower cord hooks. Lock power cord plug onto the power cord.



Store the vacuum cleaner in a dry, indoor area, on the floor with the handle locked in the upright position.



### WARNING

**Electrical Shock and Personal Injury Hazard**

Wrapping the cord too tightly puts stress on the cord and can cause cord damage.

## TROUBLESHOOTING

Review this table to find do-it-yourself solutions for minor performance problems.

Any service needed, other than maintenance described in this Owner's Manual, should be performed by a Sears or other qualified service agent.



### WARNING

**Disconnect electrical supply before performing maintenance to the unit. Failure to do so could result in electrical shock or personal injury.**

PROBLEM	POSSIBLE CAUSE	POSSIBLE SOLUTION
<b>Cleaner won't run</b>	<ol style="list-style-type: none"> <li>1. Power cord not firmly plugged into outlet.</li> <li>2. Blown fuse or tripped breaker.</li> <li>3. Thermal Protector activated.</li> <li>4. Needs service.</li> </ol>	<ol style="list-style-type: none"> <li>1. Plug unit in firmly.</li> <li>2. Check fuse or breaker in home. Replace fuse/reset breaker.</li> <li>3. Allow cleaner to cool - Pg. 5</li> <li>4. Take to Sears Service Center.</li> </ol>
<b>Cleaner won't pick up or low suction</b>	<ol style="list-style-type: none"> <li>1. Dirt container not installed correctly.</li> <li>2. Dirt container full.</li> <li>3. Brushroll worn.</li> <li>4. Belt is broken, worn or slipped out of position.</li> <li>5. One or both filters clogged.</li> <li>6. Carpet height setting is incorrect.</li> <li>7. Hose clogged</li> <li>8. Air directors need to be cleaned.</li> </ol>	<ol style="list-style-type: none"> <li>1. Review DIRT CONTAINER REMOVAL AND REPLACEMENT - Pg. 11, 12.</li> <li>2. Empty dirt container - Pg. 11.</li> <li>3. Replace brushroll - Pg. 13.</li> <li>4. Replace belt - Pg. 13.</li> <li>5. Remove filters and clean - Pg. 11, 12.</li> <li>6. Set carpet height adjust to appropriate setting for carpet being cleaned - Pg. 9.</li> <li>7. Check inlets, hose and dirt container for obstructions; remove obstruction - Pg. 14. If clog persists, call 1-877-839-2046.</li> <li>8. Remove air directors and clean. Pg. 12.</li> </ol>
<b>Dust escaping from cleaner</b>	<ol style="list-style-type: none"> <li>1. Dirt container full.</li> <li>2. Dirt container not installed correctly.</li> <li>3. Hose not installed correctly.</li> <li>4. One or both filters not installed completely.</li> </ol>	<ol style="list-style-type: none"> <li>1. Empty dirt container - Pg. 11.</li> <li>2. Review DIRT CONTAINER REMOVAL AND REPLACEMENT - Pg. 11, 12.</li> <li>3. Review hose placement - Pg. 6.</li> <li>4. Review filter removal and replacement - Pg. 11, 12.</li> </ol>
<b>Cleaner tools won't pick-up</b>	<ol style="list-style-type: none"> <li>1. Hose clogged</li> <li>2. Dirt container full.</li> <li>3. One or both filters clogged.</li> </ol>	<ol style="list-style-type: none"> <li>1. Check inlets, hose and dirt container for obstructions; remove obstruction - Pg. 14. If clog persists, call 1-877-839-2046.</li> <li>2. Empty dirt container - Pg. 11.</li> <li>3. Clean filters - Pg. 11, 12.</li> </ol>
<b>Headlight not working</b>	<ol style="list-style-type: none"> <li>1. Bulb burnt out.</li> <li>2. Loose electrical wires.</li> </ol>	<ol style="list-style-type: none"> <li>1. Replace bulb - Pg. 14.</li> <li>2. Take to Sears Service Center.</li> </ol>
<b>Cleaner is difficult to push</b>	<ol style="list-style-type: none"> <li>1. Carpet height setting is incorrect.</li> <li>2. Belt is broken, worn or slipped out of position.</li> </ol>	<ol style="list-style-type: none"> <li>1. Set carpet height adjust lever to appropriate setting for carpet being cleaned - Pg. 9.</li> <li>2. Replace belt - Pg. 13.</li> </ol>
<b>Performance indicator light turns red</b>	<ol style="list-style-type: none"> <li>1. Hose clogged</li> <li>2. Air directors need to be cleaned.</li> </ol>	<ol style="list-style-type: none"> <li>1. Check inlets, hose and dirt container for obstructions; remove obstruction - Pg. 14. If clog persists, call 1-877-839-2046.</li> <li>2. Remove air directors and clean. Pg. 12.</li> </ol>

**For any questions, please call 1-877-839-2046.**

## MASTER PROTECTION AGREEMENT

*Congratulations on making a smart purchase.* Your new Kenmore® product is designed and manufactured for years of dependable operation. But like all products, it may require preventive maintenance or repair from time to time. That's when having a Master Protection Agreement can save you money and aggravation.

The Master Protection Agreement also helps extend the life of your new product. Here's what the Agreement\* includes:

- Parts and labor** needed to help keep products operating properly **under normal use**, not just defects. Our coverage goes **well beyond the product warranty**. No deductibles, no functional failure excluded from coverage – **real protection**.
- Expert service** by a force of more than **10,000 authorized Sears service technicians**, which means someone you can trust will be working on your product.
- Unlimited service calls and nationwide service**, as often as you want us, when ever you want us.
- "No-lemon" guarantee** – replacement of your covered product if four or more product failures occur within twelve months.
- Product replacement** if your covered product can't be fixed.
- Annual Preventive Maintenance Check** at your request – no extra charge.
- Fast help by phone** – we call it **Rapid Resolution** – phone support from a Sears representative on all products. Think of us as a "talking owner's manual."
- Power surge protection** against electrical damage due to power fluctuations.
- \$250 Food Loss Protection** annually for any food spoilage that is the result of mechanical failure of any covered refrigerator or freezer.
- Rental reimbursement** if repair of your covered product takes longer than promised.
- 10% discount** off the regular price of any non-covered repair service and related installed parts.

Once you purchase the Agreement, a simple phone call is all that it takes for you to schedule service. You can call anytime day or night, or schedule a service appointment online.

The Master Protection Agreement is a risk free purchase. If you cancel for any reason during the product warranty period, we will provide a full refund. Or, a prorated refund anytime after the product warranty period expires. Purchase your Master Protection Agreement today!

**Some limitations and exclusions apply. For prices and additional information in the U.S.A. call 1-800-827-6655.**

**\* Coverage in Canada varies on some items. For full details call Sears Canada at 1-800-361-6665.**

### **Sears Installation Service**

*For Sears professional installation of home appliances, garage door openers, water heaters, and other major home items, in the U.S.A. or Canada call **1-800-4-MY-HOME**®.*



# Get it fixed, at your home or ours!

## Your Home

For repair - **in your home** - of **all** major brand appliances, lawn and garden equipment, or heating and cooling systems, **no matter who made it, no matter who sold it!**

For the replacement parts, accessories and owner's manuals that you need to do-it-yourself.

For Sears professional installation of home appliances and items like garage door openers and water heaters.

**1-800-4-MY-HOME** Anytime, day or night  
(1-800-469-4663) (U.S.A. and Canada)  
**www.sears.com** **www.sears.ca**

For expert home solutions advice: [www.managemyhome.com](http://www.managemyhome.com)

## Our Home

For repair of carry-in products like vacuums, lawn equipment, and electronics, call or go on-line for the nearest **Sears Parts and Repair Center.**

**1-800-488-1222** Anytime, day or night (U.S.A. only)  
**www.sears.com**

To purchase a protection agreement (U.S.A.) or maintenance agreement (Canada) on a product serviced by Sears:

**1-800-827-6655** (U.S.A.) **1-800-361-6665** (Canada)

Para pedir servicio de reparación a domicilio, y para ordenar piezas:

**1-888-SU-HOGAR**<sup>®</sup>  
(1-888-784-6427)

Au Canada pour service en français:

**1-800-LE-FOYER**<sup>MC</sup>  
(1-800-533-6937)  
[www.sears.ca](http://www.sears.ca)



© Sears Brands, LLC

® Registered Trademark / ™ Trademark / SM Service Mark of Sears Brands, LLC

® Marca Registrada / ™ Marca de Fábrica / SM Marca de Servicio de Sears Brands, LLC

MC Marque de commerce / MD Marque déposée de Sears Brands, LLC

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>