

Installation Guide
10/100 Dual-speed
Fast Ethernet PCI Adapters

KF223TX, KF230TX



DOC.971115-KF223/230TX-K
P/N:750-0099-001

© 1997, KTI Networks Inc. All rights reserved. No part of this documentation may be reproduced in any form or by any means or used to make any derivative work (such as translation or transformation) without permission from KTI Networks Inc.

KTI Networks Inc. reserves the right to revise this documentation and to make changes in content from time to time without obligation on the part of KTI Networks Inc. to provide notification of such revision or change.

For more information, contact:

United States

KTI Networks Inc.
P.O. BOX 631008
Houston, Texas 77263-1008

Phone: 713-2663891
Fax: 713-2663893
BBS: 713-2663015
E-mail: kti@ktinet.com
Web: <http://www.ktinet.com/>

International

Fax: 886-2-6983873
BBS: 886-2-6983913
E-mail: kti@ktinet.com.tw
Web: <http://www.ktinet.com.tw/>

TRADEMARKS

Ethernet is a registered trademark of Xerox Corp. NetWare is a registered trademark of Novell Inc.

WARNING:

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and if not installed and used in accordance with the instruction manual may cause harmful interference in which case the user will be required to correct the interference at his own expense.

NOTICE:

(1)The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

(2)Shielded interface cables and AC power cord, if any, must be used in order to comply with the emission limits.

CISPR A COMPLIANCE:

This device complies with EMC directive of the European Community and meets or exceeds the following technical standard.

EN 55022 - Limits and Methods of Measurement of Radio Interference Characteristics of Information Technology Equipment. This device complies with CISPR Class A.

WARNING: This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

CE NOTICE

Marking by the symbol **CE** indicates compliance of this equipment to the EMC directive of the European Community. Such marking is indicative that this equipment meets or exceeds the following technical standards:

EN 55022: Limits and Methods of Measurement of Radio Interference characteristics of Information Technology Equipment.

EN 50082/1: Generic Immunity Standard -Part 1: Domestic Commercial and Light Industry.

**10/100BASE-TX
FAST ETHERNET PCI ADAPTERS**

INSTALLATION GUIDE

DOC.971114
DF223TX-KF230TX-NK
P/N:750-0099-002

Table of Contents

1. Introduction	
1.1 Adapter Features	1
1.2 Connector and LEDs	2
2. Installing the Adapter	
2.1 Installing the Adapter	3
2.2 Connecting to the Network	4
3. Network Driver Installation	
3.1 Driver Information	7
3.2 PCI BIOS Setup	8
4. Setup Program and Diagnostics	
4.1 Running Setup Program	9
4.2 Functions on the Main Menu	12
5. LED Indicators	
5.1 Interpretations	17
Appendix	
A.1 Specifications	18
A.2 RJ-45 Connectors & Cable	19
A.3 Auto-negotiation Function	20
A.4 Diagnostics Report	21
A.5 Installing Remote Boot ROM	22
Figures	
Figure 1-1 Network Connector and LEDs	2
Figure 2-1 Inserting the Adapter into the PCI Slot	4
Figure 2-2 Network Connector	4
Figure 2-3 Connecting 10BASE-T Cable	5
Figure 2-4 Connecting 100BASE-TX Cable	6
Figure 4-1 Main Menu of the Setup Program	9
Figure 4-2 Adapter Information	11
Figure 4-3 DOS ODI Driver Installation Window	12
Figure 4-4 Setup Menu	13
Figure 4-5 Diagnostics Menu	14
Figure A-1 RJ-45 Connector Pin Assignments	19

1. Introduction

The 10/100BASE-TX Fast Ethernet PCI Adapter is a 32-bit LAN adapter for use in personal computers with PCI computer bus slots.

This adapter is a dual-speed adapter and features one RJ-45 connector for either a 10 Mbps or a 100 Mbps IEEE 802.3 Ethernet network connection over unshielded twisted-pair (UTP) cable. The adapter automatically senses the connection speed, switches to either 10 Mbps or 100 Mbps and indicates the link status on the LEDs.

1.1 Adapter Features

The features of the 10/100 Fast Ethernet PCI adapter are:

- High performance bus master operation with low processor utilization
- Automatically senses 10 Mbps or 100 Mbps connection
- Supports auto-negotiation for the connection speed and duplex mode
- PCI revision 2.0 or later compliance, 32-bit PCI half-card
- Three status LEDs
- Optional RPL Boot ROM for network operating systems
- Supports 100BASE-TX connection with UTP Category 5 cabling
- Supports 10BASE-T connection with UTP Category 3, 4, or 5 cabling
- Setup software for quick driver installation and diagnostics

1.2 Connector and LEDs

Figure 1-1 shows the connector and LEDs on the adapter. The following table describes these components.

<u>No.</u>	<u>Components</u>	<u>Description</u>
1	10/100 Mbps network connector	This RJ-45 connector requires UTP cable for 10Mbps or 100 Mbps connection.
2	100Mb Link LED	This LED lights when 100 Mbps connection is selected and active.
3	10Mb Link LED	This LED lights when 10 Mbps connection is selected and active.
4	Activity status LED	This LED indicates a receive or a transmission is in process.

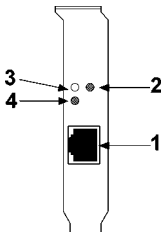


Figure 1-1 Network Connector and LEDs

2. Installing the Adapter

This chapter describes how to install the Fast Ethernet PCI adapter in a PCI computer and how to connect the adapter to the network. Before installing the adapter, you need the following:

- A computer system that is compliant with the PCI specifications version 2.0 or later.
- An available PCI bus master slot in the computer
- The adapter driver diskette
- UTP cables - use a UTP Category 5 cable with an RJ-45 plug to operate at 100 Mbps - use a UTP Category 3, 4, or 5 cable with an RJ-45 plug to operate at 10 Mbps

2.1 Installing the Adapter

To install the adapter in your computer, follow these steps:

1. Turn off the power to the computer and disconnect all cables connected to the computer.
2. Remove the computer's cover.
3. Unscrew and remove the slot cover from the PCI bus master slot that you plan to use.
4. Install optional Boot ROM, if you want to use the remote boot ROM function. Refer to Appendix 5 for more information.
5. Insert the adapter into the slot and secure the screw (see Figure 2-1).
6. Replace the computer cover and reconnect all previously connected cables.

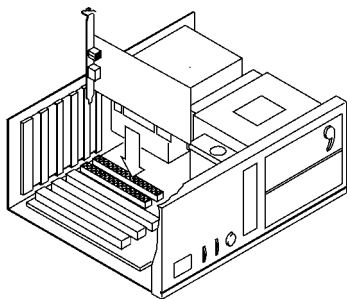


Figure 2-1 Inserting the Adapter into the PCI Slot

2.2 Connecting to the Network

This section describes how to connect 10 Mbps or 100 Mbps network cables to the adapter. The rear bracket of the Fast Ethernet adapter contains one RJ-45 connector. The connector is used for either 100Mbps 100BASE-TX connection or 10Mbps 10BASE-T connection. The adapter can sense the connection speed and switch to appropriate operation automatically.

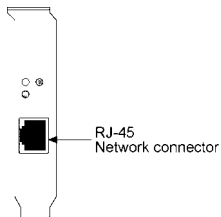


Figure 2-2 Network Connector

10 Mbps Connection

For 10BASE-T Ethernet networks, the Fast Ethernet adapter uses Category 3, 4, or 5 UTP cable. To establish a valid 10 Mbps connection, the cable must be connected to a 10BASE-T hub. Connect the network cable as follows:

1. Make sure that the plug on the cable is wired appropriately for a standard 10BASE-T adapter.
2. Align the RJ-45 plug on the end of the UTP cable with the notch on the adapter's connector and insert it into the adapter connector as shown in Figure 2-3.

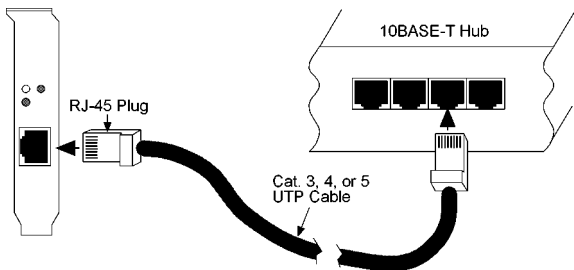


Figure 2-3 Connecting 10BASE-T Cable

100 Mbps Connection

For 100BASE-TX Fast Ethernet networks, the adapter supports Category 5 UTP cabling. To establish a valid 100 Mbps connection, the cable must be connected to a 100BASE-TX hub.

1. Make sure that the plug on the cable is wired appropriately for a standard 100BASE-TX adapter.
2. Align the RJ-45 plug on the end of the UTP cable with the notch on the adapter's connector and insert it into the adapter connector as shown in Figure 2-4.

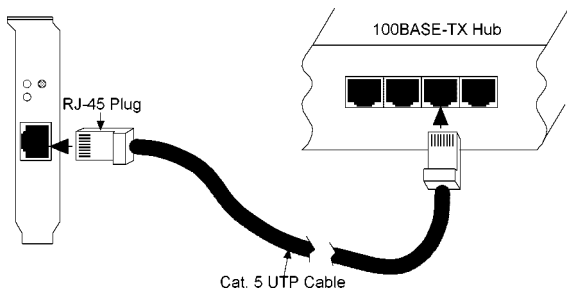


Figure 2-4 Connecting 100BASE-TX Cable

Note: The UTP wire pairs and configuration for 100BASE-TX cable are identical to those for 10BASE-T cable when used with Category 5 UTP cable. The straight through connection should be made from the adapter through the cable and connectors to the hub. Refer to Appendix A.1 for RJ-45 connector pin assignments.

3. Network Driver Installation

After making the connection to the network, you must install the adapter network driver in order to connect the Fast Ethernet adapter to your network operating system.

3.1 Driver Information

The adapter driver diskette contains the latest versions of the network drivers available when the adapter is shipped from the factory. A file, \README.DOC, located in the diskette's root directory contains a list of the supported driver software and the directory structures for the supported operating environments. Please refer to this file first before installing any network driver for the adapter.

In the diskette, there are additional INSTALL.DOC files within the directory structures for each supported operating environment. These files contain information that pertains to the specified driver or operating environment that corresponds to the subdirectory where they are found. The basic drivers supplied in the adapter driver diskette are:

- NetWare DOS ODI driver
- NetWare OS/2 ODI driver
- NetWare ODI server driver for NetWare 3.1x, 4.x, and Client32
- DOS NDIS2 driver
- OS/2 NDIS2 driver
- NDIS3 driver for Windows NT
- NDIS3 driver for Windows 95

In addition to the basic drivers, more updated information and drivers

may be included in the driver diskette after this guide is published. Please refer to the \README.DOC file first for the latest information before you install any drivers.

3.2 PCI BIOS Setup

Before installing the driver, it is recommended to run the system PCI BIOS setup utility to check each PCI slot that contains a Fast Ethernet PCI adapter for the following PCI settings:

1. Enable/disable the PCI slot : make sure the PCI slot is enabled for the adapter.
2. Assign an IRQ number : make sure the IRQ number does not conflict with other add-in adapters.
3. Enable bus mastering : the PCI slot must be enabled for bus mastering.

On a PCI plug-and-play system, the PCI BIOS automatically configures the adapter, so there is no user action needed.

Note:

- * When the PCI adapter is installed in some PCI computers with EISA slots, you must run the EISA configuration utility. If the utility is not available, consult your computer supplier.

You can run the program and perform the tests at any time after installing the adapter to verify the installation or you can run it when a fault is suspected.

Before running the program

Before running the setup program, make sure that the adapter is correctly installed in a computer with the PCI bus.

The setup program must be run from the DOS prompt. When using the program to run diagnostics on the adapter, you should not load memory managers or other device drivers. To avoid this, press [F5] when DOS (version 6.x) loads, after the message "Starting MS-DOS..." appears on the screen. This prevents the AUTOEXEC.BAT and CONFIG.SYS files from being executed.

When the program is executed, it detects all installed Fast Ethernet PCI adapters in the computer and shows the basic information of the first adapter found. You may press [PgUp] key or [PgDn] key to browse the information of each adapter and select a target adapter to perform the optional tests shown on the main menu.

Together with the SETUP.EXE, a SETUP.DOC file is also contained in the adapter driver diskette. It contains detailed information about this program.

Starting the Setup Program

To start the Setup program, follow these steps:

1. Insert the adapter driver diskette labeled "1 of 2" into floppy disk drive A:.
2. Execute the following command from DOS prompt:

A>SETUP <enter>

A screen appears showing a menu bar on top of the screen and an information window for the first adapter found in the computer on the bottom portion of the screen as illustrated in the following figure:

Select Card Status 1 of x			
Card Location	Interrupt Channel	Adapter ID Address	Full Duplex
xxxx	xx	xxxxxx-xxxxxx	Auto Detected

Figure 4-2 Adapter Information

When Multiple Adapters are installed

If multiple adapters are found, you may press [PgDn] or [PgUp] to browse the information of each adapter and select a adapter for the optional menus (Setup and Diagnostics).

4.2 Functions on the Main Menu

This section describes the functions of "Install", "Setup", and "Diagnostics" menu on the main menu as follows:

Running "Install" Menu

The "Install" menu provides two functions as follows:

- **Install NetWare DOS ODI driver**

This function provides a convenient and quick method to install the Novell's NetWare DOS ODI driver for your computer without the need for Novell's installation diskettes. The pop-up window for the installation is illustrated in figure 4-3. Specify the parameters in the window for your environment and click [OK] to complete the installation.

NetWare DOS Client Installation			
Frame Type		Preferred Login Server	
<input checked="" type="checkbox"/> ETHERNET 802.2		[]	
<input type="checkbox"/> ETHERNET 802.3		Login User Name	
<input type="checkbox"/> ETHERNET II		[]	
<input type="checkbox"/> ETHERNET SNAP			
Login Method		Destination directory	
<input type="checkbox"/> VLM		[C:\NWCLIENT]	
<input type="checkbox"/> NETX			
<input checked="" type="checkbox"/> Modify CONFIG.SYS & AUTOEXEC.BAT			[OK] [Cancel]

Figure 4-3 DOS ODI Driver Installation Window

- **Installation instructions for Other Network Operating Systems**

This function provides the helpful instructions for installing other drivers for various operating systems.

Running "Setup" Menu

This menu allows you to configure full-duplex mode for the adapter before running Connectivity test.

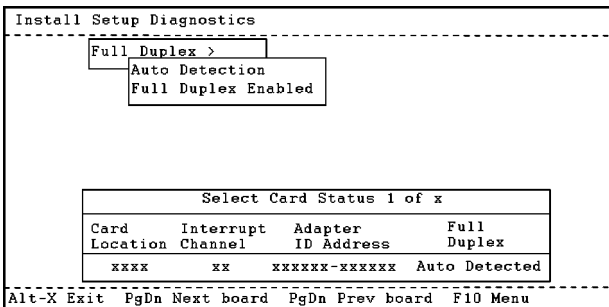


Figure 4-4 Setup Menu

"Auto Detection" selection allows adapter to configure duplex mode automatically. "Full Duplex Enabled" selection will force the adapter to use full duplex mode.

This setting will not be effective after any network driver is loaded or the computer is reboot.

Running "Diagnostics" Menu

This menu provides two useful functions: Diagnostics and Connectivity test.


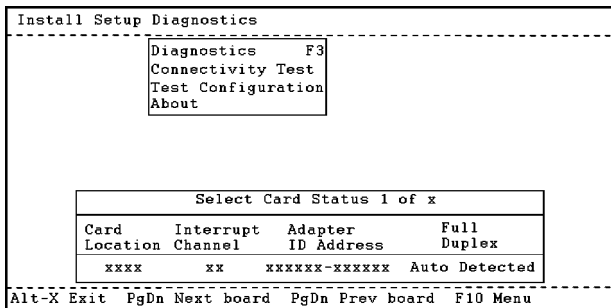


Figure 4-5 Diagnostics Menu

Diagnostics test function allows you to test the major components and verify the basic operations of the selected adapter. It performs many tests for the selected adapter and indicates the result of each test on a report window. Refer to Appendix 4 for more information.

Connectivity Test allows you to test the adapter's ability to transmit and receive data while on the network. To run the test, you need a second computer set up as an echo station. The echo station receives packets from the adapter being tested and echoes (loopback) them back to the adapter over the network.

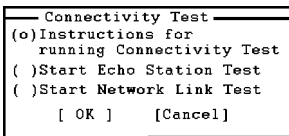

To set up an echo station, follow these steps:

1. Install another adapter which is known to have no problem into a second computer as instructed in Chapter 2.
2. Run SETUP.EXE on that computer.
3. Press [F10] and press [®] to select "Diagnostics" from the main menu.
4. Select "Connectivity Test" and press [Enter].
5. Select "Start Echo Station Test" from "Connectivity Test" pop-up window and press [OK]. The computer becomes an echo station. It will receive every packet with address 00 11 11 11 11 11 and echo the packets back to the adapter from which the packets were sent.

You may start the Connectivity Test for the adapter after an echo station has been set up. Follow these steps:

1. Press [PgDn] or [PgUp] to select the adapter you want to test.
2. Press [F10] and press [®] to select "Diagnostics" from the main menu.
3. To configure the number of packets to be performed for the "Network Link Test" in step 4, you may select "Test Configuration" item from the pop-up menu to enter the number:

```
Number of packets : [xxxxx]
[ OK ] [Cancel]
```

4. Select "Connectivity Test" and press [Enter].
5. Make sure an echo station is ready. Select "Start Network Link Test" from "Connectivity Test" pop-up window and press [OK] to start the test.

```
— Connectivity Test —
( ) Instructions for
   running Connectivity Test
( ) Start Echo Station Test
(o) Start Network Link Test
[ OK ] [Cancel]
```

A status window will report several packet counters as shown below:

```
— Network Link Test —
      Transmit  Receive
Good :   xxxx   xxxx
Bad  :   xxxx   xxxx
Press 'ESC' to stop test
```

The "Transmit" counters indicate the number of good and bad packets which have been sent to the echo station. The "Receive" counters show the number of good and bad packets echoed back from the echo station. This test is also very useful in verifying a path between two computers on the network.

5. LED Indicators

Each Fast Ethernet adapter has three LEDs, as shown in Figure 1-1.

5.1 Interpretations

The interpretations of the LEDs are:

100Mb LED indicates an active 100Mbps connection is established.

On : Good connection between adapter and 100BASE-TX hub

Off : No connection between adapter and hub

Blink: Not applicable

10Mb LED indicates an active 10 Mbps connection is established.

On : Good connection between adapter and 10BASE-T hub

Off : No connection between adapter and hub

Blink : Not applicable

Activity LED indicates packets are being received or transmitted.

Blink : Network traffic is present

On : Not applicable

Off : No traffic for either speed

If you experience any problems, first make sure that the appropriate driver is loaded, the proper cable is connected to the connector, and the hub complies with the adapter specifications (10 Mbps 10BASE-T or 100 Mbps 100BASE-TX). Then recheck the LED.

Appendix

A1. Specifications

Network std.: 10 Mbps IEEE 802.3 10BASE-T Ethernet
100 Mbps IEEE 802.3u 100BASE-TX Fast Ethernet

Dimensions: MX98713 NIC 80mm x 125mm (3.15" x 4.92")
KF223TX NIC 80mm x 125mm (3.15" x 4.92")
RTL8139 NIC 50mm x 120mm (1.97" x 4.72")
KF230TX NIC 50mm x 120mm (1.97" x 4.72")

RTL8139 NIC 50mm x 120mm (1.97" x 4.72")
KF230TX NIC 50mm x 120mm

Environmental: Operating temperature 0° to 40°C
Humidity 10% to 90% non-condensing

Power: MX98713 NIC +5V 500mA max.
KF223TX NIC +5V 500mA max.
RTL8139 NIC +5V
KF230TX NIC +5V

A2. RJ-45 Connector & Cables

Figure A-1 shows the pin assignments of the RJ-45 connector for 10BASE-T and 100BASE-TX network. The pin assignments are identical for 10BASE-T and 100BASE-TX, using Category 5 UTP cable.

<u>Pin</u>	<u>Signal Name</u>
1	Transmit +
2	Transmit -
3	Receive +
4	NC (no connection)
5	NC (no connection)
6	Receive -
7	NC (no connection)
8	NC (no connection)

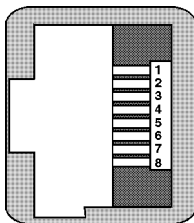


Figure A-1 RJ-45 Connector Pin Assignments

Cabling Requirements:

- 10Mbps** 10BASE-T Ethernet Category 3, 4, or 5 UTP Cable
The maximum distance is 100 meters.
- 100 Mbps** 100BASE-TX Ethernet Category 5 UTP Cable
The maximum distance is 100 meters.

A.3 Auto-negotiation Function

The adapter is equipped with an auto-negotiation function. Auto-negotiation is a negotiation procedure between two connected devices. Both devices must be auto-negotiation capable. The procedure decides the best operation modes that can be used for the data transfer operation between two connected devices. The operation modes includes connection speeds and duplex modes as follows:

Connection speed : **10Mbps or 100Mbps**

Duplex mode : **half-duplex or full-duplex**

Operating at full duplex can increase the network bandwidth to up to 20 Mbps or depending on the connection speed 200 Mbps.

The following table describes how the adapter decides the operation modes when it connects to :

An auto-negotiation device

Speed: via auto-negotiation

Duplex: via auto-negotiation

A non-auto-negotiation device

Speed: auto-sense the connection speed

Duplex: half-duplex as default (*)

* The default could be overwritten by configuration setting or keyword setting of each individual network driver when the driver is loaded.

A.4 Diagnostics Report

When running "Diagnostics" from the SETUP program, the program indicates the result of each test on the Diagnostics Report window. Depending on the adapter model, the report window is shown as follows:

Diagnostics Report	
Internal Loopback	Test--Pass
ISR	Test--Pass
CSR Register	Test--Pass
EEPROM	Test--Pass
Perfect	Test--Pass
Inverse	Test--Pass
Hash	Test--Pass
HashOnly	Test--Pass
MultiPkt	Test--Pass
Burst_len	Test--Pass

MX98713 NIC

Diagnostics Report	
Controller	Test--Pass
Interrupt	Test--Pass
Node ID	Test--Pass
EEPROM	Test--Pass
100Mbps Loopback	Test--Pass
10Mbps Loopback	Test--Pass
Cable Link	Test--Pass

RTL8139 NIC

A.5 Installing Remote Boot ROM

Before you can use the remote boot function, you have to setup the remote boot service on the file server and install the remote boot ROM onto the adapter.

To install the boot ROM, make sure the notch of the boot ROM is in the same direction as the notch of the socket on the adapter. The remote boot ROM socket is labeled U5 on the MX98713 NIC or it is labeled U2 on the RTL8139 NIC.

Refer to the \BOOTROM subdirectory in the driver diskette for more detailed instructions on how to setup the remote boot service on a file server.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>