


Trakita

アメリカ

GENERATOR

MODEL : G2410R
G3510R
G3511R
G5710R
G5711R

INSTRUCTION MANUAL

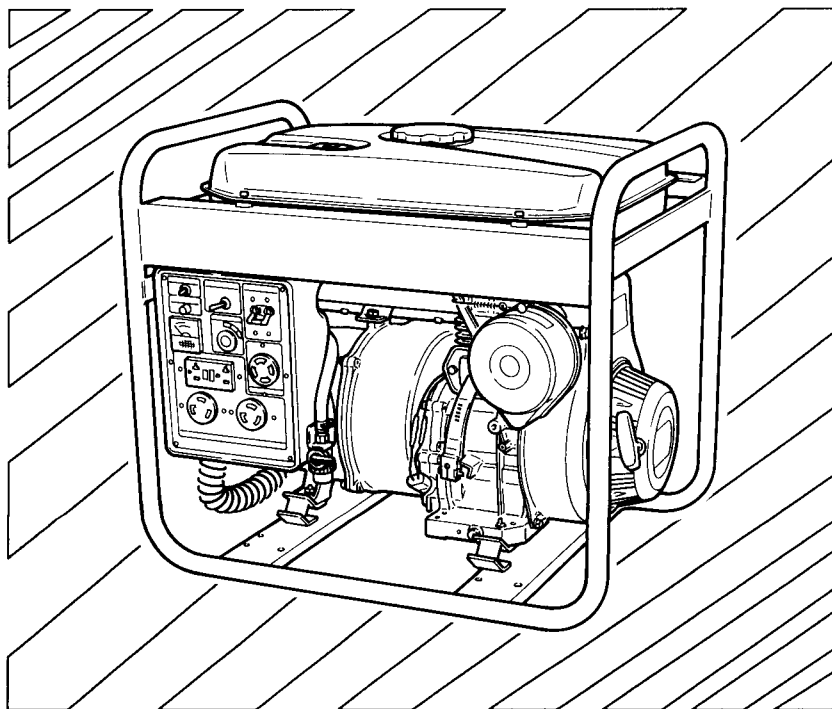

ISSUE EMD-GU0937

3ZZ9020055



WARNING :



The engine exhaust from this product contains chemicals known to the State of California to cause cancer, birth defects or other reproductive harm.

California Emission Control Warranty Statement

[This warranty does not apply in any other state.]

YOUR WARRANTY RIGHTS AND OBLIGATIONS

The California Air Resources Board and Makita U.S.A., Inc. are pleased to explain the emission control warranty on your 1995 utility and /or lawn and garden equipment engine. In California, new utility and lawn and garden equipment engines must be designed, built and equipped to meet the State's stringent anti-smog standards. Makita U.S.A., Inc. must warrant the emission control system on your utility and/or lawn and garden equipment engine for the periods of time listed below provided there has been no abuse, neglect or improper maintenance of your utility and/or lawn and garden equipment engine.

Your emission control system includes parts such as the carburetor or fuel injection systems, the ignition system and the catalytic converter. Also included are the hoses, and connectors and other emission-related assemblies.

Where a warrantable condition exists, Makita U.S.A., Inc. will repair your utility and/or lawn and garden equipment at no cost to you including diagnosis, parts and labor.

MANUFACTURER'S WARRANTY COVERAGE :

The 1995 and later utility and/or lawn and garden equipment engines are warranted for two years. If any emission-related part on your engine is defective, the part will be repaired or replaced by Makita U.S.A., inc.

OWNER'S WARRANTY RESPONSIBILITIES :

As the utility and lawn and garden equipment engine owner, you are responsible for the performance of the required maintenance listed in your owner's manual. Makita U.S.A., Inc. recommends that you retain all receipts covering maintenance on your utility and /or lawn and garden equipment engine, but Makita U.S.A., Inc. cannot deny warranty solely for the lack of receipts or for your failure to ensure the performance of all scheduled maintenance.

As the utility and/or lawn and garden equipment engine owner, you should be aware, however, that Makita U.S.A., Inc. may deny you warranty coverage if your utility and/or lawn and garden equipment engine or a part has failed due to abuse, neglect, improper maintenance or unapproved modifications.

You are responsible for presenting your utility and/or lawn and garden equipment engine to a Makita U.S.A., inc. service center as a problem exists. The warranty repairs should be completed in a reasonable time, not to exceed 30 days.

If you have any questions regarding your warranty rights and responsibilities, you should contact a Makita Factory Service Center Manager nearest you. A list of the Factory Service Center locations and phone numbers is provided below for your convenience.

LIMITED WARRANTY

—California Only—

Makita U.S.A., Inc., a distributor of utility and lawn and garden equipment in the U.S., warrants to the owner of 1995 and later utility and/or lawn and garden equipment engines that the engine(1) has been designed, built, and equipped at the time of manufacture so as to conform with the applicable regulations of the California Air Resources Board and, (2) is free from defects in materials and workmanship which may cause it to fail to conform with those regulations as applicable according to the terms and conditions stated below.

WARRANTY PERIOD

The warranty period begins on the date which the utility and/or lawn and garden equipment engine is delivered to the original retail purchaser and ends two years after that date. During this two year period Makita U.S.A., inc. warrants to the original retail purchaser and each subsequent purchaser that the engine is free from defect in material and workmanship that can cause the failure of a warranted emission-related part.

WHAT IS COVERED UNDER THIS WARRANTY

Repair and/or replacement of any warranted emission-related part will be performed at no charge provided the work is performed at an authorized warranty station. There will also be no charge for any diagnostic labor performed at an authorized warranty station which leads to the determination that a warranted emission-related part is defective.

Any warranted part which is not scheduled for replacement as required maintenance, or which is scheduled only for regular inspection to the effect of "repair or replace as necessary" shall be warranted for the warranty period. Any warranted part which is scheduled for replacement as required maintenance shall be warranted for the period of time up to the first scheduled replacement of that part. This warranty shall apply only towards the repair, replacement, and/or adjustment of the component parts listed below.

EMISSION-RELATED PARTS COVERED UNDER THIS WARRANTY

1. Fuel Metering Systems
 - (a) Carburetor and its internal parts
2. Ignition Systems
 - (a) Spark plug
 - (b) Flywheel Magneto
 - (c) Ignition Coil
3. Other Miscellaneous Items Used in Above Systems
 - (a) Fuel Hoses
 - (b) Sealing Gaskets

If it is determined by an authorized warranty station that other engine components have been damaged due to the failure of a warranted emission-related part during the warranty period, Makita U.S.A., Inc. will repair and/or replace the necessary components.

WHAT IS NOT COVERED UNDER THIS WARRANTY

This warranty does not cover any emission-related part which malfunctions, fails, or is damaged due to alterations and/or modifications such as changing, adding, or removing parts.

When an engine is being serviced under warranty, Makita U.S.A., Inc. and any of its authorized dealers, distributors, or warranty stations shall not be liable for any loss of use of the engine, for any damage to goods, or loss of time or inconvenience.

This limited warranty also does not apply to any emission-related part which malfunctions, fails, or is damaged due to failure to follow the maintenance and operating instructions specified in the 1995 and later Owner's Manual including.

- (a) Improper or inadequate maintenance of any warranted emission-related part.
- (b) Improper installation, adjustment, or repair of the engine or any warranted emission-related part unless performed by a factory authorized warranty station.
- (c) Failure to use recommended fuel as specified in the 1995 and later Owner's Manual.
- (d) Repairs and diagnosis performed outside of an authorized warranty station.
- (e) Use of parts which are not authorized by Makita U.S.A., Inc.

MAINTENANCE SCHEDULE

The engine owner is responsible for having all scheduled inspection and maintenance services performed at the intervals specified in the 1995 and later Owner's Manual and to retain records of these services as having been performed. These records should be transferred to each subsequent owner of the engine. Makita U.S.A., Inc. cannot deny a claim solely because there are no records of scheduled maintenance, however, a warranty claim may be denied if the failure to perform the scheduled maintenance and inspection resulted in the failure of a warranted emission-related part. As a minimum, the engine owner is responsible for the scheduled inspection and maintenance described below which are based on the procedures described in the Owner's Manual.

PROCEDURE

INTERVAL

- | | |
|--|-------------------------------------|
| (a) Check all nuts and bolts and tighten as necessary. | Every 8 hours of use or daily. |
| (b) Check air passages and engine cylinder fins for clogging. Remove all obstructions as necessary. | Every 8 hours of use or daily. |
| (c) Check air cleaner. | Every 8 hours of use or daily. |
| (d) Check spark plug. Clean and adjust if necessary. | Every 8 hours of use or daily. |
| (e) Check muffler exhaust port. Clean if necessary. | Every 50 hours of use or monthly. |
| (f) Replace fuel lines. | Every 200 hours of use or annually. |
| (g) Overhaul engine. | Every 200 hours of use or annually. |
| (h) Replace packings and gaskets. | Every time engine is reassembled. |

REPAIR AND REPLACEMENT OF EMISSION-RELATED PARTS

It is recommended that only engine replacement parts which have been authorized and approved by Makita U.S.A., Inc. should be used in the performance of any warranty maintenance or repairs of emission-related parts. These replacement parts will be provided at no charge if the part is still under warranty.

HOW TO FILE A WARRANTY CLAIM AND WHERE TO GET WARRANTY SERVICES

Contact the nearest Makita Factory Service Center Manager to determine the appropriate location where the required warranty services are to be performed. A list of the Factory Service Center locations and phone numbers are provided below for your convenience.

14930-B Northam Street
La Mirade, CA 90638
(714) 522-8088

41850 Christy Street
Fremont, CA 94538
(510) 657-9881

1401 N.Clovis Ave., Ste. 110
Fresno, CA 93727
(209) 252-5166

4554 Roseville Rd., Ste. E
North Highlands, CA 95660
(916) 331-6211

392 S. Arrowhead, #A-1
San Bernardino, CA 92408
(714) 885-1289

7674 Clairemont Mesa Blvd.
San Diego, CA 92111
(615) 278-4471

180 S Spruce Ave., Unit D
South San Francisco, CA 94080
(415) 875-1002

15722-B Tustin Village Way
Tustin, CA 92680
(714) 667-5066

16735 Saticoy St., Ste. 105
Van Nuys, CA 91406
(818) 782-2440

Thank you for purchasing a Robin generator.

This manual covers operation and maintenance of the Robin generators. All information in this publication is based on the latest production information available at the time of approval for printing.

Pay special attention to statements preceded by the following words:

 **WARNING**

Indicates a strong possibility of severe personal injury, loss of life and equipment damage if instructions are not followed.

[CAUTION]

Indicates a possibility of personal injury or equipment damage if instructions are not followed.

NOTE:

Gives helpful information.

If a problem should arise, or if you have any questions about the generator, consult an authorized dealer or factory service center.

 **WARNING**

- **The generator is designed to give safe and dependable service if operated according to instructions.**
- **Do not operate the generator before you have read and understood the instructions. Failure to do so could result in death, personal injury or equipment damage.**

CONTENTS

| | |
|---|----|
| 1. SAFETY PRECAUTIONS | 1 |
| 2. SPECIFICATIONS | 3 |
| 3. COMPONENTS | 4 |
| 4. PRE-OPERATION CHECKS | 5 |
| 5. OPERATING PROCEDURES | 9 |
| 6. WATTAGE INFORMATION | 19 |
| 7. MAINTENANCE SCHEDULE | 21 |
| 8. "HOW-TO" MAINTENANCE | 23 |
| 9. PREPARATION FOR STORAGE | 25 |
| 10. TROUBLESHOOTING | 26 |
| 11. WIRING DIAGRAM | 27 |
| 12. ELECTRIC STARTER (G3511R, G5711R) | 33 |

1. SAFETY PRECAUTIONS

- ⚠ Do not operate the generator near gasoline or gaseous fuel because of the potential danger of explosion or fire.
Do not fill the fuel tank with fuel while the engine is running. Do not smoke or use open flame near the fuel tank. Be careful not to spill fuel during refueling. If fuel is spilt, wipe it off and let dry before starting the engine.
- ⚠ Do not place inflammables near the generator.
Be careful not to place fuel, matches, gunpowder, oily cloths, straw, trash, or any other inflammables near the generator.
- ⚠ Do not operate the generator inside a room, cave, tunnel, or other insufficiently ventilated area. Always operate it in a well-ventilated area, otherwise the engine may become overheated, and the poisonous carbon monoxide gas contained in the exhaust gases will endanger human lives. Keep the generator at least 1 meter (3 feet) away from any structure or building during use.
If the generator must be used indoors, the area must be well-ventilated and extreme caution must be taken regarding the discharge of exhaust gases.
- ⚠ Do not enclose the generator nor cover it with a box.
The generator has a built-in forced air cooling system, and may become overheated if it is enclosed. If generator has been covered to protect it from the weather during non use, be sure to remove it and keep it well away from the area during generator use.
- ⚠ Operate the generator on a level surface.
It is not necessary to prepare a special foundation for the generator. However, the generator will vibrate on an irregular surface, so choose a level place without surface irregularities.
If the generator is tilted or moved during operation, fuel may spill and/or the generator may tip over, causing a hazardous situation.
Proper lubrication cannot be expected if the generator is operated on a steep incline or slope. In such a case, piston seizure may occur even if the oil is above the upper level.
- ⚠ Pay attention to the wiring or extension cords from the generator to the connected device.
If the wire is under the generator or in contact with a vibrating part, it may break and possibly cause a fire, generator burnout, or electric shock hazard.
Replace damaged or worn cords immediately.
- ⚠ Do not operate in rain, in wet or damp conditions, or with wet hands.
The operator may suffer severe electric shock if the generator is wet due to rain or snow.

-
- ⚠ If wet, wipe and dry it well before starting.
Do not pour water directly over the generator, nor wash it with water.
 - ⚠ Be extremely careful that all necessary electrical grounding procedures are followed during each and every use. Failure to do so can be fatal.
 - ⚠ Do not contact the generator to a commercial power line. Connection to a commercial power line may short circuit the generator and ruin it or cause electric shock hazard.
Use the transfer switch for connecting to domestic circuit.
 - ⚠ No smoking while handling the battery.
The battery emits flammable hydrogen gas, which can explode if exposed to electric arcing or open flame.
Keep the area well-ventilated and keep open flames/sparks away when handling the battery.
 - ⚠ Engine becomes extremely hot during and for some time after operation.
Keep combustible materials well away from generator area.
Be very careful not to touch any parts of the hot engine especially the muffler area or serious burns may result.
 - ⚠ Keep children and all bystanders at a safe distance from work areas.
 - ⚠ It is absolutely essential that you know the safe and proper use of the power tool or appliance that you intend to use. All operators must read, understand and follow the tool/appliance owners manual. Tool and appliance and limitations must be understood. Follow all directions given on labels and warnings.
Keep all instruction manuals and literature in a safe place for future reference.
 - ⚠ Use only "LISTED" extension cords.
When a tool or appliance is used outdoors, use only extension cords marked "For Outdoor Use". Extension cords, when not in use should be stored in a dry and well ventilated area.
 - ⚠ Always switch off generator's AC breaker and disconnect tools or appliances when not in use, before servicing, adjusting, or installing accessories and attachments.


2. SPECIFICATIONS

| MODEL | | G2410R | G3510R | G3511R | G5710R | G5711R |
|---------------------|-----------------------------|---|-----------------------|-----------------------|-----------------------|----------|
| ALTERNATOR | Type | Brushless, Self-Exciting, 2-Poles, Single Phase | | | | |
| | AC Voltage | 60Hz-120V | 60Hz-120V/240V | | | |
| | Maximum AC Output | 2,400W 20A | 3,500W 29.2A/14.6A | | 5,700W 47.5A/23.8A | |
| | Reted AC Output | 2,000W 16.7A | 3,000W 25A/12.5A | | 4,800W 40A/20A | |
| | DC Voltage | 12V-8.3A | | | | |
| | Condenser Voltage Regulator | Standard | | | | |
| | Power Factor | 1.0 | | | | |
| | Full Power Switch | N.A. | Standard | | | |
| | AC Breakers | Standard | | | | |
| | Full Roll Frame | Standard | | | | |
| ENGINE | Type | Robin EH17D | Robin EH25D | | Robin EH34D | |
| | Displacement | 172 cc | 251 cc | | 338 cc | |
| | Maximum Hp/r.p.m | 6.0/4,000 | 8.5/4,000 | | 11.0/3,600 | |
| | Fuel | Automobile Gasoline | | | | |
| | Tank Capacity (US) | 3.17 gal. | 4.39 gal. | | 4.89 gal. | |
| | Rated Continuous Operation | 8.9 hours | 7.6 hours | | 6.3 hours | |
| | Easy Start Recoil | Standard | | | | |
| | Electric Start | N.A. | N.A. | Standard | N.A. | Standard |
| | Oil Sensor | Standard | | | | |
| | Auto Idle | N.A. | Standard | | | |
| | Muffler | USDA approved Spark Arrestyer Muffler | | | | |
| Dimensions L×W×H | 22.4 x 16.1 x 19.3 | 24.4 x 17.7 x 21.3 | 33.7 x 17.7 x 21.3 | 27.2 x 18.9 x 23.2 | 33.7 x 18.9 x 23.2 | |
| Dry Weight | 99 lbs | 132 lbs | 139 lbs | 172 lbs | 178 lbs | |

* Manufacturer reserves the right to change specifications of parts and accessories without notice.

* Note : Specifications of parts and accessories may differ from country to country.

3. COMPONENTS

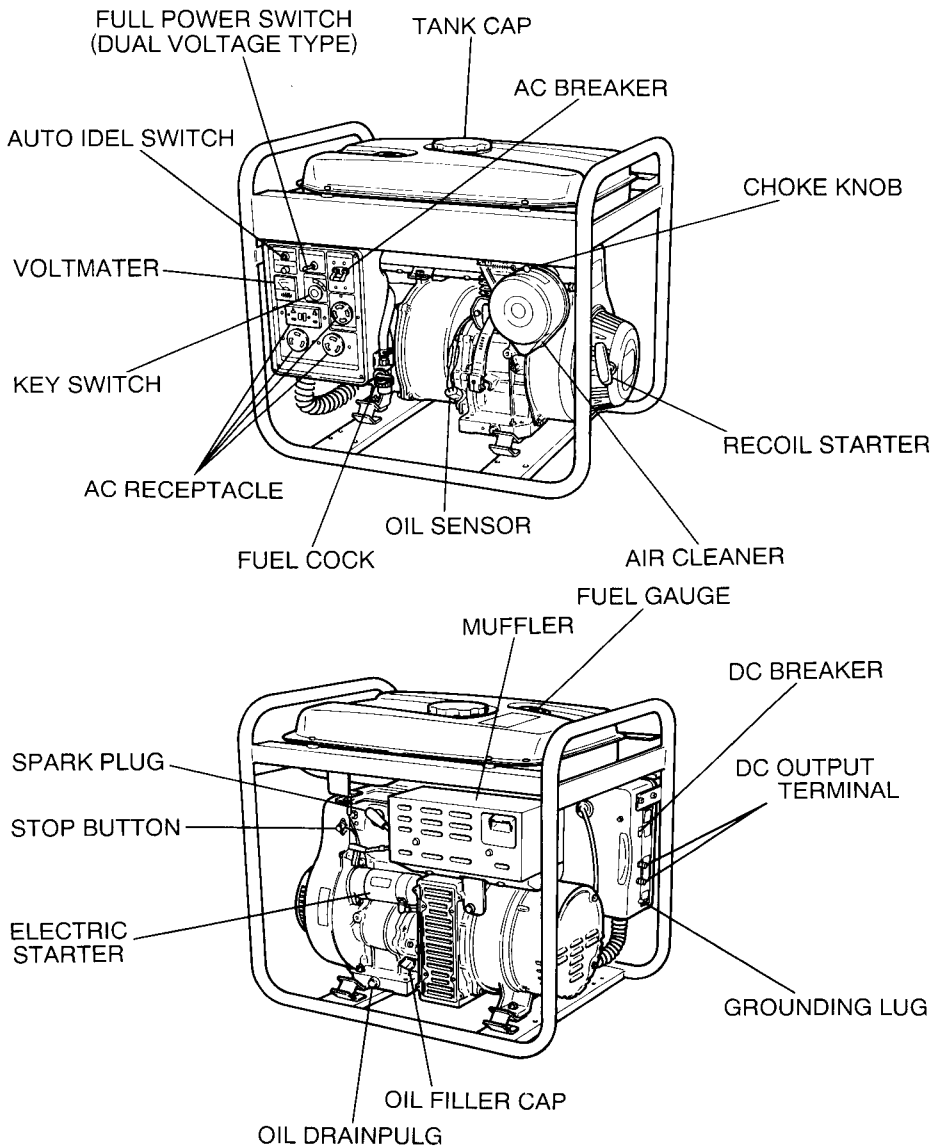


4. PRE-OPERATION CHECKS

CHECK ENGINE OIL.


Before checking or refilling oil, be sure generator is located on stable and level surface with engine stopped.

- Remove oil filler cap and check the engine oil level.
- If oil level is below the lower level line, refill with suitable oil (see table) to upper level line. Do not screw in the oil filler cap when checking oil level.
- Change oil if contaminated. (See "How-To" Maintenance.)

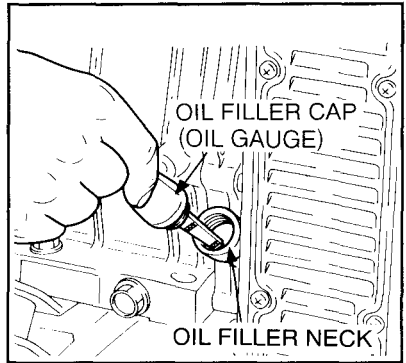

Oil capacity

| Model | Upper level |
|-------------------|------------------------|
| G2410R | 0.65 liter(1.38 pints) |
| G3510R,G3511R ... | 1.0 liter(2.13 pints) |
| G5710R,G5711R ... | 1.2 liter(2.54 pints) |

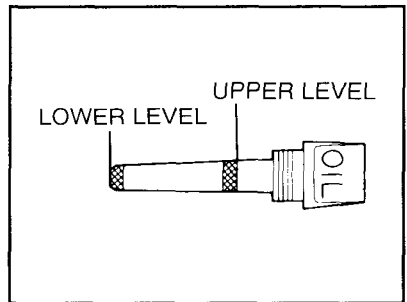

Recommended engine oil :

Use class SC (API classification) oil or a higher grade oil according to the table below. SAE 10W-30 or 10W-40 is recommended for general, all-temperature use. If single viscosity oil is used, select the appropriate viscosity for the average temperature in your area.


| | | | | | | | | |
|----------------------------|---------------|-----|----|----|----|----|-------|--|
| Single grade | 5W | | | | | | | |
| | 10W | | | | | | | |
| | 20W | | | | | | | |
| | # 20 | | | | | | | |
| | # 30 | | | | | | | |
| Multigrade | # 40 | | | | | | | |
| | 10W-30 | | | | | | | |
| 10W-40 | | | | | | | | |
| Ambient temperature | -20 | -10 | 0 | 10 | 20 | 30 | 40°C | |
| | -4 | 14 | 32 | 50 | 68 | 86 | 104°F | |

CHECK ENGINE FUEL.

⚠ WARNING

- Do not refuel while smoking or near open flame or other such potential fire hazards. Otherwise fire accident may occur.

- Check fuel level at fuel level gauge.
- If fuel level is low, refill with unleaded automotive gasoline.

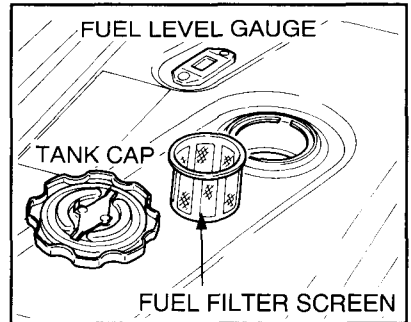


- Fuel tank capacity:

G2410R 12.0 liter (3.17gal.)

G3510R,G3511R ... 16.6 liter (4.38gal.)

G5710R,G5711R ... 19.0 liter (5.02gal.)

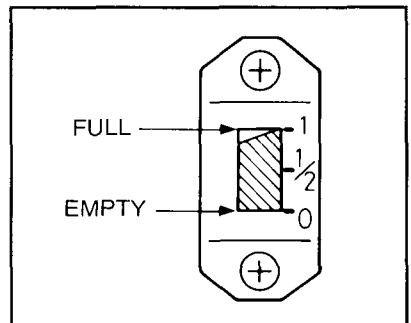

⚠ WARNING

Make sure you review each warning in order to prevent fire hazard.

- Do not refill tank while engine is running or hot.
- Close fuel cock before refueling with fuel.
- Be careful not to admit dust, dirt, water or other foreign objects into fuel.
- Wipe off spilt fuel thoroughly before starting engine.
- Keep open flames away.

CHECKING COMPONENT PARTS

Check following items before starting engine :

- Fuel leakage from fuel hose, etc.
- Bolts and nuts for looseness.
- Components for damage or breakage.
- Generator not resting on or against any adjacent wiring.

CHECK GENERATOR SURROUNDINGS.



⚠ WARNING

Make sure you review each warning in order to prevent fire hazard.

- Keep area clear of inflammables or other hazardous materials.
- Keep generator at least 3 feet (1meter) away from buildings or other structures.
- Only operate generator in a dry, well ventilated area.
- Keep exhaust pipe clear of foreign objects.
- Keep generator away from open flame. **No smoking!**
- Keep generator on a stable and level surface.
- Do not block generator air vents with paper or other material.

2. GROUNDING THE GENERATOR

- To ground the generator to the earth, connect the grounding lug of the generator to the grounding spike driven into the earth or to the conductor which has been already grounded to the earth.
- If such grounding conductor or grounding electrode is unavailable, connect the grounding lug of the generator to the grounding terminal of the using electric tool or appliance.

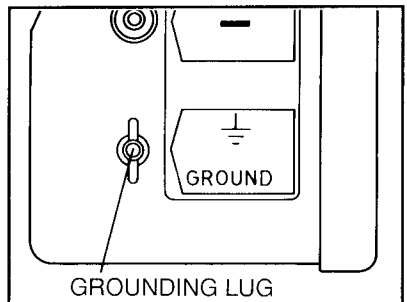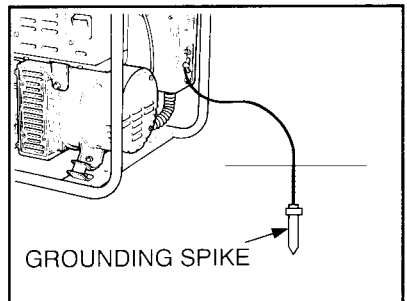

NOTE :

The National Electrical Code (NEC) requires that all separately derived AC systems be grounded per Article 250-26. Manufacturer has added a grounding lug type terminal per Article 250-26 (a) from the noncurrent-carrying metal parts to the conductor to be grounded. Manufacturer does not supply the required grounding conductor or grounding electrode because it would be impossible to cover every exception and all local code requirements. See your local codes and the NEC manual for the proper grounding for your application.





5. OPERATING PROCEDURES

1. STARTING THE ENGINE

[CAUTION]

- Check the oil level before each operations as outlined on page 5.



- Open the fuel cock.
- Pull choke knob to close (choke cold start) position.
- Make sure that the "Auto Idle" switch is in the "OFF" position.
- Pull the starter handle slowly until resistance is felt. This is the "Compression" point. Return the handle to its original position and then pull swiftly.
 - If the engine fails to start after several attempts, repeat above procedures with choke knob returned to "OPEN" position.
 - Do not fully pull out the rope.
 - After starting, allow the starter handle to return to its original position while still holding the handle.
- After the engine started, return the choke knob gradually to "OPEN" position.
- Warm up the engine without a load for a few minutes.

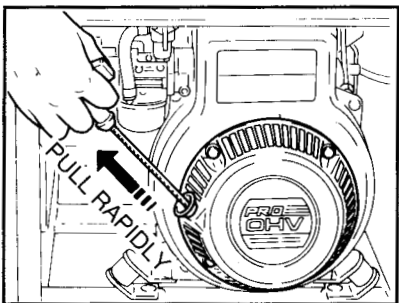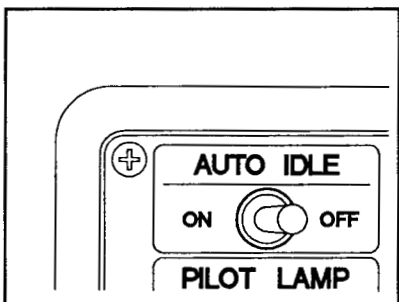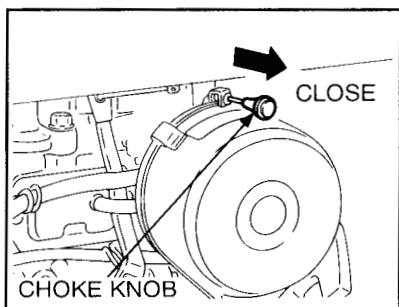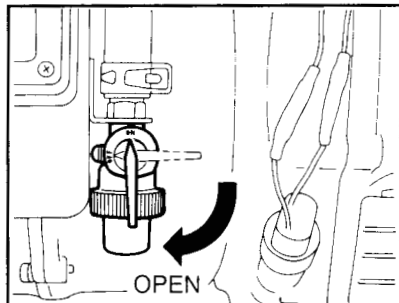

2. USING ELECTRIC POWER

(1) AC APPLICATION

| | | |
|---|---------------------|--------|
| A | Single Voltage Type | G2410R |
|---|---------------------|--------|

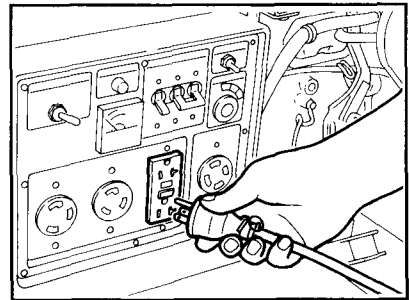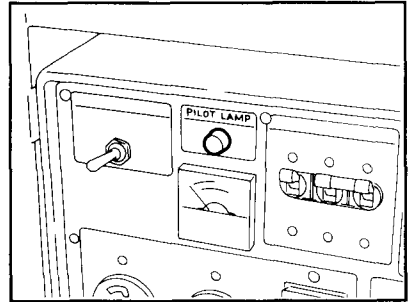

- (a) Check the pilot lamp for proper voltage.
 - This generator is thoroughly tested and adjusted in the factory. If the generator does not produce the specified voltage, consult your nearest Makita factory or authorized service center.
- (b) Turn off the switch(es) of the electrical appliance(s) before connecting to the generator.
- (c) Insert the plug(s) of the electrical appliance(s) into the receptacle.
- (d) Switch on AC Breaker.

- Check the amperage of the receptacles used referring to **TABLE 1**, and be sure not to use a tool requiring a current exceeding the specified amperage in the TABLE.
- Be sure that the total wattage of all appliances dose not exceed the rated output of the generator.





| Style | Ampere | Receptacle | AC plug | Description |
|---|-----------|--------------|--------------|--|
|  | up to 20A | NEMA 5-20R | NEMA 5-20P | GFCI (Ground Fault Circuit Interrupter) Receptacle, duplex |
|  | up to 20A | NEMA L14-20R | NEMA L14-20P | Locking Receptacle |
|  | up to 30A | NEMA L5-30R | NEMA L5-30P | Locking Receptacle |
|  | up to 20A | NEMA L5-20R | NEMA L5-20P | Locking Receptacle |

TABLE 1

WARNING

- Be sure to ground the generator if the connected electrical equipment is grounded as instructed on page 7.
- If tool or appliance to be operated is grounded type (3 prong plug), be sure to use only extension cords that are also 3 wire, grounded type.

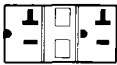NOTE :

When the AC breaker turns off during operation, the generator has been overloaded or the appliance is defective.

Stop the generator immediately, check the appliance and/or generator for overloading or detect and have repaired as necessary by Makita factory or authorized service center.

[CAUTION]

The duplex 120V receptacle is protected by a GFCI (Ground Fault Circuit Interrupter).

GFCI shuts of the output current from the duplex 120V receptacle when a ground fault occurs in the generator or the appliance.

WARNING

- Please note that other receptacles are **NOT** protected by GFCI..

PRECAUTIONS FOR USING THE GFCI RECEPTACLES



After starting the engine, check the GFCI for proper functioning by the following test procedure.

- Push TEST button. The RESET button will pop out exposing the word TRIP. Power is now off at the outlets protected by the GFCI, indicating that the device is functioning properly.
- If TRIP does not appear when testing, do not use the generator. Call a qualified electrician or have generator repaired at Makita factory or authorized service center.
- To restore power, push RESET button.

⚠ WARNING


If the **RESET** button pops out during operation, stop the generator immediately and call a qualified electrician to check generator and the appliances. Failure to do so may result in electric shock hazard or loss of life.

- (d) Check the AC breaker is "ON".
If the breaker is "OFF", set the breaker "ON".

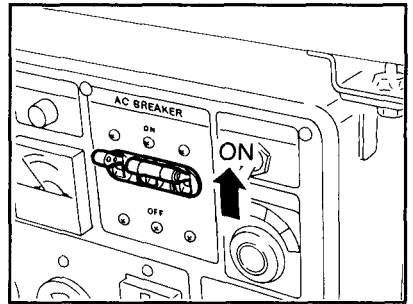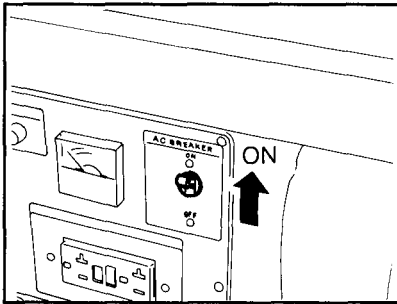

| | | |
|----------|--------------------------|--|
| B | Dual Voltage Type | G3510R,G3511R G5710R,G5711R |
|----------|--------------------------|--|

- (a) Select the voltage using the **FULL POWER SWITCH** in accordance with the electrical appliance. Refer to **TABLE 2**.
(b) Operate in the same way as step (a) through step (d) of single voltage type.

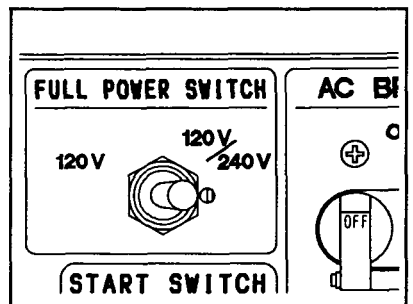

NOTE :


Voltmeter always indicates the lower voltage whichever the FULL POWER SWITCH is set.

| Switch | Lower Voltage Receptacle | Higher Voltage Receptacle |
|----------|---|--------------------------------|
| 120V | Full rated output is available | unavailable |
| 120/240V | half of rated output watts is available | Full rated output is available |

TABLE 2

⚠ WARNING

- To utilize power from TWIST LOCK-receptacle, insert the plug into receptacle and turn clockwise to lock it.
- Be sure to ground the generator if the connected electrical equipment is grounded as instructed on page 7.
- If tool or appliance to be operated is grounded type (3 prong plug), be sure to use only extension cords that are also 3 wire, grounded type.

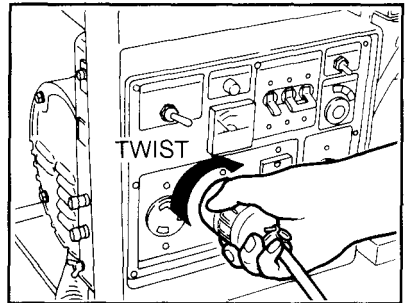**NOTE :**

When the AC breaker turns off during operation, the generator has been overloaded or the appliance is defective.

Stop the generator immediately, check the appliance and/or generator for overloading or detect and have necessary repairs made by Makita factory or authorized service center.

(2) CONNECTING TO DOMESTIC CIRCUITS (HOUSE WIRING)

⚠ WARNING

All Makita generators are a neutral ungrounded type.

If a generator is to be connected to residential or commercial power lines, such as a stand-by power source during power outage, all connections must be made by a licensed electrician.

Failure in connection may result in death, personal injury, damage to generator, damage to appliances, damage to the building's wiring or fire.

(a) When connecting a Makita generator to a house wiring, generator output power must be taken from the 240V-4P receptacle.


(b) Install a transfer switch.


A transfer switch must be installed to transfer the load from the commercial power source to the generator. This switch is necessary to prevent accidents caused by the recovery from power outage. Use a transfer switch of the correct capacity.

Install transfer switch between the meter and the fusee or AC breaker box.

[CAUTION]

- IF the neutral wire of house wiring is grounded, be sure to ground the ground terminal of the generator. Otherwise an electric shock may occur to the operator.

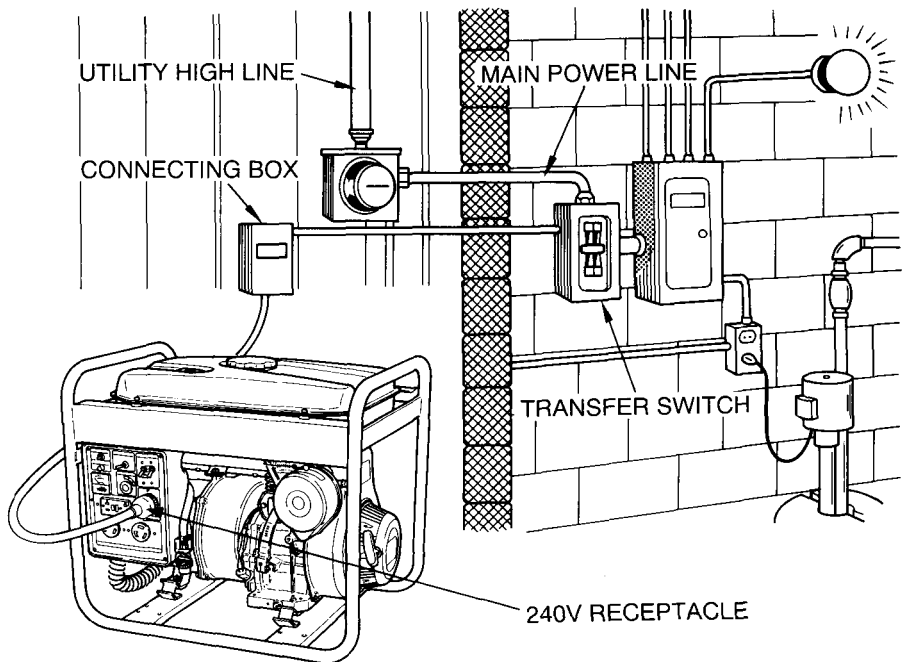

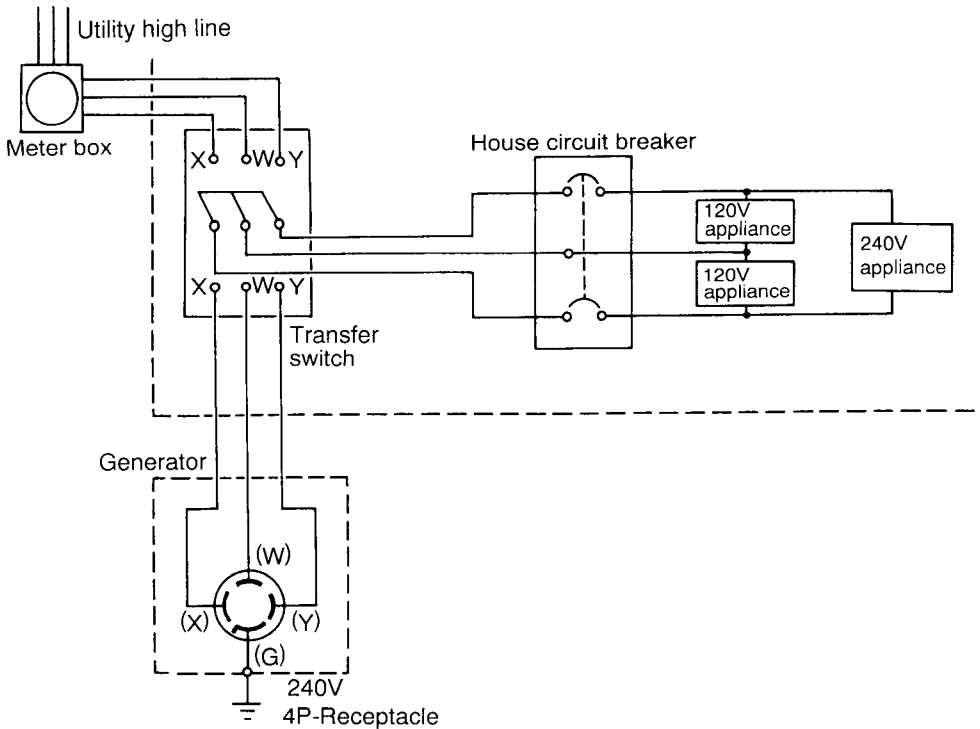

(c) Operating the Generator.

- Set the full power switch to 120V/240V side.
- Turn the house AC breaker off before starting the generator.
- Start the generator and warm it up.
- Turn the house AC breaker on.


[CAUTION]

- **Do not start the generator with electrical appliance(s) connected and with their switches on. Otherwise the appliance(s) may be damaged by the surge voltage at starting.**

(3) DC APPLICATION

DC output capacity of generator is 12V-8.3A (100W).

- Connect positive (red) terminal on generator to position (+) terminal on battery.
- Connect negative (black) terminal on generator to negative (-) terminal on battery.
- Both AC and DC output can be used at the same time if the total output is within rated output of the generator.

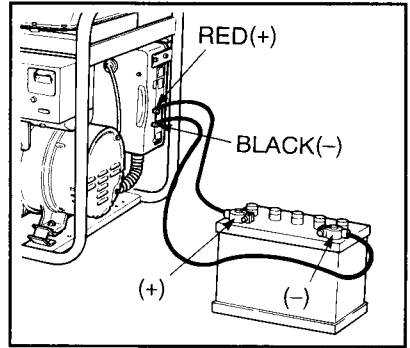

SAFETY PRECAUTIONS WHILE CHARGING


- An explosive hydrogen gas is discharged through vent holes in the battery during the charging process. Do not allow spark or open flame around the generator or battery during the charging process.
- Electrolyte fluid can burn eyes and clothing. Be extremely careful to avoid contact. If injured, wash the affected area immediately with large quantities of water and consult a doctor for treatment.
- When charging a large capacity battery or totally discharged battery, excessive current may force the DC fuse to blow out. In such cases, use a battery charger to charge a large battery with AC output.
- Battery defects may cause the DC fuse to blow. Check the battery before replacing the fuse.

(4) FUSE REPLACEMENT

- (a) If a fuse burns out, check for the cause of trouble, and make the necessary repairs before installing the new fuse.
- (b) Be sure to use the correct fuse. An incorrect fuse may cause damage to the generator.
- (c) The fuse rating for DC output is 10A.


3. STOPPING THE GENERATOR

- (a) Switch off generator's AC breaker.
- (b) Turn off the power switch of the electric equipment and unplug the cord from receptacle of the generator.
- (c) Allow the engine about 3 minutes to cool down at no-load before stopping.
- (d) Push the stop button until the engine stops.
- (e) Close the fuel cock.

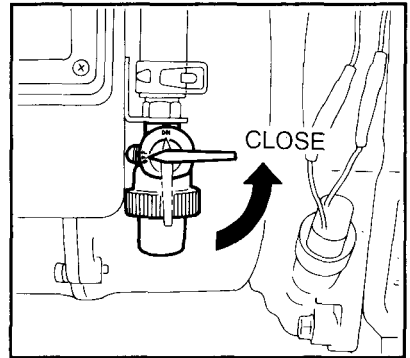

4. OIL SENSOR

- (a) The oil sensor detects the fall in oil level in the crankcase and automatically stops the engine when the oil level falls below a predetermined level.
- (b) When engine has stopped automatically, switch off generator's AC breaker, check the oil level. Refill engine oil to the upper level as instructed on page 5 and restart the engine.
- (c) If the engine does not start by usual starting procedures, check the oil level.

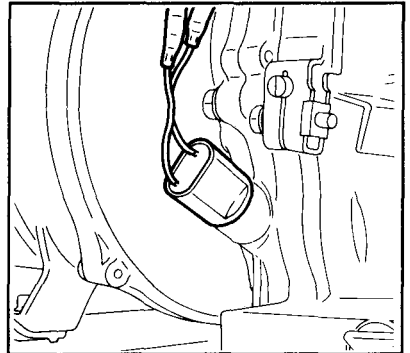

[CAUTION]

- Do not remove OIL SENSOR PROBE when refilling with oil. Remove oil filler cap on the opposite side of carburetor.

5. AUTO IDLE (G3510R, G3511R, G5710R, G5711R)

AUTO IDLE automatically reduces engine speed when load is OFF, and automatically increases engine speed to rated r.p.m. when load is ON.

AUTO IDLE provides fuel economy and low noise operation at no-load running.


(1) HOW TO USE AUTO IDLE

- Start the engine with AUTO IDLE SWITCH off.

NOTE :

Warm up the engine without a load for a few minutes.

- Turn AUTO IDLE SWITCH on.

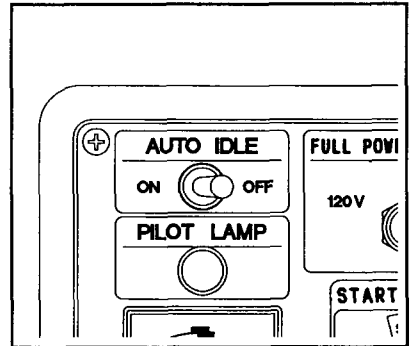

(2) CHECKING THE OPERATION

When AUTO IDLE does not operate normally, please check following :

- Overloadede ?

Please make it sure that the generator is not overload.

NOTE :

Most induction loads such as electric motors require three to five times more wattage than their ratings during starting.

This starting wattage should not exceed the rated output of the generator for proper operation of AUTO IDLE.

- Turn AUTO IDLE SWITCH off when the AUTO IDLE does not work normally under the rated output.

NOTE :

The AUTO IDLE may not operate when the applied load is under 40W. In such cases turn the AUTO IDLE SWITCH off.

(3) STOPPING THE ENGINE

- Turn off the switch of load.
- Switch off generator's AC breaker.
- Disconnect tool or appliance.
- Turn the AUTO IDLE SWITCH off.
- Push STOP SWITCH to stop.

NOTE :

Allow the engine about 3 minutes to cool down at no-load before stopping.

6. WATTAGE INFORMATION

Some appliances need a "surge" of energy when starting. This means that the amount of electrical power needed to start the appliance may exceed the amount needed to maintain its use. See the chart on page 15 for appliances you may use with this generator.

Electrical appliances and tools normally come with a label indicating voltage, cycles/Hz, amperage (amps) and electrical power needed to run the appliance or tool. Check with your nearest dealer or service center with questions regarding power surge of certain appliances or power tools.

- Electrical loads such as incandescent lamps and hot plates require the same wattage to start as is needed to maintain use.
- Loads such as fluorescent and mercury lamps require 1.2 to 2 times the indicated wattage during start-up.
- Electrical motors require a large starting current. Power requirements depend on the type of motor and its use. Once enough "surge" is attained to start the motor, the appliance will require only 50% to 30% of the wattage to continue running.
- Most electrical tools require 1.2 to 3 times their wattage for running under load during use. For example, a 5,000 watt generator can power a 1800 to 4000 watt electrical tool.
- Loads such as submersible pumps and air compressors require a very large force to start. They need 3 to 5 times the normal running wattage in order to start. For example, a 5,000 watt generator would only be able to drive a 1,000 to 1,700 watt pump.

NOTE :

The following wattage chart is general guide only. Refer to your specific appliance for correct wattage.

To determine the total wattage required to run a particular electrical appliance or tool, multiply the voltage figure of the appliance/tool by the amperage (amps) figure of same. The voltage and amperage (amps) information can be found on a name plate which is normally attached to electrical appliances and tools.

| Applications | Applicable Wattage (W) | | |
|--------------------------------|------------------------|------------------|------------------|
| | G2410R | G3510R G3511R | G5710R G5711R |
| | 60Hz | 60Hz | 60Hz |
| Incandescent lamp, heater | 2,000 | 3,000 | 4,800 |
| Fluorescent lamp, mercury lamp | 1,200 | 1,800 | 2,900 |
| Electric tool | 1,200 | 1,800 | 2,900 |
| Pump, compressor | 500 | 700 | 1,100 |

VOLTAGE DROP IN ELECTRIC EXTENSION CORDS

When a long electric extension cord is used to connect an appliance or tool to the generator, a certain amount of voltage drop or loss occurs in the extension cord which reduces the effective voltage available for the appliance or tool. The use of improper size or gauge of extension cords may cause unsafe or inefficient operation of your tool or appliance. It may also damage the tool or appliance.

Be sure that any extension cord that you use is rated to allow sufficient current flow to the motor or appliance. Select the required wire gauge size according to the chart below.

Chart lists the minimum wire gauge size for the proper extension cord.

EXTENSION CORD CHART

Use the right extension cord. An extension cord should have a suitable wire size for the overall cord length and tool amperage rating. This is to prevent a serious voltage drop, power loss and possible motor damage. Generally, heavier gauge wire is required as cord length increases. Use the recommendations in this table.


| Extension Cord Length | Amperage Rating of Tool | | | | | |
|-----------------------|-------------------------------|---------|-------|-------|--------|---------|
| | 0.2 | 2.1-3.4 | 3.5-5 | 5.1-7 | 7.1-12 | 12.1-16 |
| | Recommended Wire Size (Gauge) | | | | | |
| 25 feet | 18 | 18 | 18 | 18 | 16 | 14 |
| 50 feet | 18 | 18 | 18 | 16 | 14 | 12 |
| 75 feet | 18 | 18 | 16 | 14 | 12 | 10 |
| 100 feet | 18 | 16 | 14 | 12 | 10 | 8 |
| 150 feet | 16 | 14 | 12 | 10 | 8 | 8 |
| 200 feet | 16 | 14 | 12 | 10 | 8 | 6 |
| 300 feet | 14 | 12 | 10 | 8 | 6 | 4 |
| 400 feet | 12 | 10 | 8 | 6 | 4 | 4 |
| 500 feet | 12 | 10 | 8 | 6 | 4 | 2 |
| 600 feet | 10 | 8 | 6 | 4 | 2 | 2 |
| 800 feet | 10 | 8 | 6 | 4 | 2 | 1 |

 Not normally available as flexible extension cord

7. MAINTENANCE SCHEDULE

DAILY INSPECTION

Before running the generator, check the following service items:

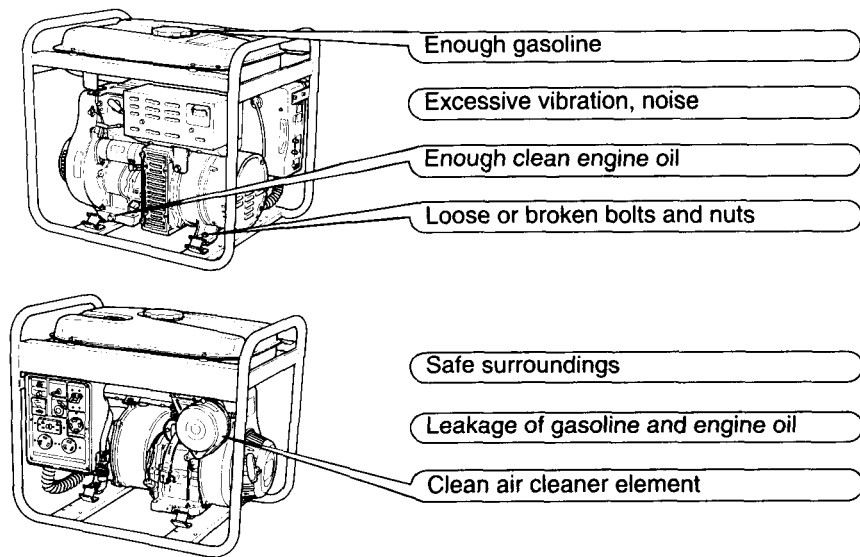

PERIODIC MAINTENANCE

Periodic maintenance is vital to safe and efficient operation of your generator. Check the table below for periodic maintenance intervals.

It is also necessary for the user of this generator to conduct the maintenance and adjustments on the emission-related parts listed below to keep the emission control system effective.

The emission control system consists of the following parts :

- | | | |
|-----------------------------------|---|-------------------|
| (1) Carburetor and internal parts | (2) Choke system | (3) Fuel strainer |
| (4) Air cleaner elements | (5) Intake pipe | (6) Spark plug |
| (7) Magneto | (8) Fuel hoses, clamps, and sealing gaskets | |

The maintenance schedule indicated in the table is based on the normal generator operation. Should the generator be operated in extremely dusty condition or in heavier loading condition, the maintenance intervals must be shortened depending on the contamination of oil, clogging of filter elements, wear of parts, and so on.

| | 8 hours (daily) | 20 hours (weekly) | 50 hours | 200 hours | 500 hours (12 months) | 1000 hours (24 months) |
|---|---|---|-----------------------|-----------------------|--------------------------|---------------------------|
| CLEAN ENGINE AND CHECK BOLTS AND NUTS | <input type="radio"/> (daily) | | | | | |
| CHECK AND REFILL ENGINE OIL | <input type="radio"/> (Refill daily to full mark) | | | | | |
| CHANGE ENGINE OIL (* NOTE 1, 2) | | <input type="radio"/> (Initial 20 hours) | <input type="radio"/> | | | |
| CLEAN SPARK PLUG | | | <input type="radio"/> | | | |
| WASH AIR CLEANER ELEMENTS (* NOTE 2) | | | <input type="radio"/> | | | |
| CLEAN AND ADJUST SPARK PLUG GAP | | | | <input type="radio"/> | | |
| CLEAN FUEL STRAINER | | | | <input type="radio"/> | | |
| REPLACE SPARK PLUG | | | | | <input type="radio"/> | |
| REPLACE CLEANER ELEMENT (* NOTE 3) | | | | | <input type="radio"/> | |
| CLEAN VALVE SEAT ALONG WITH CYLINDER HEAD (* NOTE 3) | | | | | <input type="radio"/> | |
| REMOVE CARBON FROM CYLINDER HEAD (* NOTE 3) | | | | | <input type="radio"/> | |
| ADJUST VALVE CLEARANCE (* NOTE 3) | | | | | <input type="radio"/> | |
| CLEAN AND ADJUST CARBURETOR (* NOTE 3) | | | | | <input type="radio"/> | |
| CHANGE FUEL LINES | | | | | <input type="radio"/> | |
| INSPECT CONTROL PANEL PARTS (* NOTE 3) | | | | | | <input type="radio"/> |
| CHECK ROTOR AND STATOR (* NOTE 3) | | | | | | <input type="radio"/> |
| REPLACE ENGINE MOUNT RUBBER (*NOTE 3) | | | | | | <input type="radio"/> |
| OVERHAUL ENGINE (* NOTE 3) | | | | | | <input type="radio"/> |

NOTE :

1. Initial oil change should be performed after first twenty (20) hours of operation. Thereafter change oil every fifty (50) hours. Before changing oil, check for a suitable way to dispose of old oil. Do not pour it down into sewage drains, onto garden soil or into open streams. Your local zoning or environmental regulations will give you more detailed instructions on proper disposal.
2. Change more often if used in dusty or dirty environments.
3. As to the procedures for these items, please consult your nearest Makita factory or authorized service center.


8. "HOW-TO" MAINTENANCE

1. ENGINE OIL CHANGE

Change engine oil every 50 hours.
(for new engine, change oil after 20 hours.)

- (a) Drain oil by removing the drain plug and the oil filler cap while the engine is warm.
- (b) Reinstall the drain plug and fill the engine with oil until it reaches the upper level on the oil filler cap.

- Use fresh and high quality lubricating oil to the specified level as directed on page 5. If contaminated or deteriorated oil is used or the quantity of the engine oil is not sufficient, the engine damage will result and its life will be greatly shortened.


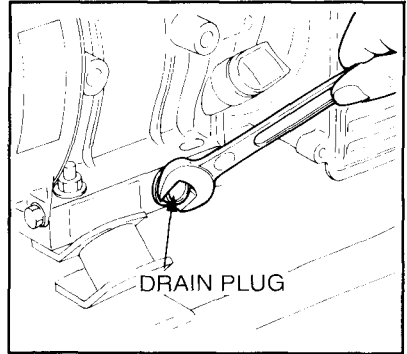


2. SERVICING THE AIR CLEANER

Maintaining an air cleaner in proper condition is very important. Dirt induced through improperly installed, improperly serviced or inadequate elements damages and wears out engines. Keep the element clean according to the chart on page 21.

PROCEDURE:


- (a) Unhook the cover and remove the cleaner element.
- (b) Inner element: Wash the element with kerosene, then soak it in mixed oil (Kerosene (3 parts) : Engine oil (1 part)). Drain the mixed oil.
- (c) Outer element: Wash the element with kerosene, then dip it into the mixed oil (Kerosene (3 parts): Engine oil (1 part)). Squeeze out the mixed oil. (Do not twist.)

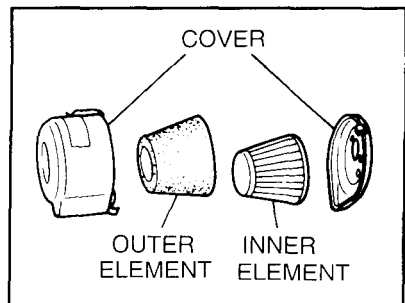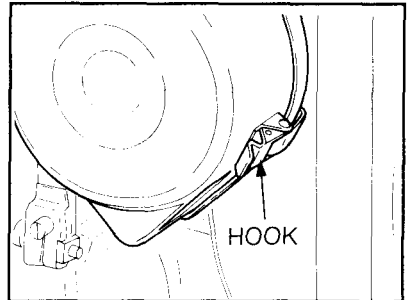

3. CLEANING AND ADJUSTING SPARK PLUG

- (a) If the plug is contaminated with carbon, remove it using a plug cleaner or wire brush.
- (b) Adjust the electrode gap to 0.6 to 0.7mm (0.024"~0.028")



| Model | Spark Plug |
|----------------------------|------------|
| G2410R G3510R G3511R | NGK BR6HS |
| G5710R G5711R | NGK B6ES |

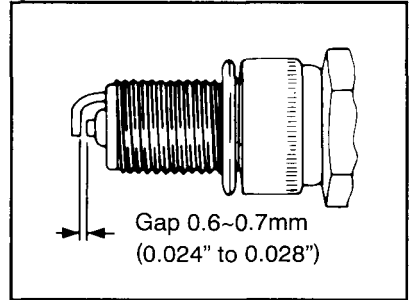

4. CLEANING FUEL STRAINER (NO SMOKING !)

Dirt and water in the fuel are removed by the fuel strainer.

- (a) Remove the strainer cup and throw away water and dirt.
- (b) Clean the screen and strainer cup with gasoline.
- (c) Tightly fasten the cup to main body, making sure to avoid fuel leak.

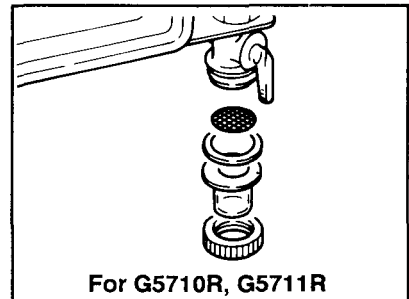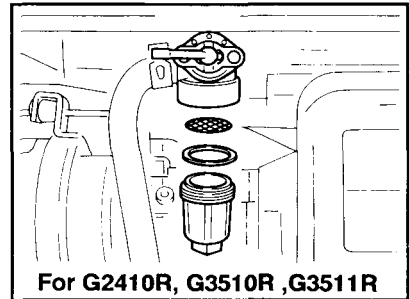

9. PREPARATION FOR STORAGE

The following procedures should be followed prior to storage of your generator for periods of 6 months or longer.

- Drain fuel from fuel tank carefully by disconnecting the fuel line. Gasoline left in the fuel tank will eventually deteriorate making engine-starting difficult.
- Remove the carburetor float chamber and also drain the carburetor.
- Change engine oil.
- Check for loose bolts and screws, tighten them if necessary.
- Clean generator thoroughly with oiled cloth. Spray with preservative if available.

NEVER USE WATER TO CLEAN GENERATOR !

- Pull starter handle until resistance is felt, leaving handle in that position.
- Store generator in a well ventilated, low humidity area.

10. TROUBLESHOOTING

When generator engine fails to start after several attempts, or if no electricity is available at the output socket, check the following chart.

If your generator still fails to start or generate electricity, contact your nearest Makita factory or authorized service center for further information or corrective procedures.

When Engine Fails to Start :


| | | |
|--|---|--|
| Check if choke lever is in its proper position. | ↔ | Set the choke lever knob to "CLOSE" position. |
| Check if fuel cock is open. | ↔ | If closed, open fuel cock. |
| Check fuel level. | | If empty, refill fuel tank making sure not to overfill. |
| Check to make sure generator is not connected to an appliance. | | If connected, turn off the power switch on the connected appliance and unplug. |
| Check spark plug for loose spark plug cap. | ↔ | If loose, push spark plug cap back into place. |
| Check spark plug for contamination. | | Remove spark plug and clean electrodes. |

When No Electricity Is Generated at Receptacle :


| | | |
|---|---|--|
| Check to make sure circuit breaker or no-fuse breaker is in the ON position. | ↔ | After making sure that the total wattage of the electrical appliance is within permissible limits and there are no defects in the appliance, turn the AC breaker to the "ON" position. If breakers continue to actuate, consult your nearest servicing dealer. |
| Check AC plug for loose connection. | | Secure connection if necessary. |
| Check to see if engine starting was attempted with appliances already connected to generator and AC breaker was in the ON position. | ↔ | Turn off switch on the appliance, turn AC breaker OFF, and disconnect cable from receptacle. Reconnect after generator has been started properly. |

11. WIRING DIAGRAM


1. G2410R

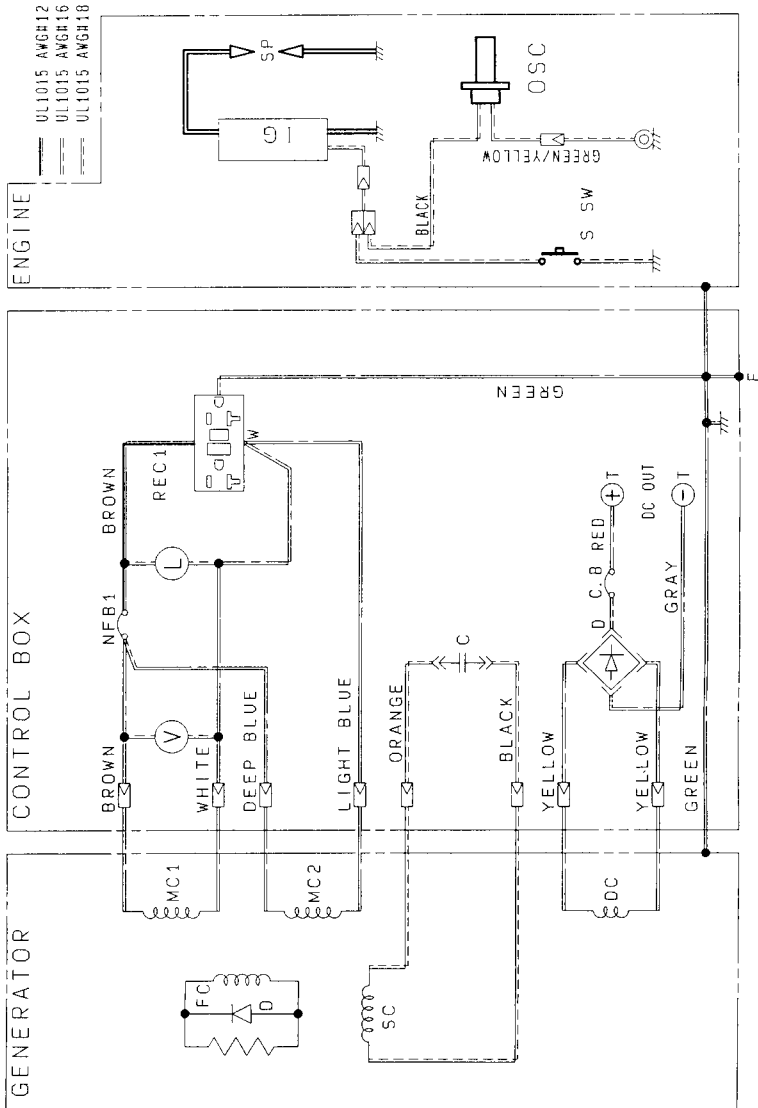


2. G3510R

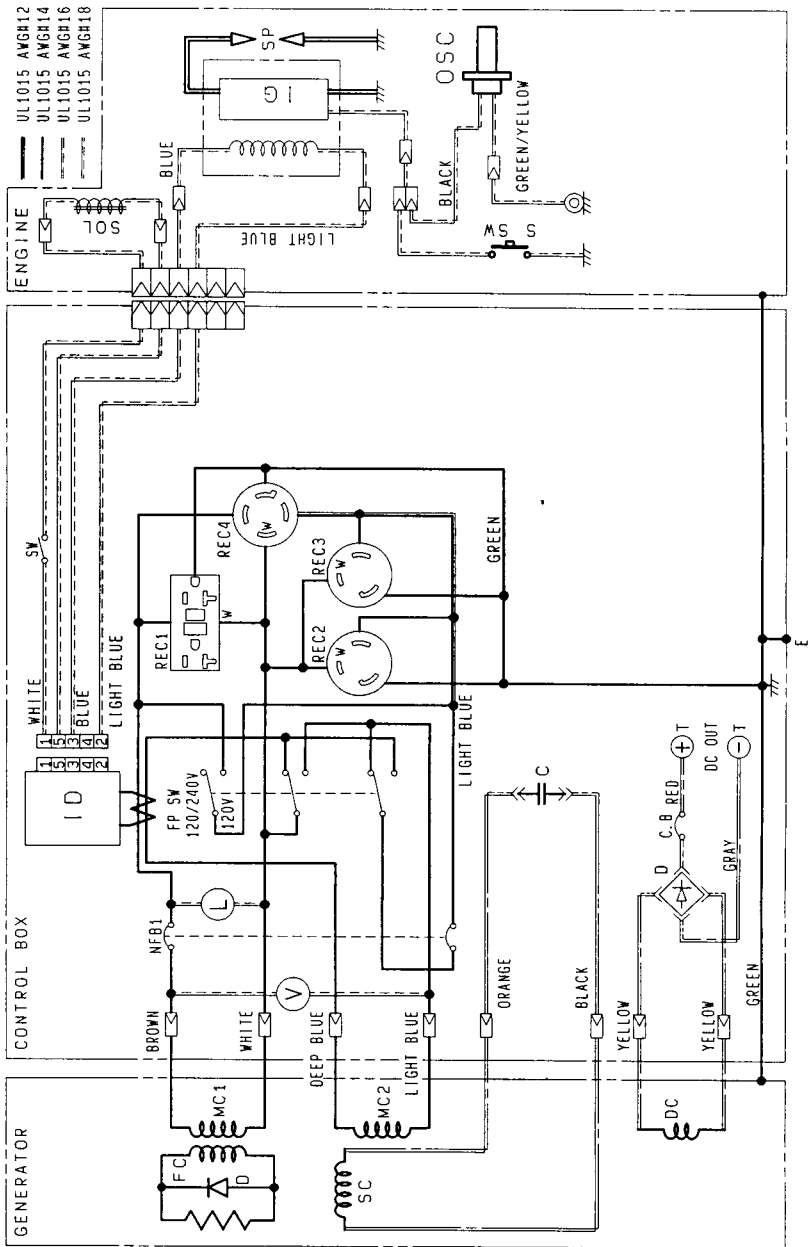


3. G3511R

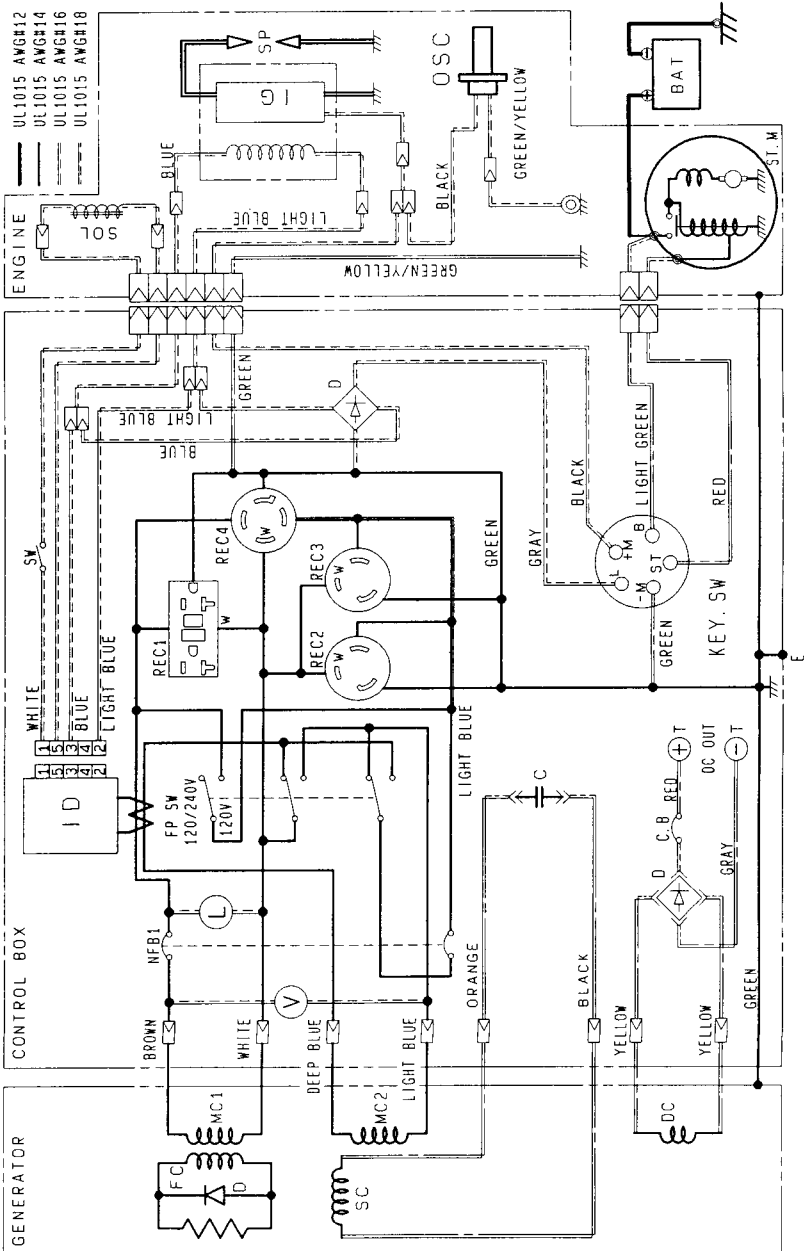

4. G5710R

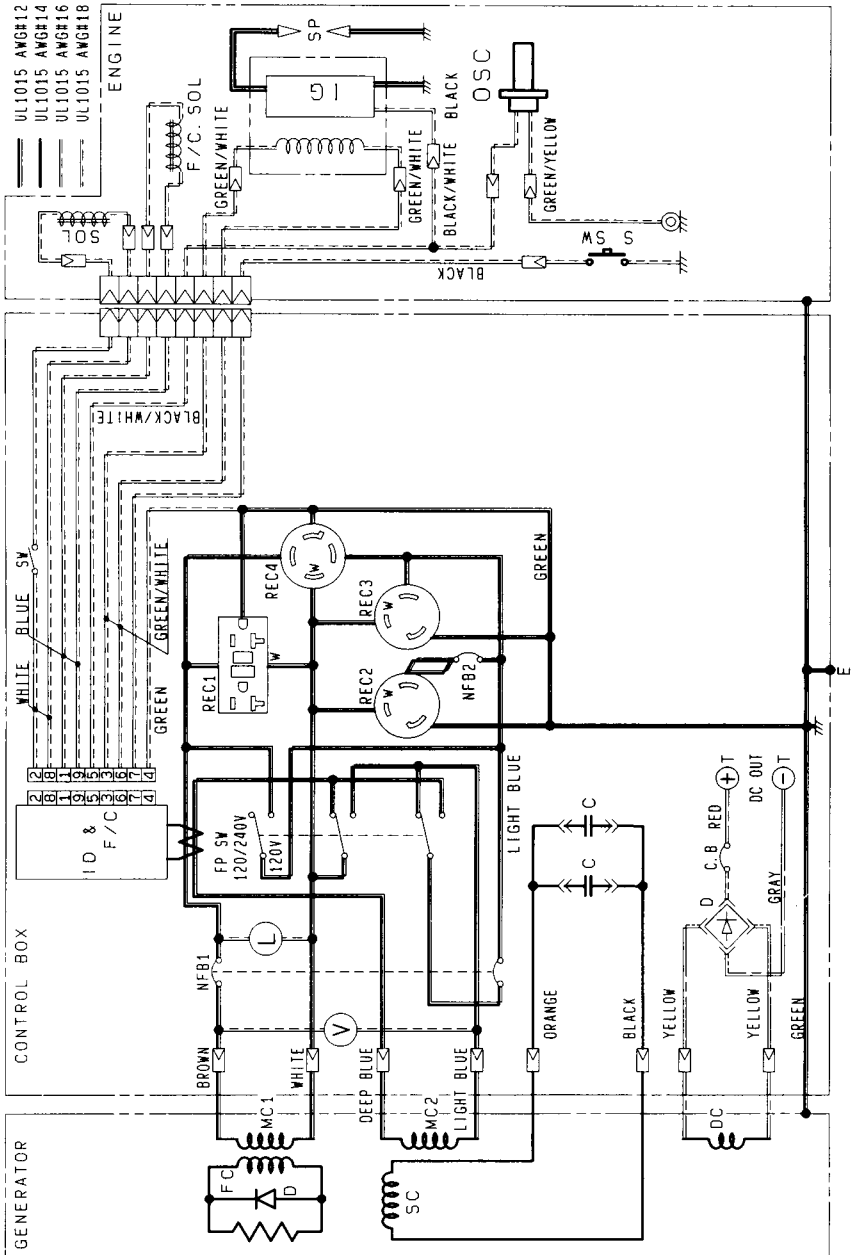

5. G5711R

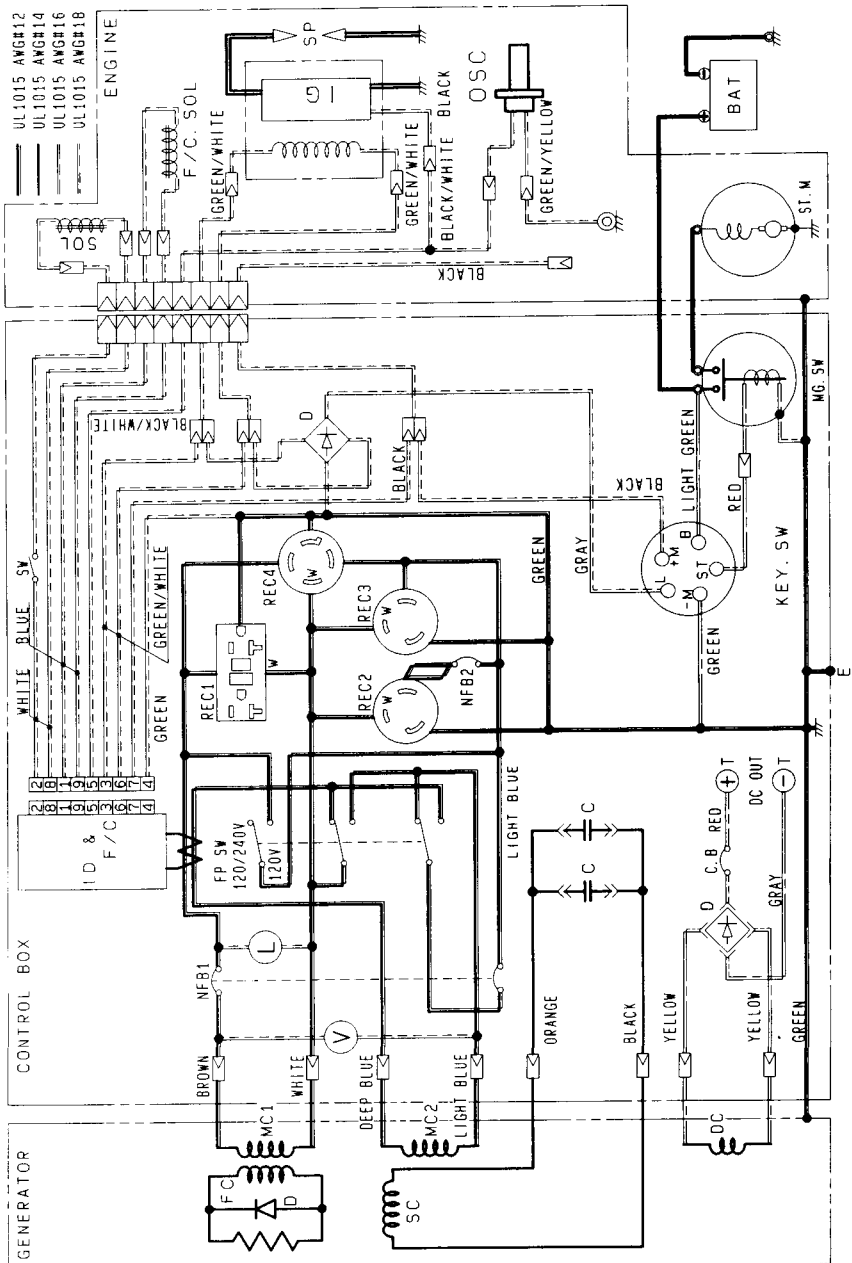

| Symbols | Part Name |
|------------------------|--|
| MC | AC Winding |
| SC | Auxiliary Winding |
| DC | DC Winding |
| FC | Field Winding |
| C | Condenser |
| SD | Idle Control Unit |
| D | Diode Stack Assy |
| L | Pilot Lamp |
| T | DC Output Terminal |
| F | Fuse |
| C.B. | AC Breaker |
| NFB₁ | AC Breaker |
| NFB₂ | AC Breaker |
| FPSW | Full Power Switch |
| S SW | Engine Stop Switch |
| IC SW | Auto Idle Switch |
| OS | Oil Sensor |
| OSC | Oil Sensor Controller |
| SIU | Solid State Ignition |
| SP | Spark Plug |
| MG | Magneto |
| IG | Ignition Coil |
| MG, SW | Magnetic Switch |
| E | Earth Terminal (Ground Terminal) |
| ST. M | Starting Motor |
| SOL | Solenoid |
| KEY SW | Key Switch |
| BAT | Battery |
| V | Voltmeter |
| REC1 | AC Output Receptacle (120V-20A) GFCI NEMA No.5-20R |
| REC2 | AC Output Receptacle(120V-30A) NEMA No.L5-30R |
| REC3 | AC Output Receptacle (120V/240V-20A) NEMA No.L14-20R |
| REC4 | AC Output Receptacle (120V-20A) NEMA No.5-20R |

12. ELECTRIC STARTER

1. ELECTRIC STARTER (G3511R, G5711R)

(1) BATTERY

| Recommended Battery | |
|--------------------------------------|--------------------|
| SAE Type No. | UIR-160 or UIR-200 |
| Capacity | 12V-24AH |
| Dimensions (Maximum) L × W × H | 7.8" × 5.2" × 7.4" |


[CAUTION]

- Do not use a smaller battery which would be overcharged in usual operation.

(2) STARTING PROCEDURES

- Switch AC breaker OFF.
- Turn the "Auto Idle Switch" off.
- Open the fuel cock.
- Choke if engine is cold.
- Insert key into key slot and turn it fully clockwise. Starting motor will turn to start the engine.

Release key, and it will automatically returns to "RUN" position.

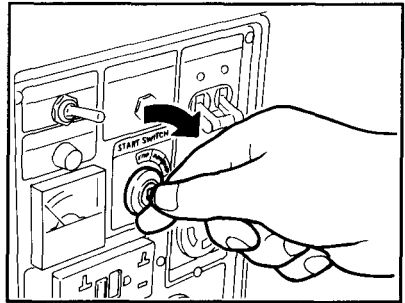


[CAUTION]

- Do not run the starting motor over 5 seconds.
If you failed to start, return key to "STOP" position and wait about 30 seconds, then repeat starting.
- Do not turn the key switch to "START" position while the engine is running.

(3) STOPPING THE ENGINE

- Switch AC breaker OFF.
- Turn the key switch to "STOP" position.

2. "HOW TO" INSTALL BATTERY

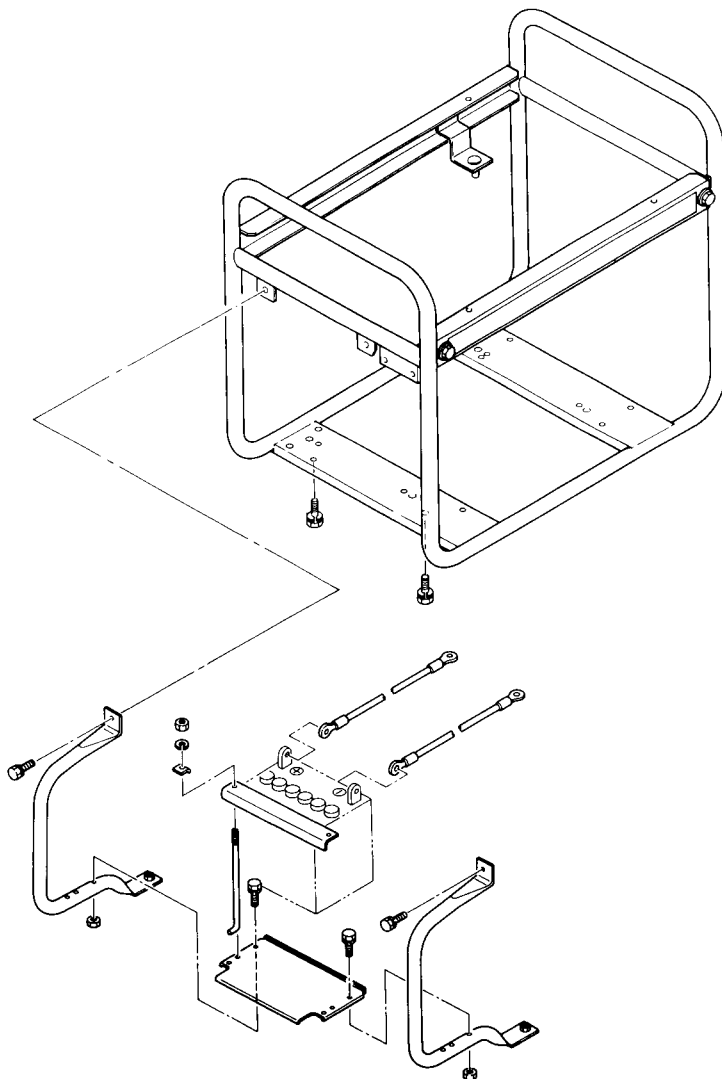

アメリカ

MAKITA LIMITED ONE YEAR WARRANTY

Warranty Policy

Every Makita tool is thoroughly inspected and tested before leaving the factory. It is warranted to be free of defects from workmanship and materials for the period of ONE YEAR from the date of original purchase. Should any trouble develop during this one-year period, return the COMPLETE tool, freight prepaid, to one of Makita's Factory or Authorized Service Centers. If inspection shows the trouble is caused by defective workmanship or material, Makita will repair (or at our option, replace) without charge.

This Warranty does not apply where:

- repairs have been made or attempted by others;
- there is evidence of normal wear and tear;
- The tool has been abused, misused or improperly maintained;
- alterations have been made to the tool.

Defects are due to the use of parts, accessories or attachments which are not Makita genuine products, specifically recommended for use with this tool.

Damage may be caused in transit. (This must be the responsibility of the carrier.)

Claims arise from regulations such as for noise levels, exhaust gas emissions, etc. This product has been operated for racing purposes or other competitive activities. This product has been employed for powering equipment that is operated on, in or near water or explosive atmospheres.

The following parts are expendable (not durable), so warranty does not apply:

Expendable parts including, but not limited to:

Spark plugs, packings, gaskets, rubber materials, washers, nuts, V-belt, engine oil, grease, paper elements, brushes, mechanical seal, pump impeller and vclute casing.

IN NO EVENT SHALL MAKITA BE LIABLE FOR ANY INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES FROM THE SALE OR USE OF THE PRODUCT. THIS DISCLAIMER APPLIES BOTH DURING AND AFTER THE TERM OF THIS WARRANTY.

MAKITA DISCLAIMS LIABILITY FOR ANY IMPLIED WARRANTIES, INCLUDING IMPLIED WARRANTIES OF "MERCHANTABILITY" AND "FITNESS FOR A SPECIFIC PURPOSE," AFTER THE ONE-YEAR TERM OF THIS WARRANTY.

This Warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Some states do not allow the exclusion of limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. Some states do not allow limitation on how long an implied warranty lasts, so the above limitation may not apply to you.

Makita Corporation

3-18-8, Sumiyoshi-cho
Anjo, Aichi 446 Japan

PRINTED IN JAPAN

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>