



mellerware®

TRENDS FOR LIFE

Steam Chef Food Steamer



complies with
INTERNATIONAL
IEC60355
SAFETY SPECIFICATIONS

m
800 W

CE
2 YEAR
GUARANTEE

Model:
27250


PLEASE READ ALL INSTRUCTIONS BEFORE USE

2 year guarantee



Dear customer,

Please read these Operating Instructions through carefully before connecting your device to the mains, in order to avoid damage due to incorrect use. Please pay particular attention to the safety information. If you pass the device on to a third party, these Operating Instructions should also be handed over.

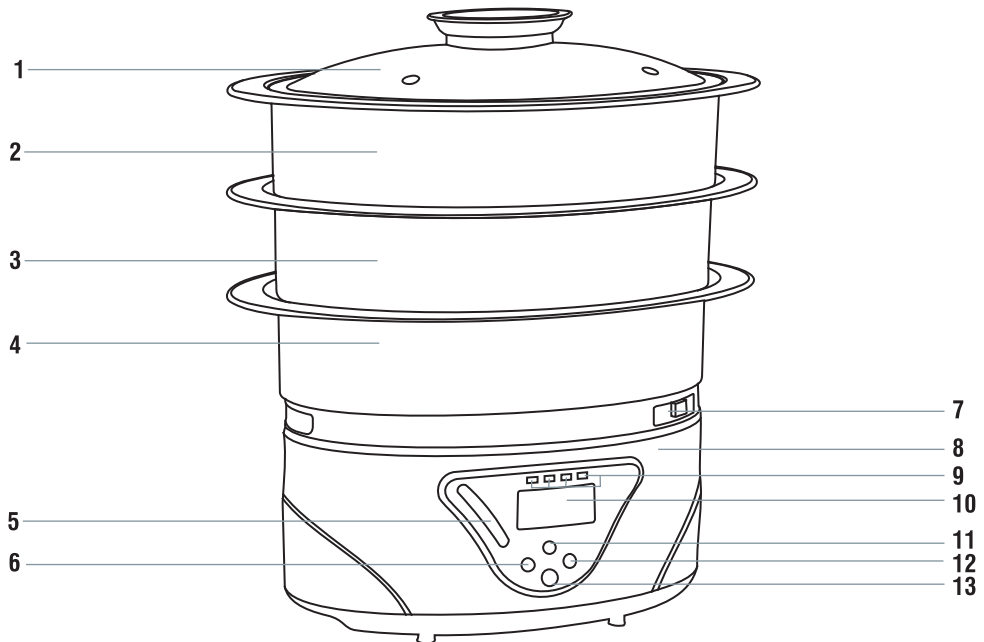

ASSEMBLY

1. Lid
2. Upper container
3. Middle container
4. Lower container
5. Water level Indicator
6. "+" Key
7. Affusion drawer
8. Base
9. Function Indicator Lights
10. LCD Display
11. Programme Key
12. "-" Key
13. Start/off Key



IMPORTANT NOTES

- Please read the instruction manual carefully before using the steam cooker
- Before first use, please check carefully if all parts are in good condition. If not, contact your supplier or manufacturer.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid any hazard.
- Please check if the steam cooker voltage corresponds to your electric installation. Put the plug onto the socket, making sure it is earthed.
- Put the steam cooker on a horizontal surface and keep away from any heat source
- Keep the steam cooker away from children
- The surface of the base can be very hot.
- Never touch the hull before it completely cools down.
- Never immerse the power cord, plug or the cooking unit in water or other liquid.
- Do not remove the lid during cooking
- Do not move the appliance during operation or immediately after use in order to avoid any risk of burns, otherwise, always handle the appliance, the removable bowl, or the lid using an insulating glove.
- Unplug the steam cooker before removal, cleaning and storage.
- This product is for household use only.
- Keep this instruction manual in a safe place.

IMPORTANT RECOMMENDATIONS

- Fill the reservoir with the necessary quantity of water. Never exceed the maximum levels indicated
- Clear the mixture of oil and water out of the tray every 35 minutes or so to stop the mixture from entering the reservoir.
- Always place the lid on the steam container and ensure the lid's handles align to the steam container handles.
- Always place the steam container on the reservoir.
- Be cautious when removing the steam container from the reservoir, to avoid any burns or injuries.
- Disconnect the plug and allow the steam cooker to cool down before cleaning.
- Use warm soapy water and a smooth cloth to clean the steam container and the lid.
- Before cleaning the reservoir, empty the water inside. Clean with a damp cloth and wipe dry.
- For best results, place food into the lower container, cut into small blocks. Place different kinds of food into different containers according to type of food.
- The lower container only matches the tray and the cover only matches the upper container. Choose the suitable containers to assemble according to your need.

OPERATION PROCEDURES

- Connect the plug and then "00:00" displays on the LCD
- Choose the desired cooking programs by pressing " + " or " - "

Program No.	Food	Refer time(minutes)
1	Rice	33
2	Chicken	30
3	Fish	26
4	Eggs	23
5	Prawns	21
6	Vegetables	35
7	Fruits	20
8	Other	manual
0	Turn off display	

Remarks:

Program 1 - cooks rice using the rice bowl (optional) with about 200g rice and tap water and in the lower container



- After selecting the desired cooking program, press "START/OFF" to begin cooking while the clock counts down and the indicator is on. When "00:00" displays on the LCD, the steam cooker will "beep" four times, with the indicator light flashing to indicate that cooking is complete.
- If the "8" program is selected, you can manually set your desired time according to your food requirements. Select program "8", press "START/OFF", the LCD will flash "0". Press "+" to set the time. Press "-" to reduce the time. Once set, press "START/OFF" to start cooking and the clock will begin to count down.
- In the "00:00" position on the LCD, press "PROG" to program the cooking. While the flashing "0" displays on the LCD, press "+" to set the time, press "-" to set the flashing "0" position. After set the time, press "PROG" again to enter desired cooking program. Once selected, press "START/OFF" and then the clock begins to count down.





creative housewares

27 Nourse Avenue Epping 2 Cape Town
P.O. Box 975 Eppindust 7475 South Africa
Tel: +27 21 534 8114 Fax: +27 21 534 8086
Service Centre Share Call: 086 111 5006
web: www.creativehousewares.co.za

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>