



User Guide

Your Palm[®] Treo[™] 755P Smartphone

Intellectual property notices

© 2005–2007 Palm, Inc. All rights reserved. Blazer, HotSync, Palm, Palm Desktop, Palm OS, Treo, VersaMail, and the Palm and Treo logos are among the trademarks or registered trademarks owned by or licensed to Palm, Inc. Documents To Go is a trademark or registered trademark of DataViz, Inc. Adobe and Acrobat are either registered trademarks or trademarks of Adobe Systems Incorporated in the United States and/or other countries. Microsoft, ActiveSync, Excel, Outlook, PowerPoint and Vista are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries. All other brand and product names are or may be trademarks of, and are used to identify products or services of, their respective owners.

This product is protected by one or more of the following United States patents:

6,976,226; 6,975,304; 6,965,375; 6,961,567; 6,961,029; 6,957,397; 6,952,571; 6,950,988; 6,947,975; 6,947,017; 6,943,667; 6,940,490; 6,924,752; 6,907,233; 6,906,701; 6,906,741; 6,901,276; 6,850,780; 6,845,408; 6,842,628; 6,842,335; 6,831,662; 6,819,552; 6,804,699; 6,795,710; 6,788,285; 6,781,824; 6,781,575; 6,766,490; 6,745,047; 6,744,451; 6,738,952; 6,732,105; 6,724,720; 6,721,892; 6,712,638; 6,708,280; 6,697,639; 6,687,839; 6,685,328; 6,665,803; 6,618,044; 6,590,588; 6,539,476; 6,532,148; 6,523,124; 6,519,141; 6,516,202; 6,490,155; 6,480,146; 6,457,134; 6,456,247; 6,442,637; 6,441,824; 6,437,543; 6,429,625; 6,425,087; 6,389,572; 6,388,877; 6,381,650; 6,363,082; 6,344,848; 6,317,085; 6,241,537; 6,222,857; 6,185,423; 6,147,314; 6,115,248; 6,064,342; D421,251; D429,252; D466,128; D478,091. Patent pending.

This product also is licensed under United States patent 6,058,304.

This product is protected by certain intellectual property rights of Microsoft Corporation. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft or an authorized Microsoft subsidiary.

This product contains ACCESS Co., Ltd.'s NetFront 3.0 Internet browser software. © 1996-2007 ACCESS Co., Ltd. and ACCESS Systems America, Inc. NetFront is the trademark or registered trademark of ACCESS Co., Ltd. in Japan and in other countries except the United States of America. NetFront is a registered trademark of

NetFront Communications, Inc. in the United States of America and is used under a license. A portion of this software includes software modules developed by the Independent JPEG Group.

Disclaimer and limitation of liability

Palm, Inc. and its suppliers assume no responsibility for any damage or loss resulting from the use of this guide. Palm, Inc. and its suppliers assume no responsibility for any loss or claims by third parties that may arise through the use of this software. Palm, Inc. and its suppliers assume no responsibility for any damage or loss caused by deletion of data as a result of malfunction, dead battery, or repairs. Be sure to make backup copies of all important data on other media to protect against data loss.

Palm Take Back and Recycling Program

As part of Palm's corporate commitment to be a good steward of the environment, we strive to use environmentally friendly materials, reduce waste, and develop the highest standards in electronics recycling. Our recycling program keeps Palm handheld devices, Treo smartphones, and mobile companions out of landfills through evaluation and disposition for reuse and recycling.

Palm customers may participate in the recycling program free of charge. Visit www.palm.com/recycle or in the US call 877-869-7256 for additional details and information about how you can help reduce electronic waste.

Waste disposal



This symbol indicates that Palm products should be recycled and not be disposed of in unsorted municipal waste. Palm products should be sent to a facility that properly recycles electrical and electronic equipment. For information on environmental programs visit: www.palm.com/environment.

PN: 406-11104-00
v. 1.0

Contents

Welcome	1
What's in the box?	1
What do I need to get started?	2
Where to learn more	2
Chapter 1: Setting up	5
Smartphone overview	7
Installing the battery	9
Charging the battery	10
Maximizing battery life	12
Making your first call	13
Setting up your computer	15
Synchronizing information—the basics	21
Chapter 2: Moving around on your smartphone	23
Moving around the screen	25
Using the keyboard	30
Opening applications	33
Chapter 3: Your phone	35
Turning your smartphone on and off	37
Making calls	39
Receiving calls	43
Using voicemail	44
What can I do when I'm on a call?	46
Defining favorite buttons	52
Using a phone headset	55

Customizing phone settings	60
What are all those icons?	68
Chapter 4: Your email and other messages	73
Which application should I use?	75
The VersaMail® application	75
Messaging	88
Chapter 5: Your connections to the web and wireless devices	95
Web browser	97
Connections with Bluetooth® devices	106
Chapter 6: Your photos, videos, and music	111
Camera and Camcorder	113
Pics & Videos	117
Pocket Tunes™	123
Chapter 7: Your personal information organizer	129
Contacts	131
Calendar	133
World Clock	141
Tasks	143
Chapter 8: Your memos and documents	147
Documents To Go® Professional	149
Memos	151
Voice Memo	151
Chapter 9: Your application and info management tools	155
Using Find	157
Viewing and using the alerts	157
Calculator	158

Installing applications	160
Removing applications	162
Viewing application info	163
Sending information with Bluetooth® wireless technology	164
Beaming information	166
Synchronizing information—advanced	168
Using expansion cards	175
Chapter 10: Your personal settings	181
System sound settings	183
Display and appearance settings	184
Applications settings	186
Locking your smartphone and info	189
System settings	196
Connection settings	198
Chapter 11: Common questions	199
Upgrading	201
Desktop software installation	203
Resetting your smartphone	204
Replacing the battery	206
Screen	207
Synchronization	208
Phone	216
Hands-free devices	218
Email	220
Messaging	220
Web	220
Camera	223
Making room on your Treo™ smartphone	224

Third-party applications	225
Error messages	226
Terms	227
Important safety and legal information	231
Index	239

Welcome

Congratulations on the purchase of your Palm® Treo™ 755P smartphone! In one compact and indispensable device, you now have all of the following:

- An advanced mobile smartphone
- Mobile email (corporate and personal)
- High-speed Internet connection and data transfer with 1xRTT and EVDO support
- Palm OS® organizer applications

KEY TERM Organizer applications: The Calendar, Contacts, Tasks, and Memos applications are collectively referred to as organizer or PIM (personal information manager) applications.

- Expansion capability (miniSD)
- A 1.3-megapixel digital camera
- Text messaging
- A media player
- Productivity software

This guide helps you set up your Treo smartphone and learn to use it.

NOTE Phone and text messaging services require a service contract with your wireless service provider. Web and email services require a service contract and high-speed data service from your wireless service provider. Data speeds vary based on network availability and capacity.

What's in the box?

You should have received all the following items in the Treo smartphone box:

Hardware

- Treo smartphone
- Rechargeable battery
- AC charger with international adapter(s) (if required in your region)
- USB sync cable
- Stereo headset



Documentation and software

- *Read This First* booklet
- *Quick Reference*



- Palm Software Installation CD, which includes the following:
 - Palm® Desktop software
 - Links to bonus software for your smartphone
 - *User Guide* (this guide)
 - *User Guide for the VersaMail® Application*
- Palm warranty
- Software license agreement
- The computer with which you want to synchronize your personal information
- The Palm Software Installation CD included in the box


Where to learn more

For a quick introduction

Quick Tour: Introduces you to many of your smartphone's features. You can open it any time. Press **Applications** , and then select **Quick Tour** .

While using your Treo smartphone


On-device User Guide: A specially formatted version of this guide, available right on your smartphone. To open the on-device guide, press **Applications** , select **My Treo** , select the **Support** tab, and then select **User Guide**.

Tips: Many of the built-in applications include tips for getting the most out of your smartphone. Some tips are available from a menu: open an application, press **Menu** , select **Options**, and then select **Tips**. Other

What do I need to get started?

As you work through the instructions in this guide, you'll need all the items that came in the Treo 755P smartphone box (see [What's in the box?](#)), as well as the following:

- An activated account with your wireless service provider
- A location with wireless coverage for your smartphone
- An electrical outlet

tips are available when you select a **Tips**  icon in the upper-right corner of a dialog box.

Online support from Palm: For up-to-date downloads, troubleshooting, and support information, go to <http://go.palm.com/treo755p/>.

If you need more information

Windows Vista™ users: For information on using your smartphone and desktop software with Windows Vista, visit www.palm.com/windowsvista.

Books: Many books about Palm OS® devices are available from local or online book

retailers (look in the computers section), or visit <http://go.palm.com/treo755p/>.

Online forums: Consult online Treo device user discussion groups to swap information and learn about topics you may find nowhere else. For details, visit <http://go.palm.com/treo755p/>.

Customer service from your wireless service provider: For questions about your mobile account or features, contact your wireless service provider's technical support department or your wireless service provider's customer service and billing department.



Setting up

You're about to discover the many things about your Palm® Treo™ 755P smartphone that will help you better manage your life and have fun, too.

As you become more familiar with your smartphone, you'll want to personalize the settings and add applications to make it uniquely yours. But first, take these few easy steps to set up.

Benefits


- Know where your smartphone controls are located
- Start using your smartphone right away
- Establish a link between your smartphone and your computer

In this chapter

Smartphone overview	7
Installing the battery	9
Charging the battery.	10
Making your first call	13
Setting up your computer.	15
Synchronizing information—the basics	21

Smartphone overview


Front view

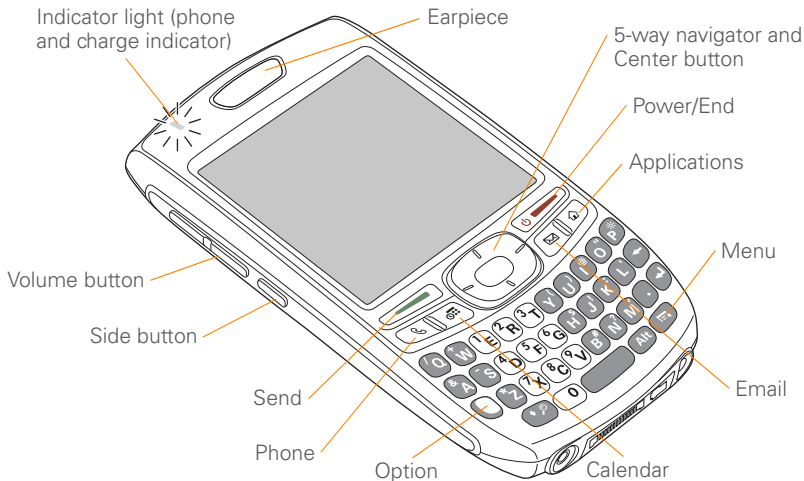


TIP Protect your screen. Be careful to store your smartphone away from items that might scratch or crush the screen. Visit <http://go.palm.com/treo755p/> to find carrying cases and other useful accessories.

DID YOU KNOW? The indicator light is visible only when the light is on.

DID YOU KNOW? When your smartphone screen is on, you can press and hold the Side button to open an application of your choice; see [Reassigning buttons](#) for details.

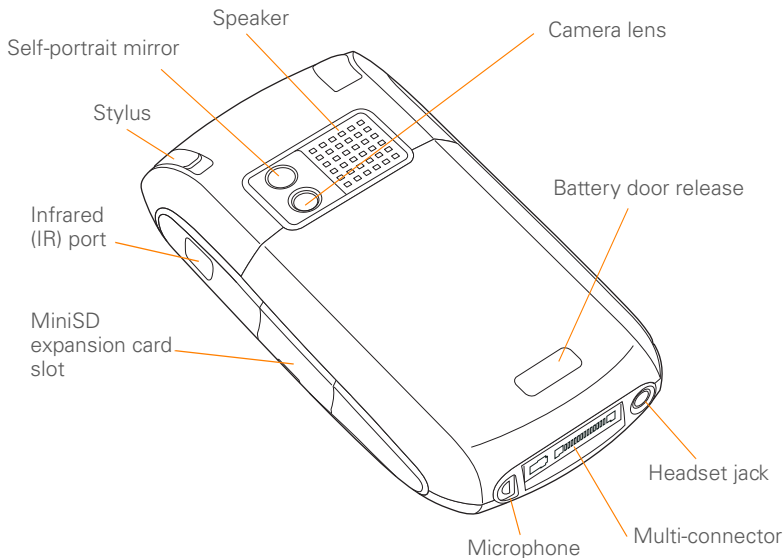Back view


IMPORTANT The Treo smartphone speaker includes a large magnet, so be sure to keep your smartphone away from credit cards or other items that could be demagnetized.

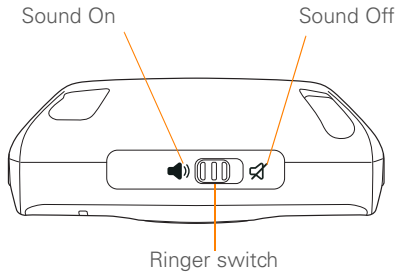Top view


DID YOU KNOW? The Ringer switch silences all sounds, including music, at once; you don't need to hunt for "off" or "mute" settings in individual applications.

Installing the battery

- 1 Press the **battery door release**, and slide the **battery door** downward to remove it from your smartphone.

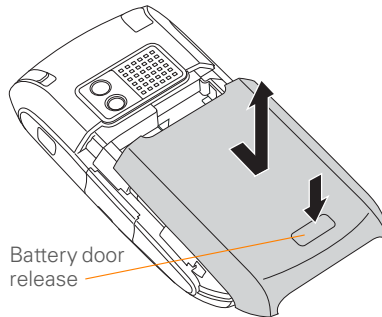

- 2 Align the metal contacts on the battery with the contacts inside the battery compartment.
- 3 Insert the battery into the compartment at a 45-degree angle, and then press it into place.

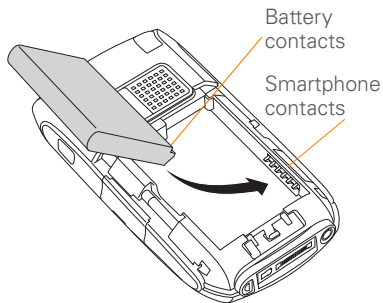

- 4 Slide the battery door onto the back of the smartphone until it clicks into place.
- 5 When the language selection screen appears, select the language you want to use.

IMPORTANT You must select the same language on your smartphone and desktop software.

- 6 Follow the onscreen instructions to set up your smartphone.

TIP If your smartphone does not turn on, you need to connect it to the AC charger. If it still does not turn on after you connect the AC charger, then do a soft reset. See [Performing a soft reset](#).


Charging the battery

The battery comes with a sufficient charge to complete the setup process and activate your phone. After activation, we recommend charging your smartphone for 3.5 hours (or until the indicator light is solid green) to give it a full charge. See [Maximizing battery life](#) for tips on maximizing the life of your smartphone's battery.

TIP To avoid draining the battery, charge your smartphone every day, especially if you use your phone often.

DID YOU KNOW? If your battery ever becomes fully drained, your info is still stored safely on your smartphone until you recharge the battery or connect your smartphone to a power source.


- 1 If necessary, connect the international adapter to the AC charger plug.
- 2 Plug the AC charger into a wall outlet.
- 3 Connect the charger cable to the bottom of the smartphone. Make sure the arrow on the connector is facing up, toward the screen.

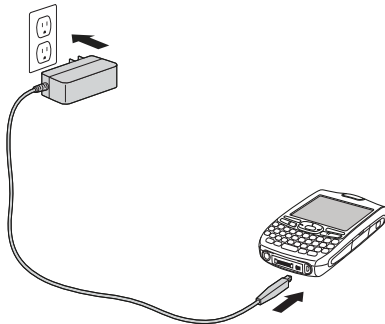

DID YOU KNOW? You can also charge your smartphone by connecting it to your computer with the sync cable. You can do this with or without using the charger cable (see [Connecting your Treo smartphone to your computer](#)).

Keep in mind that it takes longer to charge the battery using the sync cable, and if your laptop isn't plugged into a power source, it can drain the laptop's battery.

- 4 To confirm that your smartphone is charging, check the indicator light on your smartphone.
 - Solid red indicates that your smartphone is charging.
 - Solid green indicates that your smartphone is fully charged.

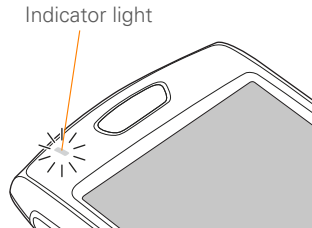

TIP If the battery is fully drained, it may take a few moments for the indicator light to turn on when you begin charging.

TIP If the indicator light doesn't turn on when you connect your smartphone to the AC charger, double-check the cable connection and the electrical outlet to which it is connected.

When your smartphone is on (see [Turning your phone on and off](#)), the onscreen battery icon displays the charging status:



A red lightning bolt indicates that the battery is connected to a wall outlet and is charging.



A green lightning bolt indicates that the battery is connected to a wall outlet and is fully charged.



A partial battery without a lightning bolt indicates that the battery is not connected to a wall outlet and it has some power.



An almost empty battery that is red at the bottom indicates that you need to charge the battery immediately.

TIP To see exactly how much power is left in your battery, tap the onscreen battery icon.



Battery icon

Maximizing battery life



Battery life depends on how you use your smartphone. You can maximize the life of your battery by following a few easy guidelines:

DID YOU KNOW? You can buy an extra battery as a spare for long airplane trips or periods of heavy use. To purchase batteries that are compatible with your smartphone, go to <http://go.palm.com/treo755p/>.

- Charge your smartphone whenever you're at your desk, or charge it overnight. The Li-ion battery has a much longer useful life when it is topped off frequently, versus charging it after it is fully drained.
- Your smartphone's wireless features (phone, email, messaging, and web) and media features (camera, media players, eBooks, and games) consume more power than its organizer features. If you spend a lot of time using the wireless and media features, keep an eye on the battery icon and charge when necessary.
- If you don't plan to use the wireless features on your smartphone for a while, turn off your phone (see [Turning your phone on and off](#)) and let all calls be picked up by voicemail.
- As with any mobile phone, if you are in an area with no wireless coverage, your smartphone searches for a signal, which consumes power. If you cannot move to an area of better coverage, temporarily turn off your phone. While your phone is off, you can continue to use your smartphone's nonwireless features.
- Turn down the screen brightness (see [Adjusting the brightness](#)).
- Decrease the settings in Power Preferences and turn off Beam Receive (see [Optimizing power settings](#)).
- Turn off the Bluetooth® feature if you're not using it. See [Connecting to a Bluetooth hands-free device](#).



Making your first call

BEFORE YOU BEGIN If **Phone Off** appears in the title bar, you need to turn on your phone (see [Turning your phone on and off](#)). If **No Service** appears in the title bar, you are outside a wireless coverage area. If you believe you are in a wireless coverage area and this problem persists, contact your wireless service provider for assistance.

- 1 Press **Phone** .
- 2 If prompted, press **Center**  to turn off Keyguard (see [Locking your keyboard \(Keyguard\)](#) for more info).

- If you haven't already activated your phone, follow your wireless service provider's activation steps before continuing.
- Tap the onscreen **Dial Pad** to enter the number you want to call.




- Press **Send**  to dial.
- After you finish the call, press **Power/End**  to end the call.

TIP You can also dial phone numbers with the number pad on the keyboard. See [Dialing using the keyboard](#) for details.



Adjusting call volume

While a call is in progress, press the **Volume** button on the side of your smartphone to adjust the call volume.

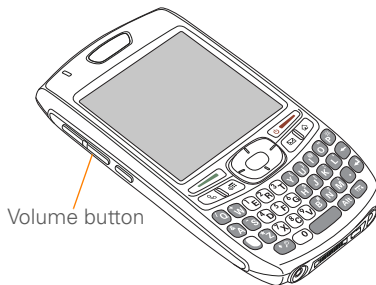- To increase the volume, press the upper half of the **Volume** button.
- To decrease the volume, press the lower half of the **Volume** button.



What's my phone number?

- Make sure your phone is on (see [Turning your phone on and off](#)).
- Press **Phone** .
- Press **Menu** .
- Select **Options**, and then select **Phone Info**.



Look here for your phone number

TIP If your phone number doesn't appear in Phone Info, turn your phone off and on again before you recheck Phone Info. If your phone number still doesn't appear, contact your wireless service provider to confirm that your phone has been activated.

Setting up your computer

You need to install the desktop software and connect the sync cable so that you can synchronize the info on your computer and the info on your smartphone. You can use either Palm® Desktop software (included) or Microsoft Outlook® for Windows (sold separately) as your desktop software.

Synchronization means you can enter or change info on your smartphone or on your computer and then sync to automatically update the info in both places. There's no need to enter the info twice. We strongly recommend that you sync your smartphone with your computer frequently to keep your info up-to-date (and backed up) in both locations.

System requirements

Your computer should meet the following minimum system profiles:

- Windows 2000, XP Service Pack 2 or Windows Media Center Edition 2005
 - 32MB of available memory (RAM)
 - 170MB of free hard disk space
 - CD drive
 - Available USB port
- Mac OS X version 10.2 or later
 - 128MB of total memory (RAM)
 - 190MB of free hard disk space
 - CD drive
 - Available USB port

Windows XP users: To sync your info, you must install Palm Desktop software from the Palm Software Installation CD that came with your smartphone—even if you sync with Outlook (sold separately) or another third-party application.

Windows Vista users: Before inserting the Palm Software Installation CD, go to www.palm.com/windowsvista where you'll find instructions and information about using your smartphone and desktop software with Windows Vista.

Upgrading from another Palm OS® device

NOTE If you are setting up your first Palm OS device, skip ahead to [Connecting your Treo smartphone to your computer](#).

You can transfer all compatible applications and information from your previous Palm OS® device to your new Treo 755P smartphone. This includes your calendar events, contacts, memos, and tasks, as well as your application settings and any compatible third-party applications and files.

When you install the desktop software from the Palm Software Installation CD, some third-party applications may be quarantined because they are not compatible with the Palm OS software version 5.4.9 on your new Treo smartphone. Quarantined files are not installed on your smartphone, nor are they deleted; these files are placed in a new folder on your computer: C:\Program Files\Palm\device name\PalmOS5 Incompatible Apps. (On some systems Palm may be replaced with palmOne or Handspring.)

TIP If you have third-party applications on the device you are upgrading from, you may want to review the info in [Upgrading](#) that lists the kinds of apps you do not want to try to install on your new device. The info in [Upgrading](#) is also useful if you run into other problems during the upgrade process.

TIP Some third-party utilities allow you to back up your old device's information onto an expansion card and then transfer the info to your Treo 755P smartphone. We do not recommend this method because any incompatible applications are also transferred to your smartphone.

- Calculate how much space your apps and info occupy on your *previous* Palm OS device:
 - From Applications View, open the menus.
 - Select **Info** on the **App** menu.
 - At the bottom of the screen, select **Size**.
 - Look at the numbers on the Free Space line and subtract the number on the left from the number on the right to calculate the space used. For example, on the device shown here, $22.4 - 17.5 = 4.9$. This means that 4.9MB of space is occupied on this device.
- If the space occupied on your previous device is 60MB or less, then go to step 3. If the space occupied is greater than 60MB, then do any of the following to reduce the storage space you're using before you go to the next step:
 - Delete any third-party applications that you no longer use.
 - Move large files, such as eBooks and images, to an expansion card.
 - Move third-party applications to an expansion card.
 - Purge old info in applications such as Calendar (Date Book), Tasks (To Do), and email. Refer to the documentation that came with your previous device for instructions on these items.



- 3 Synchronize your *previous* device with your *previous* desktop software to back up your information one last time.
- 4 Install the desktop synchronization software from your new Palm Software Installation CD (see [Installing the desktop synchronization software](#)).

IMPORTANT Do not synchronize your *new* Treo 755P smartphone with any *previous* versions of Palm Desktop software.

- 5 During the installation process, sync your *new* Treo smartphone with your *new* desktop software as instructed. When prompted, do the following:
 - Connect your *new* smartphone to your computer (see [Connecting your Treo smartphone to your computer](#)).
 - Indicate whether you want to sync only the info in your PIM apps (Calendar, Contacts, Memos, and Tasks) or all info and apps (excluding apps known to be incompatible).
 - Select a device name for your new smartphone; be sure to select the same name that you used for your old device. (This is the name that appears

in the User list in Palm Desktop software.)

MAC ONLY If you have pictures on your *previous* device, copy them from your *previous* device to an expansion card or beam them to your new Treo 755P smartphone.

- 6 If you plan to continue using your *previous* device, perform a hard reset to remove its associated device name. (See the documentation that came with your *previous* device for instructions on performing a hard reset.) Each device you synchronize with your computer must have a unique name. The next time you synchronize your *previous* device with your computer, be sure to assign it a new name.

If any third-party applications are quarantined during the installation, do not manually install them. Contact the third-party developer for software updates and info about compatibility with your Treo 755P smartphone.


Installing the desktop synchronization software

IMPORTANT Even if you already own a Palm OS device and have installed a previous version of the desktop software, you *must* install the software from the Palm Software Installation CD that came with your Treo 755P smartphone.

BEFORE YOU BEGIN If you are installing on a computer at work, make sure your computer is configured to let you install new software. Contact your company's IT department for help.

TIP If you want to sync info with applications other than Palm Desktop or Microsoft Outlook, you need to purchase additional third-party sync software. This sync software is sometimes called a *conduit*.

- 1 Close any apps that are running on your computer, including those that are minimized. Your computer needs all its resources to install the software.
- 2 Insert the Palm Software Installation CD into the CD drive on your computer.

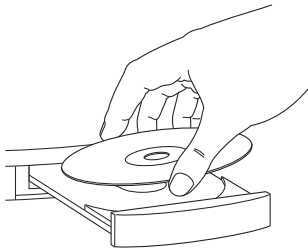

- 3 If you are installing on a Mac, double-click the CD icon on the desktop, and then double-click the **PalmSoftware.pkg** icon.
- 4 When the installation wizard opens, follow the onscreen instructions. Please note these important points about the installation process:
 - When the language selection screen appears, click the same language you selected on your smartphone.
 - You can choose which desktop software you want to use for synchronization: Palm Desktop software or Microsoft Outlook.

TIP To download a trial version of Microsoft Outlook and learn about discount offers go to: <http://go.palm.com/treo755p/>.

NOTE If you use Microsoft Outlook as your desktop email application, select Microsoft Outlook as your desktop synchronization software. If you select Microsoft Outlook, Palm Desktop software will still be installed on your computer. When you enter information on your computer, be sure to enter your information in Microsoft Outlook, not in Palm Desktop software.

- When the install process prompts you to connect your smartphone to your computer, go to the next section, [Connecting your Treo smartphone to your computer](#).


Connecting your Treo smartphone to your computer

- 1 If necessary, connect the international adapter to the AC charger plug.
- 2 Plug the AC charger into a wall outlet.

- 3 Plug the USB sync cable into an available USB port or into a powered USB hub on your computer.

TIP For best performance, plug your sync cable directly into a USB port on your computer. If your computer has USB ports on both the front and back, we suggest using the back port; the front port is often a low-power port. If you use a USB hub, make sure the hub has its own power supply.

- 4 With the sync button facing up, connect the sync cable to the bottom of your smartphone. Do not press the sync button until you are instructed to do so.
- 5 Connect the charger cable to the bottom of your smartphone.

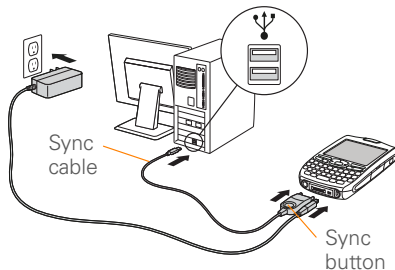

You are now ready to synchronize; go to [Synchronizing information—the basics](#).

Synchronizing information—the basics

Synchronizing means that info that is entered or updated in one place (your smartphone or your computer) is automatically updated in the other, so there's no need to enter the info twice. We strongly recommend that you sync your smartphone with your computer or

corporate server frequently to keep your info up-to-date (and backed up) in both locations.

The info from all the following applications is updated by default each time you sync your smartphone with your desktop software:



How each application syncs depends on your computer type and the desktop software you are using, as follows:


Computer type	Desktop type	What syncs and where
Windows	Microsoft Outlook (sold separately)	<ul style="list-style-type: none"> • Calendar, Contacts, Memos, and Tasks sync with Outlook • Pics&Videos syncs with Palm Desktop software
Windows	Palm Desktop software	All apps sync with Palm Desktop software
Mac	Palm Desktop software	All apps sync with Palm Desktop software

BEFORE YOU BEGIN To sync your info, you must install Palm Desktop software from the Palm Software Installation CD that came with your Treo 755P smartphone—even if you sync with Outlook (sold separately) or another third-party application. See [Installing the desktop synchronization software](#) for instructions.

- 1 Connect your Treo 755P smartphone to your computer (see [Connecting your Treo smartphone to your computer](#)).

NOTE If you're performing initial setup, your smartphone should already be connected to your computer.

- 2 Press the **sync** button on the sync cable.

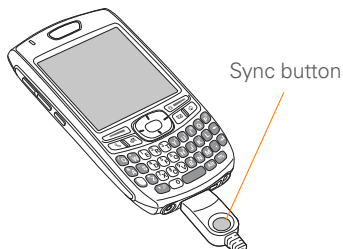

- 3 A message indicates that synchronization is in progress.
- 4 Wait for a message that indicates that the process is complete before you disconnect the sync cable.

TIP If you have problems synchronizing, see [Synchronization](#) for suggestions.

TIP For more sync options, including which apps sync, see [Synchronizing information—advanced](#).

If you're finishing your initial setup, you now have the option to install bonus software. If you choose to install some of the bonus software, you need to sync again to install the software on your smartphone. You can also install bonus software later; see [Installing applications](#).

TIP For info on locating your pictures and videos on your computer, see [Viewing pictures and videos on your computer](#).



Moving around on your smartphone

Have you ever been to a new city and felt a bit lost until you figured out that the numbered streets run north/south and the avenues run east/west? Learning to move around on your smartphone is similar. Most Palm OS® applications use the same set of controls. So once you learn how to use these controls on your Palm® Treo™ 755P smartphone, you'll be driving all over town and you won't even need a map.

Benefits

- Find and open applications quickly
- Access extra features with menus
- Move around in applications with one hand, using the 5-way navigator
- Access many more characters and symbols than are displayed on the keyboard

In this chapter

Moving around the screen	25
Using the keyboard	30
Opening applications	33


Moving around the screen

To move around the Treo 755P smartphone screen, you can use the 5-way navigator for one-handed navigation, or you can tap items on the screen with the stylus. With use, you will find your own favorite way to scroll, highlight, and select menu items.

TIP Some third-party applications may not work with the 5-way navigator, and you must use the stylus instead.


DID YOU KNOW? In this guide, we use arrow icons to indicate directions on the 5-way. These are different from any onscreen arrows that you tap with your stylus or select with the 5-way to display pick lists.

The 5-way includes the following buttons:

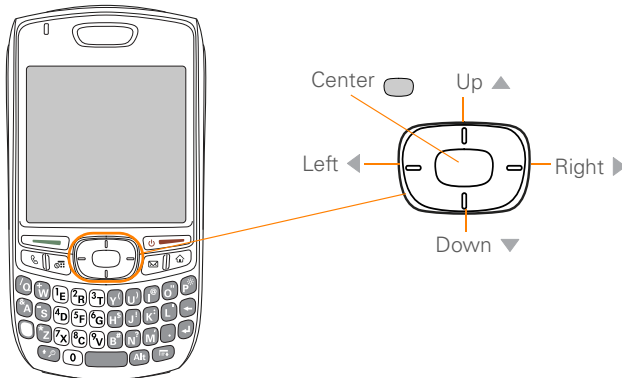

Scrolling through screens

As on a computer, you scroll on the Treo smartphone to move from field to field or page to page, or in some cases to highlight an item or option in a list.


In list screens, use the 5-way  to select and move between entries such as notes, memos, contacts, or photos. In individual entry screens—such as a single photo or email message—use the 5-way to move among the items on the screen or to move to another entry.

The behavior of the 5-way for list screens and entry screens varies according to application. Here are some general scrolling tips that apply in most applications:

- Press **Right** ►, **Left** ◀, **Up** ▲, or **Down** ▼ to move to the next field, button, or action in that direction.
- In list screens, press and hold **Up** ▲ or **Down** ▼ to scroll one screen at a time.
- When inside a text field, press **Right** ► or **Left** ◀ to scroll to the next character or word, press **Up** ▲ or **Down** ▼ to scroll between lines, or press and hold

Up ▲ or **Down** ▼ to scroll one screen at a time.

You can also scroll using the stylus. Tap an onscreen scroll arrow, or drag the slider of an onscreen scroll bar.

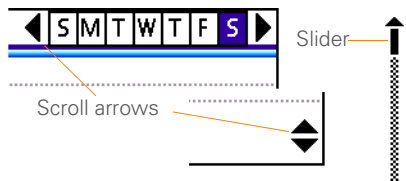

Highlighting and selecting items

On most screens, one item—a button, a list entry, or a check box—is highlighted by default. The highlight identifies which item is affected by your next action. Use the 5-way to move the highlight from one item to another before opening or selecting it.

The highlight can take one of two forms, depending on what is highlighted:

- **Border glow:** When an onscreen button (such as OK or Cancel) or pick list is highlighted, the item displays a glow around its border. If an entire list screen


is highlighted, the glow appears at the top and bottom of the screen only.

TIP When a border appears at the top and bottom of a list screen, press **Center** on the 5-way to highlight the first item in the list.

Done



- **Colored background:** When a phone number, text, an email address, a web link, or an item in a list is highlighted, the item is displayed as white text against a colored background. Examples of lists include the Contacts list, the Messaging Inbox, and the Tasks list.

After highlighting an item, you can select or activate it by pressing **Center** , or by tapping the item with the stylus.



TIP After you open an application (see [Opening applications](#)), experiment with using the 5-way to highlight various screen elements.


Highlighting text




You can use the stylus to highlight text on the screen.

- Tap and drag the stylus across the text you want to highlight.
- To highlight a word, double-tap it.
- To highlight a paragraph, triple-tap it.

Accessing command buttons


In most applications, command buttons such as New, OK, and Details appear at the bottom of the screen. In many cases, you can jump directly to these buttons instead of scrolling to them.

- From a list screen, such as the Contacts list or Memos list, press **Right**  to jump to the first button.


- From a screen where you create or edit entries, such as Edit Contacts, press **Center**  to jump to the first button.
- From a dialog box, such as Edit Categories, press **Up**  or **Down**  to scroll to the buttons.

KEY TERM Dialog box A set of options and command buttons that are enclosed by a border and that enable you to carry out a specific task.





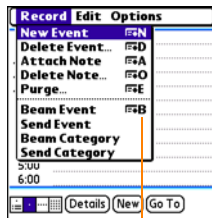

Selecting menu items

Many applications have menus to give you access to additional features. These menus are usually hidden from view, but they appear when you press Menu . To get the most out of your Treo smartphone, it's a good idea to familiarize yourself with the additional features available through the various application menus.

- 1 Press **Menu**  to display an application's menus.



Menu shortcut








- 2 Press **Right**  and **Left**  to switch between menus.
- 3 Press **Up**  and **Down**  to highlight a menu item.
- 4 Press **Center**  to select the menu item, or press **Menu**  to close the menu and cancel your selection.

TIP Most menu items have menu shortcuts listed in the menu. To use a menu shortcut, press **Menu** plus the shortcut letter. You don't have to see the menu item to use the menu shortcut. For example, when you're in Calendar, you can press **Menu + N** to create a new event.

Selecting options in a pick list

A range of options is often presented in a type of menu called a pick list, which can be identified by a downward-pointing arrow. Pick lists are different from the application menus previously described. The application menus give you access to additional features, and pick lists let you select the contents for a particular field.


You can select items from a pick list with the 5-way or the stylus.

- **5-way:** Use the **5-way**  to highlight the pick list, and then press **Center**  to display the items in the list.
 - Press **Up**  and **Down**  to highlight the item you want.
 - Press **Center**  to select the highlighted item.
 - To exit the pick list without making a selection, press **Left**  or **Right** .

- **Stylus:** Use your stylus to tap the pick list.
 - Tap the item you want from the list.
 - To exit the pick list without making a selection, tap outside the list.



Using the keyboard

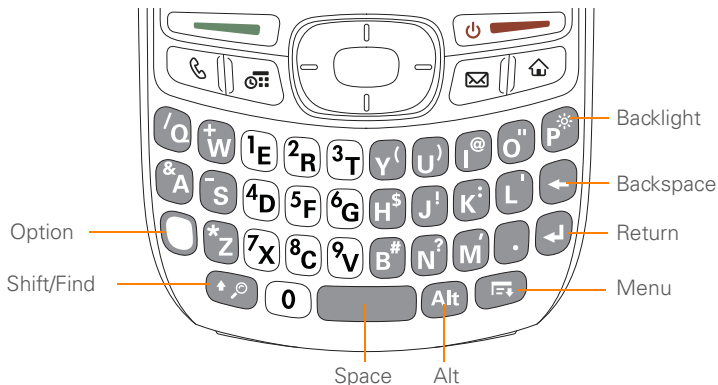

TIP When using the keyboard, most people find it easiest to hold the Treo smartphone with two hands and use the tips of both thumbs to press the keys.

DID YOU KNOW? The Treo smartphone includes a keyboard backlight that turns on and off when the screen turns on or off. The backlight also dims when an active call lasts longer than a specified period of time. See [Optimizing power settings](#) to adjust the automatic shut-off and dimming intervals.


Entering lowercase and uppercase letters

- To enter lowercase letters, press the desired keys.
- To enter an uppercase letter, press **Shift/Find** (⇧) and then press a letter key. You don't need to press and hold Shift while entering a letter. When Shift is active, the ⇧ symbol appears in the lower-right corner of the screen.

- To turn Caps Lock on, press **Shift/Find** (🔍) twice. To turn it off, press **Shift/Find** (🔍) once. When Caps Lock is on, the **A** symbol appears in the lower-right corner of the screen.

Entering numbers, punctuation, and symbols

Number, punctuation, and symbol characters appear above the letters on the keys. To enter these characters, do one of the following:



- Press **Option** (⌥), and then press the key with the desired character shown above the letter. You don't need to press and hold Option while pressing the second key. When Option is active, the symbol **⌥** appears in the lower-right corner of the screen.
- To turn Option Lock on, press **Option** (⌥) twice. To turn it off, press **Option** (⌥) once. When Option Lock is on, the symbol **⌥** appears in the lower-right corner of the screen.

DID YOU KNOW? Some application views automatically default to Option Lock, such as the Dial Pad View in the Phone application or in the Calculator. In this case, you do not need to press Option to enter numbers.

Entering other symbols and accented characters

Symbols and accented characters that do not appear on the keyboard are sometimes called alternate characters because they are entered using the Alt (⌘) key.

- Enter the character that corresponds to the symbol or accented character you want. See the table on the next page.
- Press **Alt** (⌘).
- Press **Up** (▲), **Down** (▼), **Right** (▶), or **Left** (◀) to highlight the desired character.
- Press **Center** (⏏) to insert the character.

DID YOU KNOW? Alternate characters are grouped by their similarity to the base key. For example, the alternate characters for the e key are é, è, ê, ë, and €.

Symbols and accented characters

Press...	Then press Alt (Alt) to select...	Press...	Then press Alt (Alt) to select...	Press...	Then press Alt (Alt) to select...
a	á à â ã ä å æ	n	ñ	u	ú û ü ù
A	Á Â Ã Ä Å Æ	N	Ñ	U	Ú Û Ü Ù
b or B	ß	o	ó ò ö ô œ õ	x or X	x ø
c	ç ø ©	O	Ó Ò Ö Ô Æ Õ	y	ý ŷ
C	Ç ø ©	p or P	¶	Y	Ý Ÿ
e	é è ê ê	r or R	®	!	¡
E	É È Ê Ë	s	ß š Œ	?	¿
i	í î ï ï	S	ß Š Œ	:	:-) :(-)
l	í î ï ï	t or T	™	\$	€ £ ¥ ¢
l or L	£				

Press **Alt** (Alt) by itself, after a space or at the beginning or end of a line, to select these characters:

; _ • \% = ° ÷ € £ ¥ ¢ [] { } < > « » © ® ™ ~ ^ ø | Œ


Opening applications

When you open an application using either Applications View or an application button, you automatically close the application you were previously using.

Using the quick buttons

The front of the Treo 755P smartphone has three buttons that you can use to open applications. The fourth button opens Applications View (see [Using Applications View](#)).

TIP You can customize the quick buttons yourself; see [Reassigning buttons](#) for details.

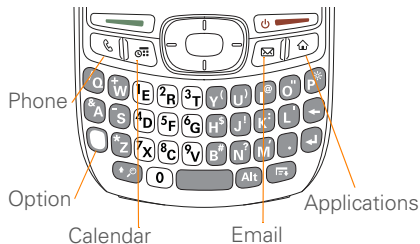

Each quick button opens two applications:

- To open a button's primary application, simply press the button.

Button	Primary application
	Phone
	Calendar
	Email



- To access a button's secondary application, press **Option** and then press the quick button.


Buttons	Secondary application
+	Web
+	World Clock
+	Messaging

DID YOU KNOW? Pressing **Option + Menu** dims your smartphone screen.

Using Applications View


You can access all available applications through Applications View.

- 1 Press **Applications** .
- 2 Use the **5-way**  to highlight the application you want to use.

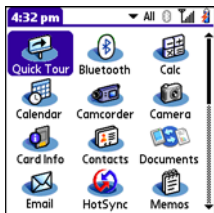

- 3 Press **Center**  to open the selected application.

In Applications View, you can also do any of the following:

- Press **Applications**  repeatedly to cycle through various categories of applications. See [Applications settings](#) for more info on categories.
- Enter the first few letters of the application's name to highlight it. For example, if you enter **P**, it highlights Phone; if you then enter **R**, it highlights Prefs. If you pause and then enter **R**, it highlights the first application that starts with **R**.

TIP You can also press and hold **Applications** from any screen on your smartphone to select from a list of your most recently used apps.



Your phone

The Phone application is your home base for making and receiving calls and for storing info about the people you need to stay in touch with.

You can effectively manage multiple calls, such as sending text messages to ignored calls, swapping between calls, and creating three-way conference calls. Your Palm® Treo™ 755P smartphone helps you perform all these tasks with ease.

You can do more than manage your phone calls, too. You can send text messages, open applications, go to your favorite web pages, see your upcoming appointments, and even find out if you have new email messages.

Benefits

- Stay in touch: you choose how
- Save time with shortcuts to your favorite info
- Have fun: add wallpaper and ringtones

In this chapter

Turning your smartphone on and off	37
Making calls	39
Receiving calls	43
Using voicemail	44
What can I do when I'm on a call?	46
Defining favorite buttons	52
Using a phone headset	55
Customizing phone settings.	60
What are all those icons?	68

Turning your smartphone on and off


NOTE Throughout this guide we use the term *smartphone* to describe your device and its physical attributes. We use the term *phone* to describe the features of your smartphone that let you connect to your wireless service provider's network to make and receive calls and transmit data.

The phone and the screen of your smartphone can be turned on and off separately. This means that you can wake up the screen to use just the organizer features of your smartphone, without turning on the phone. Also, when the screen is turned off, the phone can be on and ready for you to receive and make calls.


Waking up the screen



Wake up the screen and leave the phone turned off when you want to use only the organizer features of your smartphone; for

example, when you're on an airplane and want to look at your calendar.

- 1 Press and release **Power/End**  to wake up the screen.

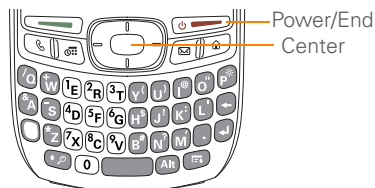TIP You can also press any of the quick buttons or the **Applications** button to wake up your smartphone screen.




- 2 Press **Center**  to turn off Keyguard. For more info about turning Keyguard on and off, see [Locking your keyboard \(Keyguard\)](#).
- 3 Press and release **Power/End**  to turn off the screen.

TIP You can set how long the screen stays on. Press **Applications**, select **Preferences**, select **Power**, and then adjust the **Auto-off after** setting.


Turning your phone on and off

When your phone is on, it is connected to your wireless service provider's network (provided you are in a coverage area) so that you can make and receive phone calls and use wireless services such as email, messaging, and the web browser. During initial setup, your phone is on by default, so you can use wireless services right away.


If you turn off your phone, you can still use the organizer features such as Contacts and Calendar, as well as the media features, such as the iTunes music application and Pics&Videos. This is sometimes referred to as *flight mode* and is ideal for airplane flights and maximizing battery life.

- 1 Wake up the screen.
- 2 Press and hold **Power/End**  to turn on your phone.

TIP If the Ringer switch is set to Sound On, you hear a series of tones when you turn your phone on and off (see [Silencing sounds](#)).


When your smartphone locates a signal (provided you are in a coverage area), your wireless service provider's name and the **signal-strength**  icon appear at the top of the screen, indicating that you can use the phone and Internet features (if supported by the mobile network).

TIP If you're outside a coverage area, **No Service** appears in the upper-left corner.

- 3 Press and hold **Power/End**  again to turn off your phone. When your phone is off, **Phone Off** appears at the top of the Phone application screen and your smartphone is not connected to any mobile network. You can still use the nonwireless features of your smartphone, such as Contacts, Calendar, Tasks, and Memos.

Opening the Phone application

- Press **Phone**  to open the Phone application's Main View.

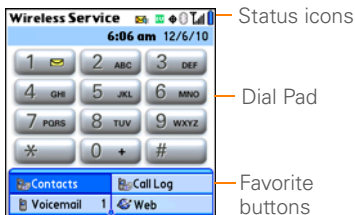


Making calls

Your smartphone offers several options for making calls. As you become familiar with your smartphone, you'll discover which method you prefer.

Dialing using the onscreen Dial Pad

- Press **Phone** .
- Enter the phone number by tapping the onscreen Dial Pad with the stylus.




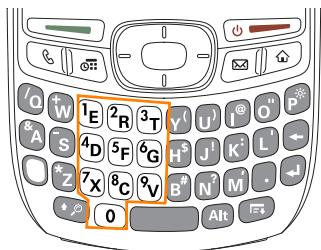
- Tap **Dial** or press **Send**  to make the call.

TIP If you changed the wallpaper in the Phone application's Main View (see [Customizing the Phone application's Main View](#)), you can still access the Dial Pad. From the Phone application's Main View, press **Send**, and then select **Dial Pad**.

DID YOU KNOW? You can paste numbers directly into the Dial Pad. Copy a number from another application and press **Phone** to switch to the Dial Pad. Open the **Edit** menu and select **Paste**. Press **Send** to dial.

Dialing using the keyboard

- Press **Phone** .
- Press the numbered keys to enter the phone number. (You don't need to press Option.)



3 Press **Send**  to make the call.

TIP You can also press **Center** on the 5-way to make the call.

Dialing by contact name

Before you can dial a call by contact name, you must create some contacts (see [Adding a contact](#)), or import them by synchronizing (see [Synchronizing information—the basics](#)).


- 1 Press **Phone** .
- 2 Select the **Contacts** favorite button.

3 Using the keyboard, just start entering one of the following for the contact you want to call:

- First name (JOH for John)
- Last name (SMI for Smith)
- First initial and last name (JSM for John Smith)

For example, entering SM would display Smilla Anderson, John Smith, and Sally Martin. Entering JSM finds only John Smith.

Text appears here as you enter it

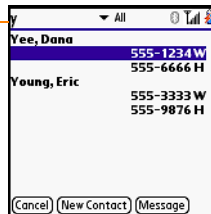

TIP To restart your search, press **Backspace** to delete letters you've entered. Or select **Cancel** to return to Main View.

- 4 Select the *number* you want to dial.
- 5 Press **Send**  to dial.





DID YOU KNOW? If you want to be able to dial by entering a contact name in the Phone application's Main View (instead of a phone number), you can change a setting to do that (see [Customizing phone settings](#)).

TIP To see more info for a contact, highlight the name and press **Center** on the 5-way to view the address, company, and other details.



Dialing with a speed-dial favorite button

Your smartphone comes with a few predefined speed-dial favorite buttons, but you can also create your own favorites. See [Creating a speed-dial favorite button](#).

- 1 Press **Phone** .
- 2 Press **Down**  to access Favorites.
- 3 Use the **5-way**  to highlight the speed-dial favorite you want.
Look for the  icon to distinguish a speed-dial favorite from other types of favorites.

TIP To view more favorite buttons, repeatedly press **Down** or **Right** on the 5-way to scroll to other Favorites pages.

DID YOU KNOW? If you select a contact from your Contacts list when you create a speed-dial favorite, you can see all the numbers for that contact. Highlight that contact's **speed-dial** favorite button, and press **Space** on the keyboard.

- 4 Press **Center**  to make the call.

Dialing from a web page or message

Your smartphone recognizes most phone numbers that appear on web pages or in text or email messages.


- 1 Select the phone number on the web page or in the message.





- 2 Press **Center**  to open the Dial Number dialog box.
- 3 Select **Dial** to dial the number.


TIP If you can't use the 5-way or stylus to highlight and dial a phone number on a web page or in a message, it means that your smartphone doesn't recognize the number as a phone number.


Redialing a recently called number

To dial the last number: From the Phone application's Main View, press and hold **Send**  to dial the last number you called.

To select from your most recently dialed numbers: From the Phone application's Main View, press **Send**  to open the Redial list, select the number you want to call, and then press **Send**  again to dial.




To select from a chronological list of calls: Select the **Call Log** favorite button. You can also access your Call Log from the Phone application's Main View by pressing **Send**  and selecting **Call Log** from the Redial list.

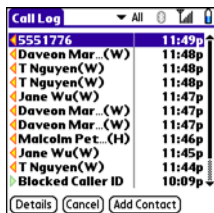

Ending a call

Do one of the following:

- Press **Power/End** .
- Select **Hang Up All**.
- Press the button on the headset (if the headset is attached).

DID YOU KNOW? If an entry in your Call Log supports text messaging, you can send a text message to that number. Highlight the entry in your Call Log, open the **Record** menu, and then select **Message** to address a message to the selected number.

Receiving calls


To receive calls, your phone must be on. This is different from having only the screen turned on (see [Turning your phone on and off](#)). When your phone is off, your calls go to voicemail.

DID YOU KNOW? If music is playing and a call arrives, the phone rings softly. The music pauses automatically if you answer the call and resumes when you hang up.




TIP See a photo of the person calling you! Learn how to assign a caller ID photo in [Assigning a caller ID photo](#).

To answer a call, do one of the following:

- Press **Send** .
- Select **Answer**.
- Press the **headset** button (if the headset is attached).

TIP The headset button may work differently on headsets other than the one provided with your smartphone.

To ignore a call, do one of the following:


Send the call to voicemail: Press **Power/End**  or select **Ignore**.

Send the caller a text message: Select **Ignore with Text**. This option sends the call to voicemail and opens a text message addressed to the caller.

NOTE Sending text messages to land line phones may not be supported.

To silence the phone while it is ringing, do one of the following:

- Press any key on your smartphone except Send, Power/End, or the 5-way.

- Slide the **Ringer switch** to **Sound Off** . This immediately silences all system sounds, including the ringer.


DID YOU KNOW? When you silence the ringer while it is ringing, you can either answer the call or let it ring through to voicemail.

Using voicemail

Your wireless service provider's service includes voicemail. Keep in mind that airtime and other charges apply when using voicemail from your smartphone.

Setting up voicemail

TIP If you can't connect to your wireless service provider's voicemail system, contact your wireless service provider for assistance.


- 1 Make sure your phone is turned on (see [Turning your phone on and off](#)) and that you are in a coverage area.
- 2 Press **Phone** .


- Press and hold **1** or select the **Voiceicemail** favorite button to dial your wireless service provider's automated voicemail system.
- Follow the voice prompts to set up your voicemail.

Voiceicemail notification


When you have a new voicemail message, you are notified with an Alert dialog box.

- To dismiss the Alert dialog box, select **OK**.
- To play the message, select **Listen**.

When you have messages that you have not listened to, a **Voiceicemail**  icon also appears in the title bar of the Phone application. You can select this icon to listen to your voicemail.

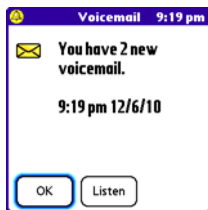

Listening to voicemail messages

- Press **Phone** .
- Press and hold **1** to dial the voicemail system, or select the **Voiceicemail** favorite button.
- Enter your voicemail password using the keyboard.


TIP Remember, you do not need to press Option to enter numbers, *, or # while on a call.

NOTE If you defined Extra Digits for the Voiceicemail favorite button (see [Editing a favorite button](#) for details), you can select this button to enter your password.

TIP If the voicemail icon stays in the title bar after you listen to your messages, you can clear the voicemail icon. Open the **Options** menu, select **Phone Preferences**, and then select **Clear Voicemail Icon**.


What can I do when I'm on a call?

When you make or receive a call, Active Call View appears.

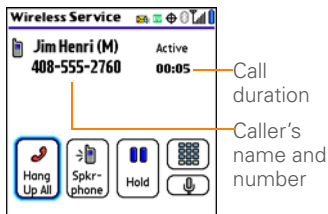

TIP If the screen dims during a call, press any key except Power/End to restore the screen brightness. Be careful not to press Power/End to restore the screen brightness because this ends the call.

DID YOU KNOW? You can set how long the screen stays at full brightness during phone calls. See [Optimizing power settings](#) for details.

Use the **5-way**  or stylus to select the onscreen buttons. Here's what the buttons do:



Ends the call immediately. You can also press the headset button (if the headset is attached).



Turns on the speakerphone. When the speakerphone is on, you can take the smartphone away from your ear and use other features during a call. For example, you can check your calendar or look up contact info.



Turns off the speakerphone when it is on.



Replaces the Spkr-phone button when a Bluetooth® headset is attached. Select this button to transfer the call from the Bluetooth headset to the built-in earpiece.



Places the current call on hold.



Enables you to place another call while the first call is on hold. For information on handling a second incoming call, see [Answering a second call \(call waiting\)](#).



Opens the Dial Pad so you can manually dial additional numbers, such as an extension or a response to a voice prompt.



Dials any extra digits (such as a password or an extension) that you assigned to a favorite button. This button replaces the Dial Pad button during outgoing calls to numbers that include predefined extra digits. See [Defining favorite buttons](#) for information on defining extra digits.





Mutes the microphone so that you cannot be heard.

DID YOU KNOW? Do you accidentally press onscreen buttons when you're on a call? You can disable the screen's touch-sensitive feature during your calls; see [Locking your screen](#).

Switching applications during a call


You can use many other applications on your smartphone while holding a phone conversation, including the organizer and text messaging features. You cannot, however, make a data connection while on a call. This means that you cannot browse the web or send and receive email messages while on a call.

- 1 Do one of the following:
 - Select **Hold** to pause your conversation while you view the other application.
 - Select **Spkr-phone** to continue the conversation while you view the other application.
 - Connect a headset (see [Using a phone headset](#)).
- 2 Press **Applications** .
- 3 Select the icon for the application you want to open.
- 4 Press **Phone**  anytime to return to Active Call View.

TIP You can also press **Phone** to toggle between Active Call View and Main View in the Phone app, so you can open a favorite by selecting its button.

Saving phone numbers

After you complete an outgoing call to a number that is not in your Contacts list, you are prompted to add the number to your Contacts list. You are also prompted to add new numbers from incoming calls with caller ID.

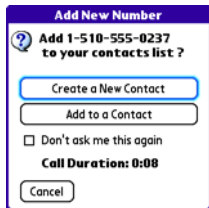


- To create a new contact entry for this number, select **Create a New Contact**, and enter the contact's info.
- To add this number to an existing contact entry, select **Add to a Contact**, and then select the contact. This pastes

the number into the first available phone number field for that contact.

- To decline adding this number, select **Cancel**.
- To disable the Add New Number prompt, check the **Don't ask me this again** box.

TIP You can turn the Add New Number prompt on and off. From the Phone application's Main View, open the **Options** menu, and select **Phone Preferences**. To turn this option on, check the **Ask to add unknown phone numbers after calls** box. To turn this option off, uncheck this box.

If you don't add a number right away, follow these steps to add it later.


- 1 In the Call Log (see [Redialing a recently called number](#)), highlight the number you want to save.
- 2 Press **Menu** .
- 3 Select **Add Contact**.
- 4 Enter the information for the entry.
- 5 Select **Done**.

Making a second call

You can make a second call while your first call is still active.

- 1 Dial the first number and wait until the person answers.
- 2 Select **Hold**.
- 3 Select **Add Call**.
- 4 Dial the second number using any of the methods described in [Making calls](#).
- 5 When the **Dial another call** prompt appears, select **Yes**.

When two calls are in progress, Active Call View includes two status lines, each representing one of the calls.

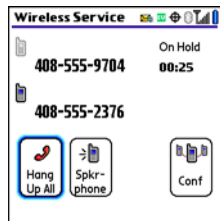


DID YOU KNOW? When the second call is an outgoing call, you can conference the two calls, but you cannot swap between them.



When the second call is an incoming call, you can swap between the two calls, but you cannot conference them.

When two calls are active and you press **Power/End**, you hang up both calls. If the second call is an outgoing call, you can return to the first call by waiting for the person on the second call to hang up. If you accidentally hang up both calls, your smartphone automatically dials the number that was on hold.

Answering a second call (call waiting)

When you are on a call, you can receive a second call. When the second call comes in, you hear a call waiting tone and the Call Waiting dialog box appears. You can do any of the following to handle the second call:

- To place the current call on hold and answer the new call, press **Send**  or select **Answer**.
- To send the new call to voicemail, select **Ignore**.

- To send the new call to voicemail and send the caller a text message, select **Ignore with Text**.
- To hang up the current call and answer the new call, press **Power/End** . When the incoming call message reappears, select **Answer** or press **Send** .


After you answer a second call, you can switch between the original call and the second call by selecting **Swap**.

Making a conference call

When you are on a call and place a second outgoing call, you can join the two calls in a conference session, provided that the service is available in your area. Please contact your wireless service provider for more information. Additional charges may apply and minutes in your mobile account may be deducted for each call you place.

- While the first call is in progress, place a second call.
- Select **Conf**. This joins the two calls in a conference session.




- To end the conference, press **Power/End**  to end all the calls.


DID YOU KNOW? Pressing **Send** during a conference call usually hangs up the second call. However, depending on your network connection, you may occasionally hang up the first call.




Using Flash mode during a call

Flash mode enables you to manually manage your calls while one or more calls are active. This mode is often used during a conference call when one of the calls has ended but the other remains connected.

- 1 Press **Send**  from Active Call View.
- 2 If the **Do you want to switch to Flash mode** prompt appears, select Yes.





- 3 While in Flash mode, do any of the following:
 - If you have one call in progress and answer an incoming second call, press **Send**  to swap between the calls.

- If you have one call in progress, to make an outgoing second call, dial the number using any of the methods described in [Making calls](#).
 - If you have one call in progress and place an outgoing second call, press **Send**  after establishing a connection with the second party to set up a conference session using three-way calling.
 - If you have two calls in conference, press **Send**  to hang up one of the calls; you can then dial another number and place the new caller into the conference session.
- 4 To exit Flash mode and end all the calls, press **Power/End** .

Forwarding calls

Please check with your wireless service provider about availability and pricing of forwarding calls to another phone; call forwarding is not available in all areas, and additional charges may apply.

BEFORE YOU BEGIN Ask your wireless service provider for call forwarding codes. You need the codes to enable and disable call forwarding. You may also need to modify the following steps based on your wireless service provider's instructions.

- 1 Press **Phone** .
- 2 Enter your wireless service provider's call forwarding code followed by the number where you want to forward your calls.
- 3 Press **Send**  from Active Call View.
- 4 Call your smartphone to confirm that call forwarding is active.

When you're ready to turn off call forwarding, open the Phone application and enter the code to disable your wireless service provider's call forwarding feature.

Defining favorite buttons

Your Treo smartphone provides 70 favorite buttons for quick access to the following common tasks:

- Dialing a phone number (speed dial)
- Accessing your Call Log
- Accessing the onscreen Dial Pad
- Opening an application
- Accessing a web page
- Addressing a text or email message
- Accessing voicemail (preset on your Treo smartphone)



Your wireless service provider may preset favorite buttons on your smartphone that are customized for their services, and you may not be able to edit or delete these preset favorite buttons. However, you can always customize the remaining favorite buttons to perform any of the supported tasks.

DID YOU KNOW? If you're upgrading from a previous Treo smartphone, your favorites may be transferred along with your other info. However, you may need to rearrange the order in which your favorites appear by opening the **Record** menu and then selecting **Edit Favorites Pages**.

DID YOU KNOW? You can assign a special ringtone for a contact. See [Assigning a caller ID ringtone](#) for details.


Creating a speed-dial favorite button

- 1 Press **Phone** .
- 2 Use the 5-way to select a blank favorite button.

TIP If there are no blank buttons on the current Favorites page, press **Right** on the 5-way to scroll through the other pages. If all your favorites are full, you can delete a favorite to make room for a new one (see [Deleting a favorite button](#)).

3 Enter a label for the favorite:

- If the entry is for an existing contact, select **Lookup**. Start entering the last name of the contact, and select the contact when it appears in the lookup list.
- If the entry is for a new contact, enter the label, press **Down** ▼, and enter the number.

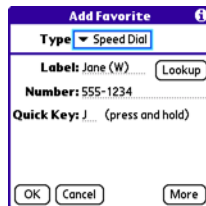

- 4 (Optional) Enter a Quick Key, which you can press and hold from the Phone application to instantly dial this

speed-dial number. (The Quick Key works only from the Main view of the phone application.)



- (Optional) Select **More**, and then select advanced options:

Extra Digits: Defines additional digits to dial, such as a password or extension. To enter a one-second pause, insert a comma between digits. To add a longer pause, enter more commas.

Dial Extra Digits Automatically: Dials predefined extra digits immediately after dialing the phone number, when checked.

- Select **OK**.




Creating other types of favorite buttons

- Press **Phone** .
- Use the **5-way**  to access Favorites.
- Select a blank button.
- Select the **Types** pick list and select **Call Log**, **Dial Pad**, **Application**, **Message**, **Email**, or **Web Link**.

- Enter a label for the favorite and enter any other necessary information on the screen.
- (Optional) Enter a **Quick Key**, which you can press and hold to open the favorite from the Phone application. (The Quick Key works only from the Main view of the phone application.)
- Select **OK**.

DID YOU KNOW? When creating a Message or Email favorite, you can enter multiple addresses; simply separate each address with a comma. This is an easy way to send messages to a group of people.

Editing a favorite button




- Press **Phone** .
- Use the **5-way**  to access Favorites.
- Highlight the favorite button you want to edit.
- Press **Menu** .
- Select **Edit Favorites Button** on the **Record** menu.
- Make the desired changes. For example, you can add a Quick Key,

which you can press and hold to instantly open the favorite from the Phone application. (The Quick Key works only from the Main view of the phone application.)

7 Select **OK**.

TIP You can also organize your buttons on various Favorites pages. Open the **Record** menu and select **Edit Favorites Pages**. Drag and drop the buttons into a new slot. To move a favorite to another page, drag the button onto the page icon at the bottom of the screen.

Deleting a favorite button

- 1 Press **Phone** .
- 2 Use the **5-way**  to access Favorites.
- 3 Highlight the favorite button you want to delete.
- 4 Press **Menu** .
- 5 Select **Edit Favorites Button** on the **Record** menu.
- 6 Select **Delete**.
- 7 Select **OK**.

Using a phone headset

You can connect a phone headset for hands-free operation. If you need to use your phone while driving and this is permitted in your area, we recommend using a phone headset (wired stereo headset included) or a hands-free car kit (sold separately).

In addition to the stereo headset included with your smartphone, your smartphone is compatible with the following types of headsets that are sold separately:

- Wired headsets with a 2.5mm connector (3-pin or 4-pin)
- Wireless headsets and car kits enabled with Bluetooth 1.1 or 1.2 wireless technology


TIP The headset designed for Treo 180/270/300 devices is not compatible with your Treo 755P smartphone.

Check the specifications for your headset or car kit to confirm compatibility. When in doubt, ask the manufacturer if the product is compatible with Treo 755P smartphones. To find compatible hands-free devices, go to <http://go.palm.com/treo755p/>.

NOTE You cannot use a headset with Bluetooth wireless technology to listen to music files.

TIP If you want to use a stereo headset with a 3.5mm connector to listen to music files, you need to purchase a 2.5mm stereo adapter. Visit <http://go.palm.com/treo755p/> for more info on audio accessories.

Using a wired headset

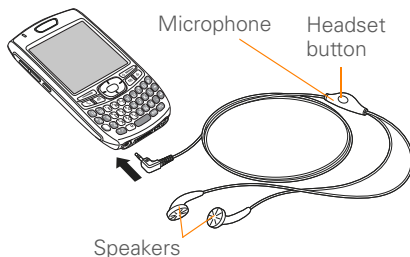

When using the headset that is included with your smartphone, you can press the headset button to perform any of the following tasks:

- Answer an incoming call
- Answer a call-waiting call
- Pick up a call that is on hold
- Switch between two calls (if the second call is incoming)
- Join two calls in a conference (if the second call is outgoing)
- Hang up all calls in progress

TIP The headset button may work differently on other headsets.




Connecting to a Bluetooth hands-free device


KEY TERM Partnership Two devices—for example, your smartphone and a hands-free device—that can connect because each device finds the same passkey on the other device. Once you form a partnership with a device, you don't need to enter a passkey to connect with that device again. Partnership is also known as paired relationship, pairing, trusted device, and trusted pair.

Once you set up a partnership with a Bluetooth headset or car kit, you can communicate with that device whenever it is turned on and within range. Bluetooth range is up to 30 feet/10 meters in optimum environmental conditions. Performance and range may be reduced by physical obstacles, radio interference from nearby electronic equipment, and other factors.

TIP If you hear a headset buzz or experience poor microphone performance, your headset may be incompatible with your smartphone.

BEFORE YOU BEGIN Prepare your headset or car kit to accept a connection from another Bluetooth device. See the documentation that came with your hands-free device for instructions.


- 1 Press **Applications**  and select **Bluetooth**  or tap the **Bluetooth**  icon in the title bar.
- 2 Select **Bluetooth On**.

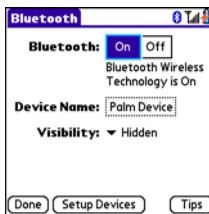

- 3 (Optional) Enter a device name that identifies your smartphone when it is discovered by other Bluetooth devices.

NOTE Use the same device name for all your Bluetooth connections. If you change the device name, you need to re-create any partnerships you have already created.

- 4 Keep **Visibility** set to **Hidden**, and then select **Setup Devices**.
- 5 Select **Hands-free Setup**.

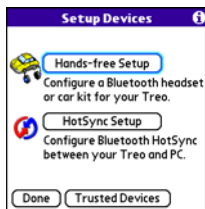

- 6 Follow the onscreen instructions to create a partnership with the specific hands-free device. When prompted, enter a passkey.

IMPORTANT Some hands-free devices have a predefined passkey; if your device has a predefined passkey, you can find it in the documentation for that device. Other devices provide a screen where you enter a passkey that you make up. In either case, you must use the same passkey on both your smartphone and your hands-free device. We recommend that where possible, you make up a passkey of 16 alphanumeric characters (letters and numerals only) to improve the security of your smartphone. The longer the passkey, the more difficult it is for the passkey to be deciphered.

- 7 After you finish setting up the device, select **Done** to return to Trusted Devices View.

NOTE For some car kits, you need to initiate a Bluetooth connection from your smartphone to complete the partnership process. To do this, highlight the car kit in Trusted Devices View, press **Menu** (☰), and then select **Connect**.

- 8 (Optional) Enable advanced hands-free features by pressing the **Multifunction** button (MFB) on the hands-free device.

You can tell that the connection is successful when you see a light-blue headset icon in the title bar of the Phone application. You can now use your smartphone with the Bluetooth hands-free device.

Using a Bluetooth hands-free device

After you create a partnership with your Bluetooth hands-free device and you turn it on within range (up to 30 feet/10 meters), your smartphone automatically routes all calls to the hands-free device instead of to the earpiece on your smartphone. When a call comes in, your smartphone rings and

the hands-free device beeps. Even if you answer the call on your smartphone, the call goes to the hands-free device. If you prefer to route calls to the earpiece on your smartphone, you can change the settings on your smartphone to do this; see [Customizing advanced settings for your hands-free device](#).

TIP If you're using a Bluetooth hands-free device and you want to return to the earpiece during a call, select **Cancel Bluetooth** in Active Call View. To return the call to the hands-free device, open the **Options** menu and select **Connect Bluetooth**.

The features of your hands-free device vary by model. Check the documentation for your hands-free device for details about these features. Your smartphone can support the following actions, provided that your hands-free device also supports them:



- Answer an incoming call
- Hang up a call and answer a call-waiting call
- Place a call on hold and answer a call-waiting call
- Hang up a single call

- Transfer an outgoing call from the earpiece on your smartphone to the hands-free device
- Ignore an incoming call
- Redial the last number you called from the hands-free device

DID YOU KNOW? If you have more than one Bluetooth hands-free device, the last one you connected to becomes the active device. To switch between devices, disconnect the active device before you try to connect to the other device.

Customizing advanced settings for your hands-free device

You can set whether your hands-free device automatically answer calls, provided the device supports this feature.

- 1 Press **Applications**  and select **Prefs** .
- 2 Select **Hands-free**.
- 3 Do one of the following:

To send all calls to your hands-free device: Check the **Always route calls to handsfree** box. Select the **Auto answer** pick list and select whether you want

your hands-free device to automatically answer incoming calls and how quickly it answers.

To choose between the earpiece on your smartphone and your hands-free device on a call-by-call basis:


Uncheck the **Always route calls to handsfree** box. When the phone rings, you can answer the call with your hands-free device by pressing the multifunction button on your hands-free device, or you can answer the call with the earpiece on your smartphone by using the controls on your smartphone (see [Receiving calls](#)).

- 4 Select **Done**.

Customizing phone settings

Customizing the Phone application's Main View

Phone Display Options let you customize the appearance and entry mode of the Phone application's Main View.

- 1 Press **Phone** .
- 2 Press **Menu** .
- 3 Select **Options**, and then select **Phone Display Options**.
- 4 Set any of the following options:
 - Show...**: Sets whether the Dial Pad or wallpaper appears in the Phone application's Main View. If you select Show Wallpaper, select the thumbnail image and then select an image to use as wallpaper.

TIP If you select the Show Wallpaper option, you can still access the Dial Pad. From the Phone application's Main View, press **Send** to open the Redial list, and then select **Dial Pad**.

DID YOU KNOW? You can also set the background for the Calendar Agenda View. See [Customizing display options for your calendar](#) for details.



Typing: Sets whether typing enters numbers in the Dial Pad or starts a contact search.

TIP If you select the **Typing starts contacts search** option, you can still enter numbers in the Dial Pad by pressing **Option** before entering the first number.

Show Calendar event: Sets whether the current event from the Calendar application appears in the Phone application's Main View. When this option is enabled, you can then select this event to jump to the Calendar application.

Show Favorite buttons: Sets whether Favorites appear in the Phone application's Main View.



Rows: Sets the number of favorite button rows that appear in the Phone application's Main View.

5 Select **OK**.


Selecting ringtones

You can set various tones for various types of incoming calls.

DID YOU KNOW? You can download any compatible ringtone directly to your smartphone (see [Downloading files from a web page](#)). You can also download ringtones to your computer and then email them to your smartphone.

- 1 Press **Phone** .
- 2 Press **Menu** .
- 3 Select **Options**, and then select **Sound Preferences**.

- 4 Select the **Application** pick list and select **Ring Tones**.

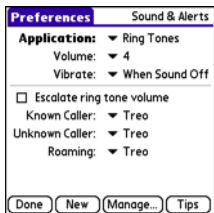

- 5 Select the **Volume** pick list and select the volume level.
- 6 Select the **Vibrate** pick list and select how you want your smartphone to vibrate upon an incoming call.
- 7 (Optional) Uncheck the **Escalate ring tone volume** box if you want the ring to remain at the same volume regardless of how long it rings.
- 8 Select ringtones from the following pick lists:

Known Caller: An incoming call from someone in your Contacts or Favorites.

Unknown Caller: An incoming call from someone identified by caller

ID who is not in your Contacts or Favorites.



Roaming: A special tone for incoming calls when you're outside your home mobile network.



- 9 Select **Done**.

DID YOU KNOW? You can assign a ringtone to a contact or to an entire category of contacts. Ringtones assigned to individual contacts override the ringtone assigned to a category of contacts.

Creating and managing ringtones

You can also record sounds and use them as ringtones.



- 1 Press **Phone** .
- 2 Press **Menu** .
- 3 Select **Options**, and then select **Sound Preferences**.
- 4 Select **Manage**.

- 5 Do one of the following:
 - To record a sound, select **New**.
 - To play a sound, select it with the **5-way** .
 - To delete a sound, highlight it and press **Backspace** .
 - To send a sound, highlight it and select **Send**.
- 6 Select **Done** twice.

TIP You can also create a new sound by selecting **New** in Sound & Alerts Preferences.

Selecting Phone alert tones

You can set various tones for various types of alerts.

- 1 Press **Phone** .
- 2 Press **Menu** .
- 3 Select **Options**, and then select **Sound Preferences**.


- 4 Select the **Application** pick list and select **Phone Alerts**.



- 5 Select the **Volume** pick list and select the volume level.
- 6 Select the **Vibrate** pick list and select how you want your smartphone to vibrate upon an incoming call.
- 7 Select alert tones from the following pick lists:
 - Voicemail Alert:** Indicates that a new voicemail message has arrived.
 - Coverage in/out:** Indicates that you moved into or out of a coverage area.
 - Signal faded:** Indicates that the signal lost strength and a call was dropped.
- 8 Select **Done**.

Adjusting call volume

While a call is in progress, press the **Volume** button on the side of your smartphone to adjust the call volume.

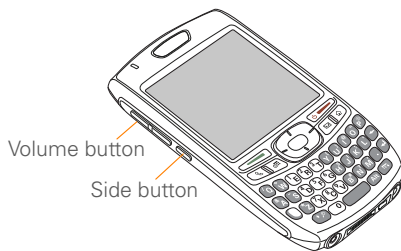


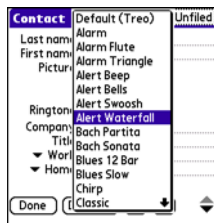
Adjusting ringer volume

When a call is not in progress and music is not playing, press the **Volume** button on the side of your Treo smartphone to adjust ringer volume, and then press the **Side** button to confirm your selection.

Assigning a caller ID ringtone

Caller ID ringtones can let you know who is calling before you even look at your smartphone. This is a great way to identify calls from important people in your life and to screen calls you'd prefer not to answer.


- 1 Press **Phone** .
- 2 Select the **Contacts** favorite button.
- 3 Open the contact to whom you want to give a caller ID ringtone.
- 4 Select **Edit**.
- 5 Select the **Ringtone** pick list and select a tone for this contact entry.



- 6 Select **OK**.

TIP You can assign a ringtone to an entire category of contacts. For example, use a special ringtone for categories such as Family, Work, or Golf Buddies. Select the **category** pick list in the upper-right corner and select **Edit Categories**. Select the category, and then select the ringtone on the Edit Category screen.

Assigning a caller ID photo

- 1 Press **Phone** .
- 2 Select the **Contacts** favorite button.
- 3 Open the contact to whom you want to give a caller ID photo.
- 4 Select **Edit**.





- 5 Select the **Picture** box and do one of the following:
 - Select **Camera** to take a photo and add it to this contact entry when you save the photo.
 - Select **Photos** and select an existing photo that you want to assign to this contact.
- 6 Select **Done**.

DID YOU KNOW? If you assign pictures to your contacts in Microsoft Outlook (sold separately) or Palm® Desktop software and you install the desktop software from the Palm Software Installation CD, the pictures are automatically added to your contact entries on your smartphone when you sync. If you use third-party synchronization software, picture sync may not be supported. Check with the software vendor for information.

Setting your dialing preferences

Dialing preferences let you assign a prefix to your phone numbers. For example, you can automatically dial a 1 before all 10-digit phone numbers. You can add a different prefix based on the length of the phone number.

- 1 Press **Phone** .
- 2 Press **Menu** .
- 3 Select **Options** and then select **Dial Preferences**.
- 4 Set any of the following options:

Dialing from North America: Formats phone numbers using North American conventions (XXX-XXX-XXXX).

Always dial 1 in front of the area code: Adds a 1 in front of 10-digit phone numbers. This option is available only when North American Dialing is enabled.

International Prefix: Replaces the + sign in front of International phone numbers with the specified number.

To 7 digit numbers: Adds a prefix to 7-digit numbers. For example, enter your own area code to automatically add your area code when you dial local numbers.



To (6), (5), (4), digit numbers: Adds a prefix to numbers with the specified number of digits. For example, if all the phone numbers in your office begin with 555, followed by a 4-digit

extension, you can select 4, enter your area code, and then enter 555 as the prefix. When you want to call a colleague, simply enter the colleague's 4-digit extension. Your smartphone automatically dials the area code and 555 plus the 4-digit extension. You can also create contact entries with just the extension number and then dial the number from your Contacts list.

- 5 Select **OK**.

Choosing your privacy settings

To maintain privacy, you can choose whether your longitude and latitude position are available to the network and third-party applications at all times or only during an emergency call.

- 1 Press **Phone** .
- 2 Press **Menu** .
- 3 Select **Options**, and then select **Phone Preferences**.





- 4 Select one of the following:

Location ON: Enables the network to determine your longitude and latitude position at any time in order to provide location-specific services.

Emergency Only: Restricts your location information to emergency services only.

- 5 Select **OK**.

When **Location ON** is selected, the **Location**  icon appears. When **Emergency Only** is selected, a red slash appears over the **Location**  icon.

Enabling TTY

TTY (also known as a TDD or Text Telephone) is a telecommunications device that enables you to communicate by

telephone if you are deaf, are hard of hearing, or have speech or language disabilities.

Your device is compatible with select TTY devices. You can connect a TTY/TDD machine to your device through the headset jack while this mode is enabled. Please check with the manufacturer of your TTY device for connectivity information and to ensure that the TTY device supports digital wireless transmission.

1 Press **Phone** .

2 Press **Menu** .

3 Select **Options** and then select **Phone Preferences**.

4 Select the **TTY/TDD** pick list and select one of the following settings:

Default Mode: Sends and receives text.

VCO Mode: Sends voice and receives text. This is also known as Voice Carry Over Mode.

HCO Mode: Sends text and receives voice. This is also known as Hearing Carry Over Mode.



Off: Sends and receives voice.

- 5 Select **OK**. A red **TTY T** icon appears in the title bar of the Phone application whenever TTY is enabled.

Turning on the HAC Setting

CAUTION Do not turn on the Hearing Aid Compatibility setting unless you use a hearing aid with a telecoil. Using this setting without a hearing aid or with a hearing aid without a telecoil may be harmful to your hearing.

When the Hearing Aid Compatibility (HAC) setting is on, your smartphone sends the audio from your phone calls to the telecoil rather than to the microphone of your hearing aid. You are likely to hear calls much better because volume is increased and background noise and feedback are diminished. The HAC setting improves only the calls you listen to through the earpiece. It does not affect calls heard on the speakerphone or with a car kit or headset. HAC requires extra battery power, so watch your battery consumption when it's turned on.

- 1 Press **Phone** .
- 2 Press **Menu** .

- 3 Select **Options** and then select **Phone Preferences**.
- 4 Check the **Hearing Aid Compatibility** box.
- 5 Select **OK**.

What are all those icons?

You can monitor the status of several items using icons in the title bar of the Phone application:

Wireless Service Name Your phone is on and you are in your wireless service provider's coverage area. If you are outside a coverage area, **No Service** or **Roaming** appears instead. No Service means that there is no coverage at all, and Roaming means that another wireless service provider's network is available. When you turn off your phone, **Phone Off** appears.

R

You are outside your wireless service provider's coverage area and are roaming on another wireless service provider's network. This icon appears in addition to the word **Roaming**. The icon may flash if the provider is not on your wireless service provider's preferred roaming list.



Your phone is on and is connected to an EVDO network, but you are not actively transmitting data. You can still make and answer calls.



Your phone is on and a 1xRTT data connection is active. You can still make calls, but you cannot answer calls (incoming calls go to voicemail). When you make a call the data transmission is automatically interrupted.



Your phone is on. The bars display the signal strength. The stronger the signal, the more bars that appear. If you are outside a coverage area, no bars appear.



Your phone is on and an EVDO data connection is active. You can still make or answer calls. When you make or answer a call, the data transmission is automatically interrupted, and then it resumes when you end the call.



You are in an area that supports 1xRTT data services.



You are in an area that supports EVDO data services.




Your phone is on and is connected to a 1xRTT network, but you are not actively transmitting data. You can still make and answer calls.



You have new voicemail messages. You can select this icon to retrieve your messages.



You have a new alert, such as a Calendar alarm or a new text message. To view the alert, press and hold **Center**  or select the icon. See [Viewing and using the alerts](#).

T

TTY/TDD Mode is active. Use this mode to communicate by telephone if you are deaf or hard of hearing or if you have speech or language disabilities.



The Location setting is on and your longitude and latitude position are available to the network and third-party applications. When you select the **Emergency Only** setting, this icon appears with a red slash and your location is available only during emergency calls.



The Bluetooth® wireless technology icon appears in gray when this feature is off, in blue when this feature is on, and in reverse blue when your smartphone is communicating with another Bluetooth device.




This icon replaces the Bluetooth icon when your smartphone is connected to a Bluetooth headset or car kit. This icon appears in dark blue when a call is in progress and in light blue when a call is not in progress.



This icon replaces the Bluetooth icon when a dial-up networking connection using Bluetooth wireless technology is active.



Your battery is partially drained. When the battery drains to 20% of its capacity, the icon changes from blue to red. At 10% of its capacity, you begin to receive warning messages, and at 5% of its capacity, the smartphone beeps (if the Ringer switch is set to Sound On ) and the icon changes from red to clear.



Your battery is charging. The lightning bolt turns from red to green when the battery is fully charged and your smartphone remains connected to the charger.



Your battery is fully charged and your smartphone is not connected to the charger.



You have new text messages. The numbers next to the icon indicate the number of unread messages in your Inbox. You can select this icon to retrieve your messages.



Displays the current (or next) event from the Calendar application. If you have an event conflict during the current time period, a red bar appears next to the event description. To jump to the current event in the Calendar application, select the Calendar status line (see [Displaying your calendar](#) for details).

KEY TERM 1xRTT (Single carrier [1x] radio transmission technology): A wireless technology that can provide fast data transfer and Internet access with average speeds of 60–80Kbps and bursts up to 144Kbps.

KEY TERM EVDO (Evolution Data Optimized): A wireless broadband technology that is designed for very high speed data transfer with average download speeds of 400–700Kbps, and capable of reaching download speeds of up to 1.8Mbps and upload speeds of up to 156Kbps.

DID YOU KNOW? You can tap the Bluetooth icon to quickly turn Bluetooth wireless features on and off.

TIP To display the remaining battery power, tap the battery icon at the top of the screen.



Your email and other messages

You already know how efficient email and messaging are for staying in touch. Now your Palm® Treo™ 755P smartphone brings you a new level of convenience: email on the go. Enjoy the ease and speed of communicating with friends, family, and colleagues anywhere you can access your wireless service provider's data network.

You can send photos to your friends and family, or create Microsoft® Word or Excel® files and send them to your colleagues. You can also receive attachments to view and edit at your convenience.

Benefits

- Access email on the go
- Send and receive photos, sound files, Word and Excel files, and more
- Save messages from your computer to view at a convenient time

In this chapter

Which application should I use?	75
The VersaMail® application	75
Messaging	88

Which application should I use?

Your smartphone includes the VersaMail® application (called Email in Applications View), which you can use to access your corporate, personal, and fee-based Internet email. You can also access web-based email, like Yahoo! Mail or Hotmail, from the web browser on your smartphone.

NOTE Your wireless service provider may offer additional email applications that are compatible with your Treo 755P smartphone. Contact your wireless service provider's customer service department for more info.

TIP An email application is not an email provider. It works with an account from a provider to transfer messages to your smartphone.

KEY TERM **Email provider** The service you use to send and receive email. Your email provider's name appears between the @ symbol and the dot symbol in your email address.

BEFORE YOU BEGIN You must activate data services on your wireless service provider account before you can use email on your smartphone.

The VersaMail® application

Before you can use the VersaMail application, you need to enter your email account settings. If you have multiple email accounts, you must enter settings for each email account.

You can find additional information on using and customizing the VersaMail application in the *User Guide for the VersaMail® Application* at <http://go.palm.com/treo755p/>.

NOTE The instructions in this section apply only to the version of VersaMail that came with your smartphone. If you upgrade to a newer version of VersaMail, please refer to the instructions included with that version.

How do I get started?

1 If either of the following is true, see the *User Guide for the VersaMail® Application*:

- You used the VersaMail application on your previous Palm OS® device, and you want to transfer those settings to your smartphone.
- You plan to use VersaMail to access an email account on a Microsoft Exchange ActiveSync® server, a Lotus Notes server, or a Microsoft MAPI server.

2 If your email provider is listed here, skip to [Setting up the VersaMail application to work with common providers](#).

Canada: Rogers High Speed and Sympatico

Mexico: Yahoo!

United States: AOL, Apple.Mac, AT&T Global, AT&T Worldnet, Bell South, Cablevision, Charter, Comcast, CompuServe, Concentric, Covad, Cox Central, Cox East, Cox West, EarthLink, Gmail, *HotMail/MSN, Juno, Mail.com, NetZero, RCN, SBC/PacBell, SBC/



Prodigy, Speakeasy, USA.net, Verizon DSL, and Yahoo!

3 If your email provider's name is not listed, you need to obtain the following info from your system administrator or ISP, and then skip to [Setting up the VersaMail application to work with other providers](#):

- Mail protocol: POP or IMAP
- Incoming and outgoing mail server names, such as mail.myisp.com
- Incoming and outgoing mail server port numbers, such as 110 (incoming POP), 143 (incoming IMAP), or 25 (outgoing POP or IMAP)
- (If necessary) Security settings: APOP, ESMTP, SSL

TIP The correct protocol, server, and security settings are required for the VersaMail application to be able to send and receive email for your account. Your email provider can easily provide these settings. You may be able to find this account setup info on your email provider's website.

Setting up the VersaMail application to work with common providers

- 1 Press **Applications**  and select **Email**  to open the VersaMail application.
- 2 If the Initial Setup dialog box appears, select **Continue**.
- 3 Make up a name that describes this account and enter it in the **Account Name** field. For example, Work Email.
- 4 Select the **Mail Service** pick list, select your email provider (such as Earthlink), and then select **Next**.



- 5 Enter the username for your email account. Your username appears before the @ symbol in your email address.



NOTE For some email providers, such as Gmail, your username is your entire email

address. Check with your email provider if you are not sure what to enter as your username.

- 6 Select the **Password** box, enter your email account password, select **OK**, and then select **Next**.
- 7 Select **Next**, and then select **Done**.

TIP To enter settings for another email account, open the **Accounts** menu and select **Account Setup**.

Setting up the VersaMail application to work with other providers

- 1 Press **Applications**  and select **Email**  to open the VersaMail application.
- 2 If the Initial Setup dialog box appears, select **Continue**.
- 3 Make up a name that describes this account and enter it in the **Account Name** field. For example, Work Email.
- 4 Select the **Mail Service** pick list, and then select **Other**.
- 5 Select the **Protocol** pick list, select **POP** or **IMAP** (based on the info you got from

your system administrator or ISP), and then select **Next**.



- 6 Enter the username for your email account. Your username appears before the @ symbol in your email address.

NOTE For some email providers, such as Gmail, your username is your entire email address. Check with your email provider if you are not sure what to enter as your username.

- 7 Select the **Password** box, enter your email account password, select **OK**, and then select **Next**.
- 8 Enter your email address and the names of the incoming and outgoing mail servers, and then select **Next**.
- 9 If your system administrator or ISP provided port numbers or security

settings, select **Advanced**, and then enter those settings.

TIP You can also select **Advanced** to set more options for incoming and outgoing messages.

10 Select **Done**.

Creating and sending email messages

- 1 From the Inbox, select **New**.
- 2 Begin entering one of the following for the addressee:
 - Email address
 - First name
 - Last name

TIP If you enter address info that matches one or more of your contacts, the VersaMail application displays the matching contacts. To accept a suggestion, select the correct contact. To send to a different address, keep entering the email address or name.

- 3 Enter the subject and message text.

TIP To move between fields, press **Up** or **Down** on the 5-way.

4 Select one of the following:

Send: Connects and sends all messages immediately. If the message cannot be sent for any reason, the message is stored in your Outbox.

Outbox: Stores the message to be sent later.

Drafts: Saves the message so you can continue working on it at another time.

Cancel: Returns to the message list without saving the message.



DID YOU KNOW? The VersaMail application makes up to five attempts to send a message; if it is still not successful, an alert message appears and you must try to manually send the message again.


Adding attachments to your email messages

You can attach several types of files to your email messages.

TIP To remove an attachment, select the file in the **Attachments** box, and then select **Delete**.

Attaching photos and videos


- 1 Create the message to which you want to attach the photo or video.
- 2 On the New Message screen, select the **red paper clip** icon in the upper-right corner.
- 3 From the **Type** pick list, select **Photo/Video**.

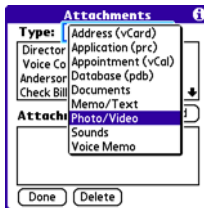

- 4 On the Select Media screen, select the **Album** pick list to go to the album containing the photo or video you want, and then check the box to the left of the photo or video.
- 5 Select **Done**.

TIP To attach more than one file to a message, repeat steps 3 and 4.


Attaching ringtones

- 1 Create the message to which you want to attach the ringtone.
- 2 On the New Message screen, select the **red paper clip**  icon in the upper-right corner.
- 3 From the **Type** pick list, select **Sounds**.


TIP Ringtones that are copy-protected appear in the Sounds application with a lock icon. You can use these ringtones on your phone, but you cannot send them as attachments.

- 4 Select the ringtone you want, and then select **Insert**.
- 5 Select **Done**.

Attaching Word, Excel®, PowerPoint®, and PDF files

- 1 Create the message to which you want to attach the file.
- 2 On the New Message screen, select the **red paper clip**  icon in the upper-right corner.
- 3 From the **Type** pick list, select **Documents**.
- 4 Select the file you want on the Documents screen.
- 5 Select **Done**.


Attaching other types of files

- 1 Create the message to which you want to attach the item.
- 2 On the New Message screen, select the **red paper clip**  icon in the upper-right corner.
- 3 From the **Type** pick list, select the type of file to attach—for example, **Address**, **Appointment**, or **Memo/Text**.
- 4 Select the item you want from the list in the **Type** box.
- 5 Select **Done**.

Receiving and viewing email messages

- 1 From any mailbox, select **Get** or **Get & Send**.
- 2 From the Inbox, select the message you want to view.




- 3 If a large incoming message is truncated, select **More** .

TIP When viewing a message, tap the **scroll arrows** at the top of the screen to view the previous or next message.

- 4 Select **Done**.

Viewing attachments

There are a number of attachment types you can open with the built-in software on your smartphone (for example, Microsoft Word, Excel, and PowerPoint files; PDF files; ringtones; and photos).



- 1 From any folder, open the message with the attachment you want to view. Messages with downloaded attachments appear with a **paper clip**  icon to the left of the message icon.

TIP If an attachment is not downloaded because it is larger than your maximum message size, the paper clip icon does not appear, and the attachment is not displayed at the bottom of the message screen. Select **More** to download and display any attachments.

- 2 Tap the attachment name at the bottom of the message screen to view it in the default viewer on your smartphone.

TIP You can also tap the folder icon to the left of the attachment name to open a menu of tasks you can do with the attachment, including **View**, **Install**, or **Unzip**, depending on the attachment file type; **Save to card** to save the attachment to an expansion card; or select **Viewer** to select the application you want to use to view the attachment.

- 3 After you finish with the attachment, select **Done** to return to the Attachments dialog box.

NOTE If there is no Done button, press **Applications**  and select **Email**  to return to the account's Inbox.

Replying to or forwarding email messages



When you respond to messages, you can select whether to include the original text (see [Customizing your email settings](#)).

DID YOU KNOW? The VersaMail application sends all messages as plain text only, with all HTML tags stripped, even if you are forwarding or replying to a message that was originally received as HTML.

- 1 From the Inbox or another folder, open the message you want to respond to.
- 2 In Message View, select **Reply**. Select whether to reply to just the sender or to reply to both the sender and all addressees on the message.
- 3 Enter your reply.
- 4 Select **Send**.

Managing your messages

The status icons that appear near the messages in your Inbox indicate the following:

-  The message is unread when the subject appears in bold.
-  The message includes an attachment.



The message includes a meeting invitation.



This message has high priority.

You can rearrange the message list to make it easier to find and view messages.

- In the Inbox, select **Sort**, and then select one of the following: **Sort by Date**, **Sort by Name**, or **Sort by Subject**.
- To quickly switch between folders in list view, select the **folder** pick list at the top of the screen and select the desired folder.

Deleting selected messages from the Inbox

When you delete a message from the Inbox, it moves to the Trash folder.

- 1 Select the bullet next to the icon of each message that you want to delete. To select adjacent messages, drag the stylus so that it touches the bullet to the left of each message. Lift the stylus and drag again to select more adjacent messages.
- 2 Press **Menu** (☰).

- 3 Select **Delete** on the **Message** menu.
- 4 If a confirmation dialog box appears, select **OK** to confirm the deletion.

TIP To delete a single message, select the **envelope** icon next to the message, and then select **Delete** from the list.

Deleting messages by date

You can quickly delete a group of messages by selecting a range of dates.


- 1 Press **Menu** (☰).
- 2 Select **Delete Old** on the **Message** menu.
- 3 Select the folder and a date range for the messages you want to delete.
- 4 Select **OK**.
- 5 If a confirmation dialog box appears, select **OK** to confirm the deletion.

TIP To empty (or purge) the Trash folder, open the **Message** menu and select **Empty Trash**.

Switching accounts

If you create more than one email account in the VersaMail application, you need to switch from account to account to get,

send, and otherwise manage the messages in each account.

- 1 Press **Menu** .
- 2 Select **Accounts**, and then select an account.

DID YOU KNOW? If you assign the VersaMail application to a quick button, you can press that button repeatedly to switch between your different email accounts.

Customizing your email settings

You can customize the VersaMail settings for each individual email account on your smartphone. The preferences you set apply only to the email account you are currently viewing. If you have multiple accounts, configure each account separately.

Here are some examples of settings you can customize:


- Set a schedule to automatically retrieve email messages.
- Set preferences for how and when messages are retrieved.
- Add a signature to an outgoing message.

For complete information on all the email settings you can customize, see the *User Guide for the VersaMail® Application* at <http://go.palm.com/treo755p/>.

Scheduling Auto Sync

You can set up the VersaMail application to automatically download new email messages to your smartphone with the Auto Sync feature.

TIP You need to set up a separate Auto Sync schedule for each email account. This feature may not work with email accounts that require a VPN connection. For additional info on using the VersaMail application with a VPN connection, see [Connecting to a virtual private network](#) (in this guide) and the *User Guide for the VersaMail® Application* at <http://go.palm.com/treo755p/>.

- 1 Press **Menu** .
- 2 Select **Options**, and then select **Preferences**.

3 Select **Auto Sync**.



- 4 Check the **Auto-sync** box.
- 5 Select the **Every** pick list and select the time interval, from **5 minutes** to **12 hours**.


NOTE If you set a more frequent interval, you may need to recharge your Treo battery more often.

- 6 Select the **Start Time** and **End Time** boxes, and then select the hour, the minute, and AM or PM to enter the time for the first and last Auto Sync to take place. Select **OK**.
- 7 Select the days you want the schedule to be active. You can choose any number of days, but you can set up only one schedule for each email account.
- 8 Select **OK**, and then select **Get Mail**.

TIP After you set up a scheduled Auto Sync and select Get Mail, from then on, only new messages are retrieved during Auto Sync.

Selecting alert tones

When you schedule Auto Sync for a given account, you can choose a sound—such as a bird, a phone, or an alarm—to let you know when new email arrives.


- 1 From any mailbox screen, press **Menu** .
- 2 Select **Options**, and then select **Preferences**.
- 3 Select **Alerts**.
- 4 Check the **Alert me of new mail** box.


TIP To receive notifications of successful Auto Sync retrievals only, uncheck the **Alert me of auto sync failures** box. Leave the box checked if you want to receive notifications of both successful and failed Auto Sync retrievals.

- 5 Select the **Alert Sound** pick list, and then select a sound. Your Treo 755p smartphone plays a brief demo of the sound.

- 6 Select **OK**.

Setting preferences for getting messages

- 1 From any mailbox screen, press **Menu** .
- 2 Select **Options**, and then select **Preferences**.
- 3 Select **Incoming**.

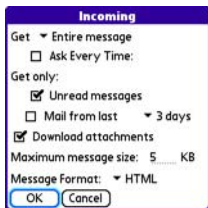

- 4 Set any of the following preferences, and then select **OK**:

Get: Indicates whether to get message subjects only or entire messages.

Ask Every Time: Indicates if you want to see a dialog box for selecting subjects only or entire messages each time you retrieve email. If the box is unchecked, messages are retrieved

according to the option you select in the Get pick list.

Unread messages (IMAP accounts only): Downloads only unread mail to your smartphone. If you don't check this box and you select Get & Send, all the messages on your mail server are downloaded to your Inbox, including messages you've read.

TIP The POP protocol does not support retrieval of only unread mail from the server. If you have a POP email account, the VersaMail application downloads all messages regardless of whether you have read them, and regardless of whether the Unread messages box is checked.

Mail from last: Gets messages sent within the number of days you specify.

Download attachments: Automatically downloads files attached to email, except for attachments that exceed the maximum message size.

Maximum message size: Sets the maximum size of an incoming email message. Enter the size in kilobytes (KB). The default is 5KB, but you can

enter any size up to 2048KB [approximately 2 megabytes (MB)], including attachments. The maximum message size that you can retrieve is 60KB for the body text and approximately 5MB of total data for any attachments.


Message Format: Sets the format for messages you retrieve.

HTML: Displays messages sent in HTML format with basic formatting intact and displays other messages as plain text.

Text: Displays all messages as plain text, regardless of the format in which they were sent.

Attaching a signature to a message

You can attach a personal signature, with info like your company's address and phone numbers, to the bottom of all messages you send.

- 1 From any mailbox screen, press **Menu** .
- 2 Select **Options**, and then select **Preferences**.

- 3 Select **Signature**.
- 4 Check the **Attach Signature** box.
- 5 Enter your signature information, and then select **OK**.

Working with Microsoft Exchange ActiveSync

Microsoft Exchange ActiveSync works with the VersaMail application, Calendar, and Contacts on your smartphone to directly access corporate groupware information on a Microsoft Exchange 2003 or 2007 server. Information in these applications is pushed directly from the server to your smartphone or wirelessly synchronizes directly with the server from your smartphone without using a desktop computer.

When you create a Microsoft Exchange ActiveSync account in the VersaMail application, your email, calendar, and contact info is pushed from or syncs directly with the server; information does not sync with Microsoft Outlook® (sold separately) on your computer. Other information that is stored on your computer, such as tasks and memos,

continues to synchronize with Outlook on your computer.

For complete info on using a Microsoft Exchange ActiveSync account, see the *User Guide for the VersaMail® Application* at <http://go.palm.com/treo755pl>.

Messaging




BEFORE YOU BEGIN Make sure your phone is turned on (see [Turning your phone on and off](#)) and that you are in a coverage area.

You can use the Messaging application to exchange brief text messages (SMS) with other devices and email addresses that support this form of messaging. Before you use your smartphone to send or receive messages, refer to your service plan for pricing and availability of messaging services.

DID YOU KNOW? You can address messages to multiple recipients by separating the addresses with a comma. If you address a single message to three people, you may be billed for three messages (depending on your wireless service provider's service plan).



Creating and sending a text message

Each text message can hold up to 160 characters. (If you send a text message to an email address, the email address is deducted from the 160-character count.)

- 1 Press **Applications**  and select **Messaging** .
- 2 Select **New**.
- 3 Select the **To** field to address the message:
 - Press **Center** . If the recipient's name appears in the list of recent addresses, select it from the list.
 - If the recipient is in your Contacts list, enter the first initial and last name (no spaces), and then select the recipient's phone number or email address, depending on where you want to send the message.


- If the recipient's name isn't in the list of recent addresses or your Contacts list, enter the phone number or email address.


TIP If you see numbers when you expect to see letters (or the other way around), you need to turn Option Lock on by pressing **Option** twice, or turn it off by pressing **Option** once.

- 4 Enter your message or select **QuickText**  to insert predefined phrases. To insert emoticons, select .

TIP To add a new QuickText phrase, select **Edit QuickText** from the list.

NOTE Some symbols can't be used in text messages. The Messaging application automatically replaces invalid characters.

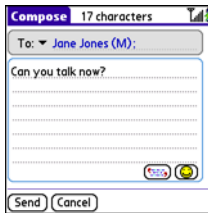

- 5 (Optional) Press **Menu** , and then select **High Priority** from the **Compose** menu to mark the message as urgent.
- 6 Select **Send**.

TIP Select **Save as Draft** to save a draft of the message without sending it. To access the draft, select the folder list in the title bar and select **Drafts**.

Receiving messages

When your phone is turned on and you are in a wireless coverage area, you automatically receive new text messages. You can also configure how your smartphone notifies you when a new message arrives (see [Selecting Messaging alert tones](#)).



The new message alert may include any of the following buttons:

OK: Dismisses the alert and places the message in your Inbox.

Reply: Opens Chat View, where you can reply with a text message.

Call Back: Dials the sender's phone number.

Go To Msg: Opens the message so you can view its full contents.



Delete: Removes the message from your smartphone.

TIP When you receive a message, you can also press **Send** to call the sender.

TIP If you have multiple alerts, the Alert screen displays all your pending alerts. Select an item's description to jump to that item, or check the box to clear that item. To view all your pending alerts from any screen on your smartphone, press and hold **Center** on the 5-way.

Using links in messages

When you receive a text message that contains a telephone number, email address, or URL, you can dial the number, send an email message, or go to the web page immediately.

- 1 Press **Applications**  and select **Messaging** .
- 2 Select the message that contains the link you want to use.
- 3 Select the phone number, email address, or URL (appears as underlined blue text).


Your smartphone automatically launches the appropriate application from the link.

Arranging your messages

You can rearrange the messages in any folder by using the Sort command.




- 1 Press **Applications**  and select **Messaging** .



- 2 Select the folder list in the title bar and select the folder you want to sort.
- 3 Press **Menu** .
- 4 Select **View**, and then select **Sort by Name** or **Sort by Date**.

Deleting messages

You can delete several messages at once from any folder by using the Purge command.

- 1 Press **Applications**  and select **Messaging** .
- 2 Select the folder list in the title bar and select the folder that contains the messages you want to delete.
- 3 Press **Menu** .
- 4 Select **Purge** from the **Message** menu.
- 5 Select the **Purge** pick list, and then select **older than 1 week**, **older than 2 weeks**, **older than 1 month**, or **all**.
- 6 Select **OK**.

Chatting with Messaging


DID YOU KNOW? You can send and receive text messages even while you are on a phone call. This is easiest when using a hands-free headset or the speakerphone.


When you exchange more than one message with a single contact, the messages you exchange with that person are grouped into a chat session. When you select a chat session from your message list, the upper part of Chat View displays all messages you've exchanged with this contact, and the lower part provides an entry area.

You can carry on multiple chats at the same time and easily switch between them, using the pick list at the top of the screen.

- 1 Press **Applications**  and select **Messaging** .
- 2 Do one of the following:

Start a new chat: Select a message and reply to it.

Continue an existing chat: Select a message with the **chat**  icon.

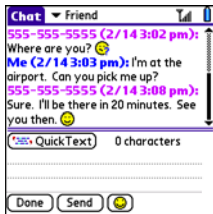




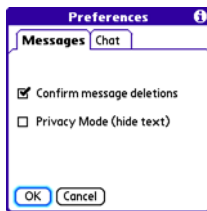
- 3 Enter your message.

TIP Pale gray text indicates that a message is pending or enroute.

- 4 Select **Send**.

Customizing your Messaging settings

- 1 Press **Applications**  and select **Messaging** .
- 2 Press **Menu** .
- 3 From the **Options** menu, select **Preferences**.
- 4 On the Messages tab, set any of the following preferences for your individual messages:



Confirm message deletions: Indicate whether you want deletion confirmation prompts to appear.

Privacy Mode (hide text): Indicate whether you want the body text to appear in the alert when you receive a new message, or if you want the alert to hide the text and prompt you to go to the message.

- 5 Select the **Chat** tab and set any of the following preferences for chat sessions.



Create chats from messages: Indicate when you want to group messages from the same person into a chat.

Show timestamps in chats: Indicate whether you want to see the local date and time the message was sent next to each message.

Display my name in chat window as: Enter the name you want to use as the label for your messages in Chat View.

Label color: Select a color to differentiate your messages from the sender's messages while in Chat View.




Use color for: Indicate whether you want both your name and message text

in the selected label color, or only your name.

- 6 Select **OK**.

Selecting Messaging alert tones

DID YOU KNOW? Your smartphone includes a silent alert that can vibrate even when the Ringer switch is set to Sound Off.

- 1 Press **Applications**  and select **Messaging** .
- 2 Press **Menu** .
- 3 Select **Options**, and then select **Alerts**.



- 4 Select the **Application** pick list and select **Messaging**.
- 5 Select the **Volume** pick list and select the volume level.

- 6 Select the **Vibrate** pick list and select how you want your smartphone to vibrate upon an incoming message.
- 7 Select the **Message Tone** pick list and select a tone for incoming message alerts.
- 8 Check the boxes if you want to see onscreen alerts when a new message arrives and when a message you sent is received.
- 9 Select **Done**.

What are all those icons?

TIP By default, the Messaging app shows the Inbox folder. To view a different folder, select the folder list in the title bar and select a different folder from the list.

The message descriptions in the Inbox, Outbox, and Sent folders show the message status:

- Unread messages appear in bold.
- Read messages appear in plain text.
- Urgent messages appear with a red exclamation point (!).

The following icons show the message type and additional status info:



A text message



A chat session



A voicemail page



An incoming message with an error



A message that is waiting to be sent



A message that was successfully sent



A message that was sent to multiple recipients, and only some of the recipients received the message



An outgoing message with an error

DID YOU KNOW? If you are outside a coverage area or if your phone is turned off, outgoing messages go into the Outbox. When you return to a coverage area or turn your phone back on, your pending messages are sent automatically and transferred to the Sent folder.



Your connections to the web and wireless devices

You use the web for many things: driving directions, shopping, news, web-based email. Now, with your wireless service provider's network and the built-in web browser, you can take the web with you almost anywhere.

The built-in Bluetooth® feature of your Palm® Treo™ 755P smartphone helps you easily set up wireless connections to a number of devices, so you can enjoy the convenience of cable-free connectivity. You can also use your smartphone to share contacts or your favorite photos with other people.

Benefits

- Carry the web with you
- Store web pages for offline viewing
- Connect to Bluetooth devices

In this chapter

Web browser	97
Connections with Bluetooth® devices	106

Web browser

The Blazer® web browser on your smartphone provides quick and easy access to web pages. You can view most sites you use on your computer, including those with security and advanced features, such as JavaScript and frames. To browse the web, you must activate data services from your wireless service provider.

DID YOU KNOW? You can visit secure websites.

The security certificates and 128-bit Secure Sockets Layer (SSL) encryption let you browse secure sites, such as online shopping, banking, and email. Remember: Some secure sites also require specific browsers and may not work with the web browser application.

DID YOU KNOW? The web browser supports JavaScript, SSL strong encryption, and cookies, but does not support plug-ins (such as Flash or Shockwave) or Java applets.



Viewing a web page

The web browser uses patent-pending technology to optimize web pages for your smartphone. By default, the browser is in Optimized Mode, which reformats web

pages into a single column and resizes images on your screen. This way, you can see most content without scrolling left or right.


DID YOU KNOW? You can send email from a web page on your smartphone. Email addresses appear as links on web pages. After you configure an email application on your smartphone, you can select an email address link to create a message to the selected address.




- 1 Make sure your phone is turned on (see [Turning your phone on and off](#)) and that you are in a coverage area.
- 2 Press **Applications**  and select **Web** .






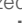
NOTE Trouble connecting to the Internet? See [My smartphone won't connect to the Internet](#) for troubleshooting tips.




- 3 Enter a web page address (URL) in the **Address Bar** and select **Go**.

NOTE If you browse to a secure web page, a lock  icon appears in the Address Bar.


- 4 Do any of the following to navigate within the web page:

View a page in wide layout format (as on your computer): Press **Menu** , select **Options**, and then select **Wide Page Mode**.

Scroll through the page: In Optimized Mode (the default format, which is optimized for your smartphone screen), press **Up**  or **Down** . In Wide Page Mode, press **Up** , **Down** , **Left** , or **Right**  to scroll in all directions.

Follow a link to another web page: In Optimized Mode, highlight the link by pressing **Left**  or **Right** , and then press **Center**  to go to the selected

page. In Wide Page mode, use the stylus to select a link.

Submit a form: Enter the info and then select the onscreen button to submit the form. If the form doesn't have an onscreen button, press **Return** .

TIP To adjust the font size, open the **Options** menu and select **Font**. To fit more text on the screen, select **Small**. To make the text easier to read, select **Large**.

- 5 Use the **5-way**  to access any of the following icons in the title bar:



Goes to the previous web page.



Goes to the next web page.



Refreshes the page with the latest content from the Internet.



Opens a list where you can select Fast Mode (no images or style sheets) or Normal Mode (with images and style sheets).



Opens a dialog box where you can enter a web address you want to go to or view a list of recently viewed web pages.



Goes to your home page.



Displays a list of your bookmarks and saved pages.

TIP To find a recent page or search, select the **Address Bar** pick list and select the item from the list.

TIP Want to get to the icons faster? Press **Space** to jump to the Address Bar, and then press **Up** on the 5-way to scroll to the icons. You can also press **Menu** to access the same commands from the menus.

TIP You can customize the Fast Mode settings. See [Customizing your web browser settings](#) for details.


TIP Tap and hold the **Back** or **Forward** buttons or select these buttons with the **5-way** to pop up a list of sites you've visited.

Creating a bookmark

With bookmarks you can instantly access a web page without entering the address every time. The web browser can store up

to 100 bookmarks or saved pages, allowing you to open your favorite web pages quickly. Note that a bookmark is different from a favorite (see [Defining favorite buttons](#)).

DID YOU KNOW? The predefined bookmarks take you to pages that are optimized for your smartphone.

- 1 Go to the page you want to bookmark.
- 2 Press **Menu** .
- 3 Select **Add Bookmark** from the **Page** menu.
- 4 (Optional) Change the entries in the **Name** and **Description** fields.
- 5 Select **OK**, and then select **OK** again.



New Bookmark ⓘ

Name:
Mobile Portal Main

Description:
mobile.palm.com


URL: mobile.palm.com/?

Preview: 

OK **Cancel**

Saving a page


You can use the web browser to save a page for offline viewing, so you don't need a wireless connection to view it later.

- 1 Go to the page you want to save.
- 2 Press **Menu** .
- 3 Select **Save Page** from the **Page** menu.
- 4 Select **OK**, and then select **OK** again.

Viewing bookmarks or saved pages

Bookmarks and saved pages both appear in Bookmarks View. Saved pages are indicated by a small triangle in the upper-right corner of the bookmark.


DID YOU KNOW? You can make Bookmarks View the default view when you open the browser. Open the **Options** menu and select **Preferences**. Select the **Start With** pick list and select **Bookmarks**.

- 1 Select the **Bookmarks View**  icon.
- 2 Select the bookmark or saved page you want to view.



TIP To go back to the last web page you viewed without selecting a bookmark, select **Page View**.

Editing or deleting a bookmark or saved page


- 1 From Bookmarks View, press **Menu** .
- 2 Select **Edit Bookmarks** on the **Bookmarks** menu.
- 3 Select the bookmark you want to edit or delete.

TIP Your wireless service provider may preset bookmarks on your smartphone that are customized for their services. You may not be able to customize some of the preset bookmarks. If you can't edit, delete, or beam a bookmark, it is probably locked and these actions are prohibited.


- 4 Enter the desired changes.
- 5 Select **OK**.

Arranging bookmarks and saved pages

Bookmarks View includes ten pages for bookmarks so that you can arrange bookmarks and saved pages in a logical fashion. For example, you can store travel links on one bookmark page, stock links on another, and business links on a third page.

- 1 From Bookmarks View, press **Menu** .
- 2 Select **Edit Bookmarks** from the **Bookmarks** menu.



- 3 Enter a title for this page of bookmarks.
- 4 Use the stylus to drag and drop a bookmark into the desired slot. You can move a bookmark within the current page or move it to a different bookmark page by dragging and dropping it on the **Bookmark Page**  icon.
- 5 Select **OK**.

Downloading files from a web page


The web browser lets you download files that are recognized by one of the applications on your smartphone. When you download a file, you can open it in the application that recognizes the file. For example, download an MP3 file so you can listen to it later in the Pocket Tunes™ application. If a file is not recognized by any of the applications on your smartphone,

you can download the file to an expansion card, but you cannot open it on your smartphone.

You can download files such as new applications, and choose to play or save music and video files in many popular formats—provided that the website permits the downloading of files:

Item	Supported File Types
Pictures	JPEG, WBMP, GIF
Videos	MP4, 3G2, ASF, WMV
Ringtones	MIDI, AAC
Music	MP3, WMA

TIP You can also access software and other downloads using the **Downloads** bookmark.



- 1 Go to the page with the link to the file you want to download.
- 2 Press **Left** ◀ or **Right** ▶ to highlight the link to the file, and then press **Center** .
- 3 If prompted, select what you want to do with the file: **Play**, **Save To Device**, or **Save To Card**.

4 Select **Yes**.


TIP You can also save an image from a web page by tapping and holding it with the stylus.









Streaming files from a web page

The web browser lets you stream files that are recognized by one of the applications on your smartphone. For example, you can choose to play music and video files in many popular formats (MP3, WMA, WMV).

- 1 When the web browser recognizes streamed content on a web page, it displays a **Play**  icon. To view or listen to the streamed content, select **Play** .




TIP The web browser recognizes streamed content that is not supported by any of the applications on your smartphone, and it displays a **Media type not supported** message.

- 2 Once streaming begins, playback starts automatically. Use the following controls when viewing or listening:
 - Select  to return to the web page containing the streamed content.

- Select  or press **Center**  to pause playback.
- Select  or press **Center**  to resume playback after pausing.
- A few seconds after playback begins, the toolbar is hidden and you can view the content on the full screen. Press **Up**  or **Down**  to display the toolbar; press **Up**  or **Down**  again to hide the toolbar again.
- Press the **Volume** button on the side of your smartphone to adjust the volume.

Copying text from a web page

You can copy text from a web page and paste it into other applications.



- 1 Use the stylus to highlight the text you want to copy.
- 2 Press **Menu** .
- 3 Select **Edit**, and then select **Copy**.
- 4 Go to the app in which you want to paste the text, and use the stylus or **5-way**  to position the cursor where you want to paste the text.
- 5 Press **Menu** .

- 6 Select **Edit**, and then select **Paste**.


DID YOU KNOW? If the web browser does not recognize a phone number as dialable, you can copy the phone number (as text) and paste it into the Dial Pad (see [Dialing from a web page or message](#)).

Returning to recently viewed pages

The History list stores the addresses of the last 100 pages you visited. Items in the History list are sorted chronologically.

- 1 From Page View, press **Menu** .
- 2 Select **History** from the **Page** menu.
- 3 Press **Down**  to navigate through the list.
- 4 Select the web page you want to load.


Finding text on a web page

- 1 From Page View, press **Menu** .
- 2 Select **Find Text on Page** from the **Page** menu.
- 3 Enter the text you want to find.
- 4 Check or uncheck the **Wrap Search** box to indicate whether you want the search

to wrap from the end of the page to the beginning when the end is reached.

- 5 Select **Find** to start the search.

Customizing your web browser settings

- 1 From Page View, press **Menu** .
- 2 Select **Options**, and then select **Preferences**.
- 3 Select **Page** and set any of the following preferences:

Start With: Determines which view appears when you open the browser.




Home Page: Sets the page that appears when you select .

Restore Default: Selects the original home page, if you changed it.

Show Address Bar: Sets whether the web address appears in Page View. When it is visible, you can select the pick list to go to a previously viewed page or enter a URL directly from Page View.

- 4 Select **General** and set any of the following preferences:

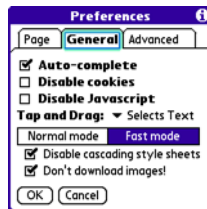

Auto-complete: Determines whether the web browser suggests text, based on your previous entries, when you begin entering info.

Disable cookies: Determines whether websites can store personalized info on your Treo smartphone. Some sites do not work properly if you select this option.

Disable JavaScript: Bypasses JavaScript elements on the web pages you view.

Tap and Drag: Determines whether dragging the stylus selects text or scrolls through the content of the page.

Normal mode/Fast mode: Determines whether selected items are hidden so that web pages load faster. When you select Fast Mode, you can set the next two options.

Disable cascading style sheets:

Determines whether style sheets are applied when you load a web page. When style sheets are disabled, pages download faster, but you may lose some of the formatting.

KEY TERM Cascading style sheets A method used to describe the presentation of a web page or document written in a markup language, such as HTML or XML.


Don't download images! Determines whether images appear when you load a web page. If you select not to view images, then web pages load faster. You

can still see any image by tapping and holding its placeholder box.

- 5 Select **Advanced** and set any of the following preferences:

Set memory limit for storing pages:

Sets the memory available for your cache. Pages are cached so that they load faster the next time you view them.

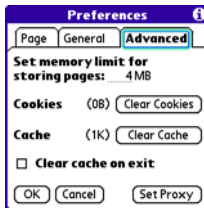

Cookies: Indicates how much memory is being used by cookies. To free up this memory, select **Clear Cookies**.

Cache: Indicates how much memory is being used by your cache to store recent pages and history. To free up this memory, select **Clear Cache**.

Clear cache on exit: Determines whether the cache clears each time you exit the web browser.

Set Proxy: Sets up a proxy server to access the Internet. If your connection requires a proxy server, please contact your Internet service provider or IT administrator for this information.

- 6 Select **OK**.

Connections with Bluetooth® devices


With your smartphone's built-in Bluetooth wireless technology, you can connect to a number of Bluetooth devices, such as a headset, car kit, printer, or GPS receiver, as well as to other smartphones and handhelds that are equipped with Bluetooth wireless technology. If your computer is enabled with Bluetooth wireless technology, you can also synchronize wirelessly.

You can create a list of Bluetooth devices that you trust to communicate with your Treo smartphone. When communicating with trusted devices, your Treo smartphone skips the discovery process and creates a secure link as long as the device is within range. Bluetooth range is up to 30 feet/10 meters, depending on environmental conditions, including obstacles, radio interference from nearby electronic equipment, and other factors.

When you configure a headset as described in [Connecting to a Bluetooth hands-free device](#), the headset is automatically added to your trusted device list. Follow the steps in this section to add other devices to your trusted device list, such as a friend's handheld.

Requesting a connection with another Bluetooth device


- 1 Press **Applications**  and select **Bluetooth** .
- 2 Select **Bluetooth On**.

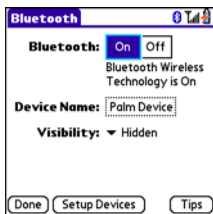

- (Optional) Enter a device name that identifies your smartphone when it is discovered by other Bluetooth devices.

NOTE Use the same device name for all your Bluetooth connections. If you change the device name, you need to re-create any partnerships you have already created.

- Select **Setup Devices**.
- Select **Trusted Devices**.

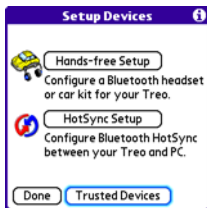

- Select **Add Device**. The discovery icon appears, indicating that the discovery process is active.
- Select the **Show** pick list and select **Nearby devices**.
- If the device you want to add doesn't appear on the discovery results list, make sure that the other device is ready to receive a connection request (see the device's documentation), and then select **Find More** on your smartphone to search again.
- Enter the same passkey on your smartphone and on the Bluetooth device, and select **OK**.

IMPORTANT Some Bluetooth devices have a predefined passkey; if your device has a predefined passkey, you can find it in the documentation for that device. Other devices provide a screen where you enter a passkey that you make up. In either case, you must use the same passkey on both your smartphone and the other Bluetooth device. We recommend that where possible, you make up a passkey of 16 alphanumeric characters (letters and numerals only) to improve the security of your smartphone. The longer the passkey,

the more difficult it is for the passkey to be deciphered.

10 Select **Done**.

Accepting a connection from another Bluetooth device

TIP For the smartphone to be visible to Bluetooth devices, the Bluetooth setting must be set to On and visibility must be set to Visible or Temporary.

- 1 Press **Applications**  and select **Bluetooth** .
- 2 Select **Bluetooth On**.



- 3 (Optional) Enter a device name that identifies your smartphone when it is discovered by other Bluetooth devices.

NOTE Use the same device name for all your Bluetooth connections. If you change the device name, you need to re-create any partnerships you have already created.

- 4 Select the **Visibility** pick list and select one of the following:

Visible: Enables Bluetooth devices that are not on your Trusted Device list to request a connection with your smartphone. Your smartphone remains accessible to other devices until you turn this option off. After you've finished using this setting, remember to change it back to Hidden.

TIP Use the Visible option only when you need your smartphone to be accessible for an extended period of time. For short-term accessibility, use the Temporary option.

Temporary: Enables Bluetooth devices that are not on your Trusted Device list to request a connection with your smartphone during the next two minutes. Your smartphone reverts to the Hidden setting and becomes inaccessible to other devices after two minutes.

Hidden: Allows only devices with which you have previously formed a partnership to request a connection with your smartphone. New devices cannot request a connection.

- 5 Enter the same passkey on your smartphone and on the Bluetooth device.

IMPORTANT Some Bluetooth devices, such as headsets and GPS receivers, have a predefined passkey; if your device has a predefined passkey, you can find it in the documentation for that device. Other devices provide a screen where you enter a passkey that you make up. In either case,

you must use the same passkey on both your smartphone and the other Bluetooth device. We recommend that where possible, you make up a passkey of 16 alphanumeric characters (letters and numerals only) to improve the security of your smartphone. The longer the passkey, the more difficult it is for the passkey to be deciphered.

- 6 (Optional) Check the **Add to trusted device list** box if you want to form a partnership with the requesting device.
- 7 Select **OK**.



Your photos, videos, and music

Do you have a wallet bulging with photos of friends, family, pets, and your most recent vacation? Are you tired of carrying both your MP3 player and your phone?

Your Palm® Treo™ 755P smartphone solves both problems. You can keep your favorite photos—videos, too—right on your smartphone. And there's no need to carry an expensive MP3 player; you can play music on your smartphone. Simply transfer songs onto your smartphone or an expansion card (sold separately) and then listen through your stereo headphones.

Benefits

- Never be far from your favorite people, places, and songs
- Organize your photos, videos, and songs
- No separate photo viewer, MP3, CD, or mini-disc player required

In this chapter



Camera and Camcorder	113
Pics & Videos	117
Pocket Tunes™	123

Camera and Camcorder

Your smartphone comes with an easy-to-use, built-in, 1.3-megapixel camera with 2x digital zoom. You can use the camera to take and view pictures and videos and send them to your friends and family. To add a personal touch to your smartphone, use your pictures as your wallpaper in the Phone application's Main View, and as caller ID images.

Taking a picture

You can store pictures on your smartphone or on an expansion card.

- 1 Press **Applications**  and select **Camera** .
- 2 By default, the Camera application stores pictures you take in the Palm folder on your smartphone. To store a picture in a different location, select one of the following from the pick list:

<Album name>: Stores the picture in the selected album. The storage

location is based on the location of the album (smartphone or expansion card).



New Albums: Opens a dialog box where you can enter an album name and select the storage location (smartphone or expansion card).

TIP The camera defaults to 1.3 megapixel (1280 x 1024) resolution. The camera also supports VGA (640 x 480) and QVGA (320 x 240) resolution. To view these settings before you take a picture, press **Menu**.

- 3 Find your subject in the screen on your smartphone. (The lens is on the back of your smartphone.)
- 4 (Optional) To get a close-up of your subject, press **Up** ▲ to select **2x**. Press **Down** ▼ to return to **1x**.

- 5 Press **Center**  to capture the picture.
- 6 Do any of the following:



Saves the picture in the location you selected in step 2.



Deletes the picture.



Opens a dialog box where you can choose to attach the picture to an email message or send it to another device that uses Bluetooth wireless technology.



Lets you add a voice caption.

TIP To add an audio caption later, open the picture and then select **Audio Caption** from the **Photo** menu.

DID YOU KNOW? You can personalize a picture. Open the **Photo** menu, select **Draw on**, and then use the drawing tools to add your own personal touch. When you save the picture, you can replace the original or save a copy.

Recording a video

You can store videos on your smartphone or on an expansion card.

- 1 Press **Applications**  and select **Camcorder** .

TIP The video recording screen displays the approximate recording time you have left based on the space available on your smartphone or expansion card. Actual recording time may vary depending on how fast you are moving, how many colors you are recording, and so on.

- 2 By default, the Camcorder application stores videos you record in the Palm folder on your smartphone. To store a

video in a different location, select one of the following:



<Album name>: Stores the video in the selected album. The storage location is based on the location of the album (smartphone or expansion card).








New Albums: Opens a dialog box where you can enter an album name and select the storage location (smartphone or expansion card).

TIP The camcorder defaults to CIF (352 x 288) resolution and also supports QCIF (176 x 144) resolution. To view these settings before you capture a video, press **Menu**.

- Find your subject in the screen on your smartphone. (The lens is on the back of your smartphone.)

- Press **Center**  to start recording.
- After you finish recording, press **Center**  again to stop.
- Select any of the following:



-  Plays the video, so you can review it.
-  Saves the video in the location you selected in step 2.
-  Deletes the video.
-  Opens a dialog box where you can choose to attach the video to an email message or send it to another Bluetooth device.
-  Opens a dialog box where you can adjust the volume during playback.

TIP During playback, tap and drag the **progress indicator** bar to jump to a different section of the video. Select **Pause** to pause video playback.

Customizing your Camera settings

You can customize the built-in camera's settings for your Treo 755P smartphone.

- 1 Go to Camera View or Camcorder View.
- 2 Press **Menu** (⌘). If you are in Camera View, the Photo Settings screen appears. If you are in Camcorder View, the Video Settings screen appears.
- 3 Set any of the following preferences:

Effects: Sets the color palette for the current picture or video. You cannot change an item's palette after you take the picture or video.

Prompt sound: (Pictures only) Sets the sound that plays before you take the picture.

Shutter sound: Determines whether a sound plays when you take a picture or video.

Microphone: (Videos only) Turns the microphone on and off so that you can record videos with or without sound.

Resolution: Sets the default size for newly captured pictures or videos.

Date stamp: (Pictures only) Determines whether the date the picture is taken appears on your pictures.

Review photos/videos: Determines whether you can review pictures or videos before saving them and how quickly they are automatically saved.

Auto naming: Assigns a name to a series of pictures or videos to be captured, such as Seattle001, Seattle002, and so on.







- 4 Select **Done**.

Pics & Videos



Viewing a picture

In addition to viewing the pictures you capture with the built-in camera, you can view pictures captured on many popular digital cameras or downloaded from the Internet. Your smartphone supports the following picture formats:



- JPG
- TIF
- BMP
- GIF

- 1 Press **Applications**  and select **Pics&Videos** .
- 2 Select the album that contains the picture you want to see.

TIP To view an album from an expansion card, insert the card and select the album from the **Album** list. If the items on the card are not grouped into albums, select the card name from the list.

- 3 Select the picture you want to view.
- 4 Press **Right**  or **Left**  to scroll to the next item in the album.

DID YOU KNOW? To see the outer edges of a picture that may not be visible, use the stylus to tap and drag the picture in any direction.



- 5 If the picture has a voice caption, select  to hear it.
- 6 Tap the picture or press **Center**  to return to Thumbnail View.

TIP In Thumbnail View, you can group photos or videos to more easily locate them. Select one of the grouping options from the **View** menu.

Viewing a video

In addition to viewing the videos you capture with the built-in camera, you can view videos captured on many popular digital cameras. Your smartphone supports the following types of video files:






- 3GP
- 3G2 (MPEG-4 video + QCELP audio + .3g2 file type)
- MP4
- MPG
- M4V
- ASF (with MPEG-4 video and IMA-ADPCM audio)
- AVI (with MJPEG video and PCM audio)

- 1 Press **Applications**  and select **Pics&Videos** .
- 2 Select the album that contains the video you want to see.
- 3 Select the video you want to view. Playback begins automatically.
- 4 Hold down **Right** ▶ or **Left** ◀ to seek within the current video, or press **Right** ▶ or **Left** ◀ to scroll to the next item in the album.

- 5 Press **Center**  to return to Thumbnail View.

DID YOU KNOW? If you pause video playback and then close the video, the video starts where you left off the next time you play it.


Viewing a slide show

- 1 Press **Applications**  and select **Pics&Videos** .
- 2 Highlight (or open) the album you want to view.
- 3 (Optional) Press **Menu** , select **Options**, and then select **Auto-hide Toolbar Off** if you want to see the toolbar.
- 4 Press **Space**  to start the slide show.
- 5 Press **Center**  to return to the previous view.

TIP To set slide show options such as background music and transitions, open the **Options** menu and select **Slideshow Setting**. Keep in mind that background music overrides audio captions when you're running a slide show. Background music for a slide show also overrides any music that might be playing using the Pocket Tunes application on your smartphone if you start a slide show.

Sending pictures or videos


You can attach pictures or videos to email messages or send them to another Bluetooth device.

- 1 From the **Album** list, select the album that contains the picture(s) or video(s) you want to send.
- 2 Tap  in the lower-right corner of the screen.
- 3 Select the pictures or videos to send, or select **Select All** to send the entire album.

NOTE A + sign appears next to selected items.

DID YOU KNOW? You cannot send copyrighted pictures or videos that appear with a Lock icon in Thumbnail View or Picture list.


4 Select **Send**.

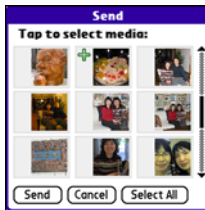

- 5 Select the method you want to use to send the pictures or videos.
- 6 (Optional) Enter any text you want to add to the message.
- 7 Address and send the message.

Copying a picture or video

You can copy pictures or videos into another album. You can also copy pictures and videos between your smartphone and an expansion card.

- 1 From the **Album** list, select the album that contains the picture(s) or video(s) you want to copy.
- 2 Press **Menu** .
- 3 Select **Copy to** from the **Photo** (or **Video**) menu.
- 4 Select the pictures or videos to copy, or select **Select All** to copy the entire album. (A **+** sign appears next to selected items.)
- 5 Select **Copy**.
- 6 Select the **Copy items to** pick list and select whether to copy the selected items to your device or to an expansion card.

A **+** sign indicates that a picture is selected




- 7 Select the **Into album** pick list and select the album you want to copy the selected items to.

- 8 Select **Copy**.

TIP You can also move pictures and videos between albums. Open the **Photo** (or **Video**) menu and select **Move to**. The remaining steps are the same as copying pictures, but use the **Move** commands instead of the **Copy** commands.

Organizing pictures and videos

- 1 Open the album you want to organize.
- 2 Press **Menu** .
- 3 Select **Album**, and then select **Add to album** or **Remove from album**.
- 4 Select the pictures or videos you want to add or remove, or select **Select All** to add or remove the entire album. (A **+** sign indicates that you want to add the item. An **X** sign indicates that you want to remove the item.)
- 5 Select **Add** or **Remove**.

DID YOU KNOW? You can also open the Album list from Camera View or Camcorder View by selecting the icon in the lower-right corner.

TIP Install the Palm® Files application to easily browse and manage files on an expansion card. Press **Applications**, select **My Treo**, select the **Bonus** tab, and then select **Files**.

TIP To change the name, add a caption, or view other picture or video information, highlight (or open) the item, open the **Photo** (or **Video**) menu, and select **Details**.

Saving a picture as wallpaper

You can select a picture to use as wallpaper for the Phone application's Main View.

- 1 Open the picture you want to save as wallpaper.
- 2 Press **Menu** (F4).
- 3 Select **Options**, and then select **Save as Wallpaper**.
- 4 When the confirmation message appears, confirm by selecting **Yes** or decline by selecting **No**.

Adding a picture to a contact entry

- 1 Open the picture you want to add to a contact.
- 2 Press **Menu** (F4).
- 3 Select **Options**, and then select **Save as Contact**.
- 4 Select the contact you want to add this picture to.

Rotating a picture

- 1 Open the picture you want to rotate.
- 2 Press **Menu** (F4).
- 3 Select **Rotate** from the **Photo** menu.
- 4 Select the orientation.

Deleting a picture or video

- 1 Open the album that contains the picture(s) or video(s) you want to delete.
- 2 Press **Menu** (F4).
- 3 Select **Delete** from the **Photo** (or **Video**) menu.
- 4 Select the pictures or videos that you want to delete, or select **Select All** to delete the entire album. (An **X** sign appears next to selected items.)

- 5 Select **Delete**.
- 6 Select **Delete** to confirm the deletion.

TIP You can also highlight a picture or video in Thumbnail View and then press **Backspace** to delete the highlighted item.

Viewing pictures and videos on your computer

When you synchronize your Treo 755[®] smartphone, your pictures and videos are copied to your desktop computer. You can view pictures in JPEG format and videos in MPEG-4 format (3G2 file extension). You can email them to friends using your desktop email application.

You can view and edit synchronized pictures and videos in the Palm Media desktop application. Open Palm[®] Desktop software and click the Media icon. For information about using the Palm Media desktop application, refer to the Palm Desktop Online Help.

If you want to manage photos and videos directly from the location in which they're stored, you can find your pictures and videos in the following locations:

Windows:

- My Documents\ My Photos\Palm Photos\ <user name>\Internal
- My Documents\ My Photos\Palm Photos\ <user name>\Expansion Card
- My Documents\ My Videos\Palm Videos\ <user name>\Internal
- My Documents\ My Videos\Palm Videos\<user name>\Expansion Card

Mac:

- Mac HD : Users : <Mac user name> : Pictures : Palm Photos : <Palm device name> : Internal
- Mac HD : Users : <Mac user name> : Pictures : Palm Photos : <Palm device name> : Expansion Card
- Mac HD : Users : <Mac user name> : Movies : Palm Videos : <Palm device name> : Internal

- Mac HD : Users : <Mac user name> :
Movies : Palm Videos : <Palm device
name> : Expansion Card

Pocket Tunes™

BEFORE YOU BEGIN Mac You need an expansion card (sold separately) to listen to music on your smartphone. You cannot transfer MP3 files from your Mac directly onto your smartphone.

You can listen to music through the speaker on the back of your smartphone or through the stereo headset included with your smartphone. (If you want to use stereo headphones with a 3.5mm connector, then a 2.5mm stereo adapter is required, sold separately). To listen to music on your smartphone, you need to convert the music files into MP3 format using Windows Media Player (Windows computers) or iTunes (Mac computers) and then transfer the music files to your smartphone or an expansion card. After you transfer the music files, you can play



them using the Pocket Tunes™ application on your smartphone.

TIP You can upgrade Pocket Tunes to a version that supports more music file formats (such as WMA), supports subscription music, and includes additional features. For more info, visit www.pocket-tunes.com/palm.


DID YOU KNOW? If a call comes in when you're listening to music, you can take the call and the music pauses automatically. After you finish the call, the music starts again.

Setting up Windows Media Player for MP3

On a Windows computer, you need to set Windows Media Player to save your music files in MP3 format in order for the files to be compatible with Pocket Tunes.

- 1 Connect your smartphone to your computer with the sync cable.
- 2 On your smartphone, press **Applications**  and select **pTunes** .
- 3 On your computer, open Windows Media Player, and then click the full-screen icon in the upper-right corner to maximize the window.

- 4 Click **Tools**, and then click **Options**.
- 5 Click the **Rip Music** tab, click the **Format** pick list, and then select **mp3**. Click **OK**.
- 6 Click **Tools**, and then click **Options**.
- 7 Click the **Devices** tab, select **Palm Handheld** from the **Devices** list, and then click **Properties**.

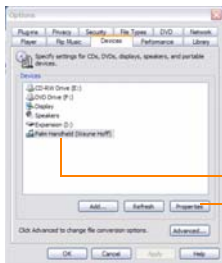

Select your
smartphone

Click
Properties

- 8 Click the **Quality** tab, uncheck the **Convert files as required by this handheld (recommended)** box, and click **Apply**.

Uncheck
box



- 9 Click **OK**, and then click **OK** again.

You now have set up Windows Media Player to transfer MP3 files to the Pocket Tunes application on your smartphone.

Setting up iTunes for MP3

On a Mac, use iTunes (included with OS X) to convert music from a CD to MP3 format. For more information on using the iTunes software, see the documentation that came with your Mac.

- 1 On your Mac, open iTunes.
- 2 Select **Preferences**.
- 3 Click the **Advanced** button at the top of the window, and then click **Importing**.

- 4 Click the **Import Using** pop-up menu and select **MP3 Encoder**.
- 5 (Optional) Click the **Setting** pop-up menu and select **Good Quality**.



TIP Mac If you want greater control over the file size and sound quality of your MP3 files, select **Custom** from the **Setting** pop-up menu.

Transferring MP3 files from your computer

The Pocket Tunes software that comes with your smartphone is compatible with the popular MP3 audio file format. If your MP3 files are already on your computer's hard drive, you need to transfer them to your smartphone to listen to them on your smartphone.

If an expansion card is inserted into the smartphone, Windows Media Player copies the MP3 files to the expansion card. If you don't have an expansion card inserted, the MP3 files are copied to your smartphone's memory.

IMPORTANT You must synchronize your smartphone with your computer at least once before you can transfer MP3 files from your computer.

- 1 Connect your smartphone to your computer with the USB sync cable.
- 2 On your smartphone, press **Applications**  and select **iTunes** .
- 3 If you are transferring MP3 files from a Mac, insert an expansion card into your smartphone. This step is optional for Windows users.
- 4 Do one of the following:



WINDOWS ONLY Open Windows Media Player on your computer. Select the **Sync** tab, and then select **Palm Handheld** from the drop-down list. Select **Start Sync**. The files are transferred to your smartphone.

NOTE Do not press the sync button on your cable. Windows Media Player transfers the files, so there's no need to do anything.

MAC ONLY Drag and drop the MP3 files onto the **Send To Handheld**

droplet in the **Palm** folder. Select your device name, the file name, and the destination (card). Click **OK**. Synchronize your smartphone with your computer. Be patient; transferring music to an expansion card can take several minutes.

DID YOU KNOW? You can also use a card reader accessory (sold separately) to transfer MP3 files from your computer to your expansion card. Create a Music_Audio folder in the root directory of the card, and store your MP3 files in this folder.

Transferring music from a CD to your smartphone

If your songs are on a CD and you want to listen to them on your smartphone, you need to convert them to MP3 format on your computer before you transfer the files to your smartphone.

WINDOWS ONLY

- 1 On your computer, open Windows Media Player.
- 2 Insert the music CD into your computer's CD drive.




- 3 Select the **Rip** tab.
- 4 Select the tracks you want to convert to MP3.
- 5 Select **Rip Music**.
- 6 Transfer the MP3 files to your smartphone as described in [Transferring MP3 files from your computer](#).

MAC ONLY





- 1 On your Mac, open iTunes.
- 2 Insert the music CD into the CD drive on your Mac.
- 3 Check the boxes next to the tracks you want to convert to MP3.
- 4 Click the **Import** button in the upper-right corner of the iTunes window.
- 5 When the songs have finished importing, click the **Eject Disk** button in the lower-right corner of the iTunes window.
- 6 Transfer the MP3 files to your smartphone as described in [Transferring MP3 files from your computer](#).


Listening to music on your Treo smartphone

CAUTION Protect your hearing. Listening to this device at full volume for a long period of time can damage your hearing.


- 1 Make sure the **Ringer switch** is set to **Sound On** . See [Silencing sounds](#) for more information.
- 2 Press **Applications**  and select **pTunes** .



TIP You can change the settings on your smartphone so that pressing and holding the **Side** button opens Pocket Tunes. See [Reassigning buttons](#) for details.

- 3 Do any of the following:
 - To play or resume playback of the current song, select **Play** .
 - To play the next song, select **Next Song** .
 - To play the previous song, select **Previous Song** .
 - To play a different song, select **Choose Song**  and select a song from the list.

- To adjust the volume during playback, press the **Volume** button on the side of your smartphone.
- To pause playback, select **Pause** .

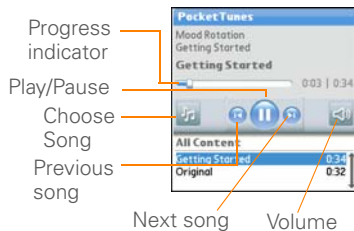


DID YOU KNOW? You can also press **Space** to pause and resume playback, as well as use the **5-way** to navigate among songs or pause and resume playback.



Pocket Tunes continues playing until it reaches the end of your list or until you select **Pause** . Music continues to play even if you switch to another application or turn off your screen. If you want to stop playing music when you exit Pocket Tunes, press **Menu** , select **Background Prefs** from the **Prefs** menu, uncheck the **Enable background play** box, and then select **OK**.

Creating a playlist

If you want to play a group of songs in a particular order, you can create a playlist.




- 1 Press **Applications**  and select **pTunes** .
- 2 Press **Menu** .
- 3 Select **Actions**, and then select **Manage Playlists**.
- 4 Select **New**, and then enter a name for the playlist.
- 5 Select **Add Song**. Select the songs you want to include on the playlist.



- 6 Select **Save List**.

TIP To play songs from a playlist, open Pocket Tunes, select **Choose Songs**, and then select **Playlists**. Select the playlist you want to play, and then select All.

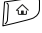Editing a playlist

- 1 Press **Applications**  and select **pTunes** .
- 2 Press **Menu** .
- 3 Select **Actions**, and then select **Manage Playlists**.
- 4 Highlight a playlist, and then select **Edit**.
- 5 Do any of the following:
 - To delete a song from the playlist, select the song and then select **Remove**.
 - To add a song, select **Add Song**, check a song's box, and then select **Done**.
 - To move a song up or down one slot, select a song and then select **Up** or **Down**.
- 6 Select **Save List**.

TIP To delete a playlist, select **Manage Playlists** from the **Actions** menu, select the playlist, and then select **Delete List**. Select **Yes** to confirm the deletion.



Your personal information organizer

Say good-bye to paper calendars and throw away those scribbled to-do lists. Your Palm® Treo™ 755P smartphone is all you need to organize your personal information and keep it with you wherever you go.

You never lose your information, even if your battery is completely drained. All of your personal info is backed up each time you synchronize, and it is kept private when you use the security features on your smartphone. Also, you can easily share info with others electronically.

Benefits

- Track current, future, and past appointments
- Make to-do lists that get done
- Set reminders for appointments, birthdays, important tasks, and more
- Before you call your friend in London, check the time first

In this chapter

Contacts	131
Calendar	133
World Clock	141
Tasks	143

Contacts

Contacts is where you enter information about people you know. You can access this info from the Phone application to dial phone numbers and create favorites, and from the Messaging and email applications to send messages. When you create a contact, you can also assign a photo and ringtone ID to that contact, so you know when they call you.


DID YOU KNOW? If your company uses Microsoft Exchange Server 2003 or 2007, you may be able to sync Contacts directly with the server. See [Working with Microsoft Exchange ActiveSync](#) for info.

Adding a contact

TIP If you have several contacts to enter, it's more efficient to use the Palm® Desktop software (included) or Microsoft Outlook® (sold separately) on your computer and then sync your smartphone with your computer. For more info see [Synchronizing information—the basics](#).

- 1 Press **Phone** .
- 2 Select the **Contacts** favorite button.

TIP You can also open Contacts from Applications View. Press **Applications** and select **Contacts**.

- 3 Select **New Contact**.
- 4 Use the **5-way**  to move between fields as you enter information.




- 5 (Optional) Do any of the following:
 - Add a caller ID photo:** Select the **Picture** box, and then do one of the following:
 - Select **Camera** to take a picture and add it to this contact when you save the picture.

- Select **Photos** to add an existing picture to this contact.

Add a caller ID ringtone: Select the **Ringtone** pick list and select a ringtone from the list to give incoming calls from this contact a distinctive ring.

Place the entry in a category or mark it private: Select **Details**. (See [Working with private entries](#) for more info.)



Add a note to an entry: Select **Note** .



Display additional fields for this contact: Select **Plus** .

- 6 After you enter all the information, select **Done**.

TIP You can assign a ringtone to an entire category of contacts. For example, use a special ringtone for categories such as Family, Work, or Golf Buddies. Select the **category** pick list in the upper-right corner, select **Edit Categories**, and then select the category. Select the ringtone on the Edit Category screen.


Viewing or changing contact information

- 1 In the **Contacts** list, begin entering one of the following for the contact you want to view or edit:
 - First name (JOH for John)
 - Last name (SMI for Smith)
 - First initial and last name (JSM for John Smith)
- 2 Select the name of the entry you want to open.
- 3 Do one of the following:
 - Select **Edit**, make changes to the entry as necessary, and then select **Done**.
 - Select **Map**, wait for Google Maps to locate matching items. Select an item, select **To** to request directions to this location. In the From location field, enter or select your starting location, and then select **OK**. When the route summary appears, select **OK** to view the first step in the directions. Tap the **forward**  and **back**  buttons at the bottom of the screen to view the next or previous step in the directions.

- Select **Map**, wait for Google Maps to locate matching items. Select an item, Select **From** to request directions from this location. In the To location field, enter or select your destination, and then select **OK**. When the route summary appears, select **OK** to view the first step in the directions. Tap the **forward**  and **back**  buttons at the bottom of the screen to view the next or previous step in the directions.


TIP In the **Contacts** list, press **Up** or **Down** on the 5-way to move to the previous or next Contacts record.

Deleting a contact

- 1 Open the contact you want to delete.
- 2 Press **Menu** .
- 3 Select **Delete Contact** from the **Record** menu, and then select **OK**.

Defining your business card

- 1 Create a new contact and enter your own business card info.
- 2 Open the contact entry containing your business card info.

- 3 Press **Menu** .
- 4 Select **Business Card** from the **Record** menu.

TIP After you define your business card, you can beam it to other Palm OS® devices. In any Phone view or the Contacts application, open the **Record** menu and select **Beam Business Card**.

Calendar

Calendar is a powerful organizer application that helps you manage your schedule. You can view your calendar by day, week, or month, or as an agenda list that combines your Tasks list and email notifications with your appointments. Schedule repeating meetings or block out a vacation by creating one event set to repeat at an interval you specify. Color-code your appointments by category and add notes with helpful information.


DID YOU KNOW? If your company uses Microsoft Exchange Server 2003 or 2007, you may be able to synchronize Calendar events directly with the server. See [Working with Microsoft Exchange ActiveSync](#) for details.

Displaying your calendar

- Press **Calendar**  repeatedly to cycle through the various views:


Agenda View: Shows your daily schedule, the number of unread email messages, and any items on your Tasks list that are overdue or due today. If there's room, Agenda View also lists events on future dates.

Day View: Shows your daily schedule one day at a time.

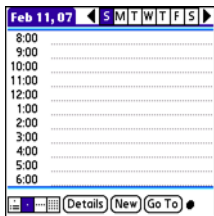

Week View: Shows your schedule for an entire week. The time frames are based on the Start Time and End Time settings in Calendar Preferences.


Month View: Shows your schedule for a whole month.


- From any Calendar view, open the **Options** menu and select **Year View** to view a calendar for an entire year.
- From any Calendar view (except Agenda View), use the **5-way**  to go to another day, week, month, or year (based on the current view).
- From any Calendar view (except Agenda View), select **Go To**, and then select a date from the calendar.

TIP You can customize your smartphone to display the most current Calendar event in the Phone application's Main View. Press **Phone**, open the **Options** menu, and then select **Phone Display Options**. Check the **Show Calendar event** box.

Creating an event

TIP If you have several appointments to enter, it's more efficient to use Palm Desktop software (included) or Microsoft Outlook (sold separately) on your computer and then synchronize your smartphone with your computer. For more information, see [Synchronizing information—the basics](#).

- 1 Press **Calendar**  until Day View appears.
- 2 Press **Left** ◀ or **Right** ▶ to select the desired day.

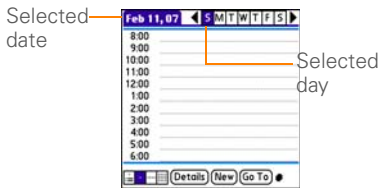

- 3 Select **New**.
- 4 Using the keyboard, enter a starting hour and minute for the event, such as 545 for 5:45.

- 5 Select the **End Time** box and enter the ending hour and minute for the event.
- 6 (Optional) To assign a time zone to the event, select the **Time Zone** pick list and select a city in the time zone you want.
- 7 Select **OK**.
- 8 Enter a description for the event.

IMPORTANT If you use Palm Desktop software, do not add time zones to your events. Palm Desktop does not support time zones.

If you use Microsoft Outlook, you can use the time zone feature, but you must install the conduit from the Palm Software Installation CD that came with your Treo 755e smartphone on all the computers with which you sync your smartphone. Chapura PocketMirror and other earlier Microsoft Outlook conduits do not support time zones.

TIP To automatically assign a time zone to your events, open the **Options** menu, select **Preferences**, and check the **New events use time zones** box. All your new events will be assigned to your local time zone (existing events aren't affected), and you can change the time zone setting for individual events.


TIP If you want your events with time zones to stay at the same time in Calendar regardless of the time zone you are in, go to Date & Time Preferences, select the **Automatically Set** pick list, and select **Date and time**. If you select **Date, time and time zone**, the event time shifts if you travel to a different time zone. See [Setting the date and time](#) for information.

Adding an alarm to an event

- 1 In Calendar, select the event.
- 2 Select **Details**.
- 3 Check the **Alarm** box and select the number of minutes, hours, or days before the event that you would like to receive the alarm.

TIP The alarm for untimed events is defined by minutes, days, or hours before midnight of the date of the event.

- 4 Select **OK**.

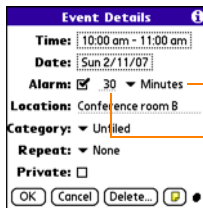


Type of time units

Number of time units


DID YOU KNOW? When an alarm occurs, the Alert screen displays all your pending alerts. Select an alert description to jump to that item, or check the box to clear that alert.

Creating an untimed event

An untimed event, such as a holiday or deadline, does not occur at a particular time.

- 1 Press **Calendar**  until you are in Day View.
- 2 Press **Left** ◀ or **Right** ▶ to go to the date of the event.
- 3 Make sure no times are highlighted.

- 4 Enter a description for the event. A diamond appears next to the description of an untimed event.

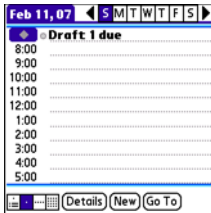


Scheduling a repeating event

TIP To enter a birthday or anniversary, add this info to the person's Contacts entry and it automatically appears in your Calendar.


TIP To enter a holiday, create an untimed event. Then, from the Details screen, select **Every year** as the repeat interval.

- 1 Create an event, and then select it.
- 2 Select **Details**.
- 3 Select the **Repeat** pick list, and then select a repeat interval. If the interval you need doesn't appear on the list,

select **Other** to define a custom interval.

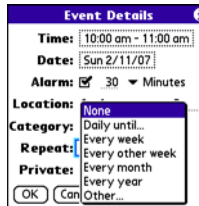

- 4 Select **OK**.

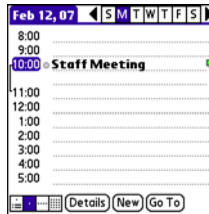

This icon indicates a repeating event.

DID YOU KNOW? If you sync with Microsoft Outlook and your events include other people, a With field appears in the Details dialog box and your attendee info appears in this field after you sync.


Color-coding your schedule

Use color-coding to quickly spot various types of events. For example, make appointments with family green, coworkers blue, and friends red. Follow these steps to create a category and assign it a color-code.

- 1 From Day View, select an event description or select an empty timeslot.
- 2 Select **Details**.
- 3 Select the **Category** pick list and select **Edit Categories**.
- 4 Do one of the following:
 - To create a new category, select **New** and then enter a category name.
 - To add a color to an existing category, select a category and select **Edit**.
- 5 Select the color you want to give this category, and then select **OK**.
- 6 (Optional) Repeat steps 4 and 5 to add or edit more categories.
- 7 Select **OK** two more times.

Now that the categories are set up with colors, you can assign categories to your events to color-code them. See the next section for details.


Editing or deleting an event

- 1 Select the event you want to edit or delete.
- 2 Select **Details**.
- 3 In addition to the settings covered earlier in this chapter, you can also change any of the following settings:
 - Date and Time:** Displays when the event takes place. Change these settings to reschedule the event.
 - Location:** Provides a description of where the event takes place.
 - Category:** Sets the color-coded category for this event.
 - Note** : Provides space for you to enter additional text.
 - Delete:** Removes the event from your calendar.
- 4 Select **OK**.

TIP To save memory, you can purge your old events. Open the **Record** menu and select **Purge**. Select the **Delete events older than** pick list and select a time frame. Select **OK**.

Customizing display options for your calendar

- 1 Press **Menu** (☰).
- 2 Select **Options**, and then **select Display Options**.
- 3 Select the **Default View** pick list and select the view you want to see when you open Calendar.
- 4 Select **Agenda** and set any of the following options:

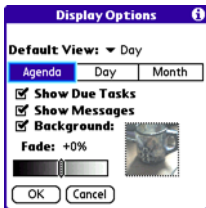


Show Due Tasks: The tasks that are due today and the tasks that are overdue appear in Agenda View.

Show Messages: The number of read and unread email messages is displayed in Agenda View.

Background: A favorite photo becomes the Agenda View background. Check

the **Background** box, select the image placeholder, and then select a photo. Adjust the fade setting so that the text is easy to read against the photo.

- 5 Select **Day** and set any of the following Day View options:

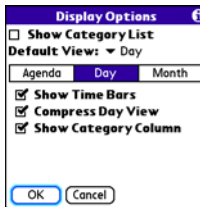


Show Category List: The Category pick list appears in Day View.

Show Time Bars: The time bars appear in Day View to show the duration of an event and to illustrate event conflicts.

Compress Day View: When this box is unchecked, all time slots appear on the screen. When this box is checked, start and end times appear for each event, but blank time slots near the bottom of the screen disappear to minimize scrolling.

Show Category Column: The color-coded category marker appears between the time and the description to indicate the category under which the event is filed.

- 6 Select **Month** and set any of the following Month View options:

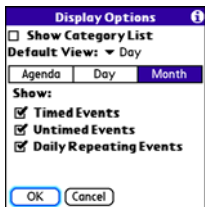

Show Category List: The Category pick list appears in Month View.

Timed Events: The events that are scheduled for a specific time appear in Month View.

Untimed Events: The events that are scheduled for a specific date but not a specific time appear in Month View.

Daily Repeating Events: The events that repeat every day appear in Month View.

- 7 Select **OK**.

Selecting alarm tones

- 1 Press **Menu** (⌘).
- 2 Select **Options**, and then select **Sound Preferences**.
- 3 Select the **Application** pick list and select **Calendar**.
- 4 Select the **Volume** pick list and select the volume level.
- 5 Select the **Vibrate** pick list and select an option for how you want your smartphone to vibrate for an event alarm.
- 6 Select tones from any of the following pick lists:



Alarm Sound: The tone played the first time your alarm goes off.

Reminder Sound: The tone played if an alarm is not acknowledged and the alarm repeats itself.

Repeat: The number of times the alarm repeats itself if it is not acknowledged.

Default Alarm: The default time frame for the alarm field.

7 Select **Done**.

TIP You can also record sounds and use them as alarms. Select **Manage** on the Sound & Alerts Preferences screen.

- To record a sound, select **New**.
- To play a sound, select it and press **Center** on the 5-way.
- To delete a sound, select it and press **Backspace**.
- To send a sound, select it and then select **Send**.

DID YOU KNOW? Your smartphone includes a silent alarm that can vibrate even when the Ringer switch is set to Sound Off (see [Silencing sounds](#)).

World Clock

World Clock displays the day and time in three cities anywhere around the globe. Whether you're traveling or staying home, it's easy to keep track of the best time to reach your business associates, friends, and family in faraway places.



TIP If you did not select the option to get the date and time from the mobile network, you can set the city at the top of the screen to a fixed location.

Selecting cities

World Clock shows the system date and time above the world map. If you selected the option to get the date and time from the mobile network (see [Setting the date and time](#)), your wireless service provider network automatically updates the time display to match the local time when you travel.

Below the world map you can view the time in two other cities. If you travel a lot, you may want to select your home city as

one of these two cities, so that you always know what time it is at home.

- 1 Press **Applications**  and select **World Clock** .
- 2 Select a **City** pick list, and select a city in the same time zone as the city you want to track.



DID YOU KNOW? You can run your stylus over the map to see the time in other cities. The shadow over the map represents nighttime moving across the globe.

Adding cities

If the city you want to display is not in the predefined list, you can add it.

- 1 Select a **City** pick list and select **Edit List**.

- 2 Select **Add**.
- 3 Select a location in the same time zone as the city you want to add, and then select **OK**.
- 4 Enter the name of the city.
- 5 Select **Location**, select **Map**, select the location of the city, and then select **OK**.
- 6 If the city does not observe daylight saving time, uncheck this box. If daylight saving time is observed, enter **Start** and **End** dates.
- 7 Select **OK**.

Setting an alarm

The next time you travel, don't rely on a hotel alarm clock to get you to that important meeting. Use your smartphone instead. World Clock includes a built-in alarm feature that you can use as a travel alarm.

- 1 Select **Off** in the upper-right corner.
- 2 Select the time you want the alarm to sound.
- 3 Select **OK**.



TIP To customize the alarm sound and volume, open the **Options** menu and select **Alarm Preferences**.


TIP Make sure the **Ringer switch** is set to **Sound On**, so that you can hear the alarm.

Tasks

You can use Tasks to remind you of tasks you need to complete and to keep a record of when you finish tasks.

Adding a task

- 1 Press **Applications**  and select **Tasks** .
- 2 Select **New** to create a new task.

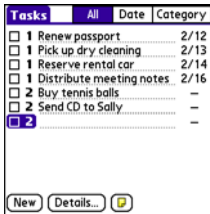

- 3 Enter a description of the task. The text can be longer than one line.


Setting task priority, due date, and other details

The Details dialog box enables you to assign a priority level, due date, category, privacy flag, and other details for each task.

- 1 Select the task to which you want to assign details.
- 2 Select **Details**.
- 3 Set any of the following:

Priority: Select the priority number for this task (1 is the most important). Later you can arrange your tasks based on the importance of each task.

TIP You can also select the priority from the Tasks list by selecting the number next to a task and then selecting a priority level.

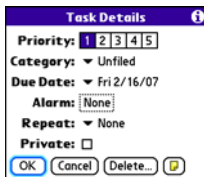

Category: Assign the task to a specific category. To add a new category, select **Edit Categories** and then select **New**.


Due Date: Select the **Due Date** pick list and select a due date for the task.

TIP If you turn on the **Show Due Dates** option in the Tasks Preferences screen, you can change the due date later by selecting the task's due date in the Tasks list.

Alarm: Set an alarm for this task.

Repeat: Indicate whether the task occurs at regular intervals and how often it repeats. When you check off a repeating task, the next instance of this task automatically appears in your task list.


Private: Check this box to mark this task private. See [Working with private entries](#) for additional information.


: Select this button to enter additional text that you want to associate with the task.

4 Select **OK**.

TIP Press **Menu** to access other features such as importing phone numbers into the Tasks list.

Checking off a task

- 1 Select the task you want to check off.
- 2 Press **Center**  or tap the box to check off the task.

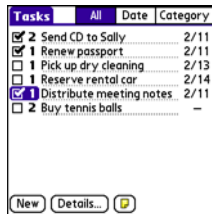

TIP If you accidentally check off a task and need to uncheck it, highlight the task again and press **Center** on the 5-way to uncheck it.

TIP You can set Tasks to record the date that you completed a task, and you can select to show or hide completed tasks. Completed tasks remain in the memory of your smartphone until you purge them.

DID YOU KNOW? Overdue tasks have an exclamation point (!) next to the due date.


Organizing your tasks

In the Tasks list, select one of these options:


- **All:** Displays all your tasks.




- **Date:** Displays tasks that are due in a specific time frame. Select the **Date** pick list (in the title bar) to select **Due Today, Last 7 Days, Next 7 Days, or Past Due**.

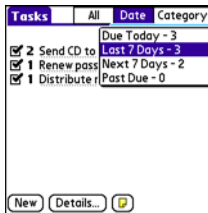

- **Category:** Displays tasks that are assigned to the selected category. Select the **Category** pick list to select a different category.

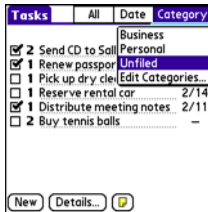

Deleting a task


- 1 Select the task you want to delete.
- 2 Press **Menu** .
- 3 Select **Delete Task** from the **Record** menu.
- 4 Select **OK**.

TIP To save memory, you can purge all completed tasks. Open the **Record** menu and select **Purge**. Select **OK**.

Customizing Tasks

Tasks Preferences enable you to control the appearance of the Tasks list.

- 1 In the Tasks list, press **Menu** .

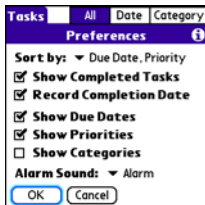

- 2 Select **Options**, and then select **Preferences**.

- 3 Set any of the following preferences:
 - Sort by:** Indicates the order in which your tasks appear in the list.

Show Completed Tasks: Displays tasks you've checked off.

Record Completion Date: Replaces due date with the completion date when you complete (check off) the task.

Show Due Dates: Displays task due dates and inserts an exclamation point (!) next to overdue tasks.

Show Priorities: Displays the priority setting for each task.

Show Categories: Displays the category for each task.

Alarm Sound: Sets the sound for the alarms you assign to your tasks.

- 4 Select **OK**.

DID YOU KNOW? You can display your tasks in your calendar. See [Customizing display options for your calendar](#) for details.



Your memos and documents

With its ability to store large amounts of important information, your Palm® Treo™ 755P smartphone lets you take your office with you—including your Microsoft® Office and PDF files. You can keep updated copies of the files on both your smartphone and your computer so that you can work on them in the most convenient location any time.

Leave your note pad and voice recorder at home. Use Memos to type notes. Use Voice Memo to record notes, agenda items, and other important thoughts, and play them back, right on your smartphone. You can even send your notes and voice memos to a friend or colleague by attaching them to an email message.

Benefits

- Manage Word, Excel®, PowerPoint®, and PDF files on your smartphone
- Improve productivity by taking important docs, spreadsheets, and presentations with you
- Capture thoughts on the fly

In this chapter

Documents To Go® Professional	149
Memos	151
Voice Memo	151

Documents To Go® Professional

NOTE On your smartphone, the companion application for Documents To Go® is named Documents.

With the Documents application on your smartphone, you can take your important office info with you. You can create, view, and edit Microsoft Word and Excel files directly on your smartphone. You can also view and manage PowerPoint and PDF files. For example, you can open email attachments, files you download with the web browser, and files stored on an expansion card (sold separately)—as long as the files are in a supported format.

NOTE The version of Documents To Go that comes with your smartphone does not support Microsoft Office 2007. To access Office 2007 files on your smartphone, you must save the files in Office 2003 format. For information about an upgrade that supports Office 2007, go to www.dataviz.com/office2007 (additional fees may apply).

Here are a few more examples of what you can do with Documents:

- Send and receive email attachments in Word, Excel, PowerPoint, and Acrobat file formats (DOC, XLS, PPT, and PDF).
- View Word, Excel, PowerPoint, and Adobe® Acrobat® files (DOC, XLS, PPT, and PDF).
- Create or edit a Word-compatible document or Excel-compatible spreadsheet on your smartphone, and then save it in the native DOC or XLS format.
- Create a PowerPoint presentation on your computer, use the Documents To Go desktop application to optimize the file for your smartphone, and then sync the file onto your smartphone. View or edit the file on your smartphone, and then sync again to transfer the changes to the original PowerPoint file on your computer.

NOTE The Documents application does not support some editing functions, such as multiple font sizes and spell checking.

Go to <http://go.palm.com/treo755p/> to download and install the Documents To Go desktop software. It enables you to synchronize Microsoft Office files so that changes you make to these files show up on both your smartphone and your computer. You can save files in their native Office format or make use of the optimized Documents To Go formats.


TIP For more info on the Documents To Go desktop application, click the **Documents To Go** icon on your computer, and then click **Help**, or go to www.dataviz.com.

TIP Download and install the Files application to easily browse and manage files on an expansion card. Press **Applications**, select **My Treo**, select the **Bonus** tab, and then select **Files**. See [Installing bonus software from My Treo on your smartphone](#) for more info on installing applications.

Opening a document

In the Documents application, you can view and open any Word, Excel, PowerPoint, or Acrobat (PDF) file on your smartphone or on an expansion card that is inserted into the expansion card slot.

- 1 Press **Applications**  and select **Documents** .

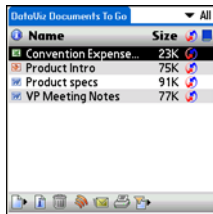

- 2 Select the document you want from the list.



TIP When you work on a file on your smartphone, you can save it to your smartphone or to an expansion card. Open the **File** menu, select **Save As**, and then select the location where you want to save the file.

Memos

Memos are a great way to store notes on your Treo 755P smartphone.

DID YOU KNOW? Each memo can include 4,096 characters of text.


Creating a memo

- 1 Press **Applications**  and select **Memos** .
- 2 Enter the text you want to appear in the memo.
- 3 Select **Done**.



TIP You can assign categories to your memos. Open the memo you want to change, select the **category** pick list at the top of the screen, and select a category. To add a new category, select **Edit Categories** and then select **New**.

Deleting a memo

- 1 Open the memo you want to delete.
- 2 Press **Menu** .
- 3 Select **Delete Memo** from the **Record** menu.
- 4 Select **OK**.

Voice Memo

Voice Memo provides a place for you to record and play back notes and other important thoughts directly on your smartphone.

NOTE Voice memos are not updated or backed up during synchronization.

Creating a voice memo

When recording a voice memo, face your smartphone's screen while speaking.

- 1 Press and hold the **Side** button on your smartphone while recording your memo. After you finish recording, release the **Side** button.

The memo is automatically saved to your smartphone.




- 2 (Optional) Enter a title for the voice memo.


TIP You can also access Voice Memo by pressing **Applications** and selecting **Voice Memo**.

TIP If you need to pause while recording, press and hold **Center** on the 5-way. Release the button to resume recording.

DID YOU KNOW? Your recording pauses automatically when you receive a call. If you ignore the call, you can press **Center** on the 5-way to resume recording. If you answer the call, recording stops and saves your voice memo. You cannot resume a previous recording; you must start another voice memo.

Listening to a voice memo

- 1 Press **Applications**  and select **Voice Memo** .
- 2 In the Voice Memo list, navigate to the voice memo title and then press **Center**  to select it. The voice memo begins to play.

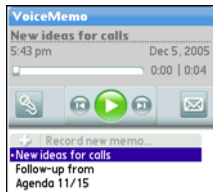

- 3 Press **Center**  to pause or stop playback.

TIP To adjust the volume level, press the **Volume** button on the side of your smartphone.

TIP To change a voice memo title, open the **Voice Memo** menu and select **Rename Memo**.

DID YOU KNOW? You can send a voice memo in an email (see the documentation for your email application). You can also use Bluetooth® wireless technology to send a voice memo to a nearby Bluetooth device (see [Sending info over a Bluetooth wireless connection](#)).



Your application and info management tools

Synchronization is a great way to transfer, update, and back up info on your Palm® Treo™ 755P smartphone. Synchronizing simply means that info you entered or updated in one place (your smartphone or your computer) is automatically updated in the other. There's no need to enter info twice.

Expansion cards (sold separately) provide a compact and limitless storage solution. When one card becomes full, simply use another card to carry your extra music and video clips and to install and run cool games and other software, from dictionaries to travel guides.

Benefits

- Locate info in your applications with the Find feature
- Quickly enter, update, and protect your info on your computer and your smartphone
- Install applications, games, and other software
- Store, carry, and exchange info

In this chapter



Using Find	157
Viewing and using the alerts	157
Calculator	158
Installing applications	160
Removing applications	162
Viewing application info	163
Sending information with Bluetooth® wireless technology	164
Beaming information	166
Synchronizing information—advanced	168
Using expansion cards	175

Using Find


The Find feature locates any text in the built-in applications and databases and in some third-party applications. The Find feature searches for the group of characters you specify, including characters that are part of a word. Find is not case-sensitive.

Find also includes Google Maps links that help you find a location, business, or directions to the word you're searching for. For example, to find a nearby pizza place, enter pizza followed by a space and your zip code, such as "pizza 95060."

DID YOU KNOW? Find locates any word that begins with the text you enter. For example, entering "plan" finds "planet," but not "airplane."



- 1 Press **Option** , and then press **Shift/Find**  to open the Find dialog box.
- 2 Enter the text you want to find.
- 3 Select **OK** to start the search.

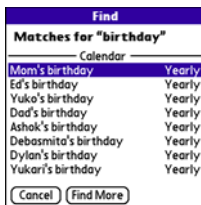- 4 In the search results, select the text you want to review, or select **Find More** to continue the search.



Viewing and using the alerts

The Alert screen on your smartphone shows info about incoming items such as new email messages and Calendar events. The Alert screen also notifies you if you miss a phone call.

To view the Alert screen, tap the blinking bell  when it appears in the upper-left corner of any screen, or press and hold **Center**  when the blinking bell appears.



You can do any of the following:


- Check the box to clear an alert from the list.
- Select the alert to open the corresponding application and view the alert item (message, event, missed call, and so on).
- Select **Done** to close the Alert screen and return to whatever you were doing on your smartphone before you opened the Alert screen. The bell continues to blink in the upper-left corner of the screen.
- Select **Clear All** to delete all alerts on the Alert screen.


Calculator

Calculator includes a basic calculator, plus an advanced calculator with scientific, financial, and conversion functions.


Switching between Basic and Advanced Calculator Modes

- 1 Press **Applications**  and select **Calc** .

- 2 Press **Menu** .
- 3 Select **Options**, and then select **Advanced Mode** or **Basic Mode**.

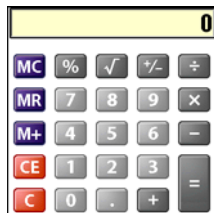

Basic Mode

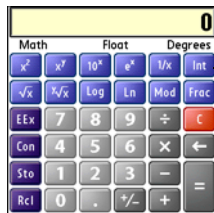


Advanced Mode—Math

TIP In Basic Mode, you can also press **Right** on the 5-way to switch to **Advanced Mode**. In Advanced Mode, press **Right** on the 5-way to cycle between functions, and press **Left** on the 5-way to return to **Basic Mode**.

DID YOU KNOW? You can tap the onscreen number pad or use the keyboard to input numbers.

Selecting functions in Advanced Calculator Mode

- 1 Switch to **Advanced Mode** (see the preceding procedure).
- 2 Press **Menu** .
- 3 Select **Options**, and then select the type of function you want to use:

Math: Advanced mathematical functions such as exponents, roots, and logarithms.

Trig: Trigonometric functions such as sine, cosine, tangent, and variants.

Finance: Financial calculator functions such as APR and amortization.

Logic: Hexadecimal characters in keypad, plus logic functions such as And, Not, Or, and Xor.



Statistics: Statistical functions such as sum, factorial, and random number generator.

Weight/Tmp: Weight and temperature conversions for metric and English values.

Length: Length conversions for metric and English values.

Area: Area conversions for metric, traditional, and English values.

Volume: Volume conversions for metric and English values.

- 4 Press **Menu** .
- 5 Select **Pref**, and then select the decimal display format: **Float**, **Fixed(x)**, **Sci(x)**, or **Eng(x)**.
- 6 Press **Menu** .
- 7 Select **Pref**, and then select the number display format: **Degrees**, **Radians**, or **Grads**.

TIP Select **Sto** to store a number in one of ten memory slots. Select **Rcl** to recall a stored number.

TIP Select **Con** to access a list of mathematical constants such as Avogadro's number or the speed of light.



Installing applications

Your smartphone comes with several built-in and ready-to-use applications. You can also install free bonus software, such as business software, games, and more. You can install the bonus software wirelessly using the My Treo application on your smartphone. You can also download the bonus software from <http://go.palm.com/treo755p/> to your computer and then synchronize to install it on your smartphone. You can use the web browser on your smartphone or your computer to purchase other third-party Palm OS® apps. To learn about applications you can purchase for your smartphone, go to <http://go.palm.com/treo755p/>.

NOTE The instructions in this section tell you how to install basic PRC (Palm OS application) and PDB (Palm OS database) files on your Treo smartphone. Some Palm OS software uses an installer or wizard to guide you through the process. For details, consult the documentation that came with the software.

Installing bonus software from My Treo on your smartphone


My Treo lets you download and install software that you can use on your smartphone. If the software has both a desktop component in addition to a smartphone component, you need to download the software to your computer first. See [Installing bonus software from My Palm on your computer](#) for info on installing software that includes a desktop component.

- 1 Press **Applications**  and select **My Treo** .
- 2 Select the **Bonus** tab.
- 3 Select the **Install** link below the name of the application you want to install.
- 4 Repeat step 3 to install additional applications.

Installing applications from the Internet

You can use the web browser on your smartphone to install Palm OS files (PRC or PDB) directly from the Internet. When you download a PRC or PDB file, it is automatically installed on your smartphone. If a file is compressed (ZIP or

SIT files), you need to download it to your computer and expand the file before installing it on your smartphone.

- 1 Open the web browser (see [Viewing a web page](#)).
- 2 Go to the page that contains the link to the application you want to download.
- 3 Press **Left** ◀ or **Right** ▶ to highlight the link to the file, and then press **Center**  to initiate the download process.
- 4 Follow the onscreen instructions to accept and install the application.

Installing bonus software from My Palm on your computer

- 1 On your computer, go to <http://go.palm.com/treo755p/>.
- 2 Follow the onscreen instructions to download the application(s) you want to install.
- 3 When prompted to select either Save or Run, select **Run** to place the app(s) in the install queue.
- 4 Synchronize your smartphone with your computer to install the application(s) on your smartphone.

Installing other third-party applications from a computer

BEFORE YOU BEGIN To install an app from your computer to your Treo smartphone, you must first install Palm® Desktop software on your computer (see [Installing the desktop synchronization software](#)).

When you download an application to your computer, it is probably in a compressed format such as a ZIP or SIT file. If the file is compressed, you need to use a decompression utility on your computer, such as WinZip or Allume Stuffit Expander, before you install the application on your smartphone.

- 1 **Windows:** Drag and drop the file(s) onto the **Palm Quick Install** icon on the Windows desktop.



- 2 **Mac:** Drag and drop the file(s) onto the **Send To Device** droplet in the **Palm** folder.
- 2 Select your device name from the **User** list, and then click **OK**.

- 3 Synchronize your smartphone with your computer to install the application(s) on your Treo smartphone.

TIP You can open a window to select whether to install files on your smartphone or on an expansion card.

Windows: Double-click the **Palm Quick Install** icon.

Mac: Open the **HotSync** menu and select **Install Handheld** files.

TIP On a Windows computer, you can also access Palm Quick Install by selecting the **Quick Install** icon in Palm® Desktop software or from the **Programs** folder in the **Start** menu.

Getting help with third-party applications


If you encounter a problem with a third-party application (such as an error message), contact the application's author or vendor. For general troubleshooting of third-party applications, see [Third-party applications](#).


Removing applications

If you decide that you no longer need an application, or you want to free up memory, you can remove apps from your smartphone or an expansion card (for more on expansion cards, see [Using expansion cards](#)). You can remove only apps, patches, and extensions that you install; you cannot remove the built-in apps that reside in the ROM portion of your Treo smartphone.

DID YOU KNOW? Some applications are factory-installed on your smartphone and cannot be deleted. These are listed with a Lock icon next to them.

DID YOU KNOW? Applications deleted from your smartphone are kept on your computer in the Archive folder of your user folder. If you're having trouble locating your user folder, see [I can't find my user folder](#).

- 1 Press **Applications** .
- 2 If you want to remove an application from an expansion card, insert the card into your smartphone.

- 3 Press **Menu** .
- 4 Select **Delete** on the **App** menu.
- 5 Select the **Delete From** pick list and select the location of the application you want to remove: **Phone** or **Card**.
- 6 Select the application that you want to remove.
- 7 Select **Delete**, and then select **Yes** to confirm the deletion.
- 8 Synchronize to remove the application from the Backup folder on your computer.

Manually deleting applications

If an app you delete reappears on your smartphone, you may need to manually delete the app from your computer.

- 1 Locate your **Backup** subfolder on your computer.

Windows: C:\Program Files\Palm\<device name>.



Mac: Mac HD\Applications\Palm\Users\<device name>.

If you upgraded from a previous version of Palm Desktop software, your Backup subfolder may be located in the palmOne or Handspring folder.

- 2 If you find a **PRC** or **PDB** file for the application you just removed, delete the file from the **Backup** subfolder.
- 3 Delete the file from your device again.

Viewing application info

The Info screens display basic statistics about the applications on your Treo smartphone.

- 1 Press **Applications** .
- 2 Press **Menu** .
- 3 Select **Info** on the **App** menu.
- 4 Select the **Device** pick list and select the location of the app you want to view info for: **Phone** or <card name>.



Version: The version numbers of applications on your smartphone.

Size: The size (in kilobytes) of applications and information on your smartphone.

Records: The number of entries in various applications on your smartphone.



- 5 Scroll to the application you want to see info about.
- 6 Select **Done**.




Sending information with Bluetooth® wireless technology

The range of Bluetooth® wireless technology is up to 30 feet/10 meters in optimum environmental conditions. Performance and range may be affected by physical obstacles, radio interference from nearby electronic equipment, and other factors.





Sending info over a Bluetooth wireless connection

In most applications you can send an individual entry or item such as a contact or a picture. You can also send all the entries in a category, such as all contacts in the Business category.



- 1 Press **Applications**  and select **Bluetooth** .
- 2 Select **Bluetooth On**.
- 3 Open an application.

- 4 Select the entry or category you want to send. You cannot send an item that has a lock  next to it.
- 5 Press **Menu** .
- 6 Select **Send** from the leftmost menu.
- 7 Select **Bluetooth**, and then select **OK**.
- 8 Select the receiving device(s) in the **Discovery Results** list, and then select **OK**.
- 9 Wait for a message to indicate that the transfer is complete before you continue using your smartphone.
- 7 Select the application you want to transfer. You cannot send an item that has a lock  next to it.
- 8 Select **Send**.
- 9 Select **Bluetooth**, and then select **OK**.
- 10 Select the receiving device(s) on the Discovery Results screen, and then select **OK**.
- 11 Wait for a message to indicate that the transfer is complete before you continue using your smartphone.

Sending an app over a Bluetooth wireless connection


- 1 Press **Applications**  and select **Bluetooth** .
- 2 Select **Bluetooth On**.
- 3 Press **Applications** .
- 4 Press **Menu** .
- 5 Select **Send** from the **App** menu.
- 6 Select the **Send From** pick list and select the location of the app you want to send: **Phone** or **<card name>**.

Receiving info over a Bluetooth wireless connection

- 1 Press **Applications**  and select **Bluetooth** .
- 2 Select **Bluetooth On**.
- 3 Select the **Visibility** pick list and select one of the following:

Visible: Enables Bluetooth devices that are not on your Trusted Device list to request a connection with your smartphone. Your smartphone remains accessible to other devices until you turn this option off. After you've finished using this setting, remember to change it back to Hidden.

Temporary: Enables Bluetooth devices that are not on your Trusted Device list to request a connection with your smartphone during the next two minutes. Your smartphone reverts to the Hidden setting and becomes inaccessible to other devices after two minutes.

- 4 Use the other device to discover your smartphone and send information to it:
 - See the other device's documentation to learn how to discover and send information over a Bluetooth wireless connection.
 - If the **Ringer switch** is set to **Sound On** , your smartphone beeps to notify you of the connection, and then prompts you to accept the info. Select a category or expansion card to specify where you want to store the item. If you don't select a category, the item goes into the Unfiled category.
- 5 Select **Yes** to receive the information or **No** to refuse it.

TIP The Device Name in the Bluetooth app is the name other devices with Bluetooth wireless technology see when they connect to your smartphone. The default name is the name you gave your device during setup. You can change this name if you want to.

DID YOU KNOW? When you receive an application over a Bluetooth connection, you can store the application on your smartphone or send it to an expansion card inserted into the expansion card slot.

Beaming information



Your Treo 755P smartphone is equipped with an IR (infrared) port so that you can beam information to another Palm OS® device with an IR port. The IR port is located on the side of your smartphone, above the expansion card slot door, behind the small dark shield.

TIP For best results, the path between the two devices must be clear of obstacles, and both devices must be stationary. If you have difficulty beaming, shorten the distance and avoid bright sunlight.

Beaming an entry

You can beam an individual entry or item such as a contact or a picture. You can also beam all the entries in the selected category, such as all the contacts in the Business or Family category.

TIP Beam your business card in two key presses: From the Phone application's Main View, press **Menu**, and then press the **M** key.

- 1 Select the entry or category you want to beam. You cannot beam an item that has a lock  next to it.
- 2 Press **Menu** .
- 3 Select **Record**, and then select one of the following:

Beam: Sends an individual entry.


Beam Category: Sends all entries in the current category.

DID YOU KNOW? If you beam a bookmark or saved page from the web browser, it beams the URL, not the contents of that page.


- 4 When the Beam Status dialog box appears, point the IR port on your



smartphone directly at the IR port on the receiving device.

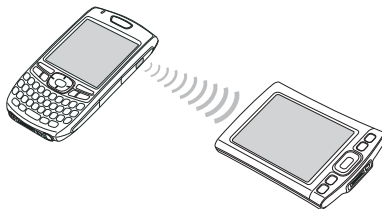- 5 Wait for the Beam Status dialog box to indicate that the transfer is complete before you continue using your smartphone.



Beaming an application

Not all applications can be beamed. A lock icon  appears on the Beam screen next to applications that cannot be beamed.

- 1 Press **Applications** .
- 2 Press **Menu** .
- 3 Select **Beam** from the **App** menu.
- 4 Select the **Beam From** pick list, and select whether the application you want to beam is located on your Treo smartphone or on an expansion card.

- 5 Select the application you want to transfer.
- 6 Select **Beam**.
- 7 When the Beam Status dialog box appears, point the IR port on your smartphone directly at the IR port on the receiving device.
- 8 Wait for the Beam Status dialog box to indicate that the transfer is complete before you continue using your smartphone.

Receiving beamed information

- 1 Turn on your screen.
- 2 Select the beam command on the transmitting device.
- 3 Point the IR port on your smartphone directly at the IR port on the transmitting device to open the Beam Status dialog box.
- 4 When the Beam Status dialog box appears, select a category for the entry.
- 5 Select **Yes** to receive the information or **No** to refuse it.

TIP If you do not select a category upon receiving a beamed item, the item is placed in the Unfiled category.

TIP If you can't receive beamed information, make sure the **Beam Receive** option is turned on (see [Optimizing power settings](#)) and that you are not running a third-party application that disables beaming. If you still can't receive a beam, try a soft reset (see [Resetting your smartphone](#)).

DID YOU KNOW? You can store a beamed application on your smartphone, or send it to an expansion card inserted into the expansion card slot.

Synchronizing information—advanced


Changing which applications sync

By default, information from Calendar, Contacts, Memos, Pics&Videos, and Tasks is updated each time you synchronize your smartphone with Palm Desktop software (included) or Microsoft Outlook (sold


separately). You can change which applications synchronize. For example, if you don't use the Memos application and you want to speed up synchronization, you can turn off synchronization for Memos.

TIP Windows If you set up your smartphone to sync with Outlook, you can learn how to change which applications synchronize, by doing the following: Click the **HotSync® manager** icon in the taskbar and select **Custom**. Select a conduit that syncs with Outlook, click **Change**, and then click **Help**.

WINDOWS ONLY

- 1 Click **HotSync manager**  in the taskbar in the lower-right corner of your screen.
- 2 Select **Custom**.
- 3 Select your device name from the **User** list at the top of the screen.
- 4 Select the application for which you want to turn synchronization on or off, and then click **Change**.
- 5 Select **Synchronize the files** to turn on synchronization for an app.

Select **Do nothing** to turn off synchronization for an app that currently synchronizes (for example, to turn off synchronization for Memos if you do not use this app).

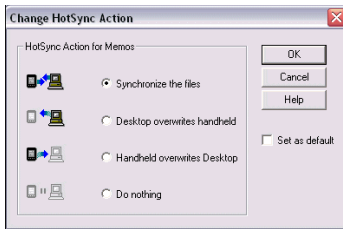


NOTE Select one of the two overwrite options if you want the information in one location (smartphone or computer) to completely replace the information in the other location for that app. For example, if the Calendar info on your smartphone is accurate but the info on your computer has become corrupted, select **Handheld overwrites Desktop** for the Calendar app to have your smartphone info replace your computer info. Note that “handheld” refers to your smartphone and “desktop” refers to your computer.


- (Optional) Repeat steps 4 and 5 for each application for which you want to turn synchronization on or off.
- Click **OK**, and then click **Done**.

TIP Windows To keep the current sync setting on an ongoing basis, check the **Set as default** box. If you do not check this box, the option you select applies only the next time you synchronize. Thereafter, info is updated according to the default setting.

MAC ONLY

- Double-click the **Palm Desktop**  icon in the **Palm** folder.
- From the **HotSync** menu, select **Conduit Settings**.
- From the **User** pop-up menu, select your device name.
- Select the application for which you want to turn synchronization on or off, and then click **Conduit Settings**.
- Select **Synchronize the files** to turn on synchronization for an app. Select **Do nothing** to turn off synchronization for an app that currently synchronizes (for example, to turn off

synchronization for Memos if you do not use this app).

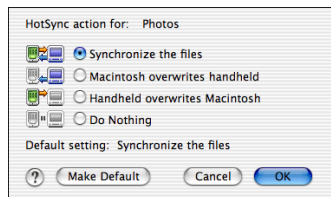

NOTE Select one of the two overwrite options if you want the information in one location (smartphone or computer) to completely replace the information in the other location for that app. For example, if the Calendar info on your smartphone is accurate but the info on your computer has become corrupted, select **Handheld overwrites Macintosh** for the Calendar app to have your smartphone info replace your computer info. Note that “handheld” refers to your smartphone.



- (Optional) Repeat steps 4 and 5 for each application for which you want to turn synchronization on or off.


- Click **OK**, and then close the Conduit Settings window.

TIP Mac To keep the current setting on an ongoing basis, select **Make Default**. If you do not select this button, the option you select applies only the next time you synchronize. Thereafter, info is updated according to the default setting.

Setting up a Bluetooth connection for synchronization

If your computer is enabled with Bluetooth wireless technology, you can synchronize wirelessly over a Bluetooth connection.


- Press **Applications**  and select **Bluetooth** .
- Select **Bluetooth On**.

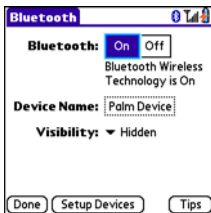

- Enter a device name for your smartphone. This is the name that appears on the other Bluetooth device's screen when it connects to your smartphone.
- Select the **Visibility** pick list and select **Visible** or **Temporary**.

TIP After you form a partnership with a device, you can change the Visibility setting to Hidden. That way only devices with which you've already formed a partnership can find your smartphone. New devices cannot request a connection.

- Select **Setup Devices**.
- Select **HotSync Setup**.

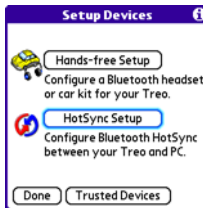


- 7 Follow the onscreen instructions to create a partnership between your smartphone and your computer. In some cases you may need to perform setup steps on your computer before you can complete this step. Check your computer's documentation for specific setup instructions.
- 8 After you finish the HotSync Setup, select **Done** to return to Applications View.


You're now ready to sync your smartphone with your Bluetooth computer.

Synchronizing over a Bluetooth connection

When you synchronize using your smartphone's Bluetooth wireless feature, you don't need your sync cable. This is especially useful if you travel with a laptop enabled with Bluetooth wireless technology.

- 1 Press **Applications**  and select **HotSync** .

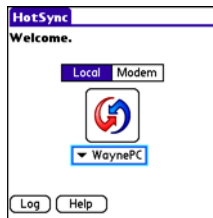

- 2 Select **Local**.
- 3 Select the pick list below the HotSync icon, and then select the name of the PC you set up for Bluetooth synchronization (see [Setting up a Bluetooth connection for synchronization](#)).
- 4 Select the **HotSync**  icon on your smartphone.

When synchronization is complete, a message appears at the top of your smartphone screen. Be patient; synchronization may take a few minutes.


Synchronizing over an infrared connection


BEFORE YOU BEGIN Check the following on your computer:




- It must have an enabled IR port and driver or have an IR device attached to it. Check your computer's documentation to see if it supports IR communication.
- HotSync manager must be active. On a Windows computer, you know HotSync manager is active when its icon appears in the lower-right corner of your screen.

When you synchronize using your smartphone's IR port, you don't need a cable. This is especially useful if you travel with an IR-enabled laptop.

WINDOWS ONLY

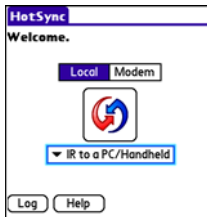



- 1 On your computer, click **HotSync manager**  in the taskbar in the lower-right corner of your screen. Make sure that **Infrared** is selected.



- 2 On your smartphone, press **Applications**  and select **HotSync** .
- 3 Select **Local**.
- 4 Select the pick list below the HotSync icon and select **IR to a PC/Handheld**.
- 5 Position the IR port on your smartphone within a few inches of the IR port on your computer.
- 6 Select the **HotSync**  icon on your smartphone.

When synchronization is complete, a message appears at the top of your smartphone screen. Be patient; synchronization may take a few minutes.

MAC ONLY

- 1 Double-click **HotSync manager**  in the Palm folder.
- 2 Click the **HotSync Controls** tab, and then select **Enabled**.
- 3 Click the **Connection Settings** tab, and then check the **On** box next to **IR port**.
- 4 Close the HotSync Software Setup window.
- 5 On your smartphone, press **Applications**  and select **HotSync** .
- 6 Select **Local**.
- 7 Select the pick list below the HotSync icon and select **IR to a PC/Handheld**.
- 8 Position the IR port on your smartphone within a few inches of the IR port on your computer.
- 9 Select the **HotSync**  icon on your smartphone.

When synchronization is complete, a message appears at the top of your smartphone screen. Be patient; synchronization may take a few minutes.

Synchronizing using Microsoft Exchange ActiveSync®

Microsoft Exchange ActiveSync® works with the VersaMail® application, Calendar, and Contacts applications on your smartphone to directly access corporate groupware information in Microsoft Exchange Server 2003 or 2007. If your company uses Microsoft Exchange Server 2003 or 2007, you may be able to wirelessly synchronize info in these applications on the server from your smartphone without using a desktop computer.

A Microsoft Exchange ActiveSync account interacts with your desktop software as follows:

- **Microsoft Outlook (sold separately):** Info in Calendar, Contacts, and the VersaMail application on your smartphone is pushed from or syncs with the server; it does not sync directly with Outlook on your desktop. However, if the server pushes info to or syncs with Outlook on your desktop, any info you enter in these applications on your smartphone also appears in Outlook after the next server push or sync.

NOTE Push is a feature provided by Microsoft Exchange ActiveSync that pushes email messages, Calendar events, meeting invitations, and updated contact information it receives onto your smartphone.

- **Palm Desktop software:** Info in Calendar, Contacts, and the VersaMail application does not sync with and does not appear in Palm Desktop software on your computer.

NOTE Info in other apps, such as Tasks and Memos, continues to sync with and appear in the desktop software on your computer (Outlook or Palm Desktop software).

For complete information on using a Microsoft Exchange ActiveSync account, see the *User Guide for the VersaMail® Application* at <http://go.palm.com/treo755p/>.

Using expansion cards

The expansion card slot on your Treo smartphone enables you to add miniSD cards (sold separately) to extend the storage capacity of your smartphone. For example, expansion cards can store the following:

- Photos
- MP3 audio files
- Email attachments
- Games
- eBooks
- Microsoft Office files
- Adobe Acrobat files
- Applications
- Databases


Inserting an expansion card

The expansion card slot on your smartphone has a push-push mechanism: push in gently to insert a card; push in gently to remove it.

- 1 Open the door of the expansion card slot.



- 2 Hold your smartphone with the screen facing you, and hold the card with the label facing you. The notch on the card should be in the lower-left corner next to the keyboard.
- 3 Insert the card into the expansion card slot until you feel the card lock into place.

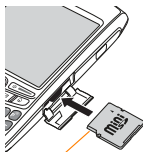

Notch



DID YOU KNOW? If the Ringer switch is set to Sound On, you hear a confirmation tone when you insert or remove an expansion card.

- 4 Close the door of the expansion card slot.

Removing an expansion card

- 1 Open the door of the expansion card slot.



- 2 Press the card into the expansion card slot to release it from the slot.
- 3 After you feel the expansion card slot eject the card, remove the card from the slot.





- 4 Close the door of the expansion card slot.

Opening applications on an expansion card

After you insert an expansion card into the expansion card slot, you can open any of the applications stored on the expansion card.

- 1 Insert the expansion card into the expansion card slot. Applications View automatically appears.

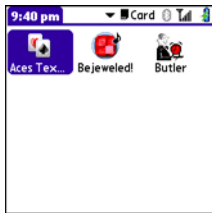

- 2 Select the icon for the application you want to open.
- 3 Press **Center**  to open the application.

TIP Install the Palm® Files application to easily browse and manage files on an expansion card. Press **Applications**, select **My Treo**, select the **Bonus** tab, and then select **Files**.

Accessing items stored on an expansion card

When an expansion card contains items, such as pictures or songs, you can access those items directly from the card.

- 1 Insert the expansion card into the expansion card slot. Applications View automatically appears.
- 2 Select the **category** pick list in the title bar, and select **All**.
- 3 Select the icon for the application in which you want to open the item. For example, to view a picture, select **Pics&Videos**.

Copying applications between an expansion card and your smartphone

TIP Before you copy an application to an expansion card, make sure that it is compatible with Palm OS software version 5.4.5 or later. Some applications do not work with expansion cards and do not allow you to store files in a location that is separate from the application.

You can copy applications from your Treo smartphone to your expansion card and vice versa.

- 1 Press **Applications** .



- 2 Press **Menu** .
- 3 Select **Copy** from the **App** menu.

- 4 Select the **Copy To** pick list and select the destination: **Phone** or **<card name>**.
- 5 Select the **From** pick list and select the location of the application you want to copy: **Phone** or **<card name>**.
- 6 Highlight the application you want to copy.
- 7 Select **Copy**.

Viewing expansion card information





The Card Info application displays general information about the expansion card that is currently in the expansion card slot. It also enables you to rename and format a card.

Press **Applications**  and select **Card Info** .

TIP Before copying information to, renaming, or formatting an expansion card, make sure the card is not write-protected. See the instructions that came with your card for details.

Renaming an expansion card



If you change the contents of an expansion card, you can rename the card to better match its contents and to make it easy to identify wherever you insert it.

- 1 Insert the expansion card into the expansion card slot. Applications View automatically appears.
- 2 Select the **category** pick list at the top of the screen and select **All**.
- 3 Select **Card Info** .
- 4 Press **Menu** .

- 5 Select **Rename Card** from the **Card** menu.
- 6 Enter a new name for the card.
- 7 Select **Rename**.

Formatting an expansion card

Formatting an expansion card is similar to formatting a disk on a computer. When you format an expansion card, you erase all the information stored on the card.

- 1 Insert the expansion card into the expansion card slot. Applications View automatically appears.
- 2 Select the **category** pick list at the top of the screen and select **All**.
- 3 Select **Card Info** .
- 4 Press **Menu** .
- 5 Select **Format Card** from the **Card** menu.
- 6 Select **OK**.



Your personal settings

Customizing your Palm® Treo™ 755P smartphone is a great way to make it match your lifestyle and work even harder for you.

On your smartphone, you can easily customize the sounds, fonts, screen colors, and more. Take advantage of different levels of security. Prevent making an accidental (and expensive) phone call by locking the keyboard. Some settings can help extend the life of your smartphone battery. There are lots of ways to make your smartphone work better for you.

Benefits


- Access applications quickly
- Conserve power
- Make your screen easy to read
- Enjoy your smartphone more

In this chapter



System sound settings	183
Display and appearance settings	184
Applications settings	186
Locking your smartphone and info	189
System settings	196
Connection settings	198


System sound settings


Silencing sounds

You can immediately silence all alerts, ringtones, music that plays through the built-in speaker, and system sounds by sliding the Ringer switch to Sound Off . This does not mute the audio during a phone call.

DID YOU KNOW? Your smartphone includes a silent alarm that can vibrate even when the Ringer switch is set to Sound Off. For info on setting the vibrate option, see the section on setting alert tones in the chapters that describe the individual applications.

- 1 Slide the **Ringer switch** to **Sound Off** . Your smartphone vibrates once to let you know that you've turned sounds off.
- 2 To hear all sounds again, slide the **Ringer switch** to **Sound On** .

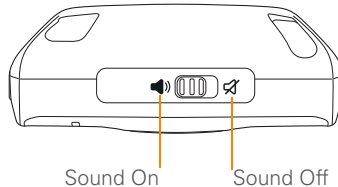

When you slide the Ringer switch back to Sound On , it restores the previous sound settings.



Setting system volume levels

You can set the volume level for system sounds, such as the tone that plays when you synchronize.

TIP If the Ringer switch is set to Sound Off, the ringer setting overrides the sound settings and all sounds are turned off.

- 1 Press **Applications**  and select **Sounds** .
- 2 Select the **Application** pick list and select **System**.
- 3 Select the **System Volume** and **Game Volume** pick lists and select the volume levels.



- 4 Select **Done**.



Display and appearance settings

Adjusting the brightness

Depending on the lighting conditions in which you're using your smartphone, you may need to adjust the brightness of the screen and keyboard backlight.

- 1 Press **Option** , and then press **Backlight** .




- 2 Press **Left**  and **Right**  to adjust the brightness.
- 3 Select **Done**.


TIP To automatically set the backlight to the preset low setting, press **Option + Menu**.

TIP You can also adjust the backlight and set the brightness duration during a call in Power Preferences. See [Optimizing power settings](#).

Changing the screen font

You can change the screen font in Calendar, Contacts, Memos, Messaging, Tasks, and Web. The font styles may vary between applications and some applications may offer fewer choices.

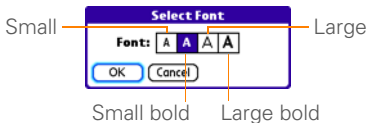

- 1 Open the application in which you want to change the font.
- 2 Press **Menu** .
- 3 Select **Options**, and then select **Font**.
- 4 Select a font style. (In the web browser, select the **Font size** pick list and select **Large** or **Small**.)




- 5 Select **OK**.

Setting display formats

Formats Preferences enable you to select number conventions based on geographic regions. For example, in the United Kingdom, time often is expressed using a 24-hour clock. In the United States, time is expressed using a 12-hour clock with an AM or a PM suffix. Many of the built-in applications on your Treo smartphone use the Formats Preferences settings.

- 1 Press **Applications**  and select **Prefs** .
- 2 Select **Formats**.
- 3 Set any of the following preferences:

Preset to: The standard number conventions for your country. When you select a country, the other Formats Preferences are automatically set to that country's conventions. You can also edit each option individually.

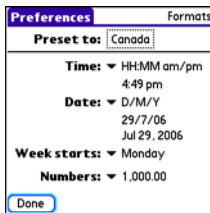

Time: The time format. Select **HH:MM** to display a 24-hour clock.

Date: The date format.



Week starts: The first day of the week (usually Sunday or Monday).

Numbers: The format for numbers with decimal points and commas.

- 4 Select **Done**.

Aligning the screen



Occasionally, your smartphone screen may need to be readjusted. If this occurs, you may see the wrong feature being activated when you tap the screen. To fix the problem, you can align the screen at any time.

- 1 Press **Applications**  and select **Prefs** .
- 2 Select **Touchscreen**.
- 3 Follow the onscreen instructions and tap the screen where indicated.



- 4 Select **Done**.

Changing the system color scheme

- 1 Press **Applications**  and select **Prefs** .
- 2 Select **Color Theme**.
- 3 Select a color scheme from the list.



- 4 Select **Done**.



TIP You can also set the wallpaper for the Phone application's Main View (see [Customizing the Phone application's Main View](#)) and the background for the Calendar Agenda View (see [Customizing display options for your calendar](#)).

Applications settings

You can change the Applications settings on your smartphone so that you can easily access the applications you use most often. You can arrange and display your applications by category, reassign the buttons on your smartphone, and select default applications for specific tasks.

Arranging applications by category

You can assign an application to a category and then display a specific category of applications in Applications View.


- 1 Press **Applications** .
- 2 Press **Menu** .
- 3 Select **Category** on the **App** menu.
- 4 Select the pick list next to each application and select a category.
- 5 Select **Done**.

TIP To create a new category, select the **category** pick list and select **Edit Categories**. Select **New**, and then enter the category name. Select **OK** to close the dialog box, and then select **OK**.

DID YOU KNOW? If there is an expansion card in the expansion card slot, the card appears in the category pick list and is treated as a category when you press Applications repeatedly.

Displaying applications by category



Do one of the following:

- Press **Applications**  repeatedly to cycle through the categories.

- Select the **category** pick list at the top of the screen and select a category. Select **All** to display all of your applications.

Changing Applications View

By default, Applications View displays each application as an icon. As an alternative, you can view a list of applications. The list view is particularly useful when you have so many applications in a category that the applications fill up more than one screen.




- 1 Press **Applications** .
- 2 Press **Menu** .
- 3 Select **Options**, and then select **Preferences**.
- 4 Select the **View By** pick list and select **List**.
- 5 Select **OK**.


Reassigning buttons

With Buttons Preferences you can select which applications are associated with the quick buttons and the Side button on your Treo smartphone. You can assign a primary and secondary application to each of the

three quick buttons that open an application.

NOTE We recommend that you keep the primary button assignments on the factory settings until you become comfortable with the features of your smartphone. If you do change the primary button assignments, remember that the instructions in this guide and in the other help features refer to the original button settings.

- 1 Press **Applications**  and select **Prefs** .
- 2 Select **Buttons**.
- 3 Select the pick list next to the button, Option  + button, or Side button that you want to reassign, and then select an application.

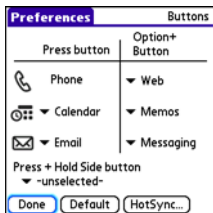

4 Select **Done**.


DID YOU KNOW? You can also choose an application to open with the sync button on the USB sync cable. To change this setting, select **HotSync** on the Buttons Preferences screen.



TIP To restore all the buttons and key combinations to their factory settings, select **Default**.

DID YOU KNOW? Some third-party applications automatically take over a button when you install the application.

Changing default applications

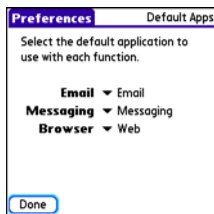Sometimes one application looks for another application to handle information (for example, a mail application might open a browser when you select a link in an email message). Your smartphone comes with a set of predefined applications to handle email, messaging, and browser requests from other applications. If you have more than one application to handle these requests on your smartphone, you can specify which application you want to use for each function.



- 1 Press **Applications**  and select **Prefs** .
- 2 Select **Default Apps**.
- 3 Select each pick list and select the application you want to associate with that function.
- 4 Select **Done**.

Locking your smartphone and info

Your Treo smartphone includes several features to protect your smartphone from inadvertent use and keep your information private. You can lock any of the following features on your smartphone:

Keyboard (Keyguard): You can use the Keyguard feature to disable the keyboard and all buttons to prevent accidental presses in your bag or pocket.

Screen: You can disable the screen's touch-sensitive feature during an active call or call alert.

Phone (Phone Lock): You can set your phone to require a password to make calls. The built-in security software lets you make emergency calls even if your phone is locked.

Smartphone: You can set your smartphone to require a password for you to see any information on your smartphone.



Entries: You can mask or hide entries marked as private and set your smartphone to require a password for viewing them.


Locking your keyboard (Keyguard)

The Keyguard feature locks the keyboard so that you don't accidentally press buttons or activate items on the screen while your smartphone is in a pocket or bag.

By default, Keyguard turns on whenever the screen is off. Each time you wake up the screen, you must turn off Keyguard to unlock the keyboard and use your smartphone.



To turn off Keyguard, do the following:

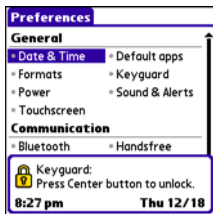- 1 When the screen is off, press **Power/End**  to wake up the screen.
- 2 Press **Center**  to turn off Keyguard.





TIP If you disabled Keyguard, you can turn Keyguard on manually by pressing **Option + Power/End** when the screen is on.


You can change how quickly Keyguard turns on, or you can disable this feature altogether. To change the Keyguard settings, do the following:



- 1 Press **Applications**  and select **Prefs** .
- 2 Select **Keyguard**.
- 3 Select the **Auto-Keyguard** pick list, and then do one of the following:
 - Select how quickly you want Keyguard to turn on: **When power is turned off, 5 seconds after power off, or 30 seconds after power off**.
 - Select **Disable** to completely disable the Keyguard feature until you turn it on again.
- 4 Select **Done**.


Locking your screen

You can set your smartphone to automatically lock the screen's touch-sensitive features in certain situations.

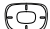- 1 Press **Applications**  and select **Prefs** .
- 2 Select **Keyguard**.
- 3 Check any of the following boxes:

Incoming calls received: Disables the screen when the phone rings. You must use the **5-way**  to select the

onscreen **Answer** and **Ignore** buttons, or press **Send**  to answer the call or **Power/End**  to ignore the call.

On a call: Disables the screen after you answer a call. You must use the **5-way**  to select the onscreen buttons during the call. Use this setting to avoid accidentally pressing onscreen buttons while you're holding your smartphone near your ear to speak.



4 Select **Done**.

DID YOU KNOW? When you check the boxes to disable the touchscreen during a call, the touchscreen is automatically enabled again after you end the call.

Locking your phone (Phone Lock)

You can lock your phone to prevent unauthorized calls and use of other wireless features. When your phone is locked, you must enter the correct code to unlock it. You can still place emergency calls when your phone is locked, however.

TIP When Phone Lock is turned on, other people can still see the info on your smartphone, but they cannot make calls or use the other wireless features without your password.


- 1 Press **Phone** .
- 2 Press **Menu** .
- 3 Select **Options**, and then select **Phone Lock**.
- 4 (Optional) Select **Advanced**, enter up to three numbers that you can dial when your phone is locked, and then select **OK**. You do not need to enter the standard emergency call number for your area, such as 911, as one of the three numbers, because this number is always available.
- 5 Select one of the following **Phone Lock** options:

On phone power off: Locks your phone each time you turn it off. When this setting is active, you must enter your lock code each time you turn your phone on again.

Immediately: Locks your phone when you select OK. The next time you dial a

number, you must enter your lock code to unlock your phone. After that, you can continue to make calls without entering your lock code, unless you select one of these Phone Lock options.

- 6 When prompted, enter the lock code, and then select **OK**. (Unless you changed your lock code, it is the last four digits of your phone number.)
- 7 If you want to change the lock code, select **Change Lock Code**, enter a new lock code, and then select **OK**. Repeat this step to verify the new lock code.
- 8 Select **OK**.

If you selected Immediately in step 5, your phone locks right away. If you selected On phone power off, your phone locks the next time you press and hold Power/End  to turn off your phone.

TIP If you want to lock your phone once in a while, use the Immediately option to lock your phone on demand.

To disable the current Phone Lock settings:

- 1 Press **Menu** .

- 2 Select **Options**, and then select **Phone Lock**.
- 3 Uncheck the **On phone power off** box.
- 4 Enter your lock code to change this setting.
- 5 Select **OK** twice.

Locking your smartphone

To protect your personal information, you can lock your smartphone. When your smartphone is locked, you need to enter your password to access any of your information or to use any of the features on your smartphone, including the phone. You can still make emergency calls, however, when your smartphone is locked.


IMPORTANT If you lock your smartphone, you must enter the exact password to unlock it. If you forget the password, you need to perform a hard reset to resume using your smartphone. Performing a hard reset deletes all the entries in your smartphone. However, you can restore all previously synchronized info the next time you sync (see [Synchronizing information—the basics](#)).

- 1 Press **Applications**  and select **Security** .
- 2 Select the **Password** box.



- 3 Assign a password and a password hint.
- 4 Select the **Auto Lock Device** box.
- 5 When prompted, enter your password and select **OK**.
- 6 Select one of the following options:
 - Never:** Prevents your smartphone from locking automatically.



- On power off:** Locks your smartphone when you turn off the screen, or when it shuts off with the Auto-off feature.
 - At a preset time:** Locks your smartphone at a specific time of day.
 - After a preset delay:** Locks your smartphone after a period of inactivity.
- 7 Select **OK**.
 - 8 Do one of the following:
 - Select **Lock & Turn Off** to lock your smartphone immediately.
 - Press **Applications**  to accept your settings and continue using your smartphone.

TIP After you create a password, you can lock your system manually. Press **Applications** and select **Security**. Select **Lock & Turn Off**, and then select **Off & Lock**.

TIP To change your password, select the **Password** box, enter your current password, and then enter the new password. To delete your password, select the **Password** box and then select **Unassign**.

Working with private entries

In most applications you can mark individual entries as private. All private entries remain visible and accessible until you select the Security setting. You have two Security setting options:

- **Hide Records:** Private entries do not appear anywhere in the application.
- **Mask Records:** Private entries are replaced with a visual placeholder where the entry would normally appear.



After you enable the mask or hide setting, any entries marked as private are immediately hidden or masked. If you define a password, you must enter it to display private entries. If you do not define

a password, you (or anyone else) can reveal private entries without a password.

- 1 Display the entry that you want to mark private.
- 2 Select **Details**.
- 3 Check the **Private** box.
- 4 Select **OK**.



Hiding or masking all private entries

Make sure the entries you want to mask or hide are marked private.

- 1 Press **Applications**  and select **Security** .
- 2 Select the **Current Privacy** pick list and select either **Hide Records** or **Mask Records**.
- 3 If prompted for your password, enter it and then select **OK**.

Viewing all private records

You can reveal all the entries you've hidden or masked.

- 1 Press **Applications**  and select **Security** .

- 2 Select the **Current Privacy** pick list and select **Show Records**.
- 3 If prompted for your password, enter it and then select **OK**.

TIP You can also access the systemwide security settings while you're in an application, such as Calendar. Press **Menu**, select **Options**, and then select **Security**.

Security and Palm® Desktop software (Windows)

The Windows version of Palm® Desktop software observes the security password for your Treo smartphone. If you forget your password, you cannot view your information in Palm Desktop software. If your smartphone is unlocked, you can change your password on your smartphone, but all entries marked as private are deleted. You can restore your private entries the next time you sync.

Follow these steps to recover from a lost password:



- 1 Press **Applications**  and select **Security** .
- 2 Select the **Password** box.

- 3 Select **Lost Password**.
- 4 Select **Yes**.


TIP If you want additional security for Palm Desktop files, you may want to purchase a third-party solution.

Entering owner information


You can use Owner Preferences to record information that you want to associate with your Treo smartphone, such as your name, company name, and home phone number. If you lock your smartphone (see [Locking your smartphone](#)), the Owner Preferences information appears on the screen that requests your password to unlock it, and you must also enter your password to change the Owner Preferences information.

- 1 Press **Applications**  and select **Prefs** .
- 2 Select **Owner**.
- 3 If you assigned a password with the Security application, select **Unlock**, enter your password, and then select **OK** to continue.

- 4 Enter the text that you want to appear in the Owner Preferences screen.
- 2 Select **Date & Time**.

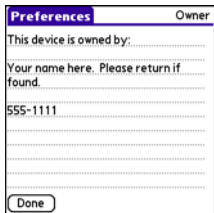

- 5 Select **Done**.

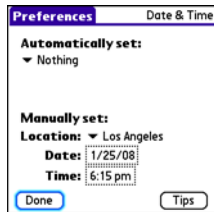

- 3 Select the **Automatically set** pick list and select one of the following settings:

NOTE The options that appear on the screen vary based on the setting you select in step 3.

System settings

Setting the date and time

By default, your smartphone synchronizes the date, time, and time zone with the network when your phone is on and you are inside a coverage area. Date & Time Preferences also enable you to manually set the date, time, and location (time zone) setting for your smartphone.

- 1 Press **Applications**  and select **Prefs** .

Nothing: No info is acquired from your wireless service provider network. You must set the date, time, and time zone yourself.

Date and time: The date and time are acquired from your wireless service provider network. You must set the time zone yourself.

Date, time, and time zone: The date, time, and time zone are acquired from

your wireless service provider network. You cannot change any of the settings.

- 4 If the **Location** pick list appears, select it, and then select a city in your time zone.



TIP Don't see a city in your time zone? Select **Edit List**, select **Add**, select a city in your time zone, and then select **OK**. If necessary, modify any of the settings in the **Edit Location** dialog box, and then select **OK**.

- 5 If the Date and Time fields appear, select the **Date** field and select the date, and then select the **Time** field and select the time.
- 6 Select **Done**.

TIP You can also set time zones for Calendar events. See [Creating an event](#).


Optimizing power settings

Power Preferences enable you to adjust settings to maximize your smartphone's battery performance.

- 1 Press **Applications**  and select **Prefs** .

- 2 Select **Power**.
- 3 Set any of the following preferences:

Brightness: Sets the intensity of the screen and keyboard backlights. Drag the slider or press **Left** ◀ and **Right** ▶ to adjust the brightness level.

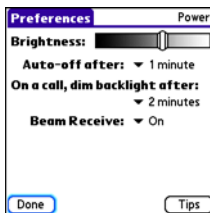

Auto-off after: Determines how long your screen stays on during a period of inactivity. When there is no interaction with the keyboard or screen for the specified time period, your smartphone turns off automatically.

On a call, dim backlight after: Determines how long the backlight stays on at normal intensity during a phone call. After the specified time period, the backlight dims to conserve power during a long phone call.

Beam Receive: Determines whether your Treo smartphone is ready to receive information over an infrared beam. If you leave this option turned off, you must return to this screen to turn on this option the next time you want to receive a beam.

4 Select **Done**.

TIP You can also access the brightness setting by pressing **Option + P**. To temporarily dim the screen's brightness, press **Option + Menu**.

Connection settings



Connecting to a virtual private network

If you want to use your Treo smartphone to access your corporate email account or other files on your corporate server, you may need to set up a virtual private network (VPN) on your smartphone. A VPN enables you to log in to your corporate

server through the company's firewall (security layer). You need a VPN client on your smartphone if your smartphone and your company's server are located on opposite sides of the firewall.

Check with your company's system administrator to see if a VPN is required to access the corporate server. If a VPN is necessary, you must purchase and install a third-party VPN client on your smartphone to use this feature.

TIP For information about third-party VPN client software, visit <http://go.palm.com/treo755p/>.

- 1 Install your third-party VPN client. See [Installing applications](#) for details.
- 2 Press **Applications**  and select **Prefs** .
- 3 Select **VPN**.
- 4 Enter the settings provided by your corporate system administrator.



CHAPTER

11

Common questions

Although we can't anticipate all the questions you might have, this chapter provides answers to some of the most commonly asked questions. For additional information and answers to other common questions, visit <http://go.palm.com/treo755p/>.

In this chapter

Upgrading	201
Desktop software installation	203
Resetting your smartphone	204
Replacing the battery	206
Screen	207
Synchronization	208
Phone	216
Hands-free devices	218
Email	220
Messaging	220
Web	220
Camera	223
Making room on your Treo™ smartphone	224
Third-party applications	225
Error messages	226

Upgrading

If you experience problems with your Palm® Treo™ 755P smartphone after performing the upgrade steps in [Upgrading from another Palm OS® device](#) of this guide, you may have incompatible applications or settings that were not quarantined during the installation process. These incompatible applications or settings can lead to numerous issues, including system resets and freezes. If you experience a problem after upgrading, follow the steps in this section to remove the incompatible apps from your smartphone and to transfer your other info to your smartphone.

NOTE If you have trouble installing a third-party application, contact the developer for assistance.

We recommend that you *do not* install apps that do any of the following:

- Modify phone functions, such as ringtones, dialing, or caller ID
- Replace organizer features, such as Contacts or Calendar

- Set data connection features, such as activating or ending data connections
- Provide web clipping features, such as PQA files
- Provide instant messaging features

If you want to continue using these types of applications, please contact the third-party developer for software updates and info about compatibility with your Treo 755P smartphone.

WINDOWS ONLY

Windows Vista users: Before inserting the Palm Software Installation CD, go to www.palm.com/windowsvista, where you'll find instructions and information about using your smartphone and desktop software with Windows Vista.

- 1 On your computer, click **Start>Programs>Palm>Safe HotSync**.
- 2 Follow the instructions on the screen.
- 3 Locate the **Old_Apps** folder on your computer. This folder is usually located inside one of the following folders:
 - C:\Program Files\Palm**
 - C:\Program Files\palmOne**
 - C:\Program Files\Handspring**

- 4 To help you identify the app that is causing the problem, move one app at a time from the **Old_Apps** folder to the **Backup** folder, and then sync.

If the problem recurs, delete the last app you installed and report the problem to its developer.

- 5 Repeat step 4 for each of the apps in the **Old_Apps** folder.

NOTE If you have trouble moving apps from the Old_Apps folder to the Backup folder, or determining which files to move, try reinstalling the app using the original third-party developer files.

TIP Need more info on the Backup folder? See [What is the backup folder?](#)

MAC ONLY

- 1 Locate your **user** folder on your computer.

NOTE Your user folder name is the same as your device name and is usually found in this location: **<Mac hard drive> : Users : <your Mac username> : Documents : Palm : Users**

- 2 Select your **user** folder and Option-drag it to your Mac desktop to make a copy of that folder.

- 3 Confirm that your copy includes the **Backup** subfolder and that all the files in the original Backup subfolder are also in the copy of the Backup subfolder.

- 4 Delete all files from the original **Backup** subfolder.

- 5 Perform a hard reset on your Treo 755P smartphone. See [Resetting your smartphone](#) for instructions.

- 6 Sync your new smartphone with your new desktop software and be sure to select your existing device name from the **User** list.

- 7 To help you identify the app that is causing the problem, move one third-party app from the copy of the **Backup** subfolder to the original **Backup** subfolder, and then sync.

If the problem recurs, delete the last app you installed and report the problem to its developer.

- 8 Repeat step 7 for each of the third-party apps in the copy of the **Backup** folder.

Desktop software installation

If you are having trouble installing the desktop software, you may have the wrong version of the software or some of your computer's resources may be unavailable.

Windows Vista users: Before inserting the Palm Software Installation CD, go to www.palm.com/windowsvista, where you'll find instructions and information about using your smartphone and desktop software with Windows Vista.

TIP The Palm Software Installation CD installs software that lets you synchronize using Palm® Desktop software (included) or Microsoft® Outlook® for Windows (sold separately). If you want to synchronize using a different personal information manager (PIM), you must install a third-party solution. Contact the PIM's vendor to learn if software is available for your smartphone.

Follow these steps to retry the installation:

- 1 Make sure your computer profile includes administrator rights to install software. In large organizations, these are usually granted by the system administrator.
- 2 Restart your computer.
- 3 Quit any active applications, including virus scanners and Internet security applications.
- 4 Make sure you're installing the software from the Palm Software Installation CD that came with your new smartphone. Other versions of the desktop software may not work with this Treo smartphone.
- 5 Insert the Palm Software Installation CD to restart the installation.

IMPORTANT Always use the same language for your Treo smartphone, your operating system, and your desktop software. Otherwise, you may lose information or have difficulty with synchronization. Support is not provided for mismatched language setups.

Resetting your smartphone

Performing a soft reset

A soft reset is similar to restarting a computer. If your smartphone is not responding or you have trouble synchronizing with your computer, a soft reset may help. All your info is retained when you perform a soft reset.

- 1 Remove the battery from your smartphone, and then reinsert it.

Don't know how? See [Replacing the battery](#).

NOTE The reset begins when you reinsert the battery.

- 2 At the end of the soft reset, Date & Time Preferences appears. Select **Done**.

Performing a system reset

A system reset, also called a safe or warm reset, tells your smartphone to stop what it's doing and start over again without

loading any system extras. If your smartphone loops or freezes during or after a soft reset, a system reset may help. Performing a system reset can release your smartphone from an endless loop so that you can uninstall a third-party application that may be causing the looping.

- 1 Remove the battery from your smartphone.
- 2 Press and hold **Up ▲** while reinserting the battery.

Don't know how? See [Replacing the battery](#).

- 3 When Date & Time Preferences appears, release **Up ▲**.
- 4 Delete the third-party application that you suspect is causing the problem.
- 5 Perform a soft reset. The wireless features of your smartphone are not available until you complete this step.





Performing a hard reset


A hard reset erases all information and third-party software on your Treo smartphone. Never perform a hard reset without first trying a soft reset and a system reset and trying to resolve

third-party software issues. (See [Third-party applications](#) for suggestions on diagnosing third-party software issues.) After performing a hard reset, you can restore previously synchronized information the next time you sync.

IMPORTANT If you set a password on your smartphone, performing a hard reset reformats your smartphone. This is a more severe form of a hard reset, which removes all your information, and restores your formats, preferences, and other settings to the factory default settings.


TIP Some third-party applications do not create a backup on your computer when you synchronize. If you perform a hard reset, you may lose data in these applications and you will need to reinstall the application after the hard reset. Please contact the application's developer to find out which data is backed up during synchronization.


- 1 Remove the battery from your device.
 - 2 Press and hold **Power/End**  while reinserting the battery. See [Replacing the battery](#).
 - 3 When the Access Powered logo appears, release **Power/End** .
 - 4 When the **Erase all data?** prompt appears, press **Up**  to confirm the hard reset.
- IMPORTANT** If a **Reformatting in progress** message appears, do not touch your smartphone until the process is complete. This may take up to 10 minutes.
- 5 When the language selection screen appears, select the same language you selected for your desktop software.
- IMPORTANT** Always use the same language for your Treo smartphone, your operating system, and your desktop software. Otherwise, you may lose information or have difficulty with synchronization. Support is not provided for mismatched language setups.
- 6 Follow the onscreen instructions to align the screen and set the date and time.
 - 7 (Optional) If you want to confirm that the hard reset was successful, press **Applications**  and select

HotSync  If you see your device name in the upper-right corner, the hard reset was *not* successful.

Replacing the battery


Your Treo 755P smartphone comes with a replaceable battery. Be sure to use a replacement battery that is recommended or sold by Palm and is compatible with the Treo 755P smartphone. Failure to use the proper battery may result in a risk of personal injury or product damage, and it voids your smartphone warranty.

- 1 Press **Power/End**  to turn off the screen.
- 2 Press the **battery door release**, and slide the **battery door** downward to remove it from your smartphone.

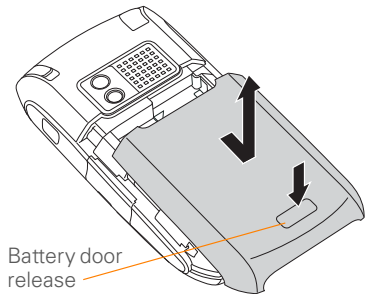

- 3 Place a finger in the notch next to the battery, and lift up the old battery at a 45-degree angle to remove it from the compartment.
- 4 Align the metal contacts on the new battery with the contacts inside the battery compartment.


Screen

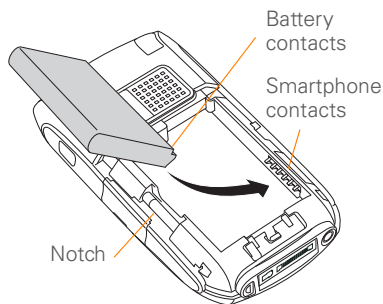

- 5 Insert the new battery into the compartment at a 45-degree angle, pressing it into place. Slide the **battery door** onto the back of the smartphone until it clicks into place.
- 6 Connect your smartphone to the charger or sync cable.
- 7 Wait for your Treo smartphone to turn on, and then enable the network time or set the date and time when prompted.

TIP Be sure to dispose of your old battery properly. In some areas, disposal in household or business trash is prohibited.





The screen appears blank

- 1 When a call lasts longer than the limit specified in Power Preferences, the screen dims automatically. In certain lighting conditions, the screen may appear blank when this occurs. Press any key except Power/End to restore the screen to normal brightness. Pressing Power/End hangs up the call.
- 2 When a period of inactivity lasts longer than the limit specified in Power Preferences, the screen turns off. Press and release **Power/End**  to wake up the screen.
- 3 Look closely at the screen. If you can see a dim image, try adjusting the screen brightness (see [Adjusting the brightness](#)).
- 4 If the screen is still blank, perform a soft reset (see [Performing a soft reset](#)).
- 5 If the problem persists, connect your smartphone to the charger (see [Charging the battery](#)) and perform a soft reset again.

- 6 If that doesn't work, perform a hard reset (see [Performing a hard reset](#)).



TIP To find carrying cases that protect the screen, and other useful accessories, visit <http://go.palm.com/treo755p/>.

The screen doesn't respond accurately to taps or it activates wrong features

- 1 Press **Applications**  and use the **5-way**  to select **Prefs** .
- 2 Use the **5-way**  to select **Touchscreen**.
- 3 Follow the onscreen instructions to align the screen.
- 4 Select **Done**.
- 5 If the problem persists, check for dirt between the screen and the edge of the smartphone.
- 6 If you're using a screen protector, make sure that it is properly installed.

There's a blinking bell in the upper-left corner

The blinking bell in the upper-left corner of the screen is the Alert screen symbol. It appears when you have alarms or messages that you haven't acknowledged.

- 1 Press and hold **Center**  or tap the blinking bell  with your stylus.
- 2 When the list of pending alerts appears, do either of the following:
 - Select the alert text to view the item and keep it in the list.
 - Check the box next to an alert to clear it from the list, and then select **Done**.

Synchronization

Synchronization backs up the information from your smartphone onto your computer and vice versa. If you ever need to perform a hard reset or otherwise need to erase all your information on your smartphone, you can synchronize your smartphone with your computer to restore the info. Similarly, if your computer crashes and your Palm Desktop info is damaged, you can

recover your info by synchronizing with your smartphone. To make sure you always have an up-to-date backup of your info, synchronize frequently.

This section describes synchronization between your Treo smartphone and a desktop computer running Palm Desktop software. You can also synchronize the information on your smartphone using third-party applications. See the separate documentation for the third-party application for information on features and configuration.

Before you attempt to synchronize, make sure you've installed the desktop synchronization software from the Palm Software Installation CD.

TIP Every device needs a unique name. Never synchronize more than one device to the same device name on your computer.

I can't find my user folder

WINDOWS ONLY If your device name is one word, your user folder name is the first six characters of your device name. If your device name is two words, your user folder

name consists of the first six characters of the second word of your device name followed by the first letter of the first word. For example, if your device name is John Smith, your user folder is named SmithJ. Your user folder is usually located inside one of the following folders:

**C:\Program Files\Palm\
C:\Program Files\palmOne\
C:\Program Files\Handspring**

MAC ONLY Your user folder name is the same as your device name and is usually found in this location: **Mac hard drive : Users : Your Mac username : Documents : Palm : Users.**

What is the backup folder?

The Backup folder is located inside your user folder (see [I can't find my user folder](#)). During synchronization, HotSync® manager puts a copy of most of your info and applications into the Backup folder. (Some third-party apps do not put a copy into the Backup folder.) The next time you sync, HotSync manager compares the contents of the Backup folder to the contents of your smartphone and then restores any missing info or applications.


If an app that you deleted reappears on your smartphone, try deleting the app from your Backup folder.

Palm Desktop does not respond to a sync attempt

- 1 Make sure that the USB sync cable is securely connected to the USB port on your computer and on the bottom of your smartphone (see [Synchronizing information—the basics](#)).

TIP If you're having trouble trying to sync using an IR or Bluetooth® connection, try using the USB sync cable instead. If this solves the problem, check your IR or Bluetooth settings (see [Synchronizing information—advanced](#)).


- 2 Make sure that HotSync manager is running:

Windows: Right-click **HotSync manager**  in the taskbar in the lower-right corner of your computer screen, and make sure that **Local USB** is checked. If you don't see the HotSync manager icon, click **Start**, select

Programs, select **Palm**, and then select **HotSync Manager**.

HotSync manager icon



Mac: Find the **Palm** folder on your Mac hard drive. Double-click **HotSync manager**  in the **Palm** folder. In the **Connection Settings** panel, set the **Local Setup port** to **Palm USB**.

- 3 Synchronize. If the synchronization is successful, you do not need to complete the remaining steps.
- 4 Perform a soft reset (see [Performing a soft reset](#)).
- 5 Synchronize. If the synchronization is successful, you do not need to complete the remaining steps.
- 6 If problems persist and you're synchronizing through a USB hub, try connecting the sync cable to a different USB port or directly to your computer's built-in USB port.

- 7 Reboot your computer.
- 8 Synchronize. If the synchronization is successful, you do not need to complete the remaining steps.

- 9 Do one of the following:

Windows: Uninstall Palm software. Click **Start**, select **Settings**, select **Control Panel**, select **Add or Remove Programs**, select **Palm Desktop software**, and then click **Change/Remove**.

Mac: Contact Technical Support if the problem persists after completing step 7. Mac computers do not provide an option for uninstalling Palm Desktop software.

- 10 Reboot your computer.
- 11 Reinstall Palm Desktop software from the Palm Software Installation CD that came with your smartphone.

Synchronization starts but stops without finishing

TIP The HotSync Log can give you information about your most recent synchronization.

Windows: Right-click the **HotSync manager** icon in the taskbar in the lower-right corner of your computer screen, and then select **View Log**.

Mac: Open Palm Desktop software. From the **HotSync** menu, select **View Log**.

If you upgraded from a previous Palm OS® device or received a system error, such as Sys0505, there may be conflicts with software on your smartphone.

- 1 Locate your **Backup** subfolder and rename the folder (for example, BackupOld). Note that “Palm” in the following locations might be “Handspring” or “palmOne,” based on the device you’re upgrading from:

Windows:

C:\Program Files\Palm*device name*

Mac:

Mac HD\Applications\Palm\Users*device name*

- 2 Synchronize.
- 3 If the problem is resolved, begin reinstalling your third-party applications one at a time by double-clicking a single file in the original **Backup** subfolder that you renamed, and sync after each application you install. If the problem recurs, delete the last application you installed and report the problem to its developer.
- 4 Do one of the following:
Windows: If the Windows New Hardware Wizard appears, the synchronization process may be timing out before the wizard completes its job. Follow all instructions in the New Hardware Wizard, and then sync again.
Mac: Contact Technical Support if the problem persists after completing step 3. Mac computers do not provide an option for uninstalling Palm Desktop software.
- 5 (Windows only) Uninstall Palm Desktop software. Click **Start**, select **Settings**, select **Control Panel**, select **Add or Remove Programs**, select

Palm Desktop software, and then click **Change/Remove**.

- 6 Reboot your computer.
- 7 Reinstall Palm Desktop software from the Palm Software Installation CD that came with your smartphone.

Synchronization finishes but info doesn't appear where it should

- 1 Make sure you're synchronizing with the intended desktop personal information manager (PIM). The Palm Software Installation CD enables you to choose to synchronize with Palm Desktop software (included) or Microsoft Outlook for Windows (sold separately). Reinsert the installation CD and select **Change your synchronization method** if necessary. If you use a different PIM, you need to install third-party software to synchronize. For more info, consult the company that makes the PIM.
- 2 If multiple Palm OS devices are synchronizing with your computer, make sure you are synchronizing with the correct device name. If info is not appearing in Palm Desktop software,

make sure the correct device name is selected in the **User** list on the toolbar of Palm Desktop software.


- 3 Open **HotSync manager** on your computer, and make sure the necessary conduits are set to **Synchronize the files**.
- 4 Do one of the following:
 - Windows:** Uninstall Palm Desktop software. Click **Start**, select **Settings**, select **Control Panel**, select **Add or Remove Programs**, select **Palm Desktop software**, and then click **Change/Remove**.
 - Mac:** Contact Technical Support if the problem persists after completing step 3. Mac computers do not provide an option for uninstalling Palm Desktop software.
- 5 Reboot your computer.
- 6 Reinstall Palm Desktop software from the Palm Software Installation CD that came with your smartphone.
- 7 (Outlook only) If you're trying to synchronize offline, set your Outlook Calendar, Contacts, Notes, and Tasks to be available offline.

TIP Outlook subfolders and public folders are not accessible with the included software. You may want to use a third-party solution instead.

TIP (Outlook only) If you want to sync your info with a global Exchange Address Book, you must copy the addresses to your local Contacts list in Outlook (right-click the addresses and select **Add to Personal Address Book**).

TIP For more info on Outlook conduits, right-click the **HotSync manager** icon in the taskbar, select **Custom**, select an app with Outlook in its name, and then select **Help**.

I have duplicate entries in Microsoft Outlook after I sync


- 1 Open Microsoft Outlook (sold separately) and delete the duplicate entries.
- 2 On your computer, go to the Outlook application with duplicate entries and manually enter any info you added to your smartphone since the last time you synchronized.
- 3 Right-click **HotSync manager**  in the taskbar, and select **Custom**.

- 4 Select the application that has duplicate entries and also has **Outlook** in its name, such as Outlook contacts.
- 5 Click **Change**.
- 6 Select **Desktop overwrites handheld**, and then click **OK**.
- 7 If more than one Outlook application has duplicate entries, repeat steps 4 through 6 for each application with duplicates.
- 8 Click **Done**.
- 9 Synchronize your smartphone and your computer.

My appointments show up in the wrong time slot after I sync

If you create an appointment in the wrong time zone (that is, your desktop was set to the wrong time zone), it shows up in the wrong time zone on your smartphone. To be safe, enable local network time and avoid assigning time zones to your appointments.



If you're using Microsoft Outlook (sold separately):


- 1 Make sure that you installed the Microsoft Outlook conduit that came with your Treo 755[®] smartphone. If you're not sure whether this software is installed, reinstall Palm Desktop software from the Palm Software Installation CD that came with your smartphone.
- 2 Open Microsoft Outlook and correct the wrong entries.
- 3 On your computer, manually enter any Calendar info you added to your smartphone since the last time you synchronized.
- 4 Click **HotSync manager**  in the taskbar and select **Custom**.
- 5 Select an application that has both **Calendar** and **Outlook** in its name.
- 6 Click **Change**.
- 7 Select **Desktop overwrites handheld**, and then click **OK**.
- 8 Synchronize your smartphone and your computer.

- 9 Repeat steps 4 through 6 to open the **Calendar Change HotSync Action** dialog box.
- 10 Select **Synchronize the files**, and then click **OK**.

You should now be able to assign time zones to your events without encountering this problem.

If you're using Palm Desktop software:

- 1 On your smartphone, press **Calendar** .
- 2 Press **Menu** .
- 3 Select **Options**, and then select **Preferences**.
- 4 Uncheck the **New events use time zones box** (if it's checked).
- 5 On your computer, open Palm Desktop software and correct the wrong entries.
- 6 On your computer, manually enter any Calendar info you added to your smartphone since the last time you synchronized.

- 7 Click **HotSync manager**  in the taskbar and select **Custom**.
- 8 Select **Calendar**.
- 9 Click **Change**.
- 10 Select **Desktop overwrites handheld**, and then click **OK**.
- 11 Synchronize your smartphone and your computer.
- 12 Repeat steps 7 through 9 to open the **Calendar Change HotSync Action** dialog box.
- 13 Select **Synchronize the files**, and then click **OK**.


You should now be able to assign time zones to your events without encountering this problem.

IMPORTANT To avoid this problem in the future, do not assign time zones to your events. Palm Desktop software does not support time zones.

Phone

Signal strength is weak

Become familiar with low coverage areas where you live, commute, work, and play. Then you will know when to expect signal strength issues. You can check signal strength by looking at the **signal-strength**

 icon in the title bar of the Phone application's Main View. The stronger the signal, the more bars that appear. If you are outside a coverage area, no bars appear.

- 1 If you're standing, move about ten feet in any direction.
- 2 If you're in a building, move near a window. Open any metal blinds.
- 3 If you're in a building, move outdoors or to a more open area.
- 4 If you're outdoors, move away from large buildings, trees, or electrical wires.
- 5 If you're in a vehicle, move your Treo smartphone so that it's level with a window of your vehicle.

My smartphone won't connect to the mobile network

- 1 Contact your wireless service provider to confirm that you have an active data plan.
- 2 Try the suggestions about signal strength described in [Signal strength is weak](#).
- 3 Turn off your phone and turn it on again (see [Turning your phone on and off](#)).
- 4 Perform a soft reset (see [Performing a soft reset](#)).

The other person hears an echo


- Try decreasing the volume on your Treo smartphone to avoid coupling or feedback on the other person's end. This applies to both the speakerphone and the earpiece.
- Position the earpiece closer to your ear to prevent sound leaking back to the microphone. Keep your hand away from the microphone hole, which is on the bottom right side of the smartphone.
- If you're using the speakerphone feature with your smartphone lying on a

flat surface, try turning the smartphone face down (screen facing the surface).

I hear my own voice echo

Ask the person on the other end of the call to turn down the volume on his or her phone or to hold the phone closer to his or her ear.

My voice is too quiet on the other end

- Be sure to place the bottom of the Treo smartphone, or the hands-free microphone, close to your mouth.
- Check the **signal-strength**  icon in the title bar of the Phone application's Main View. If the signal is weak (few bars are displayed), try the suggestions about signal strength described in [Signal strength is weak](#).

I hear static or interference

Check the **signal-strength**  icon in the title bar of the Phone application's Main View. If the signal is weak (few bars are displayed), try the suggestions about signal strength described in [Signal strength is weak](#).

If you're using a Bluetooth hands-free device, try the following:

- Move your smartphone closer to the hands-free device. Audio quality degrades as the distance between your smartphone and hands-free device increases. The effective range for a device varies between manufacturers.
- Confirm that no obstructions, including your body, are between the smartphone and your hands-free device.

TIP For best performance, keep your Bluetooth headset and phone on the same side of your body.


My smartphone hangs up when I hold it to my ear

You may be accidentally pressing the onscreen Hang Up All button with your cheek. Try holding the smartphone so that your face doesn't press against the screen. If this is not convenient, you may want to disable the screen's touch-sensitive feature during active calls (see [Locking your screen](#)).

My phone seems to turn off by itself

If a system error and reset occur, the Treo smartphone automatically turns the phone on if it was on before the reset. However, if the smartphone can't determine if your phone was on before the reset, the phone does not automatically turn on (see [Turning your phone on and off](#)). If the problem persists and you're using third-party applications, see [Third-party applications](#) for additional suggestions.


My smartphone makes or answers calls when it's in a bag or pocket

Items in your bag or pocket may be pressing the onscreen Answer button or otherwise activating screen items. If this happens, be sure to press **Power/End**  to turn off the screen before placing your smartphone in a bag or pocket. You may also want to disable the screen's touch-sensitive feature during incoming calls (see [Locking your screen](#)).

TIP To find carrying cases that can help prevent your smartphone from making calls, as well as other useful accessories, visit <http://go.palm.com/treo755p/>.

The voicemail icon stays on the screen after I listen to my messages

If the voicemail icon stays in the title bar after you listen to your messages, you can manually clear the voicemail icon.



- 1 In the Phone application, press **Menu** .
- 2 Select **Options** and then select **Phone Preferences**.
- 3 Select **Clear Voicemail Icon**.

Hands-free devices

TIP Bluetooth range is up to 30 feet/10 meters in optimum environmental conditions. Performance and range may be affected by physical obstacles, radio interference from nearby electronic equipment, and other factors.

I can't make or receive calls using a Bluetooth hands-free device

Confirm all the following:

- The Bluetooth device is compatible with your smartphone. Go to <http://go.palm.com/treo755p/> for a list of compatible devices.
- The Bluetooth setting is on when you press **Applications**  and select **Bluetooth** .
- You have already formed a partnership between your smartphone and your hands-free device, and the hands-free device appears in the Trusted Devices list (see [Connecting to a Bluetooth hands-free device](#)).
- Your hands-free device is charged and turned on.
- Your Treo smartphone is within range of the hands-free device.

If the problem persists, turn the **Bluetooth** setting **Off** and then turn it **On** again. If it still persists, create a new partnership with the hands-free device (see [Connecting to a Bluetooth hands-free device](#)).

I hear static or interference when using my Bluetooth hands-free device

- Try moving your Treo smartphone closer to the hands-free device. Audio quality degrades as the distance between your smartphone and hands-free device increases. The effective range for a device varies between manufacturers.
- Confirm that no obstructions, including your body, are between the smartphone and your hands-free device.
- If the problem persists, turn the **Bluetooth** setting **Off** and then turn it back **On** again. If it still persists, create a new partnership with the hands-free device (see [Connecting to a Bluetooth hands-free device](#)).

TIP For best performance, keep your Bluetooth headset and phone on the same side of your body.

Some features of my Bluetooth hands-free device don't work with my smartphone

- Check the Palm compatibility list at <http://go.palm.com/treo755p/> to ensure that your device is compatible.

- Check the documentation that came with your device or the manufacturer's website for information specific to your device.

Email

For troubleshooting info on the VersaMail® application, see the *User Guide for the VersaMail® Application* at <http://go.palm.com/treo755p/>.

Messaging

I can't send or receive text messages

- Make sure your phone is turned on (see [Turning your phone on and off](#)).
- Contact your wireless service provider to verify that your plan includes text messaging services, that these services have been correctly activated, and that they are available at your location. Your wireless service provider should be able to tell you if messaging services have been experiencing transmission delays.

Delays can occur also between the time that a message is sent and the time it is received.

- Verify with the recipient that the receiving device can handle text messages.
- If a text message arrives but does not display an alert, perform a soft reset (see [Performing a soft reset](#)).

Web







I can't tell if data services are available


When your phone is on, icons appear in the title bar in the Phone application's Main View to indicate whether data services are available and whether a data connection is active. See [What are all those icons?](#) for descriptions of the icons that indicate that data services are available.

TIP If your phone is on and you do not see any of the data icons, data services are not available in your current location.


My smartphone won't connect to the Internet

Your Treo 755P smartphone supports the 1xRTT and EVDO wireless data networks. To connect to the Internet, you must subscribe to and activate data services with your wireless service provider, and you must be in a location with data coverage.

- 1 Press and hold **Power/End**  to turn off your phone. Then press and hold the same button to turn it back on again.
- 2 Press **Phone**  and look for either the **1xRTT**  or **EVDO**  icon in the title bar of the Phone application's Main View.
- 3 If you see one of these icons, you are in a data coverage area. Try connecting to the Internet again. If you do not see either of these icons, press **Applications** , select **Prefs** , and continue with the following steps.
- 4 Select **Network**.
- 5 Select the **Services** pick list and select **EVDO**.
- 6 Select **Connect**.

- 7 If the connection is successful, go to the web browser. If you still can't make a connection, perform a soft reset (see [Performing a soft reset](#)).
- 8 If your phone did not turn on automatically, press and hold **Power/End**  to turn on your phone, and try connecting to the Internet.
- 9 Contact your wireless service provider to verify the following:
 - Your subscription plan includes high-speed data services.
 - Data services have been activated on your account.
 - Data coverage is available in your location.
 - There are no data service outages in your location.

I can't access a web page

First, make sure you have Internet access: Open the web browser and try to view another web page you've loaded before. To ensure you're viewing the page directly from the Internet, press **Menu** , select **Go**, and then select **Refresh**.







If you can view the other web page after you refresh it but you still can't access the page you were originally trying to view, the page may contain elements that are not supported by the web browser. These include Flash, Shockwave, VBScript, WMLScript, and other plug-ins.

Some websites use a redirector to their true home page. If the web browser on your smartphone can't follow the redirector, try using a desktop browser to see the landing page of the redirector, and then enter that address in the web browser on your smartphone.

TIP Your Treo smartphone can open your email application when you select an email address on a web page. If nothing happens when you select the link, make sure your email application is already set up.

It takes a long time for a web page to load

If it is taking longer than usual to load web pages, you may have traveled from an EVDO service area to a 1xRTT service area. Although 1xRTT data service is considered a high-speed data service, it seems slow if you are used to EVDO speed.

- 1 Press **Phone**  and look for either the **1xRTT**  or **EVDO**  icon in the title bar of the Phone application's Main View.
- 2 If you see the **EVDO**  icon, there may be a problem with the website you are trying to access. Try opening a different web page to see if the problem persists.
- 3 If you see the **1xRTT**  icon, you may be experiencing the difference in performance between the two types of data networks.
- 4 To be sure there is not a problem with your connection to your wireless service provider's network, press and hold **Power/End**  to turn off your phone. Then press and hold the same button to turn it back on again.
- 5 Try opening the web page again to see if it loads faster.

An image or map is too small on my screen

The web browser has two modes: Optimized and Wide Page. Optimized Mode resizes all images and page elements to fit in a single column on the

smartphone screen. Switch to Wide Page Mode to see the full-size image (see [Viewing a web page](#)).

You may also be able to save the image on your smartphone or on an expansion card and then view the image later on your computer.

A secure site refuses to permit a transaction

Some websites don't support certain browsers for transactions. Please contact the site's webmaster to make sure the site allows transactions using your smartphone's Blazer® web browser.

Camera

Here are some tips for taking good pictures with the built-in camera:

- Clean the camera's lens with a soft, lint-free cloth.
- Take pictures in bright lighting conditions. Low-light images may be grainy, due to the sensitivity of the camera.

- Hold the smartphone as still as possible. Try supporting your picture-taking arm against your body or a stationary object (such as a wall).
- Keep the subject of the picture still. Exposure time is longer with lower light levels, so you may see a blur.
- For best results, verify that you have the brightest light source coming from behind you, lighting the subject's face. Avoid taking indoor pictures with the subject in front of a window or light.
- Make sure the subject is at least 18 inches away from the camera to ensure good focus.

When you synchronize your smartphone with your computer, your camera images are stored on your hard drive (see [Viewing pictures and videos on your computer](#)).

Making room on your Treo™ smartphone

Keep in mind that your smartphone includes an expansion card slot, and that you can store applications and information on expansion cards (sold separately). However, you still need free memory on the smartphone itself to run applications from an expansion card. For more info on using expansion cards, see [Using expansion cards](#).

If you store a large number of records or install many third-party applications, the internal memory on your smartphone may fill up. Here are some common ways to clear space:

- **Email:** Messages that have large attachments can quickly consume memory on your smartphone. Delete messages with large attachments. If you have hundreds of messages with or without attachments, you may want to delete older messages to make room (see the *User Guide for the VersaMail®*

Application at
<http://go.palm.com/treo755p/>.

- **Pics&Videos:** Large images take up a lot of memory. Move images to an expansion card or synchronize them to your computer, and then delete the images from your smartphone (see [Viewing pictures and videos on your computer](#) and [Deleting a picture or video](#)).
- **Music:** Music files often consume excessive memory. Move music files to an expansion card, or delete large files from your smartphone (see [Transferring MP3 files from your computer](#)).
- **Internet:** If you set a large web browser cache, you may want to use the web browser's advanced Memory Management settings to clear all recent pages (see [Customizing your web browser settings](#)).
- **Third-party applications:** You can delete infrequently used applications (see [Removing applications](#)) or move them to an expansion card (see [Copying applications between an expansion card and your smartphone](#)).

Third-party applications

Some third-party applications can cause conflicts on your smartphone. For example, third-party applications that were not written with the Treo smartphone keyboard and 5-way navigator in mind may cause errors or strange behavior when you use the keyboard and 5-way navigator in these applications. Third-party applications that modify wireless features may require extra troubleshooting.

If you recently installed an application and your device seems to be stuck, try the following:

- 1 Perform a soft reset (see [Performing a soft reset](#)).
- 2 If the problem persists, perform a system reset (see [Performing a system reset](#)).
- 3 Delete the most recently installed application from your smartphone (see [Removing applications](#)).
- 4 If the problem persists, perform another system reset.
- 5 If possible, synchronize your smartphone with your computer to back up your most recent info.
- 6 If you're unable to perform the preceding steps or the problem persists, locate your **Backup** subfolder on your computer and rename the folder (for example, BackupOld). Note that "Palm" in the following locations might be "Handspring" or "palmOne," based on the device you're upgrading from:
 - WINDOWS ONLY** C:\Program Files\Palm\device name
 - MAC ONLY** Mac HD\Applications\Palm\Users\device name
- 7 Perform a hard reset (see [Performing a hard reset](#)).
- 8 Sync to restore your Calendar, Contacts, Tasks, Memos, and Pics&Videos info.

- 9 Do one of the following:
- If the problem is resolved, begin reinstalling your third-party applications one at a time by double-clicking a single file in the original **Backup** subfolder that you renamed, and sync after each application you install.
 - If the problem recurs, delete the last application you installed and report the problem to its developer.

Getting more help



Contact the author or vendor of the third-party software if you require further assistance.

Error messages

Your Treo smartphone is designed to minimize interruptions when a system error occurs. If your smartphone

encounters a system error, it automatically resets itself and resumes functioning as normal. If possible, it even turns the phone back on if it was on before the error occurred.

Sometimes you might want to know more about an error. Your Treo smartphone uses a special interface to show error messages in greater detail.

- 1 Press **Phone** .
- 2 Enter **###377**, and then press **Send** .
- 3 Review the screen with details about the conditions that led up to the most recent automatic reset.
- 4 Select **OK**.


Note that third-party developers create their own error messages. If you do not understand an error message, please contact the developer of the application for help.

Terms

1xRTT (single carrier [1x] radio transmission technology)

A wireless technology that provides fast data transfer and Internet access with average speeds of 60 to 80Kbps and bursts of up to 144Kbps.

Alt (alternative)

A keyboard key. Enter a letter on the keyboard, and then press Alt  to access variations such as international characters and symbols.

Applications

The screen on your Palm® Treo™ 755P smartphone from which you can open all applications.

Auto-off interval

The time of inactivity that passes before the screen on your smartphone turns off. The wireless features on your smartphone are unaffected by this setting.

Beam

The process of sending or receiving an entry or application using the infrared port on your Treo smartphone.

Bluetooth® wireless technology

Technology that enables devices such as smartphones, mobile phones, and computers to connect wirelessly to each other so that they can exchange information over short distances.

Device name

The name associated with your Treo 755P smartphone that distinguishes it from other Palm OS® devices. When you first synchronize your smartphone, you are asked to give it a device name. This name appears in the User list in Palm® Desktop software.

Dialog box

A set of options and command buttons that is enclosed by a border and that enables you to carry out a specific task.

EVDO (Evolution Data Optimized)

A wireless broadband technology that is designed for very high speed data transfer with average download speeds of 400 to 700Kbps. It is capable of reaching download speeds of up to 1.8Mbps and upload speeds of up to 156Kbps.

Favorite

A button that provides quick access to a phone number (speed dial) or commonly used application (such as Contacts, Web, or Messaging). You can define up to 70 favorite buttons in the Phone application.

HotSync® manager

The computer application that manages the synchronization of your Treo smartphone with your computer.

HotSync technology

The technology that synchronizes your smartphone and your computer with the simple press of a button.

Infrared (IR)

A way of transmitting information using light waves. The IR port on your smartphone enables you to transfer

information to other IR devices within a short radius.

Lithium ion (Li-ion)

The rechargeable battery technology used in Treo smartphones.

Option key

The keyboard button that enables you to access the alternative feature that appears above the letter on each key.

Palm® Desktop software

A PIM application for computers that helps you manage your personal information and keep your personal information synchronized with your Treo smartphone.

Palm OS® software

The operating system of your Treo 755p smartphone, which is known for its simplicity of use and for the large number of compatible third-party applications that can be added to your Treo 755p smartphone.

Palm® Quick Install

The component on your Windows computer that enables you to install Palm OS applications and other information on your Treo smartphone.

Partnership

Two Bluetooth devices—for example, your smartphone and a hands-free device—that can connect because each device finds the same passkey on the other device. Once you form a partnership with a device, you don't need to enter a passkey to connect with that device. Partnership is also known as paired relationship, pairing, trusted device, and trusted pair on some devices.

Phone

The application on your Treo smartphone that enables you to make and receive phone calls.

PIM (personal information manager)

A genre of software that includes applications such as Palm Desktop software, Microsoft® Outlook®, Lotus Notes, ACT!, and the Palm OS organizer applications on your smartphone. PIMs

generally store contacts, schedules, tasks, and memos.

SMS (Short Messaging Service)

The service that exchanges short text messages almost instantly. Text messages are typically exchanged between mobile phones. These messages can usually include up to 160 characters; messages with more than 160 characters are automatically split into several messages. Treo smartphones can send and receive SMS messages while you are on a voice call.

Streaming

Technology that enables you to access media content—for example, watch a video or listen to an audio program—directly from the Internet on your smartphone without needing to download a file to save on your smartphone.

User folder

The folder on your computer that contains the information you enter in Palm Desktop software and the information you enter on your smartphone and synchronize with Palm Desktop software.

Important safety and legal information

FCC Notice

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Antenna Care/Unauthorized Modifications

Use only the supplied integral antenna. Unauthorized antenna modifications or attachments could damage the unit and may violate FCC regulations. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC RF Safety Statement

In order to comply with FCC RF exposure safety guidelines, users MUST use one of the following types of bodyworn accessories.

- A Palm™ brand body-worn accessory that has been tested for SAR compliance and is intended for use with this product.

- An accessory that contains NO metal (snaps, clips, etc.) and provides AT LEAST 1.5 cm of separation between the users body and the unit.

Do NOT use the device in a manner such that it is in direct contact with the body (i.e., on the lap or in a breast pocket). Such use will likely exceed FCC RF safety exposure limits See www.fcc.gov/et/rtafety/ for more information on RF exposure safety.

The highest reported (FCC) SAR values of the Palm® Treo™ 755e smartphone, by Palm are:

Maximum SAR Values	Cellular	PCS
Held to Ear	1.07 (W/1Kg)	1.46 (W/1Kg)
Body - Worn	0.89 (W/1Kg)	0.33 (W/1Kg)

FCC Radiofrequency Emission

This smartphone meets the FCC Radiofrequency Emission Guidelines and is certified with the FCC as:
FCC ID number: O8F-895.

More information on the smartphone's SAR can be found from the following FCC Website:
<https://gulfoss2.fcc.gov/prod/otct/feas/reports/GenericSearch.cfm>.

FCC Hearing Aid Compatibility Your Treo smartphone is compliant with the FCC Hearing Aid Compatibility (HAC) requirements. For additional HAC information, including the HAC rating of this product, please refer to www.palm.com/treoHAC.

Static Electricity, ESD, and Your Palm® Device

Electrostatic discharge (ESD) can cause damage to electronic devices if discharged into the device, so you should take steps to avoid such an occurrence.

Description of ESD Static electricity is an electrical charge caused by the buildup of excess electrons on the surface of a material. To most people, static electricity and ESD are nothing more than annoyances. For example, after walking over a carpet while scuffing

your feet, building up electrons on your body, you may get a shock—the discharge event—when you touch a metal doorknob. This little shock discharges the built-up static electricity.

ESD-susceptible equipment Even a small amount of ESD can harm circuitry, so when working with electronic devices, take measures to help protect your electronic devices, including your Palm® device, from ESD harm. While Palm has built protections against ESD into its products, ESD unfortunately exists and, unless neutralized, could build up to levels that could harm your equipment. Any electronic device that contains an external entry point for plugging in anything from cables to docking stations is susceptible to entry of ESD. Devices that you carry with you, such as your smartphone, build up ESD in a unique way because the static electricity that may have built up on your body is automatically passed to the device. Then, when the device is connected to another device such as a docking station, a discharge event can occur.

Precautions against ESD Make sure to discharge any built-up static electricity from yourself and your electronic devices *before* touching an electronic device or connecting one device to another. The recommendation from Palm is that you take this precaution before connecting your device to your computer, placing the device in a cradle, or connecting it to any other device. You can do this in many ways, including the following:

- Ground yourself when you're holding your mobile device by simultaneously touching a metal surface that is at earth ground. For example, if your computer has a metal case and is plugged into a standard three-prong grounded outlet, touching the case should discharge the ESD on your body.
- Increase the relative humidity of your environment.
- Install ESD-specific prevention items, such as grounding mats.

Conditions that enhance ESD occurrences Conditions that can contribute to the buildup of static electricity in the environment include the following:

- Low relative humidity.
- Material type. (The type of material gathering the charge. For example, synthetics are more prone to static buildup than natural fibers like cotton.)

- The rapidity with which you touch, connect, or disconnect electronic devices.

While you should always take appropriate precautions to discharge static electricity, if you are in an environment where you notice ESD events, you may want to take extra precautions to protect your electronic equipment against ESD.

Battery safety information

- Do not disassemble or open, crush, bend or deform, puncture or shred.
- Do not modify or remanufacture, attempt to insert foreign objects into the battery, immerse or expose to water or other liquids, expose to fire, explosion or other hazard.
- Only use the battery for the system for which it is specified.
- Only use the battery with a charging system that has been qualified with the system per this standard. Use of an unqualified battery or charger may present a risk of fire, explosion, leakage, or other hazard.
- Do not short circuit a battery or allow metallic conductive objects to contact battery terminals.
- Replace the battery only with another battery that has been qualified with the system per this standard, IEEE-Std-1725-200x. Use of an unqualified battery may present a risk of fire, explosion, leakage or other hazard.
- Promptly dispose of used batteries in accordance with local regulations.
- Battery usage by children should be supervised.
- Avoid dropping the phone or battery. If the phone or battery is dropped, especially on a hard surface, and the user suspects damage, take it to a service center for inspection.
- Improper battery use may result in a fire, explosion or other hazard.

Precaution against hearing loss

Protect your hearing. Listening to this device at full volume for a long period of time can damage your hearing.

A pleine puissance, l'écoute prolongée du baladeur peut endommager l'oreille de l'utilisateur. Consultez notre site web www.palm.com/fr pour plus d'informations.



Précautions d'usage de votre téléphone mobile

Le taux de DAS(1) (Débit d'Absorption Spécifique) de votre Treo 755® smartphone est 0,896 w/kg

Conseils d'utilisation pour réduire le niveau d'exposition aux rayonnements: Utiliser le plus souvent possible les kits piétons (oreillettes), notamment en cas d'usage fréquent ou prolongé du téléphone mobile. Ils apportent en outre un plus grand confort d'utilisation.

Eloigner le téléphone mobile de certaines zones sensibles telles que le ventre chez les femmes enceintes ou le bas-ventre chez les adolescents, plus particulièrement lors d'une communication.

Utiliser votre téléphone mobile dans de bonnes conditions de réception. Celle-ci est indiquée sur l'écran de votre téléphone par la

matérialisation de barrettes. 3 ou 4 barrettes, la réception est de bonne qualité pour passer vos communications. Ce n'est pas toujours le cas dans certaines zones ou situations, notamment les parking souterrains, les ascenseurs, en train ou en voiture ou tout simplement dans un secteur mal couvert par le réseau.


Mesures touchant à la sécurité: Dans certains lieux ou situations, tels que les avions, les hôpitaux, les stations-service et les garages professionnels, l'usage du téléphone est interdit. Il est donc impératif de respecter strictement les consignes de sécurité propres à chacune de ces situations et d'éteindre votre téléphone lorsque cela est requis.

Par ailleurs pour éviter les risques d'interférences, les personnes porteuses d'implants électroniques (stimulateurs cardiaques, pompes à insuline, neurostimulateurs...) doivent conserver une distance de 15 cm entre le mobile et l'implant et ne l'utiliser que du côté opposé au côté où celui-ci est situé.

Téléphoner en conduisant, même avec des équipements qui ne sont pas interdits par la réglementation, est dangereux car il augmente potentiellement le risque d'accident provenant de la distraction créée par la conversation elle-même. Aussi, est-il recommandé de ne jamais téléphoner en conduisant et de considérer que l'utilisation d'un kit mains-libres n'est pas une solution.

(1) Valeur DAS la plus élevée pour ce modèle de téléphone et pour une utilisation à l'oreille, communiquée par le constructeur. Le DAS, exprimé en w/kg, quantifie le niveau d'exposition aux ondes électromagnétiques et permet de vérifier la conformité des mobiles à la réglementation française et européenne qui impose que celui-ci soit inférieur à 2w/kg.

Specifications

Radio	<ul style="list-style-type: none">• CDMA 800MHz (digital cellular), 1900MHz (PCS), and 1400MHz (GPS)• EVDO and 1xRTT
Phone features	<ul style="list-style-type: none">• Speakerphone• Hands-free headset jack (2.5mm, 3- or 4-barrel connector)• Microphone mute option• TTY/TDD compatible• 3-way calling
Processor technology	Intel XScale® processor, 312MHz
Expansion	miniSD card slot
Battery	<ul style="list-style-type: none">• Rechargeable lithium ion• Removable for replacement • 3.5 hours full charge time
Palm OS® version	Palm OS 5.4.9
Camera	<ul style="list-style-type: none">• Still-image capture resolution (1280 x 1024), 1.3 megapixel• 2x digital zoom• Video capture resolution (352 x 288)• Automatic light balance

Size	4.4 in. x 2.28 in. x 0.89 in./112mm x 58mm x 22.5mm with antenna
Weight	5.6 ounces (160 grams)
Connectivity	<ul style="list-style-type: none"> • IR • Bluetooth® wireless technology (1.2 compliant)
Display	<ul style="list-style-type: none"> • Touch-sensitive LCD screen (includes stylus) • 65,536 colors (16-bit color) • User-adjustable brightness
Keyboard	<ul style="list-style-type: none"> • Built-in QWERTY keyboard plus 5-way navigator • Backlight for low lighting conditions
Included software	<ul style="list-style-type: none"> • Phone (including Palm OS® Favorites, Dial Pad) • My Treo® software • Pics&Videos (includes camera and camcorder) • Messaging (text) • Web browser (Internet) • Pocket Tunes™ • Calendar • Contacts • Memos • Tasks • Voice Memo • Documents To Go® • Calculator Basic and Advanced • World Clock • Palm® Desktop software and HotSync® manager

System requirements	<ul style="list-style-type: none">• Windows 2000 or XP with USB port• Mac OS 10.2–10.3 with USB port• Later versions may also be supported
Operating and storage temperature range	<ul style="list-style-type: none">• 32°F to 104°F/0°C to 40°C• 5% to 90% relative humidity (RH)

Index

SYMBOLS

! in Tasks list 145

NUMERIC

1XRTT

connections 222

1xRTT (single carrier) radio
transmission technology
227

1XRTT connections
troubleshooting 221

1xRTT technology 69, 222

24-hour clock 185

3G2 files 118, 122

3GP files 118

5-way navigator 7, 25, 26,
190

A

AC charger 10

accented characters 31, 32

Access Powered devices 3,
166, 212

accessing

Alert screen 157

alternate character list 32

alternate characters 31

application menus 28

applications 34, 48

calculator 158

Call Log 42

command buttons 27

Compose dialog box 88

corporate servers 198

Dial Pad 39, 47, 60

email 75, 78–88, 198

Favorites pages 41

files 149, 198

HotSync manager 172

information 192

items on expansion cards
177

items on pick lists 29

Palm online support 3

Pocket Tunes 127

Quick Tour 2

secure websites 97, 223

web browser 33, 97

web pages 97, 99, 221

World Clock 142

Account Setup command 77

accounts

See also email accounts

conference calls and 50

corporate mail servers and
198

forwarding calls and 51

getting support for 3

setting preferences for 84
voicemail and 44

Accounts command 84

Acrobat file formats 149

activating

items on screen 27

smartphone device 14

Active Call View screen 48,
49

active calls. *See* phone calls

ActiveSync 174

Add Bookmark command 99

Add Call button 47, 49

Add Contact command 48

Add Favorites dialog box 53

Add New Number prompt 48

Add Song button 128

Add to album command 120

adding

additional security 195

attachments 79–80

Bluetooth devices 57–58,
107

bookmarks 99

business cards 133

- caller ID photos 65, 131
- captions to photos 114, 121
- categories for applications 187
- cities to World Clock 142
- contacts 131
- email addresses 78
- emoticons 89
- events 135, 136
- expansion cards 175
- favorite buttons 52–54
- hands-free devices 59
- memos 151
- multiple recipients 54, 88
- partnerships 58, 106
- passwords 193, 194
- phone numbers 48
- pictures to albums 120
- playlists 128
- private entries 194
- QuickText phrases 89
- signatures 87
- tasks 143
- TTY/TDD devices 67
- videos to albums 120
- voice memos 152
- wallpaper 121
- Address Bar pick list 99
- addresses
 - adding multiple recipients to 54, 88
 - assigning to favorite buttons 54
 - highlighting email 27
 - sending email and 78
 - synchronizing 213
 - text messages and 88, 90
 - viewing website 104
 - web links and 97
- adjusting screen brightness 184, 197
- adjusting volume
 - alarm tones 140
 - music 127
 - phone calls 14, 64, 216
 - ringer 64
 - video clips 115
 - voice memos 153
- Advanced Mode (calculator) 158, 159
- Advanced Mode command 158
- agenda lists 133
- Agenda View 60, 134, 139
- Alarm check box 136
- alarm clock 142
- Alarm Sound pick list 141, 146
- alarm tones 140
- alarms
 - See also* alerts
 - adding to calendar 136, 140
 - adding to tasks 144, 146
 - recording sounds for 141
 - setting for clock 142
- Album command 120
- Album list 117, 119, 121
- albums. *See* photo albums; video albums
- alert icon 70
- Alert screen 45, 90, 136, 157
- Alert Sound pick list 85
- alert tones 63, 85, 93
- alerts
 - See also* alarms
 - clearing 158
 - displaying 157
 - including message text in 92
 - receiving messages and 85
 - responding to 45, 90
- aligning the screen 185
- Alt key 31, 227

- alternate characters 31, 32
- alternate characters list 32
- anniversaries 137
- Answer button 44
- answering phone calls 44, 46
- antenna 231
- applets 97
- application buttons 33
- application categories 34
- application list view 187
- Application pick list 183
- application preferences 187, 189
- applications
 - See also* specific built-in applications
 - accessing 34
 - assigning to Quick Keys 54
 - associating with buttons 54, 187
 - beaming 167
 - categorizing 187
 - caution for 178, 201
 - changing screen fonts for 184
 - closing 33
 - copying 178
 - copying text to 103
 - customizing 186–187
 - deleting 17, 162, 163, 224
 - disabling synchronization
 - for 169
 - downloading 102, 161
 - finding text in 157
 - getting help with 162
 - installing 160–162, 201, 229
 - managing 149
 - moving around in 23
 - opening 7, 33, 34, 47, 177
 - playing music and 127
 - recently used 34
 - running on expansion cards 224
 - sending over Bluetooth connections 165
 - setting default 188
 - switching 47
 - synchronization defaults
 - for 21
 - transferring 16, 17, 165, 167, 178
 - troubleshooting 201
 - viewing information about 163
 - viewing menus for 28
 - viewing tips for 2
- Applications button 7, 34, 37
- Applications View
 - defined 227
 - displaying applications in 187
 - opening applications and 33, 177
 - overview 34
- appointments 135, 214
 - See also* events
- Archive folder 162
- area conversions 159
- arrow icons 25
- ASF files 118
- Attach Signature check box 87
- attachments
 - adding 79–80
 - displaying 81
 - downloading 81
 - multiple files and 80
 - pictures as 79, 114
 - removing 79
 - storing large 224
 - supported formats for 149
 - video clips as 79, 115
 - voice memos as 153
- attendee information 137
- audio 183

See also music; voice memos

Audio Caption command 114

audio captions

- adding 114, 121
- background music and 119
- playing 117

Audio icon 117

Auto answer pick list 59

Auto Lock Device box 193

Auto naming pick list 116

Auto Sync dialog box 84

auto sync failures 85

Auto-complete check box 104

Auto-hide Toolbar option 118

Auto-Keyguard pick list 190

automated voicemail systems 44

automatic shut-off 197, 227

automating tasks 52

Auto-off After pick list 197

auto-off interval 227

AVI files 118

B

Background check box 139

background music 119

backgrounds 60, 139

backing up information 17, 21, 205

backlight (keyboard) 30, 184, 197

backlight icon 184

Backspace key 30

Backup folder 163, 202

backup folders 211, 225

Basic Mode (calculator) 158

Basic Mode command 158

basics 2

battery

- charging 10–12
- disposing 207
- installing 9
- maximizing life of 12, 38, 197
- replacing 12, 206
- viewing status of 12

battery door release 8

battery icons 12, 70

Beam Business Card command 133

Beam Category command 167

Beam command 167

Beam From pick list 167

Beam Receive pick list 198

Beam Status dialog box 167, 168

beaming

- battery life and 13
- defined 227
- overview 166–168
- troubleshooting 166, 168
- turning off 198

bell 157, 208

birthdays 137

blank screens 207

blank time slots 139

Blazer application

- See also web browser

Blazer web browser 97, 223

Blazer web browser. See also web browser

blinking bell 157, 208

Bluetooth application

- opening 57
- sending from 164, 165
- setting up connections with 106, 108, 171
- visibility options in 165

Bluetooth devices

- connecting to 57, 106–109, 171
- disabling or enabling 13, 59, 165

- entering passkeys for 107, 109
 - incoming calls and 46
 - receiving information from 165
 - receiving phone calls and 58, 217
 - sending applications over 165
 - sending information over 164
 - setting up 57–58
 - synchronizing from 171, 172, 210
 - troubleshooting 219
 - visibility options for 108
 - Bluetooth icon 57
 - Bluetooth icons (Phone) 70
 - BMP files 117
 - bonus software. *See* built-in applications
 - Bookmark Page icon 101
 - bookmark pages 101
 - bookmarks 99–101, 167
 - Bookmarks View 100, 101
 - Bookmarks View icon 100
 - border glow (highlight) 26
 - brightness (screen) 13, 184, 197, 207
 - brightness duration (backlight) 184, 197
 - Brightness slider 197
 - browsing files 177
 - browsing the web. *See* web browsing
 - built-in applications 2, 160, 162
 - See also* applications; specific application
 - built-in camera. *See* camera
 - built-in security software 189
 - Business Card command 133
 - business cards 133, 167
 - buttons
 - See also* favorite buttons
 - accessing command 27
 - changing defaults for 188
 - customizing 187
 - disabling 47, 191
 - highlighted on screen 26
 - opening applications with 33
 - restoring factory defaults for 188
 - speed-dialing with 41
 - Buttons Preferences screen 187
- C**
- cache 105, 224
 - calculator 31, 158
 - Calculator application 158–159
 - Calculator icon 158
 - calculator modes 158
 - calendar
 - See also* Calendar application
 - customizing 139–140
 - deleting events from 138
 - displaying 134
 - scheduling events for 135, 136, 137
 - selecting alarm tones for 140
 - viewing tasks on 139
 - Calendar application
 - changing fonts for 184
 - changing views for 134
 - color-coding events 138
 - creating events 135, 136, 137
 - displaying events 61
 - opening 33, 61
 - overview 133
 - setting alarms from 136
 - setting default view 139

- setting display options in 139–140
 - synchronizing information in 21
- Calendar button 7, 33, 134
- Calendar views 134
- call lists. *See* Call Log screen
- Call Log button 42
- Call Log screen 42, 48
- call waiting 49
- Call Waiting dialog box 49
- caller IDs 64, 65, 131
- calls. *See* phone calls
- camcorder 115, 116
- camcorder buttons 115
- Camcorder icon 114
- Camcorder View 114, 116, 121
- camera 113, 116, 223
- camera buttons (Camera View) 114
- Camera icon 113
- camera lens 8
- Camera View 113, 116, 121
- Cancel button 79
- Cancel button (Active Call) 46
- Cancel Spkr button 46
- cancelling menu selection 28
- Caps Lock indicator 31
- Caps Lock mode 31
- captions. *See* audio captions
- Card Info application 178, 179
- Card Info button 178
- card readers 126
- carrying cases 208, 218
- cascading style sheets 98, 105
- categories
 - adding ringtones for 65
 - applications and 34, 187
 - beaming and 167, 168
 - color-coding in 138
 - contacts and 132
 - events and 138, 140
 - memos and 151
 - naming 187
 - receiving from Bluetooth and 166
 - sending over Bluetooth connections 164
 - tasks and 144, 145, 146
- Category command 187
- category marker 140
- Category pick list 139, 140, 187
- CDs 126
- Center button 7
- certificates 97
- Change Lock Code option 192
- changing
 - bookmarks 100
 - button defaults 188
 - contact information 132
 - default applications 188
 - email accounts 84
 - events 138
 - favorite buttons 54
 - information 15
 - lock codes 192
 - owner information 195
 - passwords 194, 195
 - playlists 128
 - QuickText phrases 89
 - screen fonts 184
 - wallpaper 39
 - web page layouts 98
- character entry 30, 31, 32, 89
- character limits
 - memos 151
 - text messages 88
- character searches 157
- charge indicator 7, 11, 12
- charger cable 11

- charging
 - smartphone 10, 11, 13
 - smartphone battery 10–12
- charging status 12
- chat icon 92, 94
- Chat page (Preferences) 93
- Chat screen 92
- chat sessions 91, 92, 93
- Chat view 91
- Choose Songs button 127
- Choose Songs command 128
- city information 141, 142, 197
- City pick list 142
- Clear Cache button 105
- Clear Cookies button 105
- clock 141, 185
 - See also* World Clock
- closing
 - application menus 28
 - applications 33
 - pick lists 29
- color palette 116
- color preferences 93, 116, 186
- Color Theme Preferences screen 186
- color-coded category marker 140
- color-coding events 138
- colored backgrounds 27
- command buttons 27
- commands. *See* menu items
- completed tasks 144, 145, 146
- completion dates 146
- components (Treo smartphone) 1
- Compose dialog box 88, 89
- Compress Day View check box 139
- compressed files 160, 161
- computers
 - connecting smartphone to 20
 - downloading applications to 161
 - installing applications from 161
 - installing synchronization software on 19
 - quarantined files on 16, 18, 201
 - synchronizing with 15, 22
 - transferring information to 21
- transferring multimedia to 122
- transferring music from 125, 126
- Con button (calculator) 159
- conduits 135, 213
- Conf button 50
- conference calls 49, 50, 51
- Confirm message deletion check box 92
- conflicting applications 201
- conflicting events 139
- connecting
 - headsets 55–56
 - to Bluetooth devices 57, 106–109
 - to computers 20
 - to virtual private networks 198
 - to websites 97, 106
- connections
 - receiving information over Bluetooth 165
 - restrictions for 47
 - sending information over Bluetooth 164
 - setting up Bluetooth 171
 - troubleshooting 216, 221
 - TTY devices and 67

- viewing status of 69, 220
- constants 159
- Contact Edit dialog box 131
- contact names 40
- contacts
 - See also* Contacts
 - application
 - adding photos to 121
 - assigning caller IDs to 65
 - creating 131
 - deleting 133
 - editing 132
 - entering phone numbers
 - for 48, 53
 - looking up 53
 - marking as private 132
 - scrolling through 26
 - searching for 40, 61, 132
 - synchronizing 131, 174
 - viewing details about 41
- Contacts application
 - adding events to 137
 - changing fonts for 184
 - opening 131
 - synchronizing information
 - in 21
- Contacts button 131
- Contacts list 27, 133
- contracts 1
- conversion functions
 - (calculator) 158, 159
- cookies 97, 104, 105
- Copy button 120, 178
- Copy command 103, 178
- Copy Items dialog box 120
- Copy items to pick list 120
- Copy to command 120
- Copy To pick list 178
- copying
 - applications 178
 - multimedia files 122, 123
 - music files 125
 - phone numbers 39
 - photos 119
 - text 103
 - user folders 202
 - videos 119
- copyrighted materials 119
- corporate email accounts 198
- corporate servers 21
- country-specific preferences.
 - See* language settings
- coupling 216
- coverage area 13, 63, 68, 216
- Coverage in/out pick list 63
- crashes 208
- Create chats from messages
 - pick list 93
- creating
 - albums 120
 - audio captions 114, 121
 - bookmarks 99
 - business cards 133
 - caller ID photos 65, 131
 - categories for applications 187
 - chat sessions 92, 93
 - cities for World Clock 142
 - contacts 131
 - email 97
 - email messages 78
 - events 135, 136
 - memos 151
 - partnerships 58, 106
 - passwords 193, 194
 - playlists 128
 - private entries 194
 - QuickText phrases 89
 - signatures 87
 - tasks 143
 - text messages 88–89
 - voice memos 152
 - wallpaper 121
- current date and time 141
- current events 61

Current Privacy pick list 194, 195

customer service (wireless service provider) 3

customer support (Palm) 3

customizing

applications 186–187

bookmarks 101

buttons 187

calendar 139–140

camera 116

chat sessions 93

email 84–87

Keyguard 190

messaging options 92

smartphone 134, 181

system date and time 196

system sounds 183–184

tasks 146

web browser 104–106

D

daily events 134

Daily Repeating Events

check box 140

daily schedules 134

data. *See* information

data service icons 220

data services 75, 97, 220

data transfer 69

databases 157

Date & Time Preferences

screen 196

date formats 185

date preferences 196

Date stamp pick list 116

dates

adding to photos 116

changing event 138

completed tasks and 145, 146

displaying 134, 141

selecting 135

setting due 144

setting system 196

sorting on 91

synchronizing 196

viewing due 145, 146

datestamps 116

Day display options 139

Day View 134, 139

daylight saving time 142

decimal display formats

(calculator) 159

decimal values 159, 185

decompression utilities 161

Default Alarm pick list 141

Default Apps Preferences
screen 189

default settings 188

Default View pick list 139

degrees 159

delays 193

Delete command 83, 121, 163

delete confirmation

messages 92

Delete Contact command 133

Delete events older than pick list 138

Delete From pick list 163

Delete Memo command 151

Delete Old command 83

Delete Task command 146

deleting

albums 120, 121

alerts 158

applications 17, 162, 163, 224

attachments 79

bookmarks 101

contacts 133

cookies 105

device names 18

email 83, 224

- events 138
- files 224
- memos 151
- messages 91, 92
- music from playlists 128
- passwords 194
- photos 114, 120, 122
- playlists 128
- tasks 146
- video clips 115, 120, 122
- desktop software. *See* Palm Desktop software; software
- Details button 27
- Details command 121
- Device Name field 57
- device names 18, 57, 166, 209, 227
 - Bluetooth devices and 57
- devices, entering passkeys and 58
- devices. *See* Bluetooth devices; hands-free devices; smartphone
- Dial another call prompt 49
- Dial button 42
- Dial Extra Digits
 - Automatically option 54
- Dial Number dialog box 42
- Dial Pad 31, 39, 60
- Dial Pad button 47
- Dial Preferences screen 66
- dialing 39–42, 47, 65, 103
- dialog boxes
 - accessing command
 - buttons on 28
 - defined 227
 - getting help with 3
 - highlighted buttons in 26
- digital cameras 117
 - See also* camera
- dimming keyboard backlight 184, 197
- Disable cookies check box 104
- Disable JavaScript check box 105
- disabling
 - Add New Number prompt 48
 - Bluetooth devices 13, 59
 - cookies 104
 - Keyguard 37, 190
 - onscreen buttons 47, 191
 - synchronization 169
 - system sounds 183
 - the touchscreen 189, 191
 - web page images 98, 105
- discovery 166
- Discovery icon 107
- discovery results list 107
- Discovery Results screen 165
- discussion groups 3
- disk space (smartphone) 224
- Display my name in chat window as entry field 93
- Display Options command 139
- Display Options dialog box 139
- displaying
 - alerts 157
 - alternate characters 32
 - application information 163
 - application menus 28
 - applications 187
 - attachments 81
 - bookmarks 100
 - connection status 69, 220
 - contacts information 41
 - current date and time 141
 - due dates 145, 146
 - email messages 81
 - error messages 226
 - event categories 140

- events 61, 134, 139, 140
 - items in pick lists 29
 - on-device guide 2
 - overdue tasks 134
 - personal calendar 134
 - photos 116, 117, 122
 - private entries 194
 - Quick Tour 2
 - signal strength 69
 - slide shows 118
 - tasks 139, 145, 146
 - unread messages 71, 134, 139
 - video clips 116, 118, 122
 - video recording time 114
 - voicemail messages 69
 - web addresses 104
 - web pages 97, 99
 - DOC files 149
 - documentation 1, 2, 25, 75
 - Documents application 149–150
 - Documents icon 150
 - Documents To Go icon 150
 - Documents To Go software 149
 - downloading
 - applications 102, 161
 - attachments 81
 - email messages 84
 - files 101, 160
 - ringtones 61
 - support information 3
 - Downloads bookmark 102
 - downward-pointing arrows 29
 - drafts 79, 89
 - Drafts button 79
 - drained battery icon 12
 - draining the battery 10, 11, 12
 - Draw on Photo command 114
 - drawing tools 114
 - drivers 173
 - Due Date pick list 144
 - due dates 144, 146
- ## E
- earpiece 7, 46
 - eBooks 17
 - echoes 216
 - Edit Bookmark List dialog box 101
 - Edit Bookmarks command 100, 101
 - Edit Favorites Button command 54
 - Edit Favorites Pages
 - command 53, 55
 - Edit Playlist dialog box 128
 - edit screens 28
 - editing. See changing
 - Effects pick list 116
 - email
 - accessing 75, 78–88, 198
 - adding multiple addresses to 54
 - adding signatures 87
 - attaching photos to 79, 114, 119
 - attaching ringtones 80
 - attaching videos to 79, 115, 119
 - attaching voice memos to 153
 - creating 78, 97
 - customizing 84–87
 - defining favorite buttons for 54
 - deleting 83, 224
 - dialing from 41
 - downloading 84
 - forwarding 82
 - removing attachments for 79
 - replying to 82

- requirements for 1
- resending 79
- retrieving 81
- scrolling 81
- scrolling through 26
- selecting default
 - application for 188
- sending 79, 90, 97
- setting alerts for 85
- sort options for 83
- storing attachments 224
- synchronizing 174
- troubleshooting 220
- viewing attachments 81
- viewing status of 82
- viewing unread messages
 - for 134, 139
- email accounts
 - changing 84
 - setting email preferences and 84
 - setting up 77, 87
- email application 75
- email applications 188, 222
- Email button 7, 33
- email options 78, 83
- emergency calls 66, 70, 191
- emoticons 89
- empty battery icon 12
- empty time slots 139
- emptying Trash folder 83
- Enable background play
 - check box 127
- encryption 66, 97
- Eng(x) display format 159
- engineering notation 159
- entering
 - alternate characters 31, 32
 - decimal values 159, 185
 - device names 18, 57, 209
 - email addresses 78
 - events 135, 136, 137
 - information 15, 195
 - lock codes 191, 192
 - numbers 31, 158
 - passkeys 56, 58, 107
 - passwords 45, 193, 194
 - phone numbers 39–42, 61, 191
 - tasks 143
 - text 30, 151
 - URLs 104
 - web addresses 99
- entries. *See* information
- entry screens 26, 194
- envelope icon 83
- erasing information 208
- error messages 226
- errors 211, 218, 226
- Escalate ring tone volume
 - check box 62
- EVDO broadband technology 228
- EVDO connections
 - troubleshooting 221
 - viewing status of 69
- EVDO services 69, 222
- event conflicts 139
- Event Details dialog box 136, 137, 138
- events
 - changing 138
 - color-coding 138
 - creating 135, 136
 - deleting 138
 - displaying 61, 134, 139, 140
 - scheduling repeating 137
 - setting alarms for 136, 140
 - synchronizing 134, 174
 - troubleshooting 214–215
 - viewing categories of 140
 - viewing duration of 139
- Evolution Data Optimized (EVDO) technology 228

- Excel spreadsheets 73, 80, 149
- Exchange ActiveSync 87
- Exchange Address Book 213
- Exchange Servers 87
- expansion card slot 8, 175
- expansion cards
 - accessing items on 177
 - adding 175
 - beaming from 167
 - caution for 17, 179
 - copying applications to 178, 179
 - copying music to 125
 - copying photos or videos to 119
 - deleting applications on 162
 - displaying albums on 117
 - downloading to 101
 - formatting 178, 179
 - inserting 175, 176
 - installing applications on 162
 - managing files on 177
 - moving files to 17
 - opening applications on 177, 224
 - opening files on 150
 - renaming 179
 - sending attachments to 82
 - storing information on 17, 155, 175
 - transferring applications from 178
 - viewing information about 178
- extensions (phone) 47, 54
- Extra Digits button (Active Call View) 47
- Extra Digits option (Add Favorites) 54
- F**
- fade setting 139
- Fast Mode (web browser) 98, 105
- favorite buttons
 - adding 52–54
 - defined 228
 - dialing with 41
 - editing 54
 - organizing 55
 - specifying number of 61
 - transferring to smartphone 53
- Favorites pages 41, 54, 61
- features (Treo smartphone) 7–9
- feedback 216
- fields 26, 29
- file types
 - pictures 117
 - videos 118
- files
 - accessing 149, 198
 - attaching to email 80
 - browsing 177
 - deleting 224
 - downloading 101, 160
 - moving to expansion cards 17
 - opening 150
 - saving 150
 - streaming 102
 - transferring 16, 224
- Files application 177
- financial calculator 158
- financial functions 159
- Find dialog box 157
- Find More button 157
- Find Text on Page command 103
- finding
 - chat sessions 92
 - contacts 40, 61, 132

- specific characters 157
- text 103, 157
- web pages 99
- firewalls 198
- 5-way navigator 7, 25, 26, 190
- Fixed display format 159
- Flash mode 51
- flight mode 38
- Float display format 159
- folder pick list 83
- folders 91, 209, 213
 - switching between email 83
- Font command 98
- Font size pick list 184
- fonts 98, 184
- forgetting passwords 192, 195
- Format Card command 179
- Formats Preferences screen 185
- formatting expansion cards 178, 179
- forums 3
- forwarding
 - email 82
 - phone calls 51

- freeing disk space
 - (smartphone) 224
- freeing memory 105, 162, 224
- freezes 201, 204
- From pick list 178
- full charge (battery) 10

G

- Game Volume pick list 183
- getting started 2, 13
- GIF files 117
- Glossary 227
- GPS receivers 109
- gradients 159
- graphics. *See* images
- grouping photos or videos 117
- groupware 87

H

- HAC setting 68
- hands-free devices
 - adding 59
 - connecting to 56
 - entering passkeys for 58
 - passkeys and 58
 - receiving phone calls and 58, 59

- troubleshooting 218–220
- Hands-free Preferences screen 59
- Hands-free Setup button 57
- Hang Up All button 46
- hanging up phone 43, 46, 49, 50
- hard resets 192, 204
- hardware 1
- headphones 123
- headset button 44, 56
- headset jack 8
- headsets
 - See also* hands-free devices
 - Bluetooth devices and 57, 106
 - connecting to smartphone 55–56
 - entering passkeys for 109
 - receiving calls and 43, 44, 46
- hearing-impaired services 67
- help 2, 199, 226
- hexadecimal characters 159
- Hide Records option 194
- hiding
 - blank time slots 139

- information in entry
 - screens 194
- Pics&Videos toolbar 118
- private entries 194
- web browser toolbar 103
- High Priority command 89
- highlighted buttons 26
- highlighting
 - applications 34
 - favorite buttons 41
 - items in pick lists 29
 - items on screen 26
 - menu items 28
 - phone numbers 42
 - text 27, 103
 - web links 27, 98
- hints 193
- History command 103
- History list 103
- Hold button 46, 49
- holidays 137
- home city 141
- home page 104
- home page icon 99, 104
- HotSync Log 211
- HotSync Manager 173, 228
- HotSync manager 172
- HotSync Manager icon 172, 210
- HotSync Setup button 171
- HotSync technology 228
- hypertext links. *See* web links
- I**
- icons 99, 187
- Ignore button 44
- Ignore with Text button 44
- image file types 102, 117
- images
 - disabling web page 98, 105
 - downloading 102
 - saving 102
 - selecting as wallpaper 60
 - transferring 17, 224
 - troubleshooting 222
- importing phone numbers 144
- Inbox 27, 81, 94
- Inbox icons 82
- Incoming dialog box 86
- incoming messages 94
- incoming phone calls 43, 49, 60, 190
- incompatible applications 17, 201
- Incompatible Apps directory 16
- indicator light 7, 11, 12
- Info command 17, 163
- Info screens 163
- information
 - accessing 192
 - backing up 17, 21, 205
 - beaming 167
 - changing 15
 - entering 15, 30–31, 195
 - erasing all 208
 - hard resets and 192
 - losing 179, 192, 205
 - marking as private 194–195
 - masking 189, 194
 - protecting 189, 192
 - receiving over Bluetooth connections 165
 - sending over Bluetooth connections 164
 - storing 17, 155, 175, 224
 - synchronizing 15, 19, 21, 168–174, 212
 - transferring 16, 22, 166
 - updating 15, 21, 155
- infrared port
 - beaming from 167, 168

- defined 228
- location of 8
- synchronizing with 173, 210
- infrared transmission 228
- inserting expansion cards 175, 176
- installer 160
- installing
 - applications 160–162, 201, 229
 - bonus software 22, 160
 - Palm Desktop software 16, 161, 203
 - smartphone battery 9
 - synchronization software 15, 19
 - third-party applications 224
 - VPN clients 198
- interference 217, 219
- international characters. *See* alternate characters
- international clock. *See* World Clock
- international settings. *See* language settings

- Internet
 - See also* web browsing; websites
 - connections 98, 106
 - installing applications from 160
 - troubleshooting 221
- interruptions 226
- Into album pick list 120
- invalid characters 89
- IR port
 - beaming from 167, 168
 - defined 228
 - location of 8
 - synchronizing with 173, 210
- items in pick lists 29
- items on screen
 - activating 27
 - highlighting 26
 - selecting 27
- iTunes 123, 124, 126

- J**
- Java applets 97
- JavaScript elements 105
- JPG files 117

- K**
- keyboard
 - accessing alternate characters on 31
 - dialing with 39
 - entering information from 30–31
 - illustrated 30
 - incremental searches from 40
 - locking 189
 - restoring factory defaults 188
- keyboard backlight 30, 184, 197
- Keyguard 189, 190
- Keyguard Preferences screen 190
- Known Caller pick list 62

- L**
- Label color pick list 93
- language selection screen 10, 19
- language settings 185, 203, 205
- laptops 172, 173
- large attachments 224
- length functions 159

- liability [ii](#)
- lightning bolt icons [12, 70](#)
- Li-ion battery [228](#)
 - See also* battery
- links [90](#)
 - See also* web links
- list screens
 - See also* pick lists
 - accessing command
 - buttons on [27](#)
 - highlighting items in [27](#)
 - selecting items on [26](#)
- list view (applications) [187](#)
- listening to
 - music [123, 127](#)
 - voice captions [117](#)
 - voice memos [152](#)
- Lithium ion battery [228](#)
- loading web pages [90, 105, 222](#)
- Local button [172](#)
- locating
 - chat sessions [92](#)
 - contacts [40, 61, 132](#)
 - specific characters [157](#)
 - text [103, 157](#)
 - web pages [99](#)
- Location icon [67, 70](#)
- Location On option [67](#)
- locations, disabling/enabling
 - transmission of [67](#)
- Lock & Turn Off option [194](#)
- lock codes [191, 192](#)
- Lock Device dialog box [193](#)
- lock icon [98, 119, 165, 167](#)
- locking
 - keyboard [189](#)
 - phone [191–192](#)
 - touch-sensitive features [190](#)
 - Treo smartphone [192, 193](#)
- logging in to corporate servers [198](#)
- logic functions [159](#)
- looking up contacts [53](#)
- Lookup button [53](#)
- loops [204](#)
- losing
 - information [179, 192, 205](#)
 - passwords [192, 195](#)
- Lost Password option [195](#)
- low coverage areas [216](#)
- lowercase letters [30](#)
- M**
- M4V files [118](#)
- Mac systems
 - installing applications from [161](#)
 - installing synchronization software on [19](#)
 - installing to expansion cards and [162](#)
 - listening to music and [123](#)
 - removing applications and [163](#)
 - requirements for [15](#)
 - synchronization defaults for [21](#)
 - synchronizing with [170, 174, 210, 211](#)
 - transferring music from [123, 124, 126](#)
 - uninstalling desktop software and [211](#)
 - upgrading and [18](#)
 - user folders on [202](#)
- magnet [8](#)
- mail. *See* email
- Mail Service pick list [77](#)
- Manage Playlists command [128](#)
- map (World Clock) [142](#)
- maps (web pages) [222](#)

- marking information as
 - private 194–195
- marking private contacts 132
- Mask Records option 194
- masks 189, 194
- mathematical constants 159
- mathematical functions 159
- maximizing battery life 12, 38, 197
- media features 13
- Media Player 123, 125, 126
- memory
 - freeing 162, 224
 - freeing for applications 224
 - purging old events 138
 - setting limits 105
- memory slots (calculator) 159
- memos
 - See also* notes
 - creating 151
 - deleting 151
 - recording 151
 - scrolling through 26
- Memos application
 - changing fonts for 184
 - entering text in 151
 - opening 33, 151
 - overview 147
 - removing memos with 151
 - synchronizing information in 21
- Memos button 151
- Memos list 27
- Menu button 7
- menu items 28
- Menu key 28, 30
- menu shortcuts 28
- menus 28
- Message command 43
- message lists 91
- Message Tone pick list 94
- messages
 - adding multiple recipients for 54
 - arranging in folders 91
 - chat sessions and 92
 - checking status of 69, 71
 - creating 88
 - defining favorite buttons for 54
 - deleting 91, 92
 - dialing from 41
 - displaying status of 94
 - displaying unread 71, 134, 139
 - including in alerts 92
 - invalid characters in 89
 - receiving 89
 - retrieving 45, 69
 - saving 89
 - scrolling through 26
 - selecting phone numbers in 42
 - sending 43, 88, 94
 - setting colors for 93
 - setting preferences for 92–94
 - specifying priority settings for 89
 - troubleshooting 220
- Messages page (Preferences) 92
- messaging 73
 - See also* text messages
- Messaging application
 - See also* text messages
 - changing fonts for 184
 - creating chat sessions from 92
 - creating text messages with 88
 - customizing 92
 - deleting messages in 91
 - opening 33

- overview 88
 - sorting messages in 91
 - status indicators for 94
 - messaging applications 188
 - Messaging button 33
 - Messaging Inbox 27
 - messaging preferences 92–94
 - messaging services 1
 - messaging, troubleshooting 220
 - metric values 159
 - microphone 8, 47, 116
 - Microphone pick list 116
 - Microsoft Excel 73, 80
 - Microsoft Excel
 - spreadsheets 149
 - Microsoft Exchange
 - ActiveSync 87, 174
 - Microsoft Exchange Servers 87, 131, 134
 - Microsoft Office Manager
 - See Documents application
 - Microsoft Outlook. See Outlook
 - Microsoft Windows. See Windows systems
 - Microsoft Word documents 73, 80, 149
 - miniSD
 - cards 235
 - expansion card slot 8
 - mirror 8
 - mobile networks 216
 - Month display options 140
 - Month View 134, 140
 - Move to command 120
 - moving
 - bookmarks 101
 - favorite buttons 55
 - moving around on screen 23, 25
 - moving through web pages 98, 105
 - MP3 files 125
 - MP3 formats 123
 - MP4 files 118
 - MPEG-4 formats 122
 - MPG files 118
 - multi-connector pin 8
 - multimedia file types 118
 - multimedia files 117
 - multiple recipients 54, 88
 - music
 - adjusting volume 127
 - answering phone calls and 43
 - changing playlists for 128
 - creating playlists for 128
 - downloading 102
 - listening to 123, 127
 - memory consumption and 224
 - pausing 127
 - playing 102, 127
 - selecting 127
 - stopping 127
 - uploading 125
 - music file types 102
 - music files 123, 125, 224
 - music subscription services 123
 - mute button 47
- ## N
- names
 - sorting on 91
 - synchronizing and 209
 - naming
 - categories 187
 - device 18, 57, 209
 - messages for chat sessions 93
 - photo albums 113

- photo groups 116
- playlists 128
- video albums 115
- voice memos 152, 153
- navigator buttons 7, 25, 26
 - See also 5-way navigator
- networks 216, 221
- New Bookmark dialog box 99
- New button 27
- New Message dialog box 79
- Next Song button 127
- No Service message 13, 68
- Normal Mode (web browser) 98, 105
- Note button 132
- notes
 - See also memos
 - adding to contact
 - information 132
 - adding to events 138
 - adding to tasks 144
 - scrolling through 26
 - storing 151
- notifications 45, 85
 - See also alerts
- number formats 185
- numbers
 - calculator display options for 159
 - entering from keyboard 31, 158
- O**
- offline synchronization 213
- offline viewing (web) 100
- OK button 27
- online forums 3
- online support 3
- opening
 - Alert screen 157
 - application menus 28
 - applications 7, 33, 34, 47, 177
 - Bookmarks View 100
 - Call Log 42
 - Dial Pad 39, 47, 60
 - email applications 222
 - files 150
 - History list 103
 - HotSync manager 172
 - Pocket Tunes 127
 - Quick Tour 2
 - web browser 33, 97
 - web pages 90, 105, 222
 - World Clock 142
- operating system (smartphone) 16
- operating systems (PCs) 15
- Optimized Mode (web browser) 97, 98
- Option button 33
- Option key 7, 30, 31, 33, 228
- Option key indicator 31
- Option Lock indicator 31
- Option Lock mode 31, 89
- options in pick lists 29
- organizer features 1, 13, 21, 229
- Outbox 94
- Outbox button 79
- outgoing messages 94
- outgoing phone calls 49
- Outlook
 - duplicate entries in 213
 - entering information with 15
 - Microsoft Exchange
 - ActiveSync and 174
 - multiple appointments and 135
 - multiple contacts and 131
 - synchronizing with 20, 21, 169, 213
 - time zones and 135
- Outlook folders 213
- overdue tasks 134, 139, 145
- owner information 195

Owner Preferences screen
195, 196

P

page icon 94

Page View 100, 103, 104

paired relationship. *See*
partnerships

Palm Desktop software

defined 228

device names in 227

entering information with
15

forgetting passwords and
195

installing 16, 161, 203

Microsoft Exchange

ActiveSync and 175

multiple appointments and
135

multiple contacts and 131

reinstalling 213

synchronizing with 21,
210

time zones and 135

troubleshooting 203, 210

upgrades and 18

Palm folder 113, 114

Palm online support 3

Palm OS software 16

Palm OS-compatible
applications 160

Palm Software Installation
CD 2, 19

paper clip icon 79, 81

paragraphs, selecting 27

partial battery icon 12

partnerships 58, 106, 229

passkeys 56, 58, 107

Password box 193, 195

password hints 193

passwords

caution for 194

changing 194, 195

deleting 194

dialing 47, 54

email and 77, 78

entering 45

forgetting 192, 195

owner information and
195

private entries and 189,
194

smartphone and 192

Paste command 39, 103

pasting

phone numbers 39

text 103

Pause button 127

pausing

music 127

streamed content 103

video playback 116, 118

video recording 116

voice memos 152

PCs. *See* personal
computers

PDB (Palm OS) databases
160

PDF files 80, 149

pending alerts 90

pending messages 92, 94

personal computers

connecting smartphone to
20

downloading applications
to 161

installing applications from
161

installing synchronization
software on 19

quarantined files on 16,
18, 201

synchronizing with 15, 22

transferring information to
21

- transferring multimedia to 122
- transferring music from 125, 126
- personal information 129, 189, 192, 195
 - See also information
- personal information managers 203, 229
- personal schedules 133
- personalizing smartphone 134, 181
 - See also preferences
- phone
 - See also phone calls
 - answering 44, 46
 - conference calls and 50, 51
 - dialing 39–42, 47, 103
 - dialing preferences for 65
 - getting started with 13
 - hands-free devices and 55, 58, 59
 - hanging up 43, 46, 49, 50
 - locking 191–192
 - maximizing battery life and 38
 - privacy settings for 66
 - selecting alert tones for 63
 - selecting ringtones for 61, 62
 - service carrier for 1
 - silencing ringer for 44, 183
 - troubleshooting 216–218
 - turning on and off 37, 38
 - viewing Call Log for 42
- Phone application
 - accessing Dial Pad in 39, 47, 60
 - adding caller IDs 64, 65
 - customizing 60
 - dialing from 42
 - displaying events in 134
 - enabling privacy settings from 66
 - finding contacts from 40
 - opening 33, 39
 - overview 35
 - selecting wallpaper for 60, 121
 - setting alert tones 63
 - setting ringtones 61
 - setting TTY/TDD connections 67
 - status icons for 68–71
 - turning HAC on/off 68
- Phone button 7, 33
- Phone Call screen 44
- phone calls
 - See also phone; phone numbers
 - adding a second 49
 - adjusting volume for 14, 64, 216
 - automatically answering 60
 - disabling screen for 190
 - ending 43, 46, 49, 50
 - forwarding 51
 - keyboard backlight and 30
 - making 39, 47, 49, 51
 - placing on hold 46, 49
 - receiving 43, 49
 - restrictions for 47
 - running applications and 47
 - sending to voicemail 44
 - switching between active 50, 51
 - text messages and 90
 - transmitting location during 67
 - viewing status of 49
- phone indicator. See indicator light
- Phone Info command 14
- Phone Info screen 14

- Phone Lock 191
- Phone Lock command 191
- phone numbers
 - adding 48
 - assigning prefix to 65
 - copying 39
 - dialing extra digits with 47, 54
 - entering 39–42, 61, 191
 - getting device 14
 - highlighting 27
 - importing 144
 - pasting into Dial Pad 39
 - redialing most recent 42
 - saving 48
 - selecting 42
- Phone Off message 13, 38, 68
- phone on icon 69
- Phone Preferences
 - command 66
- Phone Preferences screen 66, 67, 68
- photo albums 113, 117, 120
- Photo Settings screen 116
- photos
 - See also* pictures
 - adding as wallpaper 121
 - adding caller ID 65, 131
 - adding captions to 114
 - adding to albums 120
 - adding to contacts 121
 - backing up 122
 - copying 119
 - deleting 114, 122
 - displaying information
 - about 121
 - downloading 102
 - grouping 117
 - personalizing 114
 - positioning on screen 117
 - removing from albums 120, 121
 - rotating 121
 - saving 114
 - scrolling through 26
 - selecting as backgrounds 139
 - sending 79, 114, 119
 - setting default size 116
 - setting preferences for 116
 - storing 111
 - taking 113, 223
 - viewing 116, 117, 122
- pick lists 26, 29
- Pics&Videos application
 - copying pictures and videos in 120
 - creating wallpaper with 121
 - hiding toolbar in 118
 - opening 117
 - organizing media with 120
 - removing photos or videos
 - from 121
 - rotating photos in 121
 - sending pictures or videos
 - from 119
 - synchronizing information
 - in 21
 - viewing pictures in 117
 - viewing slide shows in 118
 - viewing videos in 118
- Pics&Videos icon 117
- picture formats 117
- Picture list 119
- pictures 65, 113, 223
 - See also* images; photos
- PIM applications 1, 229
- PIMs 203
- plain text formats 82
- Play button (Pocket Tunes) 127

- Play icon (web browser) 102
- playback
 - pausing 103, 116, 118, 127
 - resuming 103, 127
 - stopping 127, 152
- playing
 - music 102, 127
 - streamed content 102
 - video clips 115, 118
 - voice captions 117
 - voice memos 152
- playlists 128
- Playlists command 128
- plug-ins 97
- Pocket Tunes application
 - changing playlists in 128
 - creating playlists in 128
 - opening 125
 - overview 123, 125
 - playing music from 127
 - upgrading 123
- POP protocols 86
- ports 20
- Power Preferences screen
 - 13, 197
- Power/End button 7, 37, 38
- PowerPoint files 80, 149
- PPT files 149
- PRC (Palm OS) applications 160
- precautions 232
- predefined passkeys 58, 107, 109
- preferences
 - alarm tones 140
 - alert tones 63
 - applications 187, 189
 - buttons 187
 - calculator 159
 - camcorder 116
 - camera 116
 - country-specific 185
 - dialing 65
 - email 84, 86–87
 - hands-free devices 59
 - Keyguard 190
 - messaging 92–94
 - owner information 195
 - power settings 197
 - ringtones 61, 62
 - system colors 186
 - system date and time 196
 - system sounds 183
 - tasks 146
 - web pages 104–106
- prefixes (phone numbers) 65
- Prefs icon 195
- preinstalled applications 2, 160, 162
 - See also* applications; specific application
- presentations 149
- preset delays 193
- preset passkeys 58, 107, 109
- pressing keyboard keys 30
- pressing onscreen buttons 191
- Previous Song button 127
- primary applications 33
- primary button assignments 188
- prioritizing tasks 143, 146
- priority levels 143, 146
- priority settings 89
- privacy flag 144
- Privacy Mode check box 92
- privacy settings 66
- private entries 189, 194–195
- programs. *See* applications
- progress indicator bar (video recording) 116
- Prompt sounds pick list 116
- protecting personal information 189, 192
- protecting the screen 7, 208

- protecting Treo smartphone
189–196
- Protocol pick list 77
- proxy servers 106
- pTunes icon 125
- punctuation marks 31, 32
- Purge command 91, 138
- Purge pick list 91
- purging old information 17
- Q**
- quarantined files 16, 18, 201
- quick buttons 33, 187
- Quick Install 229
- Quick Keys 54
- Quick Tour documentation 2
- QuickText button 89
- QuickText phrases 89
- R**
- radians 159
- radio frequency emissions
231
- random number generator
159
- range (Bluetooth devices)
164
- Rcl button (calculator) 159
- readjusting the screen 185
- receiving phone calls 43, 49
- recently viewed web page
icon 99
- rechargeable battery 1
- Record command 167
- Record Completion Date
check box 146
- recorder 151
- recording
 - ringtones 62
 - sounds 141
 - videos 114
 - voice memos 151
- Records button 164
- recovering lost passwords
195
- recurring events. *See*
repeating events
- red paper clip icon 79
- redialing most recent number
42
- redirector (websites) 222
- reducing storage space 17
- Refresh command 221
- Refresh icon (web pages) 98
- refreshing web pages 98,
221
- Regulatory Information 231
- reinstalling Palm Desktop
software 213
- reinstalling third-party
applications 202, 205
- Reminder Sound pick list 141
- reminders 136, 143
- Remove from album
command 120
- removing
 - albums 120, 121
 - alerts 158
 - applications 17, 162, 163,
224
 - attachments 79
 - bookmarks 101
 - contacts 133
 - cookies 105
 - device names 18
 - email 83, 224
 - events 138
 - expansion cards 176
 - files 224
 - memos 151
 - messages 91, 92
 - music from playlists 128
 - passwords 194
 - photos 114, 120, 122
 - playlists 128
 - tasks 146

- video clips [115](#), [120](#), [122](#)
 - Rename Card command [179](#)
 - Rename Memo command [153](#)
 - renaming expansion cards [179](#)
 - repeat intervals (events) [137](#)
 - Repeat pick list [137](#), [141](#), [144](#)
 - repeating alarms [141](#)
 - repeating event icon [137](#)
 - repeating events [137](#), [140](#)
 - repeating tasks [144](#)
 - replacing smartphone battery [12](#), [206](#)
 - rescheduling events [138](#)
 - resets [201](#), [204–205](#), [218](#), [226](#)
 - caution for [192](#)
 - resizing text [98](#)
 - Resolution pick list [116](#)
 - resolution settings (camera) [113](#)
 - restoring factory defaults [188](#)
 - restricting location
 - information [67](#)
 - resuming playback [103](#), [127](#)
 - Return key [30](#)
 - Review photos/videos pick list [116](#)
 - RF emissions [231](#)
 - ringer
 - adjusting volume [64](#)
 - silencing [44](#)
 - turning off [183](#)
 - Ringer switch [9](#), [38](#), [44](#), [183](#)
 - ringtone file types [102](#)
 - Ringtone pick list [64](#)
 - ringtone preferences [61](#), [62](#)
 - ringtones
 - assigning to caller IDs [64](#), [132](#)
 - downloading [61](#), [102](#)
 - recording [62](#)
 - sending with messages [80](#)
 - setting for phone [62](#)
 - setting phone [61](#), [62](#)
 - roaming icon [69](#)
 - Roaming message [68](#)
 - Roaming pick list [62](#)
 - Rotate command [121](#)
 - rotating photos [121](#)
- S**
- Save As command [150](#)
 - Save as Contact command [121](#)
 - Save as Wallpaper command [121](#)
 - Save List button [128](#)
 - Save Page command [100](#)
 - saved web page indicator [100](#)
 - saving
 - files [150](#)
 - images [102](#)
 - messages [89](#)
 - phone numbers [48](#)
 - photos [114](#)
 - playlists [128](#)
 - video clips [115](#)
 - voice memos [152](#)
 - web pages [100](#)
 - schedules [134](#)
 - scheduling events [135](#), [136](#), [137](#)
 - Sci(x) display format [159](#)
 - scientific calculator [158](#)
 - scientific notation [159](#)
 - screen
 - accessing command buttons on [27](#)
 - activating items on [27](#)

- adjusting brightness 184, 197
- aligning 185
- automatically turning off 37, 197
- battery life and 13
- disabling 47, 189, 191
- locking 190
- moving around on 23, 25
- protecting 7, 208
- scrolling through 26
- selecting items on 27, 29
- troubleshooting 207–208
- turning on or off 37, 197, 218
 - waking up 37
- screen fonts 184
- screen protectors 208
- scroll arrows 81
- scroll bars 26
- scrolling 26, 98
- scrolling preferences 105
- SD cards 235
- SD_Audio folder 126
- search results 157
- searching for
 - contacts 40, 61, 132
 - specific characters 157
 - text 103, 157
- secondary applications 33
- secure connections 106
- secure web pages 98
- secure websites 97, 223
- security 58, 195
- Security button 193, 194
- security certificates 97
- Security dialog box 193
- security software 189
- Select Font dialog box 184
- Select Media screen 80
- selecting
 - alarm tones 140
 - applications 34, 177
 - chat sessions 91, 92
 - dates 135
 - favorite buttons 41
 - home city 141
 - items in pick lists 29
 - items on screen 27
 - menu items 28
 - music 127
 - phone numbers 42
 - photo albums 117, 119
 - playlists 128
 - songs 127
 - text 27, 105
 - time zones 135
 - video albums 118, 119
 - wallpaper 60, 121
 - web links 98
- self-portrait mirror 8
- Send button 7, 42, 79
- Send command 165
- Send From pick list 165
- Send To Device droplet 125
- sending
 - applications over
 - Bluetooth 165
 - calls to voicemail 44
 - email 79, 90, 97
 - information over Bluetooth 164
 - messages 43, 88, 94
 - photos 79, 114, 119
 - to chat rooms 92
 - video clips 115, 119
 - voice memos 153
- Send folder 94
- servers 21, 198
- service contracts 1
- service providers 69, 75, 76
 - See also* wireless service provider
- setting
 - alarm clocks 142
 - passwords 45, 193, 194
 - setting up smartphone 2, 10

- settings (incompatible) 201
- Setup Devices button 107, 171
- Setup Devices dialog box 57, 171
- Shift/Find indicator 30
- Shift/Find key 30, 157
- Short Messaging Service (SMS) 229
- shortcuts 28, 34
- Show Address Bar check box 104
- Show Calendar event check box 61, 134
- Show Categories check box 146
- Show Category Column check box 140
- Show Category List check box 139, 140
- Show Completed Items check box 146
- Show Due Dates check box 144, 146
- Show Due Tasks check box 139
- Show Favorite buttons check box 61
- Show Messages check box 139
- Show Priorities check box 146
- Show Time Bars check box 139
- Show timestamps in chats check box 93
- Show Wallpaper option 60
- Shutter sounds pick list 116
- Side button 7, 127, 152, 187
- Signal faded pick list 63
- signal strength 63, 69, 216, 217
- signal strength indicator 38
- signal-strength icon 38
- signatures 87
- silencing system sounds 44, 183
- silencing the ringer 44
- silent alarm 62, 63, 140
- silent alerts 93
- single carrier (1xRTT) radio transmission technology 227
- SIT files 161
- Size button 17, 164
- slide show options 119
- slide shows 118
- slider 26
- Slideshow Setting command 119
- smartphone
 - activating 14
 - adding additional security for 195
 - battery life for 12
 - charging 10, 11, 13
 - components of 1
 - connecting Bluetooth devices to 106, 108
 - connecting to PCs 20
 - customizing 134, 181
 - documentation
 - conventions for 37
 - entering passkeys for 58
 - features illustrated 7–9
 - freeing memory for 162, 224
 - freeing space for 224
 - getting help with 2–3, 199
 - getting phone number for 14
 - headsets compatible with 55
 - locking 192, 193
 - naming 18, 57, 209
 - navigating around on 23

- overview [1](#)
 - preset bookmarks on [101](#)
 - protecting [189–196](#)
 - required items for [2](#)
 - resetting [192, 204–205](#)
 - setting up [10](#)
 - specifications for [235](#)
 - storing [7, 8](#)
 - synchronization defaults
 - for [21](#)
 - synchronizing [15, 18](#)
 - third-party applications and [225](#)
 - transferring data to [17, 21](#)
 - troubleshooting [3, 199, 217](#)
 - turning on and off [10](#)
 - unauthorized users and [189](#)
 - updating information on [15, 21](#)
 - viewing signal strength for [69](#)
- SMS messaging services [220, 229](#)
- See also* text messages
- soft resets [168, 204](#)
- software
- See also* Palm Desktop software
 - accessing from web
 - browser [102](#)
 - included with smartphone [1](#)
 - installing [22, 160](#)
 - managing [149](#)
 - reinstalling [213](#)
 - synchronization defaults
 - for [21](#)
 - synchronizing information
 - and [19](#)
 - troubleshooting [203](#)
 - uninstalling [211](#)
 - updating [201](#)
- software conflicts [211](#)
- songlists. *See* playlists
- songs. *See* music
- Sort by check box [146](#)
- Sort by Date command [91](#)
- Sort by Name command [91](#)
- Sort command [91](#)
- sorting
 - messages [83](#)
 - sorting messages [91](#)
 - sorting tasks [146](#)
- Sound & Alerts Preferences
 - screen [140, 183](#)
- Sound Off [9](#)
- Sound Off position (ringer) [44, 183](#)
- Sound On position (ringer) [183](#)
- sound preferences [140](#)
- sounds [141, 183](#)
- Sounds button [183](#)
- Space key [30](#)
- speaker [8](#)
- speakerphone [46, 47, 216](#)
- special characters [31, 32, 89](#)
- specifications [235](#)
- speech-impaired services [67](#)
- speed-dialing buttons [41](#)
- Spkr-phone button [46](#)
- spreadsheets [73, 80, 149](#)
- Start With pick list [100](#)
- static [217, 219](#)
- statistical functions [159](#)
- statistical information [163](#)
- status icons (email) [82](#)
- status icons (phone) [68–71](#)
- stereo adapters [56, 123](#)
- stereo headphones [123](#)
- Sto button (calculator) [159](#)

- stopping
 - music playback [127](#)
 - video recording [115](#)
 - voice memo playback [152](#)
 - storage solutions [155](#)
 - storage space [17](#)
 - storing
 - information [17](#), [155](#), [175](#), [224](#)
 - music files [126](#)
 - notes [151](#)
 - photos [111](#), [113](#)
 - smartphone [7](#), [8](#)
 - videos [111](#), [114](#)
 - streaming files [102](#)
 - style sheets [98](#), [105](#)
 - stylus [8](#), [25](#), [26](#), [29](#)
 - submitting web forms [98](#)
 - support (Palm) [3](#)
 - support (wireless service provider) [3](#)
 - symbols [31](#), [32](#), [89](#)
 - Sync automatically check box [85](#)
 - sync button [20](#), [22](#), [125](#)
 - sync cable [11](#), [15](#), [20](#)
 - sync. *See* synchronization; synchronizing
 - synchronization
 - ActiveSync and [87](#)
 - Bluetooth devices and [106](#)
 - device names and [18](#)
 - overview [155](#)
 - preparing for [15](#)
 - recommendations for [21](#)
 - removing applications and [163](#)
 - selecting applications for [168–171](#)
 - setting default application for [188](#)
 - troubleshooting [208–215](#)
 - upgrading and [18](#)
 - synchronization applications (third-party) [205](#), [209](#), [212](#)
 - synchronization software [15](#), [19](#), [203](#)
 - synchronizing
 - Calendar events [134](#), [174](#)
 - contacts [131](#), [174](#)
 - dates and time [196](#)
 - email [174](#)
 - information [15](#), [19](#), [21](#), [168–174](#), [212](#)
 - photos and videos [122](#)
 - time zones [196](#)
 - with Bluetooth devices [171](#), [172](#)
 - with Microsoft Exchange ActiveSync [174](#)
 - with Microsoft Outlook [169](#)
 - system colors [186](#)
 - system dates and time [141](#), [196](#)
 - system errors [211](#), [218](#), [226](#)
 - system requirements (PCs) [15](#)
 - system resets [201](#), [204](#), [218](#), [226](#)
 - system sounds [44](#), [183–184](#)
 - System Volume pick list [183](#)
- ## T
- taking pictures [113](#), [223](#)
 - Tap and Drag check box [105](#)
 - tapping [25](#), [26](#), [27](#), [29](#), [208](#)
 - Task Details dialog box [143](#)
 - tasks
 - See also* events; Tasks application
 - adding [143](#)
 - assigning to attachments [82](#)
 - checking off [144](#)

- deleting 146
- displaying 134, 139, 145, 146
- marking as private 144
- prioritizing 143, 146
- setting alarms for 144, 146
- setting preferences for 146
- viewing due dates for 145, 146
- Tasks application
 - changing fonts for 184
 - opening 143
 - synchronizing information in 21
- Tasks button 143
- Tasks list 27, 134, 144, 145, 146
- Tasks Preferences screen 146
- TDD devices 67
- technical support (Palm) 3
- technical support (wireless service provider) 3
- telecommunications devices 67
- telephone calls. *See* phone; phone calls
- temperature conversions 159
- text
 - copying 103
 - entering 30, 151
 - finding 103, 157
 - highlighting 27, 103
 - resizing 98
 - selecting 27, 105
 - viewing against photos 139
- text fields 26, 29
- text message icon 94
- text messages
 - See also* messages
 - addressing 88
 - checking status of 70, 71
 - containing links 90
 - creating 88–89
 - deleting 91
 - dialing from 41
 - retrieving 71, 89
 - selecting alert tones for 93
 - sending 44, 88, 89, 91
 - setting priority of 89
 - special characters and 89
 - troubleshooting 220
- text messaging service 1
- text messaging services 220
- Text Telephone devices 67
- third-party applications
 - caution for 188, 201
 - compatibility with 16
 - deleting 17, 224
 - getting help with 162
 - installing 201, 224
 - reinstalling 202, 205
 - searching in 157
 - transferring to expansion cards 17
 - troubleshooting 25, 204, 225–226
- third-party utilities 17, 195
- third-party VPN client software 198
- three-way calling 49, 50, 51
- Thumbnail View 117, 119, 122
- TIF files 117
- time
 - displaying video recording 114
 - scheduling events and 135, 138
 - setting system 196
 - synchronizing 196
 - viewing 141
- time bars 139

- time formats 185
 - time preferences 196
 - time slots (calendar) 139
 - Time Zone pick list 135
 - time zones 136, 196, 214
 - Timed Events check box 140
 - timestamps 93
 - tips 2
 - Tips command 2
 - to do items. *See* tasks
 - toolbars 103, 118
 - touchscreen. *See* screen
 - Touchscreen Preferences
 - screen 186
 - transmitting location 67
 - Trash folder 83
 - travel alarm 142
 - Treo 755p smartphone. *See* smartphone
 - trigonometric functions 159
 - troubleshooting 3, 199
 - Trusted Device list 106, 108, 165
 - trusted devices 106
 - See also* partnerships
 - Trusted Devices button 107
 - trusted pairs. *See* partnerships
 - TTY devices 67
 - TTY icon 68
 - TTY/TDD Mode icon 70
 - TTY/TDD pick list 67
 - turning on or off
 - Caps Lock 31
 - keyboard backlight 30
 - Keyguard 37, 190
 - microphone 116
 - phone 37, 38
 - screen 37, 197, 218
 - smartphone 10
 - speakerphone 46
 - Typing starts contacts search
 - option 61
- U**
- unauthorized users 189
 - Unfiled category 166, 168
 - uninstalling
 - applications 162
 - Palm desktop software 211
 - third-party applications 204
 - Unknown Caller pick list 62
 - unlocking
 - the keyboard 190
 - the phone 191, 192
 - Treo smartphone 192
 - unread messages 71, 94, 134, 139
 - untimed events 136, 137, 140
 - Untimed Events check box 140
 - updating
 - application software 201
 - information 15, 21, 155
 - upgrades 16–18, 53, 211
 - troubleshooting 201–202
 - uploading music files 125
 - uppercase letters 30
 - urgent messages 94
 - URLs 90, 104
 - See also* web links
 - USB hub 20
 - USB ports 20
 - Use color for pick list 93
 - user discussion groups 3
 - user folders 202, 209, 229
 - User Guide* 2
 - usernames 77
- V**
- VersaMail application
 - accessing email and 75, 220

- adding attachments from 79–80
- creating email messages from 78
- customizing 84–87
- displaying attachments with 81
- documentation for 75
- Exchange ActiveSync
 - accounts and 87
- opening 33
- overview 75
- responding to messages from 82
- setting up accounts for 76, 77
- sorting messages with 83
- switching accounts from 84
- Version button 164
- version numbers 164
- Vibrate pick list 62, 63, 140
- vibrating alarm 62, 63, 140
- video albums 115, 117, 120
- video file types 102, 118
- video recording screen 114
- Video Settings screen 116
- videos
 - adding to albums 120
 - adjusting volume for 115
 - attaching to email 79, 115
 - backing up 122
 - copying 119
 - deleting 115, 122
 - displaying information
 - about 121
 - downloading 102
 - grouping 117
 - jumping to specific sections of 116
 - pausing 116, 118
 - playing 102, 115, 118
 - recording 114
 - removing from albums 120, 121
 - saving 115
 - sending 115, 119
 - setting default size of 116
 - setting preferences for 116
 - storing 111
 - viewing 116, 118, 122
- View By pick list 187
- viewing
 - alerts 157
 - alternate characters 32
 - application information 163
 - application menus 28
 - applications 187
 - attachments 81
 - bookmarks 100
 - connection status 69, 220
 - contacts information 41
 - current date and time 141
 - due dates 145, 146
 - email messages 81
 - error messages 226
 - event categories 140
 - events 61, 134, 139, 140
 - items in pick lists 29
 - on-device guide 2
 - overdue tasks 134
 - personal calendar 134
 - photos 116, 117, 122
 - private entries 194
 - Quick Tour 2
 - signal strength 69
 - slide shows 118
 - tasks 139, 145, 146
 - unread messages 71, 134, 139
 - video clips 116, 118, 122
 - video recording time 114
 - voicemail messages 69
 - web addresses 104
 - web pages 97, 99

virtual private networks
(VPNs) 198

Visibility pick list 108, 165

Vista 3, 16, 201, 203

voice captions

adding 114, 121

background music and
119

playing 117

Voice Memo application 147,
151–152

Voice Memo list 152

voice memos 152

voice quality 216

voicemail

checking 69

retrieving messages 45,
69

sending calls to 44

setting alert tones for 63
setting up 44

Voicemail Alert pick list 63

Voicemail button 45

Voicemail icon 45, 69

voicemail page icon 94

Voicemail screen 45

volume

alarm tones 140

alert tones 63

music 127

phone 14, 64, 216

ringer 64

ringtones 62

video clips 115

voice memos 153

Volume button 7, 14, 64

volume conversions

(calculator) 159

Volume pick list 62, 63

volume preferences 183

VPN client software 198

W

waking up screen 37

wallpaper 39, 60, 121

warranty 2

web addresses 99, 104

See also URLs; web links
web browser

accessing email providers
and 75

auto-completion options
for 104

beaming from 167

bookmarking and 99, 101

customizing 104–106

deleting cookies for 105

dialing phone numbers
from 42, 103

hiding toolbar in 103

installing applications from
160

opening 33, 97

overview 95, 97

restrictions for 97

selecting default views for
100

selecting home page for
104

streamed content and 102

troubleshooting 221

unsupported elements for
222

web browser application.

See Blazer web browser;
web browser

web browser icons 98

web browsing

See also web browser
from smartphone 38, 97

memory consumption and
224

requirements for 1

secure sites and 97, 98

selecting default
application for 188

- troubleshooting 220–223
- web browsing service 1
- web forms 98
- Web icon 97
- web links
 - assigning to favorite buttons 54
 - creating email from 97
 - highlighting 27
 - Palm online support 3
 - selecting 98
- web pages
 - accessing 97, 99, 221
 - bookmarking 99–101
 - caching 105, 224
 - changing fonts for 98, 184
 - changing layouts for 98
 - copying text from 103
 - dialing from 41
 - disabling images for 98, 105
 - displaying 97, 99
 - finding text on 103
 - loading 105, 222
 - locating most recent 99
 - opening from text messages 90
 - opening History list for 103
 - refreshing 98, 221
 - saving 100
 - scrolling 98, 105
 - selecting text on 103, 105
 - sending email from 97
 - setting initial view for 104
 - setting preferences for 104–106
 - viewing offline 100
- web-based email 75
- websites 38
 - See also* web browsing
 - accessing 97, 99, 106, 223
 - displaying addresses for 104
 - displaying recently visited 99
 - downloading files from 101
 - entering addresses for 99
 - opening Palm online support 3
 - redirectors and 222
 - transactions and 223
 - Week View 134
 - weekly events 134
 - weight conversions 159
- Wide Page Mode 98
- Windows systems
 - installing applications from 161
 - installing to expansion cards and 162
 - listening to music and 123
 - removing applications and 163
 - requirements for 15
 - sending email and 84
 - synchronization defaults for 21
 - synchronizing with 169, 173, 210, 211
 - transferring music from 123, 126
- Windows Vista 3, 16, 201, 203
- wireless accounts. *See* accounts; wireless service provider
- wireless connections 95, 164
- wireless devices. *See* Bluetooth devices; hands-free devices; smartphone
- wireless features 13, 225

wireless service provider
customer service for 3
onscreen message 68
preset bookmarks and 101
smartphone requirements
for 1
technical support for 3
troubleshooting Internet
connections and 221
voicemail services and 44

wizards 160
WMA formats 123
Word documents 73, 80,
149
word searches 157
words, selecting 27
World Clock 141–142
World Clock icon 142
world map 141
Wrap Search check box 103

X
XLS files 149

Y
Year View 134

Z
ZIP files 160, 161
zoom settings (camera) 113

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>