






# PHILIPS

AQ 6524 Stereo Radio Cassette Player .

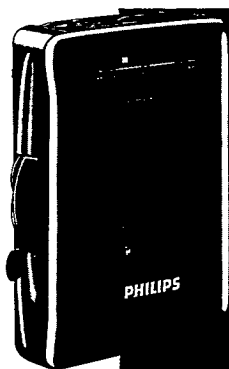

## **DK Danmark**

Typeskiltet findes på bagsiden af apparaten og serienummeret i batterirummet.

Dette produkt overholder kravene til radio-interferens af Europæisk Fællesmarked.

## **N Norge**

Typeskiltet finnes på apparatens bakside.

## **MEX México** **NOM**

Es necesario que lea cuidadosamente su instructivo de manejo.

## **AUS Australia**

Guarantee.....page 22

## **NZ New Zealand**

Guarantee.....page 23

**English .....page 4** **GE**

**Français .....page 6** **F**

**Deutsch .....Seite 8** **D**

**Nederlands ..pag. 10** **NL**


**Español.....página 12** **E**

**Italiano .....pagina 14** **I**

**Svenska .....sida 16** **S**

**Suomi .....sivu 18** **SF**

**Português ....pag. 20** **P**

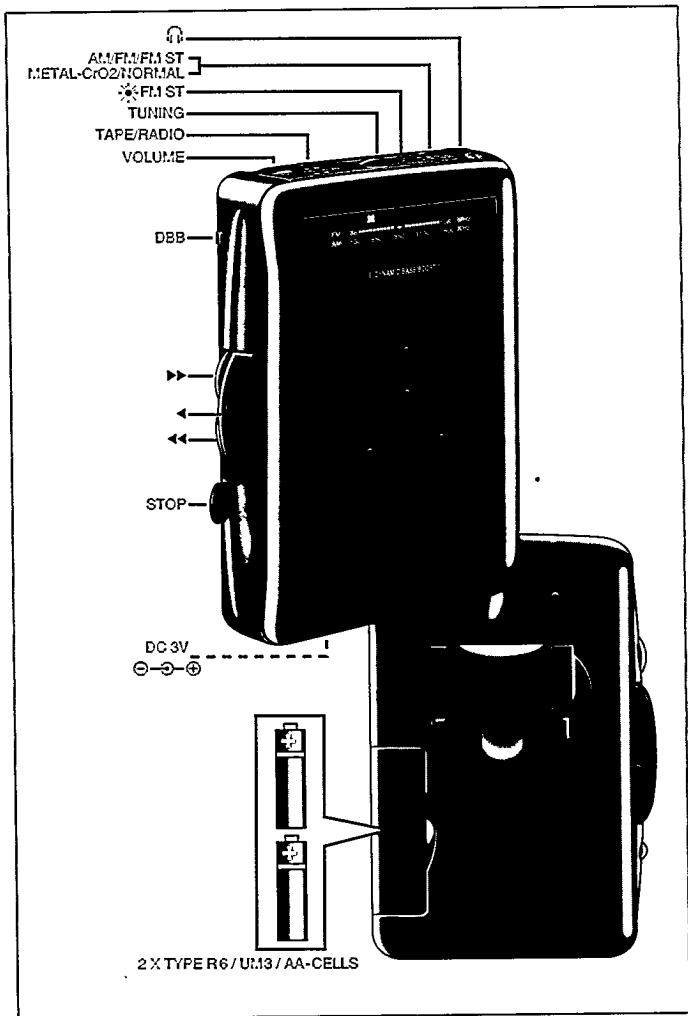

# Radio

GB

## SUPPLY

---

### Batteries

Insert as indicated two alkaline batteries, type R6, UM3 or AA. Remove the batteries if exhausted or if they are not to be used for a long time.

### Mains adapter

Connect a mains adapter to the 3V DC socket.

The adapter must supply 3V DC  $\oplus$   $\ominus$ , minus pole  $\ominus$  to the 1.3 mm centre pin of the 3.4 mm socket.

## RADIO RECEPTION

---

- Set **TAPE/RADIO** to **RADIO**.
- Connect headphones to  $\Omega$ .
- Set **AM/FM/FM ST** to **AM (=MW)**, **FM (mono)** or to **FM ST (stereo)**.
- Tune to the desired radio station using **TUNING**.  
The headphone lead will function as FM-aerial.
- Adjust the sound with **VOLUME** and **DBB (bass)**.
- If **AM/FM/FM ST** is in position **FM ST**, you will hear FM stereo programmes in stereo. The **FM ST \*** indicator will light up then. The disturbing noise due to a weak FM stereo signal can be suppressed by setting **AM/FM/FM ST** to **FM (mono)**. The **FM ST \*** indicator then goes out and you hear the programme in mono.
- The set is switched off when **TAPE/RADIO** is in position **TAPE** and no cassette player button is pressed.

# Cassette Player

## PLAYING BACK CASSETTES

---

GB

- Set **TAPE/RADIO** to **TAPE**.
- Connect headphones to  $\text{H}$ .
- Open the cassette holder and insert the cassette in it with the open part facing the buttons.
- Set the **METAL-CrO<sub>2</sub> / NORMAL** selector to:
  - **METAL-CrO<sub>2</sub>** for **CHROME (IEC II)** or **METAL (IEC VI)** cassettes
  - **NORMAL** for **NORMAL (IEC I)** cassettes
- To start playback, press  $\blacktriangleleft$ .
- Adjust the sound with **VOLUME** and **DBB (bass)**.
- To stop, press **STOP** and the set is switched off.
- At the end of the tape the  $\blacktriangleleft$  button is automatically released and the set is switched off.
- **Fast Winding:** Press  $\blacktriangleleft$  or  $\blacktriangleright$ . Press **STOP** to stop fast winding and also when the tape has reached it's end.

## MAINTENANCE

---

- Clean the magnetic head after every 50 hours of operation or, on average, once a month by playing through a cleaning cassette.
- Do not expose the set and cassettes to rain, moisture, sand, or to excessive heat from e.g. heating equipment or in motor cars parked in the sun.

## USE YOUR HEAD WHEN USING HEADPHONES

---

- **Hearing safety:** Do not play your headphones at a high volume. Hearing experts advise that continuous use at high volume can permanently damage hearing.
- **Traffic safety:** Do not use headphones while driving a vehicle. It may create a traffic hazard and it's illegal in many countries. Even if your headphones are an open-air type designed to let you hear outside sounds, do not turn up the volume so high that you cannot hear what is going on around you.

*The type number will be found at the bottom of the set and the serial number in the battery compartment.*

*This set complies with the radio interference requirements of the European Community.*



# Australia

## Guarantee and Service valid for Australia

The benefits given to the purchaser by this warranty are in addition to all other rights and remedies, which, under the Trade Practices Act or other Commonwealth or State law, the purchaser or owner has in respect of the product.

The Philips product carries the following warranties:

C-series HiFi-systems 12 months, Compact Disc Players: 12 months, Home Audio Systems: 6 months, Clock radios, portable radios, cassette recorders, cassette players and radio recorders: 90 days.

Any defect in materials or workmanship occurring within the specified period from the date of delivery, will be rectified free of charge by the retailer from whom this product was purchased.

**Note:** Please retain your purchase docket to assist prompt service.

### **Conditions of this warranty**

1. All claims for warranty service must be made to the retailer from whom this product was purchased. All transport charges incurred in connection with warranty service or replacement will be paid by the purchaser.
2. These warranties do not cover batteries and extend only to defects in materials or workmanship occurring under normal use of the product where operated in accordance with our instructions.

**Philips Consumer Products Division,  
Technology Park, Figtree Drive, Australia Centre,  
Homebush 2140, New South Wales**



# **(NZ) New Zealand**

## **Guarantee and Service valid for New Zealand**

Thank-you for purchasing this quality Philips product. Philips New Zealand Ltd guarantees this product against defective components and faulty workmanship for a period of 12 months. Any defect in materials or workmanship occurring within 12 months from the date of purchase subject to the following conditions will be rectified free of charge by the retailer from whom this product was purchased.

### **Conditions**

1. The product must have been purchased in New Zealand. As proof of purchase, retain the original sales docket indicating the date of purchase.
2. The guarantee applies only to faults caused by defective components, or faulty workmanship on the part of the manufacturer.
3. The guarantee does not cover failures caused by misuse, neglect, normal wear and tear, accidental breakage, use on the incorrect voltage, use contrary to operating instructions, or unauthorised modification to the product or repair by an unauthorised technician.
4. Reasonable evidence (in the form of a sales docket) must be supplied to indicate that the product was purchased no more than 12 months prior to the date of your claim.
5. In the event of a failure, Philips shall be under no liability for any injury, or any loss or damage caused to property or products other than the product under guarantee.

This guarantee does not prejudice your rights under common law and statute, and is in addition to the normal responsibilities of the retailer and Philips.

### **How to claim**

Should your Philips product fail within the guarantee period, please return it to the retailer from whom it was purchased. In most cases the retailer will be able to satisfactorily repair or replace the product. However, should the retailer not be able to conclude the matter satisfactorily, or if you have other difficulties claiming under this guarantee, please contact

**The Guarantee Controller, Philips New Zealand Ltd.**

✉ **P.O. Box 41.021 Auckland**

☎ **(09) 84 94 160**

fax ☎ **(09) 84 94 160**

### **Declaración de conformidad con normas**

El que suscribe, en nombre y representación de:  
**ACTEAM Hong Kong, Division of Philips China  
Hong Kong Group Company Limited**

Declara, bajo su propia responsabilidad, que el  
equipo: **Radio tocasetes estéreo**  
fabricado por: **ACTEAM Hong Kong**  
en: **Far East**  
marca: **Philips**  
modelos: **AQ 6524**

Objeto de esta declaración, cumple con la normativa  
siguiente: Reglamento sobre Perturbaciones  
Radioeléctricas, Real Decreto 138/1989, Anexo  
V. Hecho en: Hong Kong, 01-07-1993

Firma:



Nombre: **C.S. Lau**  
Función: **Quality Assurance Manager**



Printed in Hong Kong

TC text/RR0793/1

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>