

Pioneer *sound.vision.soul*

Operating Instructions



HDMI



ELITE

DVD Player

DV-58AV

Thank you for buying this Pioneer product.

Please read through these operating instructions so you will know how to operate your model properly.

After you have finished reading the instructions, put them away in a safe place for future reference.

IMPORTANT



The lightning flash with arrowhead, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

CAUTION

**RISK OF ELECTRIC SHOCK
DO NOT OPEN**

CAUTION:

TO PREVENT THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

D1-4-2-3_En

IMPORTANT NOTICE – THE SERIAL NUMBER FOR THIS EQUIPMENT IS LOCATED IN THE REAR. PLEASE WRITE THIS SERIAL NUMBER ON YOUR ENCLOSED WARRANTY CARD AND KEEP IN A SECURE AREA. THIS IS FOR YOUR SECURITY.

D1-4-2-6-1_En

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

D8-10-1-2_En

CAUTION : USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

CAUTION : THE USE OF OPTICAL INSTRUMENTS WITH THIS PRODUCT WILL INCREASE EYE HAZARD. D6-8-2-1_En

Information to User

Alteration or modifications carried out without appropriate authorization may invalidate the user's right to operate the equipment.

D8-10-2_En

WARNING – TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

D1-4-2-1_En

WARNING: Handling the cord on this product or cords associated with accessories sold with the product will expose you to lead, a chemical known to the State of California and other governmental entities to cause cancer and birth defects or other reproductive harm.

Wash hands after handling

D36-P4_En

This product contains mercury. Disposal of this material may be regulated due to environmental considerations. For disposal or recycling information, please contact your local authorities or the Electronics Industries Alliance : www.eiae.org.

K057_En

IMPORTANT SAFETY INSTRUCTIONS

READ INSTRUCTIONS — All the safety and operating instructions should be read before the product is operated.

RETAIN INSTRUCTIONS — The safety and operating instructions should be retained for future reference.

HEED WARNINGS — All warnings on the product and in the operating instructions should be adhered to.

FOLLOW INSTRUCTIONS — All operating and use instructions should be followed.

CLEANING — The product should be cleaned only with a polishing cloth or a soft dry cloth. Never clean with furniture wax, benzine, insecticides or other volatile liquids since they may corrode the cabinet.

ATTACHMENTS — Do not use attachments not recommended by the product manufacturer as they may cause hazards.

WATER AND MOISTURE — Do not use this product near water — for example, near a bathtub, wash bowl, kitchen sink, or laundry tub; in a wet basement; or near a swimming pool; and the like.

ACCESSORIES — Do not place this product on an unstable cart, stand, tripod, bracket, or table. The product may fall, causing serious injury to a child or adult, and serious damage to the product. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the product. Any mounting of the product should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer.

CART — A product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn.



VENTILATION — Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating, and these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.

POWER SOURCES — This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company.

LOCATION — The appliance should be installed in a stable location.

NONUSE PERIODS — The power cord of the appliance should be unplugged from the outlet when left un-used for a long period of time.

GROUNDING OR POLARIZATION

- If this product is equipped with a polarized alternating current line plug (a plug having one blade wider than the other), it will fit into the outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.
- If this product is equipped with a three-wire grounding type plug, a plug having a third (grounding) pin, it will only fit into a grounding type power outlet. This is a safety feature. If you are unable to insert the plug into the outlet, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the grounding type plug.

POWER-CORD PROTECTION — Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the product.

OUTDOOR ANTENNA GROUNDING — If an outside antenna or cable system is connected to the product, be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and built-up static charges. Article 810 of the National Electrical Code, ANSI/NFPA 70, provides information with regard to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode. See Figure A.

LIGHTNING — For added protection for this product during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lightning and power-line surges.

POWER LINES — An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.

OVERLOADING — Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.

OBJECT AND LIQUID ENTRY — Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.

SERVICING — Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

DAMAGE REQUIRING SERVICE — Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:

- When the power-supply cord or plug is damaged.
- If liquid has been spilled, or objects have fallen into the product.
- If the product has been exposed to rain or water.
- If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
- If the product has been dropped or damaged in any way.
- When the product exhibits a distinct change in performance — this indicates a need for service.

REPLACEMENT PARTS — When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.

SAFETY CHECK — Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.

WALL OR CEILING MOUNTING — The product should not be mounted to a wall or ceiling.

HEAT — The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.

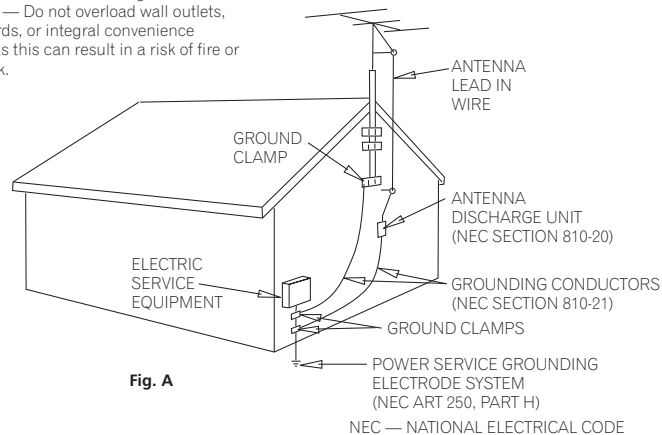


Fig. A

NEC — NATIONAL ELECTRICAL CODE

D1-4-2-2_En

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la Classe B est conforme à la norme NMB-003 du Canada.

D8-10-1-3_EF

CAUTION: This product satisfies FCC regulations when shielded cables and connectors are used to connect the unit to other equipment. To prevent electromagnetic interference with electric appliances such as radios and televisions, use shielded cables and connectors for connections.

D8-10-3a_En



This product is for general household purposes. Any failure due to use for other than household purposes (such as long-term use for business purposes in a restaurant or use in a car or ship) and which requires repair will be charged for even during the warranty period.

K041_En

POWER-CORD CAUTION

Handle the power cord by the plug. Do not pull out the plug by tugging the cord and never touch the power cord when your hands are wet as this could cause a short circuit or electric shock. Do not place the unit, a piece of furniture, etc., on the power cord, or pinch the cord. Never make a knot in the cord or tie it with other cords. The power cords should be routed such that they are not likely to be stepped on. A damaged power cord can cause a fire or give you an electrical shock. Check the power cord once in a while. When you find it damaged, ask your nearest PIONEER authorized service center or your dealer for a replacement.

S002_En

This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

This product includes FontAvenue® fonts licenced by NEC corporation. FontAvenue is a registered trademark of NEC Corporation.



Dear Customer:

Selecting fine audio equipment such as the unit you've just purchased is only the start of your musical enjoyment. Now it's time to consider how you can maximize the fun and excitement your equipment offers. This manufacturer and the Electronic Industries Association's Consumer Electronics Group want you to get the most out of your equipment by playing it at a safe level. One that lets the sound come through loud and clear without annoying blaring or distortion-and, most importantly, without affecting your sensitive hearing.

Sound can be deceiving. Over time your hearing "comfort level" adapts to higher volumes of sound. So what sounds "normal" can actually be loud and harmful to your hearing. Guard against this by setting your equipment at a safe level BEFORE your hearing adapts.

To establish a safe level:

- Start your volume control at a low setting.
- Slowly increase the sound until you can hear it comfortably and clearly, and without distortion.

Once you have established a comfortable sound level:

- Set the dial and leave it there.

Taking a minute to do this now will help to prevent hearing damage or loss in the future. After all, we want you listening for a lifetime.

We Want You Listening For A Lifetime

Used wisely, your new sound equipment will provide a lifetime of fun and enjoyment. Since hearing damage from loud noise is often undetectable until it is too late, this manufacturer and the Electronic Industries Association's Consumer Electronics Group recommend you avoid prolonged exposure to excessive noise. This list of sound levels is included for your protection.

Decibel Level Example

30	Quiet library, soft whispers
40	Living room, refrigerator, bedroom away from traffic
50	Light traffic, normal conversation, quiet office
60	Air conditioner at 20 feet, sewing machine
70	Vacuum cleaner, hair dryer, noisy restaurant
80	Average city traffic, garbage disposals, alarm clock at two feet.

THE FOLLOWING NOISES CAN BE DANGEROUS UNDER CONSTANT EXPOSURE

90	Subway, motorcycle, truck traffic, lawn mower
100	Garbage truck, chain saw, pneumatic drill
120	Rock band concert in front of speakers, thunderclap
140	Gunshot blast, jet plane
180	Rocket launching pad

Information courtesy of the Deafness Research Foundation.



S001_En

Contents

01 Before you start

Features	6
What's in the box	7
Hints on installation	7
Disc/content format playback compatibility	8

02 Connections

Rear panel	10
Easy connections	11
Connecting using the S-Video output	12
Connecting using the component video output	12
Connecting to an AV receiver	13
Controlling this player via another Pioneer component	14
Connecting using HDMI	14
Changing the output resolution	15

03 Controls and displays

Front panel	16
Display	17
Remote control	18
Setting up the remote to control your TV	19

04 Getting started

Switching on and setting up	20
Using the on-screen displays	21
Setting up the player for your TV	21
Setting the language of this player's on-screen displays	21
Playing discs	22

05 Playing discs

Scanning discs	25
Playing in slow motion	25
Frame advance/frame reverse	25
Viewing a JPEG slideshow	25
Browsing DVD or Video CD disc with the Disc Navigator	26
Browsing WMA, MP3, MPEG-4 AAC, DivX video, WMV and JPEG files with the Disc Navigator	26
Looping a section of a disc	27
Using repeat play	27
Using random play	28
Creating a program list	28
Searching a disc	29
Switching subtitles	29
Switching audio language/channels	29
Zooming the screen	29
Switching camera angles	30
Displaying disc information	30

06 Audio Settings and Video Adjust menus

Audio Settings menu	31
Video Adjust menu	31

07 Initial Settings menu

Using the Initial Settings menu	32
Digital Audio Out settings	32
Video Output settings	33
Language settings	33
Display settings	34
Options settings	34
Speakers settings	34
Parental Lock	35
DTS Downmix	35
About DivX® VOD content	36
Audio Output Mode	36
Speaker Distance	39
Speaker Installation	39

08 Additional information

Taking care of your player and discs	40
Screen sizes and disc formats	41
Resetting the player	41
DVD-Video regions	41
Selecting languages using the language code list	41
Troubleshooting	42
Glossary	45
Language code list	46
Country/Area code list	46
Specifications	47

Before you start

Features

• HDMI digital interface

The HDMI (High-Definition Multimedia Interface) interconnect provides high quality digital audio and video, all from a single user-friendly connector. HDMI is the first consumer electronics interface to support uncompressed standard, enhanced, or high-definition video plus standard to multi-channel surround sound audio, all using one interface. You can easily connect to a HDMI-equipped AV receiver or audiovisual device for high quality audio and video, and communication between the video source and (DTV) players, set-top boxes, and other audiovisual devices is also supported.

- *HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.*

• HDMI Control

By connecting this unit to a Pioneer plasma display or AV system (amplifier or AV receiver etc.) with an HDMI cable, you can control this unit from the connected plasma display, as well as have the connected plasma display or AV system automatically change inputs in response to this unit starting playback or having the GUI screen (ex. Disc Navigator) displayed (known as the Auto-select function). The connected plasma display can thereby have its power turned from off to on by this function.

You can also have this unit turn on automatically when you control this unit from a connected plasma display that is turned on (Simultaneous power function).

Additionally, when the language information from a connected plasma display is received, you can have this unit's on-screen display language change automatically to that of the plasma display (only when playback is stopped and GUI screen is not displayed).

Refer to your plasma display's operating manual for more information regarding how your plasma display transmits language information.

For more information about which operations can be carried out by connecting via HDMI cable, refer to the operating manual for your plasma display or AV system.

• DVD-Audio and SACD compatible

Experience the super high-quality audio performance of DVD-Audio and Super Audio CD (SACD).

The on-board 24-bit/192kHz DAC means that this player is fully compatible with high sampling-rate discs, capable of delivering exceptional sound quality in terms of dynamic range, low-level resolution and high frequency detail.

In addition, with SACD playback, you can select which part of the disc you want to hear (stereo audio, multi-channel audio and, for hybrid SACDs, standard CD audio) with the simple press of a button on the front panel.

• Built-in Dolby Digital and DTS decoding with multichannel outputs



This player features multichannel analog outputs for connection to an AV amplifier to give you stunning surround sound from Dolby Digital, DTS and multichannel DVD-Audio discs.

- *Manufactured under license from Dolby Laboratories. "Dolby", "Pro Logic", and the double-D symbol are trademarks of Dolby Laboratories.*
- *"DTS" is a registered trademark of DTS, Inc. and "DTS 96/24" is a trademark of DTS, Inc.*

• Pure Audio listening

The Pure Audio feature allows you to listen to analog audio sources with the video and digital outputs disabled, and the front panel display switched off. This is particularly useful when listening to high-quality audio formats such as DVD-Audio and Super Audio CD.

• PureCinema Progressive Scan video

When connected to a progressive scan-compatible TV or monitor using the component video outputs, you can enjoy extremely stable, flicker free images, with the same frame refresh rate as the original movie.

• Analog video signal output capability in HD (High Definition)

The analog video signals output from the **COMPONENT VIDEO OUT** can be output as HD signals. JPEG files are output in JPEG HD format. DivX video/WMV signals in SD (Standard Definition) are converted into HD for output.

• DivX® video compatibility



See *DivX video compatibility* on page 9.

- *DivX, DivX Ultra Certified, and associated logos are trademarks of DivX, Inc. and are used under license.*

• MP3, WMA and MPEG-4 AAC compatibility

See *Compressed audio compatibility* on page 8.

• JPEG compatibility

See *JPEG file compatibility* on page 9.

• WMV compatibility

See *CD-R/-RW compatibility* on page 8 or *About WMV* on page 9.

• Energy saving design

An auto power-off function switches the player into standby if not used for about 30 minutes.

What's in the box


Please confirm that the following accessories are in the box when you open it.

- Remote control
- AA/R6P dry cell batteries x 2
- Audio cable (red/white plugs)
- Video cable (yellow plug)
- Power cable
- Operating instructions
- Warranty card

Putting the batteries in the remote

• Open the battery compartment cover and insert the batteries as shown.

Use two AA/R6P batteries and follow the indications (+, -) inside the compartment. Close the cover when you're finished.

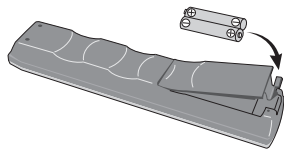

Important

Incorrect use of batteries can result in hazards such as leakage and bursting. Please observe the following:

- Don't mix new and old batteries together.
- Don't use different kinds of battery together — although they may look similar, different batteries may have different voltages.
- Make sure that the plus and minus ends of each battery match the indications in the battery compartment.
- Remove batteries from equipment that isn't going to be used for a month or more.
- When disposing of used batteries, please comply with governmental regulations or environmental public instruction's rules that apply in your country/area.
- Do not use or store batteries in direct sunlight or other excessively hot place, such as inside a car or near a heater. This can cause batteries to leak, overheat, explode or catch fire. It can also reduce the life or performance of batteries.

Hints on installation

We want you to enjoy using this product for years to come, so please use the following guidelines when choosing a suitable location:

Do...

- Use in a well-ventilated room.
- Place on a solid, flat, level surface, such as a table, shelf or stereo rack.

Don't...

- Use in a place exposed to high temperatures or humidity, including near radiators and other heat-generating appliances.
- Place on a window sill or a place where the player will be exposed to direct sunlight.
- Use in an excessively dusty or damp environment.
- Place directly on top of an amplifier, or other component in your stereo system that becomes hot in use.
- Use near a television or monitor as you may experience interference — especially if the television uses an indoor antenna.
- Use in a kitchen or other room where the player may be exposed to smoke or steam.
- Use on a thick rug or carpet, or cover with cloth — this may prevent proper cooling of the unit.
- Place on an unstable surface, or one that is not large enough to support all four of the unit's feet.

01 Disc/content format playback compatibility

This player is compatible with a wide range of disc types (media) and formats. Playable discs will generally feature one of the following logos on the disc and/or disc packaging. Note however that some disc types, such as recordable CD and DVD, may be in an unplayable format — see below for further compatibility information.

Please also note that recordable discs cannot be recorded using this player.



DVD-Audio



DVD-Video



DVD-R



DVD-RW



Audio CD



Video CD



CD-R



CD-RW





SUPER AUDIO CD

Super Audio CD



Fujicolor CD



- This unit will play DVD+R/+RW discs.
-  is a trademark of DVD Format/Logo Licensing Corporation.
-  is a trademark of FUJIFILM Corporation.
- Also compatible with KODAK Picture CD

About DualDisc playback

A DualDisc is a new two-sided disc, one side of which contains DVD content video, audio, etc. while the other side contains non-DVD content such as digital audio material.

The non-DVD, audio side of the disc is not compliant with the CD audio specification and therefore may not play.

The DVD side of a DualDisc plays in this product. DVD-Audio content will not play.

For more detailed information on the DualDisc specification, please refer to the disc manufacturer or disc retailer.

CD-R/-RW compatibility

- Compatible formats: CD-audio, Video CD, ISO 9660 CD-ROM* containing MP3, WMA, MPEG-4 AAC, JPEG or DivX video/WMV files
* ISO 9660 Level 1 or 2 compliant. CD physical format: Mode1, Mode2 XA Form1. Romeo and Joliet file systems are both compatible with this player.
- Multi-session playback: No
- Unfinalized disc playback: No
- File structure (may differ): Up to 299 folders on a disc; up to 648 folders and files (combined) within each folder

DVD+R/+RW compatibility

Only DVD+R/DVD+RW discs recorded in 'Video Mode (DVD Video Mode)' which have been finalized, can be played back. However, some editing made during the recording may not be played back accurately.

DVD-R/-RW compatibility

- Compatible formats: DVD-Video, Video Recording (VR)*
* Edit points may not play exactly as edited; screen may go momentarily blank at edited points.
- Unfinalized playback: No
- MP3/WMA/MPEG-4 AAC/JPEG or DivX video/WMV file playback on DVD-R/-RW: No

Compressed audio compatibility

- Compatible formats: MPEG-1 Audio Layer 3 (MP3), Windows Media Audio (WMA), MPEG-4 AAC
- Sampling rates: 32 kHz, 44.1 kHz or 48 kHz
- Bit-rates: Any (128 kbps or higher recommended)
- VBR (Variable Bit Rate) MP3/WMA/MPEG-4 AAC playback: No
- WMA lossless encoding compatible: No
- DRM (Digital Rights Management) compatible: No (DRM-protected audio files will *not* play in this player — see also *DRM* in the *Glossary* on page 45)
- File extensions: .mp3, .wma, .m4a (these must be used for the player to recognize MP3, WMA and MPEG-4 AAC files — do not use for other file types)

About MPEG-4 AAC

Advanced Audio Coding (AAC) is at the core of the MPEG-4 AAC standard, which incorporates MPEG-2 AAC, forming the basis of the MPEG-4 audio compression technology. The file format and extension used depend on the application used to encode the AAC file. This unit plays back AAC files encoded by iTunes® bearing the extension '.m4a'. DRM-protected files will not play, and files encoded with some versions of iTunes® may not play, or filenames may display incorrectly.

Apple and iTunes are trademarks of Apple Inc., registered in the U.S. and other countries.

WMA (Windows Media™ Audio) compatibility

This player can playback Windows Media Audio content.

WMA is an acronym for Windows Media Audio and refers to an audio compression technology developed by Microsoft Corporation. WMA content can be encoded by using Windows Media Player for Windows XP, Windows Media Player 9 or Windows Media Player 10 series.

- *Windows Media is a trademark of Microsoft Corporation.*
- *This product includes technology owned by Microsoft Corporation and cannot be used or distributed without a license from Microsoft Licensing, Inc.*

About DivX video

DivX is a media technology created by DivX, Inc. DivX media files contain not only video but also include advanced media features like menus, subtitles, and alternate audiotracks. This player can play DivX videos burned on CD-R/-RW/-ROM discs. Keeping the same terminology as DVD-Video, individual DivX video files are called "Titles". When naming files/titles on a CD-R/-RW disc prior to burning, keep in mind that by default they will be played in alphabetical order.

Displaying external subtitle files

The font sets listed below are available for external subtitle files. You can see the proper font set on-screen by setting the **Subtitle Language** (in *Language settings* on page 33) to match the subtitle file.

This player supports the following language groups:

Group 1	Albanian (sq), Basque (eu), Catalan (ca), Danish (da), Dutch (nl), English (en), Faroese (fo), Finnish (fi), French (fr), German (de), Icelandic (is), Irish (ga), Italian (it), Norwegian (no), Portuguese (pt), Rhaeto-Romanic (rm), Scottish (gd), Spanish (es), Swedish (sv)
Group 2	Albanian (sq), Croatian (hr), Czech (cs), Hungarian (hu), Polish (pl), Romanian (ro), Slovak (sk), Slovenian (sl)
Group 3	Bulgarian (bg), Byelorussian (be), Macedonian (mk), Russian (ru), Serbian (sr), Ukrainian (uk)
Group 4	Hebrew (iw), Yiddish (ji)
Group 5	Turkish (tr)

- Some external subtitle files may be displayed incorrectly or not at all.
- For external subtitle files the following subtitle format filename extensions are supported (please note that these files are not shown within the disc navigation menu): .srt, .sub, .ssa, .smi
- The filename of the movie file has to be repeated at the beginning of the filename for the external subtitle file.
- The number of external subtitle files which can be switched for the same movie file is limited to a maximum of 10.

DivX video compatibility

- Official DivX® Ultra Certified product.
- Plays all versions of DivX® video (including DivX® 6) with enhanced playback of DivX® media files and the DivX® Media Format.
- File extensions: .avi and .divx (these must be used for the player to recognize DivX video files). *Note that all files with the .avi extension are recognized as MPEG4, but not all of these are necessarily DivX video files and therefore may not be playable on this player.*

About WMV

WMV is an acronym for Windows Media Video and refers to a video compression technology developed by Microsoft Corporation. WMV content can be encoded by using Windows Media® Encoder.

- This player is compatible with WMV9 files that are encoded by using the Windows Media® Encoder 9 Series, with .wmv as an extension.
- Compatible with size under 720 x 480 pixels.
- Advanced Profile is not supported.
- DRM-protected video files will not play in this player.

JPEG file compatibility

- Compatible formats: Baseline JPEG and EXIF 2.2* still image files up to a resolution of 3072 x 2048.
*File format used by digital still cameras.
- Progressive JPEG compatible: No
- File extensions: .jpg (must be used for the player to recognize JPEG files—do not use for other file types)

PC-created disc compatibility


Discs recorded using a personal computer may not be playable in this unit due to the setting of the application software used to create the disc. In these particular instances, check with the software publisher for more detailed information.

Discs recorded in packet write mode (UDF format) are not compatible with this player.

Check the DVD-R/-RW or CD-R/-RW software disc boxes for additional compatibility information.

Connections

Rear panel

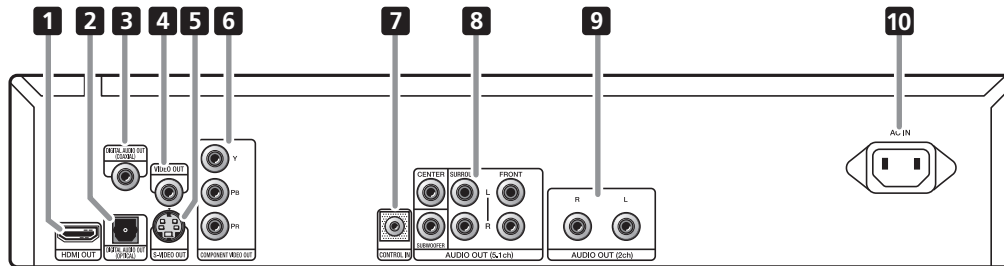

1 HDMI OUT

HDMI output providing a high quality interface for digital audio and video (page 14).

2 DIGITAL AUDIO OUT OPTICAL

Digital optical audio outputs for connection to a PCM, Dolby Digital, and/or DTS-compatible AV receiver (page 13).

3 DIGITAL AUDIO OUT COAXIAL

Digital coaxial audio outputs for connection to a PCM, Dolby Digital, and/or DTS-compatible AV receiver (page 13).

4 VIDEO OUT

Video output (composite) that you can connect to your TV or AV receiver using the supplied video cable (page 11).

5 S-VIDEO OUT


S-Video output that you can use instead of the **VIDEO OUT** jacks (page 12).

6 COMPONENT VIDEO OUT

High quality video output for connection to a TV, monitor or AV receiver that has component video inputs.

Connect using a commercially available three-way component video cable (page 12).

7 CONTROL IN

Use to control this player from the remote sensor of another Pioneer component with a **CONTROL OUT** terminal and bearing the  mark. Connect the **CONTROL OUT** of the other component to the **CONTROL IN** of this player using a mini-plug cord (page 14).

8 AUDIO OUT (5.1ch)

Multi-channel (5.1ch) analog audio outputs for connection to an AV receiver with multi-channel analog audio inputs (page 13).

9 AUDIO OUT (2ch)


Stereo analog audio outputs for connection to your TV, AV receiver or stereo system (page 11).

10 AC IN

Connect the supplied power cord here, then plug into a power outlet.

Important

- Before making or changing any connections, switch off the power and disconnect the power cable from the AC outlet.
- The setup described here is a basic setup that allows you to play discs using just the cables supplied with the player. In this setup, stereo audio is played through the speakers in your TV.
- This player is equipped with copy protection technology. Do not connect this player to your TV via a VCR using audio/video or S-Video cables, as the picture from this player will not appear properly on your TV. (This player may also not be compatible with some combination TV/VCRs for the same reason; refer to the manufacturer for more information.)

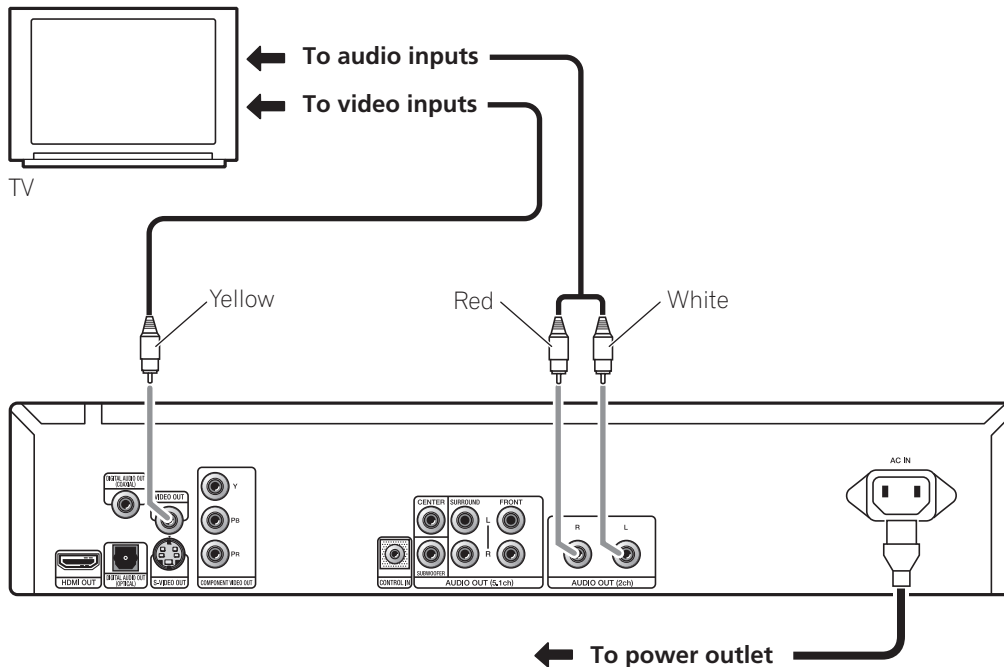

1 Connect the VIDEO OUT and AUDIO OUT (5.1ch) jacks to a set of A/V inputs on your TV.

Use the supplied audio/video cable, connecting the red and white plugs to the audio outputs and the yellow plug to the video output. Make sure you match up the left and right audio outputs with their corresponding inputs for correct stereo sound.

See page 12 if you want to use a component or S-Video cable for the video connection.

2 Connect the supplied AC power cable to the AC IN inlet, then plug into a power outlet.

Note


- Before unplugging the player from the power outlet, make sure you first switch it into standby using either the front panel **⏻** **STANDBY/ON** button, or the remote control, and wait of the **-OFF-** message to disappear from the player's display.
- For the above reasons, do not plug this player into a switched power supply found on some amplifiers and AV receivers.

02 Connecting using the S-Video output

If your TV (or other equipment) has an S-Video input, you can use the S-Video output on this player instead of the standard (composite) output for a better quality picture.

- Use an S-Video cable (not supplied) to connect the S-VIDEO OUT to an S-Video input on your TV (or monitor or AV receiver).


Line up the small triangle above the jack with the same mark on the plug before plugging in.

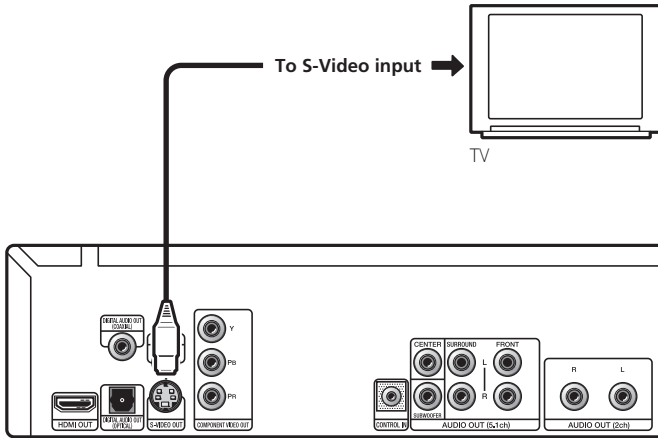

Connecting using the component video output

You can use the component video output instead of the standard video out jack to connect this player to your TV (or other equipment). This should give you the best quality picture from the three types of video output available.

- Use a component video cable (not supplied) to connect the COMPONENT VIDEO OUT jacks to a component video input on your TV, monitor or AV receiver.

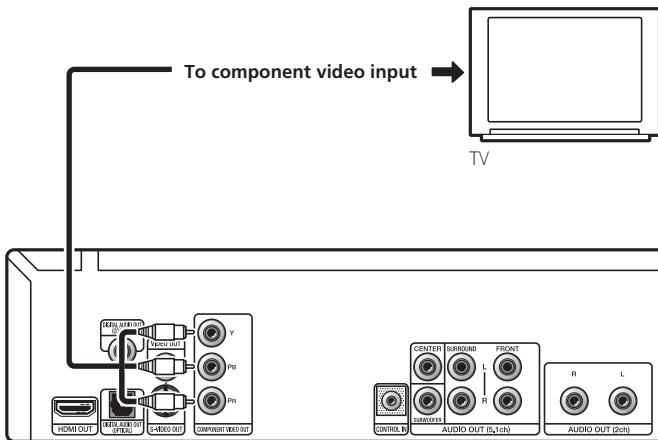

Watching 1080i/720p/480p from the component video outputs

This player can output 1080i/720p/480p from the component video output. Compared to 480i, 1080i/720p/480p effectively doubles the scanning rate of the picture, resulting in a very stable, flicker-free image.

To set up the player for use with a progressive scan or HD (High Definition) TV, see **Resolution (Max)** on page 33. When the player is set to output progressive scan video, the **PRGSVE** indicator lights in the front panel display.


Important

- If you connect a TV that is not compatible with a 1080i/720p/480p and switch the player to them, you will not be able to see any picture at all. In this case, switch everything off and reconnect using the supplied video cable (see *Easy connections* on page 11), then switch back to **480i** (see *Switching the video output to 480i using the front panel controls* on page 12).

Switching the video output to 480i using the front panel controls

Switch the player to standby then, using the front panel controls, press **STANDBY/ON** while pressing **RECALL** to switch the player back to **480i**.

- If the player is connected using HDMI, disconnect the HDMI cable before resetting the player to 480i output. (If left connected, the HDMI output resolution will be reset to its default — see *Resetting the output resolution to the default setting with HDMI connection* on page 15.)

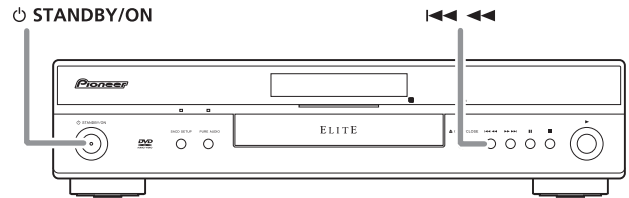


Connecting to an AV receiver

You can connect this player to your AV receiver using the multichannel analog outputs or one of the digital outputs.

In addition to these connections, you should also connect the 2 channel analog outputs for compatibility with all discs.

You'll probably also want to connect a video output to your AV receiver. You can use any of the video outputs available on this player (the illustration shows a standard (composite) connection).

1 Connect the analog AUDIO OUT (2ch) and VIDEO OUT jacks on this player to a set of analog audio and video inputs on your AV receiver.

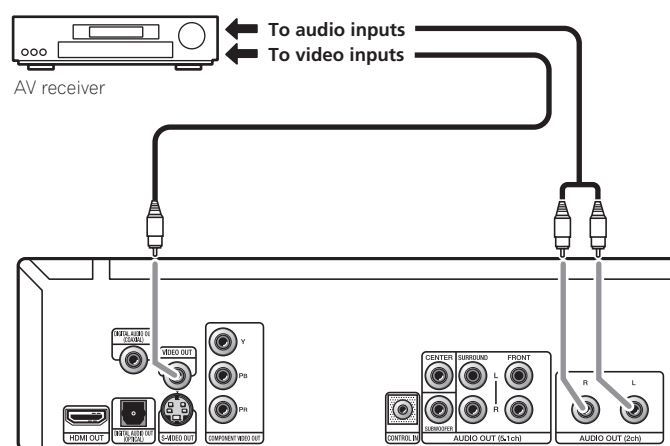

2 Connect the AV receiver's video output to a video input on your TV.

You can also use the S-Video or component video jacks to connect to the AV receiver if you prefer.



Tip


- You usually have to connect the same kind of video cable between your DVD player and AV receiver, and between your AV receiver and TV.

Connecting the multichannel analog outputs

If your AV receiver has 5.1 channel analog inputs, we recommend connecting this player to it using the multichannel analog outputs. Doing this will ensure that you can enjoy all kinds of disc, including Dolby Digital and DTS DVD-Video discs, as well as high sampling rate and multichannel DVD-Audio and SACD discs.

• Connect the multi-channel audio outputs on this player to the multi-channel audio inputs on your AV receiver.

It's convenient to use three stereo audio cables; one for the **FRONT**, one for the **SURROUND** and one for the **CENTER** and **SUBWOOFER** channels.

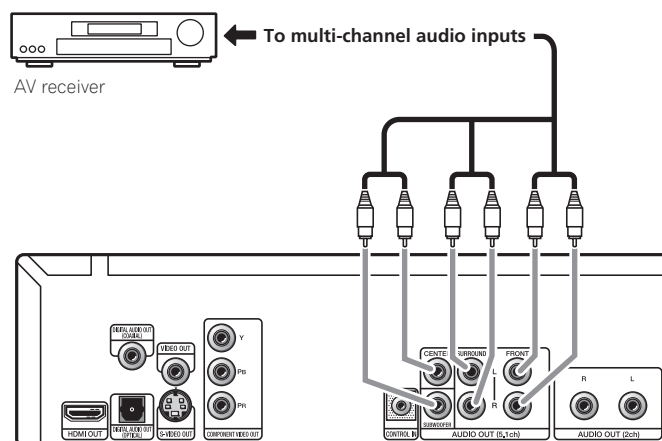

You can also use the S-Video or component video jacks to connect to the AV receiver if you prefer.



Tip

- After connecting up and switching on, you should change the **Audio Output Mode** setting (page 36) in the Initial Setup menu from the default **2 Channel** to **5.1 Channel**.


Connecting the digital output

This player has both optical and coaxial-type digital audio outputs for connection to an AV receiver. Connect whichever is convenient.

Depending on the capabilities of your AV receiver, you might have to set up this player to output only digital audio in a compatible format. See *Digital Audio Out settings* on page 32 and refer to the operating instructions that came with your AV receiver.

Note that SACD audio is not output through these jacks, so this connection should be in addition to, rather than instead of, a 5.1 channel analog connection.

• Connect one of the DIGITAL AUDIO OUT (COAXIAL/OPTICAL) jacks on this player to a digital input on your AV receiver.

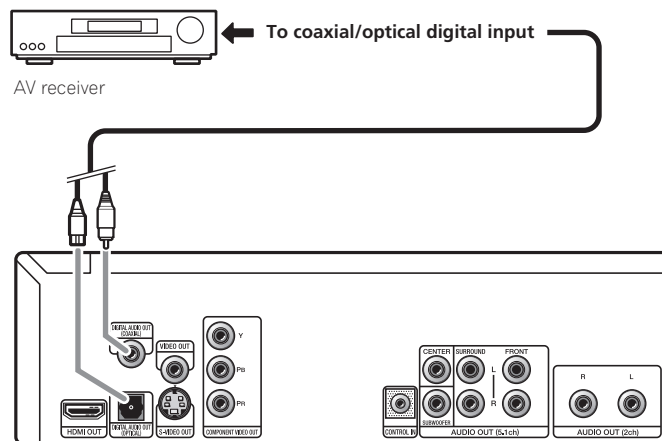


For an optical connection, use an optical cable (not supplied) to connect the **DIGITAL AUDIO OUT OPTICAL** jack to an optical input on your AV receiver.

For a coaxial connection, use a coaxial cable (similar to the supplied video cable) to connect the **DIGITAL AUDIO OUT COAXIAL** jack to a coaxial input on your AV receiver.

02 Controlling this player via another Pioneer component

The **CONTROL IN** jack allows you to control this player via the remote control sensor of another Pioneer component — typically an AV receiver — that has a **CONTROL OUT** jack. Remote control signals are passed through to the player from the remote sensor of the other component, allowing you greater freedom in the placement of your player.

- Use a miniplug cord (not supplied) to connect the **CONTROL IN** jack of this player with the **CONTROL OUT** jack of your other Pioneer component.

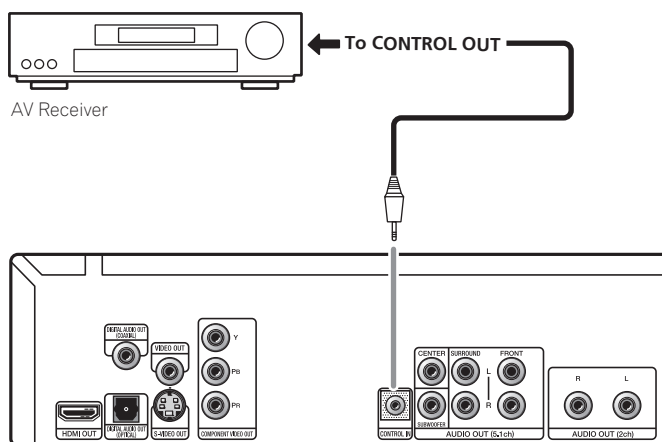


- You will also need to connect a coaxial digital cable, analog audio cable, or video cable.
- When connected via System Control, point the remote control toward the connected component (such as an AV receiver). The remote will not work correctly when pointed at this unit.
- You cannot connect use System Control with components that do not have a System Control jack or with components manufactured by companies other than Pioneer.

Connecting using HDMI


If you have a HDMI equipped monitor or display, you can connect it to this player using a commercially available HDMI cable.

The HDMI connector outputs uncompressed digital video, as well as almost every kind of digital audio that the player is compatible with, including DVD-Video, DVD-Audio (see below for limitations), SACD, Video CD, CD, WMA, MP3, MPEG-4 AAC, DivX video and WMV.

- Use an HDMI cable (not supplied) to connect the **HDMI OUT** interconnect on this player to an HDMI interconnect on a HDMI-compatible display.

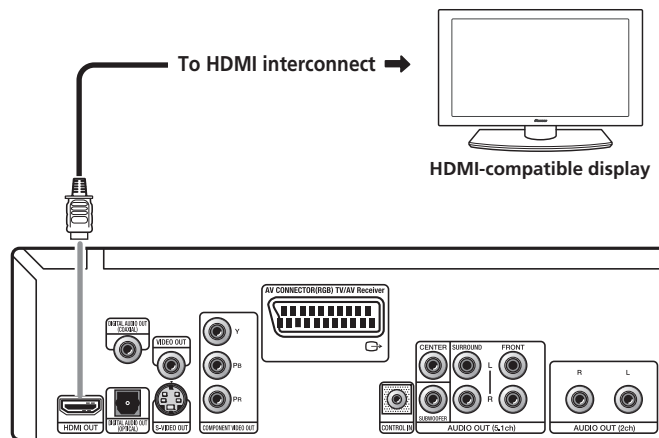

The arrow on the cable connector body should face up for correct alignment with the connector on the player.

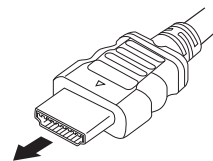

Note

- This unit has been designed to be compliant with HDMI (High-Definition Multimedia Interface). Depending on the component you have connected, using a DVI connection may result in unreliable signal transfers.
- When you change the component connected to the HDMI output, you will also need to change the HDMI settings to match the new component (see *HDMI Out* on page 32, **Resolution (Max)** and *HDMI Color* on page 33 to do this). However, the settings for each component are then stored in memory (for up to 2 components).
- The HDMI connection is compatible with 2 channel linear PCM signals (44.1 kHz to 192 kHz, 16 bit/20 bit/24 bit), and Dolby Digital, DTS, MPEG audio bitstream, multi channel DSD, and multi channel linear PCM signals, (5.1 channel signals up to 96 kHz, 16 bit/20 bit/24 bit).
- Depending on the HDMI cable being used, 1080p output may not appear correctly.

About HDMI

HDMI (High-Definition Multimedia Interface) supports both video and audio on a single digital connection for use with DVD players, DTV, set-top boxes, and other AV devices. HDMI was developed to provide the technologies of High-bandwidth Digital Content Protection (HDCP) as well as Digital Visual Interface (DVI) in one specification. HDCP is used to protect digital content transmitted and received by DVI-compliant displays.

HDMI has the capability to support standard, enhanced, or high-definition video plus standard to multi-channel surround-sound audio. HDMI features include uncompressed digital video, a bandwidth of up to five gigabytes per second (with HDTV signals), one connector (instead of several cables and connectors), and communication between the AV source and AV devices such as DTVs.

About HDMI Control


You can enable HDMI Control by turning the **HDMI Control** setting to **On** for all components connected via HDMI cable. Check the video output from this unit once you have completed making connections and settings for all components. You will need to check the video output each time you change connected components or remove the HDMI cable.

Note that HDMI Control may not operate properly if you do not use an HDMI cable that supports the HDMI 1.3 specification (Category 2) or later.

Changing the output resolution

Use the **OUTPUT RESOLUTION** button located on the remote control to switch the output resolution for the HDMI and component video outputs.

Depending on the type of disc or file being played, the signals may not be output with the resolution set at **Resolution (Max)** (page 33). For details, see the table below.

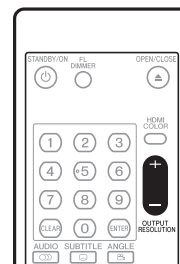


	Resolution (Max) setting				
	480i	480p	1080i	720p	1080p
DVD	480i	480p	480p	480p	480p
DVD-Audio	480i	480p	480p	480p	480p
DivX video/WMV	480i	480p	1080i	720p	480p
JPEG	480i	480p	1080i	720p	480p
Audio CD/ Super Audio CD	480i	480p	480p	480p	480p
MP3/WMA/MPEG-4 AAC	480i	480p	1080i	720p	480p
Video CD	480i	480p	480p	480p	480p

Note

- If analog video signals are output at a resolution of 1080i or 720p, the GUI screen may look rough. This is not a malfunction.


Resetting the output resolution to the default setting with HDMI connection

Use the **OUTPUT RESOLUTION** button on the remote control to switch the player back to **480p**. You can also switch the player to standby then, using the front panel controls, press **STANDBY/ON** while pressing **RECALL** to switch the player back to **480p**.

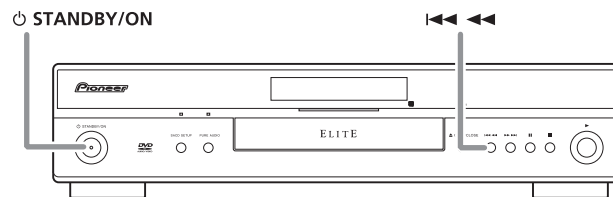

03 Chapter 3 Controls and displays

Front panel

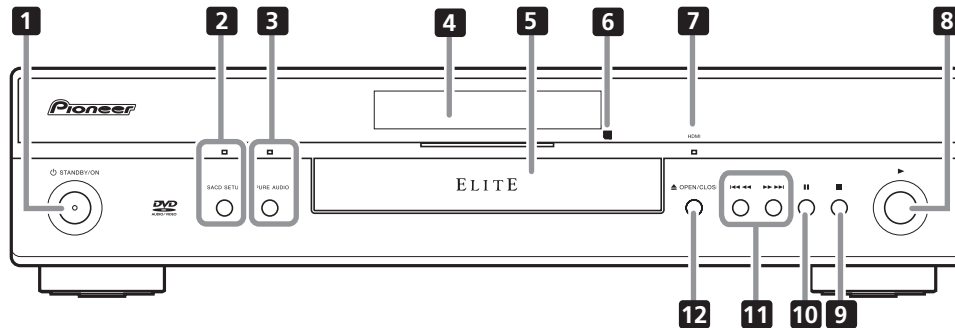

1 STANDBY/ON (page 20)

Press to switch the player on (the power indicator and indicator in the middle of the unit light up when the power is on) or into standby.

2 SACD SETUP

Press to select which part of an SACD disc you want to listen to — stereo audio (**2ch Area**), multi-channel audio (**Multi-ch Area**) and, for hybrid SACDs, standard CD audio (**CD Area**). See **SACD Playback** on page 34 for more on this.

The indicator lights when an SACD disc is set and SACD Playback is set to **2ch Area** or **Multi-ch Area**.

3 PURE AUDIO

When playback is stopped, press to switch off/on the front panel display and disable the video and digital outputs*. Use this when you want to hear audio from the analog outputs with no interference from other signals (when listening to a DVD-Audio disc, for example). The indicator lights when the Pure Audio feature is switched on.

This button only functions when **Pure Audio Button** (page 34) is set to **Available**.

*These include HDMI, and the coaxial and optical digital outputs.

4 Display (page 17)

5 Disc tray

6 Remote control sensor

The remote control has a range of up to about 7 m.

7 HDMI indicator

Lights when this player is recognized by another HDMI or DVI/HDCP compatible component.


8 ▶ (play) (page 22)


9 ■ (stop) (page 22)




10 || (pause) (page 22)

11 ◀▶ ◀◀ and ▶▶ ▶▶ (page 22)

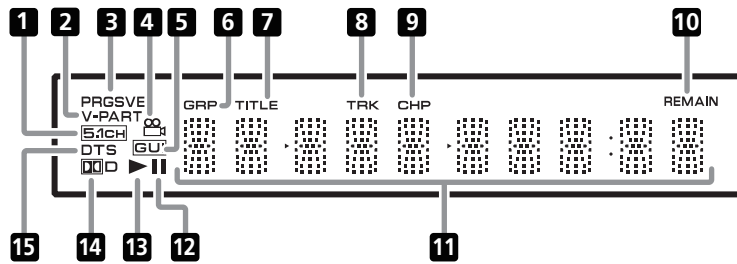12 ▲ OPEN/CLOSE (page 22)



- 1 5.1CH**
Lights when analog 5.1 channel output is selected (page 36).
- 2 V-PART**
Lights when playing a video part of a DVD disc.
- 3 PRGSVE**
Lights when the video output is 1080i/720p/480p (page 12).
- 4 **
Lights during multi-angle scenes on a DVD disc (page 30).
- 5 GUI (Graphical User Interface)**
Lights when a menu is displayed on-screen.
- 6 GRP**
Indicates that the character display is showing a DVD-Audio group number
- 7 TITLE**
Indicates that the character display is showing a DVD-Video title number.
- 8 TRK**
Indicates that the character display is showing a track number.
- 9 CHP**
Indicates that the character display is showing a DVD chapter number.


- 10 REMAIN**
Lights when the character display is showing the time or number of tracks/titles/chapters remaining.
- 11 Character display**
- 12 **
Lights when a disc is paused.
- 13 **
Lights when a disc is playing.
- 14 **
Lights when a Dolby Digital soundtrack is playing.
- 15 DTS**
Lights when a DTS soundtrack is playing.

03 Remote control



Tip

- All buttons glow slightly in the dark for ease of use.

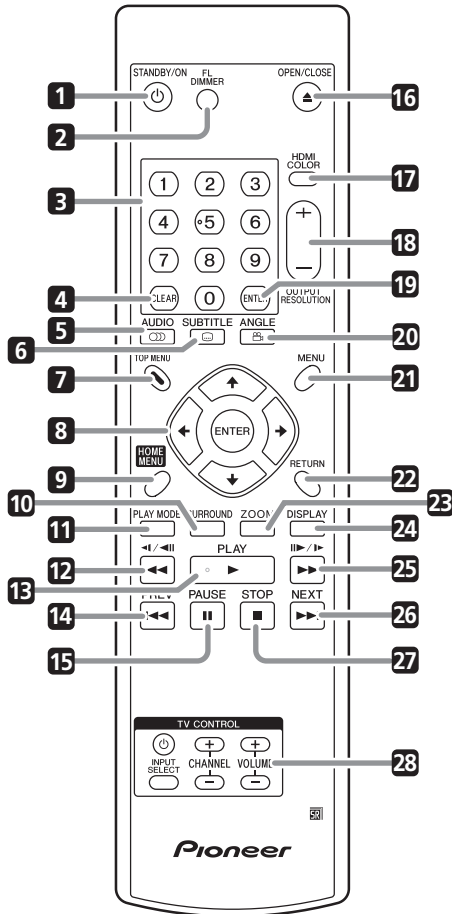

- 1 **STANDBY/ON** (page 20)
- 2 **FL DIMMER**
Press to change the display brightness.
- 3 **Number buttons** (page 22)
- 4 **CLEAR** (pages 19 and 28)
- 5 **AUDIO** (page 29)
- 6 **SUBTITLE** (page 29)
- 7 **TOP MENU** (page 23)
- 8 **ENTER & cursor buttons** (page 21)
- 9 **HOME MENU** (page 21)
- 10 **SURROUND** (page 31)
- 11 **PLAY MODE** (page 27)
- 12 **◀ and ◀|** (pages 22 and 25)
- 13 **▶ PLAY** (page 22)
- 14 **◀◀ PREV** (page 22)
- 15 **|| PAUSE** (page 22)
- 16 **▲ OPEN/CLOSE** (page 22)
- 17 **HDMI COLOR** (page 33)
- 18 **OUTPUT RESOLUTION +/-** (pages 15 and 33)
- 19 **ENTER** (page 21)
- 20 **ANGLE** (page 30)
- 21 **MENU** (page 23)
- 22 **RETURN** (page 21)
- 23 **ZOOM** (page 29)
- 24 **DISPLAY** (page 30)
- 25 **▶▶ and ||▶/▶** (pages 22 and 25)
- 26 **▶▶ NEXT** (page 28)
- 27 **■ STOP** (page 22)
- 28 **TV CONTROL** (page 19)

Using the remote control

Keep in mind the following when using the remote control:

- Make sure that there are no obstacles between the remote and the remote sensor on the unit.
- The remote has a range of about 23 feet.
- Remote operation may become unreliable if strong sunlight or fluorescent light is shining on the unit's remote sensor.
- Remote controllers for different devices can interfere with each other. Avoid using remotes for other equipment located close to this unit.
- Replace the batteries when you notice a fall off in the operating range of the remote.

Setting up the remote to control your TV

You can use the supplied remote to control your TV. To be able to use this feature you first have to program the remote with a maker code from the table below.

1 Press and hold down the CLEAR button, then enter the maker code for your TV.

See the table below for the list of maker codes. If there is more than one code given for your make, input the first one in the list.

- If the maker's name of your TV doesn't appear in the table below, you will not be able to use this remote to control your TV.

2 Press **TV** to check that the remote works with your TV.

If the remote is set up correctly, the TV should switch on/off. If it doesn't and there is another code given for your maker, repeat step 1 with a new code.

Using the TV remote control buttons

The table below shows how to use this remote control with your TV.

Button	What it does
TV	Press to switch the TV on/off (standby)
INPUT SELECT	Press to change the TV's video input
VOLUME +/-	Use to adjust the TV volume
CHANNEL +/-	Use to change TV channels

Maker	Code
Aiwa	38
Funai	36
GE	11, 28
General	34
Goldstar	10, 23
Grandiente	30
Hitachi	06, 24, 25, 32
Magnavox	12, 29
Mitsubishi	09
NEC	37
Panasonic	08, 22, 41
Philips	07
Pioneer	00, 35, 40, 44
RCA	01, 15, 16, 17, 18
Samsung	73, 75
Sanyo	14, 21
Sharp	02, 19, 27
Sony	04
Toshiba	05, 26, 31, 43
JVC	13, 33, 42
Zenith	03, 20

Getting started


Switching on and setting up

When you switch the player on for the first time the Startup Navigator screen appears. We recommend using this to make a few basic player settings.

- 1 Switch on your TV and set the video input to this player.
- 2 Press the **STANDBY/ON** button on the remote control or the front panel to switch on.



STANDBY/ON

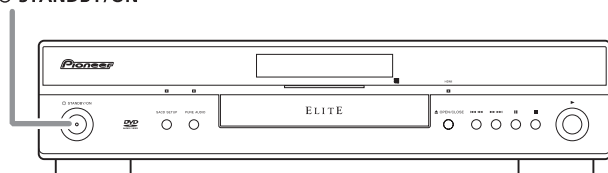


- When you switch on for the first time, your TV should display the Startup Navigator screen.
- When you have this unit connected to a plasma display that is compatible with HDMI Control, language settings are imported from the plasma display's OSD settings before Startup Navigator begins.

- 3 Use the **↑/↓** buttons to choose a language, then press **ENTER**.




- 4 Press **ENTER** to start setting up using the Startup Navigator.

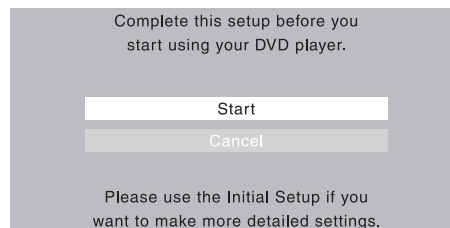


If you don't want to use the Startup Navigator, press **↓** to select **Cancel**, then press **ENTER** to exit the Startup Navigator.

- 5 Use the **↑/↓** buttons to select the terminal from which the audio signals are to be output, then press **ENTER**.

- If you have selected **Analog**, proceed to step 6.
- If you have selected **COAX/OPT**, proceed to step 7.
- If you have selected **HDMI** or **I don't know**, proceed to step 8.

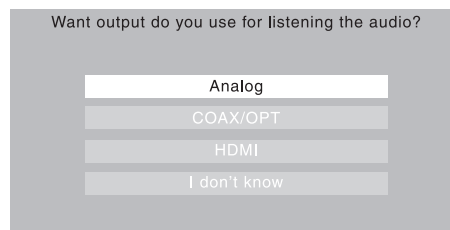


- 6 Use the **↑/↓** buttons to select whether to output the analog audio signals from the 2ch or 5.1ch audio outputs, then press **ENTER**.

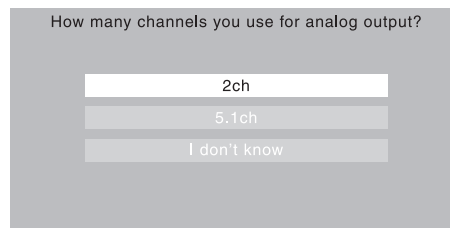


- 7 Use the **↑/↓** buttons to select whether or not to convert the digital audio signals output from the DIGITAL AUDIO OUT (COAXIAL/OPTICAL) into linear PCM format ('Yes' or 'No'), then press **ENTER**.

- Proceed to step 8.

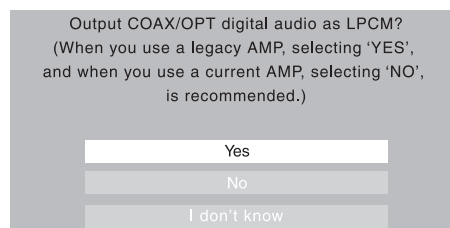

8 Use the **↑/↓** buttons to select whether or not to display a black band on the left and right sides of the screen when playing DVDs recorded with a 4:3 aspect ratio ('Yes' or 'No'), then press **ENTER**.

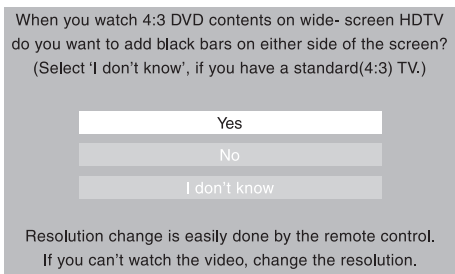

9 Select 'Finish' to accept the settings and exit the Startup Navigator, or 'Go Back' to go through the settings again.




Note

- This player features a screen saver and an auto power off function. If the player is stopped and no button is pressed for around five minutes, the screen saver starts. If the disc tray is closed but no disc is playing and no control is pressed for about 30 minutes, the player automatically goes into standby.
- When the Startup Navigator is running, buttons other than **▲ OPEN/CLOSE**, **↑/↓/←/→**, **ENTER** and **RETURN** will not function.

Using the on-screen displays

For ease of use, this player makes extensive use of graphical on-screen displays (OSDs).

All the screens are navigated in basically the same way, using the cursor buttons (**↑/↓/←/→**) to change the highlighted item and pressing **ENTER** to select it.

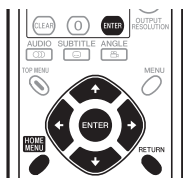

Button	What it does
HOME MENU	Display/exit the on-screen display.
↑/↓/←/→	Changes the highlighted menu item.
ENTER	Selects the highlighted menu item (both ENTER buttons on the remote work in exactly the same way).
RETURN	Returns to the main menu without saving changes.

Note

- From here on in this manual, the word 'select' generally means use the cursor buttons to highlight an item on-screen, then press **ENTER**.


Setting up the player for your TV

If you have a widescreen (16:9) TV, you should setup the player so that the picture will be presented correctly. If you have a conventional (4:3) TV, you can leave the player on the default setting and move on to the next section.

1 Press **HOME MENU** and select 'Initial Settings'.



2 Select 'TV Screen' from the 'Video Output' settings.

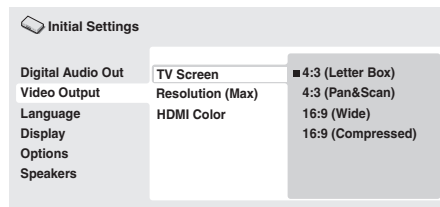

3 If you have a widescreen (16:9) TV, select '16:9 (Wide)' or '16:9 (Compressed)'.

If you have a conventional (4:3) TV, you can change the setting from **4:3 (Letter Box)** to **4:3 (Pan & Scan)** if you prefer. See *Video Output settings* on page 33 for more details.

4 Press **HOME MENU** to exit the menu screen.


Setting the language of this player's on-screen displays

This sets the language of the player's on-screen displays.

1 Press **HOME MENU** and select 'Initial Settings'.



2 Select 'OSD Language' from the 'Display' settings.

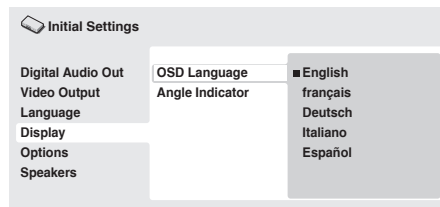

3 Select a language.

The on-screen language will change according to your selection.

4 Press **HOME MENU** to exit the menu screen.


04 Playing discs

The basic playback controls for playing DVD, CD, SACD, Video CD, DivX video/WMV and MP3/WMA/MPEG-4 AAC discs are covered here. Further functions are detailed in the next chapter.

For details on playing JPEG picture discs, see *Viewing a JPEG slideshow* on page 25.

Important

- Throughout this manual, the term 'DVD' means DVD-Video, DVD-Audio and DVD-R/-RW. If a function is specific to a particular kind of DVD disc, it is specified.

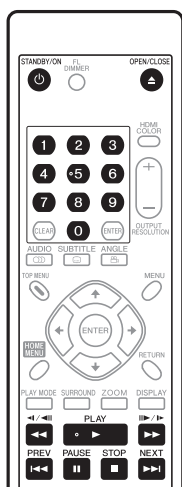


1 If the player isn't already on, press STANDBY/ON to switch it on.

If you're playing a DVD, disc containing DivX video/WMV files or Video CD, also turn on your TV and make sure that it is set to the correct video input.

2 Press OPEN/CLOSE to open the disc tray.

3 Load a disc.

Load a disc with the label side facing up, using the disc tray guide to align the disc (if you're loading a double-sided DVD disc, load it with the side you want to play face down).

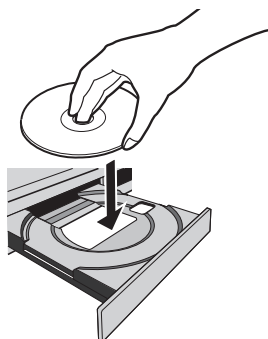

4 Press PLAY to start playback.

If you're playing a DVD or Video CD, an on-screen menu may appear. See *DVD-Video and DivX disc menus* and *Video CD PBC menus* on page 23 for more on how to navigate these.










- If you're playing a containing DivX video/WMV files or MP3/WMA/MPEG-4 AAC audio files, it may take a few seconds before playback starts, etc. This is normal.
- Please see *Disc/content format playback compatibility* on page 8 if you want to play a DualDisc (DVD/CD hybrid disc).

Note

- You may find with some DVD discs that some playback controls don't work in certain parts of the disc. This is not a malfunction.
- If a disc contains a mixture of movie (DivX video/WMV) and other media file types (MP3, for example), first select whether to play the movie files (**DivX/WMV**) or the other media file types (**MP3/WMA/MPEG-4 AAC/JPEG**) from the on-screen display. The media file types are selected automatically when the Pure Audio Mode is turned on.

Basic playback controls

The table below shows the basic controls on the remote for playing discs. The following chapter covers other playback features in more detail.

Button	What it does
 PLAY	Starts playback. If the display shows RESUME or LAST MEM playback starts from the resume or last memory point (see also <i>Resume and Last Memory</i> on page 23.)
 PAUSE	Pauses a disc that's playing, or restarts a paused disc.
 STOP	Stops playback. See also <i>Resume and Last Memory</i> on page 23.
 (remote only)	Press to start fast reverse scanning. Press  (play) to resume normal playback.
 (remote only)	Press to start fast forward scanning. Press  (play) to resume normal playback.
 PREV	Skips to the start of the current track, title or chapter, then to previous tracks/titles/chapters.
 NEXT	Skips to the next track, title or chapter.
Numbers (remote only)	Use to enter a title/chapter/track number. Press ENTER to select. <ul style="list-style-type: none"> If the disc is stopped, playback starts from the selected title (for DVD), group (for DVD-Audio) or track (for CD/SACD/Video CD). If the disc is playing, playback jumps to the start of the selected title (VR mode DVD-RW), chapter (DVD-Video) or track (DVD-Audio*/SACD/CD/Video CD). <i>*within the current group</i>

Resume and Last Memory

With the exception of DVD-Audio and SACD discs, when you stop playback of a DVD, CD, or Video CD or DivX video/WMV discs, **RESUME** is shown in the display indicating that you can resume playback again from that point.

If the disc tray is not opened, the next time you start playback the display shows **RESUME** and playback resumes from the resume point. (If you want to clear the resume point, press **■ STOP** while **RESUME** is displayed.)

With DVDs and Video CDs, if you take the disc out of the player after stopping playback, the last play position is stored in memory. If the next disc you load is the same one, the display shows **LAST MEM** and playback will resume. For DVD-Video discs, the player stores the play position of the last five discs. When one of these discs is next loaded, you can resume playback.


Note

- The Last Memory function doesn't work with VR format DVD-R/-RW, DVD-Audio or SACD discs.
- If you don't need the Last Memory function when you stop a disc, you can press **▲ OPEN/CLOSE** to stop playback and open the disc tray.

DVD-Video and DivX disc menus

Some DivX media files and many DVD-Video and DVD-Audio discs feature menus from which you can select what you want to watch. They may also give access to additional features, such as subtitle and audio language selection, or special features such as slideshows. See the disc packaging for details.

Sometimes DivX and DVD-Video menus are displayed automatically when you start playback; others only appear when you press **MENU** or **TOP MENU**.

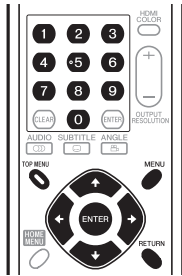


Important

- Some DVD-Audio discs feature a 'bonus group'. To play this group you first have to input a password, which you can find on the disc's packaging. Use the number buttons to input the password.

Video CD PBC menus

Some Video CDs have menus from which you can choose what you want to watch. These are called PBC (Playback Control) menus.

You can play a PBC Video CD without having to navigate the PBC menu by starting playback using a number button to select a track, rather than the **▶ PLAY** button.

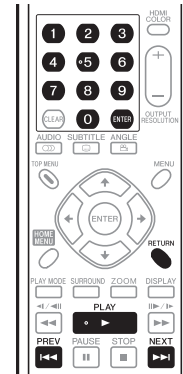

Button	What it does
RETURN	Displays the PBC menu.
Numbers (remote only)	Use to enter a numbered menu option. Press ENTER to select.
◀◀ PREV	Displays the previous menu page (if there is one).
▶▶ NEXT	Displays the next menu page (if there is one).



- *After I load a DVD disc, it ejects automatically after a few seconds!*

Most likely, the disc is the wrong region for your player. The region number should be printed on the disc; check it against the region number of the player (which you can find on the rear panel). See also *DVD-Video regions* on page 41.

If the region number is OK, it may be that the disc is damaged or dirty. Clean the disc and look for signs of damage. See also *Taking care of your player and discs* on page 40.

- *Why won't the disc I loaded play?*

First check that you loaded the disc the right way up (label side up), and that it's clean and undamaged. See *Taking care of your player and discs* on page 40 for information on cleaning discs.

If a disc loaded correctly won't play, it's probably an incompatible format or disc type, such as DVD-ROM. See *Disc/content format playback compatibility* on page 8 for more on disc compatibility.

- *There's no picture!*

Check the front panel and make sure that the **PURE AUDIO** indicator isn't lit. If it is, press the **PURE AUDIO** button to switch the video and HDMI outputs back on. See also *Front panel* on page 16.

Check that your TV is compatible with resolutions of 1080i, 720p, or 480p. See *Watching 1080i/720p/480p from the component video outputs* on page 12.

- *I have a widescreen TV so why are there black bars at the top and bottom of the screen when I play some discs?*

Some movie formats are such that even when played on a widescreen TV, black bars are necessary at the top and bottom of the screen. This is not a malfunction.

- *I have a standard (4:3) TV and set the player to show widescreen DVDs in pan & scan format, so why do I still get black bars top and bottom with some discs?*

Some discs override the display preferences of the player, so even if you have **4:3 (Pan & Scan)** selected, those discs will still be shown in letter box format. This is not a malfunction.

- *I've connected to a HDMI compatible component but I can't get any signal and the front panel HDMI indicator won't light!*

Make sure that you've selected this player as the HDMI input in the settings for the component you're using. You may need to refer to the instruction manual of the component to do this. See *Connecting using HDMI* on page 14 for more on HDMI compatibility.

- *There's no picture from the HDMI output!*

This player cannot display pictures from DVI compatible sources. See *Connecting using HDMI* on page 14 for more on HDMI compatibility.

Make sure the resolution on this player matches that of the component you have connected using HDMI. See *Resolution (Max)* on page 33 to change the HDMI resolution.

- *My AV receiver is definitely compatible with 96 kHz/88.2 kHz Linear PCM audio, but it doesn't seem to work with this player. What's wrong?*

For digital copy-protection purposes, some 96 kHz/88.2 kHz DVD discs only output digital audio downsampled to 48 kHz/44.1 kHz. This is not a malfunction.

To fully take advantage of the high sampling rate audio, connect the analog audio outputs to your amplifier/receiver.

- *Why can't I hear SACD audio through the digital outputs?*

SACD digital audio is only available through the HDMI outputs when connected to an HDMI-compatible amp that can handle protected audio contents. Some DVD-Audio discs too only output digital audio through the HDMI outputs.

- *Is it better to listen to DVD-Audio discs through the analog outputs?*

Some DVD-Audio discs do not output anything through the digital outputs, and multichannel discs are downmixed to stereo for the digital output. In addition, high sampling rate DVD-Audio discs (higher than 96 kHz) automatically downsample audio output from the digital outputs.

Using the multichannel analog audio outputs for DVD-Audio have none of these limitations.

- *My DVD-Audio disc starts playing, but then suddenly stops!*

The disc may have been illegally copied.

- *There's no sound from the optical/coaxial outputs or the HDMI interface!*

Check the front panel and make sure that the **PURE AUDIO** indicator isn't lit. If it is, press the **PURE AUDIO** button to switch the digital audio (optical/coaxial and HDMI) outputs back on.

You won't hear any sound from the HDMI output if the source component is only DVI/HDCP-compatible.

Chapter 5

Playing discs

Note

- Many of the functions covered in this chapter apply to DVD and SACD discs, Video CDs, CDs, DivX video/WMV and MP3/WMA/MPEG-4 AAC/JPEG discs, although the exact operation of some varies slightly with the kind of disc loaded.
- Some DVDs restrict the use of some functions (random or repeat, for example) in some or all parts of the disc. This is not a malfunction.
- When playing Video CDs, some of the functions are not available during PBC playback. If you want to use them, start the disc playing using a number button to select a track.

Scanning discs

You can fast-scan discs forward or backward at four different speeds (only one speed for DivX video/WMV).

- 1 During playback, press ◀◀ or ▶▶ to start scanning.**
 - There is no sound while scanning DVDs (including DVD-Audio), DivX video/WMV and Video CDs.
- 2 Press repeatedly to increase the scanning speed.**
 - The scanning speed is shown on-screen.
- 3 To resume normal playback, press ▶ PLAY.**
 - When scanning a Video CD playing in PBC mode or a MP3/WMA/MPEG-4 AAC track, playback automatically resumes at the end or beginning of the track.
 - Depending on the disc, normal playback may automatically resume when a new chapter is reached on a DVD disc.

Playing in slow motion

You can play DVD-Videos and DVD-R/-RW at four different slow motion speeds, forwards and backwards. Video CDs and DivX video/WMV can be played at four different forward slow motion speeds.

- 1 During playback, press II PAUSE.**
- 2 Press and hold ◀/◀◀ or ▶▶/▶ to until slow motion playback starts.**
 - The slow motion speed is shown on-screen.
 - There is no sound during slow motion playback.
- 3 Press repeatedly to change the slow motion speed.**
- 4 To resume normal playback, press ▶ PLAY.**
 - Depending on the disc, normal playback may automatically resume when a new chapter is reached.

Frame advance/frame reverse

You can advance or back up DVD-Video and DVD-R/-RW discs frame-by-frame. With Video CDs and DivX video/WMV file you can only use frame advance.

- 1 During playback, press II PAUSE.**
- 2 Press ◀/◀◀ or ▶▶/▶ to reverse or advance a frame at a time.**
- 3 To resume normal playback, press ▶ PLAY.**
 - Depending on the disc, normal playback may automatically resume when a new chapter is reached.

Viewing a JPEG slideshow

After loading a CD/CD-R/-RW containing JPEG picture files, press ▶ (play) to start a slideshow from the first folder/picture on the disc. The player displays the pictures in each folder in alphabetical order.

- If the folder contains MP3/WMA/MPEG-4 AAC files, playback of the slideshow and MP3/WMA/MPEG-4 AAC file repeats. During the audio playback, you can still use the skip (◀◀ PREV/▶▶ NEXT), scan (◀◀/▶▶) and pause (II PAUSE) functions.

Pictures are automatically adjusted so that they fill as much of the screen as possible (if the aspect ratio of the picture is different to your TV screen you may notice black bars at the sides, or at the top and bottom of the screen).

While the slideshow is running:

Button	What it does
II PAUSE	Pauses the slideshow; press again to restart.
◀◀ PREV	Displays the previous picture.
▶▶ NEXT	Displays the next picture.
◀/▶	Pauses the slideshow and rotates the displayed picture 90° (counter) clockwise. (Press ▶ PLAY to restart slideshow.)
↑/↓	Pauses the slideshow and flips the displayed picture horizontally or vertically. (Press ▶ PLAY to restart slideshow.)
ZOOM	Pauses the slideshow and zooms the picture. Press again to toggle between 1x, 2x and 4x zoom. (Press ▶ PLAY to restart slideshow.)
MENU	Displays the Disc Navigator screen (see page 26).

Note

- The time it takes for the player to load a file increases with large file sizes.

05 Browsing DVD or Video CD disc with the Disc Navigator

Use the Disc Navigator to browse through the contents of a DVD-Video, VR mode DVD-R/-RW or Video CD disc to find the part you want to play.


Important

- You can't use the Disc Navigator with Video CDs in PBC mode.

1 During playback, press HOME MENU and select 'Disc Navigator' from the on-screen menu.



2 Select a view option.




The options available depend on the kind of disc loaded and whether the disc is playing or not, but include:

- Title** – Titles from a DVD-Video disc.
- Chapter** – Chapters from the current title of a DVD-Video disc.
- Track** – Tracks from a Video CD disc.
- Time** – Thumbnails from a Video CD disc at 10 minute intervals.
- Original: Title** – Original titles from a VR mode DVD-R/-RW disc.
- Play List: Title** – Play List titles from a VR mode DVD-R/-RW disc.
- Original: Time** – Thumbnails from the Original content at 10 minutes intervals.
- Play List: Time** – Thumbnails from the Play List at 10 minutes intervals.

The screen shows up to six moving thumbnail images displayed one after another. To display the previous/next six thumbnails, press **◀◀/▶▶** (you don't have to wait for all the thumbnails to finish playing to display the previous/next page).

3 Select the thumbnail image for what you want to play.

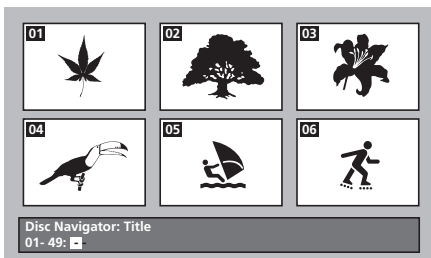

You can use either the cursor buttons (**↑/↓/←/→**) and **ENTER** to select a thumbnail, or the number buttons.

To select using the number buttons, enter a two-digit number then press **ENTER**.


Tip

- Another way to find a particular place on a disc is to use one of the search modes. See *Searching a disc* on page 29.

Browsing WMA, MP3, MPEG-4 AAC, DivX video, WMV and JPEG files with the Disc Navigator

Use the Disc Navigator to find a particular file or folder by filename. Note that if there are other types of files on the same disc, these will not be displayed in the Disc Navigator.

1 Press HOME MENU and select 'Disc Navigator' from the on-screen menu.

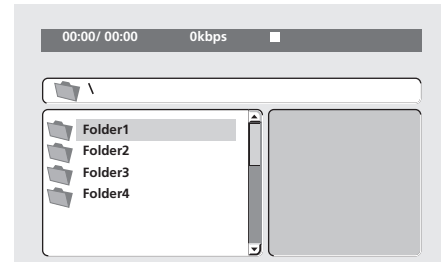


2 Use the cursor buttons (**↑/↓/←/→**) and **ENTER** to navigate.

Use the cursor up/down buttons (**↑/↓**) to move up and down the folder/file list.

Use the cursor left button (**←**) to return to the parent folder.

Use **ENTER** or cursor right (**→**) to open a highlighted folder.

- You can also return to the parent folder by going to the top of the list to the '..' folder, then pressing **ENTER**.
- When a JPEG file is highlighted, a thumbnail image is displayed on the right.

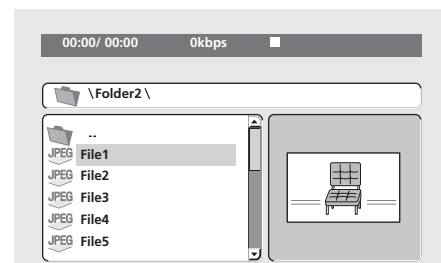

3 To play the highlighted track or DivX video/WMV file or display the highlighted JPEG file, press **ENTER**.

- When a MP3/WMA/MPEG-4 AAC or DivX video/WMV file is selected, playback begins, starting with the selected file, and continues until the end of the folder.
- When a JPEG file is selected, a slideshow begins, starting with that file, and continues to the end of the folder.

Tip


- You can also play a JPEG slideshow while listening to MP3/WMA/MPEG-4 AAC playback. Simply select the audio file you want to listen to followed by the JPEG from which you want the slideshow to start. Playback of both the slideshow and the audio files repeats. Playback controls are effective for the JPEG slideshow only.
- To play the contents of the whole disc rather than just the current folder, exit the Disc Navigator and start playback using the **▶ PLAY** button.

Looping a section of a disc

The A-B Repeat function allows you to specify two points (A and B) within a track (CD, Video CD) or title (DVD-Video and DVD-RW) that form a loop which is played over and over.

- You can't use A-B Repeat with DVD-Audio, SACD, Video CDs in PBC mode, or MP3/WMA/MPEG-4 AAC/DivX video/WMV files.

1 During playback, press PLAY MODE and select 'A-B Repeat' from the list of functions on the left.

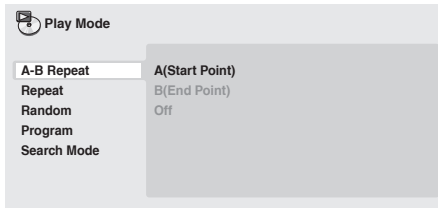

2 Press ENTER on 'A(Start Point)' to set the loop start point.

3 Press ENTER on 'B(End Point)' to set the loop end point.
After pressing **ENTER**, playback jumps back to the start point and plays the loop.

4 To resume normal playback, select 'Off' from the menu.

Using repeat play


There are various repeat play options, depending on the kind of disc loaded. It's also possible to use repeat play together with program play to repeat the tracks/chapters in the program list (see *Creating a program list* on page 28).



Important

- You can't use Repeat play with Video CDs in PBC mode, or with MP3/WMA/MPEG-4 AAC discs.
- You can't use repeat and random play at the same time.


1 During playback, press PLAY MODE and select 'Repeat' from the list of functions on the left.

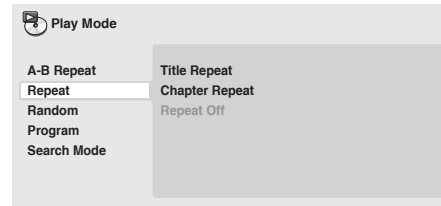

2 Select a repeat play option.

If program play is active, select **Program Repeat** to repeat the program list, or **Repeat Off** to cancel.

The repeat options available depend on the kind of disc loaded. For example, for DVD-Video and DVD-RW discs, you can select **Title Repeat** or **Chapter Repeat** (or **Repeat Off**).

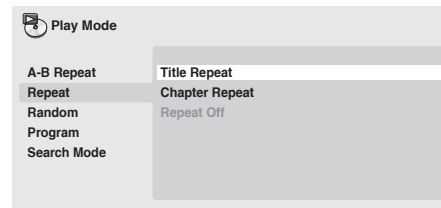

- For DVD-Audio discs, select **Group Repeat** or **Track Repeat** (or **Repeat Off**).
- For SACDs, CDs and Video CDs, select **Disc Repeat** or **Track Repeat** (or **Repeat Off**).
- For DivX video/WMV discs, select **Title Repeat**, and for some DivX media files, select **Chapter Repeat** (or **Repeat Off**).

Using random play

Use the random play function to play titles or chapters (DVD-Video), Groups (DVD-Audio), or tracks (DVD-Audio, SACD, CD, Video CD) at random. (Note that the same track/title/chapter may play more than once.)


You can set the random play option when a disc is playing or stopped.



Important


- Random play remains in effect until you select **Random Off** from the random play menu options.
- You can't use random play with VR format DVD-R/-RW discs, Video CDs playing in PBC mode, MP3/WMA/MPEG-4 AAC discs, DivX video/WMV discs, or while a DVD disc menu is being displayed.
- You can't use random play together with program or repeat play.

1 Press PLAY MODE and select 'Random' from the list of functions on the left.

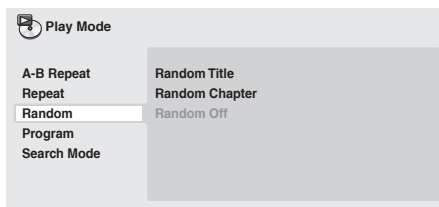

2 Select a random play option.

The random play options available depend on the kind of disc loaded. For example, for DVD-Video discs, you can select **Random Title** or **Random Chapter** (or **Random Off**).

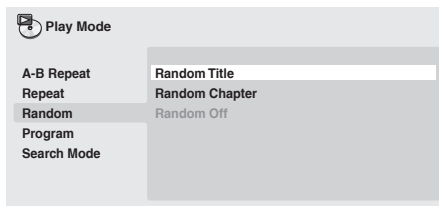

- For DVD-Audio discs, select **Random Group** or **Random Track**, (or **Random Off**).
- For CDs, SACDs and Video CDs, select **On** or **Off** to switch random play on or off.



Tip

- Use the following controls during random play:

Button	What it does
▶▶ NEXT	Selects a new track/title/chapter at random.
◀◀ PREV	Returns to the beginning of the current track/title/chapter; further presses select another random track/title/chapter.

Creating a program list


This feature lets you program the play order of titles/chapters/groups/tracks on a disc.



Important

- You can't use Program play with VR format DVD-R/-RW discs, Video CDs playing in PBC mode, MP3/WMA/MPEG-4 AAC discs, DivX video/WMV discs, or while a DVD disc menu is being displayed.


1 Press PLAY MODE and select 'Program' from the list of functions on the left.

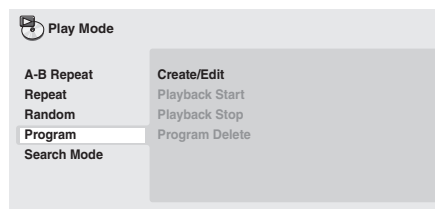

2 Select 'Create/Edit' from the list of program options.

3 Use the cursor buttons and ENTER to select a title, chapter or track for the current step in the program list.

For a DVD-Video disc, you can add a title or a chapter to the program list.

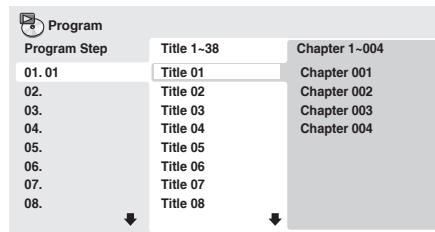

- For a DVD-Audio disc, you can add a whole group, or a track within a group to the program list.
- For a CD, SACD or Video CD, select a track to add to the program list.

After pressing **ENTER** to select the title/chapter/group/track, the step number automatically moves down one.

4 Repeat step 3 to build up a program list.

A program list can contain up to 24 titles/chapters/tracks.

- You can insert steps into the middle of a program list by just highlighting the position where you want the new step to appear and entering a title/chapter/group/track number.
- To delete a step, highlight it and press **CLEAR**.

5 To play the program list, press ▶ PLAY.

Program play remains active until you turn off program play (see page 29), erase the program list (see page 29), eject the disc or switch off the player.



Tip

- Use the following controls during program play:

Button	What it does
PLAY MODE	Save the program list and exit the program edit screen without starting playback (HOME MENU does the same).
▶▶ NEXT	Skip to the next step in the program list.

Other functions available from the program menu

There are a number of other options in the program menu in addition to Create/Edit.

- **Playback Start** – Starts playback of a saved program list
- **Playback Stop** – Turns off program play, but does not erase the program list
- **Program Delete** – Erases the program list and turns off program play

Searching a disc

You can search DVD-Video discs by title or chapter number, or by time; DVD-Audio discs can be searched by group or track number; SACDs by track number, CDs and Video CDs by track number or time; DivX video/WMV discs by time, and some DivX media files by chapter number.



Important

- Search functions are not available with Video CDs in PBC mode, or with MP3/WMA/MPEG-4 AAC discs.


1 Press **PLAY MODE** and select 'Search Mode' from the list of functions on the left.

2 Select a search mode.

The search options available depend on the kind of disc loaded.

- The disc must be playing in order to use time search.

3 Use the number buttons to enter a title, chapter or track number, or a time.

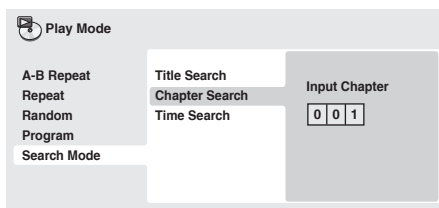

- For a time search, enter the number of minutes and seconds into the currently playing title (DVD/DivX video/WMV) or track (CD/Video CD) you want playback to resume from. For example, press **4, 5, 0, 0** to have playback start from 45 minutes into the disc. For 1 hour, 20 minutes and 30 seconds, press **8, 0, 3, 0**.
- Some DVD-Audio discs feature pages of browsable pictures. Enter the page number you want.

4 Press **ENTER** to start playback.

Switching subtitles

Some DVD-Video and DivX video discs have subtitles in one or more languages; the disc box will usually tell you which subtitle languages are available. You can switch subtitle language during playback.

- Press **SUBTITLE** repeatedly to select a subtitle option.



Note

- Some discs only allow you to change subtitle language from the disc menu. Press **TOP MENU** or **MENU** to access.
- To set subtitle language preferences, see page 33.
- See *Displaying external subtitle files* on page 9 for more on DivX subtitles.

Switching audio language/channels

When playing a DVD-Video and DivX video disc recorded with dialog in two or more languages, you can switch audio language during playback.

When playing a VR format DVD-R/-RW disc recorded with dual-mono audio, you can switch between the main, sub, and mixed channels during playback.

When playing a DVD-Audio disc, you may be able to switch channels — see the disc box for details. (When you change the audio channel, playback restarts from the beginning of the current track.)

When playing a Video CD, you can switch between stereo, just the left channel or just the right channel.

- Press **AUDIO** repeatedly to select an audio language/channel option.

The language/channel information is shown on-screen.



Note

- Some DVD discs only allow you to change audio language from the disc menu. Press **TOP MENU** or **MENU** to access.
- To set DVD audio language preferences, see page 33.

Zooming the screen

Using the zoom feature you can magnify a part of the screen by a factor of 2 or 4, while watching a DVD, DivX video/WMV title or Video CD or playing a JPEG disc.

1 During playback, use the **ZOOM** button to select the zoom factor (Normal, 2x or 4x).

- Since DVD, Video CD, DivX video/WMV title and JPEG pictures have a fixed resolution, picture quality will deteriorate, especially at 4x zoom. This is not a malfunction.


2 Use the cursor buttons to change the zoomed area.

You can change the zoom factor and the zoomed area freely during playback.

- If the navigation square at the top of the screen disappears, press **ZOOM** again to display it.

Switching camera angles

Some DVD discs feature scenes shot from two or more angles — check the disc box for details.

When a multi-angle scene is playing, a  icon appears on screen to let you know that other angles are available (this can be switched off if you prefer — see *Display settings* on page 34).

- **During playback, press  ANGLE to switch angle.**

Displaying disc information

Various track, chapter and title information, such as the elapsed and remaining playing time can be displayed on-screen while a disc is playing.

- **To show/switch/hide the information displayed, press DISPLAY repeatedly.**
 - When a disc is playing, the information appears at the top of the screen. Keep pressing **DISPLAY** to change the displayed information.

Chapter 6

Audio Settings and Video Adjust menus


Audio Settings menu

The **Audio Settings** menu offers features for adjusting the way discs sound.

- 1 Press **HOME MENU** and select '**Audio Settings**' from the on-screen display.



- 2 Select and change settings using the **↑/↓/←/→** (cursor) buttons, and **ENTER**.

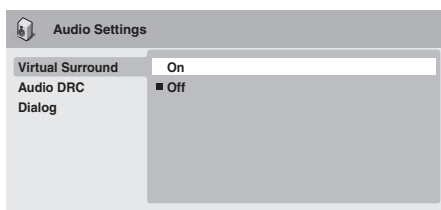

Audio DRC

- Settings: **High, Medium, Low, Off** (*default*)

When watching Dolby Digital DVDs at low volume, it's easy to lose the quieter sounds completely — including some of the dialog. Switching Audio DRC (Dynamic Range Control) to on can help by bringing up the quieter sounds, while controlling loud peaks.

How much of a difference you hear depends on the material you're listening to. If the material doesn't have wide variations in volume, you may not notice much change.

Note

- Audio DRC is only effective with Dolby Digital audio sources.
- Audio DRC is only effective through the digital output when **Digital Out** (page 32) is set to **On**, and **Dolby Digital Out** (page 32) is set to **Dolby Digital > PCM**.
- The effect of Audio DRC also depends on your speakers and AV receiver settings.

Virtual Surround

- Settings: **On, Off** (*default*)

Switch on Virtual Surround to enjoy realistic surround sound effects from just two speakers.

Tip

- You can also use the **SURROUND** button on the remote control to switch Virtual Surround on.

Note

- 96 kHz linear PCM audio is automatically downsampled to 48 kHz if Virtual Surround is switched on.
- The **Audio Output Mode** (page 36) must be set to **2 Channel** in order to be able to use Virtual Surround.

- If the player is outputting Dolby Digital, DTS or MPEG bitstream audio (in other words, no conversion to PCM), Virtual Surround has no effect on the audio from the digital output. See *Digital Audio Out settings* on page 32 for how to set up the digital output formats.
- How good the surround effect is varies with the disc.

Dialog

- Settings: **High, Medium, Low, Off** (*default*)

The Dialog feature is designed to make the dialog stand out from other background sounds in the soundtracks.


Video Adjust menu

From the **Video Adjust** screen you can adjust various settings that affect how the picture is presented.

- 1 Press **HOME MENU** and select '**Video Adjust**' from the on-screen display.



- 2 Make settings using the **↑/↓/←/→** (cursor) buttons, and **ENTER**.

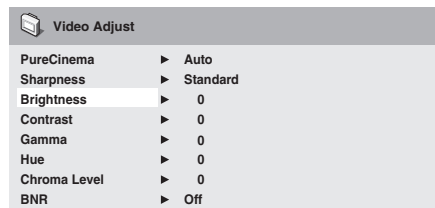

You can adjust the following picture quality settings:

- **PureCinema** – When watching DVDs, PureCinema optimizes the picture quality. The default setting is **Auto**, but if the picture appears unnatural, then set to **Video1** or **Video2**, as appropriate.
- **Sharpness** – Adjusts the sharpness of edges in the picture (**Fine, Standard** (*default*), **Soft**).
- **Brightness** – Adjusts the overall brightness (**-20** to **+20**).
- **Contrast** – Adjusts the contrast between light and dark (**-16** to **+16**).
- **Gamma** – Adjusts the 'gradation' of the picture (**-3** to **+3**).
- **Hue** – Adjusts the red/green balance (**green 9** to **red 9**).
- **Chroma Level** – Adjusts how saturated colors appear (**-9** to **+9**).
- **BNR** – Switches on/off block noise reduction (**On, Off** (*default*)).

Adjust the **Brightness**, **Contrast**, **Hue** and **Chroma Level** settings using the **←/→** (cursor left/right) buttons.



- 3 Press **ENTER** to return to the **Video Adjust** screen, or **HOME MENU** to exit.

07 Chapter 7 Initial Settings menu

Using the Initial Settings menu

The Initial Settings menu provides audio and video output settings, parental lock settings, and display settings, among others.

If an option is grayed out it means that it cannot be changed at the current time. This is usually because a disc is playing. Stop the disc, then change the setting.

1 Press HOME MENU and select 'Initial Settings'.



2 Use the cursor buttons and ENTER to select the setting and option you want to set.

All the settings and options are explained on the following pages.

Note

- In the table below, the default option is marked with a •.
- The **Digital Audio Out** settings only need to be set if you have connected the digital output of this player to an AV receiver, or other equipment.
- Check the operating instructions supplied with your other equipment to see which digital audio formats it's compatible with.
- Some settings, such as **TV Screen**, **Audio Language** and **Subtitle Language** may be overridden by the DVD disc. Often these settings can also be made from the DVD disc menu.
- The **HDMI Out** and **HDMI Color** settings only need to be set if you connected this player to an HDMI-compatible component using the HDMI connector.
- The **Digital Audio Out** and **Speakers** settings cannot be set if the player is connected to an HDMI-compatible component using the HDMI connector. Additionally, these settings may be changed automatically.

Digital Audio Out settings

Setting	Option	What it means
HDMI Out	LPCM (2CH)	Set if your monitor or device only accepts stereo input. On this setting multichannel audio is downmixed to 2 channels for stereo linear PCM output.
	LPCM (5.1CH)	Set if the monitor or device you have connected using HDMI is compatible with Linear PCM multichannel formats. All audio signals are output as linear PCM 5.1 format. (Use this setting if you want to decode all streams by a player.)
	Auto •	Dolby Digital, DTS, MPEG and SACD sources are processed according to how they were encoded, and linear PCM sources are heard as is.
	Off	No HDMI audio output. Choose this option when you want to change the Digital Audio Out and Speakers settings.
Digital Out	On •	Digital audio is output from the digital outputs. <i>Note that there is no digital output when playing SACDs and some DVD-Audio discs regardless of this setting.</i>
	Off	No digital audio output.
Dolby Digital Out	Dolby Digital •	Dolby Digital encoded digital audio is output when playing a Dolby Digital DVD disc.
	Dolby Digital > PCM	Dolby Digital audio is converted to PCM audio before being output.
DTS Out	DTS •	DTS encoded digital audio is output when playing a DTS disc. (Noise will be output if your amplifier/receiver is not compatible with DTS audio.)
	DTS > PCM	No digital audio is output when playing a DTS disc. DTS audio is converted to PCM audio before being output.
Linear PCM Out	Down Sample On •	96 kHz digital audio is converted to 48 kHz for digital output. <i>Note that High sampling rate DVD-Audio discs (192 kHz or 176.4 kHz) automatically output down-sampled audio through the digital outputs.</i>
	Down Sample Off	96 kHz digital audio is output as is at 96 kHz.
MPEG Out	MPEG > PCM •	MPEG encoded digital audio is converted to PCM audio for digital output.
	MPEG	MPEG encoded digital audio is output as is.

Video Output settings

Setting	Option	What it means
TV Screen <i>(This setting effective for analog and HDMI video output. See also Screen sizes and disc formats on page 41.)</i>	4:3 (Letter Box) •	Set if you have a conventional 4:3 TV. Widescreen movies are shown with black bars top and bottom.
	4:3 (Pan & Scan)	Set if you have a conventional 4:3 TV. Widescreen movies are shown with the sides cropped so that the image fills the screen.
	16:9 (Wide)	Set if you have a widescreen TV.
	16:9 (Compressed)	This can only be selected when Resolution (Max) is set to 1920x1080p , 1920x1080i or 1280x720p . Video in 4:3 can be properly displayed on a 16:9 high definition television (with black bars shown on either side of the screen).
Resolution (Max) <i>(The default when connected to another device using an HDMI cable is 720x480p.)</i>	1920x1080p	Set if your TV supports 1920 x 1080 pixel progressive-scan video (24 Hz frame rate is not supported).
	1920x1080i	Set if your TV supports 1920 x 1080 pixel interlace video.
	1280x720p	Set if your TV supports 1280 x 720 pixel progressive-scan video.
	720x480p	Set if your TV supports 720 x 480 pixel progressive-scan video.
	720x480i •	Set if your TV supports 720 x 480 pixel interlace video.
HDMI Color	Full range RGB	If colors are weak, this gives brighter colors and deeper black.
	RGB	Use this setting if colors appear overly rich on the Full range RGB setting.
	Component •	Outputs component video format (default setting for HDMI-compatible devices).

Language settings

Setting	Option	What it means
Audio Language	English •	If there is an English soundtrack on the disc then it will be played.
	<i>Languages as displayed</i>	If there is the language selected on the disc, then it will be played.
	Other Language	Select to choose a language other than the ones displayed (see page 41).
Subtitle Language <i>(See also Displaying external subtitle files on page 9.)</i>	English •	If there are English subtitles on the disc then they will be displayed.
	<i>Languages as displayed</i>	If there is the subtitle language selected on the disc, then it will be displayed.
	Other Language	Select to choose a language other than the ones displayed (see page 41).
DVD Menu Lang.	w/Subtitle Lang. •	DVD disc menus will be displayed in the same language as your selected subtitle language, if possible.
	<i>Languages as displayed</i>	DVD disc menus will be displayed in the selected language, if possible.
	Other Language	Select to choose a language other than the ones displayed (see page 41).
Subtitle Display	On •	Subtitles are displayed according to your selected subtitle language (see above).
	Off	Subtitles are always off by default when you play a DVD disc (note that some discs override this setting).

Display settings

Setting	Option	What it means
OSD Language	English •	On-screen displays of the player are in English.
	<i>Languages as displayed</i>	On-screen displays are shown in the language selected.
Angle Indicator	On •	A camera icon is displayed on-screen during multi-angle scenes on a DVD disc.
	Off	No multi-angle indication is shown.

Options settings

Setting	Option	What it means
HDMI Control	On •	Select when using the HDMI Control function. See <i>HDMI Control</i> on page 6.
	Off	Select when not using the HDMI Control function. See <i>HDMI Control</i> on page 6.
Pure Audio Button	Available	The Pure Audio Mode is turned on and off using the PURE AUDIO button on the front panel.
	Unavailable •	The PURE AUDIO button on the front panel no longer functions.
SACD Playback	2ch Area •	Selects the 2 channel (stereo) SACD audio area of the disc for playback.
	Multi-ch Area	Selects the multi-channel SACD audio area of the disc for playback.
	CD Area	Selects the standard CD audio area of an SACD/CD hybrid disc for playback.
DVD Playback Mode	DVD-Audio •	All material on a DVD-Audio disc is playable.
	DVD-Video	Only the DVD-Video part of a DVD-Audio disc is playable.
DTS Downmix	STEREO •	Downmixes DTS for 2 channel output to regular stereo. (See also <i>DTS Downmix</i> on page 35.)
	Lt/Rt	Downmixes DTS for 2 channel output to be compatible with Dolby Surround matrix decoders. (See also <i>DTS Downmix</i> on page 35.)
Parental Lock	–	See <i>Parental Lock</i> on page 35.
DivX VOD	Display	See <i>About DivX® VOD content</i> on page 36.

Speakers settings

Setting	Option	What it means
Audio Output Mode	2 Channel •	The player outputs analog audio in stereo only. See also <i>Audio Output Mode</i> on page 36.
	5.1 Channel	The player outputs 5.1 channel analog audio. See also <i>Audio Output Mode</i> on page 36.
Speaker Distance	–	Specify the distance of your speakers from your listening position. See also <i>Speaker Distance</i> on page 39.
Speaker Installation	–	Specify the number and size of speakers in your system. See also <i>Speaker Installation</i> on page 39.

Parental Lock

- Default level: **Off**; Default password: *none*; Default Country/Area code: **us (2119)**

To give you some control over what your children watch on your DVD player, some DVD-Video discs feature a Parental Lock level. If your player is set to a lower level than the disc, the disc won't play.

Some discs also support the Country/Area Code feature. The player does not play certain scenes on these discs, depending on the Country/Area Code you set.




Note

- Not all discs use Parental Lock, and will play without requiring the password first.
- If you forget your password, you'll need to reset the player to register a new password (see *Resetting the player* on page 41).

Registering a new password

You must register a password before you can change the Parental Lock level or enter a Country code.

1 Select 'Options', then 'Password'.

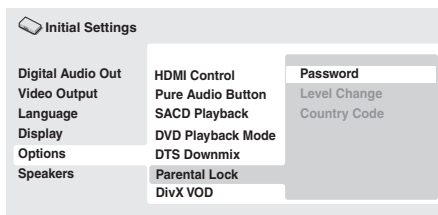

2 Use the number buttons to enter a 4-digit password.

The numbers you enter show up as asterisks (*) on-screen.

3 Press ENTER to register the password.

You will return to the **Options** menu screen.

Changing your password

To change your password, confirm your existing password then enter a new one.

1 Select 'Password Change'.

2 Use the number buttons to enter your existing password, then press ENTER.

3 Enter a new password and press ENTER.

This registers the new password and you will return to the Options menu screen.

Setting/changing the Parental Lock

1 Select 'Level Change'.

2 Use number buttons to enter your password, then press ENTER.

3 Select a new level and press ENTER.

- Press **←** (cursor left) repeatedly to lock more levels (more discs will require the password); press **→** (cursor right) to unlock levels. You can't lock level 1.

This sets the new level and you will return to the **Options** menu screen.

Setting/changing the Country/Area code

You can find the *Country/Area code list* on page 46.

1 Select 'Country Code'.

2 Use number buttons to enter your password, then press ENTER.

3 Select a Country/Area code and press ENTER.


There are two ways you can do this:

- Select by code letter: Use **↑/↓** (cursor up/down) to change the Country/Area code.
- Select by code number: Press **→** (cursor right) then use the number buttons to enter the 4-digit Country/Area code.

The new Country/Area code is set and you will return to the **Options** menu screen. Note that the new Country/Area code doesn't take effect until the next disc is loaded (or the current disc is reloaded).

DTS Downmix

- Default setting: **STEREO**

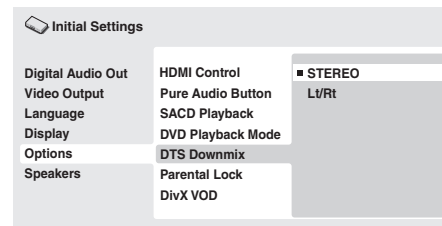

If you've selected **DTS > PCM** in *DTS Out* on page 32 or **2 Channel** in *Audio Output Mode* on page 34, you can choose the way the signal is downmixed to PCM audio. **STEREO** will downmix the DTS signal to 2-channel stereo, whereas **Lt/Rt** will downmix to a 2-channel signal compatible with Dolby surround matrix decoders. (This allows you to hear surround sound if your AV receiver or amplifier has Dolby Pro Logic capability.)

07 About DivX® VOD content


In order to play DivX VOD (video on demand) content on this player, you first need to register the player with your DivX VOD content provider. You do this by generating a DivX VOD registration code, which you submit to your provider.

Important

- DivX VOD content is protected by a DRM (Digital Rights Management) system. This restricts playback of content to specific, registered devices.
- If you load a disc that contains DivX VOD content not authorized for your player, the message **"Authorization Error"** is displayed and the content will not play.
- Resetting the player (as described in *Resetting the player* on page 41) will not cause you to lose your registration code.


Displaying your DivX VOD registration code

- 1 Press **HOME MENU** and select **'Initial Settings'**.
- 2 Select **'Options'**, then **'DivX VOD'**.

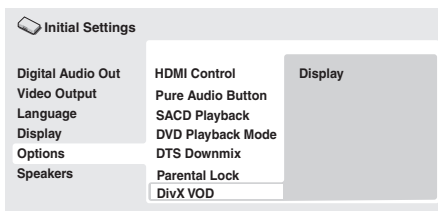

- 3 Select **'Display'**.

Your 8-digit registration code is displayed.

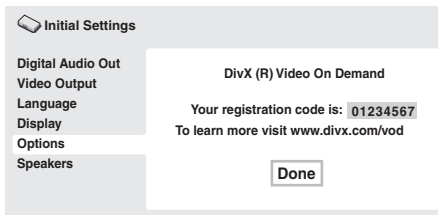

Make a note of the code as you will need it when you register with a DivX VOD provider.


Playing DivX® VOD content

Some DivX VOD content may only be playable a fixed number of times. When you load a disc containing this type of DivX VOD content, the remaining number of plays is shown on-screen and you then have the option of playing the disc (thereby using up one of the remaining plays), or stopping. If you load a disc that contains expired DivX VOD content (for example, content that has zero remaining plays), the message **"Rental Expired"** is displayed.

If your DivX VOD content allows an unlimited number of plays, then you may load the disc into your player and play the content as often as you like, and no message will be displayed.

Audio Output Mode

- Default setting: **2 Channel**

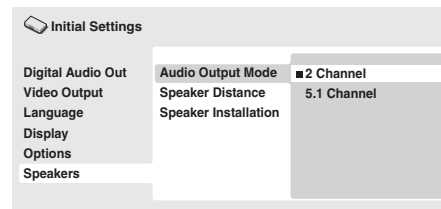

If you connected this player to your amplifier using the 5.1 channel analog outputs (front, surround, center and subwoofer outs), set this to **5.1 Channel**; if you connected only the stereo outs, set to **2 Channel**.

Note

- Even if you set **Audio Output Mode** to **5.1 Channel**, you'll only get sound from all speakers when playing a 5.1 channel multi-channel disc.
- When set to **5.1 Channel**, only the front left/right channels are output from the **AUDIO OUT (2ch)** jacks. Change to **2 Channel** if you want to listen to downmixed stereo audio (for example, because you are listening through the TV's built-in speakers).
- When set to **5.1 Channel** there is no digital output when playing DVD-Audio.
- If you set to **2 Channel**, Dolby Digital, DTS and MPEG audio is mixed down to two channels so you still hear all the audio recorded on the disc. With DTS encoded audio, you can choose how the signal is downmixed to PCM audio. See *DTS Downmix* on page 35 to change the downmix setting.
- Some DVD-Audio discs don't allow down-mixing of audio. These discs always output multi-channel audio regardless of the setting made here.

About the audio output settings

The table below shows how the audio settings you make in the Initial Settings menu (page 32) affect the output from the 2 channel and the 5.1 channel analog outputs, and from the digital outputs with various types of disc.

Disc audio format	Player setting	Front L/R analog outputs ¹	Surround L/R, Center, Subwoofer outputs	Digital outputs PCM convert ²	Bitstream ³	
DVD	Dolby Digital	2ch 5.1ch	2ch downmix Front L/R	— Surround L/R, Center, Subwoofer	2ch downmix	Dolby Digital
	Dolby Digital karaoke	2ch/5.1ch	Left/Right	—	Left/Right	Dolby Digital
	Linear PCM	2ch/5.1ch	Left/Right	—	Left/Right	Left/Right
	DTS	2ch 5.1ch	2ch downmix Front L/R	— Surround L/R, Center, Subwoofer	2ch downmix	DTS
	MPEG	2ch 5.1ch	Left/Right Front L/R	— Surround L/R, Center, Subwoofer	Left/Right	MPEG
DVD-Audio	2ch 5.1ch	2ch downmix ⁴ Front L/R	— Surround L/R, Center, Subwoofer	2ch downmix ⁵	2ch downmix ⁵	
DVD-RW (VR mode)	2ch/5.1ch	Left/Right ⁶	—	Left/Right	Dolby Digital MPEG or PCM	
Super Audio CD	2ch 5.1ch	2ch downmix Front L/R	— Surround L/R, Center, Subwoofer	—	—	
Audio CD/MP3/WMA/ MPEG-4 AAC	2ch/5.1ch	Left/Right	—	Left/Right	Left/Right	
DTS CD	2ch 5.1ch	2ch downmix Front L/R	— Surround L/R, Center, Subwoofer	2ch downmix	DTS	
Video CD	2ch/5.1ch	Left/Right	—	Left/Right	Left/Right	

1. When **Audio Output Mode** is set to **2 Channel**, the **AUDIO OUT (5.1ch) FRONT L/R** jacks act as a second pair of stereo audio outputs.

2. **Dolby Digital > PCM**, **DTS > PCM** or **MPEG > PCM** setting (page 32)

3. **Dolby Digital**, **DTS** or **MPEG** setting (page 32)

4. Discs that prohibit downmixing will be output as 5.1 channel even if **2 Channel** is selected as the **Audio Output Mode** setting (page 36).

5. Discs that prohibit downmixing also mute the digital output.

6. When **Audio Output Mode** is set to **5.1 Channel**, mono sources are heard from the center speaker only.

About the HDMI audio output settings

The table below shows how the audio settings you make in the **HDMI Out** (page 32) and **Audio Output Mode** (page 36) screens affect the HDMI output with various types of disc.

Disc audio format		HDMI Out setting		
		LPCM (2CH)	LPCM (5.1CH)	Auto
DVD	Dolby Digital ¹	2ch downmix	5.1ch ²	Dolby Digital ³
	Dolby Digital (karaoke)	Left/Right	5.1ch ²	Dolby Digital ³
	Linear PCM ¹	Left/Right	Left/Right	Left/Right
	DTS	2ch downmix	5.1ch ²	DTS ³
	MPEG ¹	Left/Right	5.1ch ²	MPEG ³
DVD-Audio (with CPPM) ⁴		Left/Right or 2ch downmix ⁵	5.1ch ²	5.1ch ²
DVD-Audio (without CPPM)		Left/Right or 2ch downmix ⁵	5.1ch ²	5.1ch ²
Super Audio CD ⁶		Left/Right	5.1ch ²	5.1ch (DSD) ^{2,3}
Audio CD/MP3/WMA/MPEG-4 AAC		Left/Right	Left/Right	Left/Right
DTS CD		Left/Right	5.1ch ²	DTS ³
Video CD		Left/Right	Left/Right	Left/Right

1. These formats include DVD-RW discs.

2. If the HDMI device you are using is not compatible with Multi-ch formats, the output signal is the same as **LPCM (2CH)** setting.

3. If the HDMI device you are using is not compatible with these compressed formats, the signal is output as linear PCM.

4. If the connected component is not DVD-Audio (CPPM) compatible, it is not possible to output CPPM copy-controlled DVD-Audio sources from the HDMI connection (see HDMI output with DVD-Audio and SACD sources below for more on this).

5. If the discs prohibit downmixing, output **AUDIO OUT (5.1ch) FRONT L/R**.

6. If the connected HDMI device is not compatible with protected audio contents (such as DVD-Audio or SACD), SACD audio is not output from the HDMI terminal.

HDMI output with DVD-Audio and SACD sources

The way audio sources are output from the HDMI terminal depends on the specification of the connected component.

Components specification		Example component	Disc format (DVD-Audio or SACD)	
			2ch	5.1ch
Component/ output	SACD, DVD-Audio and 5.1 channel compatible on HDMI ¹	VSX-91TX	2ch	5.1ch ²
	DVD-Audio and 5.1 channel compatible on HDMI ¹	VSX-94TXH VSX-92TXH	2ch	5.1ch ²
	DVD-Audio and 2 channel compatible on HDMI ¹	PDP-6010FD PDP-5010FD	2ch	Left/Right or 2ch downmix ³
	Incompatible with DVD-Audio on HDMI ¹	PDP-5050HD PDP-4350HD	No sound ⁴	No sound ⁴

1. This unit checks the specification of the connected component (such sample rate/multichannel limitations and compatibility with protected audio contents) and outputs the signal accordingly. Note that 'DVD-Audio compatible' indicates compatibility with protected audio contents. 'SACD compatible' indicates compatibility with DSD signals.

2. If **HDMI Out** setting (page 32) is set to **LPCM (2CH)**, DVD-Audio multichannel sources will be downmixed to stereo. (In cases where the source is downmix-prohibited, only the front left/right channels are output.) For SACD sources, the 2 channel (stereo) SACD audio area is selected. If the output resolution is 480i or 480p, audio output may be limited to 2 channel (depending to the connected component).

3. In cases where the source is downmix-prohibited, only the front left/right channels are output.

4. If CPPM shows in the front panel display, it means it is not possible to output CPPM copycontrolled DVD-Audio sources from the HDMI connection. Discs with no CPPM protection are limited to 2 channel output.


Speaker Distance

- Default settings: all speakers **10.0ft**


You only need to make this setting if you connected this player to your amplifier using the 5.1 channel analog outputs.

These settings do not affect any digital audio output.

To get the best surround sound from your system, you should set up the speaker distances from your listening position.

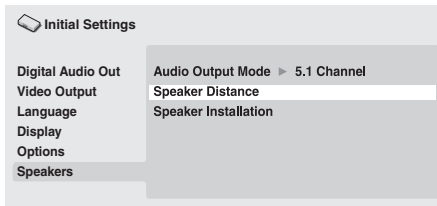

- 1 Use the **↑/↓** (cursor up/down) to select a speaker.
 - The **L** and **R** speakers are paired; you can't set them differently.

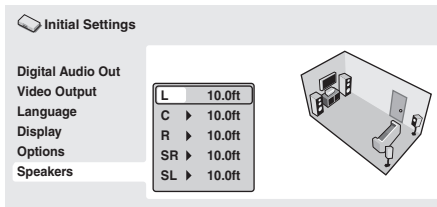

- 2 Press **⇒** (cursor right) to change the speaker distance for the highlighted speaker.
- 3 Use the **↑/↓** (cursor up/down) to change the distance.
 - When you change the distance settings of the front left (**L**) or front right (**R**) speakers, all the other speaker distances change relative to it.
 - Front left/right (**L/R**) speaker distances can be set from 1.0 ft to 30.0 ft in 1.0 ft increments.
 - The center speaker (**C**) can be set from -7.0 ft to 0.0 ft relative to the front left/right speakers.
 - Surround left/right (**SL/SR**) speakers can be set from -2.0 ft to 0.0 ft relative to the front left/right speakers.
 - You can't set the subwoofer (**SW**) distance.
- 4 Press **←** (cursor left) to go back to the speaker list if you want to modify another speaker, or press **ENTER** to exit the Speaker Distance screen.

Note


- During playback of MPEG-audio and DVD-Video discs, the effective **C**, **SL** and **SR** speaker distance settings are -30.0 ft to 0.0 ft relative to the front left/right speakers.
- **Speaker Distance** settings do not affect SACD playback.

Speaker Installation

- Default settings: **L/R: Large** | **C: Large** | **SL/SR: Large** | **SW: On**


You only need to make this setting if you connected this player to your amplifier using the 5.1 channel analog outputs.

This setting does not affect digital audio output.

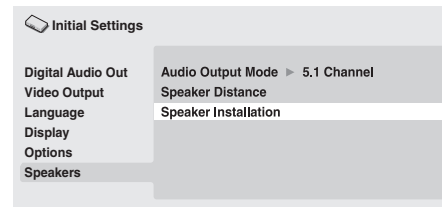

Use the **Speaker Installation** screen to tell the player what kinds of speakers you have connected.

- 1 Use the **↑/↓** (cursor up/down) buttons to select a speaker.
 - The **L** and **R**, and **SL** and **SR** speakers are paired; you can't set them differently.

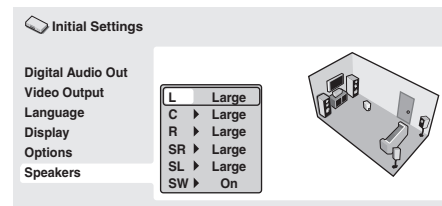

- 2 Press **⇒** (cursor right) to modify the selected speaker.
- 3 Use the **↑/↓** (cursor up/down) buttons to change the current setting.
 - You can see the effect of your changes in the room graphic on the right of the screen.
 - Except for the subwoofer, you can set speaker size to **Large** or **Small**. If the main speaker cone in the speaker is 12 cm or more, set to **Large**, otherwise set to **Small** (or **Off** if you don't have that speaker).
 - If you set the front **L** and **R** speakers to **Small**, the center and surround speakers are automatically set to **Small** and the subwoofer to **On**.
 - The subwoofer can only be set to **On** or **Off**.
- 4 Press **←** (cursor left) to go back to the speaker list if you want to modify another speaker, or press **ENTER** to exit the Speaker Installation screen.

Additional information

Taking care of your player and discs

General

Hold discs by the edge or by the center hole and edge.

When you're not using a disc, return it to its case and store upright. Avoid leaving discs in excessively cold, humid, or hot environments (including under direct sunlight).


Don't glue paper or put stickers on to discs. Do not use a pencil, ball-point pen or other sharp-tipped writing instrument to write on the disc.



Don't use self-adhesive disc labels on discs as these can cause the disc to warp slightly during playback causing distortion in the picture and/or sound.

Damaged and shaped discs


Do not use cracked, chipped, warped, or otherwise damaged discs as they may damage the player.

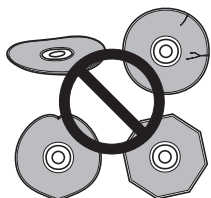

This player is designed to be used only with conventional, fully circular discs. Do not use shaped discs. Pioneer disclaims all liability arising in connection with the use of shaped discs.

Cleaning discs

Fingerprints and dust on discs can affect playback performance. Clean using a soft, dry cloth, wiping the disc lightly from the center to the outside edge as shown below.

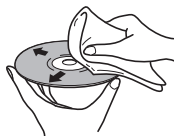

If necessary, use a cloth soaked in alcohol, or a commercially available CD/DVD cleaning kit to clean a disc thoroughly. Never use benzine, thinner or other cleaning agents, including products designed for cleaning vinyl records.

Cleaning the unit's exterior

Unplug the unit before cleaning.

Use a dry cloth to wipe off dust and dirt. If the surfaces are very dirty, wipe with a soft cloth dipped in some neutral cleanser diluted five or six times with water and wrung out well, then wipe again with a dry cloth.

Do not use furniture wax or cleaners. Never use thinners, benzine or insecticide sprays or other chemicals on or near this unit.

If you use a chemical-impregnated cleaning cloth, read the instructions carefully before use. These cloths may leave smear marks on half-mirror finish surfaces; if this happens, finish with a dry cloth.

Cleaning the pickup lens

The DVD player's lens should not become dirty in normal use, but if for some reason it should malfunction due to dust or dirt, consult your nearest Pioneer-authorized service center. We do not recommend using commercially available lens cleaners for CD players.

Condensation

Condensation may form inside the player if it is brought into a warm room from outside, or if the temperature of the room rises quickly. Although the condensation won't damage the player, it may temporarily impair its performance. Leave it to adjust to the warmer temperature for about an hour before switching on.

Moving the player

If you need to move the player, first press **⏻** **STANDBY/ON** on the front panel or remote control to turn the player off. Wait for **"-OFF-"** to disappear from the display, then unplug the power cable. Never lift or move the unit during playback — discs rotate at a high speed and may be damaged.

Caution for when the unit is installed in a rack with a glass door

Do not press the **▲** **OPEN/CLOSE** button on the remote control to open the disc table while the glass door is closed. The door will hamper movement of the disc table, and the disc table could be damaged.

Screen sizes and disc formats

DVD-Video discs come in several different screen aspect ratios, ranging from TV programs, which are generally 4:3, to CinemaScope widescreen movies, with an aspect ratio of up to about 7:3.

Televisions, too, come in different aspect ratios; 'standard' 4:3 and widescreen 16:9.

Widescreen TV users

If you have a widescreen TV, the **TV Screen** setting (page 33) of this player should be set to **16:9 (Wide)** or **16:9 (Compressed)**.

When you watch discs recorded in 4:3 format with the **16:9 (Wide)** setting, you can use the TV controls to select how the picture is presented. Your TV may offer various zoom and stretch options; see the instructions that came with your TV for details.

Please note that some movie aspect ratios are wider than 16:9, so even though you have a widescreen TV, these discs will still play in a 'letter box' style with black bars at the top and bottom of the screen.

Standard TV users

If you have a standard TV, the **TV Screen** setting (page 33) of this player should be set to **4:3 (Letter Box)** or **4:3 (Pan & Scan)**, depending on which you prefer.

Set to **4:3 (Letter Box)**, widescreen discs are shown with black bars top and bottom.



Set to **4:3 (Pan & Scan)**, widescreen discs are shown with the left and right sides cropped. Although the picture looks larger, you don't actually see the whole picture.



Please note that many widescreen discs override the player's settings so that the disc is shown in letter box format regardless of the setting.

Note

- Using the **16:9 (Wide)** or **16:9 (Compressed)** setting with a standard 4:3 TV, or either of the 4:3 settings with a widescreen TV, will result in a distorted picture.


Resetting the player

Use this procedure to reset all the player's settings to the factory default.

- 1 **Switch the player into standby.**
- 2 **Using the front panel buttons, hold down the ■ (stop) button and press Ⓞ STANDBY/ON to switch the player back on.** All the player's settings are now reset.

DVD-Video regions

All DVD-Video discs carry a region mark on the case somewhere that indicates which region(s) of the world the disc is compatible with. Your DVD player also has a region mark, which you can find on the rear panel. Discs from incompatible regions will not play in this player. In this case the attention sentence **"Incompatible disc region number Can't play disc"** is displayed on screen. Discs marked **ALL** will play in any player. The diagram below shows the various DVD regions of the world.

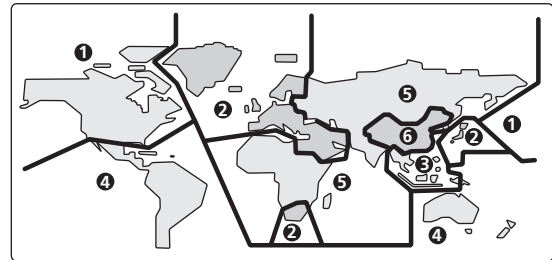

Selecting languages using the language code list

Some of the language options (such as **DVD Menu Lang.** in the Initial Settings) allow you to set your preferred language from any of the 136 languages listed in the language code list on *Language code list* on page 46.

- 1 **Select 'Other Language'.**
- 2 **Use the ←/→ (cursor left/right) buttons to select either a code letter or a code number.**
- 3 **Use the ↑/↓ (cursor up/down) buttons to select a code letter or a code number.**

See *Language code list* on page 46 for a complete list of languages and codes.

Incorrect operation is often mistaken for trouble or malfunction. If you think that there is something wrong with this component, check the points below. Sometimes the trouble may lie in another component. Inspect the other components and electrical appliances being used. If the trouble cannot be rectified after checking the items below, ask your nearest Pioneer authorized service center or your dealer to carry out repair work.

Problem	Remedy
The disc won't play or is automatically ejected after loading.	<ul style="list-style-type: none"> • Make sure the disc is free from dirt and dust and is not damaged (page 40). • Make sure the disc is loaded with the label side face-up and aligned properly in the disc tray guide. • Incompatible region number: If the region number on a DVD-Video disc does not match the number on the player, the disc cannot be used (page 41). In this case the attention sentence "Incompatible disc region number Can't play disc" is displayed on screen. • Condensation inside the player: Allow time for condensation to evaporate. Avoid using the player near an air-conditioning unit. • Disc is loaded upside down: Reload the disc with the label side face up.
DVD-Audio playback stops.	<ul style="list-style-type: none"> • The disc may have been illegally copied.
Picture playback stops and the operation buttons cannot be used.	<ul style="list-style-type: none"> • Press ■ STOP, then start playback again (▶ PLAY). • Press and hold the front panel ⏻ STANDBY/ON button for about 10 seconds to switch the unit off, then press again to switch back on. • Switch the power off once, unplug from the wall socket, then plug back in and switch on again using the front panel ⏻ STANDBY/ON button.
New settings made in the Setup screen menus while a disc is playing are ineffective.	<ul style="list-style-type: none"> • Some settings can be changed while a disc is playing, but are not effective until the disc is stopped then restarted: Press ■ STOP, then start playback again (▶ PLAY).
Settings are canceled.	<ul style="list-style-type: none"> • When the power is cut due to power failure or by unplugging the power cord, settings will be canceled: Press ⏻ STANDBY/ON on the front panel to turn the player off. Wait for "-OFF-" to disappear from the display, then unplug the power cord.
The remote control doesn't seem to work.	<ul style="list-style-type: none"> • The remote control is too far from the player, or the angle with the remote sensor is too wide: Use the remote within its operating range (page 18). • The batteries are exhausted: Put in new ones (page 7). • The CONTROL IN jack on the rear panel is connected: Point the remote control at the connected component to control this player (page 14). • When the Startup Navigator is running, buttons other than ▲ OPEN/CLOSE, ↑/↓/←/→, ENTER and RETURN will not function.
No picture/No color.	<ul style="list-style-type: none"> • Incorrect video connections: Check that connections are correct and that plugs are inserted fully. Also check the video cable for damage. • TV/monitor or AV amplifier settings are incorrect: Check the instruction manual of the connected equipment. • The output resolution is set to 1080p/1080i/720p/480p but your TV/monitor is not compatible with these formats: See <i>Switching the video output to 480i using the front panel controls</i> on page 12 for how to set to 480i. • Check that the PURE AUDIO indicator is not lit. If it is, press the PURE AUDIO button (See also <i>Front panel</i> on page 16).
Screen is stretched or aspect does not change.	<ul style="list-style-type: none"> • The TV Screen setting in the Initial Settings menu is incorrect. See <i>Screen sizes and disc formats on page 41</i> for how to set it correctly for your TV/monitor.
Picture disturbance during playback or the picture is dark.	<ul style="list-style-type: none"> • This player is compatible with Macro-Vision System copy guard. Some discs include a copy prevention signal, and when this type of disc is played back, stripes etc., may appear on some sections of the picture depending on the TV. This is not a malfunction. • Due to the player's copy protection circuits, connection of this device through a VCR or an AV selector may prevent recording or cause picture problems. This is not a malfunction. • Check whether the TV system is properly set (page 41).
The front panel display is dark or nothing is displayed.	<ul style="list-style-type: none"> • Check the FL DIMMER setting. Switch the setting with the FL DIMMER button on the remote control (page 18).

Problem	Remedy
No audio, or audio is distorted.	<ul style="list-style-type: none"> No audio is output during slow motion playback or when scanning discs other than Audio CDs and SACDs. Some DVD discs do not output digital audio: Switch your amplifier to the player's analog outputs. Check that the disc is free from dust and dirt, and that it is not damaged (page 40). Check that all interconnects are firmly inserted. Check that the plugs and terminals are free of dirt, oxide, etc. and clean if necessary. Also check the cable for damage. Make sure the player's output is not connected to the amplifier's phono (turntable) inputs. Check your amplifier/receiver's settings (volume, input function, speaker settings, etc.).
The analog audio is OK, but there appears to be no digital audio signal.	<ul style="list-style-type: none"> Make sure that the Digital Out (page 32) is set to On. Check that the Dolby Digital Out, DTS Out and MPEG Out (page 32) are suitable for your amplifier/receiver — check the instruction manual that came with your amplifier/receiver. SACDs and some DVD-Audio discs do not output digital audio. Listen through the player's analog audio outputs. Check that the PURE AUDIO indicator is not lit. If it is, press the PURE AUDIO button (See also <i>Front panel</i> on page 16).
Noticeable difference in DVD and CD volume.	<ul style="list-style-type: none"> This is due to differences in the audio format and is not a malfunction.
Cannot play multi-channel audio.	<ul style="list-style-type: none"> Make sure that Audio Output Mode (page 36) is set to 5.1 Channel. Check that the Dolby Digital Out, DTS Out and MPEG Out (page 32) are suitable for your amplifier/receiver—check the instruction manual that came with your amplifier/receiver. DVD-Audio and SACDs do not output multichannel digital audio. Listen through the player's analog outputs. Check that the settings in the Speaker Installation screen are correct (page 34). Check the audio options available from the disc menu.
Cannot listen to high-sampling rate audio through the digital output.	<ul style="list-style-type: none"> Make sure that Linear PCM Out (page 32) is set to Down Sample Off. As a copy-protection measure, some DVDs do not output 96 kHz audio. In this case, even if set to Down Sample Off, the player automatically outputs the audio at 48 kHz. This is not a malfunction.
Cannot output 192 kHz or 176.4 kHz digital audio.	<ul style="list-style-type: none"> The player does not output digital audio at these sampling rates. The digital output is automatically downsampled.
Cannot output 96 kHz or 88.2 kHz digital audio.	<ul style="list-style-type: none"> Check that Linear PCM Out (page 32) is set to Down Sample Off. Some discs are digital copy protected and do not output high sampling rate digital audio. In this case the output is automatically downsampled.
DTS audio signals are not output from the DIGITAL AUDIO OUT (COAXIAL/OPTICAL).	<ul style="list-style-type: none"> If this unit is connected to a non-DTS compatible amplifier or decoder using a digital audio cable, set DTS Out (page 32) to DTS > PCM. If you do not do this, noise will be output when you play a DTS disc. If this unit is connected to a DTS-compatible amplifier or decoder using a digital audio cable, check the amplifier settings, and that the cable is properly connected.
Audio mix does not sound right or sounds incomplete (for example, inaudible dialog).	<ul style="list-style-type: none"> Make sure that Audio Output Mode (page 36) is set to 2 Channel if you've connected to the stereo inputs on your amplifier or TV.
Can't hear effect of Virtual Surround.	<ul style="list-style-type: none"> Virtual Surround does not work with SACD or DVD-Audio. The Virtual Surround effect is only output through the AUDIO OUT (2ch) analog audio outputs. Make sure that Audio Output Mode (page 36) is set to 5.1 Channel. The effectiveness of Virtual Surround varies with the disc.
The power automatically turns on.	<ul style="list-style-type: none"> This unit's power may be turned on when you control this unit from a connected TV. If you do not want this unit to be turned on in this way, set this unit's HDMI Control (page 34) to Off.
The power automatically turns off.	<ul style="list-style-type: none"> This unit's power may be turned off when you control this unit from a connected TV. If you do not want this unit to be turned off in this way, set this unit's HDMI Control (page 34) to Off.
Your TV and AV system automatically change inputs.	<ul style="list-style-type: none"> The connected TV and AV system automatically may change inputs in response to this unit starting playback or having the GUI screen (ex. Disc Navigator) displayed. If you do not want your TV and AV system to change inputs in this way, set this unit HDMI Control (page 34) to Off.

Problem	Remedy
No HDMI audio output.	<ul style="list-style-type: none"> • Check whether or not HDMI Out (page 32) is set to Off. • This unit has been designed to be compliant with HDMI (High-Definition Multimedia Interface). Depending on the component you have connected, unreliable signal transfers may result. • If the front panel HDMI indicator is lit: <ul style="list-style-type: none"> – You won't hear any sound from the HDMI output if the source component is only DVI/HDCP-compatible. • If the front panel HDMI indicator is unlit then: <ul style="list-style-type: none"> – Make sure that you've selected this player as the HDMI input in the settings for the component you're using. You may need to refer to the instruction manual of the component to do this. – Check that the HDMI cable is connected properly and that the cable isn't damaged. – Check that components connected using the HDMI interface are switched on and HDMI compatible. • Check that the PURE AUDIO indicator is not lit. If it is, press the PURE AUDIO button (See also <i>Front panel</i> on page 16).
No HDMI video output.	<ul style="list-style-type: none"> • Make sure that you've selected this player as the HDMI input in the settings for the component you're using. You may need to refer to the instruction manual of the component to do this. • Check that the HDMI cable is connected properly and that the cable isn't damaged. • Check that components connected using the HDMI interface are switched on and HDMI compatible. • This unit has been designed to be compliant with HDMI (High-Definition Multimedia Interface). Depending on the component you have connected, using a DVI connection may result in unreliable signal transfers. • Make sure the resolution on this player matches that of the component you have connected using HDMI. See <i>Resolution (Max)</i> on page 33 to change the HDMI resolution. See <i>Resetting the output resolution to the default setting with HDMI connection</i> on page 15 if you want to reset the output resolution. • Check that the PURE AUDIO indicator is not lit. If it is, press the PURE AUDIO button (See also <i>Front panel</i> on page 16). • Depending on the HDMI cable being used, 1080p output may not appear correctly.
No multichannel HDMI audio.	<ul style="list-style-type: none"> • Make sure that the HDMI Out (page 32) is set to Auto or LPCM (5.1CH) and that SACD Playback (page 34) is set to Multi-ch Area. See also <i>About the HDMI audio output settings</i> on page 38 and <i>HDMI output with DVD-Audio and SACD sources</i> on page 38.
A connected DVI component (with HDCP) doesn't work with this player.	<ul style="list-style-type: none"> • This unit has been designed to be compliant with HDMI (High-Definition Multimedia Interface). Depending on the component you have connected, using a DVI connection may result in unreliable signal transfers.
HDMI Control does not function.	<ul style="list-style-type: none"> • Verify that the HDMI cable is firmly connected. • Make sure that this unit's HDMI Control (page 34) is set to On. • Make sure that the HDMI Control for the connected components is set to On. For more information, refer to the operating manual for the connected component. • This function may not work properly if you have multiple components connected to a single plasma display or AV system (amplifier or AV receiver etc.). For more information refer to the operating manual of your plasma display or AV system. • You can enable HDMI Control by turning the HDMI Control setting to On for all components connected via HDMI cable. Check the video output from this unit once you have completed making connections and settings for all components. You will need to check the video output each time you change connected components or remove the HDMI cable. • Check whether the connected component supports HDMI Control or not. For more information refer to the operating manual of your plasma display or AV system (amplifier or AV receiver etc.). • Certain functions are not supported on some plasma displays. • This player does not support HDMI Control-compatible components other than those made by Pioneer. • This unit will not function properly with components that do not support HDMI Control, or when connected with components other than those made by Pioneer. • Note that HDMI Control may not operate properly if you do not use an HDMI cable that supports the HDMI 1.3 specification (Category 2) or later.

**Note**

- Static electricity or other external influences may cause malfunctioning of this unit. In this case, unplug the power cord and then plug back in. This will usually reset the unit for proper operation. If this does not correct the problem, please consult your nearest Pioneer service center.

Glossary

Analog audio	Direct representation of sound by an electrical signal. See also Digital audio .
Aspect ratio	The width of a TV screen relative to its height. Conventional TVs are 4:3; widescreen models are 16:9.
Bonus Group (DVD-Audio only)	An 'extra' group on some DVD-Audio discs that requires a key number to access.
Browsable pictures (DVD-Audio only)	A feature of some DVD-Audio discs in which the user can browse still pictures recorded on the disc as the audio is played.
Digital audio	Indirect representation of sound using numbers. See also Sampling frequency and Analog audio .
DivX	DivX is a media technology created by DivX, Inc. DivX media files contain not only video but also include advanced media features like menus, subtitles, and alternate audiotracks.
Dolby Digital	A multi-channel audio encoding system developed by Dolby Laboratories that enables far more audio to be stored on a disc than PCM encoding. See also PCM (Pulse Code Modulation) .
DRM	DRM (digital rights management) copy protection is a technology designed to prevent unauthorized copying by restricting playback, etc. of compressed audio files on devices other than the PC (or other recording equipment) used to record it. For detailed information, please see the instruction manuals or help files that came with your PC and/or software.
DTS	A multi-channel audio encoding system developed by Digital Theater Systems that enables far more audio to be stored on a disc than PCM encoding. See also PCM (Pulse Code Modulation) .
DSD (Direct Stream Digital)	The Digital Audio encoding system found on SACDs, that expresses the audio signals by the pulse density of one bit data.
EXIF (Exchangeable Image File)	A file format developed by FUJIFILM for digital still cameras. Digital cameras from various manufacturers use this compressed file format which carries date, time and thumbnail information, as well as the picture data.
File extension	A tag added to the end of a filename to indicate the type of file. For example, ".mp3" indicates an MP3 file.
HDMI	HDMI (High-Definition Multimedia Interface) is a high-speed digital interface which has the capability to support standard, enhanced, or high-definition video plus standard to multi-channel surround-sound audio on a single digital connection. HDMI features include uncompressed digital video, a bandwidth of up to 5 gigabytes per second and communication between the AV source and AV devices such as DTVs.
ISO 9660 format	International standard for the volume and file structure of CD-ROM discs.
JPEG	A standard file format used for still images. JPEG files are identified by the file extension ".jpg".
MP3	MP3 (MPEG1 audio layer 3) is a compressed stereo audio file format. Files are recognized by their file extension ".mp3".
MPEG-4 AAC	MPEG-4 AAC is a compressed stereo audio file format. Files are recognized by the extension ".m4a". Note that some files purchased with copyright protection (such as files from the iTunes store) may not playback.

MPEG audio	An audio format used on Video CDs and some DVD discs.
Packed PCM (DVD-Audio only)	A lossless compression system that enables more PCM audio to be stored on a DVD-Audio disc than would otherwise be possible.
PBC (PlayBack Control)	A system of navigating a Video CD through on-screen menus recorded onto the disc.
PCM (Pulse Code Modulation)	Digital audio encoding system found on CDs. Good quality, but requires a lot of data compared to Dolby Digital, DTS and MPEG encoded audio. See also Digital audio .
Progressive scan video	All the lines that make up a video picture are updated in one pass (compared to interlace which takes two passes to update the whole picture).
Regions (DVD-Video only)	These associate DVD-Video discs and players with particular areas of the world. See <i>DVD-Video regions</i> on page 41 for more information.
Sampling frequency	The rate at which sound is measured to be turned into digital audio data. The higher the rate, the better the sound quality. CD is 44.1 kHz; DVD can be up to 96 kHz. See also Digital audio .
Super Audio CD (SACD)	Super Audio CD is a high quality audio disc format that can accommodate high sampling rate stereo and multi-channel audio, as well as conventional CD audio all on the same disc.
WMA	WMA is short for Windows Media Audio and refers to an audio compression technology developed by Microsoft Corporation. Files are recognized by their file extension ".wma".
WMV	WMV is an acronym for Windows Media Video and refers to a video compression technology developed by Microsoft Corporation. Files are recognized by the file extension ".wmv".

Language code list

Language (Language code letter), **Language code**

Japanese (ja), 1001	Bhutani (dz), 0426	Kirghiz (ky), 1125	Sinhalese (si), 1909
English (en), 0514	Esperanto (eo), 0515	Latin (la), 1201	Slovak (sk), 1911
French (fr), 0618	Estonian (et), 0520	Lingala (ln), 1214	Slovenian (sl), 1912
German (de), 0405	Basque (eu), 0521	Laothian (lo), 1215	Samoa (sm), 1913
Italian (it), 0920	Persian (fa), 0601	Lithuanian (lt), 1220	Shona (sn), 1914
Spanish (es), 0519	Finnish (fi), 0609	Latvian (lv), 1222	Somali (so), 1915
Chinese (zh), 2608	Fiji (fj), 0610	Malagasy (mg), 1307	Albanian (sq), 1917
Dutch (nl), 1412	Faroese (fo), 0615	Maori (mi), 1309	Serbian (sr), 1918
Portuguese (pt), 1620	Frisian (fy), 0625	Macedonian (mk), 1311	Siswati (ss), 1919
Swedish (sv), 1922	Irish (ga), 0701	Malayalam (ml), 1312	Sesotho (st), 1920
Russian (ru), 1821	Scots-Gaelic (gd), 0704	Mongolian (mn), 1314	Sundanese (su), 1921
Korean (ko), 1115	Galician (gl), 0712	Moldavian (mo), 1315	Swahili (sw), 1923
Greek (el), 0512	Guarani (gn), 0714	Marathi (mr), 1318	Tamil (ta), 2001
Afar (aa), 0101	Gujarati (gu), 0721	Malay (ms), 1319	Telugu (te), 2005
Abkhazian (ab), 0102	Hausa (ha), 0801	Maltese (mt), 1320	Tajik (tg), 2007
Afrikaans (af), 0106	Hindi (hi), 0809	Burmese (my), 1325	Thai (th), 2008
Amharic (am), 0113	Croatian (hr), 0818	Nauru (na), 1401	Tigrinya (ti), 2009
Arabic (ar), 0118	Hungarian (hu), 0821	Nepali (ne), 1405	Turkmen (tk), 2011
Assamese (as), 0119	Armenian (hy), 0825	Norwegian (no), 1415	Tagalog (tl), 2012
Aymara (ay), 0125	Interlingua (ia), 0901	Occitan (oc), 1503	Setswana (tn), 2014
Azerbaijani (az), 0126	Interlingue (ie), 0905	Oromo (om), 1513	Tonga (to), 2015
Bashkir (ba), 0201	Inupiak (ik), 0911	Oriya (or), 1518	Turkish (tr), 2018
Byelorussian (be), 0205	Indonesian (in), 0914	Panjabi (pa), 1601	Tsonga (ts), 2019
Bulgarian (bg), 0207	Icelandic (is), 0919	Polish (pl), 1612	Tatar (tt), 2020
Bihari (bh), 0208	Hebrew (iw), 0923	Pashto, Pushto (ps), 1619	Twi (tw), 2023
Bislama (bi), 0209	Yiddish (ji), 1009	Quechua (qu), 1721	Ukrainian (uk), 2111
Bengali (bn), 0214	Javanese (jw), 1023	Rhaeto-Romance (rm), 1813	Urdu (ur), 2118
Tibetan (bo), 0215	Georgian (ka), 1101	Kirundi (rn), 1814	Uzbek (uz), 2126
Breton (br), 0218	Kazakh (kk), 1111	Romanian (ro), 1815	Vietnamese (vi), 2209
Catalan (ca), 0301	Greenlandic (kl), 1112	Kinyarwanda (rw), 1823	Volapük (vo), 2215
Corsican (co), 0315	Cambodian (km), 1113	Sanskrit (sa), 1901	Wolof (wo), 2315
Czech (cs), 0319	Kannada (kn), 1114	Sindhi (sd), 1904	Xhosa (xh), 2408
Welsh (cy), 0325	Kashmiri (ks), 1119	Sangho (sg), 1907	Yoruba (yo), 2515
Danish (da), 0401	Kurdish (ku), 1121	Serbo-Croatian (sh), 1908	Zulu (zu), 2621

Country/Area code list

Country/Area, Country/Area code, Country/Area code letter

Argentina, 0118, ar	Finland, 0609, fi	Malaysia, 1325, my	Singapore, 1907, sg
Australia, 0121, au	France, 0618, fr	Mexico, 1324, mx	Spain, 0519, es
Austria, 0120, at	Germany, 0405, de	Netherlands, 1412, nl	Sweden, 1905, se
Belgium, 0205, be	Hong Kong, 0811, hk	New Zealand, 1426, nz	Switzerland, 0308, ch
Brazil, 0218, br	India, 0914, in	Norway, 1415, no	Taiwan, 2023, tw
Canada, 0301, ca	Indonesia, 0904, id	Pakistan, 1611, pk	Thailand, 2008, th
Chile, 0312, cl	Italy, 0920, it	Philippines, 1608, ph	United Kingdom, 0702, gb
China, 0314, cn	Japan, 1016, jp	Portugal, 1620, pt	USA, 2119, us
Denmark, 0411, dk	Republic of Korea 1118, kr	Russian Federation, 1821, ru	

Specifications

General

Power requirements	AC 120 V, 60 Hz
Power consumption	14 W
Power consumption (standby)	0.5 W
Weight	5.3 kg (11 lb 11 oz)
Dimensions	420 mm (W) x 102 mm (H) x 314 mm (D) (16 9/16 in. (W) x 4 1/16 in. (H) x 12 3/8 in. (D))
Operating temperature	+5 °C to +35 °C (+41 °F to +95 °F)
Operating humidity	5 % to 85 % (no condensation)

HDMI output

HDMI output	19 pin
-------------	--------

Component video output

Y (luminance) - Output level	1 Vp-p (75 Ω)
P _B (color) - Output level	0.7 Vp-p (75 Ω)
P _R (color) - Output level	0.7 Vp-p (75 Ω)
Jack	RCA

S-Video output

Y (luminance) - Output level	1 Vp-p (75 Ω)
C (color) - Output level	286 mVp-p (75 Ω)
Jack	S-Video

Video output

Output level	1 Vp-p (75 Ω)
Jack	RCA

Audio output (1 stereo pair)

Output level	During audio output 200 mVrms (1 kHz, -20 dB)
Number of channels	2
Jacks	RCA

Audio output (multi-channel/L, R, C, SW, SL, SR)

Output level	During audio output 200 mVrms (1 kHz, -20 dB)
Number of channels	6
Jacks	RCA

Audio characteristics

Frequency response	4 Hz to 44 kHz
S/N ratio	118 dB
Dynamic range	108 dB
Total harmonic distortion	0.0010 %
Wow and flutter	Limit of measurement (±0.001 % W. PEAK) or lower

Digital output

Coaxial digital output	RCA
Optical digital output	Optical

Other terminals

Control in.	Minijack(3.5 ø)
-------------	-----------------

Accessories

Remote control	1
AA/R6P dry cell batteries	2
Audio cable	1
Video cable	1
Power cable	1
Warranty card	1
Operating instructions	1

The specifications and design of this product are subject to change without notice, due to improvement.

Should this product require service in the U.S.A. and you wish to locate the nearest Pioneer Authorized Independent Service Company, or if you wish to purchase replacement parts, operating instructions, service manuals, or accessories, please call the number shown below.

1-800-421-1404

Please do not ship your product to Pioneer without first calling the Customer Support at the above listed number for assistance.

Pioneer Electronics Service, Inc.
P.O. BOX 1760, Long Beach,
CA 90801-1760, U.S.A.

For warranty information please see the Limited Warranty sheet included with your product.

Should this product require service in Canada, please contact a Pioneer Canadian Authorized Dealer to locate the nearest Pioneer Authorized Service Company in Canada. Alternatively, please contact the Customer Satisfaction Department at the following address:

Pioneer Electronics of Canada, Inc.
Customer Satisfaction Department
300 Allstate Parkway, Markham, Ontario L3R 0P2
1-877-283-5901
905-479-4411

For warranty information please see the Limited Warranty sheet included with your product.

Si ce produit doit être réparé au Canada, veuillez vous adresser à un distributeur autorisé Pioneer du Canada pour obtenir le nom du Centre de Service Autorisé Pioneer le plus près de chez-vous. Vous pouvez aussi contacter le Service à la clientèle de Pioneer:

Pioneer Électroniques du Canada, Inc.
Service Clientèle
300, Allstate Parkway, Markham, Ontario L3R 0P2
1-877-283-5901
905-479-4411

Pour obtenir des renseignements sur la garantie, veuillez vous reporter au feuillet sur la garantie restreinte qui accompagne le produit.

S018_C_EF

Register Your Product on

<http://www.pioneerelectronics.com> (US)

<http://www.pioneerelectronics.ca> (Canada)

PIONEER CORPORATION

4-1, Meguro 1-Chome, Meguro-ku, Tokyo 153-8654, Japan

PIONEER ELECTRONICS (USA) INC.

P.O. BOX 1540, Long Beach, California 90801-1540, U.S.A. TEL: (800) 421-1404

PIONEER ELECTRONICS OF CANADA, INC.

300 Allstate Parkway, Markham, Ontario L3R 0P2, Canada TEL: 1-877-283-5901, 905-479-4411

PIONEER EUROPE NV

Haven 1087, Keetberglaan 1, B-9120 Melsele, Belgium TEL: 03/570.05.11

PIONEER ELECTRONICS ASIACENTRE PTE. LTD.

253 Alexandra Road, #04-01, Singapore 159936 TEL: 65-6472-7555

PIONEER ELECTRONICS AUSTRALIA PTY. LTD.

178-184 Boundary Road, Braeside, Victoria 3195, Australia, TEL: (03) 9586-6300

PIONEER ELECTRONICS DE MEXICO S.A. DE C.V.

Blvd.Manuel Avila Camacho 138 10 piso Col.Lomas de Chapultepec, Mexico,D.F. 11000 TEL: 55-9178-4270

K002_B_En

PIONEER, ELITE, SOUND.VISION.SOUL, and the Pioneer, Elite and sound.vision.soul logos are trademarks of Pioneer Corporation.

Published by Pioneer Corporation.
Copyright © 2007 Pioneer Corporation.
All rights reserved.



<071000001>

<VRB1484-A>

Printed in Thailand

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>