



# Ceramic Tower Heater

Model No: HC6-15R-01  
**Operating Instructions**



## *HC6-15R-01*

© 2006 Soleus Air International

Thank you for choosing a Soleus Air Ceramic Tower Heater. This owner's manual will provide you with valuable information necessary for the proper care and maintenance of your new product. Please take a few moments to thoroughly read the instructions and familiarize yourself with all the operational aspects of your new heater.

For your own records, please attach a copy of your sales receipt to this manual. Also, write the store name/location, date purchased, and serial number below:

Store Name: \_\_\_\_\_

Location: \_\_\_\_\_

Date Purchased: \_\_\_\_\_

Serial Number (located on back of unit): \_\_\_\_\_

## IMPORTANT INSTRUCTIONS

When using this electric unit, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

1. Read ALL instructions before using this unit.
2. CAUTION: Risk of Electric Shock. DO NOT open or try to repair the heater yourself.
3. This heater may get hot when in use. To avoid burns, DO NOT let bare skin touch hot surfaces. If provided, use handles when moving this heater.
4. Keep combustible materials, such as furniture, pillows, bedding, paper, clothes, and curtains at least 3 ft from the front of the heater and keep them away from the sides, top, and rear. DO NOT place towels or other objects on the heater.
5. Extreme caution is necessary when any heater is used by or near children or the disabled, or when the heater is left operating and unattended.
6. DO NOT operate any heater with a damaged cord or after the heater malfunctions, has been dropped or damaged in any manner. Return heater to authorized service facility for examination, electrical or mechanical adjustment, or repair.
7. This heater is not intended for use in bathrooms, laundry areas and similar indoor locations. NEVER locate heater where it may fall into a bathtub or other water container. To protect against electrical hazards, DO NOT immerse in water or other liquids.
8. DO NOT touch the control panel or plug with a wet hand.
9. DO NOT run cord under carpeting. DO NOT cover cord with throw rugs, runners, or similar coverings. Arrange cord away from traffic area and where it will not be tripped over.
10. DO NOT insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
11. To prevent a possible fire, DO NOT block the air intakes or exhaust in any manner. DO NOT use on soft surfaces, like a bed, where openings may become blocked.
12. A heater has hot and arcing or sparking parts inside. DO NOT use in areas where gasoline, paint, explosive and/or flammable liquids are used or stored. Keep unit away from heated surfaces and open flames.
13. Avoid the use of an extension cord because the extension cord may overheat and cause a risk of fire. However, if you have to use an extension cord, the cord shall be No. 14 AWG minimum size and rated not less than 1875W.


14. To avoid fire or shock hazard, plug the unit directly into a 120 V AC electrical outlet.
15. To disconnect heater, turn controls to OFF, then remove plug from outlet. Pull firmly on the plug, DO NOT unplug by pulling on the cord.
16. Always unplug the unit before moving or cleaning, or whenever the heater is not in use.
17. Use only for intended household use as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons. The use of attachments not recommended or sold by unauthorized dealers may cause hazards.
18. Always use on a dry, level surface. Use on floor only.
19. WARNING: To reduce the risk of fire or electric shock, DO NOT use this unit with any solid-state speed control device.
20. DO NOT attempt to repair or adjust any electrical or mechanical functions on this unit. Doing so will void your warranty. The inside of the unit contains no user serviceable parts. Qualified personnel should perform all servicing only.
21. Connect to properly grounded outlets only.

**22.SAVE THESE INSTRUCTIONS.**


**SPECIFICATIONS**

Voltage Rating	120 V (60Hz)
Power Consumption	950/1500W
Unit Size	7.1 in. (W) x 7.1 in. (D) x 19.75 in. (H)
Unit Weight	6 lbs.

## PRODUCT DIAGRAM

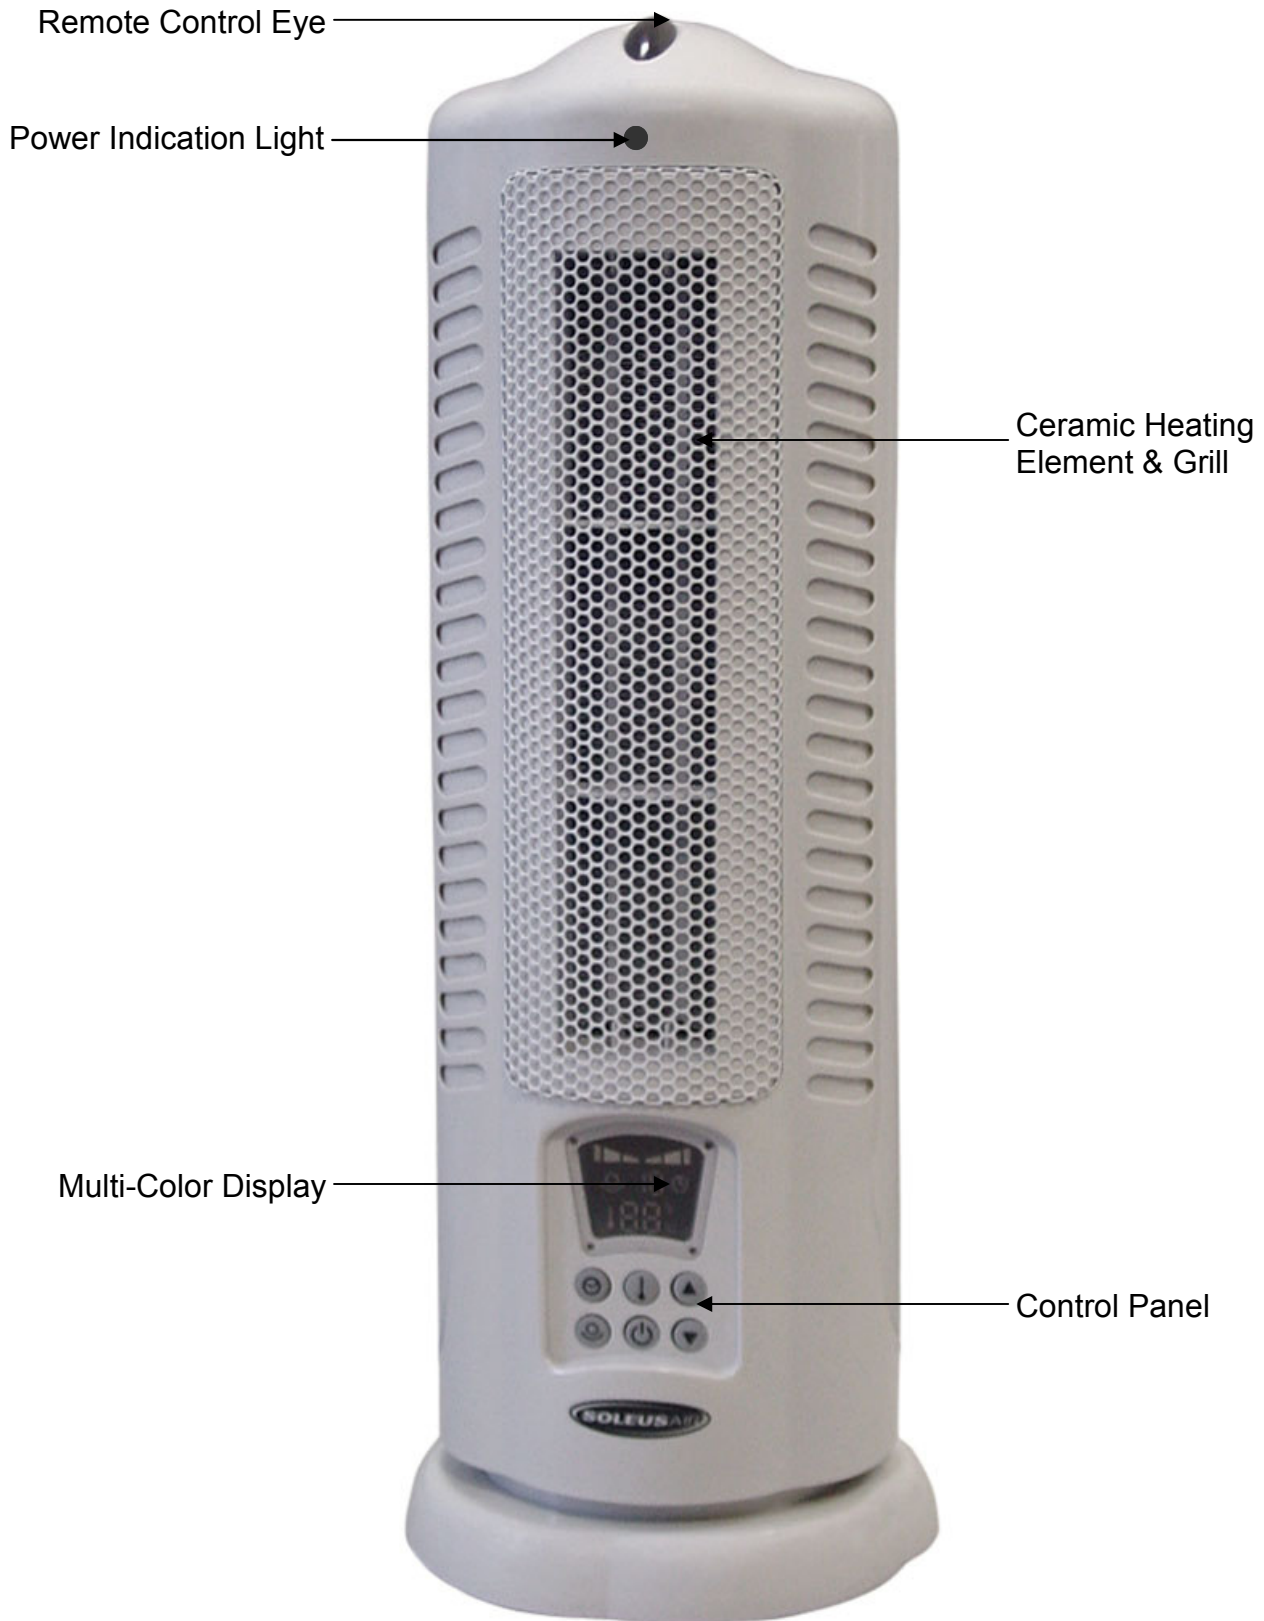


## CONTROL PANEL, DISPLAY, & REMOTE CONTROL

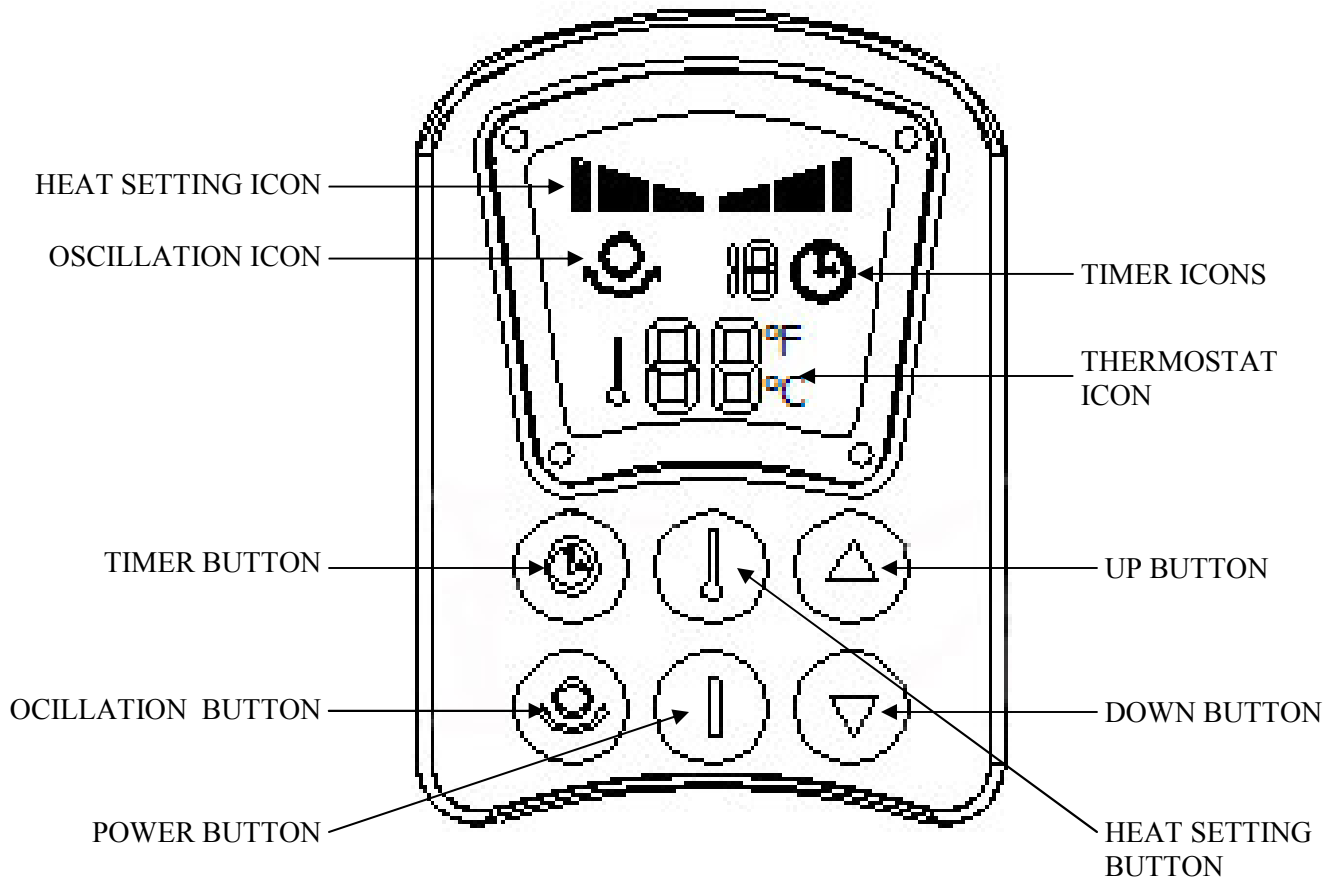

### **BUTTON FUNCTIONS:**

1. **POWER:** Powers the unit ON and OFF (located in the middle of the bottom row of buttons)
2. **HEAT SETTING:** Cycles through LOW and HIGH heat settings
3. **OSCILLATION:** Turns Oscillation on and off
4. **TIMER:** Activates the Auto Shut-off Timer
5. **UP & DOWN:** Changes the thermostat temperature

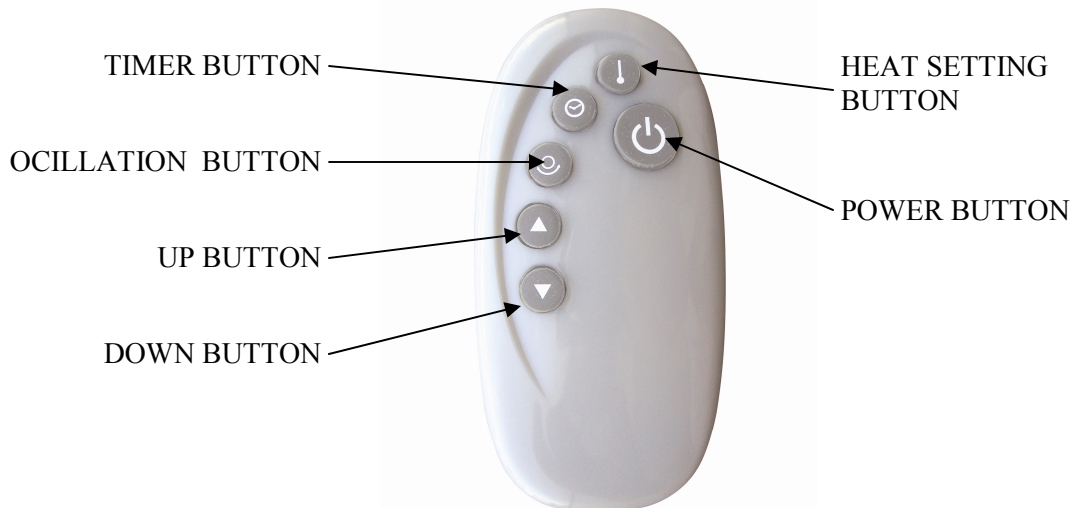

## OPERATING INSTRUCTIONS

Place the heater on a firm, level surface and plug into a grounded 120V 60Hz power outlet. Only operate the heater when it is in the upright position.

Use the instructions below to operate the heater using the control panel or the included remote control.

1. Turn on the power switch on the back of the unit. When this switch is turned on, the red **POWER INDICATION LIGHT** will light up indicating there is power to the unit.
2. Press the **POWER** button on the control panel or remote control to turn on the unit.
3. Press the **HEAT SETTING** button on the control panel or remote control to choose your desired heat setting. You may choose between High and Low. The heat setting icon on the display will change depending on the setting you have selected. When High is selected, all six bars on the heat setting icon will all light up. When Low is selected only two of the bars will light up.
4. To change the desired thermostat temperature, press the **UP** and **DOWN** buttons on the control panel or remote control. These buttons will cycle through the different temperature settings.
5. To activate oscillation, press the **OSCILLATION** button on the control panel or remote control. Once the **OSCILLATION** button is pressed, the heater will rotate side-to-side spreading warm air throughout the room. The Oscillation icon will light up on the display panel when Oscillation is selected.
6. To activate the Auto-off timer, press the **TIMER** button on the control panel or remote control. The timer icon will light up on the display once this button is pressed. Continue to press the timer until the desired shut-off time is selected. The timer can be programmed from 1 to 12 hours. Each press of the timer button will increase the timer for one hour. To deactivate the timer, press the timer once after the number "12" is visible on the display. The number "12" will disappear and the time will be deactivated.

---

## MAINTENANCE

**WARNING: ALWAYS UNPLUG THE CORD BEFORE MOVING OR SERVICING.**

**CLEANING: IMPORTANT! DO NOT IMMERSER HEATER IN WATER!** Clean the heater grills using the vacuum brush attachment on your vacuum cleaner. This will remove lint and dirt from the inside of the heater.

DO NOT ATTEMPT TO TAKE HEATER APART. Clean the body of heater with a soft cloth.

**CAUTION: Do not use gasoline, benzine, thinner, harsh cleaners, etc. as they will damage the heater. NEVER USE ALCOHOL OR SOLVENTS.**

---

## SAFETY FEATURES

1. A thermal overload protector is built in to prevent overheating.
2. When an overheat temperature is reached, the heater will be automatically shut off. It can only resume operation when the user resets the unit. (See **RESET INSTRUCTION** below)

### RESET INSTRUCTION

Unplug the heater and wait 10 minutes for the unit to cool down.  
After the 10 minutes, plug the unit in again and operate normally.

---

## STORAGE

If the heater will not be used for a long period of time, store it in a cool, dry location when not in use. To prevent dust and dirt build-up, use the original packaging to repack the unit.

---

## TROUBLESHOOTING

If your heater shuts off unexpectedly or fails to operate, one of the above-mentioned safety features may have activated to prevent overheating.

1. Be sure the power cord is plugged into a working electrical outlet.
2. Check your thermostat setting. The heater may be off because it has reached the desired temperature setting.

# WARRANTY

## One Year Limited Warranty

Soleus International Inc. warrants the accompanying Soleus Air HC6-15R-01 Ceramic Tower Heater to be free of defects in material and workmanship for the applications specified in its operation instruction for a period of ONE (1) year from the date of original retail purchase in the United States.

If the unit exhibits a defect in normal use, Soleus International Inc. will, at its option, either repair or replace it, free of charge within a reasonable time after the unit is returned during the warranty period.

As a condition to any warranty service obligation, the consumer must present this Warranty Certificate along with a copy of the original purchase invoice.

### **THIS WARRANTY DOES NOT COVER:**

- Damage, accidental or otherwise, to the unit while in the possession of a consumer not caused by a defect in material or workmanship.
- Damage caused by consumer misuse, tampering, or failure to follow the care and special handling provisions in the instructions. This includes dents, accidental or otherwise, to the base and head of the unit.
- Damage to the finish of the case, or other appearance parts caused by wear.
- Damage caused by repairs or alterations of the unit by anyone other than those authorized by Soleus International Inc.
- Freight and Insurance cost for the warranty service.

ALL WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANT ABILITY ARE LIMITED TO ONE-YEAR DURATION OF THIS EXPRESS LIMITED WARRANTY. **SOLEUS INTERNATIONAL INC.** DISCLAIMS ANY LIABILITY FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES AND IN NO EVENT SHALL SOLEUS INTERNATIONAL INC'S LIABILITY EXCEED THE RETAIL VALUE OF THE UNIT FOR BREACH OF ANY WRITTEN OR IMPLIED WARRANTY WITH RESPECT TO THIS UNIT.

This warranty covers only new products purchased from our authorized dealers or retailers. It does not cover used, salvaged, or refurbished products.

As some states do not allow the limitation or exclusion of incidental or consequential damages, or do not allow limitation on implied warranties, the above limitations and exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state.

### **For Warranty, Technical Support, Customer Service, Missing or Defective Parts**

Please Call (888) 876-5387

Or Write To:

Soleus International Inc.  
9451 Telstar Ave.  
El Monte, CA 91731 USA  
[www.soleusair.com](http://www.soleusair.com)



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>