

# OPERATION AND PARTS MANUAL

# STOW

A DIVISION OF MULTIQUIP INC.

## **CUTTER 3 CE**

## **SLAB SAWS**

### **13HP & 20HP**

### **HONDA GASOLINE ENGINES**

### **CC8CE13H20, CS8CE13H20,**

### **CS8CE20H20**

Revision #5 (09/22/06)

**THIS MANUAL MUST ACCOMPANY  
THE EQUIPMENT AT ALL TIMES.**

**P/N 35439**

# **HERE'S HOW TO GET HELP**

STOW PRODUCT SUPPORT PROVIDED BY MULTIQUIP

PLEASE HAVE THE MODEL AND SERIAL  
NUMBER *ON-HAND* WHEN CALLING

## **UNITED STATES**

### ***MULTIQUIP CORPORATE OFFICE***

18910 Wilmington Ave.  
Carson, CA 90746  
Contact: mq@multiquip.com

Tel. (800)-421-1244  
Fax (310)-537-3927

## **MEXICO**

### ***MQ CIPSA***

Carr. Fed. Mexico-Puebla KM 126.5  
Momoxpan, Cholula, Puebla 72760 Mexico  
Contact: pmastretta@cipsa.com.mx

Tel. (52) 222-225-9900  
Fax (52) 222-285-0420

## **UNITED KINGDOM**

### ***MULTIQUIP (UK) LIMITED HEAD OFFICE***

Hanover Mill, Fitzroy Street,  
Ashton-under-Lyne,  
Lancashire OL7 0TL  
Contact: sales@multiquip.co.uk

Tel. 0161 339 2223  
Fax 0161 339 3226

## **CANADA**

### ***MULTIQUIP***

4110 Industriel Boul.  
Laval, Quebec, Canada H7L 6V3  
Contact: jmartin@multiquip.com

Tel. (450) 625-2244  
Fax (450) 625-8664

## **BRAZIL**

### ***MULTIQUIP***

Av. Evandro Lins e Silva, 840 - grupo 505  
Barra de Tijuca - Rio de Janeiro  
RJ CEP 22631-470  
Contact: cnavarro@multiquip.com.br, srentes@multiquip.com.br

Tel. 011-55-21-3433-9055  
Fax 011-55-21-3433-9055

© COPYRIGHT 2006, MULTIQUIP INC.

Multiquip Inc, the MQ logo and the Stow logo are registered trademarks of Multiquip Inc. and may not be used, reproduced, or altered without written permission. All other trademarks are the property of thier respective owners and used with permission.

This manual **MUST** accompany the equipment at all times. This manual is considered a permanent part of the equipment and should remain with the unit if resold.

The information and specifications included in this publication were in effect at the time of approval for printing. Illustrations are based on the *Cutter 3 (CE)*. Multiquip Inc. reserves the right to discontinue or change specifications, design or the information published in this publication at any time without notice and without incurring any obligations.

**To find the latest revision of this  
publication, visit our website at:  
[www.multiquip.com](http://www.multiquip.com)**



# STOW CUTTER 3 CE SAW — TABLE OF CONTENTS

## STOW CUTTER 3 SLAB SAW

Here's How To Get Help .....	2
Table Of Contents .....	3
Specifications .....	4-5
Dimensions .....	6
Safety Message Alert Symbols .....	7-8
Rules for Safe Operation .....	9-11
Decals .....	12
General Information .....	13
Major Components .....	14
13 HP Engine Components .....	15
20 HP Engine Components .....	16
Inspection .....	17-19
Inspection Blade .....	20
Inspection Blade Placement .....	21-22
Inspection-Guards, Covers, and V-Belts .....	23
Inspection-V-Belts and Water Tank .....	24
Inspection - Adjustments .....	25
Manual Start-up Procedure .....	26-28
Electric Start-up Procedure .....	29-30
Operation .....	31-34
Shutdown Procedures .....	35
Maintenance .....	36-41
13HP Engine Wiring Diagram .....	42
20HP Engine Wiring Diagram .....	43
Troubleshooting (Engine) .....	44-45
Troubleshooting (Blade) .....	46
Explanation Of Codes In Remarks Column .....	47
Suggested Spare Parts .....	49

## COMPONENT DRAWINGS

Nameplate and Decals .....	50-51
Under Carriage Assembly .....	52-53
Blade Shaft Assembly .....	54-55
Lifting Bale Assembly .....	56-57
Console (Push) Assembly .....	58-59
Console (Self-propelled) Assembly .....	60-61
13 HP Engine Mount Assembly .....	62-63
20 HP Engine Mount Assembly .....	64-65
13 HP Engine Assembly .....	66-67
20 HP Engine Assembly .....	68-69
Pointers And Covers .....	70-71
Water System Assembly .....	72-73
Blade Guard Assembly .....	74-75
Manual Raise and Lower Assy. (20 inch) .....	76-77

## SELF-PROPELLED MODELS ONLY

Battery Assembly .....	78-79
Transmission Engage Lever Assembly .....	80-81
Hydrostatic Transmission Assembly .....	82-83
Hydrostatic Drive Assembly .....	84-85

## HONDA GX390K1QWT2

### GASOLINE ENGINE

Air Cleaner Assembly .....	86-87
Camshaft Assembly .....	88-89
Carburetor Assembly .....	90-91
Control Assembly .....	92-93
Crankcase Cover Assembly .....	94-95
Crankshaft Assembly .....	96-97
Cylinder Barrel Assembly .....	98-99
Cylinder Head Assembly .....	100-101
Fan Cover Assembly .....	102-103
Flywheel Assembly .....	104-105
Fuel Tank Assembly .....	106-107
Ignition Coil Assembly .....	108-109
Muffler Assembly .....	110-111
Piston Assembly .....	112-113
Recoil Starter Assembly .....	114-115
Labels .....	116-117

## HONDA GX620TXF2

### GASOLINE ENGINE

Air Cleaner Assembly .....	118-119
Camshaft Assembly .....	120-121
Control Assembly .....	122-123
Control Box .....	124-125
Crankcase Cover Assembly .....	126-127
Crankshaft Assembly .....	128-129
Cylinder Barrel Assembly .....	130-131
Cylinder Head Assembly .....	132-133
Fan Cover Assembly .....	134-135
Flywheel Assembly .....	136-137
Ignition Coil Assembly .....	138-139
Muffler Assembly .....	140-141
Piston Assembly .....	142-143
Fuel Tank Assembly .....	144-145
Fuel Pump .....	146-147
Carburetor Assembly .....	148-149
Starter Motor Assembly .....	150-151
Gasket Kit Assembly .....	152-153
Labels .....	154-155

Terms and Conditions of Sale — Parts .....	156
--	-----

# STOW CUTTER 3 CE SAW — SPECIFICATIONS

**TABLE 1. SAW SPECIFICATIONS**

	Cutter 3 (Push)	Cutter 3 (Self-Propelled)	
<b>Saw</b>	CC8CE13H20	CS8CE13H20	CS8CE20H20
<b>Blade Capacity</b>	508 mm (20 in.)		
<b>Cutting Depth</b>	191 mm (7.5 in.)		
<b>Arbor Diameter</b>	19.1 mm (.75 in.)		
<b>Front Wheels</b>	125 mm Dia. x 50 mm Wide ( 5 in. x 2 in.)		
<b>Rear Wheels</b>	203 mm Dia. x 50 mm Wide (8 in. x 2 in.)		
<b>Nominal Mass*</b>	141 kg (310 lbs.)	162 kg (356 lbs.)	173 kg (380 lbs.)
<b>Maximum Operating Mass**</b>	170 kg (373 lbs.)	190 kg (418 lbs.)	201 kg (443 lbs.)
<b>Sound Pressure at Operator's Position</b>	96 dB	88.8 dB	
<b>Hand/Arm Vibration (At Handle)***</b>	9.81 ms <sup>-2</sup>	5.61 ms <sup>-2</sup>	
<b>Engine</b>	Honda 13HP GX390K1QWT2 Gasoline Engine		Honda 20HP GX620TXF2 Gasoline Engine

\* **Nominal Mass:** Mass without blade, all fluid tanks empty, any optional parts removed.

\*\* **Maximum Operating Mass:** Includes blade, all fluid tanks full, any necessary components installed.

\*\*\* **Hand/Arm Vibration (at handle)** results with Cutter 3 CE Saw cutting cured concrete at a depth of 38.1mm (1-1/2") with a 508mm (20") blade at FULL THROTTLE.

# STOW CUTTER 3 CE SAW — ENGINE SPECIFICATIONS

**TABLE 2. ENGINE SPECIFICATIONS**

Engine Model	Honda GX390K1QWT2	Honda GX620TXF2
Engine Type	Air-cooled 4-Stroke Single Cylinder OHV Horizontal Shaft Engine	Air-cooled 4-Stroke OHV 90° V-Twin; Horizontal Shaft
Bore x Stroke	88 mm x 64 mm (3.5 in. x 2.5 in.)	77 x 66 mm (3.0 x 2.6 in)
Displacement	389 cc. (23.7 cu. in.)	614 cc. (37.4 cu. in.)
Maximum Power Output	13 HP / 3,600 rpm	20 HP / 3,600 rpm
Maximum Torque	2.7 kg-m (2,500 rpm) 19.5 ft-lbs (2,500 rpm)	4.50 kgf-m (2,500 rpm) 32.5 ft-lbs (2,500 rpm)
Idle Speed	1,400 ± 150 rpm	1,400 ± 150 rpm
Maximum No Load RPM	3,600 ± 100 rpm	3,600 ± 100 rpm
Specific Fuel Consumption	20.81 liters/hr. (1 gal./hr.)	5.82/liters/hr. (1.54 gals./hr.)
Fuel Tank Capacity	6.5 liters (1.72 gallons)	8.32 liters (2.20 gallons)
Crankcase Oil Capacity	1.1 liters (2.32 pints)	1.50 liters (3.18 pints)
Starting System	Recoil Start	Electric Start
Spark Plug Gap	0.70 - 0.78 mm (.028 - .031 in.)	0.70 - 0.78 mm (.028 - .031 in.)
Air Cleaner	Cyclone Type	Dual Element
Dry Weight	31 kg (68.4 lbs.)	42 kg (92.6 lbs)
Dimensions (LxWxH)	380 x 450 x 443 mm (15.0 x 17.7 x 17.4 in.)	388 x 457 x 452 mm (15.3 x 18 x 17.8 in.)

# STOW CUTTER 3 CE SAW — DIMENSIONS

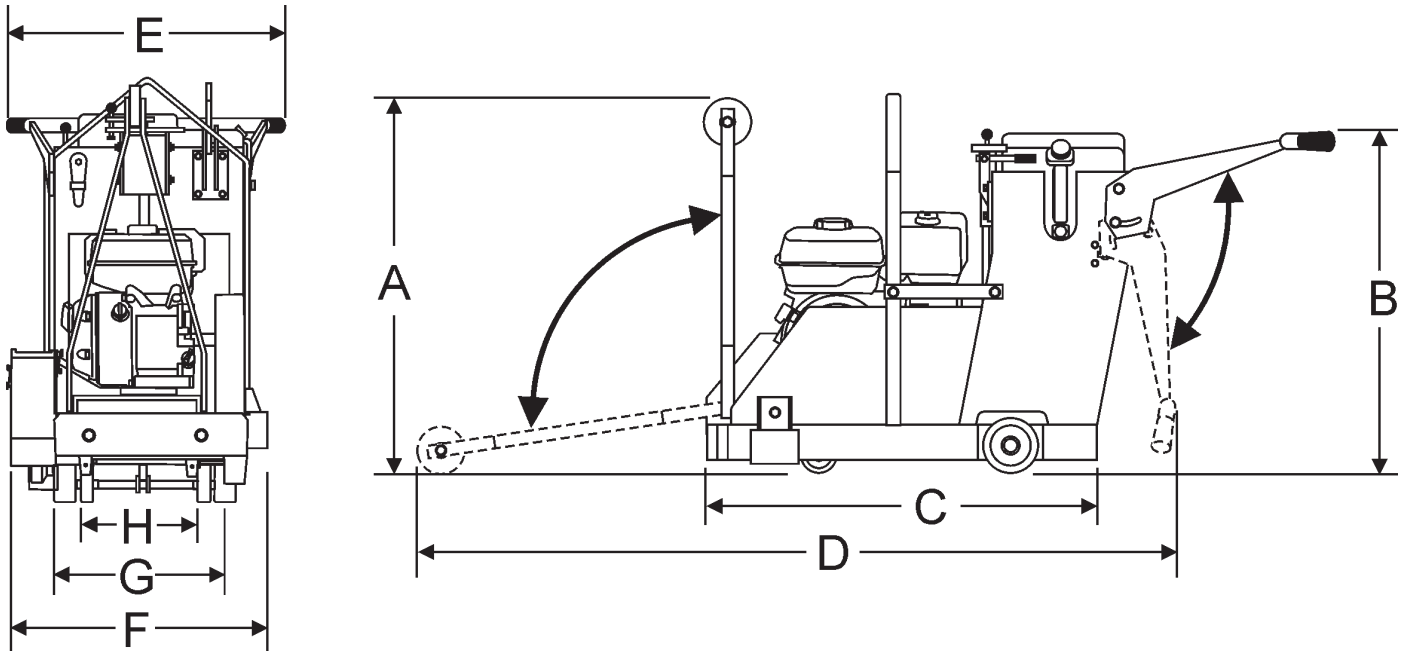


Figure 1. CUTTER 3 Dimensions



TABLE 3. DIMENSIONS

REFERENCE LETTER	DESCRIPTION	DIMENSIONS IN. (MM)
A	Max Height (Handle Bars fully lowered & Front Pointer raised)	914 mm. (36 in.)
B	Max Handle Bar Height (fully raised)	1016 mm. (40 in.)
C	Max Length (Handle Bars & Front Pointer fully raised)	1092 mm. (43 in.)
D	Max Length (Handle Bars fully raised & Front Pointer lowered)	1727 mm. (68 in.)
E	Max Handle Bar Width	610 mm. (24 in.)
F	Max Width	622 mm. (24.5 in.)
G	Rear Wheel Base	406 mm. (16 in.)
H	Front Wheel Base	356 mm. (14 in.)
<b>Crated Dimension (L x W x H): 1194 x 762 x 1118 mm (47 x 30 x 44 in.)</b>		

# STOW CUTTER 3 CE SAW — SAFETY MESSAGE ALERT SYMBOLS

## FOR YOUR SAFETY AND THE SAFETY OF OTHERS!

Safety precautions should be followed at all times when operating this equipment. Failure to read and understand the Safety Messages and Operating Instructions could result in injury to yourself and others.

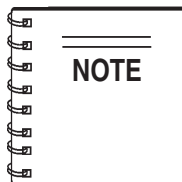

This Owner's Manual has been developed to provide complete instructions for the safe and efficient operation of the Stow Cutter 3 CE Series Slab Saws. Depending on the power plant you have selected, please

refer to the engine manufacturers instructions for data relative to its safe operations.

**Before using any of the Stow Cutter 3 Saws, ensure that the operating individual has read and understands all instructions in this manual.**

## SAFETY MESSAGE ALERT SYMBOLS

The three (3) Safety Messages shown below will inform you about potential hazards that could injure you or others. The Safety Messages specifically address the level of exposure to the operator, and are preceded by one of three words: **DANGER**, **WARNING**, or **CAUTION**.

### **DANGER**

You **WILL** be **KILLED** or **SERIOUSLY INJURED** if you **DO NOT** follow these directions.

### **WARNING**

You **CAN** be **KILLED** or **SERIOUSLY INJURED** if you **DO NOT** follow these directions.

### **CAUTION**

You **CAN** be **INJURED** if you **DO NOT** follow these directions.

Potential hazards associated with Stow Cutter 3 Series Slab Saw operation will be referenced with Hazard Symbols which appear throughout this manual, and will be referenced in conjunction with Safety Message Alert Symbols.

## HAZARD SYMBOLS




### Lethal Exhaust Gases



Engine exhaust gases contain poisonous carbon monoxide. This gas is colorless and odorless, and can cause death if inhaled. **NEVER** operate this equipment in a confined area or enclosed structure that does not provide ample free flow air.



### Explosive Fuel

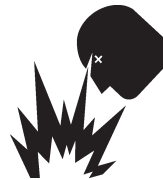

Gasoline is extremely flammable, and its vapors can cause an explosion if ignited. **DO NOT** start the engine near spilled fuel or combustible fluids. **DO NOT** fill the fuel tank while the engine is running or hot. **DO NOT** overfill tank, since spilled fuel could ignite if it comes into contact with hot engine parts or sparks from the ignition system. Store fuel in approved containers, in well-ventilated areas and away from sparks and flames. **NEVER** use fuel as a cleaning agent.



### Burn Hazards



Engine components can generate extreme heat. To prevent burns, **DO NOT** touch these areas while the engine is running or immediately after operations. **NEVER** operate the engine with heat shields or heat guards removed.



### Rotating Parts



**NEVER** operate equipment with covers, or guards removed. Keep fingers, hands, hair and clothing away from all moving parts to prevent injury.

# STOW CUTTER 3 CE SAW — SAFETY MESSAGE ALERT SYMBOLS



## Accidental Starting



**OFF** **ALWAYS** place the **ON/OFF** switch in the **OFF** position, remove key and/or disconnect the spark plug lead before servicing the engine or equipment. Ground the lead to prevent sparks that could ignite a fire.



## Respiratory Hazard



**ALWAYS** wear approved respiratory protection.




## Over Speed Conditions



**NEVER** tamper with the factory settings of the engine governor or settings. Personal injury and damage to the engine or equipment can result if operating in speed ranges above maximum allowable.



## Sight and Hearing hazard

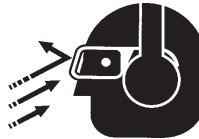

**ALWAYS** wear approved eye and hearing protection.



## Guards and Covers In Place



**NEVER** operate the saw without blade guards and covers in place. Adhere to safety guidelines ANSI American National Standards Institute, OSHA or other applicable local regulations.



## Equipment Damage Messages

Other important messages are provided throughout this manual to help prevent damage to your slab saw, other property, or the surrounding environment.



## CAUTION

This concret/asphalt saw, other property, or the surrounding environment could be damaged if you do not follow instructions.



## WARNING

To avoid injuries and damage to the equipment, **ALWAYS** read and understand the contents of operation manual before operating equipment.





# STOW CUTTER 3 CE SAW — RULES FOR SAFE OPERATION


## RULES FOR SAFE OPERATION

### CAUTION


Failure to follow instructions in this manual may lead to serious injury or even death! This equipment is to be operated by trained and qualified personnel only! This equipment is for industrial use only.

The following safety guidelines should always be used when operating the Stow Cutter 3 Saw.

### SAFETY

- **DO NOT** operate or service this equipment before reading this entire manual. The manual must be kept accessible to the operator. 
- This equipment should not be operated by persons under the minimum statutory age limit.
- **NEVER** operate the saw without proper protective clothing, shatterproof glasses, steel-toed boots and other protective devices required by the job.




- **NEVER** operate this equipment when not feeling well due to fatigue, illness or taking medicine. 
- **NEVER** operate the saw under the influence of drugs or alcohol.




- **NEVER** use accessories or attachments, which are not recommended by or Multiquip for this equipment. Damage to the equipment and/or injury to user may result.
- Manufacturer does not assume responsibility for any accident due to equipment modifications. Unauthorized equipment modification will void all warranties.
- Whenever necessary, replace nameplate, operation and safety decals when they become difficult to read.
- **ALWAYS** check the saw for loosened hardware such as nuts and bolts before starting.

- **NEVER** touch the hot exhaust manifold, muffler or cylinder. Allow these parts to cool before servicing the saw.

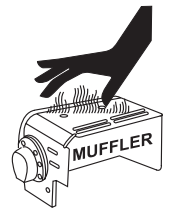

- **High Temperatures** – Allow the engine to cool before adding fuel or performing service and maintenance functions. Contact with **hot!** components can cause serious burns.

- The engine of this saw requires an adequate free flow of cooling air. **NEVER** operate the saw in any enclosed or narrow area where free flow of the air is restricted. If the air flow is restricted it will cause serious damage to the saw's engine and may cause injury to people. Remember the saw's engine gives off **DEADLY** carbon monoxide gas.

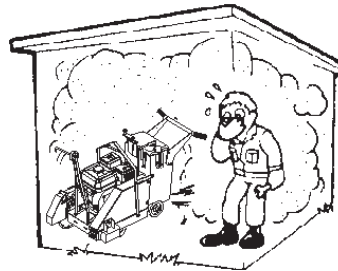

- **ALWAYS** refuel in a well-ventilated area, away from sparks and open flames.

- **ALWAYS** use extreme caution when working with **flammable** liquids. When refueling, **STOP** the engine and allow it to cool.



- **NEVER** smoke around or near the machine. Fire or explosion could result from **fuel vapors**, or if fuel is spilled on a **hot!** engine.



- **NEVER** operate the saw in an explosive atmosphere where fumes are present or near combustible materials. An explosion or fire could result causing severe **bodily harm or even death**.

- Topping-off to filler port is dangerous, as it tends to spill fuel.

- **NEVER** use fuel as a cleaning agent.

# STOW CUTTER 3 CE SAW — RULES FOR SAFE OPERATION

## General Safety

- **ALWAYS** read, understand, and follow procedures in Operator's Manual before attempting to operate equipment.
- **ALWAYS** be sure the operator is familiar with proper safety precautions and operating techniques before using the saw.
- **NEVER** leave the machine *unattended* while running.
- Block the unit when leaving or when using on a slope.
- **ALWAYS** check to make sure that the operating area is clear before starting the engine.
- Maintain this equipment in a safe operating condition at all times.
- **ALWAYS** stop the engine before servicing, adding fuel and oil.
- **NEVER** run the engine without the air filter. Severe engine damage could occur.
- **ALWAYS** service air cleaner frequently to prevent carburetor malfunction.
- **AVOID** wearing jewelry or loose fitting clothing that may snag on the controls or moving parts, this can cause a serious injury.
- **ALWAYS** keep clear of *rotating* or *moving parts* while the saw is in operation.
- **ALWAYS** store equipment properly when it is not being used. Equipment should be stored in a clean, dry location out of the reach of children.
- **ALWAYS** keep the work area well organized.
- **ALWAYS** clear the cutting area of any debris, tools, etc. that would constitute a hazard while the saw is in operation.

## WARNING

**ALWAYS** check to make sure that the operating area is clear before starting the engine.



- No one other than the operator is to be in the working area when the saw is in operation.
- Always observe all applicable compulsory regulations relevant to environmental protection, especially, fuel storage, the handling of hazardous substances, and the wearing of protective clothing and equipment. Instruct the user as necessary, or, as the user, request this information and training.

## Diamond Blade Safety

- Use appropriate steel centered diamond blades manufactured for use on slab saws.
- Examine blade flanges for damage and excessive wear.
- Ensure the cleanliness of the blade before blade is installed. Blade should fit snugly on the shaft and against the inside/outside blade flanges.
- Ensure the blade is marked with an operating speed greater than the blade shaft speed of the saw.

## WARNING

**ALWAYS** inspect diamond blades before each use. The blade should exhibit no cracks, dings, or flaws in the steel centered core and/or rim. Center (arbor) hole must be undamaged and true.



## WARNING

Only cut the material that is specified for the diamond blade. Read the specifications of the diamond blade to ensure the proper tool has been matched to the material being cut. The saw has been engineered for **WET CUTTING**. Ensure a **WET CUTTING** blade is being used and that the water supply system to the blade is properly functioning and being used.

- **ALWAYS** keep blade guards in place. Exposure of the diamond blade must not exceed 180 degrees.
- Ensure that the diamond blade does not come into contact with the ground or surface during transportation. **DO NOT** drop the diamond blade on ground or surface.
- The engine governor is designed to permit maximum engine speed in a no-load condition. Speeds that exceed this limit may cause the diamond blade to exceed the maximum safe allowable speed.
- Ensure that the blade is mounted for proper operating direction.
- Adhere to the Blade Manufacturer's recommendations on handling, storage, and safe usage of blades.

# STOW CUTTER 3 CE SAW — RULES FOR SAFE OPERATION

## Maintenance Safety

- **NEVER** lubricate components or attempt service on a running machine.
- **ALWAYS** allow the machine a proper amount of time to cool before servicing.
- Keep the machinery in proper running condition.
- Fix damage to the machine immediately and **ALWAYS** replace broken parts.
- Dispose of hazardous waste properly. Examples of potentially hazardous waste are used motor oil, fuel and fuel filters.
- **DO NOT** use food or plastic containers to dispose of hazardous waste.

## Saw Transportation Safety

- Use appropriate lifting equipment to ensure the safe movement of the saw.
- **DO NOT** use the handle bars and/or front pointer as lifting points.
- When transporting of the saw is required, place saw directly inside towing vehicle truck-bed and tie-down securely. **NEVER** tow saw directly behind towing vehicle.
- **DO NOT** use the saw on slopes or on extremely un-level surfaces. An engine tipped to extreme angles may cause oil to gravitate into the cylinder head making the engine start difficult.
- **NEVER** transport the saw with the blade mounted.

## Emergencies

- **ALWAYS** know the location of the nearest **fire extinguisher**.



- **ALWAYS** know the location of the nearest **first aid kit**.




- In emergencies **ALWAYS** know the location of the nearest phone or **keep a phone on the job site**. Also know the phone numbers of the nearest **ambulance, doctor** and **fire department**. This information will be invaluable in the case of an emergency.



## **WARNING**

All displacement of the machine outside the cutting area shall be carried out with the tool not in rotation.

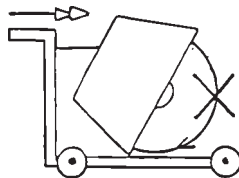

# STOW CUTTER 3 CE SAW — DECALS

## Machine Safety Decals

The Cutter 3 saws are equipped with a number of safety decals (Figure 2). These decals are provided for operator safety and maintenance information. The illustration below shows these decals as they appear on the slab saws. Should any of these decals become unreadable, replacements can be obtained from you dealer. See the "Nameplate and Decals" section for decal placement.

**WARNING**

TO PREVENT SERIOUS INJURY

DO NOT OPERATE SAW WITHOUT PROPER TRAINING & FULL UNDERSTANDING OF THE OWNERS MANUAL

WHEN OPERATING THIS MACHINE

KEEP ALL GUARDS IN PLACE

ALWAYS WEAR SAFETY APPROVED

HEARING PROTECTION

EYE OR FACE PROTECTION

HEAD PROTECTION

RESPIRATOR

S.M.I. MASONRY AND CONCRETE SAW MANUFACTURERS INSTITUTE

P/N: 22122-001



P/N 25491



P/N 25678



P/N: 13118



P/N 28853-001

**WARNING**

To avoid injury, you **MUST** read and understand operator's manual before using this machine.

This machine to be operated by qualified personnel only. Ask for training as needed.

P/N 35137

**CAUTION**

When Larger Blade and Guard is Installed, Belt Drive **MUST** Be Changed to Proper Size. See Owners Manual.

FAILURE TO COMPLY COULD RESULT IN SERIOUS BODILY INJURY.

S.M.I. MASONRY AND CONCRETE SAW MANUFACTURER'S INSTITUTE

P/N 23330-001

**STOW**

P/N: 22972-003

**STOW**

P/N: 22972-005  
8.625 LG

**STOW CUTTER 3**

P/N: 22972-004      P/N: 23653-003

**WARNING**

KEEP FEET CLEAR

P/N: 25250-001

**WARNING**

KEEP HANDS CLEAR

P/N: 25249-001

MODEL \_\_\_\_\_

SERIAL NO. \_\_\_\_\_

CONTACT PARTS DEPARTMENT

	CHECK	LUBRICATE	CLEAN
DAILY:	ENGINE OIL	SPINDLE BEARINGS	AIR CLEANER (WHEN CUTTING DRY)
OCCASIONALLY:	BELT TENSION HYDROSTATIC TRANSMISSION OIL HYDRAULIC LIFT SYSTEM RESERVOIR (IF SO EQUIPPED)	ALL BEARINGS SUBFRAME PIVOT REAR AXLE JACK SHIFT HANDWHEEL (IF SO EQUIPPED) CLEVIS PINS ROLLER CHAINS FRONT WHEEL BEARINGS LIFT MECHANISM SCREW (IF SO EQUIPPED)	FUEL STRAINERS FILTERS AIR CLEANER WATER PUMP INLET STRAINER COMPLETE MACHINE

23596-001

P/N 23596-001

A →

BELT DRIVE      CLOCKWISE

GEAR DRIVE      GEAR DRIVE

B →

CHECK      CHECK

C →

HOT      COUNTER CLOCKWISE

LIFTING POINT      LIFTING POINT

D →

LUBRICATION      LUBRICATION

LUBRICATION      LUBRICATION

P/N: 11246



P/N 35166



P/N 35167



P/N 11092

**WARNING**

All displacement of the machine outside the cutting area shall be carried out with the tool not in rotation

P/N 25867



P/N 36099 (ISO Blue)



P/N 29736

Figure 2. Stow Cutter 3 Saw Decals

# STOW CUTTER 3 CE SAW — GENERAL INFORMATION

## Familiarization

The Cutter 3 saws are designed for *wet* or *dry* cutting of concrete or asphalt utilizing diamond blades. They have been engineered for general, industrial and high production flat cutting applications. The reinforced steel box frame design adds strength necessary to reduce vibrations while cutting. Minimizing vibrations enhances the performance of the blade and extends the life of the saw.

Heavy-duty front and rear axles, sturdy oversized wheels and industrial undercarriage assembly ensures accurate tracking and years of reliable use.

Additionally, the general weight-to-strength ratio design of the frame and chassis assembly provides optimum weight distribution to keep the blade running true in the cut. A rugged blade shaft bearing assembly ensures minimal flutter and shaft harmonics providing the most advantageous condition for a diamond blade at operating speeds.

## Power Plants

The Cutter 3 saws are generally classified in the industry as **LOW** to **MEDIUM** horsepower saws. This classification is particularly useful when selecting the proper diamond blade for an application.

There are two gasoline engines used with the Cutter 3 saws: A **13 HP Honda GX390K1QWT2** air-cooled, 4-stroke single cylinder, OVH rated at 3600 RPM and a **20HP Honda GX620TXF2** air-cooled, 4-stroke OVH 90° V-twin rated at 3600 RPM. Blade rotation is v-belt driven. This is accomplished by connecting to the output shaft of the engine to an upper drive pulley. The lower drive pulley (Blade) is then connected to the upper drive pulley (Engine) by three V-belts. As the engine shaft rotates, so does the blade.

Refer to the engines Owner's Manual for the specific instructions regarding engine operation and maintenance practices.

## Console

An ergonomically designed control console allows the operator to easily understand and/or operate the adjustable handlebars, **Raise/Lower Crank Handle**, and **transmission engage/disengage lever** (Self-propelled models only). Additionally, for self-propelled models, the console also provides forward/reverse controls.

## Manual Raise/Lower System

The Cutter 3 saw uses an ACME thread, manual raise/lower assembly easily raises and lowers the blade and can lock into position to ensure a constant depth when cutting. See Table 7 for blade selection with respect to depth of cut.

## Water System

All saws provide a water direction system to provide cooling water to the diamond blade. This system consists of: a standard "garden hose" valve that connects to the water source (via hose) to the saw, an **ON/OFF** console water valve'

The 20-inch blade guard is designed with two 6-inch vinyl water tubes to direct water to the diamond blade.

## Under Carriage System

A jig welded heavy steel gauge under carriage assembly supports the saw in tracking, pivoting and stabilization. A rear axle supports two solid rubber cast hub wheels with roller bearings, grease fittings and locking collars. A front axle supports two solid rubber cast hub wheels with roller bearings, grease fittings and locking collars. The assembly pivots about two rocker blocks with bushings.

## Blade Drive System


A rugged blade shaft assembly has been specifically designed to support the optimum distribution of torque from the engine shaft to the blade shaft, and to ensure minimal vibratory conditions on the tips of the shaft.

Balanced engine & blade shaft pulleys are connected to their respective shafts, 3 V-belts (13HP, 4 V-belts for 20HP models) connect to the engine pulley to the blade shaft pulley. The blade shaft is supported by two self-aligning pillow block bearings that are uniquely positioned on the most outboard portion of the reinforced frame.

The combination of pulley and blade shaft bearing positioning ensures minimal vibration & flutter to the ends of the blade shaft.


## Water System

The Stow Cutter 3 Saw comes standard with a 20-inch hinged two piece, heavy steel gauge blade guard. The blade guard provides access for vinyl water tubes that supply optimum volume and dispersal of water for cooling and/or dust suppression.

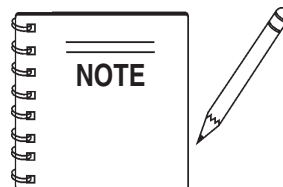

All Stow Cutter 3 saws are designed, engineered and manufactured with strict adherence to American National Standards Institute, Inc. (ANSI) guidelines B7.1 and B7.5

# STOW CUTTER 3 CE SAW — MAJOR COMPONENTS

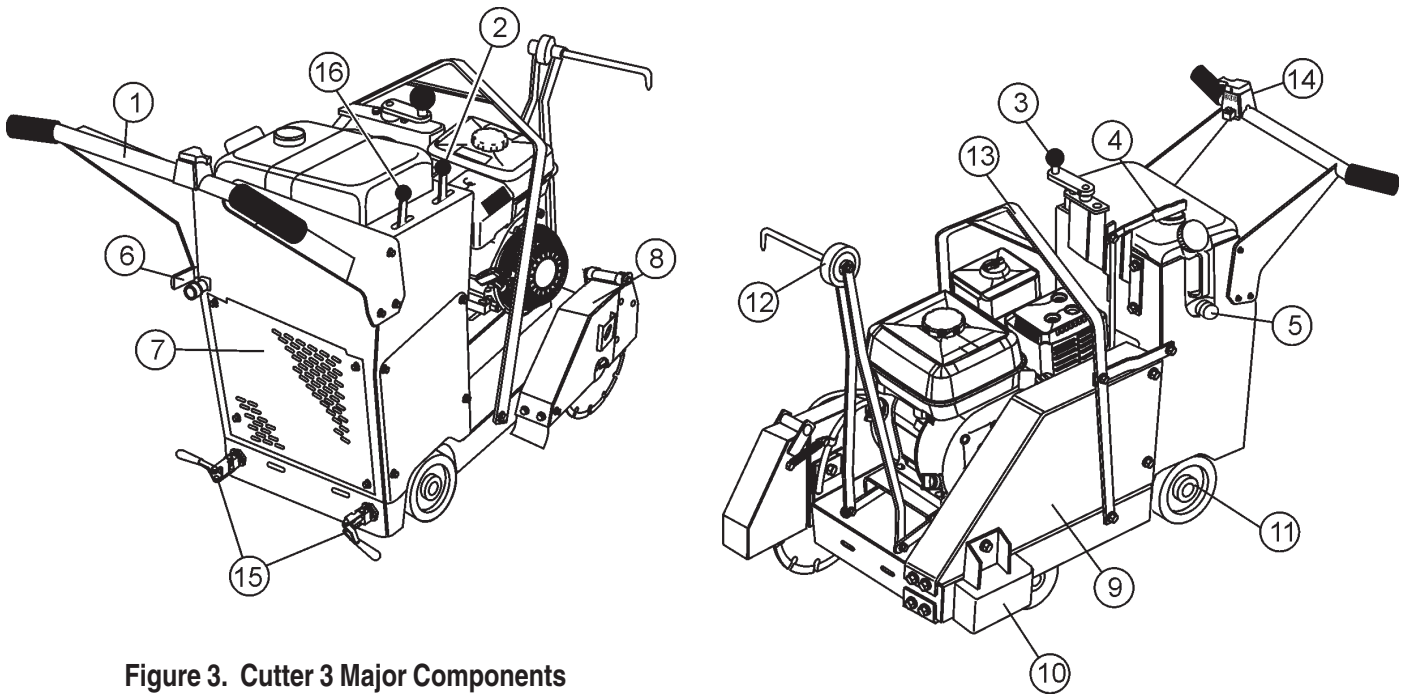

**Figure 3. Cutter 3 Major Components**

Figure 3 displays the location of the various operational control features of the Cutter 3 Saw. Features are dependent on the specific model saw selected. The function of each console component or indicator is explained below:

1. **Handle Bars** – Used to steer and push the Cutter 3 saw during cutting operations. The handle can be folded down for transportation.
2. **Forward/Reverse Speed Lever** – Controls forward and reverse speeds for self-propelled operation. Provides positive neutral for engine start. **ALWAYS** place transmission engage/disengage lever in the engage position before setting speed lever (self-propelled models only).
3. **Raise/Lower Crank Handle** – Physically orients saw (raises or lowers) depending on cranking direction (CW or CCW). Turning the handle **clockwise** lowers the saw, turning the saw counter-clockwise raises the saw.
4. **Transmission Engage/Disengage Lever** – Forward locking position engages transmission. Rear Locking position disengages transmission from rear axle and permits "free wheeling" (self-propelled models only).
5. **Water Tank** – A 5-gallon capacity water tank provides water for the saw blade during wet cutting applications.
6. **Water ON/OFF Valve** – **ON** position **opens** valve and permits water to flow from source through saw water hose. **OFF** position **closes** valve and halts the flow of water.
7. **Hydraulic Drive Transmission** - Controls the saw's forward and reverse movement by using the **forward/reverse speed lever** (Self-propelled units only).
8. **Saw Blade Guard** – Covers the saw blade during cutting operations & allows water hoses to be connected to the cover for wet cutting.
9. **Belt Cover** – Covers the drive shaft belt, engine pulley and the hydraulic transmission belt (on self-propelled models only).
10. **Drive-Shaft Pulley Guard** – Covers the drive shaft pulley.
11. **Rear Wheels** – Allows the saw to be rolled across ground. On self-propelled models, the rear wheels are turned by the spline gears attached to the hydraulic transmission system.
12. **Pointer Arm** – Front pointer wheel assists in straight tracking. Lifts up for storage and pivots down for use.
13. **Lifting Bale Kit** – Allows for easy lifting and transporting the Cutter 3 Saw.
14. **Engine OFF Switch** – Toggle in either direction to stop the engine.
15. **Wheel Clamp** – Move handle down making contact with wheel to avoid unwanted rolling movement. Lift handle to release.
16. **Throttle Lever** – (self-propelled units only) Used to adjust engine RPM speed (**SLOW** or **FAST**).

# STOW CUTTER 3 CE SAW — 13HP HONDA ENGINE COMPONENTS

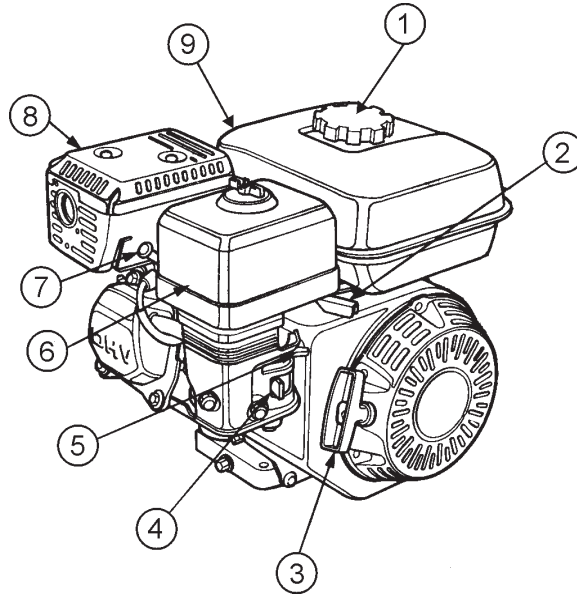


Figure 4. Engine Controls and Components (Honda GX390K1QWT2)


## INITIAL SERVICING

The engine (Figure 4) must be checked for proper lubrication and filled with fuel prior to operation. Refer to the manufacturers Engine manual for instructions & details of operation and servicing.

1. **Fuel Filler Cap** – Remove this cap to add unleaded gasoline to the fuel tank. Make sure cap is tightened securely. **DO NOT** over fill.

### **WARNING**

Adding fuel to the tank should be accomplished only when the engine is stopped and has had an opportunity to cool down. In the event of a fuel spill, **DO NOT** attempt to start the engine until the fuel residue has been completely wiped up, and the area surrounding the engine is dry.

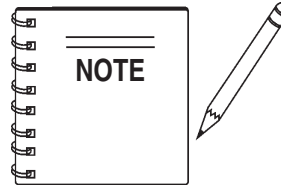

Operating the engine without an air filter, with a damaged air filter, or a filter in need of replacement will allow dirt to enter the engine, causing rapid engine wear.

2. **Throttle Lever** – Used to adjust engine RPM speed (lever advanced forward **SLOW**, lever back toward operator **FAST**).
3. **Recoil Starter (pull rope)** – Manual-starting method. Pull the starter grip until resistance is felt, then pull briskly and smoothly.
4. **Fuel Valve Lever** – **OPEN** to let fuel flow, **CLOSE** to stop the flow of fuel.
5. **Choke Lever** – Used in the starting of a cold engine, or in cold weather conditions. The choke enriches the fuel mixture.
6. **Air Cleaner** – Prevents dirt and other debris from entering the fuel system. Remove wing-nut on top of air filter cannister to gain access to filter element.

7. **Spark Plug** – Provides spark to the ignition system. Set spark plug gap (HONDA) to 0.6 - 0.7 mm (0.028 - 0.031 inch). Clean spark plug once a week.
8. **Muffler** – Used to reduce noise and emissions. Engine components can generate extreme heat. To prevent burns, **DO NOT** touch these areas while the engine is running or immediately after operating. **NEVER** operate the engine with the muffler removed.


### **WARNING**

Engine components can generate extreme heat. To prevent burns, **DO NOT** touch these areas while the engine is running or immediately after operating. **NEVER** operate the engine with the muffler removed.



9. **Fuel Tank** – Holds unleaded gasoline. For additional information refer to engine owner's manual.

# STOW CUTTER 3 CE SAW — 20HP HONDA ENGINE COMPONENTS

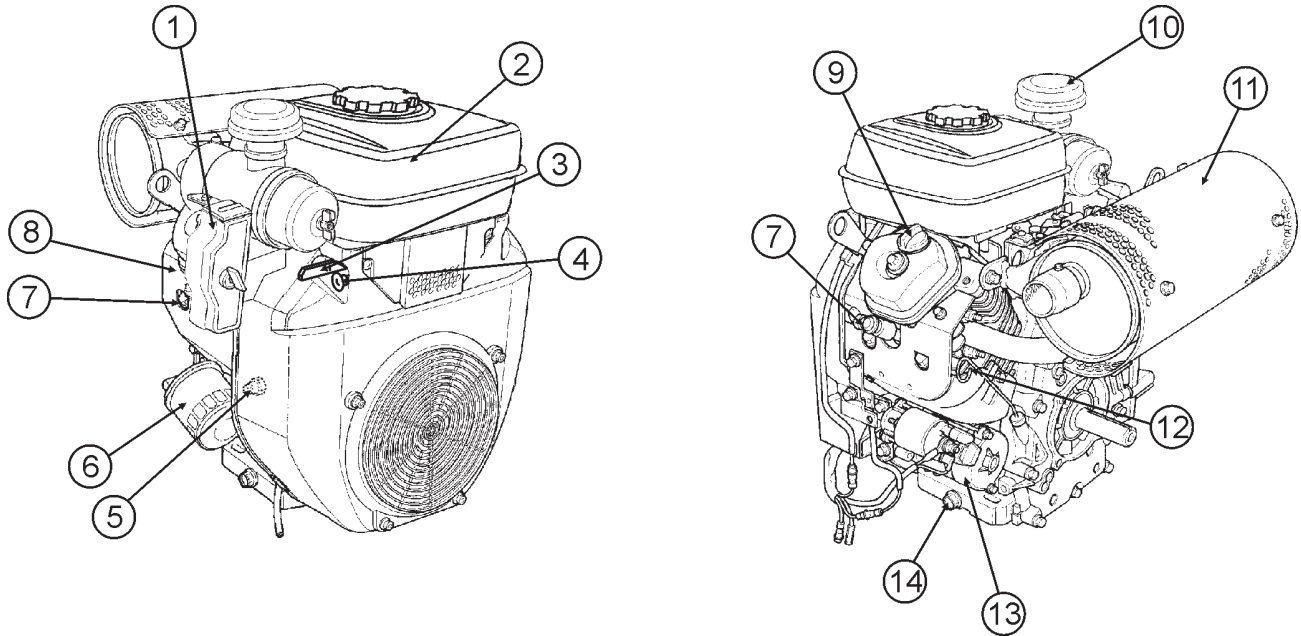

**Figure 5. Engine Controls and Components (Honda GX620TXF2)**

## INITIAL SERVICING

The engine (Figure 5) must be checked for proper lubrication and filled with fuel prior to operation. Refer to the manufacturer's engine manual for instructions & details of operation and servicing.

1. **Engine ON/OFF Switch** – ON position permits engine starting, OFF position stops engine operations.
2. **Fuel Tank** - Holds unleaded gasoline. For additional information refer to engine owner's manual.
3. **Throttle Lever** – Controlled by accelerator pedal, increases or decreases engine RPM.
4. **Choke Knob** – Used in the starting of a cold engine or in cold weather conditions. The choke enriches the fuel mixture.
5. **Oil Sensor Switch** – This switch monitors the oil level in the engine crankcase. In the event of low oil, the engine will be shut down.
6. **Oil Filter** – Spin-on type, filters oil for contaminants.
7. **Spark Plug** – Provides spark to the ignition system. Set spark plug gap to 0.71 - 0.78 mm (0.028 - 0.031 inch) Clean spark plug once a week.
8. **Fuel Filter** – Filters fuel for contaminants.
9. **Oil Filler Cap** – Remove cap to refill or replace oil with recommended type as listed in Table 4. Make sure cap is tightened securely. **DO NOT** over fill.
10. **Air Filter** – Prevents dirt and other debris from entering the fuel system. Unsnap air filter cover to gain access to filter element.
11. **Muffler** –Used to reduce noise and emissions. **NEVER** touch the muffler while it is hot! Serious burns can result. **NEVER** operate the engine with the muffler removed.
12. **Oil Dip Stick** – Remove to check amount and condition of oil in crankcase.
13. **Starter** – Starts engine when ignition key is rotated to the ON position.
14. **Oil Drain Plug** – Remove to drain crankcase oil.

### **WARNING**

Engine components can generate extreme heat. To prevent burns, **DO NOT** touch these areas while the engine is running or immediately after operating. **NEVER** operate the engine with the muffler removed.





# STOW CUTTER 3 CE SAW — INSPECTION

## PREPARATION / PRE-INSPECTION

1. Read and fully understand this manual, the safety instructions in particular, and the engine manufacturer's manual supplied with the saw.



2. Select the correct blade for each application. Refer to the Blades and Blade Placement sections on pages 17 through 19 for further information.

3. Check blade for wear or damage. Handle all blades with care and **ALWAYS** replace a damaged blade.



4. Clean the saw, removing dirt and dust, particularly the engine cooling air inlet, carburetor and air cleaner.

5. Check the air filter for dirt and dust. Replace the air filter if it is found to be dirty.

6. Check carburetor for external dirt and dust. Clean with dry compressed air.


7. Check fastening nuts and bolts for tightness.

8. Ensure a suitable water supply is available, hooked up, and used. (connected via garden hose or with a water tank supply system).

### Engine Oil Check


1. To check the engine oil level, place the saw on secure level ground with the engine stopped, and the diamond blade removed.

2. Remove the **filler cap/dipstick** from the engine oil filler hole (Figure 6) and wipe it clean.

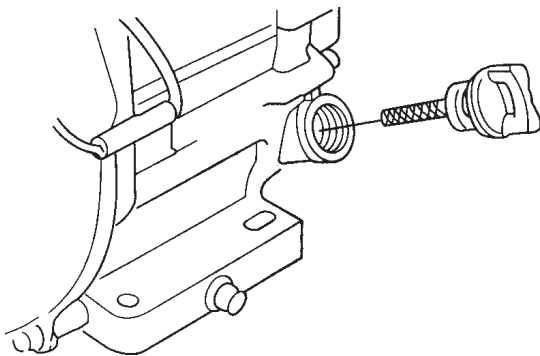

Honda GX390 engine shown

Figure 6. Engine Oil Dipstick (Removal)


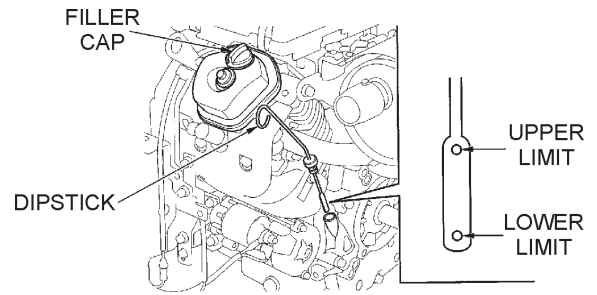


Honda GX620 engine shown

Figure 6A. Engine Oil Dipstick (Removal)

3. Insert and remove the dipstick without screwing it into the filler neck. Check the oil level shown on the dipstick.

4. If the oil level is low (Figures 6 and 7), fill to the edge of the oil filler hole with the recommended oil type (Table 4). Maximum oil capacity for the Honda GX390 engine is 2.32 pints (1.1 liters) and for the Honda GX620 engine it is 3.18 pints (1.50 liters).

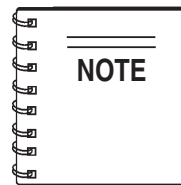

Reference manufacturer engine manual for specific servicing instructions.

HONDA 13 HP engine shown.

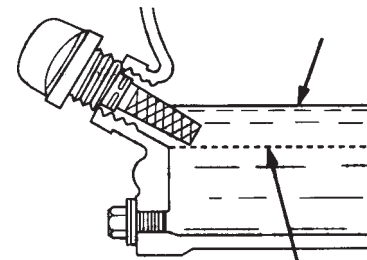


Figure 7. Engine Oil Dipstick (Oil Level)

Table 4. Oil Type


Season	Temperature	Oil Type
Summer	25°C or Higher	SAE 10W-30
Spring/Fall	25°C~10°C	SAE 10W-30/20
Winter	0°C or Lower	SAE 10W-10

# STOW CUTTER 3 CE SAW — INSPECTION

## Gasoline Check

### WARNING

Motor fuels are highly flammable and can be dangerous if mishandled. **DO NOT** smoke while refueling. **DO NOT** attempt to refuel the saw if the engine is *hot* or *running*.

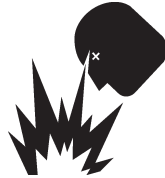

1. Remove the gasoline cap located on top of fuel tank.
2. Visually inspect to see if fuel level is low. If fuel is low, replenish with unleaded fuel.
3. When refueling, be sure to use a strainer for filtration. **DO NOT** top-off fuel. Wipe up any spilled fuel.

## Hydrostatic Transmission (Self-Propelled models only) -

An EATON® Model 7 hydrostatic transmission (Figure 8) provides the power for the saw's propulsion system. The transmission drives a sprocket that directly connects the spline drive to the rear wheels. The **no load** forward/reverse speeds are approximately 24.4 m/min. (80 ft/min.).

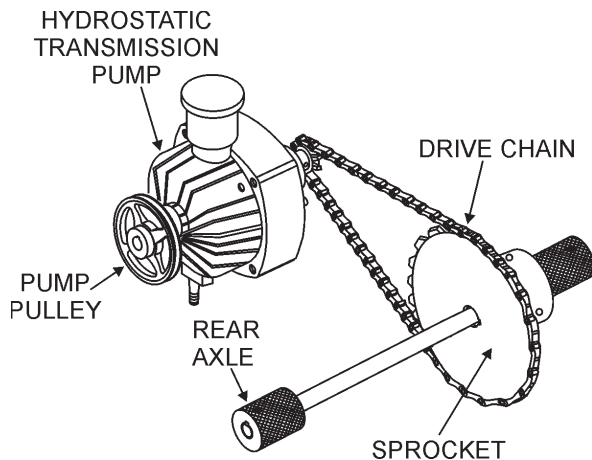


Figure 8. Hydrostatic Transmission

The transmission is factory filled with approved hydraulic fluid that has a viscosity equivalent to SAE 20W-20. Should additional servicing be required, the following hydraulic fluids are recommended:

- General Motors Dextron B
- Ford MM2C-33F
- Ford M2C-41A
- International harvester Hy-Tran Fluids

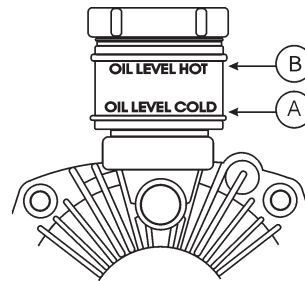


Figure 9. Transmission Reservoir

### CAUTION

**DO NOT** over fill the fluid reservoir (Figure 9). Note the level marks on the reservoir. **It is essential to reference the existing oil conditions (A) cold or (B) hot prior to operating the saw.** Overfilling the transmission with hydraulic fluid may cause the seals to **rupture** causing mechanical damage.

# STOW CUTTER 3 CE SAW — INSPECTION

## Battery (Self-Propelled models only)

Self-Propelled models use a single 12-volt DC battery. (Figure 10) It is shipped **ready to use**.

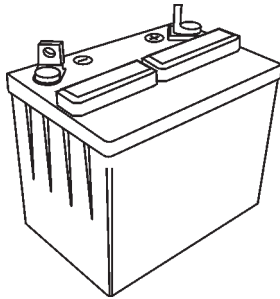


Figure 10. Battery

When servicing of the battery is required perform the following:

- A face shield and rubber gloves should be worn while handling and servicing battery's electrolyte.
- **Disconnect** battery terminal clamps, and remove the battery from the saw when servicing is required.
- **DO NOT** overfill the battery.


**! WARNING**

Wear **safety glasses** or **face mask**, **protective clothes**, and **rubber gloves** when working with battery.




**! WARNING**

Electrolyte is an acid and must be handled with caution. Servicing instructions from the electrolyte manufacturer must **ALWAYS** be followed to ensure safety. Serious injury can result from careless handling and noncompliance to safety handling instructions.



Overfilling the battery may cause the electrolyte to overflow resulting in corrosion to nearby components. Immediately wash off any spilled electrolyte (battery acid).



Additionally, when connecting the positive (+) cable to the battery's positive (+) terminal post, **DO NOT** allow contact of the wrench or any metallic part to come in contact with the battery's negative (-) terminal post. This may result in an electrical short circuit or an explosion.

**NOTE**



Use only **distilled** water in the battery. Tap water can **reduce** the operating life of the battery.

# STOW CUTTER 3 CE SAW — INSPECTION -BLADE

## SPECIFIC TOOLS TO BE USED

This saw is to use tools (blades) as follows:

Steel Core Segmented or Continuous Diamond Rim Cutting Wheel.

Any other type of tool is not to be used. See Table 5 for specific blade usage for material.

## WARNING

Failure to thoroughly inspect the diamond blade (Figure 11) for operational safety could result in damage to the blade, the saw, and may cause injury to the user or others in the operating area.

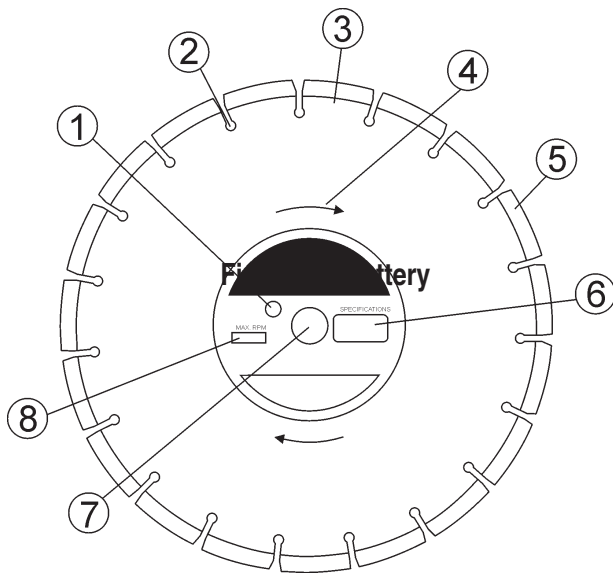


Figure 11. Diamond Blade

1. **Drive Pin Hole** – A commonly located hole on the diamond blade core that prevents operational blade slippage between the inner & outer blade flanges (collars). Inspect the diameter of the hole to ensure there is no distortion, and that a snug fit develops between the hole and drive pin.
2. **Stress Relief Holes (Gullets)** – Check the steel core for cracks that may have propagated from the slots and/or gullets. Cracks indicate extreme fatigue failure and if sawing continues, catastrophic failure will occur.
3. **Edge Of The Steel Core** – Check the diameter edge for discoloration (blue oxidation) indicating an overheating condition caused by insufficient cooling water/air. Overheating of blades may lead to loss of core tension and/or increase the possibility for blade failure. Check to make sure the steel core's width is uniform about the rim of the blade, and not succumbing to an “under cutting” condition brought about by highly abrasive material or improper under cutting core protection.
4. **Directional Arrow** – Check to ensure that the blade is oriented properly on the blade shaft for sawing. Reference the directional arrow in the blade and place it so the direction of rotation “downcuts” with the turn of the shaft.
5. **Diamond Segment or Rim** – Ensure there are no cracks, dings, or missing portions of the diamond segment/rim. **DO NOT use a blade that is missing a segment or a portion of the rim.** Damaged and/or missing segments/rims may cause damage to your saw, and injury to the user or others in the operating area.
6. **Specifications** – Ensure that the blade specifications, size, and diameter properly match up to the sawing operation. Wet blades must have water to act as a coolant. Utilizing a diamond blade not matched properly to the task may result in poor performance and/or blade damage.
7. **Arbor Hole** – It is essential that the arbor hole diameter properly matches the blade, and that it is free from distortions. Correct blade flanges (collars) must be used. The inside face of the flanges must be clean & free of debris. An out of round arbor condition will cause damage to the blade and the saw.
8. **MAX RPM** – This RPM reference is the maximum safe operating speed for the blade selected. **NEVER** exceed the max RPM on the diamond blade. Exceeding the MAX RPM is dangerous, and may cause poor performance and may damage the blade.

# STOW CUTTER 3 CE SAW — INSPECTION - BLADE PLACEMENT

Table 5. MATERIAL LISTING AND BLADE SELECTION	
Material	Blade
Cured Concrete	Cured Concrete Blade
Green Concrete	Green Concrete Blade
Asphalt	Asphalt Blade
Asphalt over Concrete	Asphalt/Concrete Blade
Block, Brick, Masonry, Refractories	Masonry Blade
Tile, Ceramic, Stone	Tile Blade

## Diamond Blades

Selecting the diamond blade **TYPE** and **GRADE** defines how the blade will perform both in cutting speed and blade life.

Selection of the proper diamond blade consists of:

- Material to be Cut
- Type of Saw Being Used
- Horsepower of Saw
- Hardness Characteristics of the Material
- Performance Expectations

Factors for sawing economy:

- Type of Blade
- Depth of Cut
- Sawing Speed
- Characteristics of the Material Being Cut


## Blade Speed

A diamond blade's performance is directly connected to specific peripheral (rim) speeds.

The following shaft rotational speeds have been factory set to ensure optimum blade performance.

- Cutter 3 CE - 508 mm. (20") Capacity - 2800 RPM.


! **WARNING**



Operating saw blades at rotational speeds greater than those specified by the manufacturer can cause blade damage, and may injure the user or others in the operating area.


## BLADE PLACEMENT

! **WARNING**



Failure to thoroughly inspect the diamond blade for operational safety could result in damage to the blades or the saw and may cause injury to the user or others in the operating area.

# STOW CUTTER 3 CE SAW — INSPECTION - BLADE PLACEMENT

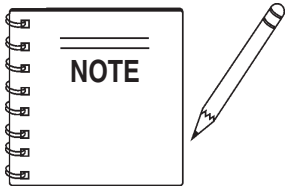

The following steps should be accomplished before placing the diamond blade on the **blade shaft**.

- Set the engine **ON/OFF** switch to the **OFF** position.
  - Raise the saw to a high position by cranking the Raise/Lower handle in a counterclockwise direction.
  - Use the Blade Nut Wrench & Blade Shaft Locking Wrench stored on the front section of the console to install the diamond blade.
  - Reference Figure 12 (Diamond Blade Placement) when removing or installing the diamond blade.
1. **Blade Guard** – Raise the front half of the blade guard to expose the blade shaft nut & outer flange.
  2. **Blade Nut Wrench** – Remove the blade nut wrench (3) from the tool holder and unscrew the blade shaft nut (right-side). This nut **loosens clockwise** and **tightens counterclockwise**.



3. **Blade Nut** – Remove the blade nut (4). For reassembly, **DO NOT** over tighten the blade nut against the outer flange. Tighten blade nut approximately 62-69 N/m. (45-50 ft-lbs)
4. **Outside Blade Flange (Collar)** – Ensure that the flange face is clean and free of debris and is placed flush against the diamond blade (7). Check that the drive pin goes through the blade pin hole (6) and seats properly into the inner flange (8).
5. **Blade Pin Hole** – Align this hole with the drive pin hole on the inner flange collar.
6. **Diamond Blade** – Ensure that the proper blade has been selected for the job. Pay close attention to the directional arrow on the blade, **clockwise for right-side** cutting, **counter-clockwise for left-side** cutting. The arbor hole of the blade must match the 1" arbor of the blade shaft.
7. **Inner Flange Collar** – This flange is fixed upon the blade shaft, and is manufactured with a drive pin hole. The inside surface of the flange must be free of debris and permit a tight closure on the surface of the blade.

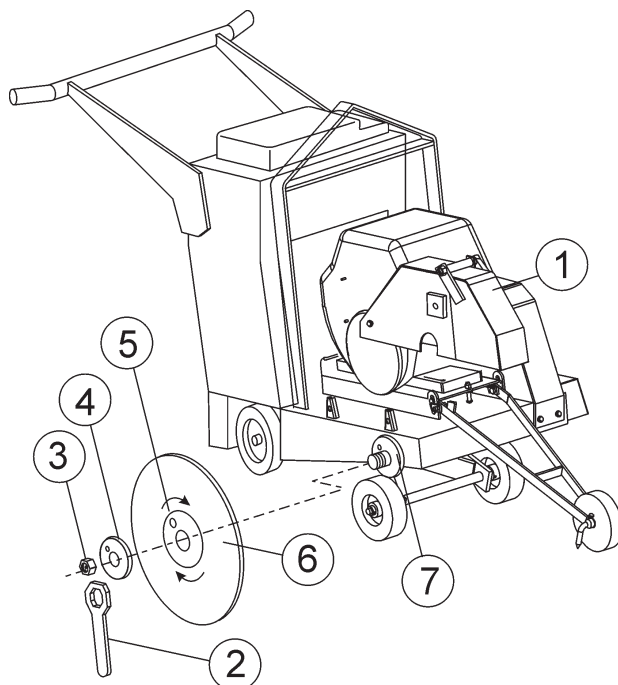



Figure 12. Diamond Blade Placement

# STOW CUTTER 3 CE SAW — INSPECTION -GUARDS, COVERS & BELTS

## Guards and Covers Check

### **WARNING**

**NEVER** operate the saw without blade guards and covers (Figures 13 and 14) in place. **DO NOT** operate with the front of the blade guard raised. The blade exposure cannot exceed 180 degrees during operations. Adhere to the safety guidelines of the **American National standards Institute (ANSI) B7.1 and B7.5.**

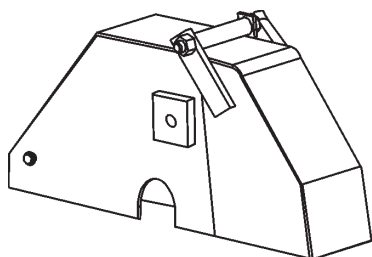


**Figure 13. Blade Guard**

**CHECK** the following on the **blade guard**:

- Check to ensure the capacity of the blade guard matches the diameter of your diamond blade.
- Check that the guard seats firmly upon the bayonet fitting of the saw frame.
- Check that the spring tensioned front cover of the guard is firmly seated with the rear section of the guard, and there are no gaps.
- Check the fit of the water hoses in the sides of the blade guard. **NEVER** lift the blade guard while cutting.
- Check that the flood water tubes are clear and open. Test the water supply for pressure and flow (to both sides of the blade) before sawing operations.

**CHECK** the following on the **blade flange cover**.

- Check that the flange cover seats firmly upon the bayonet fitting of the saw frame prior to operation.
- This flange cover is to be in place when cutting from either the right or left side of the saw.

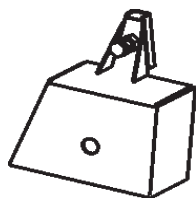

**Figure 14. Blade Flange Cover**

## V-Belts and Covers

### **CAUTION**

**NEVER** attempt to check the V-belt with the engine running because severe injury can occur. Keep fingers, hands, hair and clothing away from all moving parts.




## V-belts Alignment and Tensioning


This slab saw is equipped with 3 premium V-belts (3 for 13HP models, 4 V-belts for 20HP models) that have been aligned and tensioned by factory personnel. All V-belts **MUST** be installed for proper operation of the saw. Failure to run the saw with less than the required number of belts may damage the saw or equipment.

Use the following procedure to check the alignment of V-belts:

1. Remove the bolts that secure the V-belt cover (Figure 15) to the saw frame.
2. Check uniform parallelism (Figure 16) of V-belts and pulley (sheaves). Use a straight edge or machinists's square against both pulleys and adjust both pulleys until equally aligned.

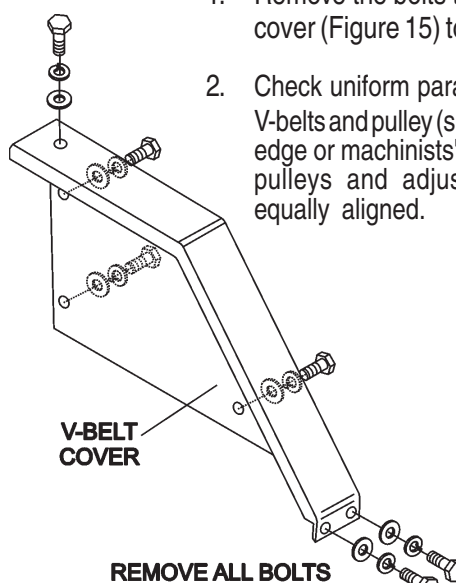

**Figure 15. V-Belt Cover**

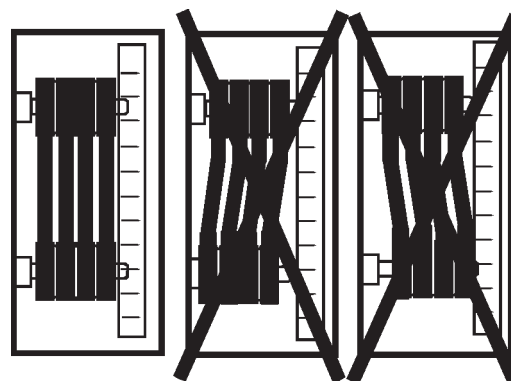

**Figure 16. V-Belt Parallelism**

# STOW CUTTER 3 CE SAW — INSPECTION - BELTS & WATER TANK

3. Check V-belt tension (Figure 17) by using a tensionmeter (2.7 - 4.1 kg/6.0 - 9.0 lbs.) against the inside belt at a mid point between the two pulleys, or by deflecting the center belt at a mid point 10 mm (3/8") - 13 mm (1/2").

CORRECT V-BELT TENSION 3/8 IN.  
(10 MM) TO 1/2 IN. (13 MM) WHEN DEPRESSED  
AT MIDPOINT AS SHOWN

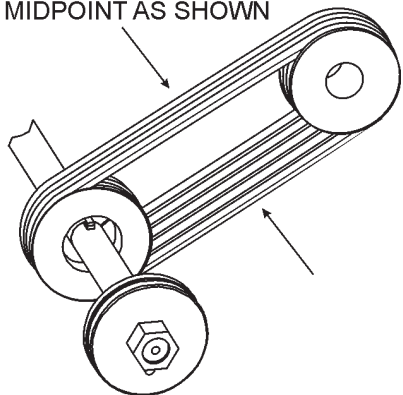


Figure 17. V-Belt Tension

4. **DO NOT** over or under tension the V-belts. Severe damage can occur to the saw and engine crank shaft if the belts are over tensioned. A decrease of power to the blade and poor performance will result if the belts are under tensioned (loose on pulleys).
5. If the V-belts becomes worn or loose, replace them by using the following V-belt part numbers listed in Table 6.

## Water Tank

The Cutter 3 saw is equipped with a removable 5-gallon on-board water tank fitted in the top of the console which can be connected to the brass hose fitting on the rear of the operators console (Figure 18).

Before using the water tank, ensure it is filled to capacity and connected to the hose fitting to provide lubrication during cutting. An external water source can also be connected to the CUTTER 3 for extended wet cutting operations.

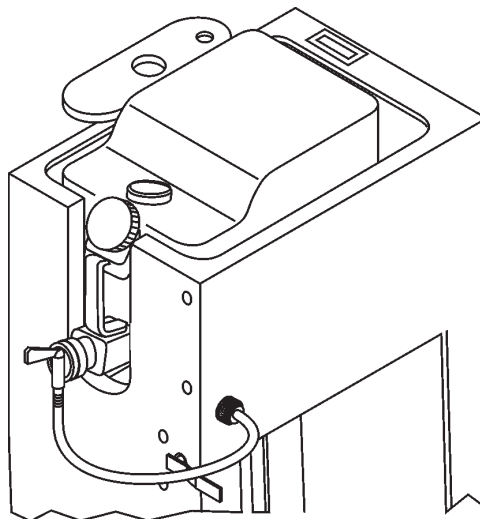


Figure 18. On-board Water Tank Hose Connection

Table 6. V-Belts and Pulleys

Engine Size	Saw Type	Blade Size	V-Belt P/N (Qty.)	Engine Pulley P/N	Blade Shaft Pulley P/N
13 HP Engine	Push	20 inch	16052 (3)	23665-001	25172-003
	Self-Propel			23703-003	25172-003
20 HP Engine	Self-Propel	20 Inch	15897 (4)	28833-002	23280-001



# STOW CUTTER 3 CE SAW — INSPECTION - ADJUSTMENTS

## CAUTION

**NEVER** stop the engine while cutting at high speeds, except in case of an emergency. This can damage your Cutter 3 CE Saw.

### Adjusting the Handle Bars

The Cutter 3 CE has adjustable height handle bars. Before operating the saw, adjust the handle bar height to a comfortable working position:

1. Loosen the height adjustment bolts (Figure 19) on the handle bars until the handle bars can freely pivot.

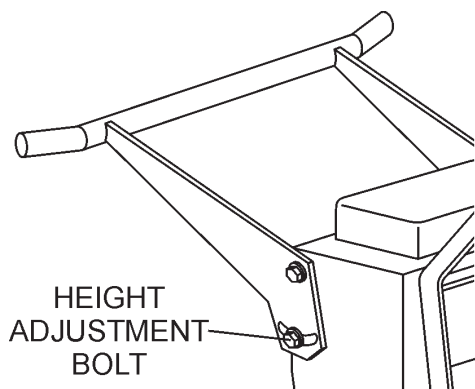


Figure 19. Handle Bar Adjustment Bolts

2. Move the handle bars (Figure 20) up or down to operators desired preference.

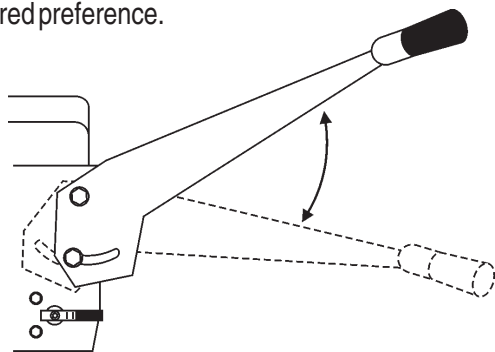


Figure 20. Handle Bar Height Adjustment

3. Tighten the height adjustment bolts to secure the handle bars in place.

## CAUTION

To avoid losing control of the Cutter 3 CE saw, be sure to fully tighten the adjustment bolts before operating the saw to prevent the bolts from loosening during cutting.

### Adjusting the Blade Height

The Cutter 3 CE saw uses a manual **raise/lower crank handle** located on the console with **clockwise** rotation providing lowering action, and **counter-clockwise** rotation providing raising and lowering action (Figure 21).

To adjust the blade height:

1. Pull upward on the raise/lower crank handle knob.
2. Rotate the crank handle **clockwise** to **lower the blade**. Rotate the crank handle **counter-clockwise** to **raise the blade** (Figure 21). The handle will stop rotating when the blade has been fully raised or lowered.


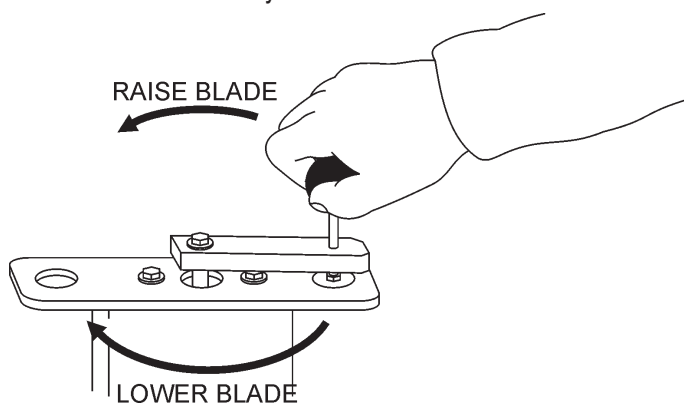


Figure 21. Blade Height Adjustment

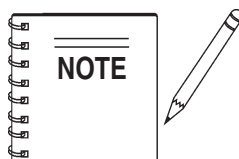

When moving the saw around between cutting, fully raise the blade to avoid striking the ground with the blade.

### Determining the Cut Depth

When preparing to cut, your blade size determines the depth of the cut. See Table 7 to determine the proper blade size for your required cutting depth.

TABLE 7. BLADE SELECTION

Diamond Blade Diameter	Depth of Cut
304.8 mm (12 in.)	92.1 mm (3-5/8 in.)
355.6 mm (14 in.)	117.48 mm (4-5/8 in.)
406.4 mm (16 in.)	142.88 mm (5-5/8 in.)
457.2 mm (18 in.)	168.28 mm (6-5/8 in.)
508 mm (20 in.)	193.68 mm (7-5/8 in.)

# STOW CUTTER 3 CE SAW — MANUAL START-UP (13HP HONDA ENGINE)

## MANUAL START-UP (13HP HONDA ENGINE)

The following start-up procedure makes reference to a **HONDA 13 HP Engine (Manual Start)**.

### CAUTION

**DO NOT** attempt to operate the saw until this manual has been read and thoroughly understood. Engine operating steps may vary. See included engine manufacturer's operating manual.




### WARNING

When the engine is running the cutting blade is **ALWAYS rotating**. Keep hands and feet clear of rotating blade. Raise the saw to full height when maneuvering the saw within the cutting area.



All displacement of the machine outside the cutting area shall be carried out with the tool not in rotation.

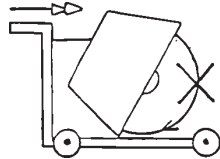

### WARNING

**NEVER** place hands or feet inside the belt guard or blade guard while the engine is running. **ALWAYS** shut the engine down before performing any kind of maintenance service on the saw.



### CAUTION

Ensure the work area is clear of tool, debris, and unauthorized people.

### CAUTION

Keep Wheel Clamp applied (lever **DOWN**) until completely ready for cutting operation.



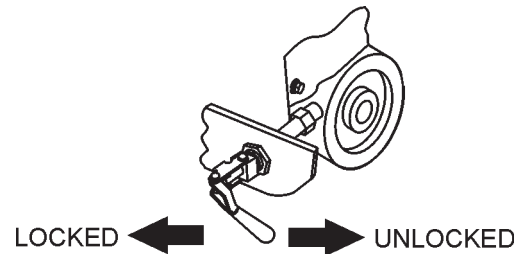


Figure 22. Wheel Clamp

1. Ensure the wheel clamps are in the **LOCKED** position. (Figure 22).
2. Ensure the engine **Shutdown switch** on the handlebar and the engine **ON/OFF switch** on the engine are both in the **OFF** position to avoid accidental starting. (Figures 23 and 24)

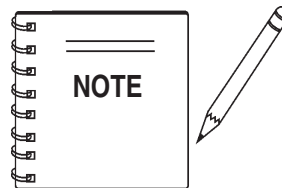

The Engine Stop Switch located on the handlebar (Figure 23) serves both as an **Emergency Engine Shut-Off** and as the **primary Shutdown switch**. This allows the operator to shutdown the saw safely away from moving parts.

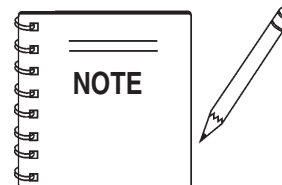

After shutdown on Electric Start models, ensure the **Engine Start switch** is turned to the **OFF** position to avoid battery discharge and accidental starting.

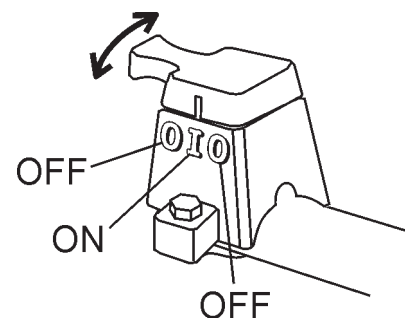


Figure 23. Engine Shutdown Switch (Handlebar)

# STOW CUTTER 3 CE SAW — MANUAL START-UP (13HP HONDA ENGINE)

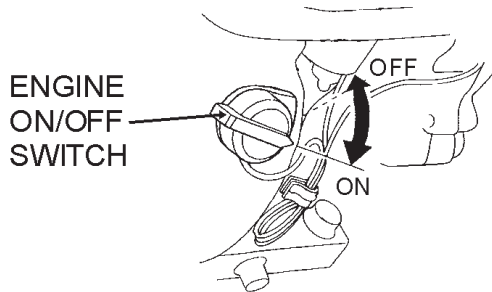


Figure 24. Engine ON/Off Switch (Engine)

3. Ensure the diamond blade has been mounted correctly and that it is raised above the surface you are about to saw.
4. Ensure the water tank is filled to capacity (18.95 liters/5 gallons). Connect the water tank hose to the water system brass fitting on the rear of the console (Figure 18) and test for adequate water flow to the diamond blade before operation. When ready to start cutting, turn the water on.
5. Place the **fuel valve lever** (Figure 25) to the **ON** position.


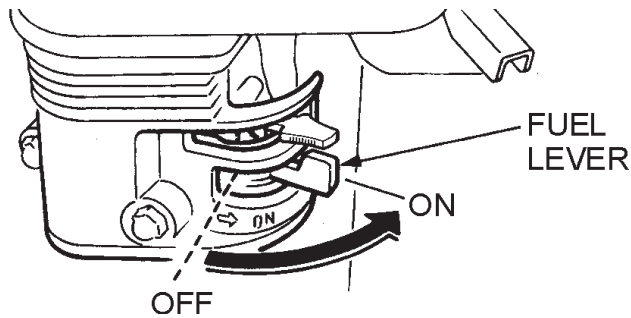


Figure 25. Fuel Valve Lever

6. Place the **Engine ON/OFF switches** (Figures 23 and 24) to the **ON** position.

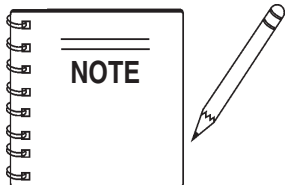

The **CLOSED** position of the choke lever enriches the fuel mixture for starting a **COLD** engine. The **OPEN** position provides the correct fuel mixture for normal operation after starting, and for restarting a warm engine.

7. If operating the Cutter 3 CE in **cold weather conditions**, skip this step and proceed to step 8. Place the **Choke Lever** (Figure 26) in the **OPEN** position. Skip to step 9.

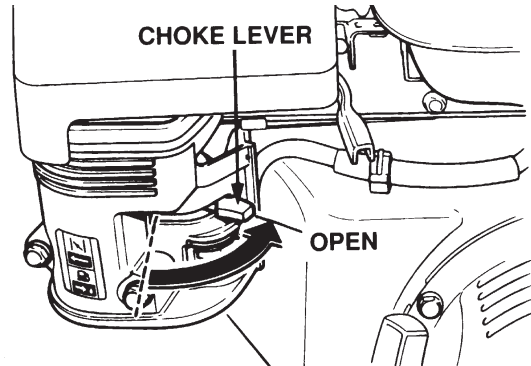


Figure 26. Choke Lever (Open Position)

8. If operating the Cutter 3 CE in **cold weather conditions**, place the **Choke Lever** (Figure 27) in the **CLOSED** position.

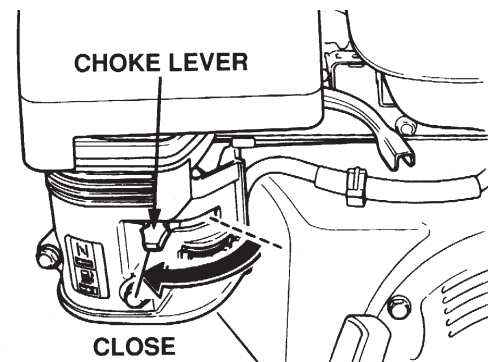


Figure 27. Choke Lever (Closed Position)

## ⚠ CAUTION

The engine governor speed has been set at the factory. Changing the governor speed could damage the blade and/or the saw.

9. Place the **throttle lever** (Figure 28) halfway between **FAST** and **SLOW** for starting. All sawing is done at full throttle. The engine governor speed is factory set to ensure optimum blade operating speeds.

## STOW CUTTER 3 CE SAW — MANUAL START-UP (13HP HONDA ENGINE)

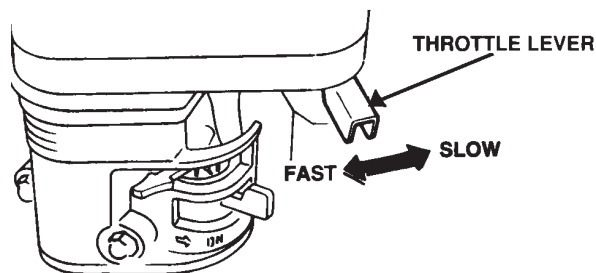


Figure 28. Throttle Lever

10. Grasp the starter grip (Figure 29) and slowly pull it out. The resistance becomes the hardest at a certain position, corresponding to the compression point. Pull the starter grip briskly and smoothly for starting.

### CAUTION

- **DO NOT** pull the starter rope all the way to the end.
- **DO NOT** release the starter rope after pulling. Allow it to rewind as soon as possible.

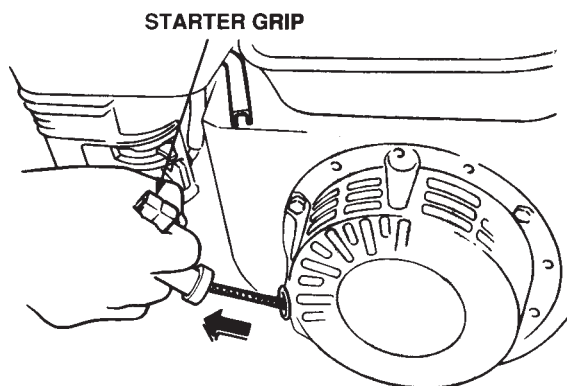


Figure 29. Starter Grip

11. If the engine has started, slowly return the choke lever (Figure 22) to the **CLOSED** position. If the engine has not started repeat steps 7 through 10.
12. Before the saw is placed into operation, run the engine for several minutes. Check for fuel leaks, and noises that would associate with a loose guard and/or covers.
13. All sawing is done at full throttle. Your engine governor has been set at the factory to ensure an optimum speed setting.


# STOW CUTTER 3 CE SAW — ELECTRIC START-UP (20HP HONDA ENGINE)

## ELECTRIC START-UP (20HP HONDA ENGINE)

The following start-up procedure makes reference to a **HONDA 20 HP Engine (Electric Start)**

**CAUTION**


**DO NOT** attempt to operate the saw until this manual has been read and thoroughly understood. Engine operating steps may vary. See included engine manufacturer's operating manual.



**WARNING**


When the engine is running the cutting blade is **ALWAYS rotating**. Keep hands and feet clear of rotating blade. Raise the saw to full height when maneuvering the saw within the cutting area.

All displacement of the machine outside the cutting area shall be carried out with the tool not in rotation.



**WARNING**

**NEVER** place hands or feet inside the belt guard or blade guard while the engine is running. **ALWAYS** shut the engine down before performing any kind of maintenance service on the saw.



**CAUTION**

Ensure the work area is clear of tool, debris, and unauthorized people.

**CAUTION**

The engine governor speed has been set at the factory. Changing the governor speed could damage the blade and/or the saw or create a risk for injury to the operator.

**CAUTION**

Keep Wheel Clamp applied (lever **DOWN**) until completely ready for cutting operation.


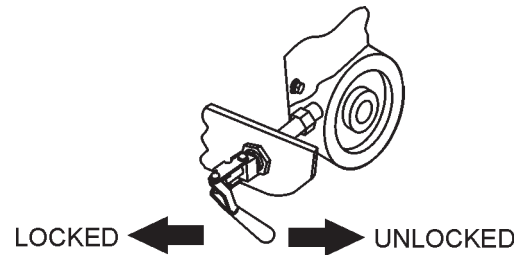


Figure 30. Wheel Clamp

1. Ensure the wheel clamps are in the **LOCKED** position. (Figure 30).
2. Ensure the engine **Shutdown switch** on the handlebar and the engine **ON/OFF switch** on the engine are both in the **OFF** position to avoid accidental starting. (Figures 31 and 32)

**NOTE**

The Engine Shutdown Switch located on the handlebar (Figure 31) serves both as an **Emergency Engine Shut-Off** and as the **primary Shutdown switch**. This allows the operator to shutdown the saw safely away from moving parts.

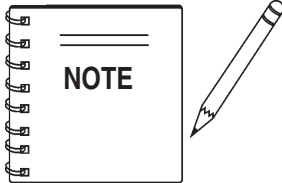

**NOTE**

After shutdown on Electric Start models, ensure the **Engine Start switch** (Figure 32) is turned to the **OFF** position to avoid battery discharge and accidental starting.

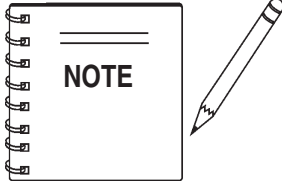
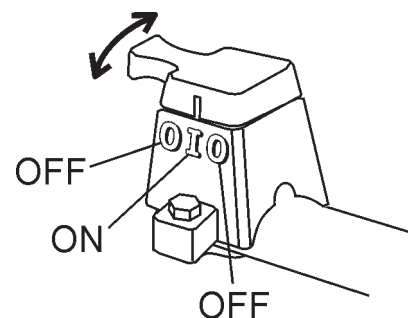



Figure 31. Engine Shutdown Switch (Handlebar)

# STOW CUTTER 3 CE SAW — ELECTRIC START-UP (20HP HONDA ENGINE)

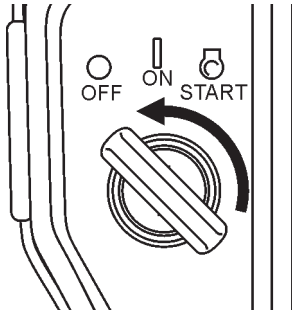


Figure 32. Engine Start Switch (OFF Position)

3. Ensure the diamond blade has been mounted correctly and that it is raised above the surface you are about to saw.
4. If operating the Cutter 3 CE in **cold weather conditions**, skip this step and proceed to step 5. Place the **Choke Lever** (Figure 33) in the **OPEN** position. Skip to step 6.

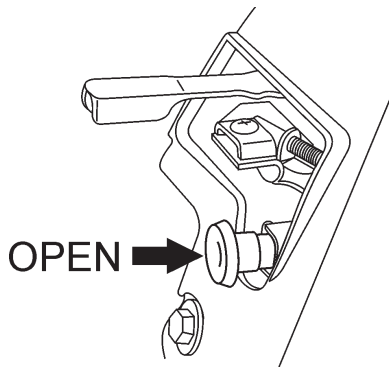


Figure 33. Choke Lever (Open Position)

5. If operating the Cutter 3 CE in **cold weather conditions**, place the **Choke Lever** (Figure 34) in the **CLOSED** position.


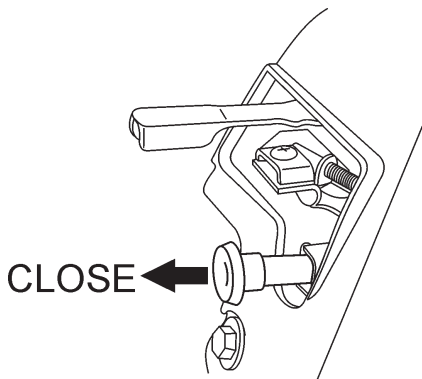


Figure 34. Choke Lever (Closed Position)

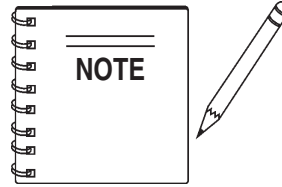

The **CLOSED** position of the choke lever enriches the fuel mixture for starting a **COLD** engine. The **OPEN** position provides the correct fuel mixture for normal operation after starting, and for restarting a warm engine.

6. Place the **throttle lever** (Figure 35) halfway between **FAST** and **SLOW** for starting.

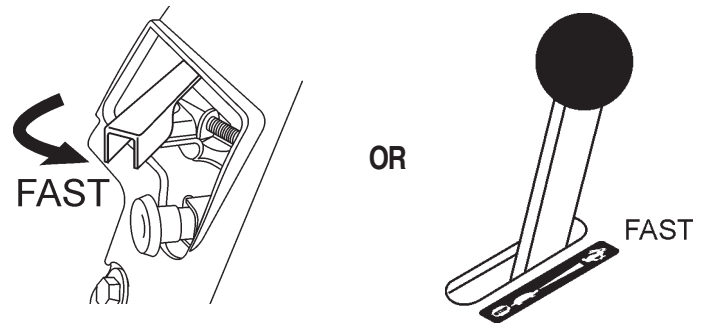


Figure 35. Throttle Lever (Fast Position)

7. Rotate the **Engine Shutdown switch** (Figure 36) to the **START** position to engage the starter.

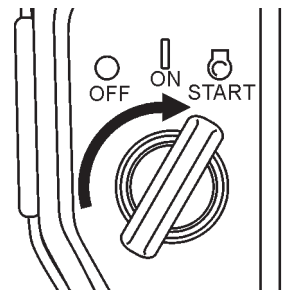


Figure 36. Ignition Switch (Start Position)

8. Once the engine has started, slowly return the choke lever (Figure 34) to the **CLOSED** position. If the engine has not started repeat steps 4 through 7.
9. Before the saw is placed into operation, place the **throttle lever** in the **FAST** position and run the engine for several minutes. Check for fuel leaks, and noises that would associate with a loose guard and/or covers.
10. All cutting is done at **FULL THROTTLE**. Your engine governor has been set at the factory to ensure an optimum speed setting.

# STOW CUTTER 3 CE SAW — OPERATION

## **WARNING**

**ALWAYS** cut with the saw at **FULL THROTTLE**. Attempting to cut with the saw at less than full throttle could cause the blade to bind or stop abruptly in the slab resulting in serious injury to the operator or others in the area.

## **WARNING**

**ALWAYS** keep clear of *rotating* or *moving* parts while operating this equipment.

## **CAUTION**

Ensure the cutting area is clear of tools, debris, and unauthorized people.

## **CAUTION**

**DO NOT** try to cut faster than the blade will allow. Cutting too fast will cause the blade to rise up out of the cut. Improper cutting rate can decrease the life of the engine and blades.


## **CAUTION**

Engine components and the blade can get **EXTREMELY HOT!** during operation. **ALWAYS** allow the engine and blade to cool before handling or servicing.



## **CAUTION**

Whenever the saw is not in operation or being moved or transported, apply the wheel clamp brakes to prevent unwanted displacement.

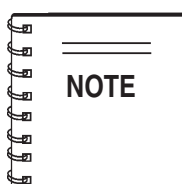


Mark the cutting line clearly and always saw in a **STRAIGHT LINE ONLY**.

## OPERATION

### Emergency Stop Procedure

If the engine must be stopped in an emergency situation:

Toggle the **engine Shutdown switch** located on the handlebars (Figure 31) in **EITHER DIRECTION** to the "OFF" position.

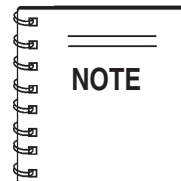


The Engine Shutdown Switch located on the handlebar (Figure 31) serves both as an **Emergency Engine Shut-Off** and as the **primary Shutdown switch**. This allows the operator to shutdown the saw safely away from moving parts.

### Traveling During Cutting (Push)

Push models of the Cutter 3 CE saw must be manually moved by the operator during cutting operations. Ensure that the handlebars are secured in place on the console and push against them with a controlled amount of force to prevent losing control of the machine.

1. Start the engine as described in the previous section. Rotate the throttle lever toward full throttle. Ensure water supply system is in operation. Turn valve to start flow of water.

2. Release Wheel Clamps by pulling levers **UP**. (Figure 37)

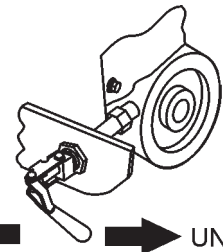

LOCKED ← → UNLOCKED

**Figure 37. Wheel Clamp**

3. To begin sawing, use the raise/lower crank handle on the console to lower the rotating blade allowing it to cut to the preset depth.
4. When blade has reached full cutting depth, slowly walk behind the saw at a rate that will allow the engine to operate without losing optimum RPM.

# STOW CUTTER 3 CE SAW — OPERATION

- When the end of the cut has been reached, use the raise/lower crank on the console to raise the blade out of the cut.
- When cutting is complete, turn the engine **OFF** using the **ENGINE STOP TOGGLE SWITCH** on the handlebars, and wait for the blade to stop rotating.
- Set the engine **ON/OFF** switch to the **OFF** position.
- Place the water valve in the **OFF** position (as required).
- Push the Wheel Clamp Levers downward to apply braking pressure to the wheels (Figure 37).

## Traveling During Cutting (Self-Propelled)

Self-propelled models of the Cutter 3 CE saw have a hydrostatic transmission which mechanically propels the saw during cutting operations. To prepare the machine for self-propelled cutting:

- Place the **travel lever** in the **NEUTRAL** position.

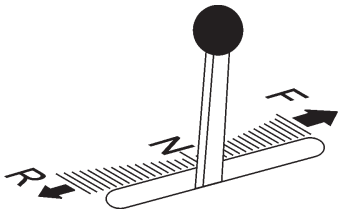


Figure 38. Transmission Engage/Disengage Lever (Neutral Position)

- Lift the **transmission engage/disengage lever**, located on the console (Figure 39). Leaving the lever down disengages the transmission to allow for manual pushing during cutting or moving the machine around the job site.

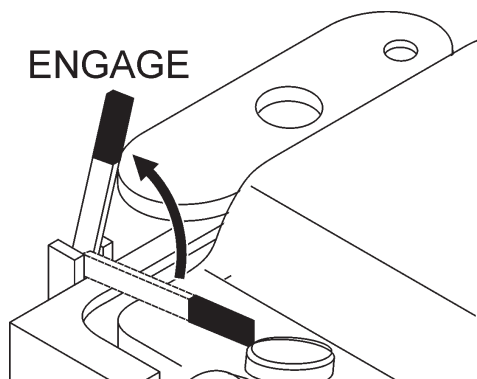


Figure 39. Transmission Engage/Disengage Lever (Engage Position)

- Move the **travel lever** towards the **FORWARD** position to increase forward travel speed during cutting (Figure 40). Placing the travel lever fully forward will move the saw at maximum speed.

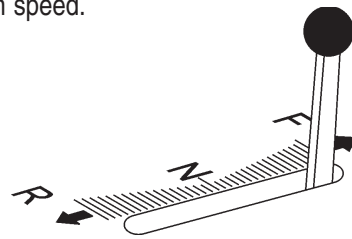


Figure 40. Transmission Engage/Disengage Lever (Forward Position)

- When reverse movement is required, move the **travel lever** towards the **REVERSE** position (Figure 41). Placing the travel lever fully in reverse will move the saw backwards at its maximum reverse speed.

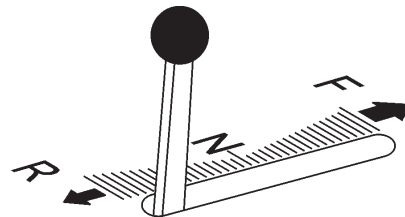


Figure 41. Transmission Engage/Disengage Lever (Reverse Position)

## Saw Alignment

- The Cutter 3 CE saw employs a front pointer (Figure 42) that has been precisely aligned with the diamond blade at the factory. Referencing the figure below, accurate tracking is accomplished by referencing the front pointer tip over the cut line. Precise saw direction is accomplished by slight operator pressure against the handle bars.

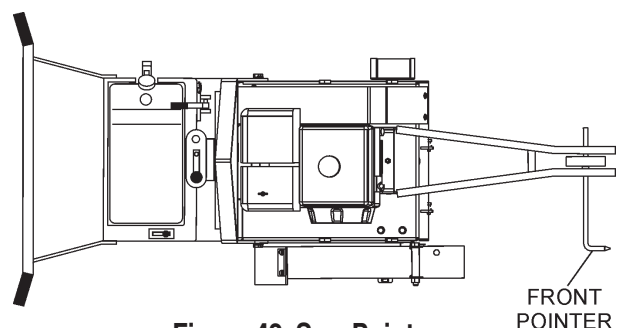


Figure 42. Saw Pointer

- To reorient a pointer position, loosen the screw that secures the pointer bar to the shaft, adjust as necessary, and retighten the screw.



# STOW CUTTER 3 CE SAW — OPERATION

## Cutting

### **WARNING**

The operator **MUST** wear the appropriate protective equipment and clothing while engaged in sawing. Failure to do so can result in **SERIOUS INJURY**.



### **DANGER**

**DO NOT** operate this machine without the Blade Guard or V-belt Guards in place. While the blade is spinning, **DO NOT** place hands, feet, or other body parts near the blade to avoid **SERIOUS INJURY** or **DEATH**.



When cutting, determine the required cutting depth and use an appropriately sized blade. Deep sawing is wasteful to the life of the blade.

The preferred method of sawing is to **Step Cut** in increments of 51 mm (2"). Step Cutting provides the optimum opportunity for the blade to cut fast and last longest.

### Water System

1. Connect hose from water source (on-board water tank or external water source) to the hose fitting connection (Figure 3) of the saw. The source pressure should be approximately 30-40 psi.
2. Ensure the vinyl water tubes are properly inserted into the blade guard holes and are clear of any obstructions.
3. Turn water source on (Figure 43).

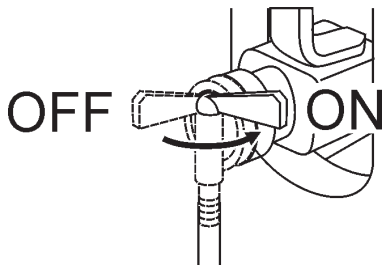


Figure 43. On-board Water Tank ON/OFF Valve

4. Open the **water system valve** on the left side of the console by moving the lever to the **ON** position (Figure 44) and ensure the water is flowing equally to both sides of the diamond blade.

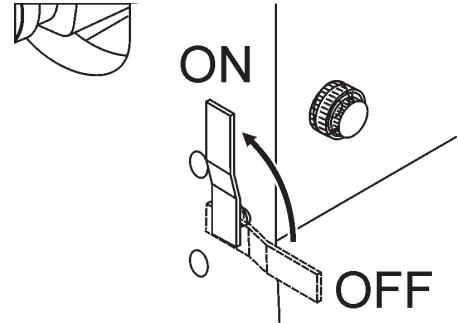


Figure 44. Water System ON/OFF Valve

5. Align the saw along the cut line utilizing the front pointer.

### **CAUTION**

**ALWAYS** saw in a straight line only. **SERIOUS DAMAGE** to the blade or saw may occur if the saw is twisted or forced to cut radius shapes.

6. Slowly lower the diamond blade onto the cut line by cranking the **Raise/Lower handle** **CLOCKWISE** (Figure 37). When the handle can no longer be turned, the blade will be at its full rated depth.

### **WARNING**

If the water supply to your blade is interrupted, **STOP** cutting **immediately** to prevent damage to your blade and/or saw.

If the engine stalls for **ANY** reason during cutting, raise the blade out of the cut before restarting.


7. For self-propelled models, follow steps 1-4 of the **Traveling During Cutting (Self-Propelled)** section.  
For push models, use the **Traveling During Cutting (Push)** instructions.
8. The rotation of the blade creates a tendency for the saw to slightly pull in a particular direction. To ensure a straight line of sawing, apply pressure against the appropriate side of the handle bar as you slowly advance the saw forward.

### **CAUTION**

**DO NOT** force the blade into the cut any faster than its design will allow. This can damage your blade and/or your machine.

## Finishing A Cut


1. Raise the blade out of the cut by cranking the **Raise/Lower handle COUNTER-CLOCKWISE** (Figure 21). Raise the blade high enough out of the cut to clear the surface and allow the saw to be maneuvered.
2. Shut the engine down according to the **SHUT-DOWN PROCEDURES** in the next section.

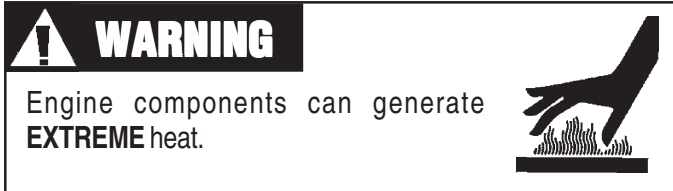

## Restarting After Intervention

If cutting is interrupted where the engine stops or is turned off while the blade is still in the cut:

- a. Turn engine Shutdown switch on handlebar to the **"OFF"** position.
- b. Raise the blade out of the cut
- c. Restart the engine as described in the Start-Up sections.

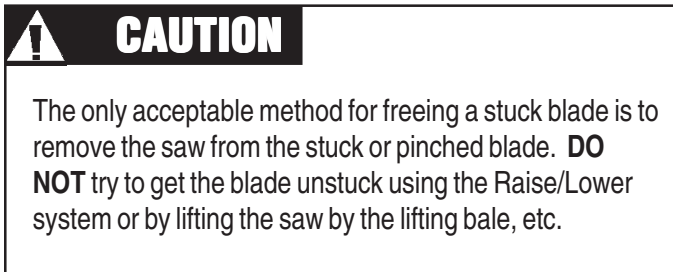

If cutting is interrupted where the blade is stuck in the cut:

- a. Turn Engine Off switches to **"OFF"**.
- b. Remove the blade guard.
- c. Remove blade mounting bolt and outer flange.
- d. Maneuver the saw away from the stuck blade.
- e. A parallel cut made next to the blade may be necessary to free it.
- f. Once the blade is freed inspect the blade for damage; discard if damaged.
- e. Ensure an undamaged, useable blade is installed on the saw before cutting is resumed with that saw.

# STOW CUTTER 3 CE SAW — SHUT-DOWN PROCEDURES

## Stopping the Engine (Push Model)

Stopping the engine under normal conditions:

1. Place the **engine throttle lever** (Figure 45) in the **SLOW** position, and listen for the engine speed to decrease. Allow engine to run for 2 or 3 minutes for proper cooldown.

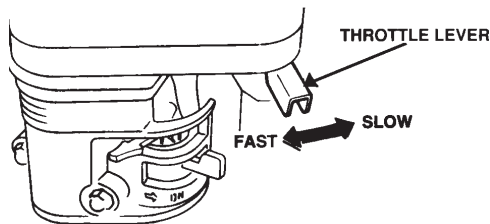


Figure 45. Throttle Lever

2. Turn the **engine Shutdown switch** located on the handlebars (Figure 46) to the "OFF" position. Shutting the engine off using this switch confirms that it is functioning properly.

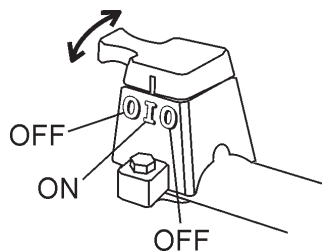


Figure 46. Engine Shutdown Switch (handlebars)

3. Turn the **engine ON/OFF switch** (Figure 47) to the "OFF" position.

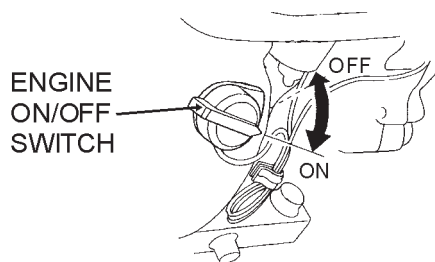


Figure 47. Engine ON/Off Switch (engine)

4. Place the fuel valve lever (Figure 48) to the **OFF** position.

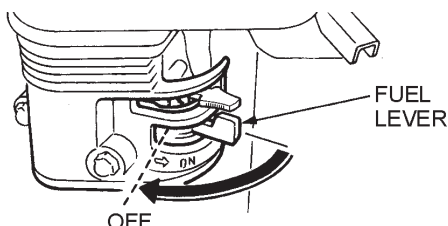


Figure 48. Fuel Valve Lever (Off Position)

## Stopping the Engine (Self-Propelled Models)

Stopping the engine under normal conditions:

1. Disengage the drive by placing the **forward/reverse speed lever** (Figure 49) in the **NEUTRAL** position.

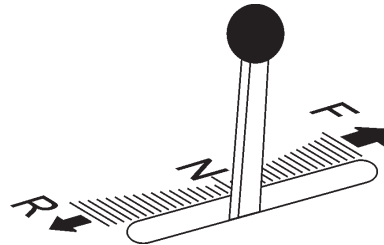


Figure 49. Speed Lever (Neutral Position)

2. Place the **engine throttle lever** (Figure 45 or Figure 50) in the **SLOW** position, and listen for the engine speed to decrease. Allow engine to run for 2 or 3 minutes for proper cooldown.

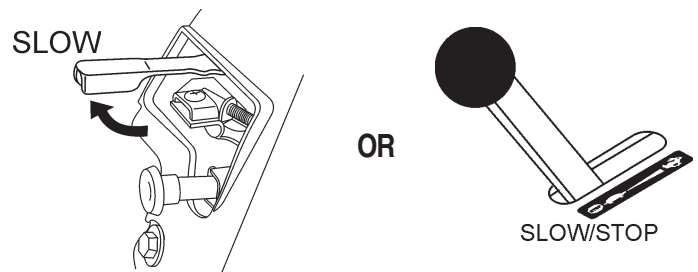


Figure 50. Throttle Lever (Slow Position)

3. Turn the **engine Shutdown switch** located on the handlebars (Figure 46) to the "OFF" position. Shutting the engine off using this switch confirms that it is functioning properly.
4. Turn the **engine ON/OFF switch** (Figure 47 or Figure 51) to the "OFF" position. The Ignition Switch on Electric-Start models must be turned off to prevent unwanted battery discharge.

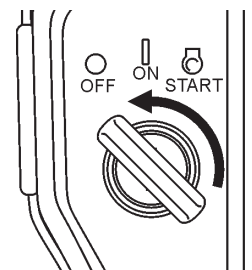


Figure 51. Ignition Switch (OFF Position)

5. Place the fuel valve lever (Figure 48) to the **OFF** position.

# STOW CUTTER 3 CE SAW — MAINTENANCE

## Maintenance

See the engine manual supplied with your machine for appropriate engine maintenance schedule and troubleshooting guide for problems.



### WARNING

General maintenance practices are crucial to the performance and longevity of your saw. The extreme environments of sawing operations require routine cleaning, lubrication, belt tensioning, and inspection for wear and damage

The following procedures devoted to maintenance can prevent serious saw damage or malfunctioning. Before servicing or inspection, **ALWAYS** park the saw on a level surface with the blade removed, and the Console Engine **ON/OFF** switch & Engine **ON/OFF** switch in “**OFF**” position.



Some maintenance operations may require the engine to be run. Ensure that the maintenance area is well ventilated. Exhaust contains poisonous carbon monoxide gas that can cause unconsciousness and may result in **DEATH**.



### CAUTION

**ALWAYS** allow the engine to cool before servicing. **NEVER** attempt any maintenance work on a **hot!** engine.



## General Cleanliness

**Clean the machine daily.** Remove all dust and slurry build up. If the saw is steam cleaned, ensure that lubrication is accomplished **AFTER** steam cleaning operations.

### WARNING

**ALWAYS** ensure that both **ENGINE ON/OFF** switches (on the handlebar and on the engine) are in the “**OFF**” position, and that the spindle has **COMPLETELY STOPPED ROTATING** before performing any of the the following operations:



- **REMOVING** or **INSTALLING** blades
- **ADJUSTING** front or rear pointers
- **LUBRICATING** any components
- **REMOVING** engine mounting bolts
- **INSPECTING, ADJUSTING, OR REPLACING** drivebelt, spindle, spindle bearings or **ANY** engine part
- **REMOVING** blade or belt guards



## General Engine Care

### Engine check:


Check daily for any oil and/or fuel leakage, thread nut & bolt tightness, and overall cleanliness.

### Engine oil:

Check daily. Inspect with blade removed and saw frame level on a level surface. Keep the oil clean, and at the proper servicing level (Figure 7). **DO NOT OVERFILL!** SAE 10W-30 of SG is recommended for general use.

### Engine oil change:

Change engine oil the first month or 20 hours of operation. Then every 3 months/or 50 HOURS of operation. See Engine Owner's Manual for detailed information.

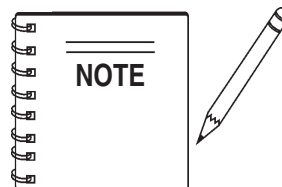

**ALWAYS** dispose of used oil in a responsible manner. Ensure that the disposition of all hazardous waste is handled properly. Call your Recycling Center for information about recycling engine oil.

## Saw Blade Removal and Installation

See page 22.

### Engine air filter:

See Engine Owner's Manual for detailed information.

# STOW CUTTER 3 CE SAW — MAINTENANCE

## Engine tank & strainer:

Clean every year/or 300 hours.

## Fuel line:

Replace every two years/or as necessary.

## Spark plug:

Clean/adjust every 6 months/or 100 hours. Replace every year/ or 300 hours.

## Bearing Lubrication Care

There are four grease points for the Cutter 3 CE saw. [Use only Premium Extreme Pressure Grease, conforming to NLG1 Grade #2 consistency.]

## Rear Wheels (1):

Grease daily, see Undercarriage Assy., item 10

## Blade Shaft Bearings (2):

Grease daily, see Blade Shaft Assy., item 15

## Raise/Lower Adjust Tube (1):

Grease daily, see Raise/Lower Assy., item 2

## General Transmission Care (Self-Propelled Models only)

All Cutter 3 CE model saws utilize spline gear wheel design coupled with an EATON Model 7 Hydrostatic Transmission that provides forward/reverse propulsion. The simple design of the system keeps maintenance to a minimum.

## Transmission Reservoir Cup:

Check every 8 hours of operation. When the transmission is **cold** (A), check oil level against the level indicator (see Figure 52).

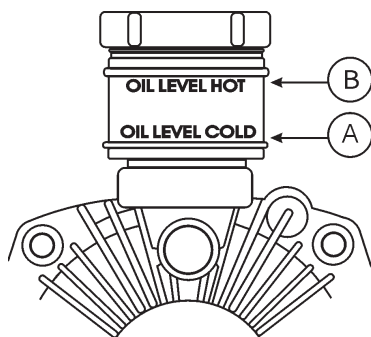


Figure 52. Transmission Reservoir

## Servicing:


The transmission reservoir is factory filled. Should servicing be required, use SAE20W-20, API classification (SE,CC,CD) or better, General Motors Dexron B, Ford M2C-33F, M2C-41A or International Harvester Hy-Tran fluids. For extreme **hot weather**, drain oil and refill with an oil having a viscosity of SAE30W-30 or SAE40W-40.

## Drive Chain:

Check every 50 hours. Periodically wipe the chain clean and re-lubricate with penetrating chain oil.

The drive chain may stretch requiring tension adjustments. To adjust the drive chain tension:

1. Loosen the (3) transmission attachment screws (Hydrostatic Transmission Assy., item 2)
2. Pivot the transmission in the “**U**” slots of the **transmission mount** until the proper tension is achieved (Hydrostatic Transmission Assy., item 7).

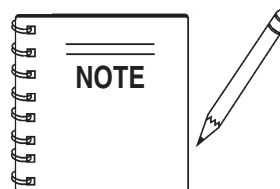

Excessive tension on the drive chain will reduce chain life.

## Spline Gear Wheels:

Check every 25 hours and clean as necessary. If the spline wheels **DO NOT** engage the **rear wheels** with sufficient pressure, slippage of the rear wheels may occur.

To adjust the **Spline Gear Assembly**:

1. Place the **transmission engage/disengage lever** in the **DISENGAGE** position (Figure 53).

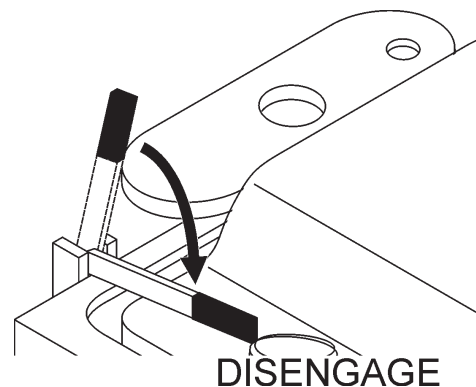



Figure 53. Transmission Engage/Disengage Lever (Disengage Position)

# STOW CUTTER 3 CE SAW — MAINTENANCE

- Loosen the linkage adjustment nut and **slightly** lengthen the linkage rod (see Transmission Engage Lever Assy., items 11 and 13).
- Move the **transmission engage/disengage lever** to the **ENGAGE** position to observe the proper spline-to-rear wheel contact.
- Retighten the adjustment nut.
- Retighten the (4) 1-1/2" (38.1 mm) HHC screws.
- Replace all guards and covers.

## **WARNING**

**NEVER** attempt to check the V-belt with the engine running. Severe injury can occur if your hand gets caught between the V-belt and the clutch. Always use safety gloves.

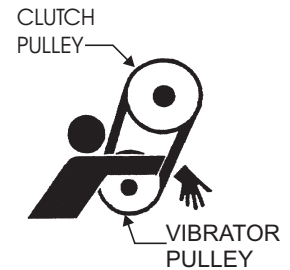

## Drive V-Belt Check

The V-Belts of the Cutter 3 CE saw have been factory set utilizing precision standards. Operating the saw with less than the specified number of V-belts (See Table 6), or belts that are **slipping** or are **over-tensioned** will significantly diminish the performance of the saw, and may cause damage to the blade.

## Drive V-Belt(s) Replacement & Tension Adjustments

Reference Pointers and Covers Assembly, Blade Shaft Assembly, and Engine Mount Assembly for this operation.

- Remove the **Belt Guard** (Pointers and Covers Assy., item 15), then loosen the tension of the V-Belts
- Loosen the (4) 1-1/2" (38.1 mm) HHC screws (Engine Mount Assy., item 5).
- Loosen and back-off the **Engine Mount Carriage Bolt** (Engine Mount Assy., item 1) from the frame to permit the **Engine Base Plate** (Engine Mount Assy., item 9) to pivot.
- Pivot the Engine Base Plate to provide slack in the Drive V-belts.
- Remove/Replace the required V-belts (See Table 6).
- Rotate the engine back into place and tighten the Engine Mount Carriage Bolt.
- Adjust for the correct V-belt tension (See Figure 54).

CORRECT V-BELT TENSION 3/8 IN.  
(10 MM) TO 1/2 IN. (13 MM) WHEN DEPRESSED  
AT MIDPOINT AS SHOWN

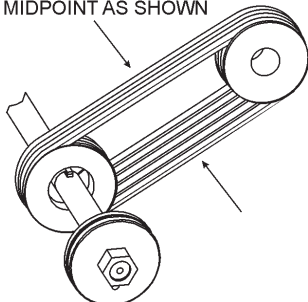


Figure 54. V-Belt Adjustment/Tension

## Adjust V-Belt Alignment/Replacement Pulleys

The V-belts and their respective pulleys have been professionally aligned at the factory. If there is a requirement to remove/replace or adjust the pulleys, proceed with the following instructions.

- Select the proper sized pulley both in outside diameter and arbor size. **Use approved parts to ensure the component compatibility.**
- A change in Pulley diameters may require specifically sized V-Belts. **Contact Multiquip Service Department to ensure V-Belt compatibility.**
- Complete Drive V-Belt(s) Replacement steps (1 through 4)
- Remove the V-Belts from around the Pulley(s).
- Remove the set screws that secure the pulleys to the respective shafts (PTO shaft) for engine pulley or the (blade shaft) for the blade shaft pulley.
- Remove/replace the pulley by sliding it off the shaft.
- Reorient the new pulley on the shaft, and ensure precise pulley alignment by utilizing an accurate straight edge (see Figures 55 and 56).
- Replace/tighten set screws treated with a drop of **LOCTITE Threadlocker 266.**
- Orient the proper replacement V-Belt(s) around the blade shaft pulley and engine pulley.
- Reference steps 6-9 of the **Drive V-Belt(s) Replacement** steps.

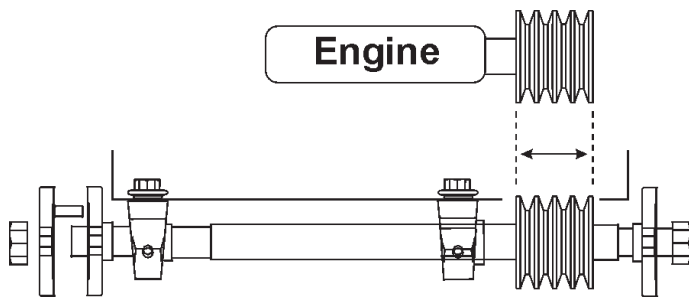


Figure 55. Pulley Alignment

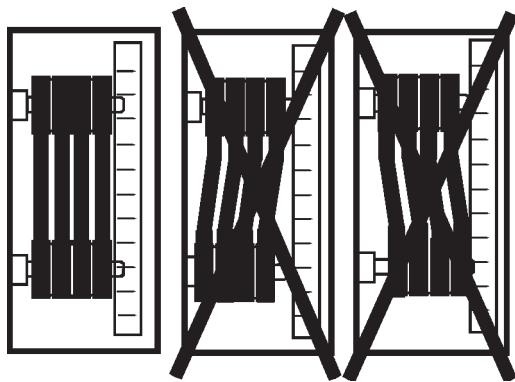


Figure 56. V-Belt Alignment

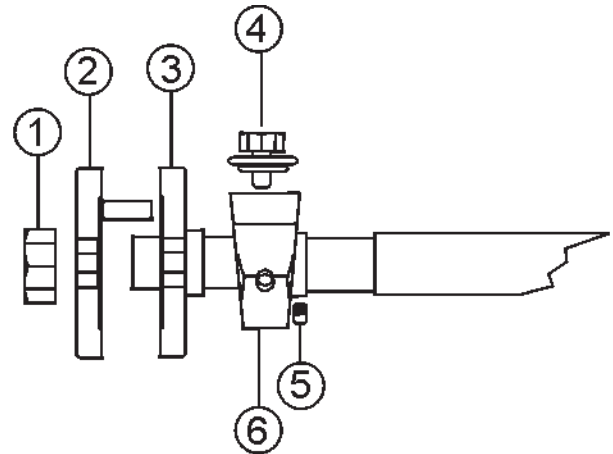


Figure 57. Blade Side Bearing (Right Side)

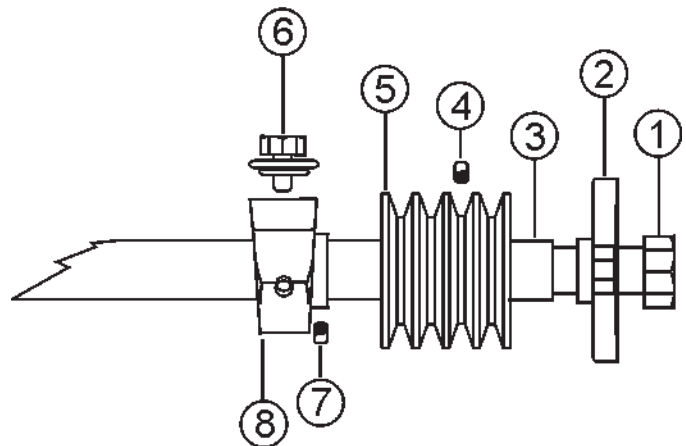


Figure 58. Pulley Side Bearing (Left Side)

## Blade Shaft Bearing Replacement

Although the steps for this operation are listed here, it is recommended that this procedure be performed by an authorized service center.

The Cutter 3 CE saw is supported by “tapped base lock collar (w/set screw)” self-aligning **Blade Shaft Bearings** (Figures 57 and 58). These heavy duty bearings support the 1-1/4 blade shaft, and have grease (zerk) points conveniently located for service.

1. Replace both left & right bearings. Never replace one and not the other.
2. Follow steps 1 thru 4 of Drive V-Belt(s) Replacement & Tension Adjustments.
3. Remove Drive V-belts.

Reference Figure 57 & Figure 58 for steps 4-9

4. Remove **Blade Hex Nuts** (Figures 57 & 58, item 1) and

**Outside/Inside Blade Flanges** (Figures 57, item 2 & 3)

5. Loosen **set screws** (Figure 58, item 4) and slide **Pulley** (Figure 58, item 5) off the Blade Shaft. Loosen Bearing set screw, remove **Bearing Bolt** (Figure 58, item 6) and slide the **Blade Shaft Bearing** (Figure 58, item 8) off the blade shaft.
6. Loosen **set screws** (Figure 57, item 5), remove **Bearing Bolt** (Figure 57, item 4) and slide the **Blade Shaft Bearing** (Figure 57, item 6) off the blade shaft.
7. Replace **Blade Shaft Bearings** and reassemble the Blade Shaft Assembly.
8. Re-tension Drive V-belts as shown in the Drive V-Belt(s) Replacement & Tension Adjustments section.
10. Replace all guards and covers.

# STOW CUTTER 3 CE SAW — MAINTENANCE

## Battery Maintenance

Mishandling of the battery shortens the service life of the battery and adds to maintenance cost. When handling the battery do the following:

- Be careful not to let the battery electrolyte come in contact with your body or clothing.
- Always wear **eye protection** and **rubber gloves**, since the battery contains sulfuric acid which burns skin and eats through clothing.
- Always check the battery terminals periodically to ensure that they are in good condition.
- Use wire brush or sand paper to clean the battery terminals.
- Always check battery for cracks or any other damage. If white pattern appears inside the battery or paste has accumulated at the bottom, replace the battery.
- If the pump will not be in operation for a long period of time, store in cool dry place and check the battery charge level every month to maintain the performance of the battery.

**! WARNING**

Wear **safety glasses** or **face mask**, **protective clothes**, and **rubber gloves** when working with battery.



- Check the battery regularly and make sure that each electrolyte level is to the bottom of the vent well (Figure 59). If necessary add only distilled water in a well-ventilated area.

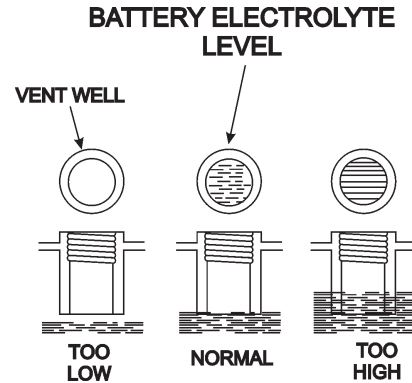



Figure 59. Battery Electrolyte Levels


**! WARNING**

Electrolyte is an acid and must be handled with caution. Servicing instructions from the electrolyte manufacturer must **ALWAYS** be followed to ensure safety. Serious injury can result from careless handling and noncompliance to safety handling instructions.



Overfilling the battery may cause the electrolyte to overflow resulting in corrosion to nearby components. Immediately wash off any spilled electrolyte (battery acid).

Additionally, when connecting the positive (+) cable to the battery's positive (+) terminal post, **DO NOT** allow contact of the wrench or any metallic part to come in contact with the battery's negative (-) terminal post. This may result in an electrical short circuit or an explosion.

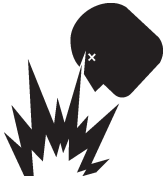



## Decommissioning Saw/Components

Decommissioning is a controlled process used to safely retire a piece of equipment that is no longer serviceable. If the equipment poses an unacceptable and unrepairable safety risk due to wear or damage or is no longer cost effective to maintain, (beyond life-cycle reliability) and is to be decommissioned, (demolition and dismantlement), the following procedure must take place:

1. Drain all fluids completely. These may include oil, gasoline, hydraulic oil and antifreeze. Dispose of properly in accordance with local and governmental regulations. Never pour on ground or dump down drains or sewers.
2. Remove battery and bring to appropriate facility for lead reclamation. Use safety precautions when handling batteries that contain sulfuric acid.
3. The remainder can be brought to a salvage yard or metal reclamation facility for further dismantling.

# STOW CUTTER 3 CE SAW — 13HP ENGINE WIRING DIAGRAM (RECOIL START)


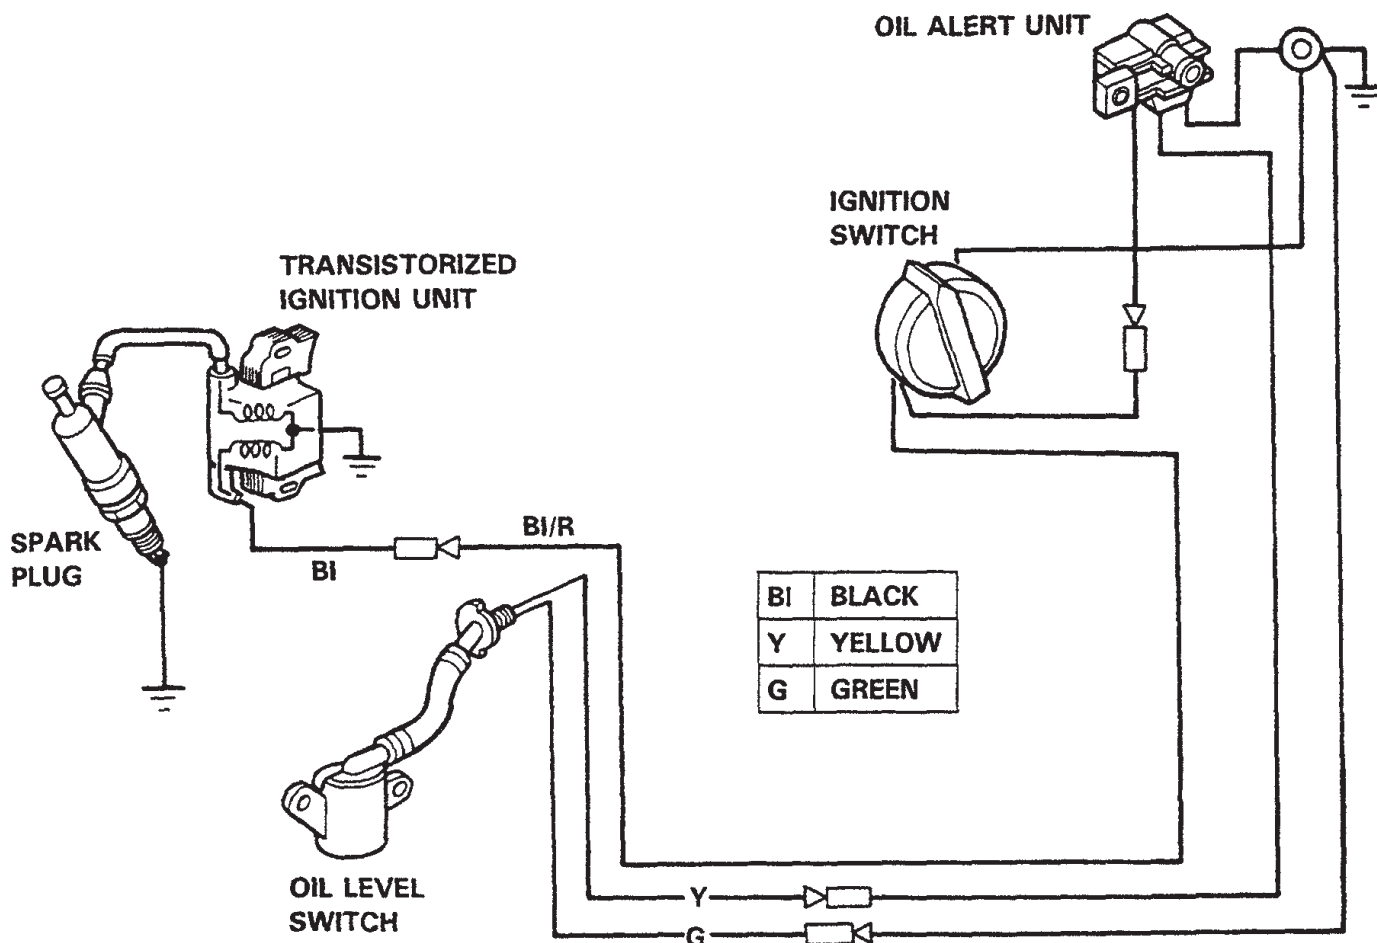


Figure 60. 13HP Honda Engine Wiring Diagram

# STOW CUTTER 3 CE SAW — 20HP ENG. WIRING DIAGRAM (ELECTRIC START)

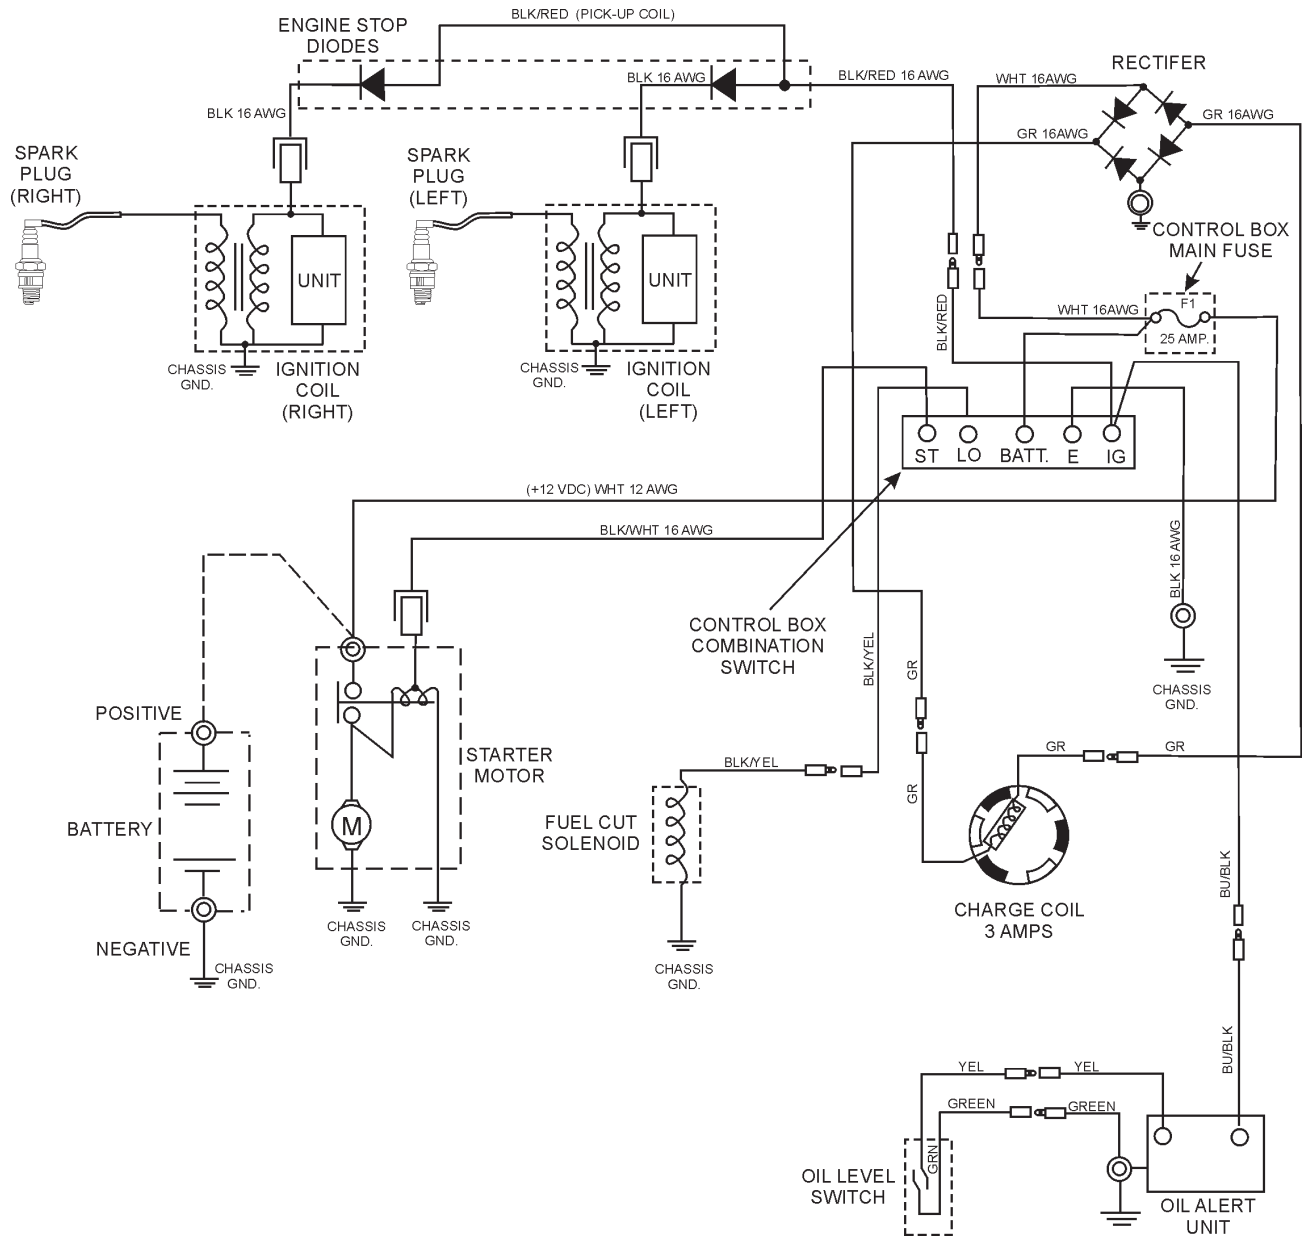

## COMBINATION SWITCH CONTINUITY

COLOR CODE	
BLK	BLACK
WHT	WHITE
RED	RED
YEL	YELLOW
GRN	GREEN
GRAY	GRAY
BU	BLUE

	IG	E	BAT	LO	ST
OFF	○	○			
ON			○	○	
ST			○	○	○

Figure 61. 20HP Honda Engine Wiring Diagram

# STOW CUTTER 3 CE SAW — TROUBLESHOOTING (ENGINE)

Practically all breakdowns can be prevented by proper handling and maintenance inspections, but in the event of a breakdown, please take a remedial action following the diagnosis based on the Engine Troubleshooting (Table 8) information shown below and on the proceeding page. If the problem cannot be remedied, please leave the unit just as it is and consult our company's business office or service plant.

**TABLE 8. ENGINE TROUBLESHOOTING**

SYMPTOM	POSSIBLE CAUSE	SOLUTION
Difficult to start, "fuel is available, but no SPARK at spark plug".	Spark plug bridging?	Check gap, insulation or replace spark plug.
	Carbon deposit on spark plug?	Clean or replace spark plug.
	Short circuit due to deficient spark plug insulation?	Check spark plug insulation, replace if worn.
	Improper spark plug gap?	Set to proper gap.
Difficult to start, "fuel is available, and SPARK is present at the spark plug".	Console or engine ON/OFF switch is shorted?	Check switch wiring, replace switch.
	Ignition coil defective?	Replace ignition coil.
	Improper spark gap, points dirty?	Set correct spark gap and clean points.
	Condenser insulation worn or short circuiting?	Replace condenser.
	Spark plug wire broken or short circuiting?	Replace defective spark plug wiring.
Difficult to start, "fuel is available, spark is present and compression is normal"	Wrong fuel type?	Flush fuel system, and replace with correct type of fuel.
	Water or dust in fuel system?	Flush fuel system.
	Air cleaner dirty?	Clean or replace air cleaner.
Difficult to start, "fuel is available, spark is present and compression is low"	Suction/exhaust valve stuck or protruded?	Re-seat valves.
	Piston ring and/or cylinder worn?	Replace piston rings and or piston.
	Cylinder head and/or spark plug not tightened properly?	Torque cylinder head bolts and spark plug.
	Head gasket and/or spark plug gasket damaged?	Replace head and spark plug gaskets.
No fuel present at carburetor.	Fuel not available in fuel tank?	Fill with correct type of fuel.
	Fuel cock does not open properly?	Apply lubricant to loosen fuel cock lever, replace if necessary.
	Fuel filter clogged?	Replace fuel filter.
	Fuel tank cap breather hole clogged?	Clean or replace fuel tank cap.
	Air in fuel line?	Bleed fuel line.

# STOW CUTTER 3 CE SAW — TROUBLESHOOTING (ENGINE)

**TABLE 8. ENGINE TROUBLESHOOTING (CONTINUED)**

SYMPTOM	POSSIBLE CAUSE	SOLUTION
"Weak in power" compression is proper and does not misfire.	Air cleaner not clean?	Clean or replace air cleaner
	Improper level in carburetor?	Check float adjustment, re-build carburetor.
	Defective Spark plug?	Clean or replace spark plug.
	Defective Spark plug?	
"Weak in power" compression is proper but misfires.	Water in fuel system?	Flush fuel system, and replace with correct type of fuel.
	Dirty spark plug?	Clean or replace spark plug.
	Ignition coil defective?	Replace ignition coil.
Engine overheats.	Spark plug heat value improper?	Replace with correct type of spark plug.
	Correct type of fuel?	Replace with correct type of fuel
	Cooling fins dirty?	Clean cooling fins.
Rotational speed fluctuates.	Governor adjusted correctly?	Adjust governor.
	Governor spring defective?	Replace governor spring.
	Fuel flow restricted?	Check entire fuel system for leaks or clogs.
Recoil starter malfunction.	Recoil mechanism clogged with dust and dirt?	Clean recoil assembly with soap and water.
	Spiral spring loose?	Replace spiral spring.

# STOW CUTTER 3 CE SAW — TROUBLESHOOTING (BLADE)

Practically all breakdowns can be prevented by proper handling and maintenance inspections, but in the event of a breakdown, please take a remedial action following the diagnosis based on the Blade Troubleshooting (Table 9) information shown below and on the proceeding page. If the problem cannot be remedied, please leave the unit just as it is and consult our company's business office or service plant.

**TABLE 9. BLADE TROUBLESHOOTING**

SYMPTOM	POSSIBLE CAUSE	SOLUTION
Blade slows or Stops cutting, still remains on blade.	Blade too hard for the material being cut.	Consult Dealer or Multiquip for correct blade. Try cutting very soft material (sandstone, silica brick, cinder block) to "Redress" the blade.
	Engine Torque diminished because of loose V-Belts.	Tighten and/or replace V-Belts.
	Insufficient Engine power.	Check Throttle setting. Check Engine horsepower.
	Improper direction of rotation.	Check that the blade is oriented, and rotational arrow points in a "Down-Cutting" direction.
	Blade is slipping on the blade shaft.	Check that the blade & flange pin is properly installed on the blade shaft.
Blade does not cut straight and/or true.	Blade being used on misaligned saw.	Check blade shaft bearings and alignment integrity.
	Blade is excessively hard for the material being cut.	Check specifications of the blade with the material being cut. Consult Dealer or Multiquip for information.
	Blade being used at improper RPM.	Ensure blade surface feet per minute speed (SFPM) is approximately 6,000.
	Blade improperly mounted on arbor shoulders and flanges.	Ensure blade is properly affixed on the blade shaft.
	Excessive force applied to blade while cutting.	Do not force the blade in the cut. Apply a slow/steady pace to sawing..
Blade discoloring, crackling and/or wearing excessively.	Blade too hard for the material being cut.	Consult Dealer or Multiquip for correct blade. Try cutting very soft material (sandstone, silica brick, cinder block) to "Redress" the blade.
	Blade improperly mounted on arbor shoulders and flanges.	Ensure blade is properly affixed on the blade shaft. Ensure the blade flanges are clean & free of debris.
	Blade not receiving enough cooling water or air.	Ensure proper flow & volume of water is provided for wet cutting blades. Ensure sufficient cooling air is circulated about a dry cutting blade.
	Arbor hole out of round	Ensure blade is properly affixed on the blade shaft.
	Incorrect blade chosen for material being cut.	Check specifications of the blade with the material being cut. Consult Dealer or Multiquip for information.
	Excessive force applied to blade while cutting.	Do not force the blade in the cut. Apply a slow/steady pace to sawing.

# STOW CUTTER 3 CE SAW — EXPLANATION OF CODE IN REMARKS COLUMN

How to read the marks and remarks used in this parts book.


## Items Found In the “Remarks” Column

**Serial Numbers**-Where indicated, this indicates a serial number range (inclusive) where a particular part is used.


**Model Number**-Where indicated, this shows that the corresponding part is utilized only with this specific model number or model number variant.

## Items Found In the “Items Number” Column

All parts with same symbol in the number column, \*, #, +, %, or >, belong to the same assembly or kit.

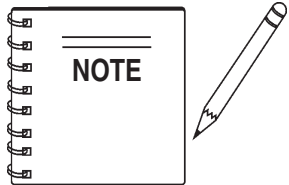

The contents of this parts catalog are subject to change without notice.

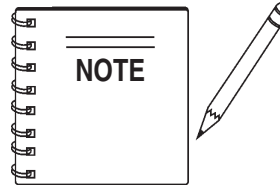

If more than one of the same reference number is listed, the last one listed indicates newest (or latest) part available.





# STOW CUTTER 3 CE SAW — SUGGESTED SPARE PARTS

## CUTTER 3 SAW (13HP PUSH) 1 to 3 Units

Qty. ....	P/N .....	Description
3 .....	16052 .....	V-BELTS, DRIVE
1 .....	29013-001 .....	WRENCH, BOX END 1-1/2 IN.
1 .....	60087 .....	ROPE, FRONT POINTER 1/4 IN.
2 .....	15081 .....	GRIPS, HANDLE BAR 1 IN.
1 .....	06922-003 .....	BLADE SHAFT NUT, RIGHT SIDE
1 .....	07038-016 .....	BLADE SHAFT NUT, LEFT SIDE
1 .....	26928-002 .....	OUTER BLADE FLANGE
3 .....	17210ZE3505 .....	ELEMENT, AIR CLEANER
3 .....	9807956846 .....	SPARK PLUG
1 .....	17620ZH7023 .....	CAP, FUEL TANK
1 .....	28462ZV7003 .....	ROPE, RECOIL STARTER

## CUTTER 3 SAW (20HP SELF-PROPELLED) 1 to 3 Units


Qty. ....	P/N .....	Description
3 .....	15897 .....	V-BELTS, DRIVE
1 .....	07055-051 .....	V-BELTS, TRANSMISSION
1 .....	29013-001 .....	WRENCH, BOX END 1-1/2 IN.
1 .....	60087 .....	ROPE, FRONT POINTER 1/4 IN.
2 .....	15081 .....	GRIPS, HANDLE BAR 1 IN.
1 .....	06922-003 .....	BLADE SHAFT NUT, RIGHT
1 .....	07038-016 .....	BLADE SHAFT NUT, LEFT
1 .....	26928-002 .....	OUTER BLADE FLANGE
3 .....	17210759013 .....	ELEMENT, AIR CLEANER
3 .....	1540090H305PE .....	OIL FILTER
3 .....	9807956846 .....	SPARK PLUG
1 .....	15229 .....	CAP, FUEL TANK
1 .....	28462ZV7003 .....	ROPE, RECOIL STARTER

## CUTTER 3 SAW (13HP SELF-PROPELLED) 1 to 3 Units

Qty. ....	P/N .....	Description
3 .....	16052 .....	V-BELTS, DRIVE
1 .....	07055-051 .....	V-BELTS, TRANSMISSION
1 .....	29013-001 .....	WRENCH, BOX END 1-1/2 IN.
1 .....	60087 .....	ROPE, FRONT POINTER 1/4 IN.
2 .....	15081 .....	GRIPS, HANDLE BAR 1 IN.
1 .....	06922-003 .....	BLADE SHAFT NUT, RIGHT SIDE
1 .....	07038-016 .....	BLADE SHAFT NUT, LEFT SIDE
1 .....	26928-002 .....	OUTER BLADE FLANGE
3 .....	17210ZE3505 .....	ELEMENT, AIR CLEANER
3 .....	9807956846 .....	SPARK PLUG
1 .....	17620ZH7023 .....	CAP, FUEL TANK
1 .....	28462ZV7003 .....	ROPE, RECOIL STARTER

# STOW CUTTER 3 CE SAW — NAME PLATE AND DECALS

NAME PLATE AND DECALS.

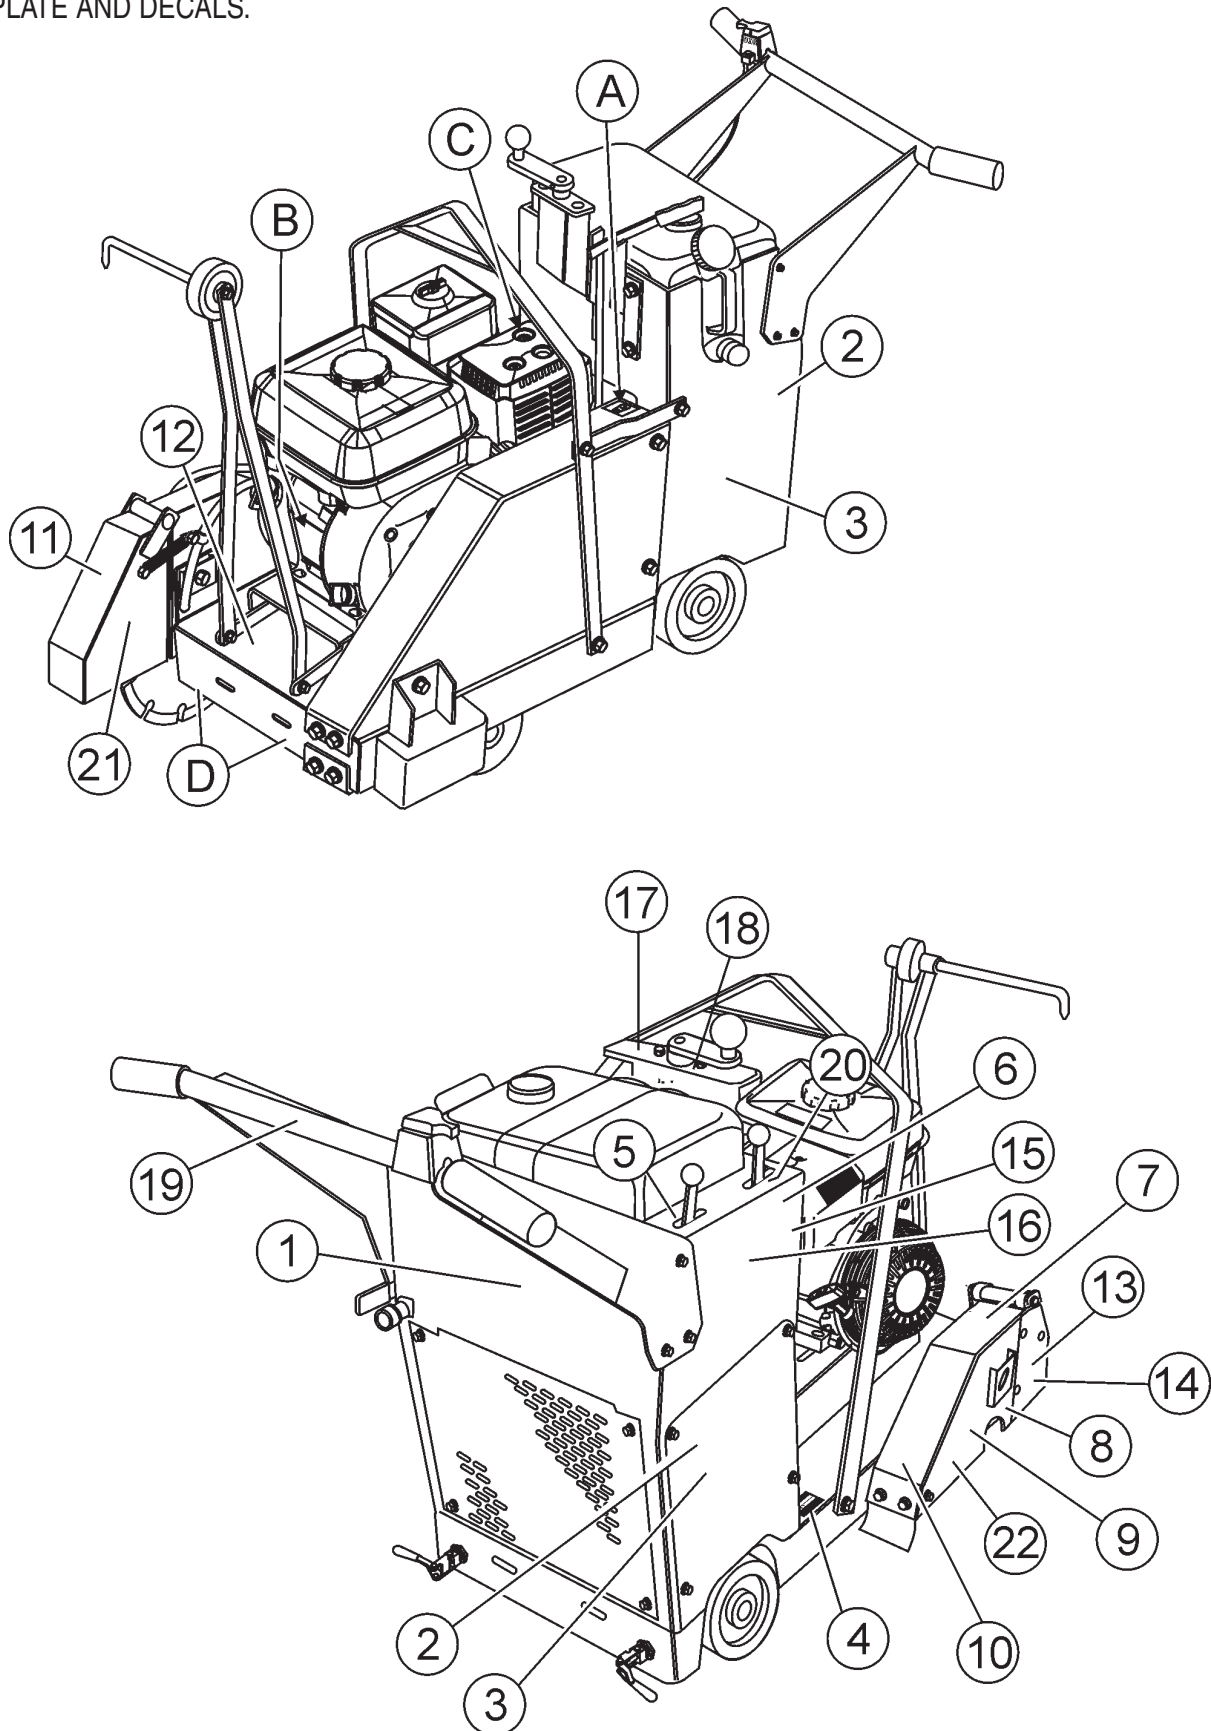

# STOW CUTTER 3 CE SAW — NAME PLATE AND DECALS


## NAME PLATE AND DECALS

<u>NO</u>	<u>PART NO</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
1	22972-005	DECAL, STOW (LARGE)	1	
2	22972-003	DECAL, STOW (MEDIUM)	2	
3	22653-003	DECAL, CUTTER 3	2	
4		NAMEPLATE .....	1	CONTACT STOW PARTS DEPT.
5	28853-001	DECAL, FORWARD/REVERSE LEVER	1	
6	23596-001	DECAL, RECOMMENDED MAINTENANCE	1	
7	22122-001	DECAL, SERIOUS INJURY WARNING .....	1	SAFETY ITEM
8	25491	DECAL, CW ROTATION .....	1	SAFETY ITEM
9	35137	DECAL, READ .....	1	SAFETY ITEM
10	25260-001	DECAL, KEEP FEET CLEAR WARNING .....	1	SAFETY ITEM
11	25249-001	DECAL, KEEP HANDS CLEAR WARNING .....	1	SAFETY ITEM
12	13118	DECAL, POWDER COATED	1	
13	23330-001	DECAL, BELT GUARD CAUTION .....	2	SAFETY ITEM
14	25867	DECAL, ROTATION IN DISPLACEMENT .....	1	SAFETY ITEM
15	35167	DECAL, GUARANTEED SOUND POWER 118DB .....	1	SAFETY ITEM
15	35166	DECAL, GUARANTEED SOUND POWER 112DB .....	1	SAFETY ITEM
16	11092	DECAL, CE	1	
17	35135	DECAL, DRIVE LEVER .....	1	SELF PROP. ONLY
18	35136	DECAL, BLADE LOWER CW .....	1	SAFETY ITEM
19	36099	DECAL, ISO SAFETY GEAR .....	1	SAFETY ITEM
20	29736	DECAL, THROTTLE LEVER	1	
21	25678	DECAL, CCW ROTATION .....	1	SAFETY ITEM
22	22972-004	DECAL, STOW (SMALL)	1	
A*		DECAL, BELT DRIVE .....	1	SAFETY ITEM
B*		DECAL, CHECK OIL LEVEL	1	
C*		DECAL, HOT .....	1	SAFETY ITEM
D*		DECAL, LUBRICATION	2	

\*ITEMS A THROUGH D ARE INCLUDED IN DECAL KIT 11246.

# STOW CUTTER 3 CE SAW — UNDER CARRIAGE ASSY.

UNDER CARRIAGE ASSY.

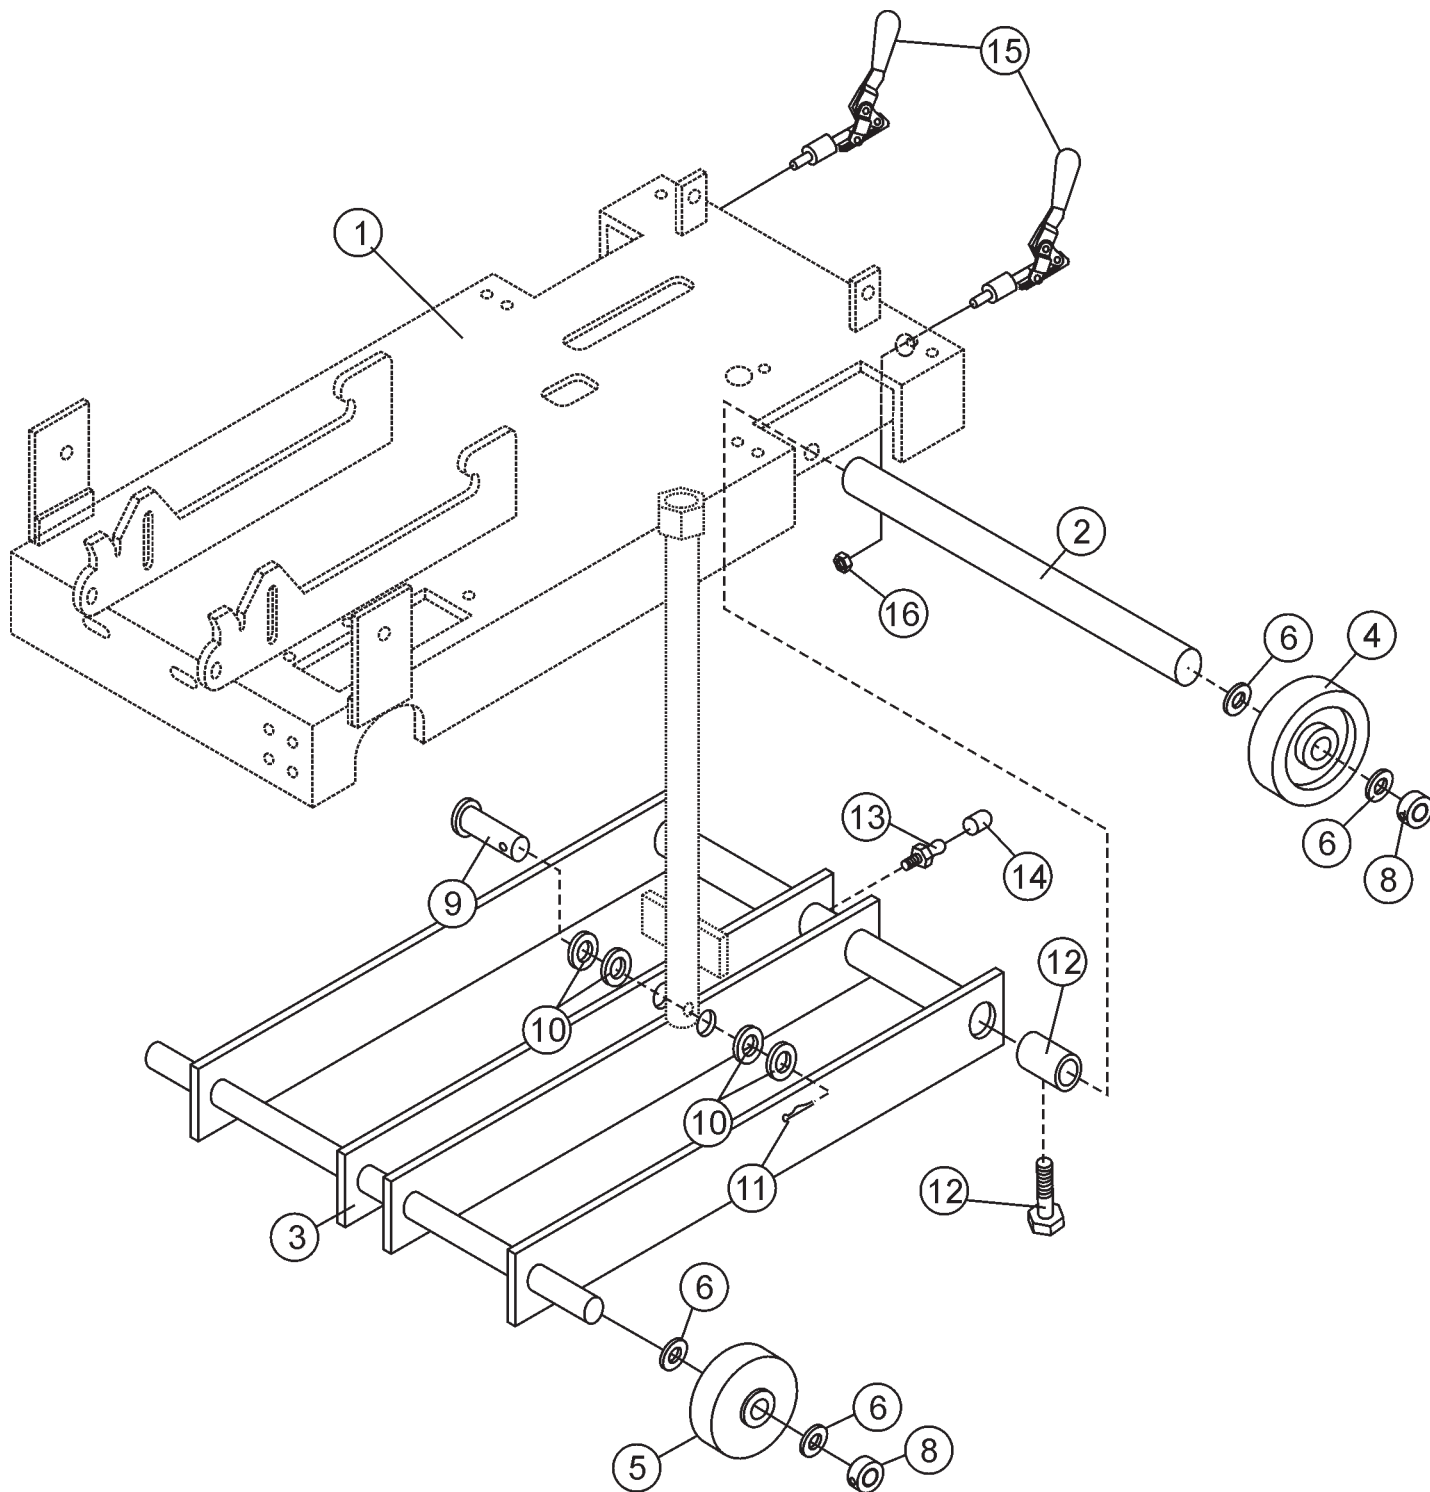


# STOW CUTTER 3 CE SAW — UNDER CARRIAGE ASSY.

## UNDERCARRIAGE ASSY.

<u>NO</u>	<u>PART NO</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
1	28777-352	FRAME ASSY. 16"/18"/20"	1	
2	28781-002	AXLE, REAR & FRONT	1	
3	28782-351	FRAME, UNDERCARRIAGE ASSY.	1	
4	28086-001	WHEEL, 8 X 2 .75 ROLLER BEARING REAR	2	
5	28085-001	WHEEL, 5 X 2 .75 ROLLER BEARING FRONT	2	
6	8151	WASHER, FLAT SAE 3/4	8	
7	10065-090	BEARING PLAIN	2	
8	25181-001	COLLAR, SET 0.75 X 1.50 X .50, SPLIT	4	
9	8081	PIN, CLEVIS 1/2 X 2-3/4	1	
10	0447	WASHER, FLAT SAE 1/2	4	
11	3216	PIN, COTTER 1/8D X 1	1	
12	0685	SCREW, SHS 5/16-18 X 5/16	2	
13	2621	ZERK, GREASE STR. 1/4-28	1	
14	1162 A	CAP, ZERK FITTING	1	
15	35152	CLAMP, WHEEL ASSY. ....	2	SAFETY ITEM
		.....		INCLUDES ITEM W/#
16#		NUT, HEX .....	2	SAFETY ITEM

# STOW CUTTER 3 CE SAW — BLADE SHAFT ASSY.

## BLADE SHAFT ASSY.

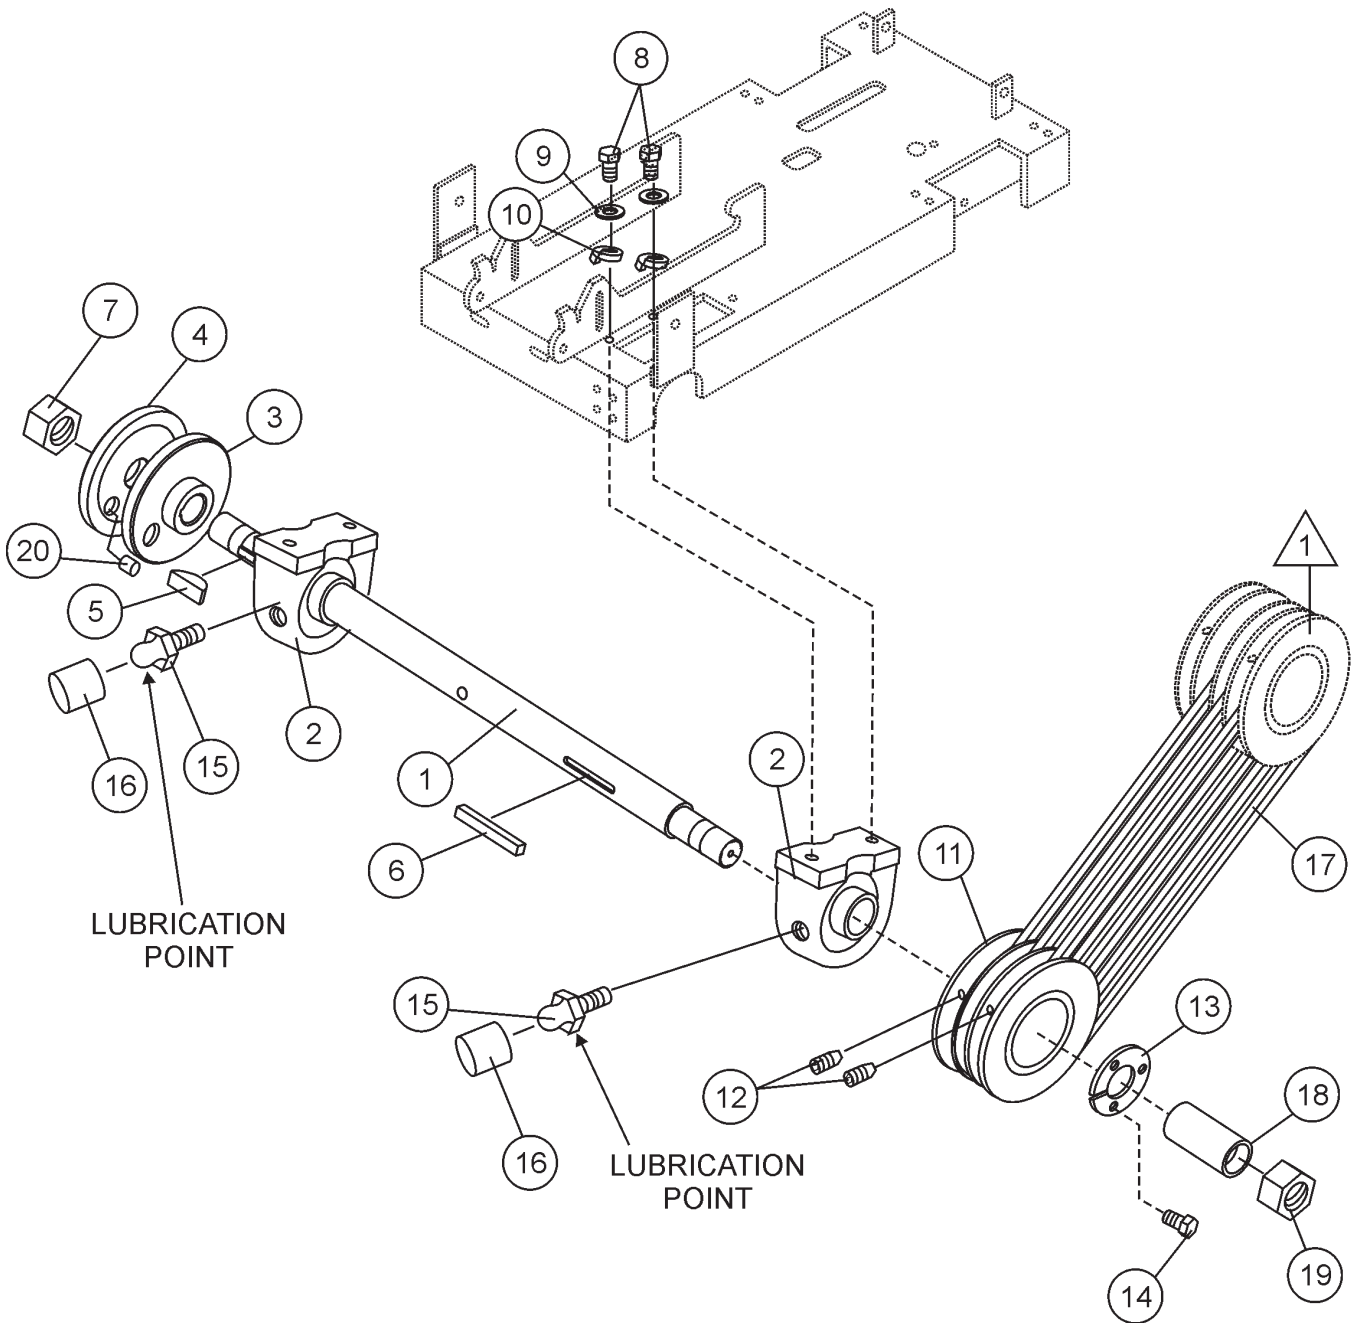

### NOTES:

- 1
 ENGINE PULLEY,  
 13HP & 20HP HONDA  
 ENGINE ASSY., ITEM 2


# STOW CUTTER 3 CE SAW — BLADE SHAFT ASSY.

## BLADE SHAFT ASSY.

<u>NO</u>	<u>PART NO</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
1	28807-002	SPINDLE, BLADE	1	
2	28081-001	BEARING, PILLOW BLOCK 1.25ID AS206-20	2	
3	28811-002	FLANGE, BLADE INSIDE 4.0OD X 1.0ID	1	
4	26928-002	FLANGE, BLADE OUTSIDE 1.0ID X5.0OD X 56	1	
	26928-004	FLANGE, BLADE OUTSIDE 1.0ID X4.0OD X 56	1	
5	0125	KEY, WOODRUFF #15	1	
6	6059 B	KEY, 1/4"SQ. X 2", 1018 STOCK	1	
7	06922-003	NUT, HEX JAM LH 1-14 PLATED	1	
8	06502-012	SCREW, HHC 7/16-14 X 1-1/2	4	
9	2955	WASHER, LOCK 7/16 ZINC	4	
10	0448	WASHER, FLAT SAE 7/16	4	
11	25172-003	PULLEY, BLADE SHAFT, 3F3V33X112 .....	1	13 HP PUSH & 20 IN. SELF-PROP. MODELS
11	23280-001	PULLEY, BLADE SHAFT, 43V4.12 .....	1	20 IN. SELF-PROP. MODELS
12	1528	SCREW, SHS	2	
13	28841-001	BUSHING, SPLIT TYPE	1	
14	0424	SCREW, 1/4-20 X 1-1/4	3	
15	2621	ZERK FITTING	2	
16	1162 A	CAP,GREASE ZERK, #2 RED	2	
17	16052	V-BELT, 3V x 335 .....	3	13 HP PUSH & SELF-PROP. MODELS
17	15897	V-BELT, 3V x 355	4	
18	23250-002	SPACER, SPINDLE	1	
19	07038-016	NUT, HEX JAM 1"-14 PLATED	1	
20	15046	PIN, DOWEL 3/8 x1-1/4 LG	1	

# STOW CUTTER 3 CE SAW — LIFTING BALE ASSY.

LIFTING BALE ASSY.

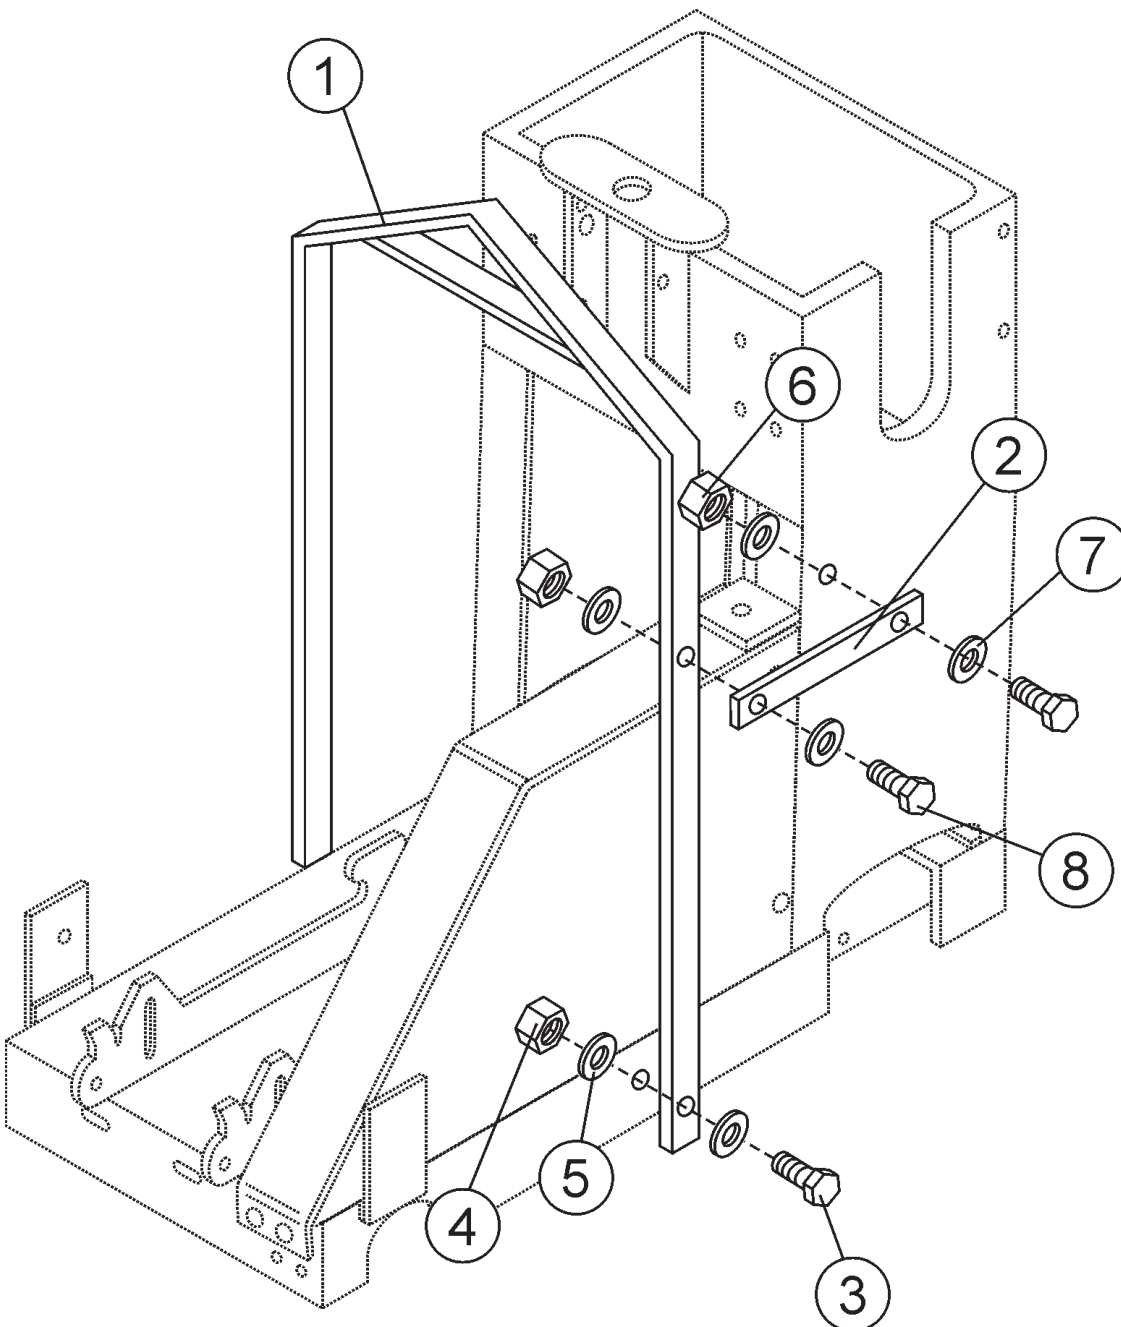




# STOW CUTTER 3 CE SAW — LIFTING BALE ASSY.

## LIFTING BALE ASSY.

<u>NO</u>	<u>PART NO</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
1	28890-351	13HP, LIFT BALE ASSY.	1	
1	28890-352	20HP, LIFT BAIL ASSY.	1	
2	28893-001	BRACE, 13HP BAIL	1	
2	28893-002	BRACE, 20HP BAIL	1	
3	0205	SCREW, HHC 3/8-16 X 1.0	2	
4	10133	NUT, NYLOC 3/8-16	2	
5	10136	WASHER, FLAT SAE 3/8	4	
6	5283	NUT, NYLOC 5/16-18	2	
7	0300 B	WASHER, FLAT SAE 5/16	4	
8	0202	SCREW, HHC 5/16-18 X 1 ZINC	2	

# STOW CUTTER 3 CE SAW — CONSOLE ASSY. (PUSH MODELS)

CONSOLE ASSY. (PUSH MODELS)

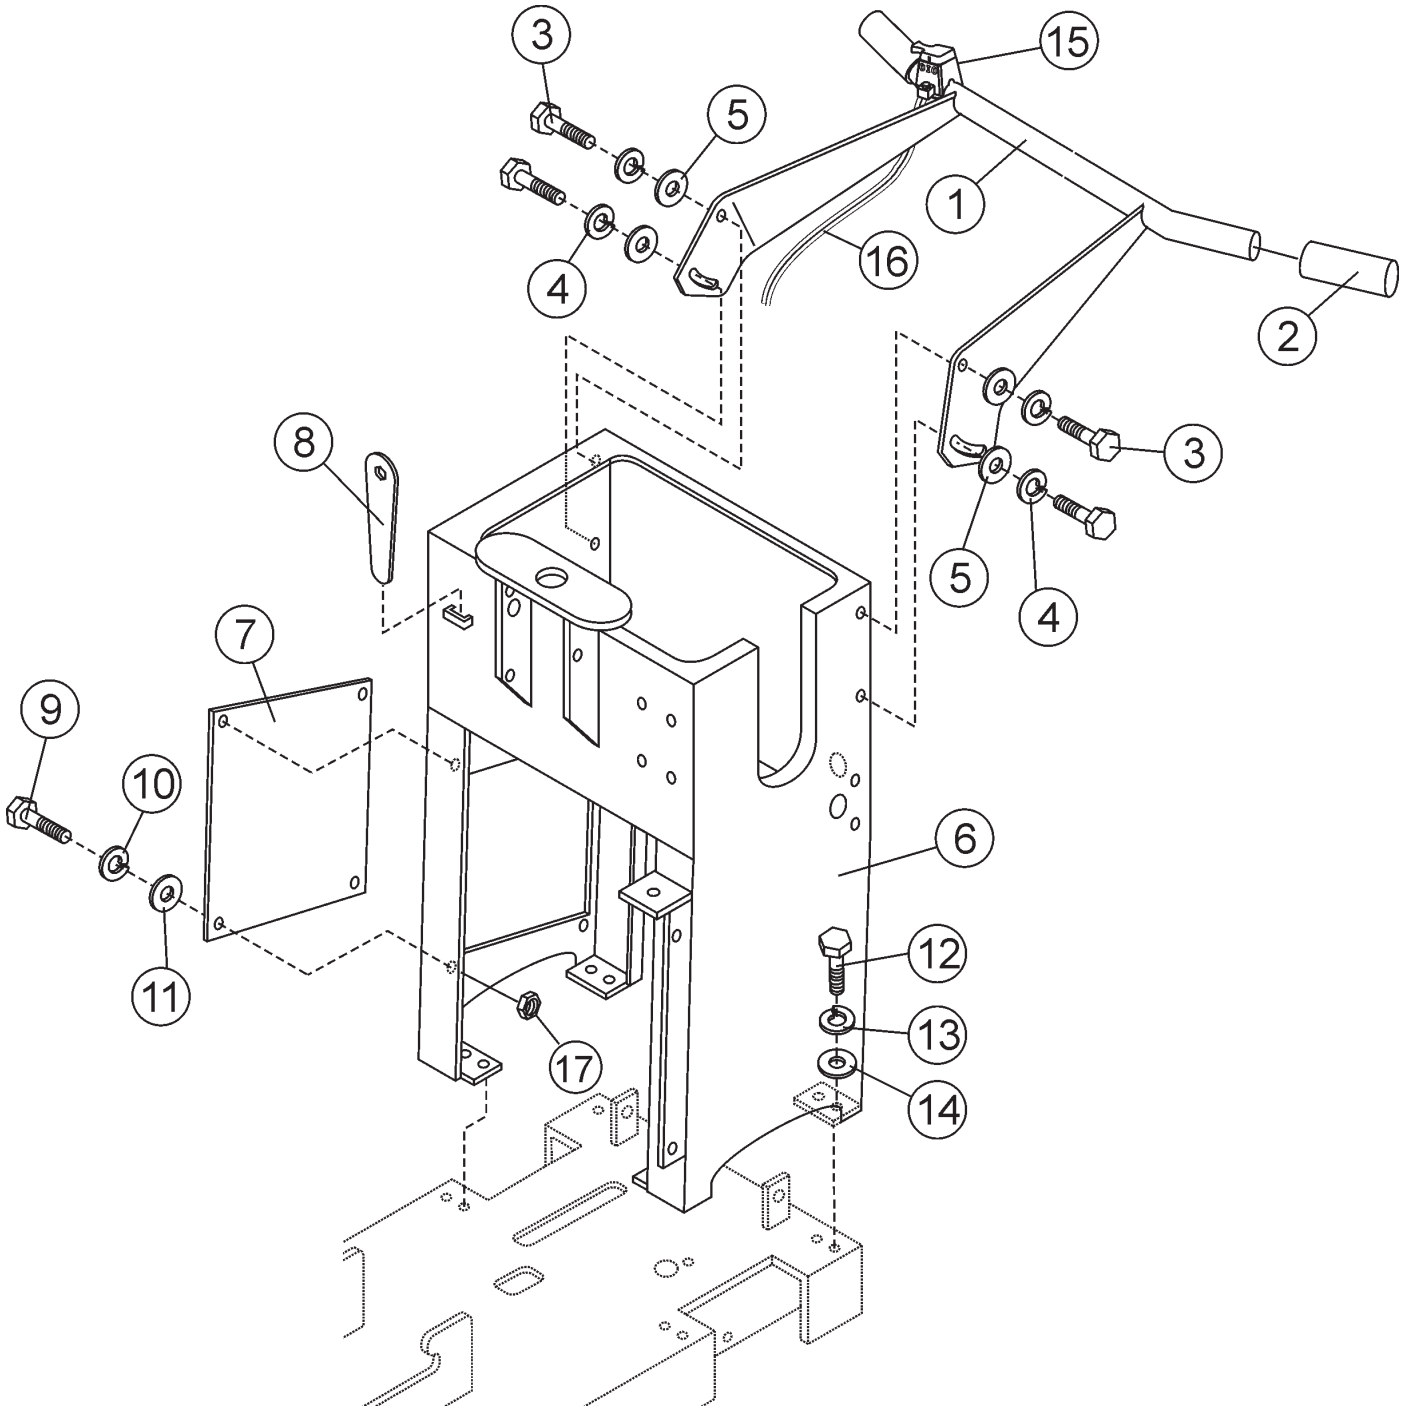


# STOW CUTTER 3 CE SAW — CONSOLE ASSY. (PUSH MODELS)

## CONSOLE ASSY. PUSH

<u>NO</u>	<u>PART NO</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
1	28796-351	HANDLE ASSY.	1	
2	15081	GRIP, 1"ID, H/W #40001610055	2	
3	4196	SCREW, HHC 3/8-16 X .75	4	
4	0166 A	WASHER, LOCK 3/8 MED.	4	
5	10136	WASHER, FLAT SAE 3/8	4	
6	28791-351	HOUSING ASSY., YELLOW STOW	1	
7	28805-001	COVER, CONSOLE SIDE, CUTTER 3-YELLOW	1	
8	29013-001	WRENCH, BOX END 1 1/2	1	
9	1579	SCREW, HHC 1/4-20 X 1/2	4	
10	0181 B	WASHER, LOCK 1/4 MED.	8	
11	0948	WASHER, FLAT SAE 1/4	4	
12	0205	SCREW, HHC 3/8-16 X 1.0	8	
13	0166 A	WASHER, LOCK 3/8 MED.	8	
14	4001	WASHER, FLAT USS 3/8 PLD	8	
15	35127	SWITCH, ENGINE ON/OFF .....	1	SAFETY ITEM
16	35200	WIRE, ENGINE ON/OFF SWITCH .....	1	SAFETY ITEM
17	19266	BLIND NUT, 1/4-20	4	

# STOW CUTTER 3 CE SAW — CONSOLE ASSY. (SELF-PROPELLED)

CONSOLE ASSY. (SELF-PROPELLED MODELS)

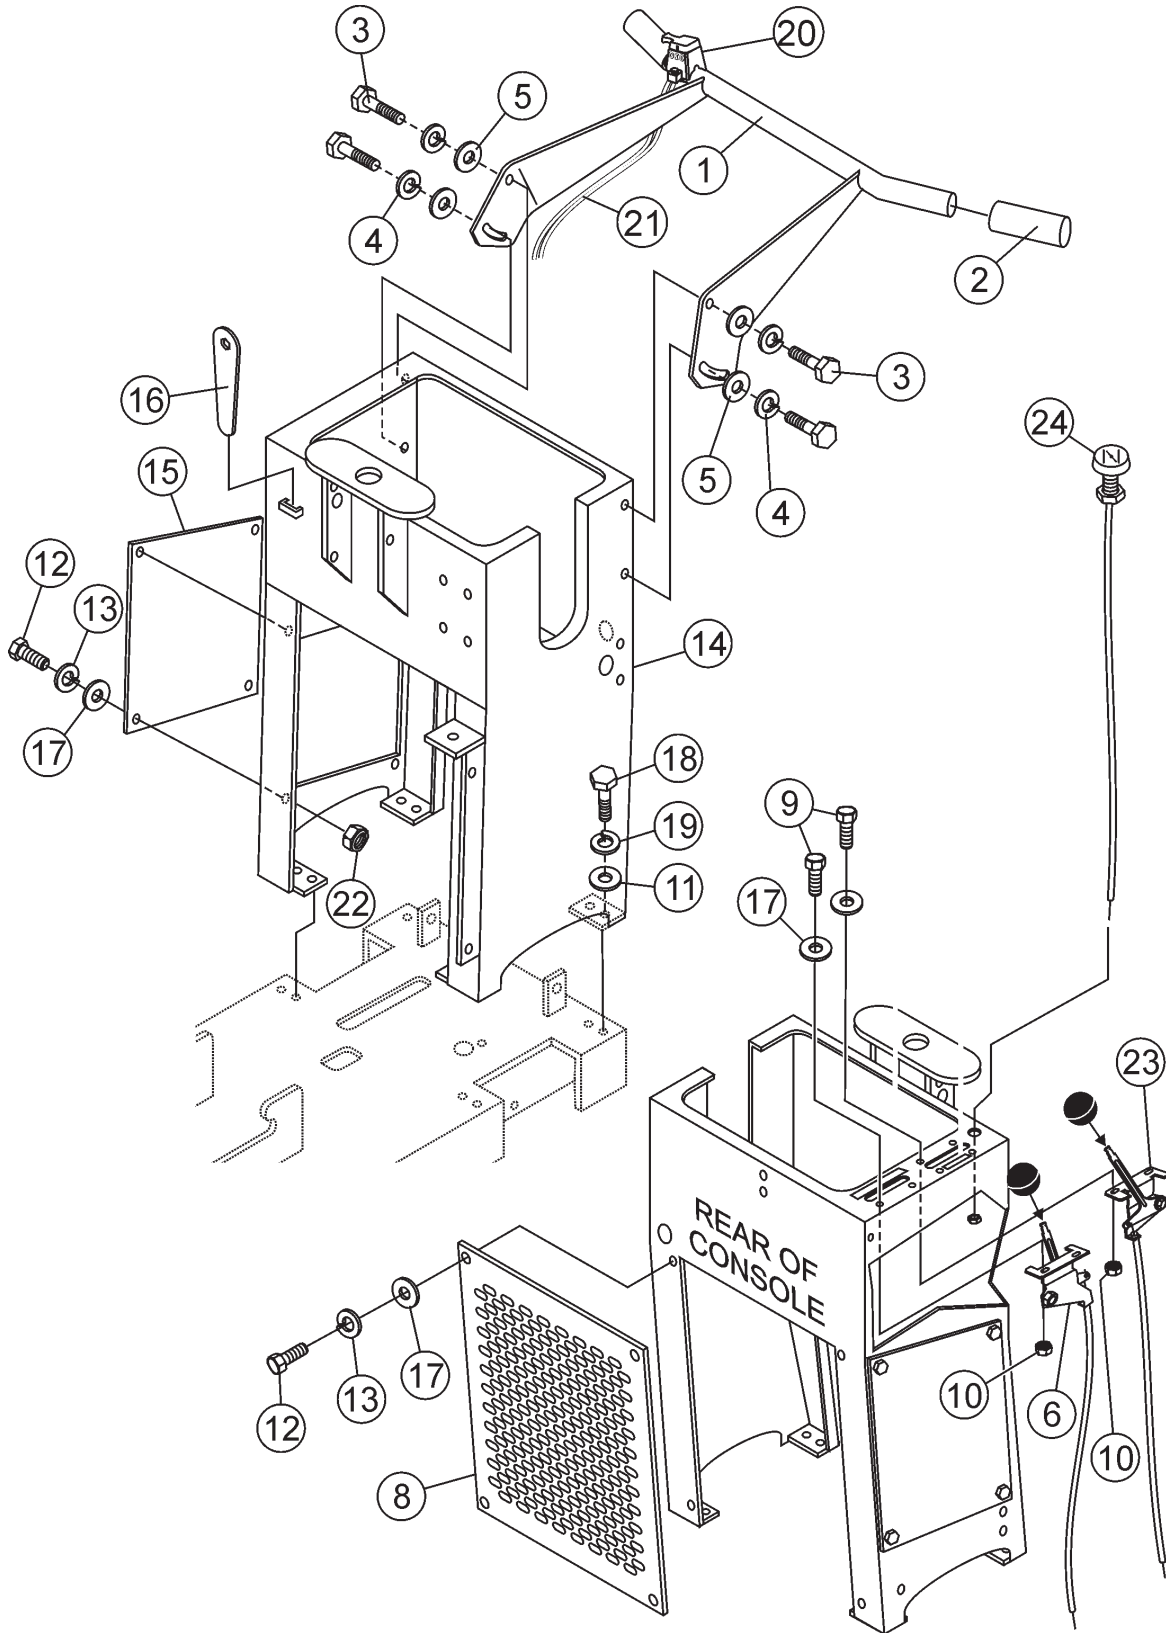


# STOW CUTTER 3 CE SAW — CONSOLE ASSY. (SELF-PROPELLED)

## CONSOLE ASSY. (SELF- PROPELLED MODELS)


<u>NO</u>	<u>PART NO</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
1	28796-351	HANDLE ASSY.	1	
2	15081	GRIP, 1" ID	2	
3	4196	SCREW, HHC 3/8-16 X .75	4	
4	0166 A	WASHER, LOCK 3/8 MED.	4	
5	10136	WASHER, FLAT SAE 3/8	4	
6	28091-401	SHIFT CONTROL ASSY.	1	
8	28834-001	COVER, REAR	1	
9	0131 A	SCREW, HHC 1/4-20 X 3/4	2	
10	1002 4	NUT, NYLOC 1/4-20	2	
11	4001	WASHER, FLAT USS 3/8 PLD	8	
12	1579	SCREW, HHC 1/4-20 X 1/2	8	
13	0181 B	WASHER, LOCK 1/4 MED.	8	
14	28791-351	HOUSING ASSY., STOW YELLOW	1	
15	28805-001	COVER, CONSOLE SIDE, CUTTER 3-YELLOW	1	
16	29013-001	WRENCH, BOX END 1 1/2	1	
17	0948	WASHER, FLAT SAE 1/4	4	
18	0205	SCREW, HHC 3/8-16 X 1.0	8	
19	0166 A	WASHER, LOCK 3/8 MED.	8	
20	35127	SWITCH, ENGINE ON/OFF .....	1	SAFETY ITEM
21	35200	WIRE, ENGINE ON/OFF SWITCH 13HP .....	1	SAFETY ITEM
21	35134	WIRE, ENGINE ON/OFF SWITCH 20HP .....	1	SAFETY ITEM
22	19266	BLIND NUT, 1/4-20	4	
23	15168	HANDLE, THROTTLE	1	
24	35280	CABLE, CHOKE, 35"	1	

# STOW CUTTER 3 CE SAW — 13HP HONDA ENGINE MOUNT ASSY.

13HP HONDA ENGINE MOUNT ASSY.

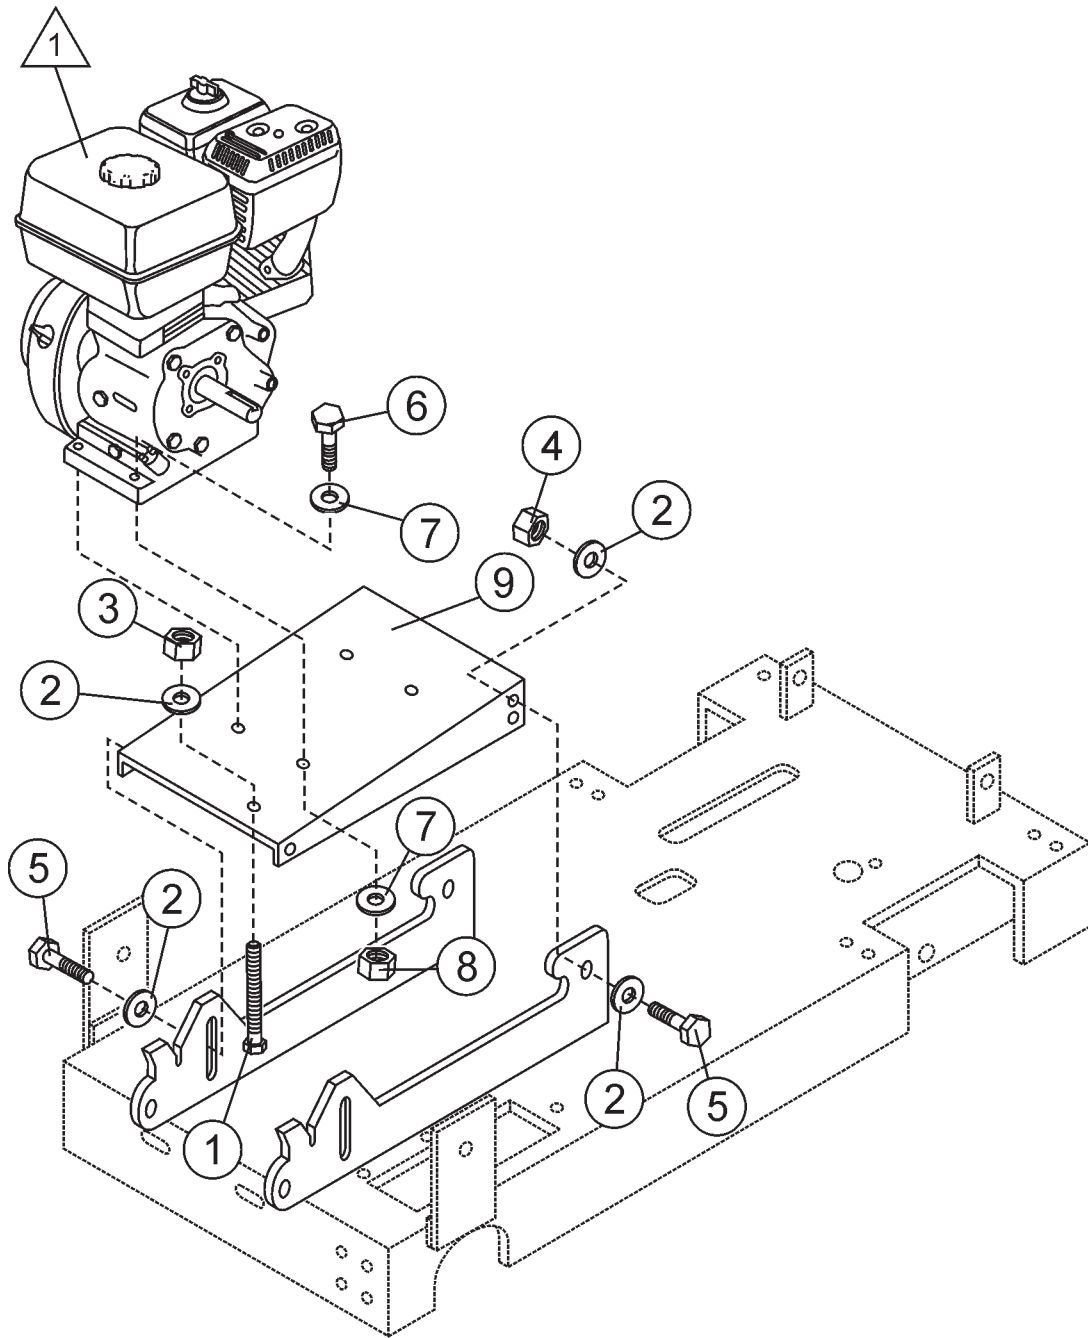

## NOTES:

 ENGINE SHOWN FOR MOUNTING PURPOSE ONLY  
ENGINE MAY NOT LOOK LIKE ILLUSTRATION


# STOW CUTTER 3 CE SAW — 13HP HONDA ENGINE MOUNT ASSY.

13HP HONDA ENGINE MOUNT ASSY.

<u>NO</u>	<u>PART NO</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
1	15868-032	SCREW, SQHS 1/2-13 X 4, CUP PLAIN	1	
2	0447	WASHER, FLAT SAE 1/2	9	
3	968011	NUT, HEX FINISH 1/2-13	1	
4	10176	NUT, NYLOC 1/2-13	4	
5	3214	SCREW, HHC 1/2-13 X 1 1/4	4	
6	9154	SCREW, HHC 3/8-16 X 1 3/4	4	
7	10136	WASHER, FLAT SAE 3/8	8	
8	10133	NUT, NYLOC 3/8-16	4	
9	28804-351	ENGINE BASE ASSY.	1	

# STOW CUTTER 3 CE SAW — 20HP HONDA ENGINE MOUNT ASSY.

20HP HONDA ENGINE MOUNT ASSY.

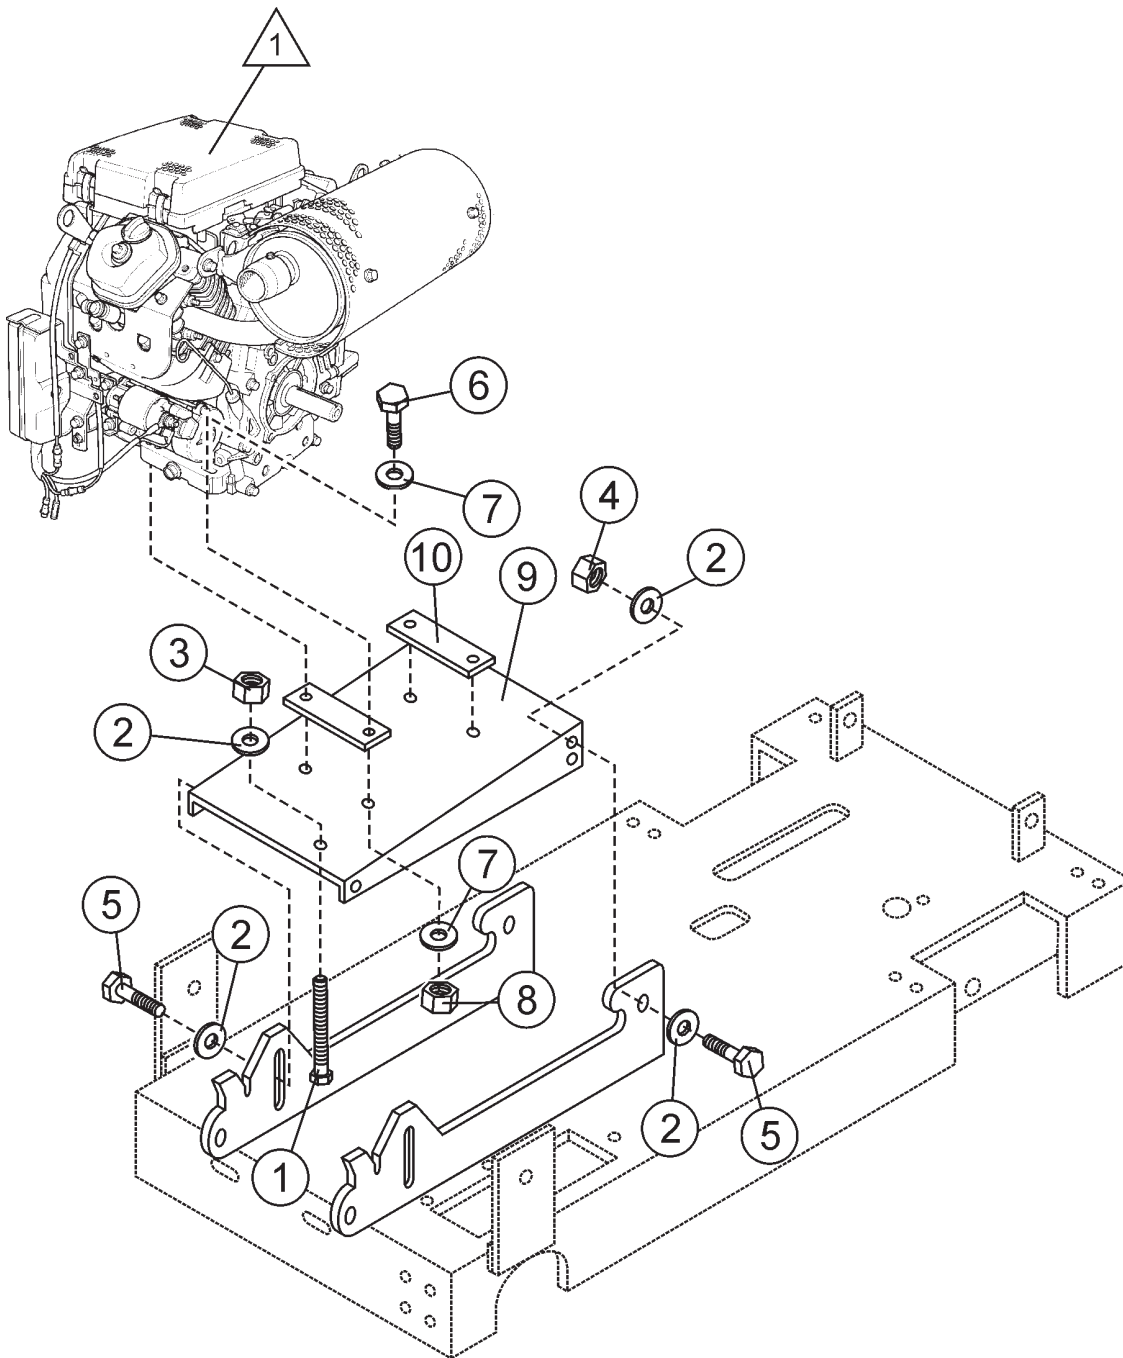

## NOTES:



ENGINE SHOWN FOR  
MOUNTING PURPOSE ONLY  
ENGINE MAY NOT LOOK  
LIKE ILLUSTRATION




# STOW CUTTER 3 CE SAW — 20HP HONDA ENGINE MOUNT ASSY.

20HP HONDA ENGINE MOUNT ASSY.

<u>NO</u>	<u>PART NO</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
1	15868-032	SCREW, SQHS 1/2-13 X 4, CUP PLAIN	1	
2	0447	WASHER, FLAT SAE 1/2	9	
3	968011	NUT, HEX FINISH 1/2-13	1	
4	10176	NUT, NYLOC 1/2-13	4	
5	3214	SCREW, HHC 1/2-13 X 1 1/4	4	
6	4370	SCREW, HHC 3/8-16 X 2 1/4	4	
7	10136	WASHER, FLAT SAE 3/8	8	
8	10133	NUT, NYLOC 3/8-16	4	
9	28804-351	ENGINE BASE ASSY.	1	
10	27044-001	SPACER	2	

# STOW CUTTER 3 CE SAW — 13HP HONDA ENGINE ASSY.

13HP HONDA ENGINE ASSY.

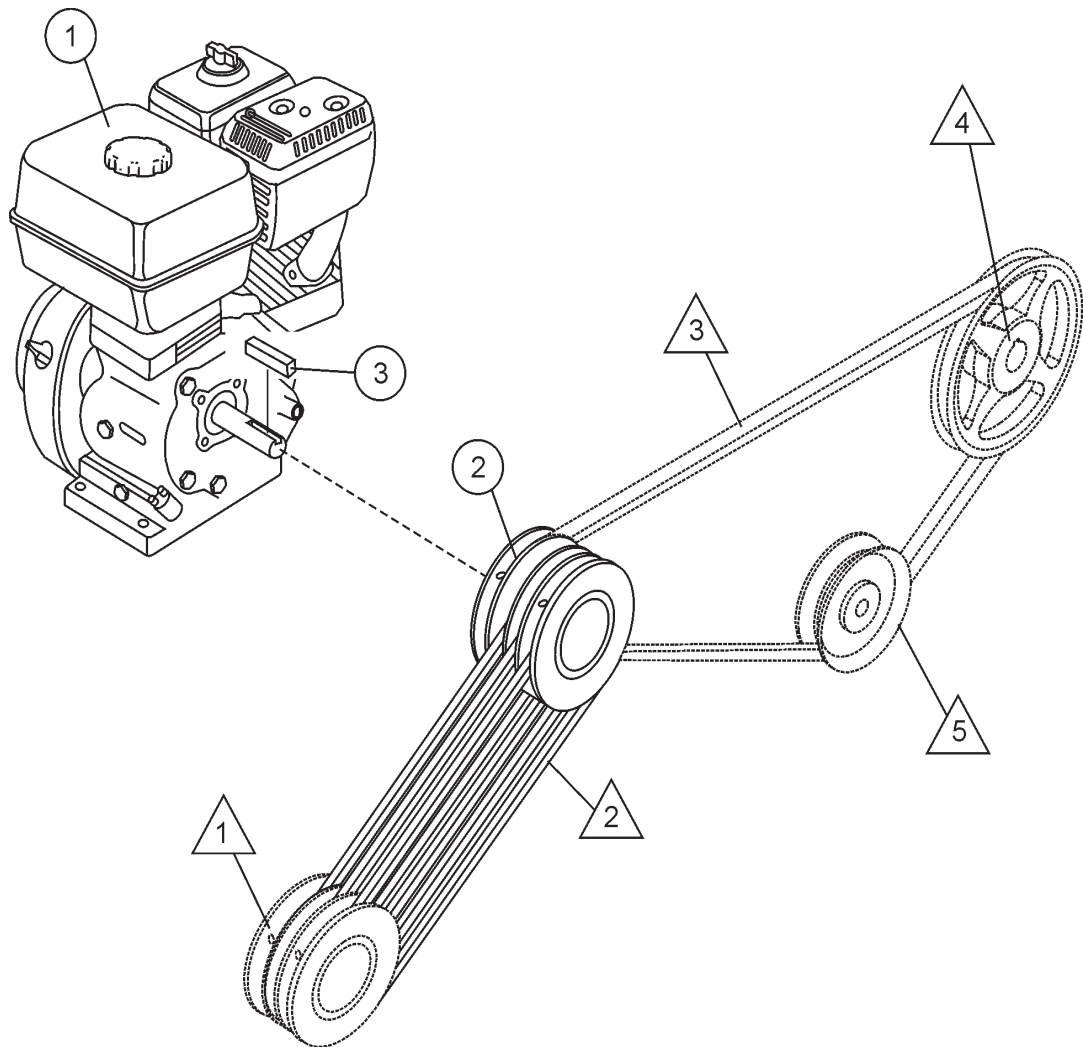

## NOTES:

- |   |                                      |   |                                      |
|---|--------------------------------------|---|--------------------------------------|
| 1 | SEE BLADE SHAFT ASSY., ITEM 11       | 4 | SEE HYDROSTATIC DRIVE ASSY., ITEM 14 |
| 2 | SEE BLADE SHAFT ASSY., ITEM 17       | 5 | SEE HYDROSTATIC DRIVE ASSY., ITEM 15 |
| 3 | SEE HYDROSTATIC DRIVE ASSY., ITEM 25 |   |                                      |


# STOW CUTTER 3 CE SAW — 13HP HONDA ENGINE ASSY.

13HP HONDA ENGINE ASSY.

<u>NO</u>	<u>PART NO</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
1	15103	ENGINE, HONDA 13HP, GX390K1QWT2	1	
2	23665-001	PULLEY, ENGINE 13 HP, 3F3V26X1 .....	1 .....	13HP PUSH MODELS
2	23703-003	PULLEY, ENGINE 13 HP, 4F3V26X1	1	13HP SELF-PROP MODELS
3	6059 B	KEY 1/4" SQ. X 2, 1018 STOCK	1	

# STOW CUTTER 3 CE SAW — 20HP HONDA ENGINE ASSY.

20HP HONDA ENGINE ASSY.

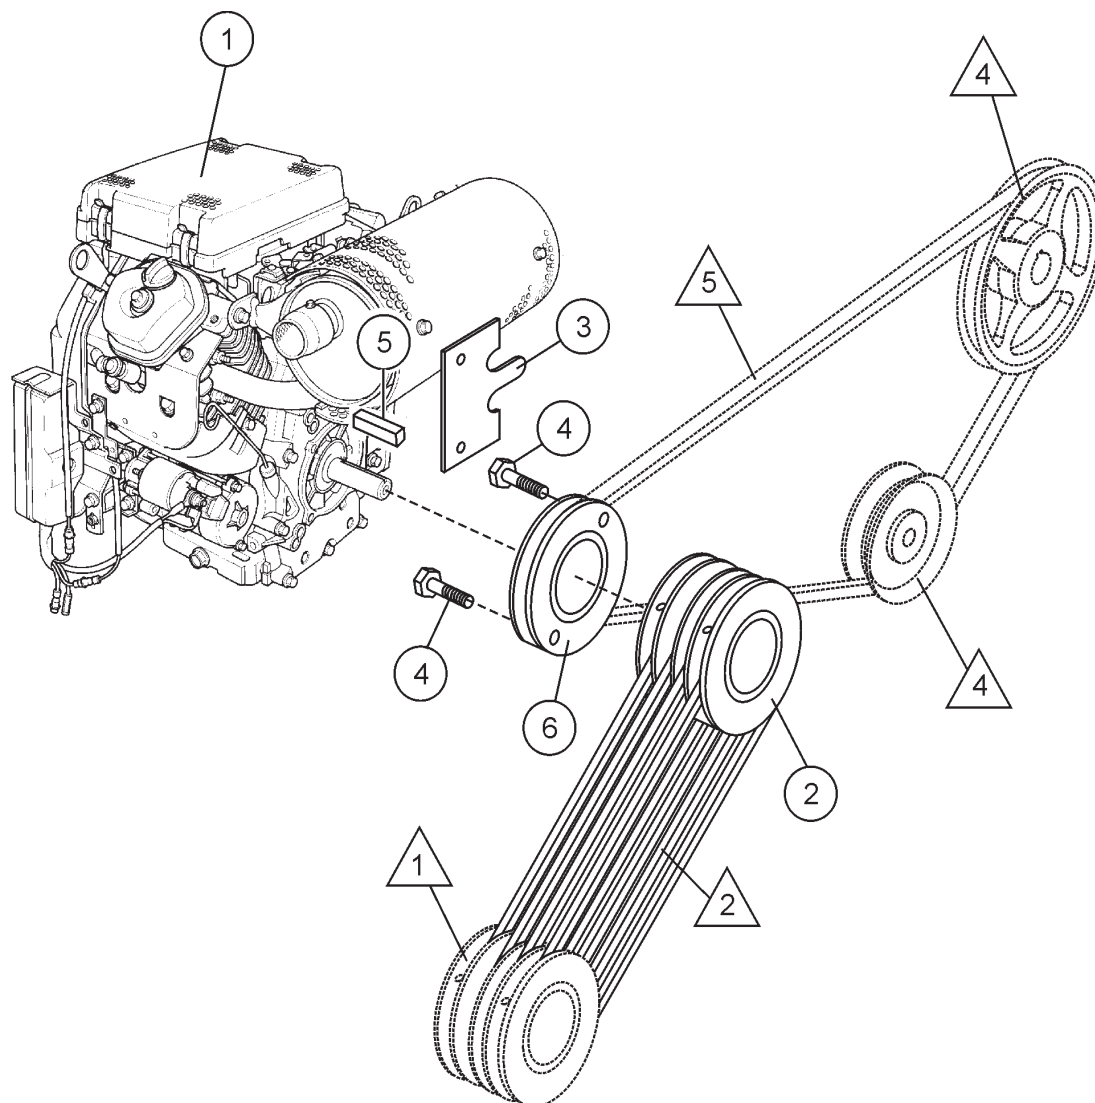

## NOTES:



SEE BLADE SHAFT  
ASSY., ITEM 11



SEE HYDROSTATIC DRIVE  
ASSY., ITEM 14



SEE BLADE SHAFT  
ASSY., ITEM 17



SEE HYDROSTATIC DRIVE  
ASSY., ITEM 15



SEE HYDROSTATIC DRIVE  
ASSY., ITEM 25


## STOW CUTTER 3 CE SAW — 20HP HONDA ENGINE ASSY.

20HP HONDA ENGINE ASSY.

<u>NO</u>	<u>PART NO</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
1	15104	ENGINE, HONDA 20HP GX620TXF2	1	
2	28833-002	PULLEY, ENGINE C3 20H20, 4F3V412	1	
3	28099-001	MOUNT, IDLER SPRING	1	
4	923203	SCREW, SHC 1/4-20 X 3/4	2	
5	6059 B	KEY 1/4" SQ. X 2, 1018 STOCK	1	
6	28088-002	PULLEY, TRANSMISSION	2	

# STOW CUTTER 3 CE SAW — POINTERS AND COVERS ASSY.

POINTERS AND COVERS ASSY.

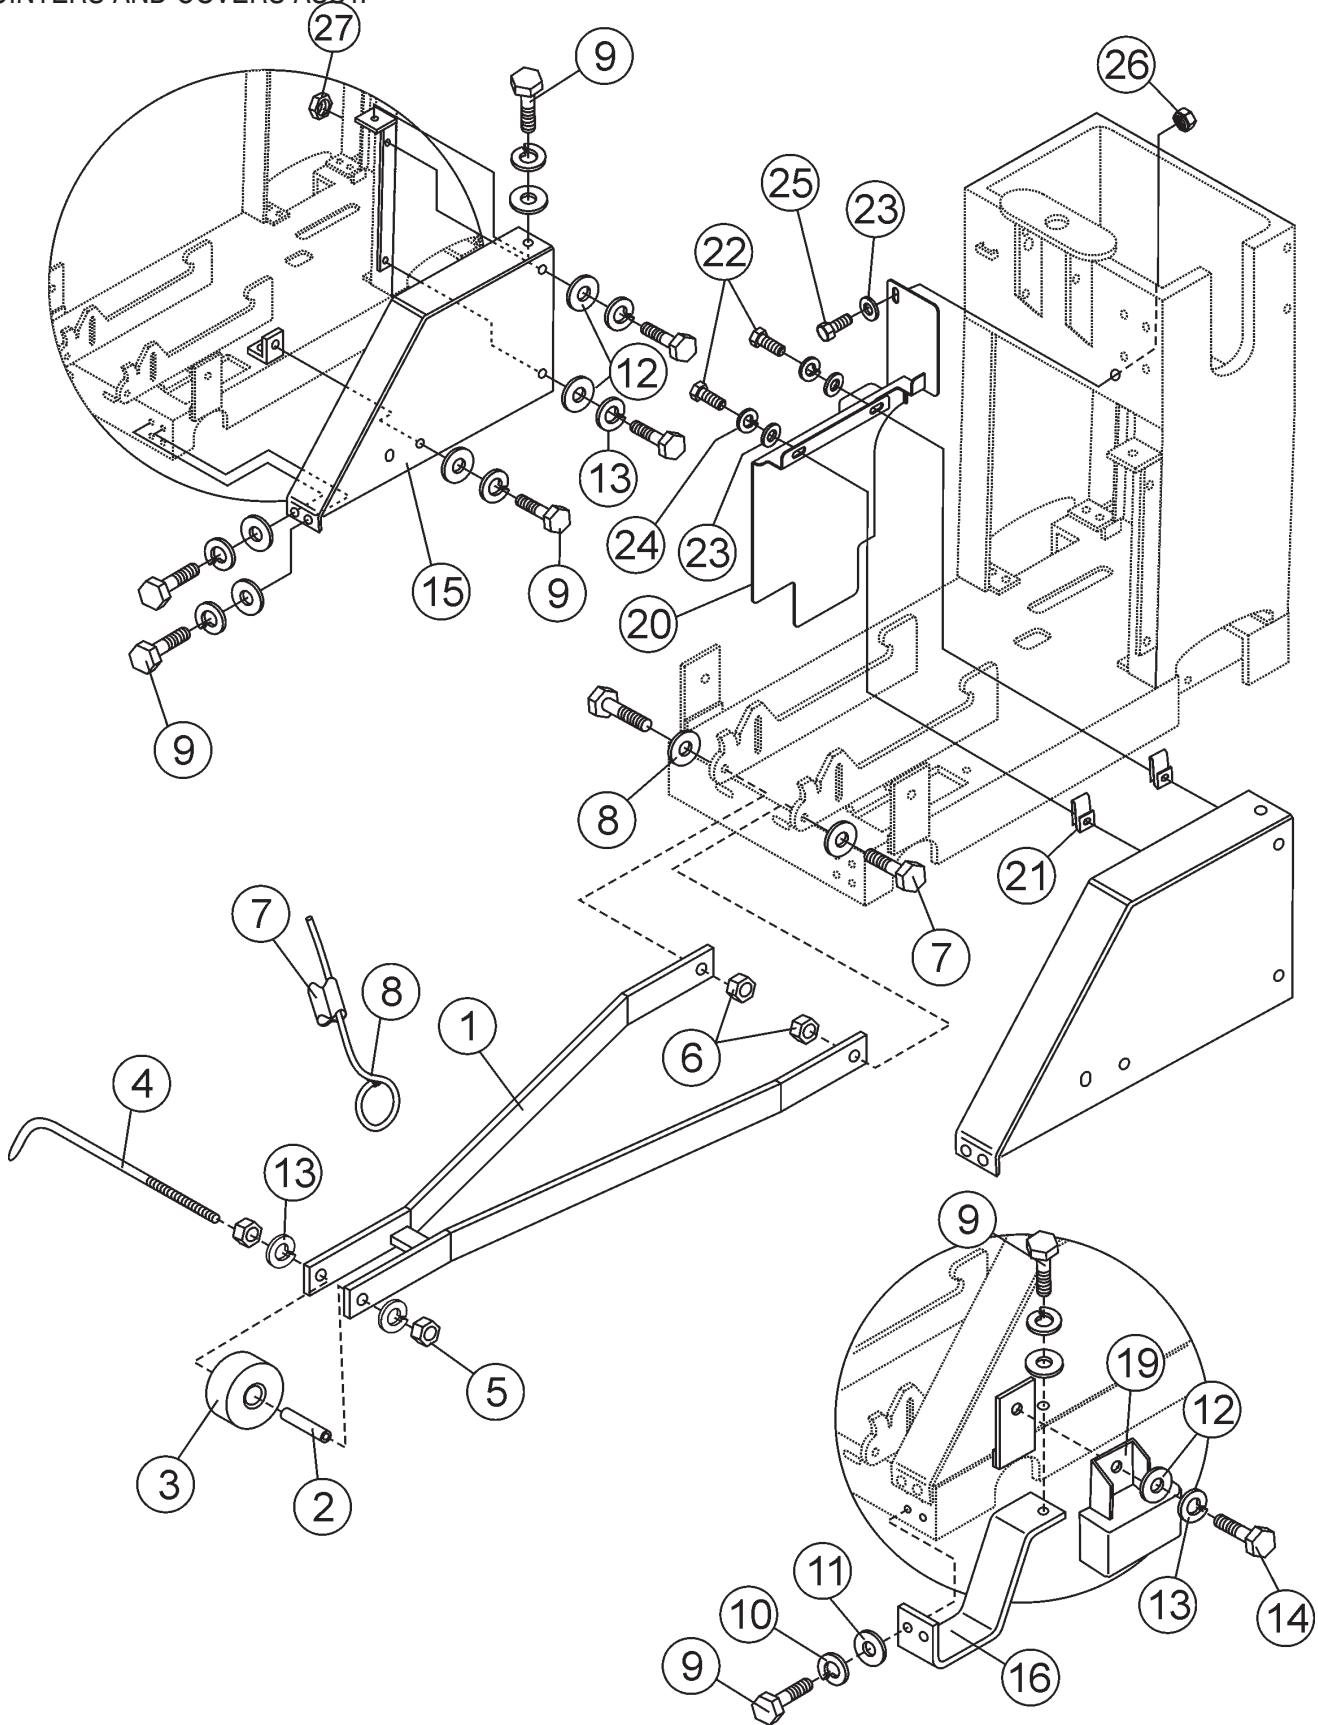


# STOW CUTTER 3 CE SAW — POINTERS AND COVERS ASSY.

## POINTER AND COVERS ASSY.

<u>NO</u>	<u>PART NO</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
1	28646-351	BLADE GUIDE WELDMENT	1	
2	28649-001	SPANNER BUSHING CSI	1	
3	28648-001	WHEEL, 3.00 X 1.25 .50 ID POLY CSI	1	
4	28647-001	POINTER	1	
5	1456	NUT, HEX FINISH 3/8-16	2	
6	10133	NUT, NYLOC 3/8-16	2	
7	15114	SLEEVE, SASH	2	
8	60087	ROPE, 1/4" NYLON, BRAIDED, WHITE	7	
9	0655	SCREW, HHC 5/16-18 X 3/4	7	
10	0161 C	WASHER, LOCK 5/16 MED.	7	
11	0300 B	WASHER, FLAT SAE 5/16	7	
12	10136	WASHER, FLAT SAE 3/8	3	
13	0166 A	WASHER, LOCK 3/8 MED.	3	
14	0205	SCREW, HHC 3/8-16 X 1.0	3	
15	28799-351	BELT GUARD, YELLOW .....	1	SAFETY ITEM
16	28835-001	GUARD, PULLEY .....	1	20 IN. BLADE ONLY
19	29745-354	SPINDLE GUARD ASSY., YELLOW .....	1	SAFETY ITEM
20	35223	GUARD, BELT .....	1	SAFETY ITEM
21	11534	NUT, "U" TYPE, 1/4 - 20	2	
22	0131 A	SCREW, HHC 1/4- 20 X 3/4	2	
23	0948	WASHER, FLAT SAE 1/4	3	
24	0181 B	WASHER, LOCK 1/4 MED	2	
25	4514	SCREW, HHC 1/4- 20 X 5/8	1	
26	10024	NUT, NYLOC 1/4 - 20	1	
27	35358	PALNUT, U, 5/16 - 18	1	

# STOW CUTTER 3 CE SAW — WATER SYSTEM ASSY.

WATER SYSTEM ASSY.

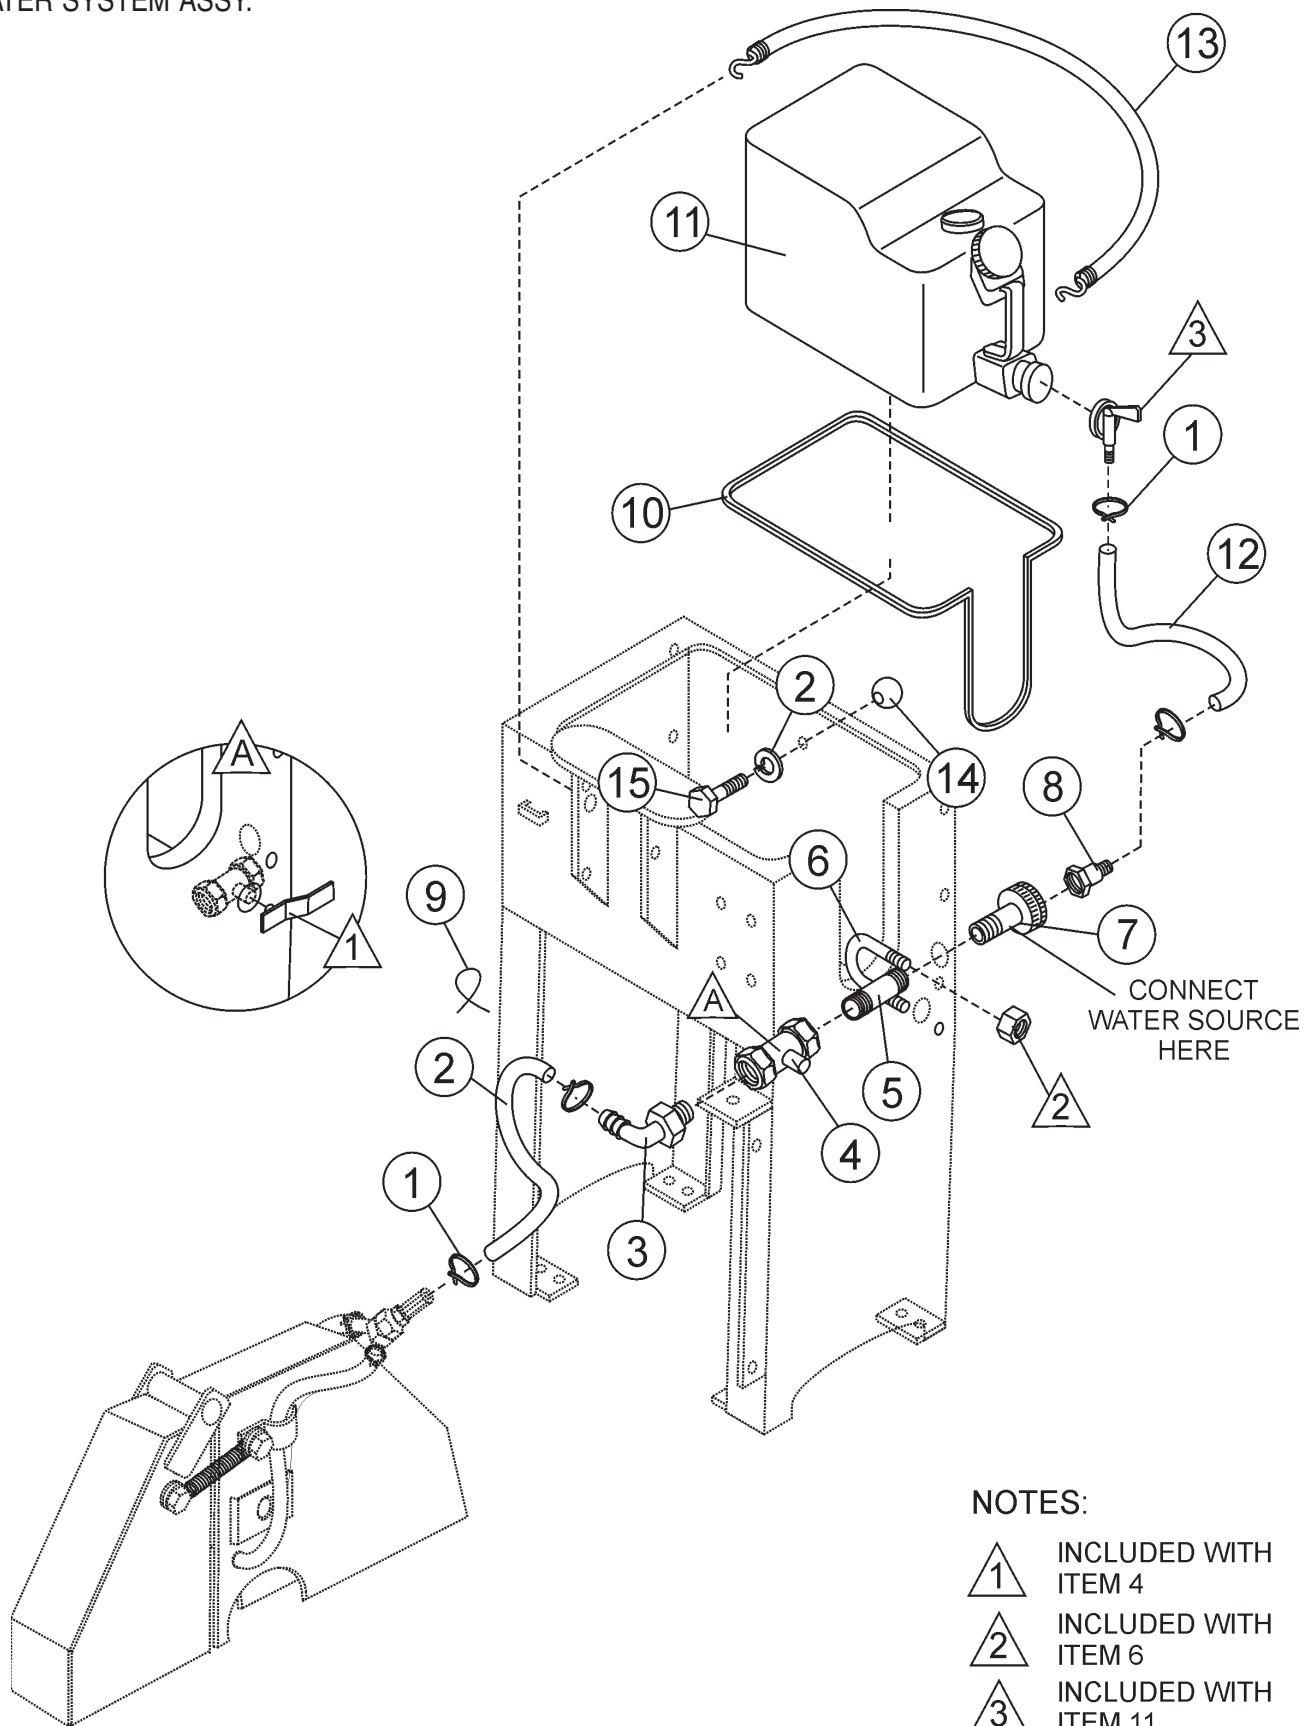




## STOW CUTTER 3 CE SAW — WATER SYSTEM ASSY.

### WATER SYSTEM FROM CONSOLE SP

<u>NO</u>	<u>PART NO</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
1	12694-008	HOSE CLAMP, SPRING TYPE 7/8 O.D HOSE	4	
2	23255-004	HOSE, WATER 1/2 X 37	1	
3	23566-001	FITTING, PLASTIC 90 1/2MP X 1/2BARB	1	
4	23259-001	VALVE, BALL 1/2 MPT BRASS NIBCO T585-70	1	
5	23254-001	FITTING, NIPPLE 1/2MP X 2 GALV.	1	
6	16378-009	U-BOLT W/NUTS	1	
7	15544	FITTING, BRASS 1/2FP-3/4F GRDN., STR	1	
8	24778-001	FITTING, BRASS 1/2 BARB X 3/4 GRDN	1	
9	1662	TIE, CABLE TY-RAP BLACK	2	
10	28861-501	TRIM KIT, WATER TANK RUBBER	1	
11	28089-001	TANK, 5 GAL. WATER	1	
12	27040-001	HOSE, 19 IN. VINYL WATER TANK	1	
13	28861-001	CORD, TANK RETAINER	1	
14	28860-001	KNOB	1	
15	06499-004	HHCS 1/4-20 x 1/2	1	

# STOW CUTTER 3 CE SAW — BLADE GUARD ASSY.

BLADE GUARD ASSY.

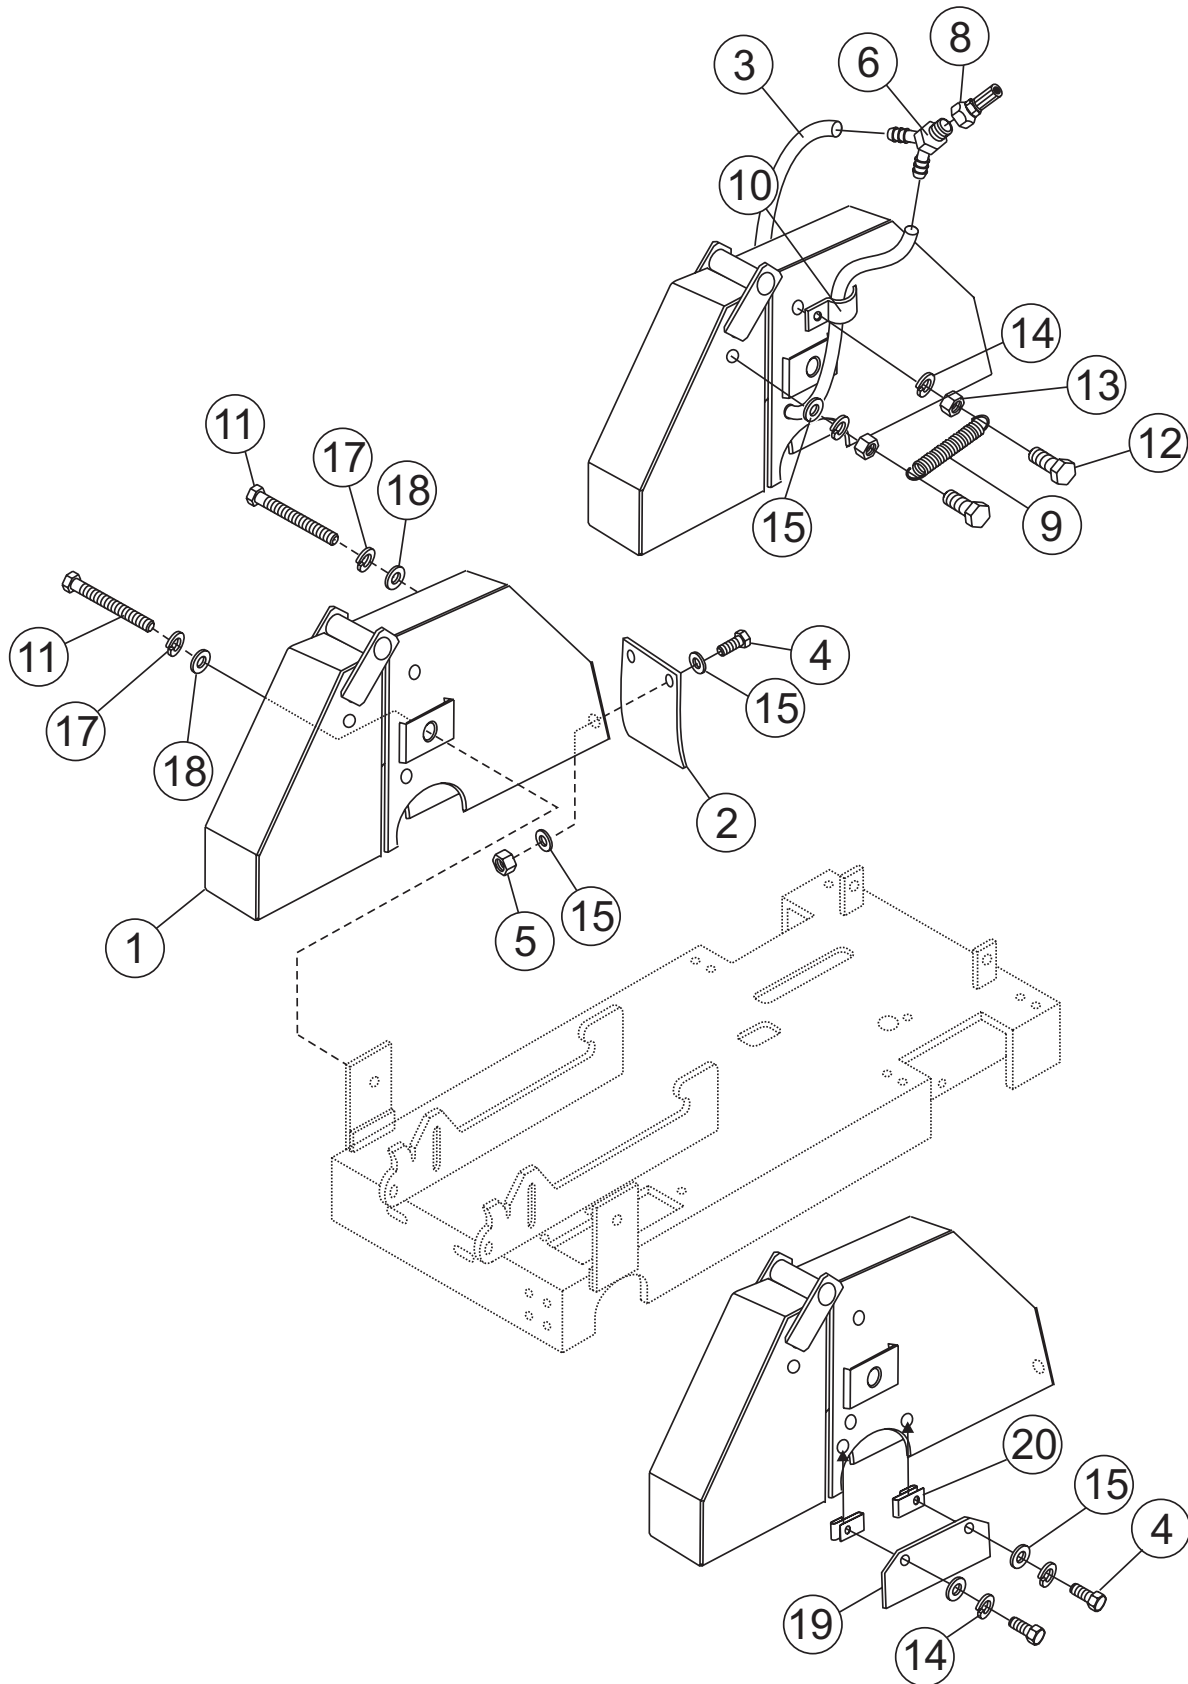


# STOW CUTTER 3 CE SAW — BLADE GUARD ASSY.

## BLADE GUARD ASSY.

<u>NO</u>	<u>PART NO</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
1	29406352	BLADE GUARD W/A, YELLOW .....	1 .....	SAFETY ITEM
2	28729001	GUARD, SPLASH BLADE .....	1 .....	SAFETY ITEM
3	60021	HOSE, 3/8ID X 5/8OD BRAIDED PVC "PAC"	1.670	
4	0131A	SCREW, HHC 1/4-20 X 3/4	2	
5	10024	NUT, NYLOC 1/4-20	2	
6	24642001	Y-CONNECTOR 3/8	1	
7	12694006	HOSE CLAMP, SPRING TYPE 3/4 O.D. HOSE	2	
8	24778001	FITTING, BRASS 1/2BARB X 3/4F GRDN	1	
9	18626001	SPRING TENSION, GUARD BLADE	2	
10	22129001	PIPE STRAP 3/8	2	
11	21168	SCREW, HHC 3/8-16 X 4.75	1	
12	0424	SCREW, HHC 1/4-20 X 1 1/4	4	
13	0949	NUT, HEX FINISH 1/4-20 PLATED	4	
14	0181B	WASHER, LOCK 1/4 MED.	4	
15	0948	WASHER, FLAT SAE 1/4	6	
16	0205	SCREW, HHC 3/8-16 X 1.0	1	
17	0166A	WASHER, LOCK 3/8 MED.	2	
18	10136	WASHER, FLAT SAE 3/8	2	
19	35224	SHIELD, BLADE GUARD .....	1 .....	SAFETY ITEM
20	11534	NUT, "U" TYPE, 1/4 - 20	2	

# STOW CUTTER 3 CE SAW — MANUAL RAISE AND LOWER ASSY. (20 IN.)

MANUAL RAISE AND LOWER ASSY. (20 IN.)

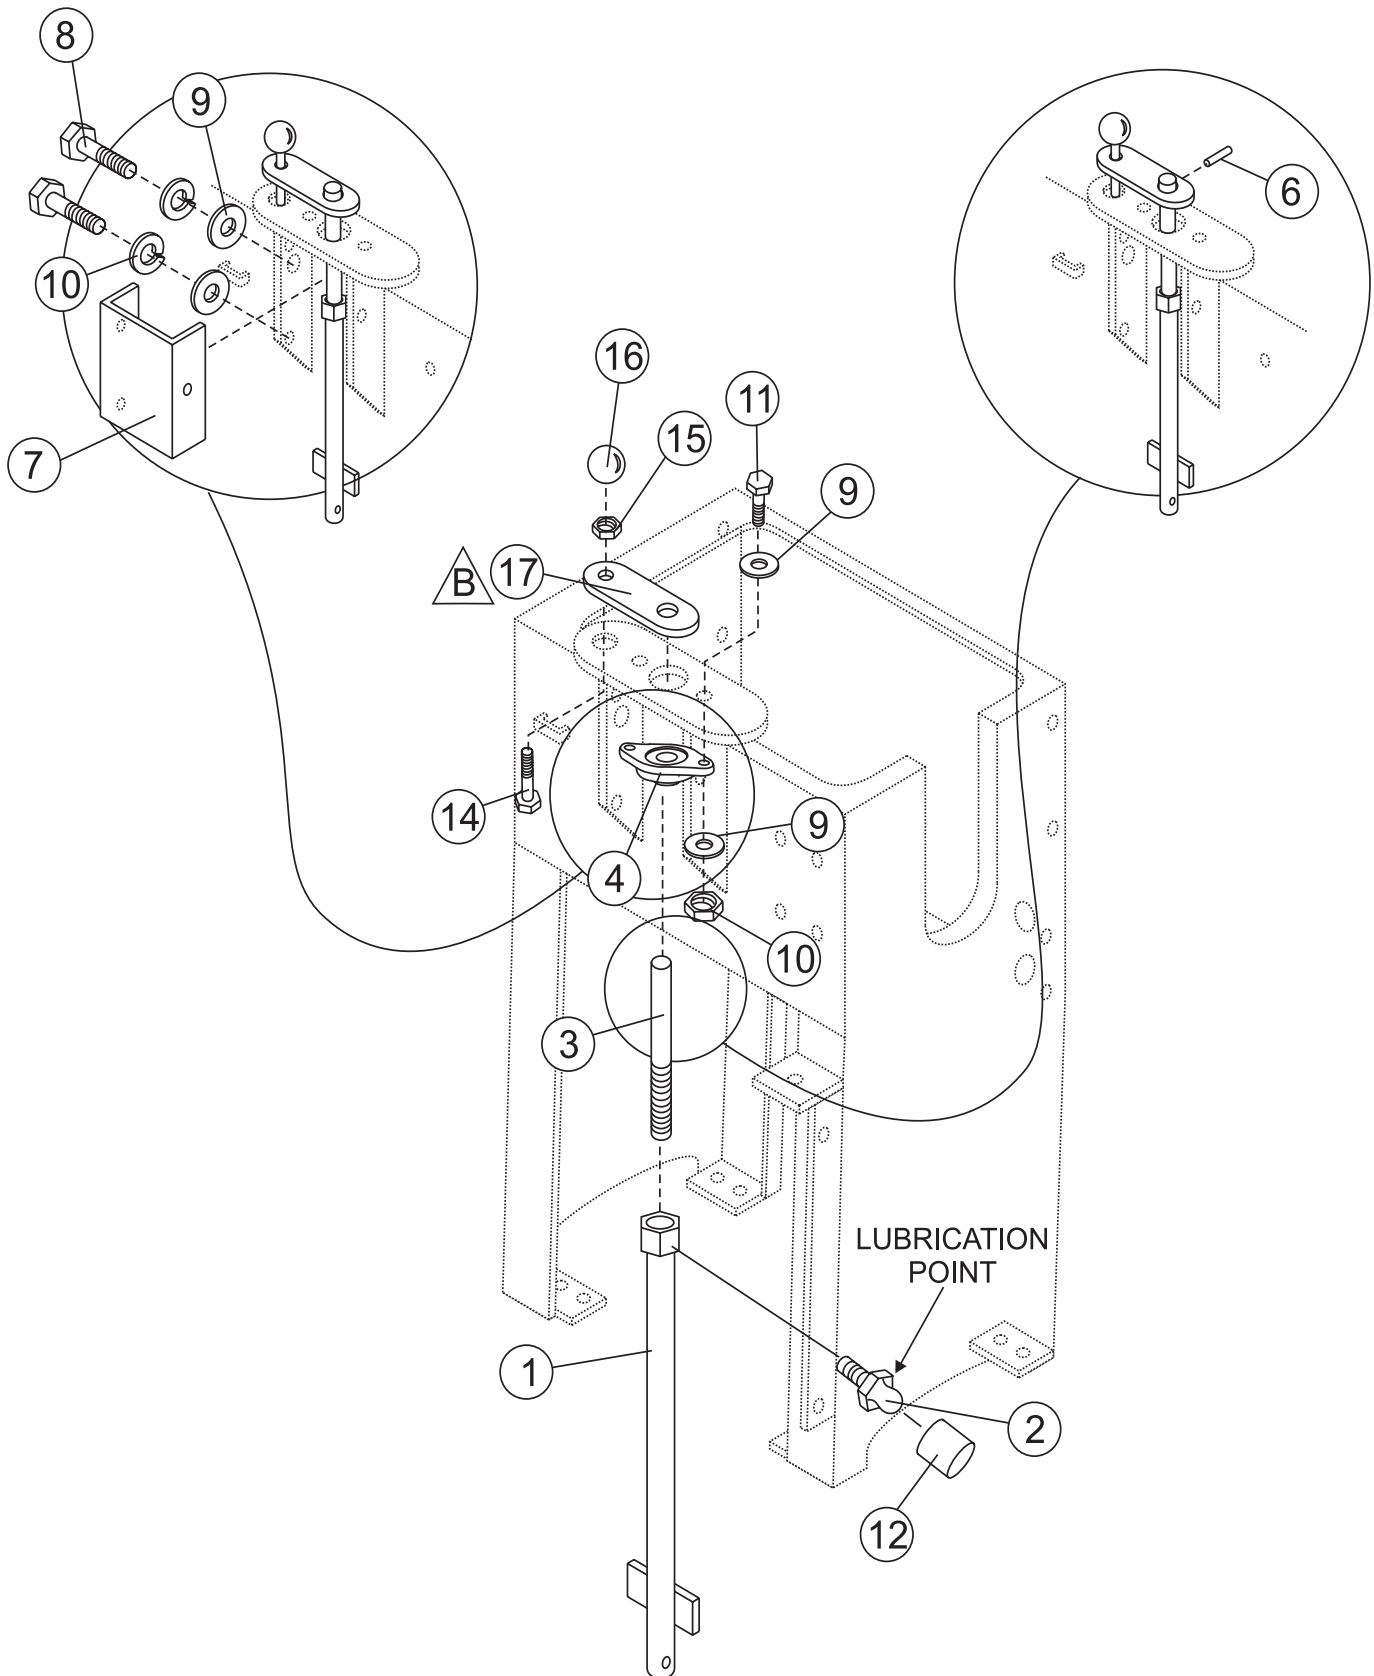


# STOW CUTTER 3 CE SAW — MANUAL RAISE AND LOWER ASSY. (20 IN.)

## JACK SCREW ASSY. 20" BLADE

<u>NO</u>	<u>PART NO</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
1	28793-352	JACKPOST ASSY. OBS USE 28793352	1	
2	2621	ZERK, GREASE STR. 1/4-28	1	
3	28806-001	JACKSCREW	1	
4	28083-001	BEARING, FLANGE	1	
5	28809-001	SPACER, JACKSCREW	1	
6	4568	PIN, ROLL 3/16 X 1	1	
7	28877-351	SCREW COVER ASSY., YELLOW	1	
8	1579	SCREW, HHC 1/4-20 X 1/2	3	
9	0948	WASHER, FLAT SAE 1/4	7	
10	0181 B	WASHER, LOCK 1/4 MED.	3	
11	0730	SCREW, HHC 1/4-20 X 1	2	
12	1162 A	CAP,GREASE ZERK, #2 YELLOW	1	
13	10024	NUT, NYLOC 1/4-20	2	
14	1121	SCREW, HHC 3/8-16 X 2 3/4	1	
15	1876	NUT, HEX JAM 3/8-16 CLASS 2B	1	
16	4403	KNOB,SHIFT	1	
17	28808-002	ARM-CRANK	1	

# STOW CUTTER 3 CE SAW — BATTERY ASSY.

BATTERY ASSY.

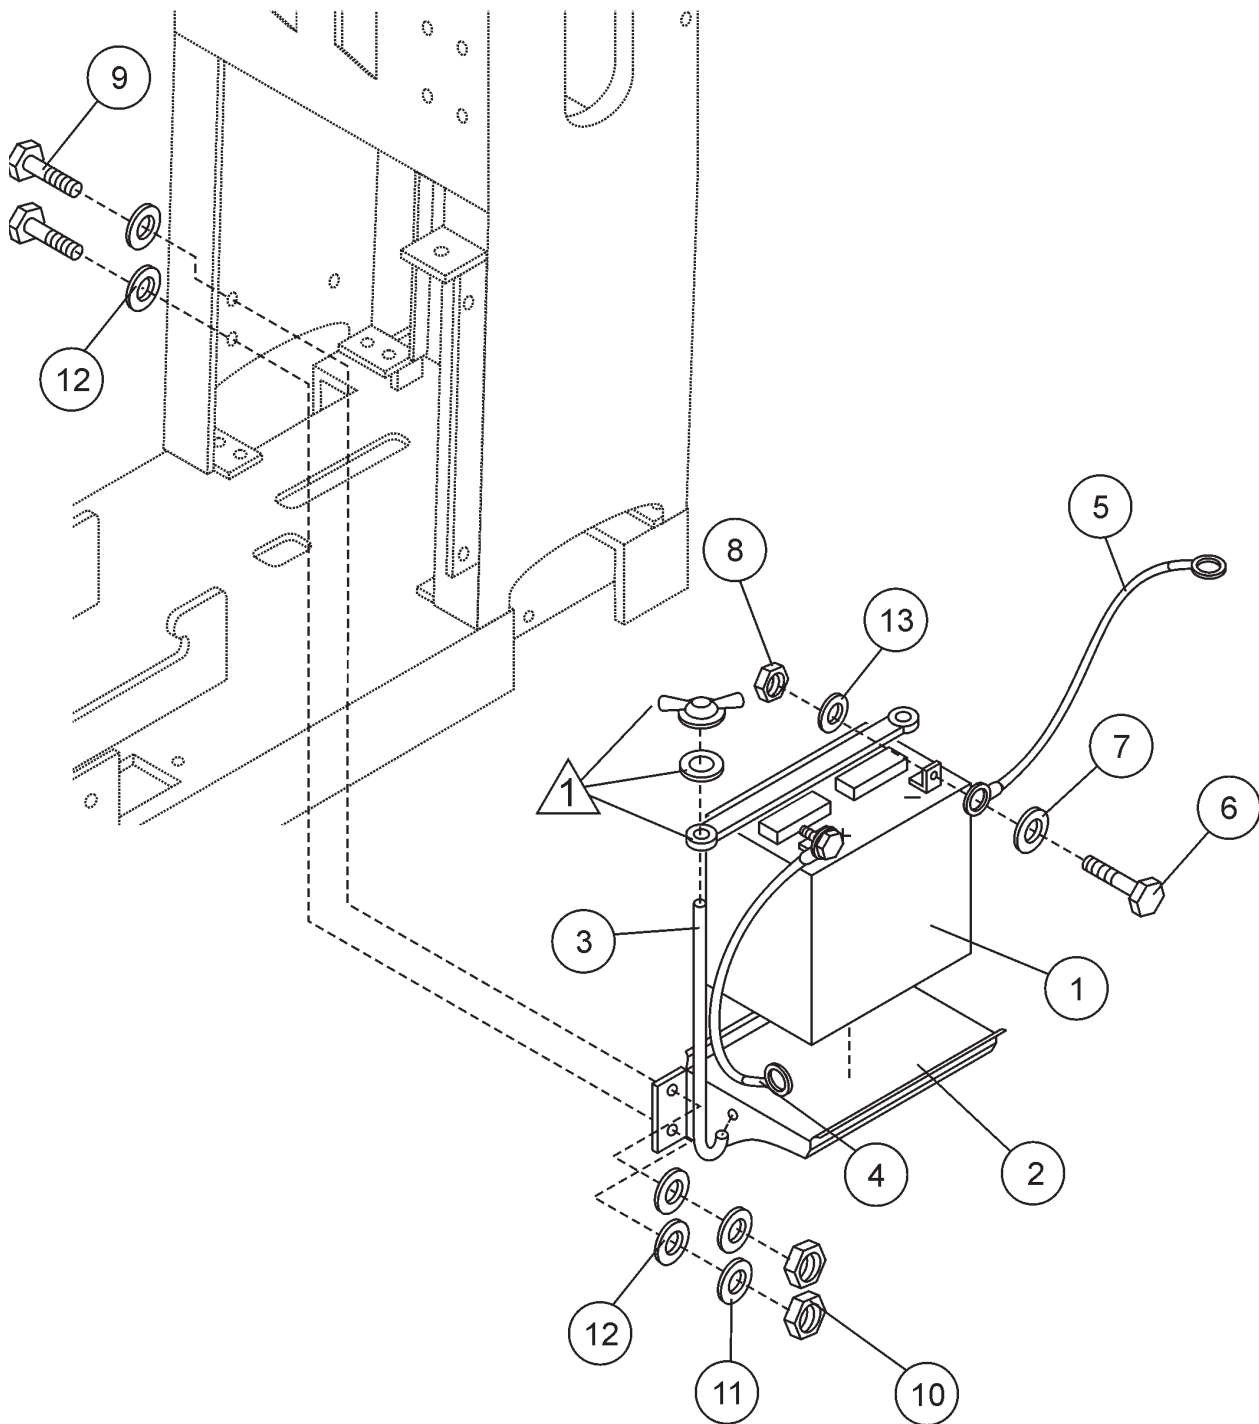

NOTES:

△ INCLUDED WITH  
ITEM 3


## STOW CUTTER 3 CE SAW — BATTERY ASSY.

### BATTERY ASSY.

<u>NO</u>	<u>PART NO</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
1	4671	BATTERY, WET GR.U1, GT-X GOLD LA	1	
2	28096-001	BRACKET BATTERY	1	
3	28095-401	BATTERY HOLD DOWN KIT 425-405	1	
4	28093-001	CABLE, BATTERY POS 6GA X 42" RING TONGUE	1	
5	28094-001	STRAP, GROUND	1	
6	0131 A	SCREW, HHC 1/4-20 X 3/4	2	
7	0948	WASHER, FLAT SAE 1/4	2	
8	0949	NUT, HEX FINISH 1/4-20 PLATED	2	
9	0655	SCREW, HHC 5/16-18 X 3/4	3	
10	0161 D	NUT, HEX FINISH 5/16-18	3	
11	0161 C	WASHER, LOCK 5/16 MED.	3	
12	0300 B	WASHER, FLAT SAE 5/16	6	
13	0181 B	WASHER, LOCK 1/4 MED.	2	

# STOW CUTTER 3 CE SAW — TRANSMISSION ENGAGE LEVER ASSY.

TRANSMISSION ENGAGE LEVER ASSY.

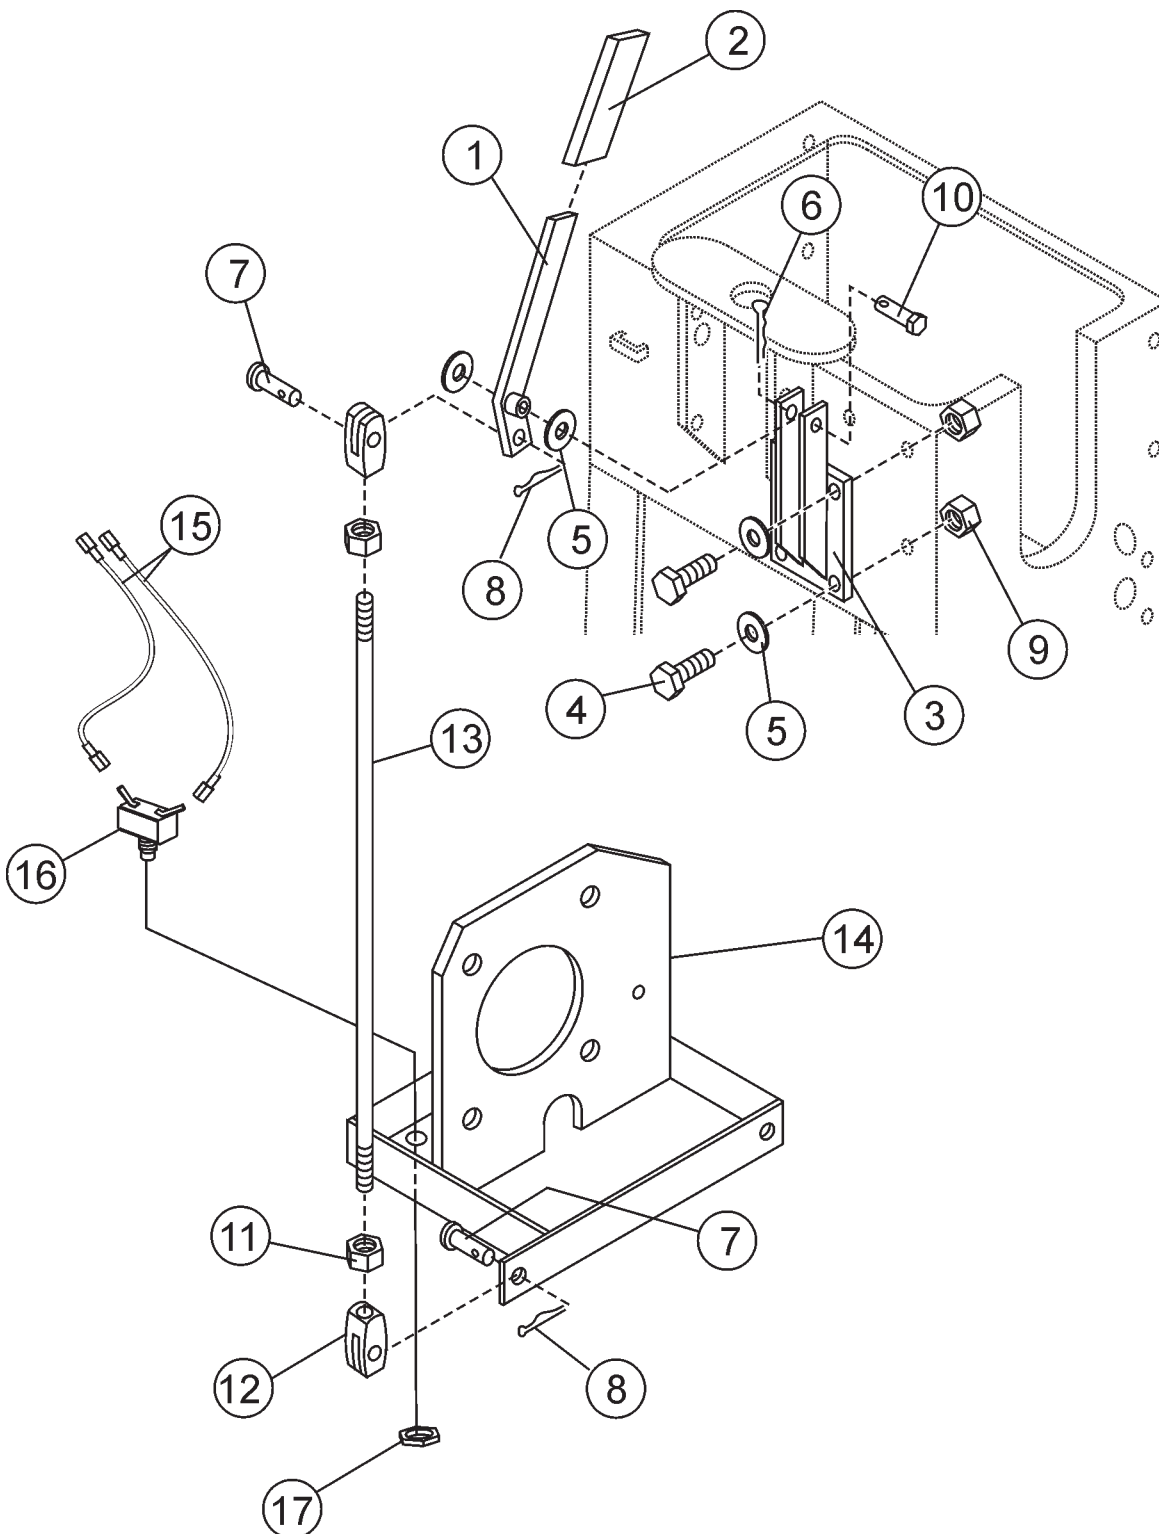




# STOW CUTTER 3 CE SAW — TRANSMISSION ENGAGE LEVER ASSY.

HYD. TRANSMISSION ENGAGE LEVER ASSY.

<u>NO</u>	<u>PART NO</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
1	28825-351	LEVER ASSY. TRANS. ENGAGE	1	
2	3360	GRIP, 1/4 X 1 BLACK	1	
3	28822-351	MOUNT ASSY., LEVER RED	1	
4	0655	SCREW, HHC 5/16-18 X 3/4	4	
5	10136	WASHER, FLAT SAE 3/8	6	
6	6014 B	PIN, COTTER 3/32D X 1.0	1	
7	08326-005	PIN, CLEVIS 5/16 X 1 O'ALL LENGHT PLATED	2	
8	07028-031	PIN, COTTER 3/32D X 1/2	2	
9	5283	NUT, NYLOC 5/16-18	8	
10	08326-019	PIN, CLEVIS 3/8 X 2" USEABLE LENGHT	1	
11	2199	NUT, HEX JAM 3/8-24	2	
12	08327-012	YOKE END, 3/8-24 X 2.50	2	
13	28830-001	ROD, TRANS. ENGINE	1	
14	28819-351	TRANS. BRACKET ASSY.	1	
15	35444	HARNES, NEUTRAL SWITCH .....	1	SAFETY ITEM
16	2584	SWITCH, PUSH BUTTON .....	1	SAFETY ITEM
17	2906	NUT, PANEL, 3/8 - 32 PLTD .....	1	SAFETY ITEM

# STOW CUTTER 3 CE SAW — HYDROSTATIC TRANSMISSION ASSY.

## HYDROSTATIC TRANSMISSION

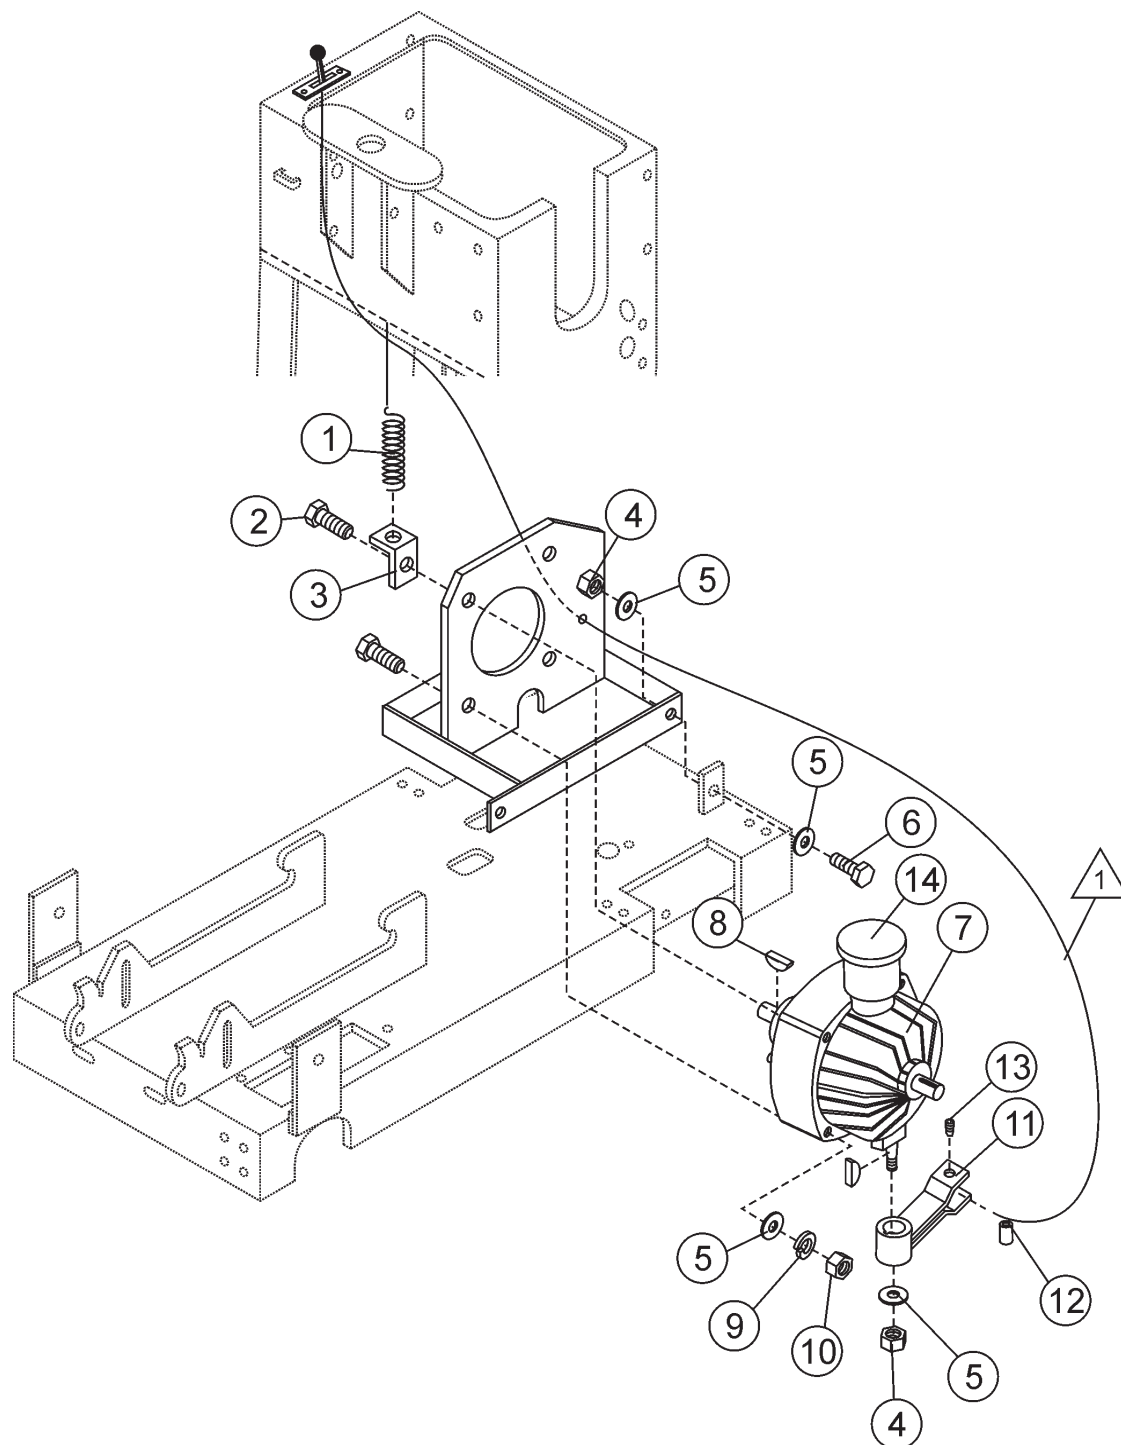

### NOTES:

-  INCLUDED WITH  
ITEM 6, CONSOLE ASSY.  
(SELF PROPELLED)


# STOW CUTTER 3 CE SAW — HYDROSTATIC TRANSMISSION ASSY.

## HYDROSTATIC TRANSMISSION ASSY.

<u>NO</u>	<u>PART NO</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
1	20559-001	SPRING, EXT. 3.38FL X 71OD X .105	1	
2	1493	SCREW, HHC 3/8-18 X 3.25	4	
3	28836-001	LINK, RETURN SPRING	1	
4	10133	NUT, NYLOC 3/8-16	7	
5	10136	WASHER, FLAT SAE 3/8	8	
6	1023	SCREW, HHC 3/8-16 X 1 1/4 GR 5	2	
7	15354	TRANSMISSION, HYD EATON	1	
8	1578	KEY, WOODRUFF #3	2	
9	0166 A	WASHER, LOCK 3/8 MED.	4	
10	1456	NUT, HEX FINISH 3/8-16	4	
11	28828-351	SHIFT ARM ASSY.	1	
12	28829-001	PIN, PIVOT	2	
13	10450	SCREW, SHS 10-32 X 1/4	1	
14	103530-000	CAP, TRANSMISSION	1	

# STOW CUTTER 3 CE SAW — HYDROSTATIC DRIVE ASSY.

HYDROSTATIC DRIVE ASSY.

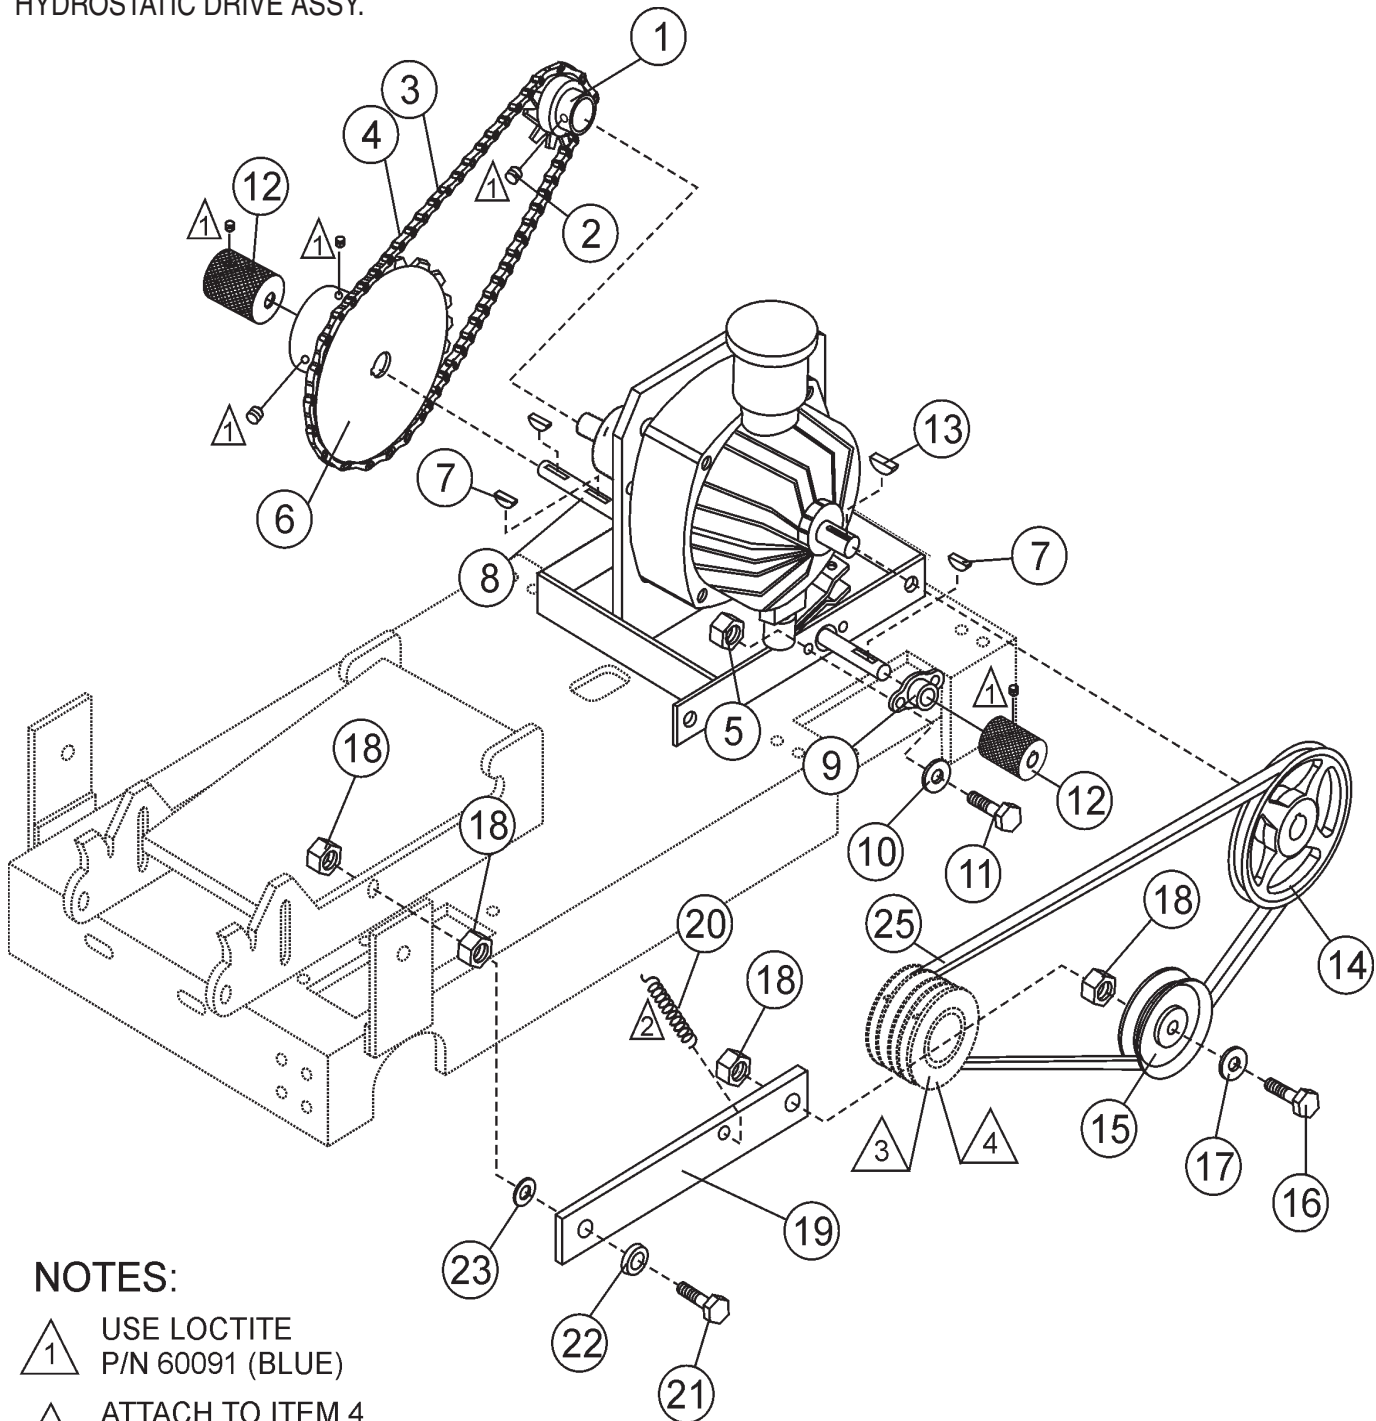

## NOTES:

- 1 USE LOCTITE  
P/N 60091 (BLUE)
- 2 ATTACH TO ITEM 4,  
20HP HONDA ENGINE ASSY.
- 3 SEE 13 HP ENGINE ASSY.,  
REQUIRES A 4-GROOVE  
PULLEY, ITEM 2.
- 4 SEE 20 HP ENGINE ASSY.,  
REQUIRES A SINGLE-GROOVE  
PULLEY, ITEM 6


# STOW CUTTER 3 CE SAW — HYDROSTATIC DRIVE ASSY.

## HYDROSTATIC DRIVE ASSY.

<u>NO</u>	<u>PART NO</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
1	23227-001	SPROCKET, TRANSMISSION 12 TOOTH MACH	1	
2	25039	SCREW, SHS 10-24 X 1/4	2	
3	23231-503	CHAIN, ROLLER .375 PITCH X 21.75	1	
4	10504-035	LINK, CHAIN	1	
5	5283	NUT, NYLOC 5/16-18	8	
6	28084-001	SPROCKET, 3548 X 3/4	1	
7	0126	KEY, WOODRUFF #9	3	
8	28832-001	JACKSHAFT	1	
9	23284-001	BEARING, FLANGE .34SQ x 3/4ID	2	
10	0300 B	WASHER, FLAT SAE 5/16	4	
11	2623	SCREW, HHC 5/16-18 X 1-1/4	4	
12	28831-001	GEAR, DRIVE	2	
13	1578	KEY, WOODRUFF #3	1	
14	28087-001	PULLEY, MA60 X 17MM	1	
15	25682-001	IDLER PULLEY	1	
16	9154	SCREW, HHC 3/8-16 X 1 3/4	1	
17	10136	WASHER, FLAT SAE 3/8	1	
18	10133	NUT, NYLOC 3/8-16	4	
19	23303-001	IDLER ARM	1	
20	23230-001	SPRING EXT. IDLE	1	
21	1284	SCREW, HHC 3/8-16 X 1 1/2	1	
22	18574-004	WASHER, BELLEVILLE 3/8	1	
23	28864-001	WASHER, FIBRE	1	
25	07055-050	V-BELT, TRANSMISSION 4L500 .....	1	..... 13HP SELF-PROP. MODELS
25	07055-051	V-BELT, TRANSMISSION 4L510 .....	1	..... 20HP SELF-PROP. MODELS

# HONDA GX390K1QWT2 ENGINE — AIR CLEANER ASSY.

AIR CLEANER ASSY.

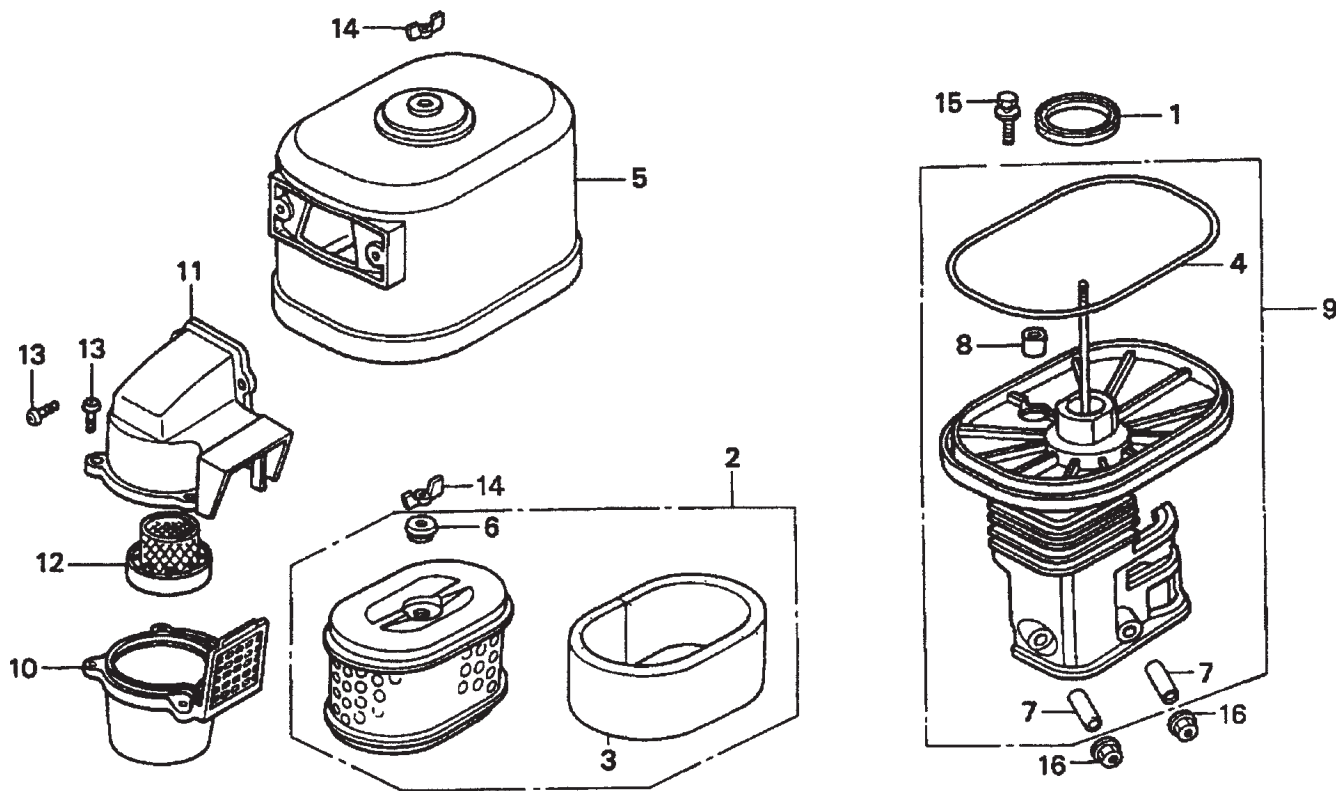


# HONDA GX390K1QWT2 ENGINE — AIR CLEANER ASSY.

## AIR CLEANER ASSY.

<u>NO.</u>	<u>PART NO.</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
1	16271ZE2000	GASKET, ELBOW	1	
2	17210ZE3505	ELEMENT, AIR CLEANER .....	1	INCLUDES ITEMS W/*
3*	17218ZE3505	FILTER, OUTER	1	
4#	17219HA2405	SEAL, AIR CLEANER COVER	1	
5	17230ZE3841	COVER, AIR CLEANER (CYCLONE)	1	
6*	17232891000	GROMMET, AIR CLEANER	1	
7#	17238ZE2310	COLLAR, AIR CLEANER	2	
8#	17239ZE3840	COLLAR B, AIR CLEANER	1	
9	17410ZE3840	ELBOW, AIR CLEANER .....	1	INCLUDES ITEMS W/#
10	17470ZE3841	CASE, PRE AIR CLEANER	1	
11	17475ZE3841	CAP, PRE AIR CLEANER	1	
12	17476ZE3841	GUIDE, PRE AIR CLEANER	1	
13	90142MB0000	SCREW, PAN 5X16.5	5	
14	90325044000	WINGNUT, TOOL BOX SETTING	2	
15	90009ZE2003	BOLT- WASHER 6X22	1	
16	0405006000	NUT, FLANGE 6MM	2	

# HONDA GX390K1QWT2 ENGINE — CAMSHAFT ASSY.

CAMSHAFT ASSY.

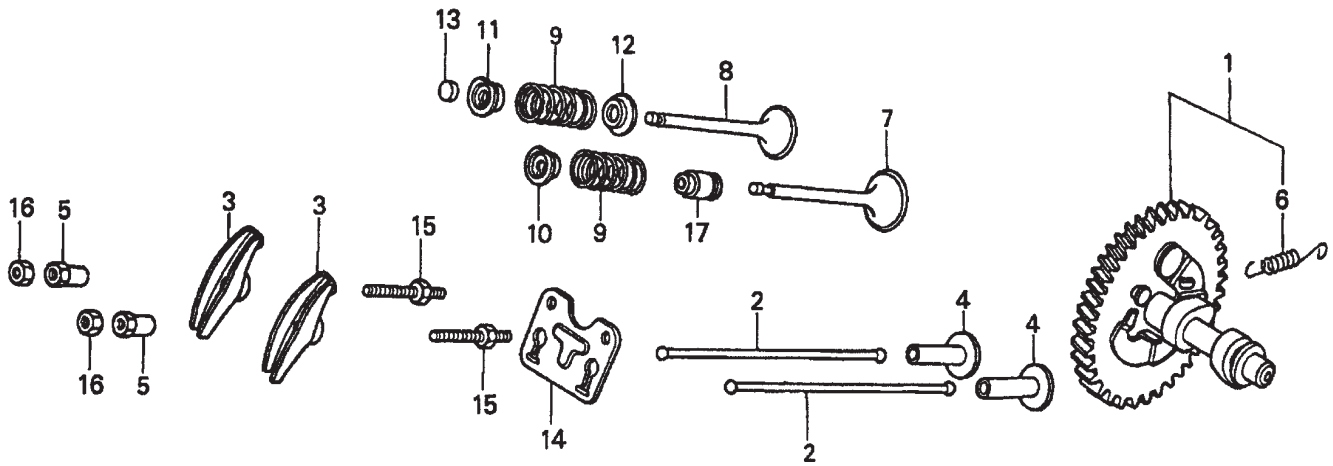




# HONDA GX390K1QWT2 ENGINE — CAMSHAFT ASSY.

## CAMSHAFT ASSY.

<u>NO.</u>	<u>PART NO.</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
1	14100ZF6W01	CAMSHAFT ASSEMBLY .....	1	INCLUDES ITEM W/*
2	14410ZE3013	ROD, PUSH	2	
3	14431ZE2010	ARM, VALVE ROCKER	2	
4	14441ZE2000	LIFTER, VALVE	2	
5	14451ZE1013	PIVOT, ROCKER ARM	2	
6*	14568ZE1000	SPRING, WEIGHT RETURN	1	
7	14711ZE3000	VALVE, INTAKE	1	
8	14721ZE3000	VALVE, EXHAUST	1	
9	14751ZE2003	SPRING, VALVE	2	
10	14771ZE2000	RETAINER, INTAKE VALVE SPRING	1	
11	14773ZE2000	RETAINER, EXHAUST VALVE SPRING	1	
12	14775ZE2010	SEAT, VALVE SPRING	1	
13	14781ZE2000	ROTATOR, VALVE	1	
14	14791ZE2010	PLATE, PUSH ROD GUIDE	1	
15	90012ZE0010	BOLT, PIVOT 8MM	2	
16	90206ZE1000	NUT, PIVOT ADJ.	2	
17	12209ZE8003	SEAL, VALVE STEM	1	

# HONDA GX390K1QWT2 ENGINE — CARBURETOR ASSY.

CARBURETOR ASSY.

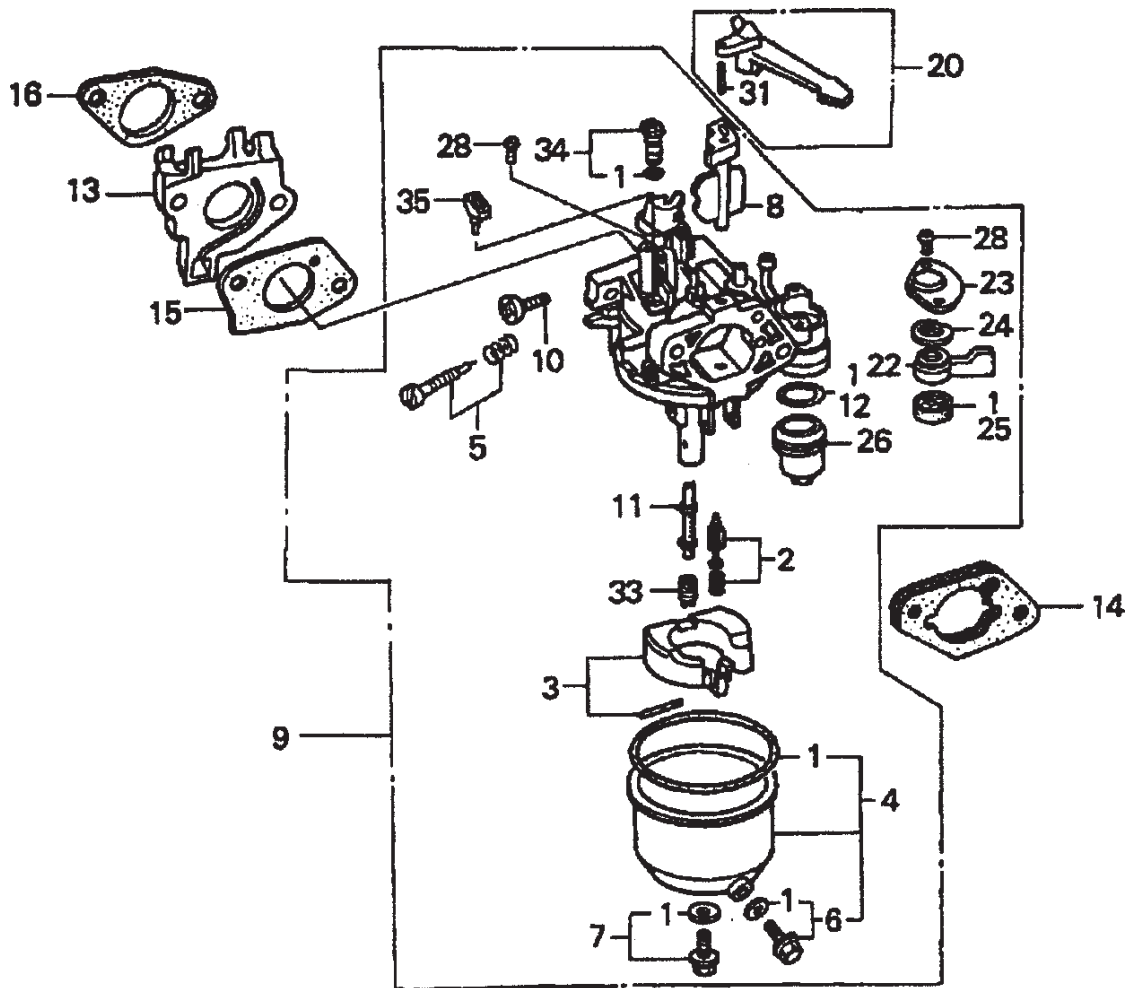


# HONDA GX390K1QWT2 ENGINE — CARBURETOR ASSY.

## CARBURETOR ASSY.

<u>NO.</u>	<u>PART NO.</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
1*#+	16010ZE2812	GASKET SET	1	
2*	16011ZA0931	VALVE SET, FLOAT	1	
3*	16013ZA0931	FLOAT SET	1	
4*	16015ZE8005	CHAMBER SET, FLOAT .....	1	INCLUDES ITEMS W/+
5*	16016ZH7W01	SCREW SET	1	
6*+	16024ZE1811	SCREW SET, DRAIN .....	1	INCLUDES ITEM W/#
7*	16028ZE0005	SCREW SET B .....	1	INCLUDES ITEM W/#
8*	16044ZE3W20	CHOKE SET	1	
9	16100ZF6V21	CARBURETOR ASSY. (BE85C B) .....	1	INCLUDES ITEMS W/*
10*	16124ZE0005	SCREW, THROTTLE STOP	1	
11*	16166ZF6W10	NOZZLE, MAIN	1	
12*	16173001004	GASKET, FUEL STRAINER CUP	1	
13	16211ZF6000	INSULATOR, CARBURETOR	1	
14	16220ZA0702	SPACER, CARBURETOR	1	
15	16221ZF6800	GASKET, CARBURETOR	1	
16	16223ZE3W00	GASKET, INSULATOR	1	
20	16610ZE1000	LEVER, CHOKE (STD) .....	1	INCLUDES ITEM W/\$
22*	16953ZE1812	LEVER, VALVE	1	
23*	16954ZE1812	PLATE, LEVER SETTING	1	
24*	16956ZE1811	SPRING, VALVE LEVER	1	
25*	16957ZE1812	GASKET, VALVE	1	
26*	16967ZE0811	CUP, FUEL STRAINER	1	
28*	93500030060H	SCREW, PAN (3X6)	2	
31\$	9430520122	PIN, SPRING (2X12)	1	
33*	99101ZH80950	JET, MAIN (#95) (OPTIONAL)	1	
33	99101ZH80980	JET, MAIN (#98) (OPTIONAL)	1	
33*	99101ZH81000	JET, MAIN (#100)	1	
34*	99204ZA00450	JET SET, PILOT (#45) .....	1	INCLUDES ITEM W/#
35*	16172ZE3W10	COLLAR, SET	1	

# HONDA GX390K1QWT2 ENGINE — CONTROL ASSY.

CONTROL ASSY.

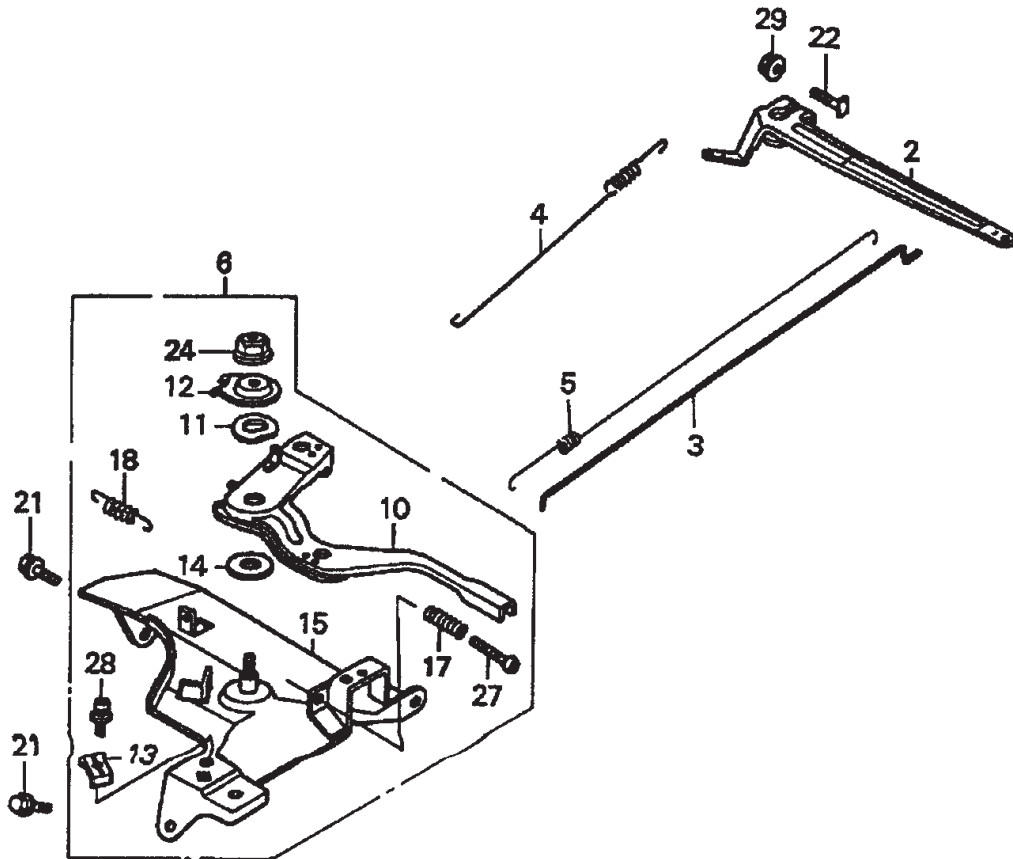


# HONDA GX390K1QWT2 ENGINE — CONTROL ASSY.

## CONTROL ASSY.

<u>NO.</u>	<u>PART NO.</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
2	16551ZE3000	ARM, GOVERNOR	1	
3	16555ZE3000	ROD, GOVERNOR	1	
4	16561ZE3000	SPRING, GOVERNOR	1	
5	16562ZE3000	SPRING, THROTTLE RETURN	1	
6	16570ZE3W20	CONTROL ASSY. (REMOTE) .....	1	INCLUDES ITEMS W/*
10*	16571ZE3W00	LEVER, CONTROL	1	
11*	16574ZE1000	SPRING, LEVER	1	
12*	16575ZE2W00	WASHER, CONTROL LEVER	1	
13*	16576891000	HOLDER, CABLE	1	
14*	16578ZE1000	SPACER, CONTROL LEVER	1	
15*	16581ZE3W00	BASE, CONTROL	1	
17*	16584883300	SPRING, CONTROL ADJUSTING	1	
18*	16592883310	SPRING, CABLE RETURN	1	
21	90013883000	BOLT, FLANGE (6X12) (CT200)	2	
22	90015ZE5010	BOLT, GOVERNOR ARM	1	
24*	90114SA0000	NUT, SELF-LOCK (6MM)	1	
27*	93500050320A	SCREW, PAN (5X32)	1	
28*	93500050160A	SCREW, PAN (5X16)	1	
29	9405006000	NUT, FLANGE (6MM)	1	

# HONDA GX390K1QWT2 ENGINE — CRANKCASE ASSY.

## CRANKCASE COVER ASSY.

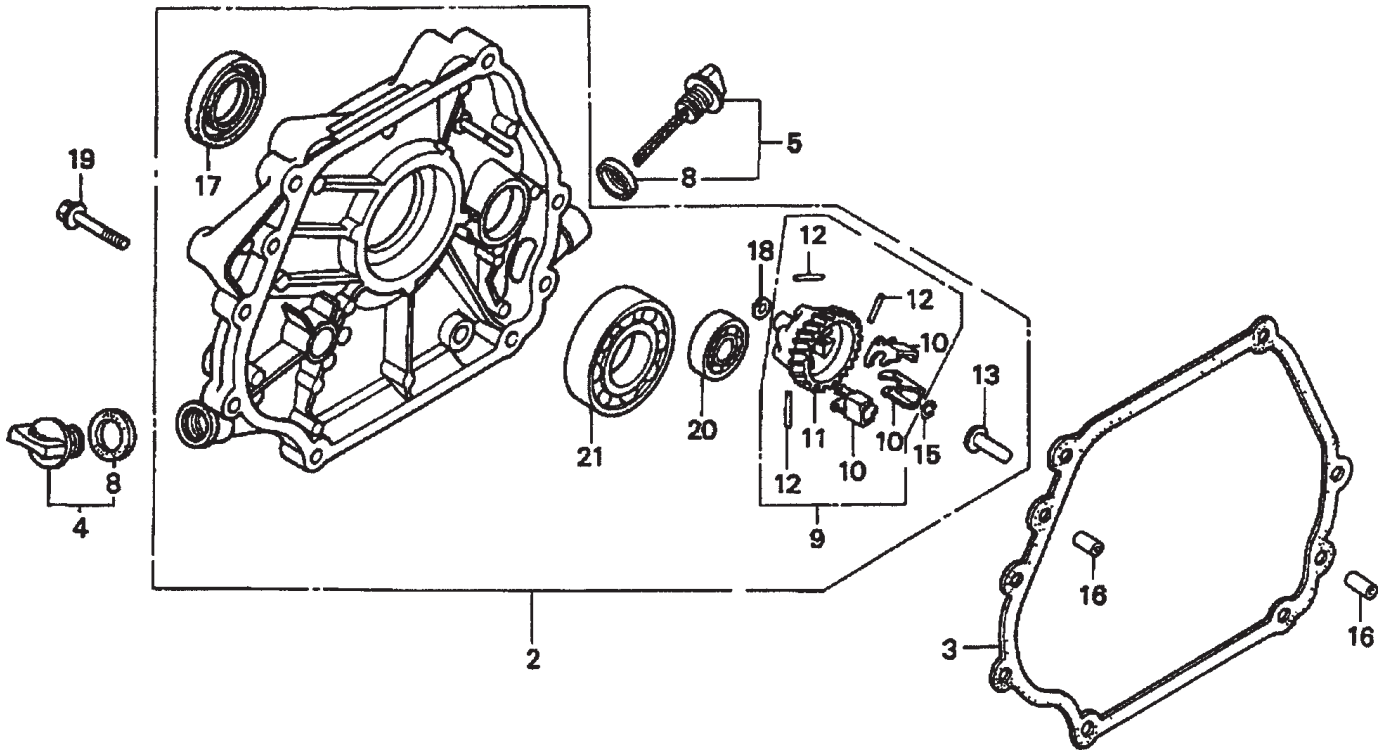


# HONDA GX390K1QWT2 ENGINE — CRANKCASE ASSY.

## CRANKCASE COVER ASSY.

<u>NO.</u>	<u>PART NO.</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
2	11300ZE3602	COVER ASSY., CRANKCASE (Q-TYPE).....	1	INCLUDES ITEMS W/*
3	11381ZE3801	GASKET, CASE COVER	1	
4	15600ZG4003	CAP ASSY., OIL FILLER .....	1	INCLUDES ITEM W/#
5	15600735003	CAP ASSY., OIL FILLER .....	1	INCLUDES ITEM W/#
8#	15625ZE1003	GASKET, OIL FILLER CAP	2	
9	16510ZE3000	GOVERNOR ASSY.....	1	INCLUDES ITEMS W/+
10*+	16511ZE8000	WEIGHT, GOVERNOR	3	
11*+	16512ZE3000	HOLDER, GOVERNOR WEIGHT	1	
12*+	16513ZE2000	PIN, GOVERNOR WEIGHT	3	
13*	16531ZE2000	SLIDER, GOVERNOR	1	
13*	16531Z0A000	SLIDER, GOVERNOR	1	
15*	90602ZE1000	CLIP, GOVERNOR HOLDER	1	
16	90701HC4000	PIN, DOWEL (8X12)	2	
17*	91201ZE3004	OIL SEAL (35X52X8)	1	
18*	9410106800	WASHER, PLAIN (6MM)	1	
19	957010804000	BOLT, FLANGE (8X40)	7	
20*	961006202000	BEARING, RADIAL BALL (6202)	1	
21*	961006207000	BEARING, RADIAL BALL (6207)	1	

# HONDA GX390K1QWT2 ENGINE — CRANKSHAFT ASSY.

CRANKSHAFT ASSY.

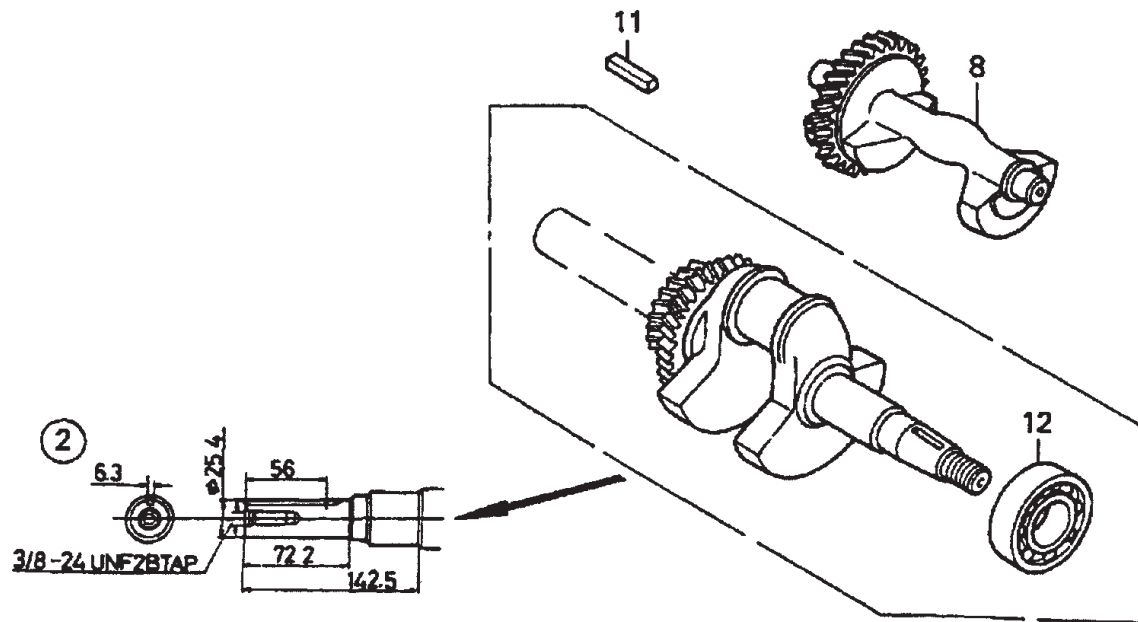




# HONDA GX390K1QWT2 ENGINE — CRANKSHAFT ASSY.

## CRANKSHAFT ASSY.

<u>NO.</u>	<u>PART NO.</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
2	13310ZF6W10	CRANKSHAFT (Q-TYPE).....	1	INCLUDES ITEM W/*
8	13351ZE3010	WEIGHT, BALANCER	1	
11	90745ZE2600	KEY(6.3X6.3X43)	1	
12*	91001ZF6003	BEARING, RADIAL BALL (6207S)	1	

# HONDA GX390K1QWT2 ENGINE — CYLINDER BARREL ASSY.

CYLINDER BARREL ASSY.

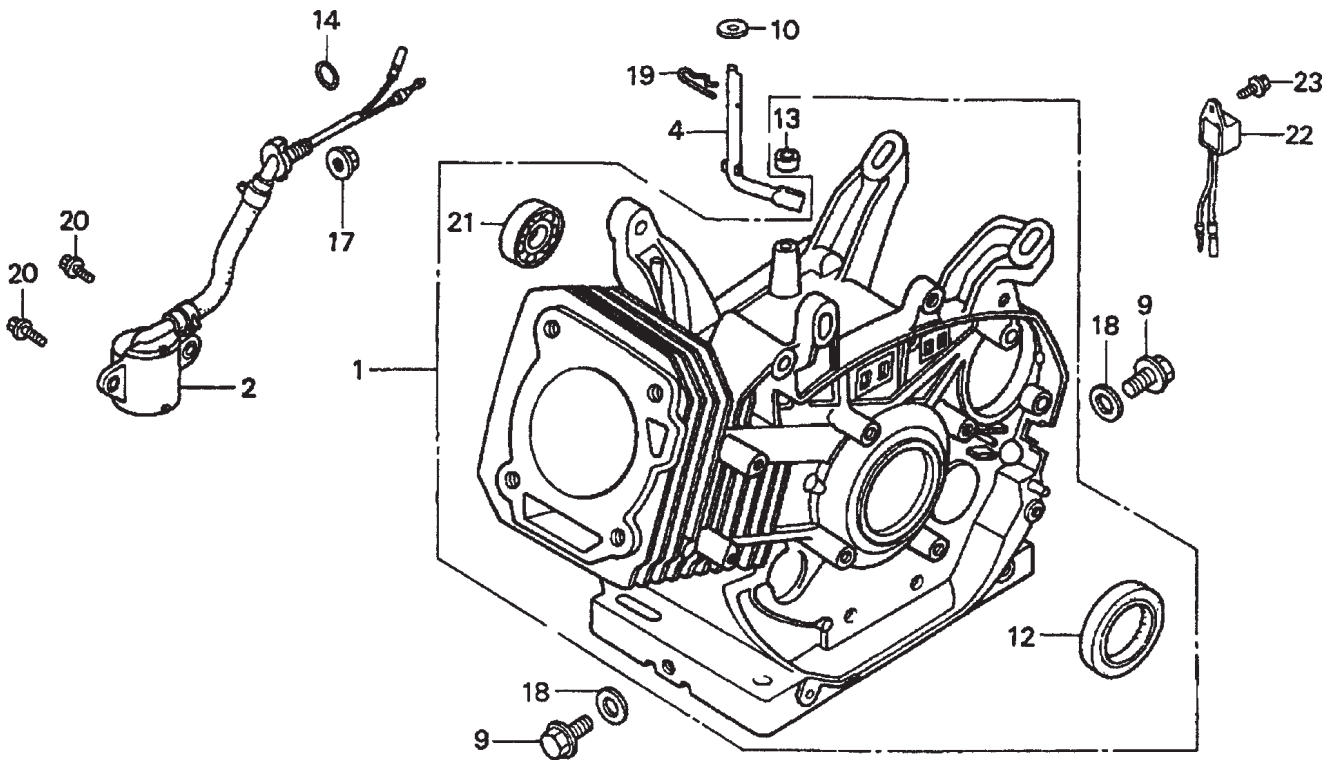


# HONDA GX390K1QWT2 ENGINE — CYLINDER BARREL ASSY.

## CYLINDER BARREL ASSY.

<u>NO.</u>	<u>PART NO.</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
1	12000ZF6W13	CYLINDER ASSY. (ALERT) .....	1	INCLUDES ITEMS W/*
2	15510ZE2043	SWITCH ASSY., OIL LEVEL	1	
4	16541ZE3010	SHAFT, GOVERNOR ARM	1	
9	90131896650	BOLT, DRAIN PLUG	2	
10	90446KE1000	WASHER (8.2X17X0.8)	1	
12*	91201ZE3004	OIL SEAL (35X52X8)	1	
13*	91201ZE9003	OIL SEAL (8X14X5)	1	
14	91353671003	O-RING (13.5X1.5) (ARAI)	1	
17	9405010000	NUT, FLANGE (10MM)	1	
18	9410912000	WASHER, DRAIN PLUG (12MM)	2	
19	9425110000	PIN, LOCK (10MM)	1	
20	957010601200	BOLT, FLANGE (6X12)	2	
21*	961006202000	BEARING, RADIAL BALL (6202)	1	
22	34150ZH7003	ALERT UNIT, OIL	1	
23	90013883000	BOLT, FLANGE (6X12) (CT200)	1	

# HONDA GX390K1QWT2 ENGINE — CYLINDER HEAD ASSY.

CYLINDER HEAD ASSY.

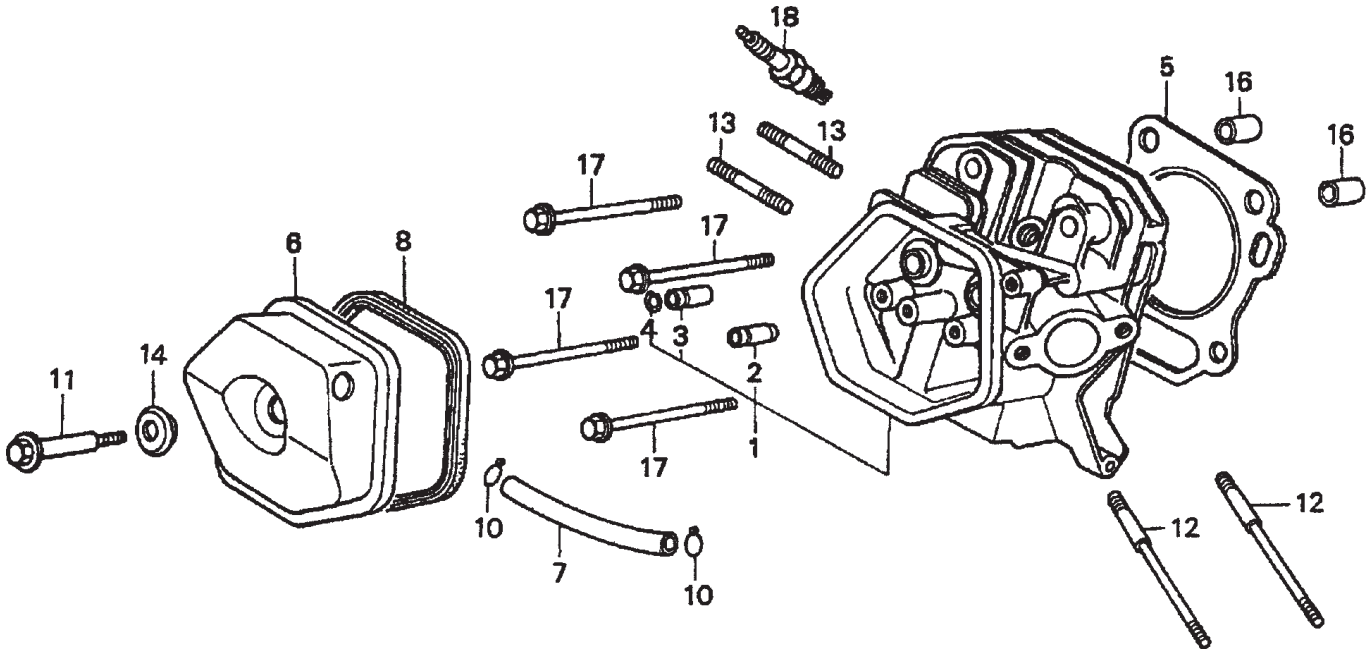


# HONDA GX390K1QWT2 ENGINE — CYLINDER HEAD ASSY.

## CYLINDER HEAD ASSY.

<u>NO.</u>	<u>PART NO.</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
1	12200ZF6W01	CYLINDER HEAD .....	1 .....	INCLUDES ITEMS W/*
2*	12204ZE2306	GUIDE, VALVE (OS) (OPTIONAL)	1	
3*	12205ZE2305	GUIDE, EX. VALVE (OS) (OPTIONAL)	1	
4*	12216ZE2300	CLIP, VALVE GUIDE	1	
5	12251ZF6W00	GASKET, CYLINDER HEAD	1	
6	12310ZE3791	COVER, HEAD	1	
7	12315ZE3840	TUBE, BREATHER	1	
8	12391ZE2020	GASKET, CYLINDER HEAD COVER	1	
10	17316611000	CLIP, BREATHER TUBE	2	
11	90014ZE2000	BOLT, HEAD COVER	1	
12	90042ZE8000	BOLT, STUD (8X131.5)	2	
13	92900080320E	BOLT 2, STUD (8X32)	2	
14	90441ZE2010	WASHER, HEAD COVER	1	
16	9430112200	PIN A, DOWEL (12X20)	2	
17	957011008000	BOLT, FLANGE (10X80)	4	
18	9807955846	SPARK PLUG (BPR5ES) (NGK) (OPT.)	1	
18	9807956846	SPARK PLUG (BPR6ES) (NGK)	1	

# HONDA GX390K1QWT2 ENGINE — FAN COVER ASSY.

FAN COVER ASSY.

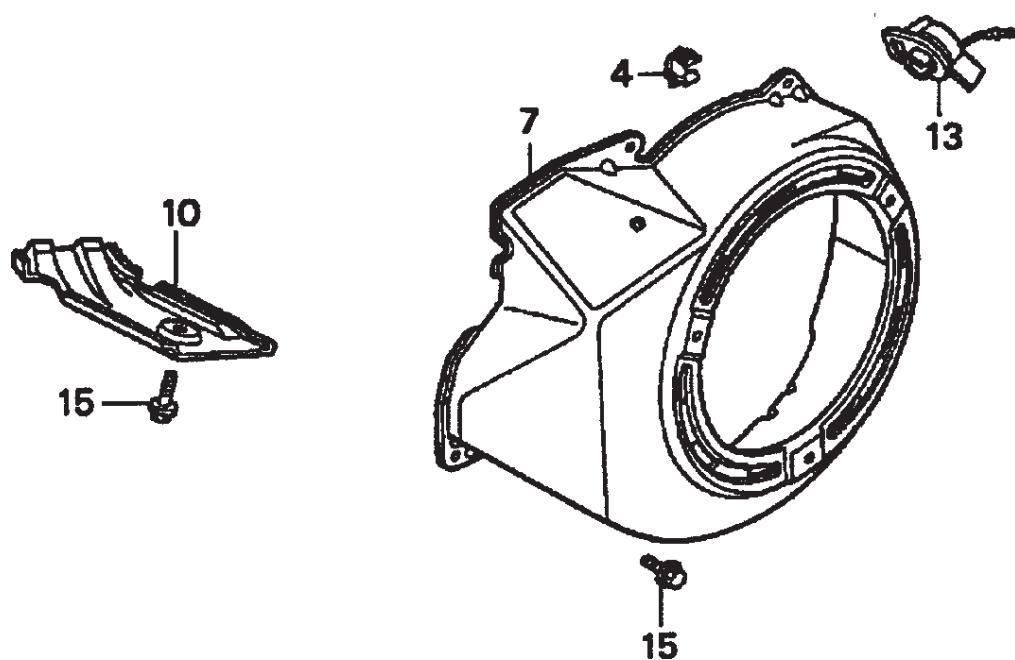


# HONDA GX390K1QWT2 ENGINE — FAN COVER ASSY.

FAN COVER ASSY.

<u>NO.</u>	<u>PART NO.</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
4	16731ZE2003	CLIP, TUBE	1	
7	19610ZE3010ZB	COVER, FAN *NH1* (BLACK)	1	
10	19631ZE3W00	SHROUD	1	
13	36100ZH7003	SWITCH ASSY., ENGINE STOP	1	
15	90013883000	BOLT, FLANGE (6X12) (CT200)	6	

# HONDA GX390K1QWT2 ENGINE — FLYWHEEL ASSY.

FLYWHEEL ASSY.

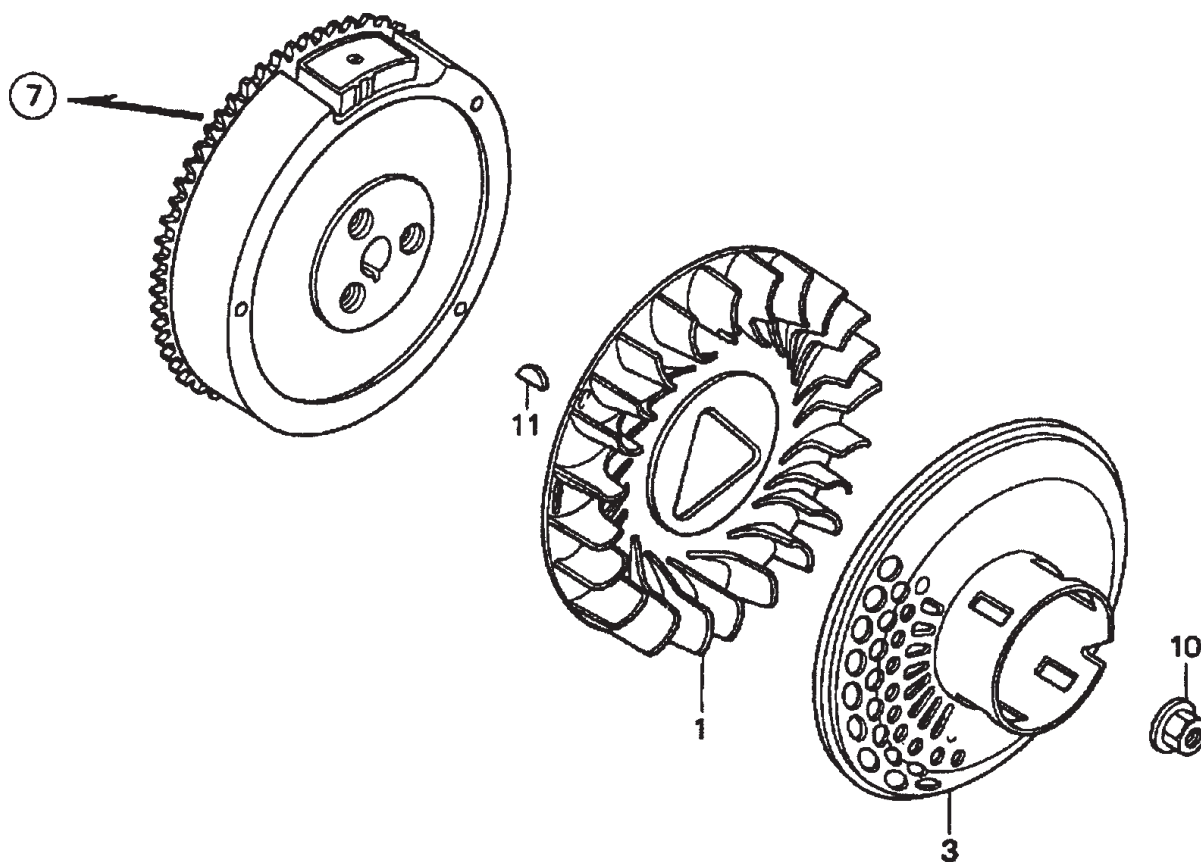




## HONDA GX390K1QWT2 ENGINE — FLYWHEEL ASSY.

FLYWHEEL ASSY.

<u>NO.</u>	<u>PART NO.</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
1	19511ZE3000	FAN, COOLING	1	
3	28450ZE3W11	PULLEY, STARTER (SCREEN GRID)	1	
7	31100ZE3701	FLYWHEEL	1	
10	90201ZE3V00	NUT, SPECIAL (16MM) (1)	1	
11	90741ZE2000	KEY, SPECIAL WOODRUFF (25X18)	1	

# HONDA GX390K1QWT2 ENGINE — FUEL TANK ASSY.

FUEL TANK ASSY.

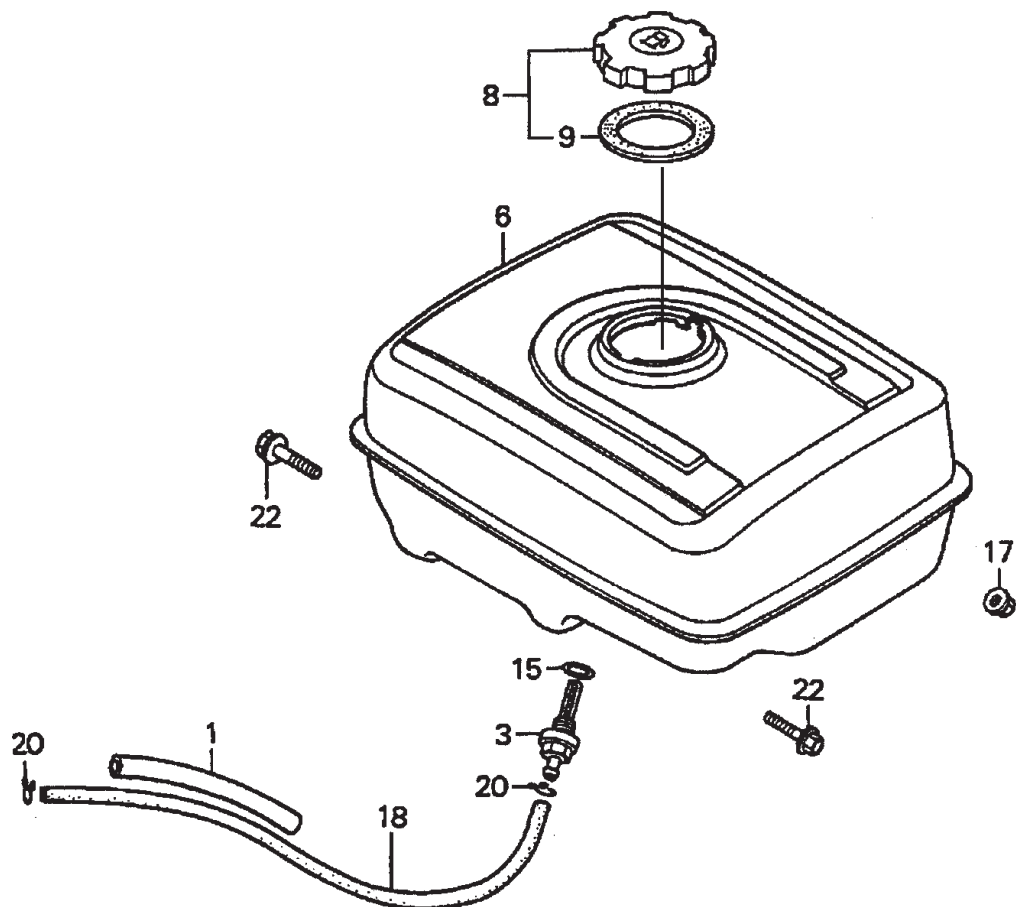


# HONDA GX390K1QWT2 ENGINE — FUEL TANK ASSY.

## FUEL TANK ASSY.

<u>NO.</u>	<u>PART NO.</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
1	16854ZH8000	RUBBER, SUPPORTER (107MM)	1	
3	16955ZE1000	JOINT, FUEL TANK	1	
6	17510ZE3010ZB	TANK, FUEL *NH1* (BLACK)	1	
8	17620ZH7023	CAP, FUEL FILLER .....	1	INCLUDES ITEM W/*
9*	17631ZH7003	GASKET, FUEL FILLER CAP	1	
15	91353671003	O-RING (13.5X1.5) (ARAI)	1	
17	9405008000	NUT, FLANGE (8MM)	2	
18	950014500360M	BULK HOSE, FUEL (4.5X3000) (4.5X235)	1	
20	9500202080	CLIP, TUBE (B8)	2	
22	957010802500	BOLT, FLANGE (8X25)	2	

# HONDA GX390K1QWT2 ENGINE — IGNITION COIL ASSY.

IGNITION COIL ASSY.

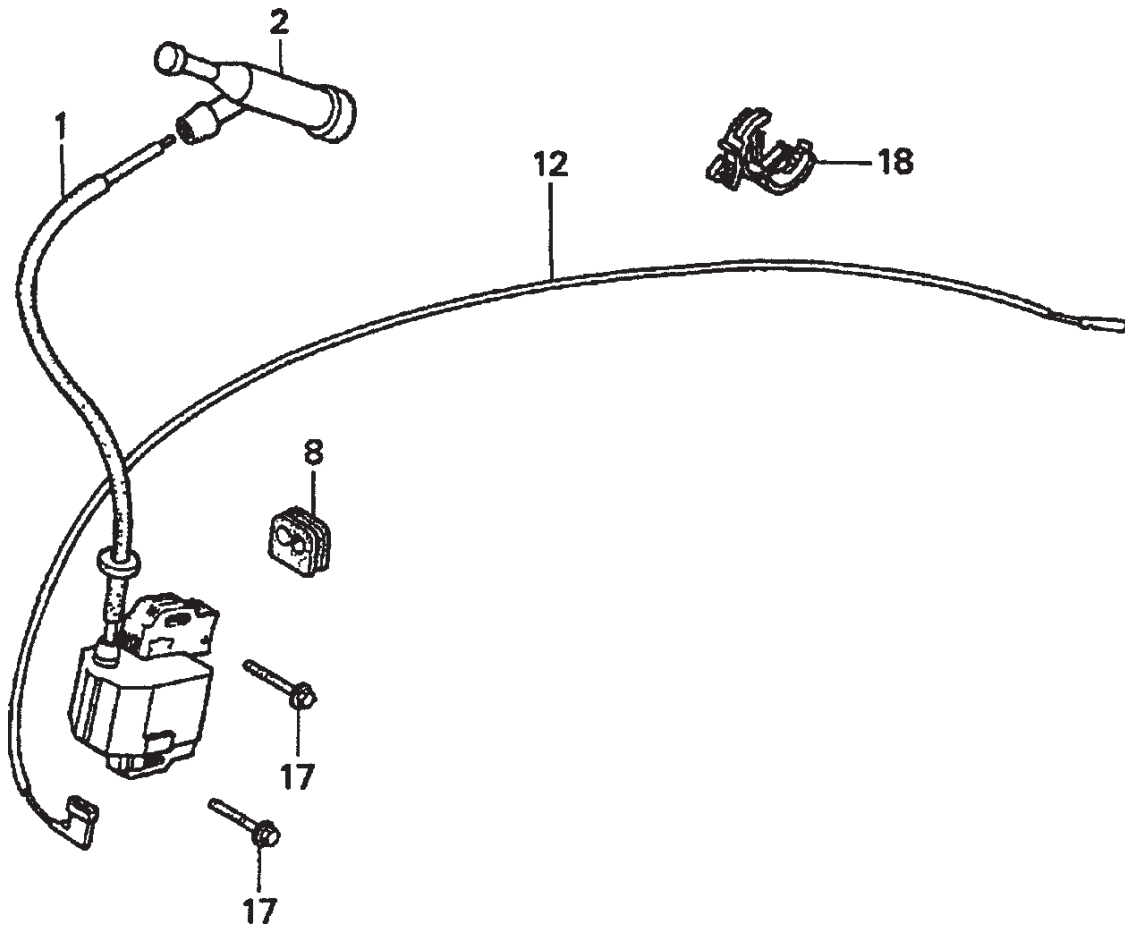


# HONDA GX390K1QWT2 ENGINE — IGNITION COIL ASSY.

IGNITION COIL ASSY.

<u>NO.</u>	<u>PART NO.</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
1	30500ZF6W01	COIL ASSY., IGNITION	1	
2	30700ZE1013	CAP ASSY., NOISE SUPPRESSOR	1	
8	31512ZE2000	GROMMET, WIRE	1	
12	36101ZE2701	WIRE, STOP SWITCH (430MM)	1	
17	90015883000	BOLT, FLANGE (6X28)	2	
18	90684ZA0601	CLIP, WIRE HARNESS	1	

# HONDA GX390K1QWT2 ENGINE — MUFFLER ASSY.

MUFFLER (1) ASSY.

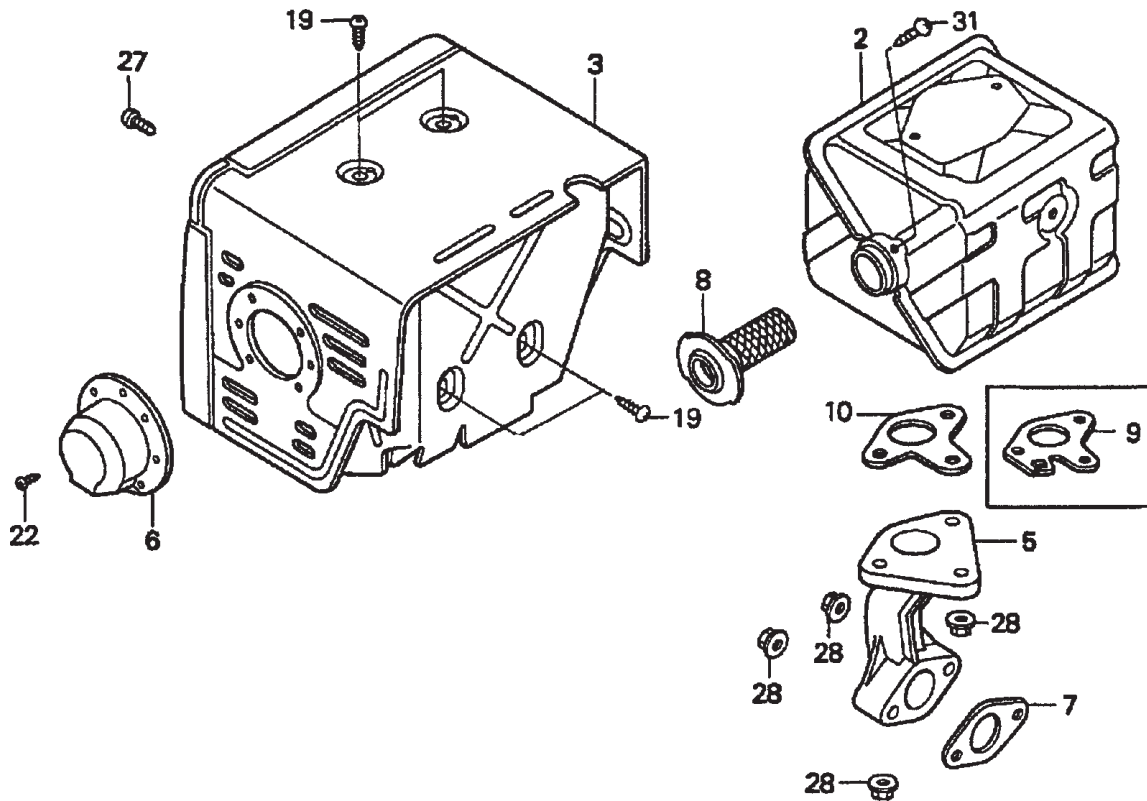


## HONDA GX390K1QWT2 ENGINE — MUFFLER ASSY.

MUFFLER (1) ASSY.

<u>NO.</u>	<u>PART NO.</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
2	18310ZE2W61	MUFFLER	1	
3	18320ZE2W61	PROTECTOR, MUFFLER	1	
5	18330ZE2W00	PIPE, EX.	1	
6	18331ZE3810	CAP, MUFFLER	1	
7	18333ZF6W01	GASKET, EX. PIPE	1	
8	18355ZE2W00	ARRESTER, SPARK (OPTIONAL)	1	
9	18381ZE2W10	GASKET, MUFFLER (ARRESTER) (OPTIONAL)	1	
10	18381ZE2800	GASKET, MUFFLER	1	
19	90050ZE1000	SCREW, TAPPING (5X8)	4	
22	90055ZE1000	SCREW, TAPPING (4X6)	3	
27	90006ZE2000	SCREW, TAPPING (6X10)	1	
28	9405008000	NUT, FLANGE (8MM)	5	
31	90055ZE1000	SCREW, TAPPING (4X6)	1	

# HONDA GX390K1QWT2 ENGINE — PISTON ASSY.

PISTON ASSY.

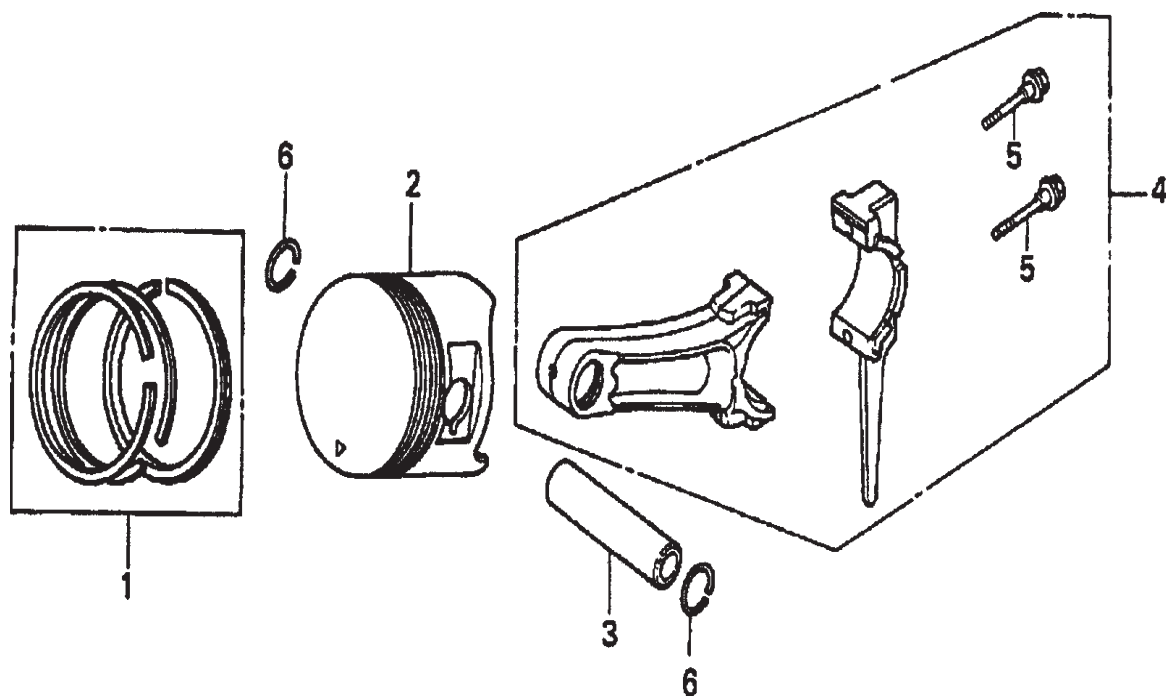




# HONDA GX390K1QWT2 ENGINE — PISTON ASSY.

## PISTON ASSY.

<u>NO.</u>	<u>PART NO.</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
1	13010ZF6003	RING SET, PISTON (STD)	1	
1	13011ZF6003	RING SET, PISTON (OS 0.25) (OPTIONAL)	1	
1	13012ZF6003	RING SET, PISTON (OS 0.50) (OPTIONAL)	1	
1	13012ZF6005	RING SET, PISTON (OS 0.50) (OPTIONAL)	1	
1	13013ZF6003	RING SET, PISTON (0.75) (NIPPON)	1	
2	13101ZF6W00	PISTON (STD)	1	
2	13102ZF6W00	PISTON (OS 0.25) (OPTIONAL)	1	
2	13103ZF6W00	PISTON (OS 0.50) (OPTIONAL)	1	
2	13104ZF6W00	PISTON (0.75) (OPTIONAL)	1	
3	13111ZF6W00	PIN, PISTON	1	
4	13200ZE3010	ROD ASSY., CONNECTING (STD) .....	1	INCLUDES ITEM W/*
4	13200ZE3315	ROD ASSY., CONNECTING(US 0.25) (OPT.) .....	1	INCLUDES ITEM W/*
5*	90001ZE8000	BOLT, CONNECTING ROD	2	
6	90601ZE3000	CLIP, PISTON PIN (20MM)	2	

# HONDA GX390K1QWT2 ENGINE — RECOIL STATER ASSY.

RECOIL STARTER ASSY.

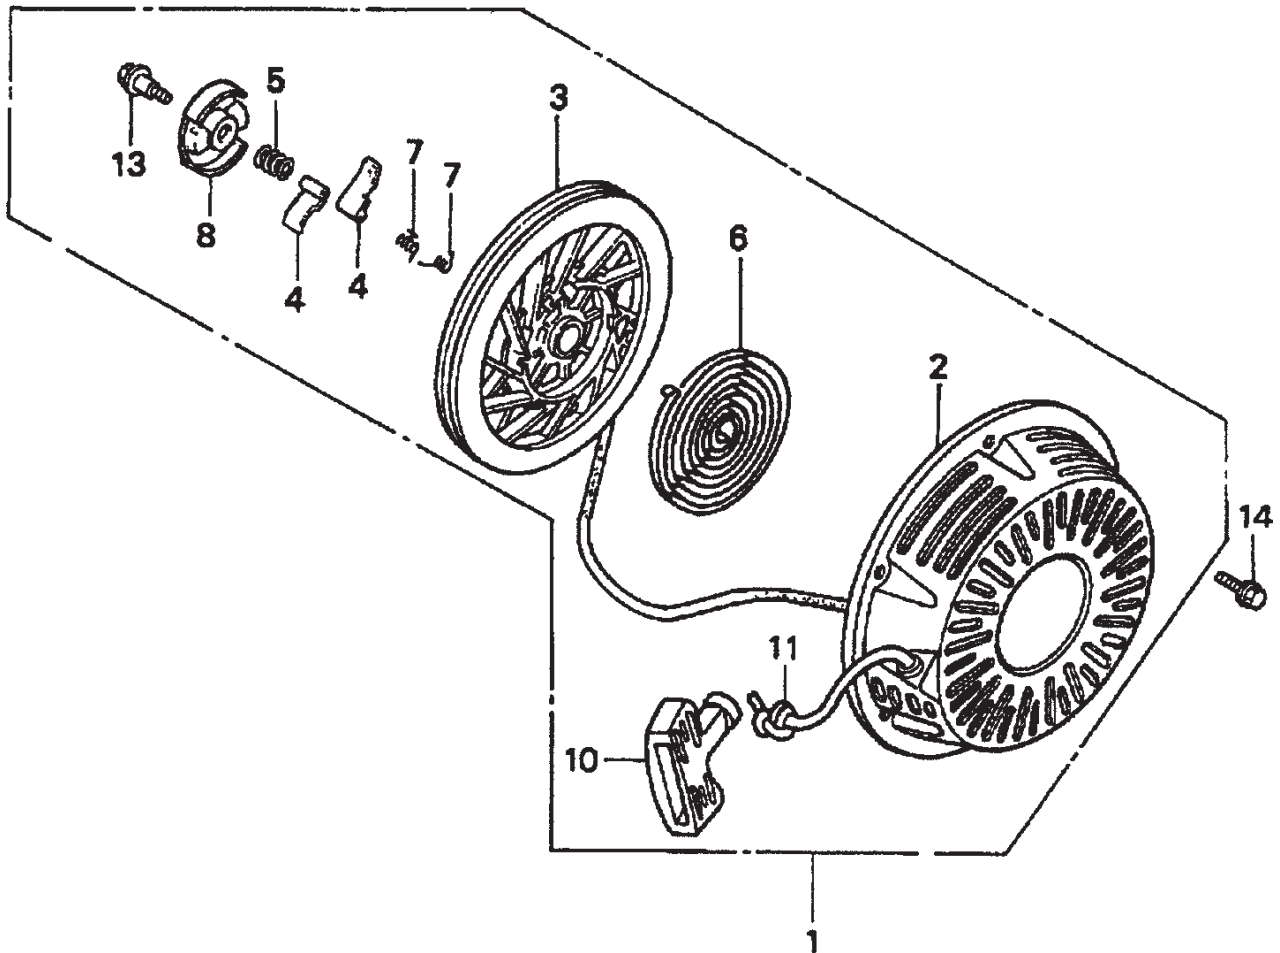


# HONDA GX390K1QWT2 ENGINE — RECOIL STATER ASSY.

## RECOIL STARTER ASSY.

<u>NO.</u>	<u>PART NO.</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
1	28400ZE3W01ZB	STARTER ASSY., RECOIL *NH1* (BLACK) .....	1 .....	INCLUDES ITEMS W/*
2*	28410ZE3W01ZB	CASE, RECOIL STARTER *NH1* (BLACK)	1	
3*	28421ZE3W01	PULLEY, RECOIL STARTER	1	
4*	28422ZE2W01	RATCHET, STARTER	2	
5*	28441ZE2W01	SPRING, FRICTION	1	
6*	28442ZE2W01	SPRING, STARTER RETURN	1	
7*	28443ZE2W01	SPRING, RATCHET	2	
8*	28444ZE2W01	RETAINER, SPRING	1	
10*	28461ZE2W02	GRIP, STARTER	1	
11*	28462ZV7003	ROPE, RECOIL STARTER	1	
13*	90004ZE2W01	SCREW, CENTER	1	
14	90008ZE2003	BOLT, FLANGE (6X10)	3	

# HONDA GX390K1QWT2 ENGINE — LABELS ASSY.

LABELS ASSY.

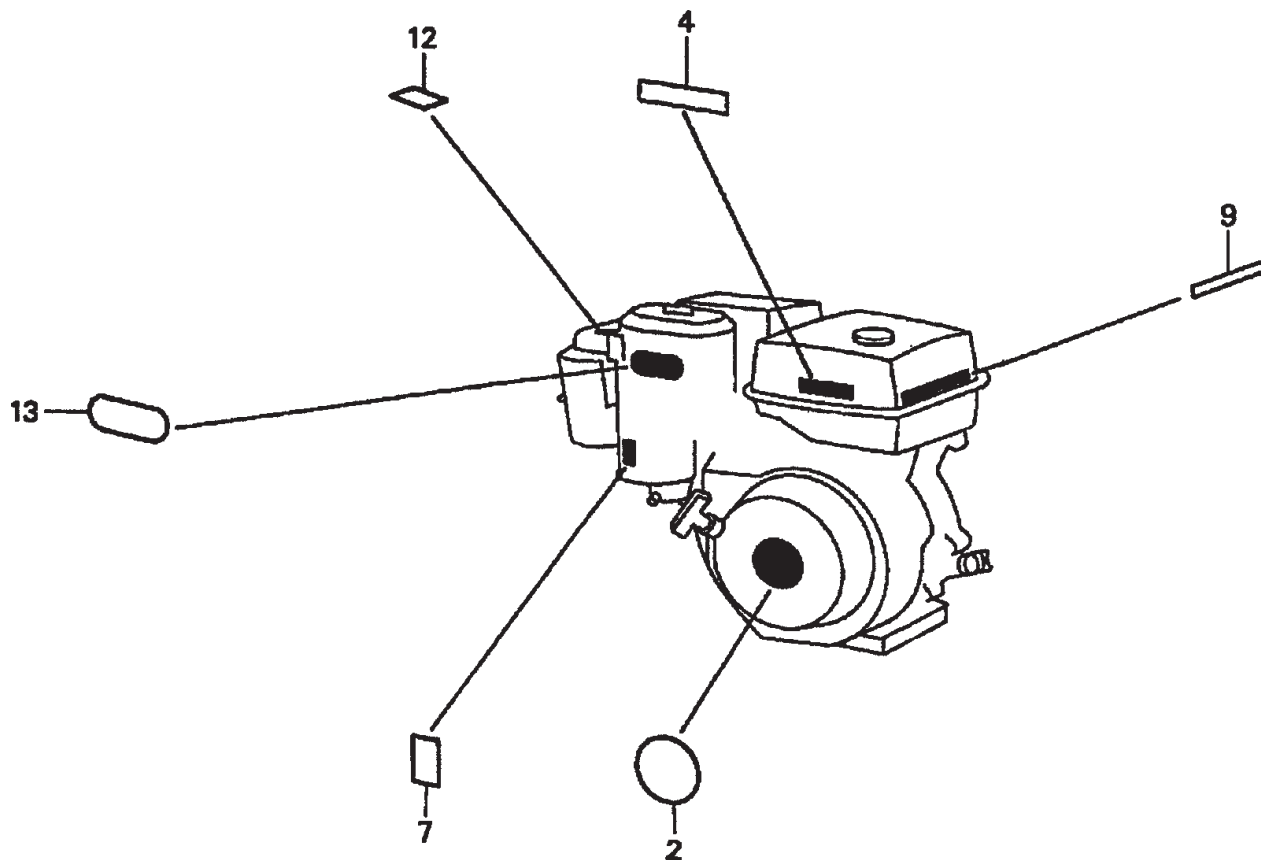


## HONDA GX390K1QWT2 ENGINE — LABELS ASSY.

### LABELS ASSY.

<u>NO.</u>	<u>PART NO.</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
2	87521ZF6W01	EMBLEM	1	
4	87522ZH9000	LABEL, CAUTION	1	
7	87528ZE2810	MARK, CHOKE (EXTERNAL)	1	
9	87532ZH8810	MARK, OIL ALERT (E)	1	
12	87534ZE1841	LABEL, AIR CLEANER CAUTION	1	
13	87535ZE1840	MARK, AIR CLEANER SALES POINT	1	

# HONDA GX620TXF2 ENGINE — AIR CLEANER ASSY.

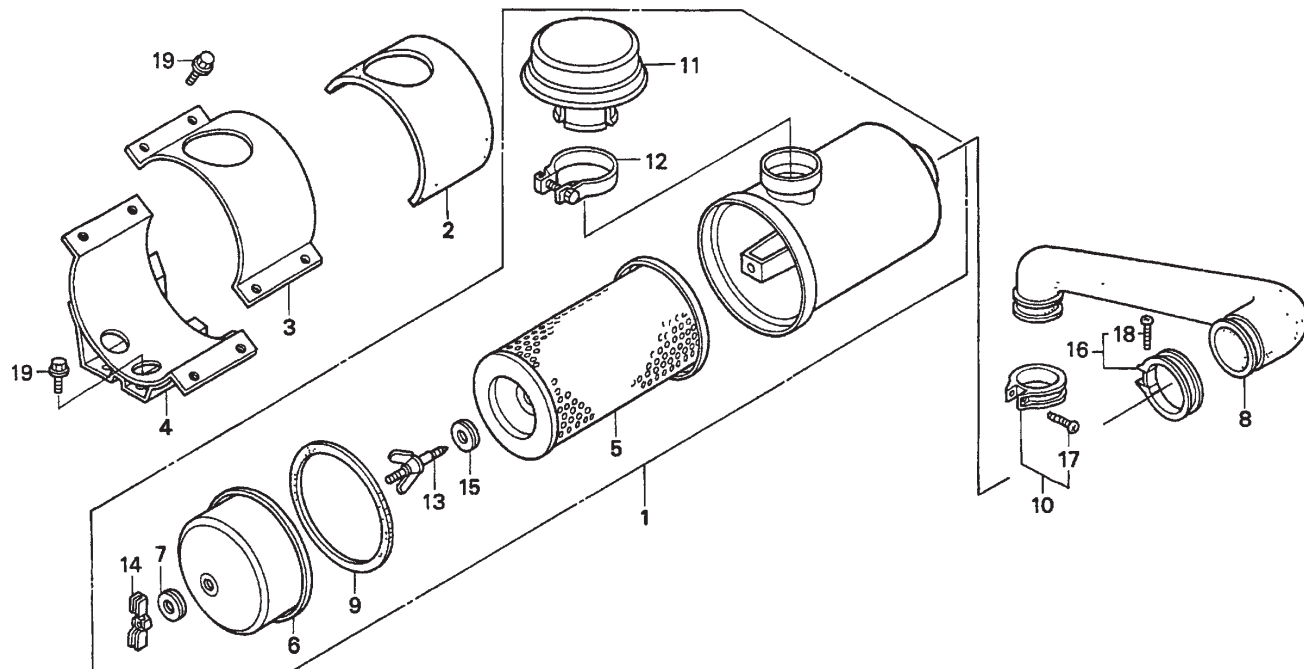


# HONDA GX620TXF2 ENGINE — AIR CLEANER ASSY.

## AIR CLEANER ASSY.

<u>NO</u>	<u>PART NO</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
1	17200ZJ0U70	AIR CLEANER ASSY. ....	1	INCLUDES ITEMS W/*
2	17207ZJ0U70	RUBBER, AIR CLEANER HOLDER	1	
3	17208ZJ0U70	HOLDER, AIR CLEANER, UPPER	1	
4	17209ZJ0U70	HOLDER, AIR CLEANER, LOWER	1	
5*	17210759013	ELEMENT, AIR CLEANER	1	
6*	17230759003	COVER, AIR CLEANER	1	
7*	17232891000	GROMMET, AIR CLEANER	1	
8	17251ZJ0U70	TUBE, AIR CLEANER	1	
9*	17253759003	SEAL, AIR CLEANER	1	
10	17255758000	BAND, AIR CLEANER CON. TUBE .....	1	INCLUDES ITEMS W/#
11*	17320ZG5801	CAP, IN.	1	
12*	17330ZG5801	CLAMP ASSY.	1	
13*	90113759003	BOLT, AIR CLEANER	1	
14*	90203ZA0800	WINGNUT, 6MM	1	
15*	90502759003	WASHER, AIR CLEANER	1	
16	95018750250	BAND, AIR CLEANER .....	1	INCLUDES ITEMS W/+
17#	935000402100A	SCREW, PAN 4X20	1	
18+	93500040250G	SCREW, PAN 4X25	1	
19	957010601200	BOLT, FLANGE 6X12	1	

# HONDA GX620TXF2 ENGINE — CAMSHAFT ASSY.

## CAMSHAFT ASSY.

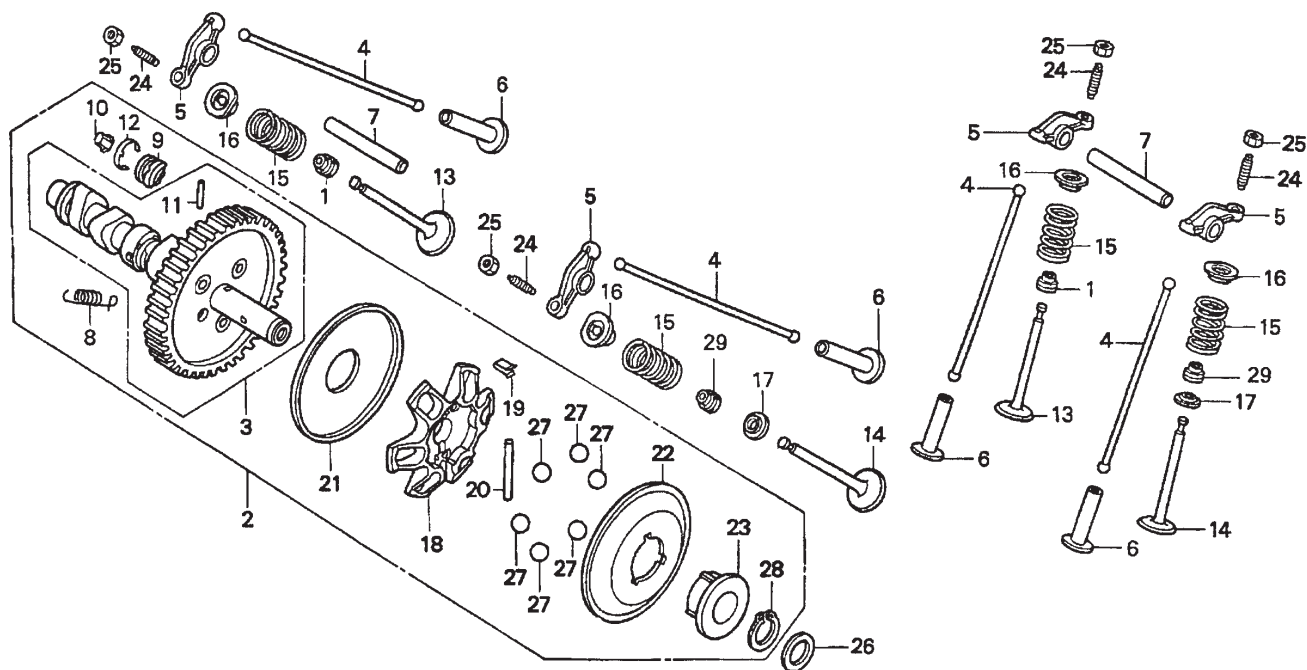




# HONDA GX620TXF2 ENGINE — CAMSHAFT ASSY.

## CAMSHAFT ASSY.

<u>NO</u>	<u>PART NO</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
1	12209ZE8003	SEAL, VALVE STEM	2	
2	14100ZJ1801	CAMSHAFT ASSY. ....	1	INCLUDES ITEMS W/*
3*	14110ZJ1801	CAMSHAFT .....	1	INCLUDES ITEMS W/#
4	14410ZJ1000	ROD, PUSH	4	
5	14431ZJ1000	ARM, VALVE ROCKER	4	
6	14441ZE2000	LIFTER, VALVE	4	
7	14461ZJ1000	SHAFT, ROCKER ARM	2	
8*	14568ZJ1800	SPRING, WEIGHT RETURN	1	
9*	14569ZJ1801	HOLDER, DECOMPRESSION PIN	2	
10*	14576ZJ1801	PIN A, DECOMPRESSION	2	
10*	14577ZJ1801	PIN B, DECOMPRESSION	2	
10*	14578ZJ1801	PIN C, DECOMPRESSION	2	
10*	14579ZJ1801	PIN D, DECOMPRESSION	2	
10*	14580ZJ1801	PIN E, DECOMPRESSION	2	
11*#	14581ZJ1801	ROD, DECOMPRESSION	2	
12*	14586ZJ1800	SPRING, DECOMPRESSION PIN HOLDER	2	
13	14711ZJ1000	VALVE, IN.	2	
14	14721ZJ1000	VALVE, EX.	2	
15	14751ZE2003	SPRING, VALVE	4	
16	14771ZE2000	RETAINER, IN. VALVE SPRING	4	
17	14775ZE2010	SEAT, VALVE SPRING	2	
18*	16512ZJ1000	HOLDER, GOVERNOR WEIGHT	1	
19*	16522ZJ1000	PLATE, GOVERNOR WEIGHT HOLDER	1	
20*	16523ZJ1000	PIN, GOVERNOR WEIGHT HOLDER	1	
21*	16524ZJ1000	PLATE, GOVERNOR LOWER	1	
22*	16529ZJ1000	PLATE, GOVERNOR SLIDER	1	
23*	16531ZJ1003	SLIDER, GOVERNOR	1	
24	90012415000	SCREW, TAPPET ADJ.	4	
25	90206250000	NUT, TAPPET ADJ.	4	
26	90446357000	WASHER, THRUST, 17.12MM	1	
27*	90901ZJ1003	BALL, STEEL, 18	6	
28*	9451017000	CIRCLIP, OUTER 17MM	1	
29	12209ZE8003	SEAL, VALVE STEM	2	

# HONDA GX620TXF2 ENGINE — CONTROL ASSY.

CONTROL ASSY.

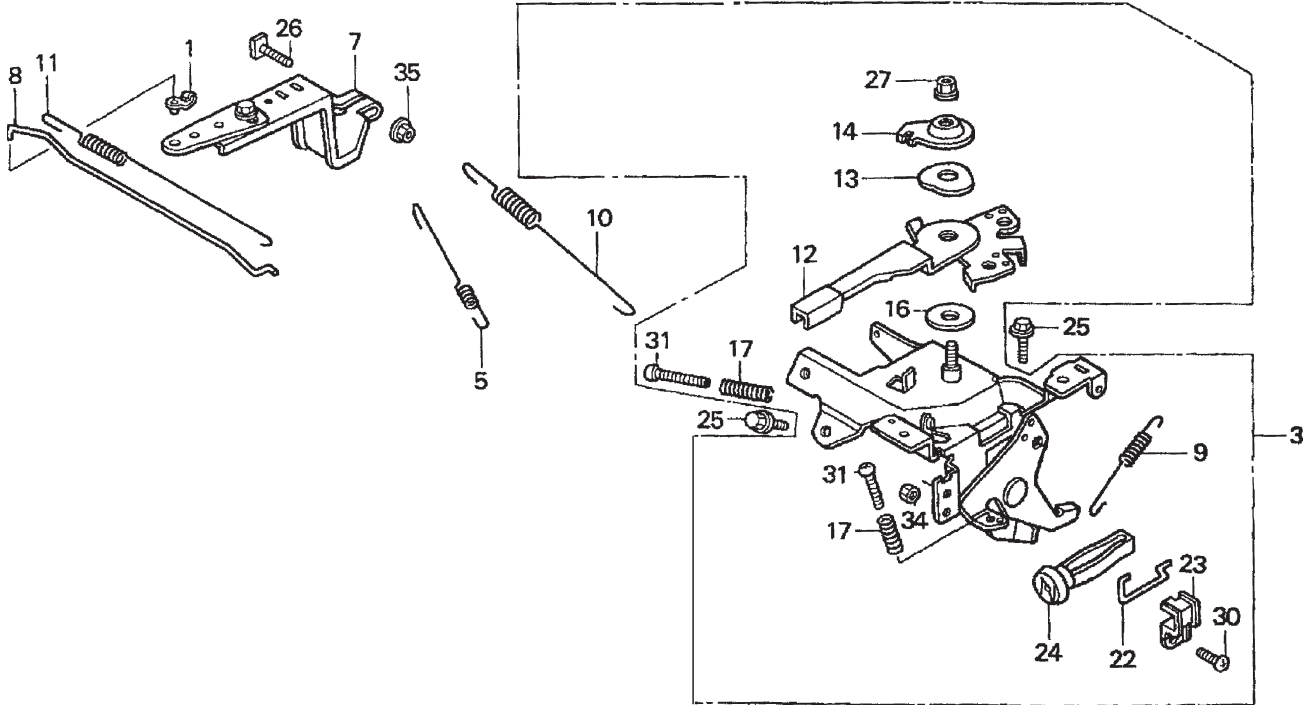


# HONDA GX620TXF2 ENGINE — CONTROL ASSY.

## CONTROL ASSY.

<u>NO</u>	<u>PART NO</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
1	16263ZE3790	JOINT, ROD	1	
3	16500ZJ1000	CONTROL ASSY. ....	1	INCLUDES ITEMS W/*
5	16534ZJ1000	SPRING, STARTER	1	
7	16550ZJ1000	ARM, GOVERNOR	1	
8	16555ZJ1000	ROD, GOVERNOR	1	
9*	16561ZG1000	SPRING GOVERNOR	1	
10	16561ZJ1000	SPRING, GOVERNOR	1	
11	16562ZJ1000	SPRING, THROTTLE RETURN	1	
12*	16570ZJ1000	LEVER CONTROL	1	
13*	16574ZE1000	SPRING, LEVER	1	
14*	16575ZH8000	WASHER, CONTROL LEVER	1	
16*	16578ZE1000	SPACER, CONTROL LEVER	1	
17*	16584883300	SPRING, CONTROL ADJUSTING	2	
22*	16628ZJ1000	ROD, CHOKE KNOB	1	
23	16649ZJ1000	HOLDER, CHOKE KNOB	1	
24*	17951ZG1000	KNOB, CHOKE	1	
25	90013883000	BOLT, FLANGE (6X12)	2	
26	90015ZE3790	BOLT, GOVERNOR ARM	1	
27*	90114SA0000	NUT, SELF-LOCK (6MM)	2	
30*	93500050120H	SCREW, PAN 5X12	2	
31*	93500050250H	SCREW, PAN 5X25	2	
34*	94001050000S	NUT, HEX 5MM	1	
35	9405006000	NUT, FLANGE 6MM	1	

# HONDA GX620TXF2 ENGINE — CONTROL BOX ASSY.

CONTROL BOX ASSY.

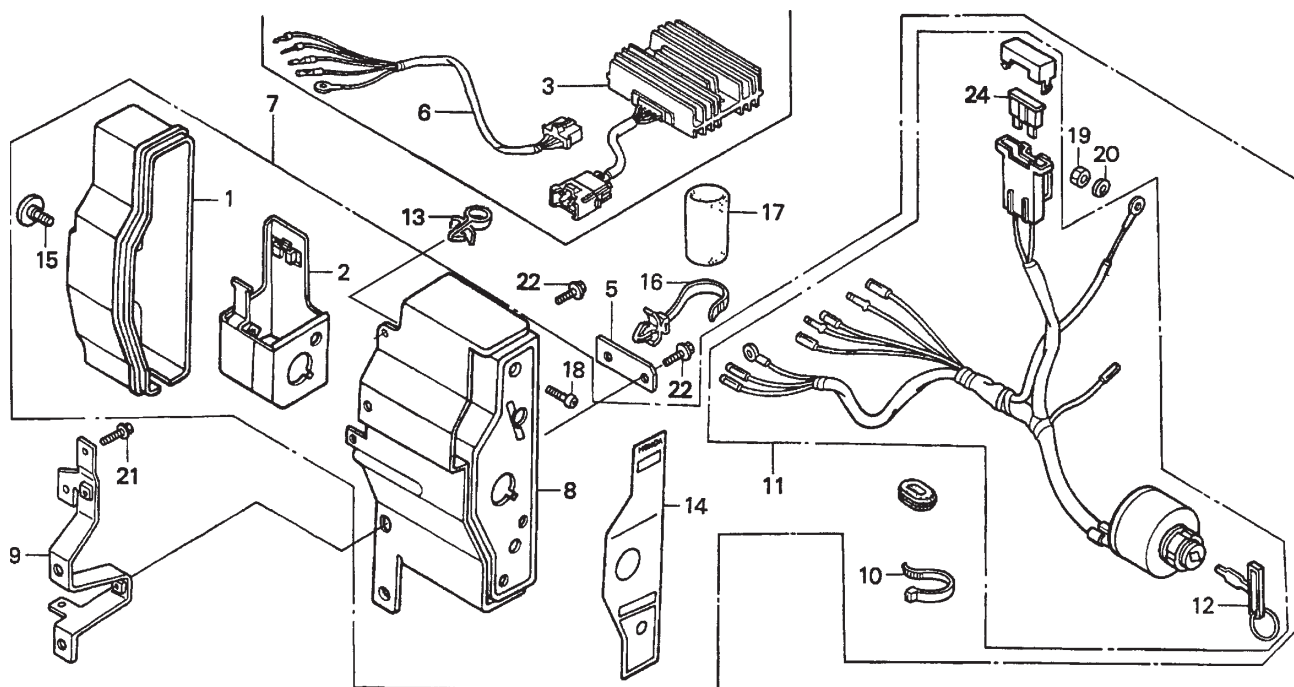


# HONDA GX620TXF2 ENGINE — CONTROL BOX ASSY.

## CONTROL BOX ASSY.

<u>NO</u>	<u>PART NO</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
1*	31612ZE2003	CASE, CONTROL	1	
2*	31614ZE2003	BRACKET, CASE MOUNTING	1	
3	31620ZG5003	RECTIFIER ASSY., REGULATOR 20A	1	
5	32103759000	BRACKET, WIRE HARNESS CLIP	1	
6	29153-501	SUB-WIRE HARNESS ASSY.	1	
7	32340ZJ1812	BOX ASSY., CONTROL .....	1	INCLUDES ITEMS W/*
8*	32345ZJ1811	PANEL, CONTROL	1	
9	29054-001	STAY, CONTROL BOX	1	
10*	32902892003	BAND	1	
11*	35100ZJ1812	SWITCH ASSY., COMBINATION .....	1	INCLUDES ITEMS W/#
12*#	35111880003	KEY	2	
13	36103ZE1000	HOLDER, STOP SWITCH WIRE	1	
14*	87529ZE2860	MARK, CONTROL BOX	1	
		EXTERNAL-REGULATOR		
15	90380MA6010	SCREW, SPECIAL 6X12	1	
16	90676SA8003	BAND, WIRE HARNESS 150MM BLUE	1	
17	91408ZJ1810	TUBE, CORD 30MM	1	
18*	93500040120H	SCREW, PAN 4X12	1	
19	94001043900S	NUT, HEX 4MM NOT AVAILABLE	1	
20	9411104800	WASHER, SPRING 4MM	1	
21	957010601000	BOLT, FLANGE, 6X10	1	
22	957010601200	BOLT FLANGE, 6X12	2	
24*#	9820032500	FUSE, BLADE, 25A	1	

# HONDA GX620TXF2 ENGINE — CRANKCASE COVER ASSY.

CRANKCASE COVER ASSY.

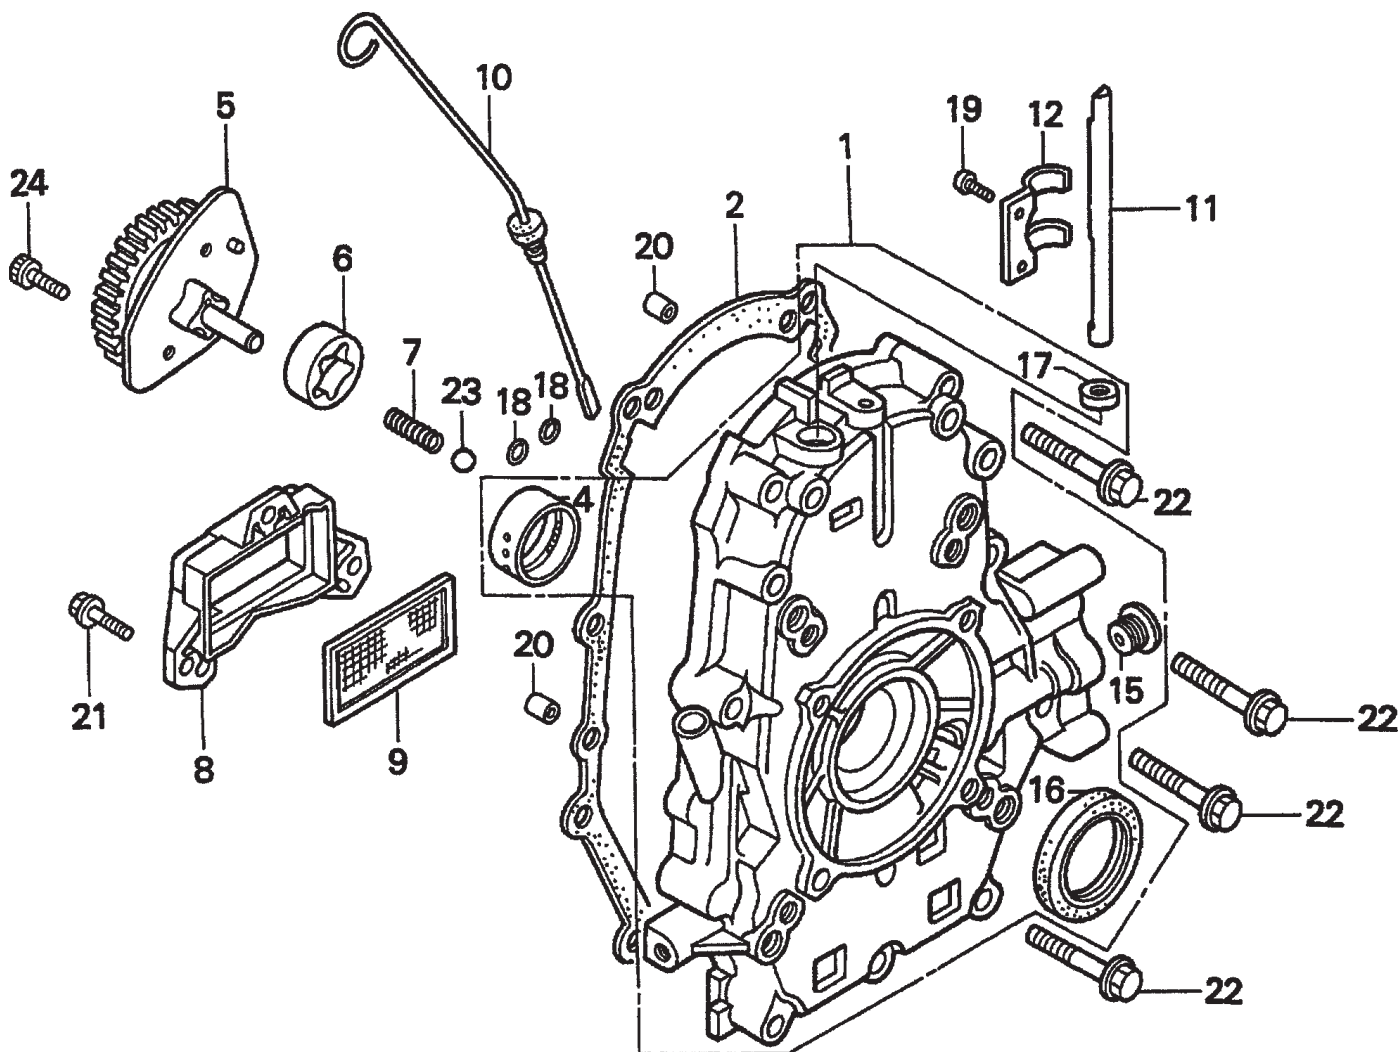


# HONDA GX620TXF2 ENGINE — CRANKCASE COVER ASSY.

## CRANKCASE COVER ASSY.

<u>NO</u>	<u>PART NO</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
1	11300ZJ1600	COVER ASSY., CRANKCASE	1	INCLUDES ITEMS W/*
2	11381ZJ1000	GASKET, CASE COVER	1	
4*	13321ZJ1000	BEARING A, MAIN OPTIONAL	1	SEE HONDA SERVICE MANUAL
4*	13322ZJ1000	BEARING B, MAIN OPTIONAL	1	SEE HONDA SERVICE MANUAL
4*	13323ZJ1000	BEARING C, MAIN OPTIONAL	1	SEE HONDA SERVICE MANUAL
5	15120ZJ1000	COVER ASSY., OIL PUMP	1	
6	15124ZJ1003	ROTOR, OIL PUMP OUTER	1	
7	15232ZJ1000	SPRING, RELIEF VALVE	1	
8	15348ZJ1000	COVER, OIL FILTER	1	
9	15427ZJ1000	SCREEN, OIL FILTER	1	
10	15655ZJ1000	DIPSTICK, OIL	1	
11	16541ZJ1000	SHAFT, GOVERNOR ARM	1	
12	16542ZJ1000	FORK, GOVERNOR	1	
15*	90007ZG8300	BOLT, SEARLING	1	
16*	91201ZJ1003	OIL, SEAL 38X58X11	1	
17*	91259VM0000	OIL, SEAL 10X16X4.5	1	
18	91302MB6830	O-RING 13X3.0	2	
19	93500050100A	SCREW, PAN 5X10	2	
20	9430108140	PIN A, DOWEL 8X14	2	
21	957010602000	BOLT, FLANGE 6X20	3	
22	957010805000	BOLT, FLANGE 8X50	9	
23	9621112000	BALL, STEEL #12, 3/8	1	
24	966000601600	BOLT, SOCKET 6X16	2	

# HONDA GX620TXF2 ENGINE — CRANKSHAFT ASSY.

CRANKSHAFT ASSY.

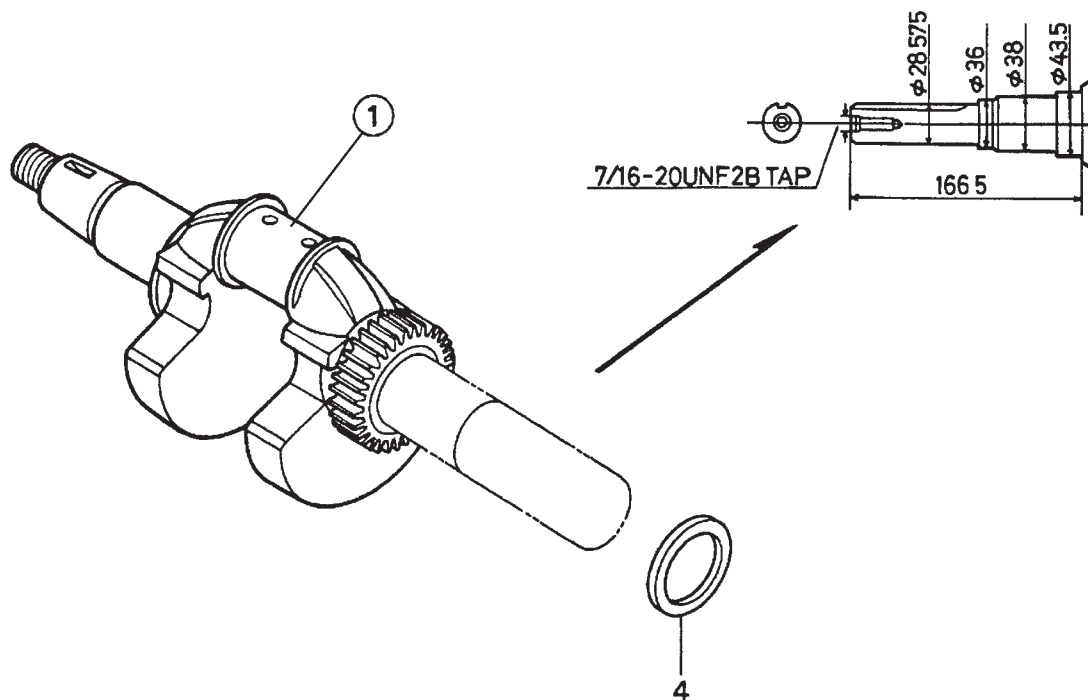




# HONDA GX620TXF2 ENGINE — CRANKSHAFT ASSY.

CRANKSHAFT ASSY.

<u>NO</u>	<u>PART NO</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
1	13310ZJ0U60	CRANKSHAFT, T-TYPE	1	
4	90401ZJ1000	WASHER, CRANKSHAFT THRUST	1	

# HONDA GX620TXF2 ENGINE — CYLINDER BARREL ASSY.

CYLINDER BARREL ASSY.

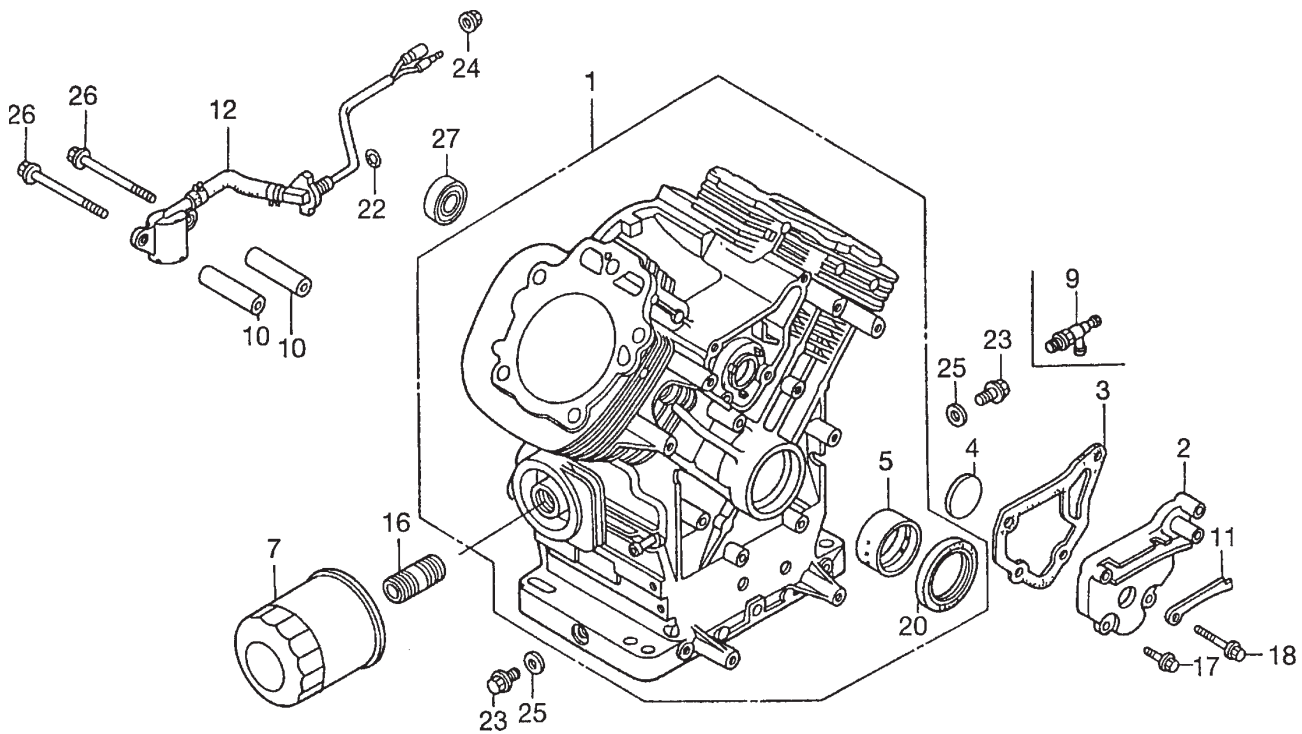


# HONDA GX620TXF2 ENGINE — CYLINDER BARREL ASSY.

## CYLINDER BARREL ASSY.

<b>NO</b>	<b>PART NO</b>	<b>PART NAME</b>	<b>QTY.</b>	<b>REMARKS</b>
1	12000ZJ1810	CYLINDER ASSY. ....	1	INCLUDES ITEMS W/*
2	12356ZJ1000	COVER, BREATHER	1	
3	12358ZJ1000	GASKET, BREATHER COVER	1	
4	12372ZE2300	VALVE, BREATHER	1	
5*	13321ZJ1000	BEARING A, MAIN, OPTIONAL	1	SEE HONDA SERVICE MANUAL
5*	13322ZJ1000	BEARING B, MAIN, OPTIONAL	1	SEE HONDA SERVICE MANUAL
5*	13323ZJ1000	BEARING C, MAIN OPTIONAL	1	SEE HONDA SERVICE MANUAL
7	15400POH305PE	FILTER, OIL	1	
9	15558ZJ1010AH	VALVE, DRAIN 14X1.5 OPTIONAL	1	
10	25523VD6010	COLLAR, FILTER SETTING	2	
11	31511ZJ1000	CLAMP, WIRE	1	
12	35480ZJ1812	SWITCH ASSY., OIL LEVEL	1	
16	90018PN3000	HOLDER, OIL FILTER	1	
17	90029888000	BOLT, FLANGE 6X16	2	
18	90031ZE1000	BOLT, FLANGE 6X32	2	
20*	91201ZJ1003	OIL SEAL, 38X58X11	1	
22	91353671003	O-RING, 13.5X1.5, ARAI	1	
23	9280014000	BOLT, DRAIN PLUG, 14MM	2	
24	9405010000	NUT, FLANGE 10MM	1	
25	9410914000	WASHER, DRAIN PLUG	2	
26	957010607509	BOLT, FLANGE 6X75	2	
27	961406003010	BEARING, RADIAL BALL 6003	1	

# HONDA GX620TXF2 ENGINE — CYLINDER HEAD ASSY.

## CYLINDER HEAD ASSY.

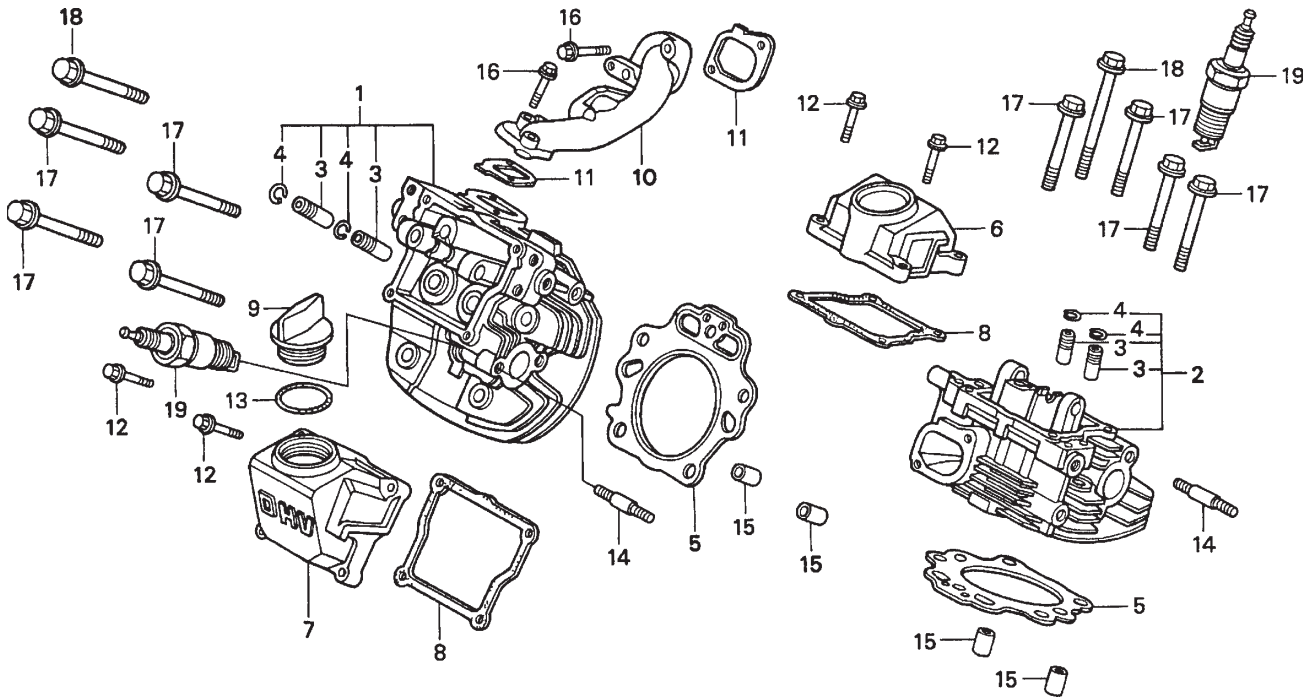


# HONDA GX620TXF2 ENGINE — CYLINDER HEAD ASSY.

## CYLINDER HEAD ASSY.

<u>NO</u>	<u>PART NO</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
1	12210ZJ1000	CYLINDER HEAD, R. ....	1	INCLUDES ITEMS W/*
2	12220ZJ1000	CYLINDER HEAD, L. ....	1	INCLUDES ITEMS W/*
3*	12205ZE2305	GUIDE, EX. VALVE OS OPTIONAL	4	
4*	12216ZE2300	CLIP, VALVE GUIDE	4	
5	12251ZJ1003	GASKET, CYLINDER HEAD	2	
6	12311ZJ1000	COVER, HEAD	1	
7	12314ZJ1000	COVER, HEAD FILLER	1	
8	1239ZJ1000	GASKET, HEAD COVER	2	
9	15611921000	CAP, OIL	1	
10	17101ZJ1000	MANIFOLD, IN	1	
11	17151ZJ1003	GASKET, IN. MANIFOLD	2	
12	90121ZJ1000	BOLT, FLANGE 6X25, CT200	8	
13	91301805000	O-RING 26X2.7	1	
14	92900080250B	BOLT, STUD 8X254	4	
15	9430112200	PIN A, DOWEL 12X20	4	
16	957010603200	BOLT, FLANGE 6X32	4	
17	957011007500	BOLT, FLANGE 10X75	8	
18	957011013000	BOLT, FLANGE 10X130	2	
19	9807956846	SPARK PLUG, BPR6ES NGK	2	

# HONDA GX620TXF2 ENGINE — FAN COVER ASSY.

FAN COVER ASSY.

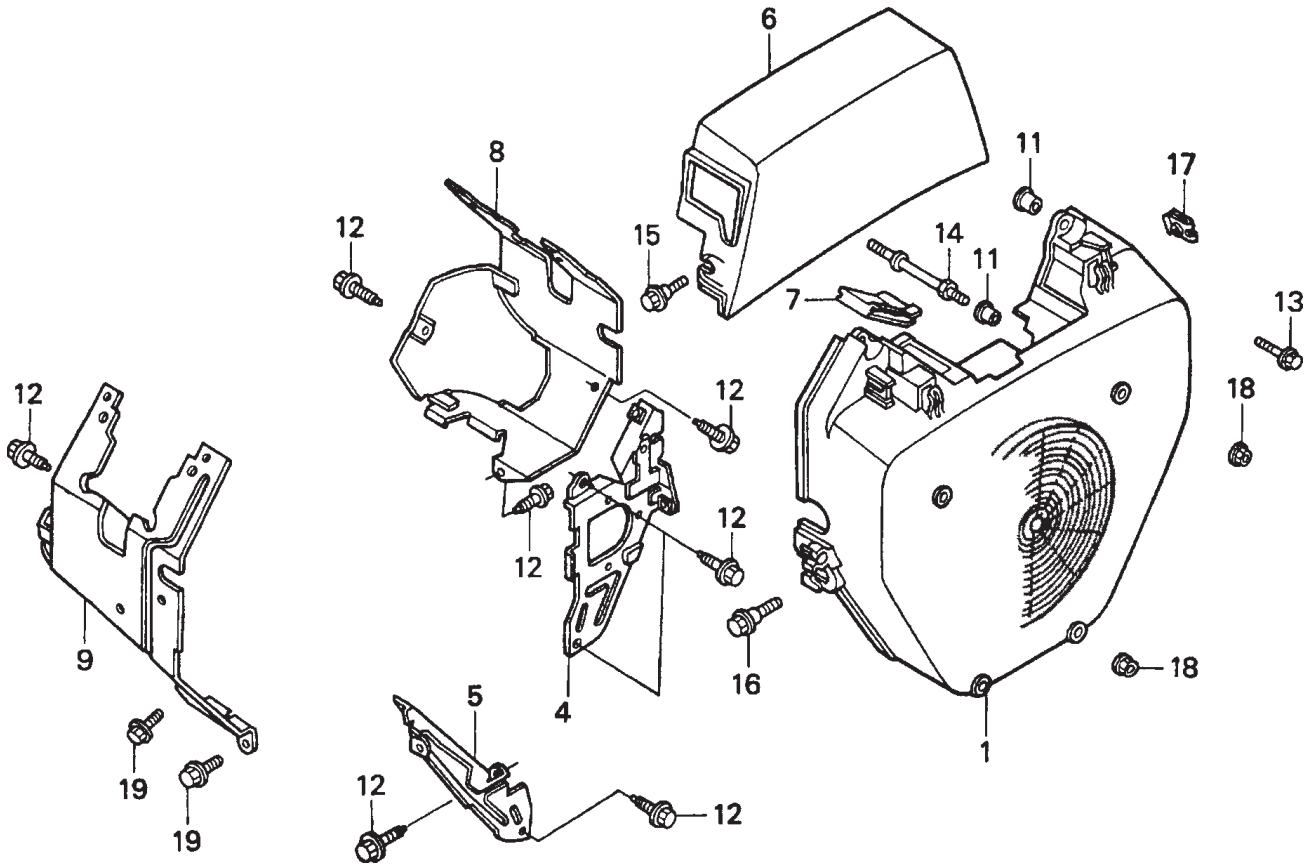


# HONDA GX620TXF2 ENGINE — FAN COVER ASSY.

## FAN COVER ASSY.

<u>NO</u>	<u>PART NO</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
1	19611ZJ1000ZB	COVER, FAN R8, BRIGHT RED	1	
4	19612ZJ1000	PLATE, R SIDE	1	
5	19641ZJ1000	PLATE, L SIDE	1	
6	19615ZJ0U60	HOOD, FAN COVER	1	
6	19615ZJ0U70	HOOD, FAN COVER	1	
7	19618ZJ0U70	PLUG, FAN COVER HOLE	1	
8	19631ZJ1000	SHROUD, R.	1	
9	19632ZJ1000	SHROUD, L.	1	
11	33713GC2000	COLLAR B, TAILLIGHT	6	
12	90013883000	BOLT, FLANGE 6X12, CT200	8	
13	90018ZE1000	BOLT, FLANGE 6X23	2	
14	90042ZJ1000	BOLT, STUD 6X75	4	
15	90104GF6000	BOLT, FLANGE 6X20	2	
16	90113GE4000	BOLT, FLANGE 6MM, BLACK	2	
17	90320MM5000	NUT, SPRING 6MM	2	
18	9405006000	NUT, FLANGE 6MM	4	
19	957010600800	BOLT, FLANGE 6X8	2	

# HONDA GX620TXF2 ENGINE — FLYWHEEL ASSY.

FLYWHEEL ASSY.

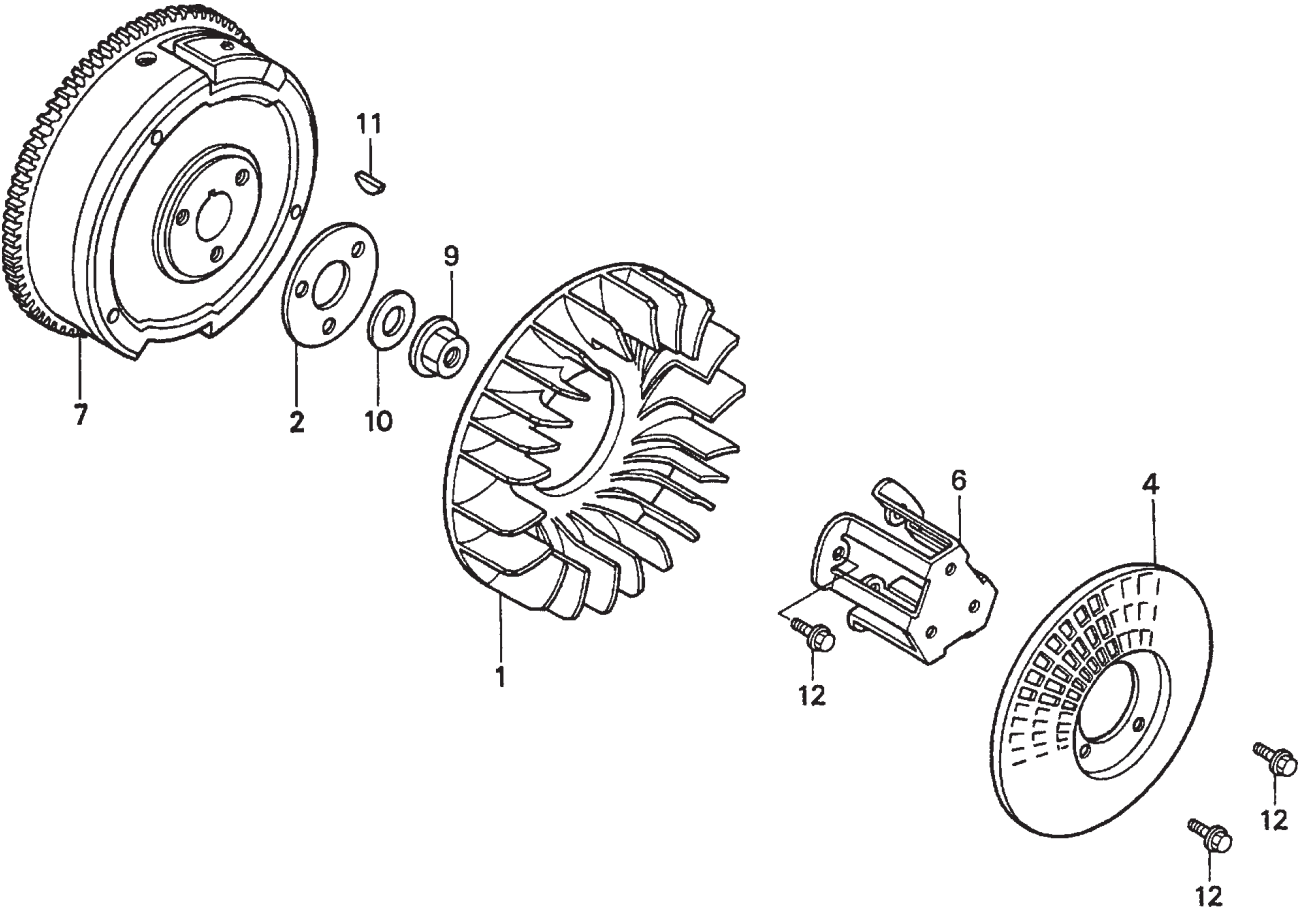




# HONDA GX620TXF2 ENGINE — FLYWHEEL ASSY.

FLYWHEEL ASSY.

<u>NO</u>	<u>PART NO</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
1	19511ZJ1000	FAN, COOLING	1	
2	19513ZJ1000	PLATE, COOLING FAN START	1	
4	28452ZJ1811	GRID, SCREEN P.T.O.	1	
6	28454ZJ1801	HOLDER, SCREEN GRID OPTIONAL	1	
7	31110ZJ1801	FLYWHEEL	1	
9	90201ZG3000	NUT, FLANGE 20MM	1	
10	90401ZG3000	WASHER, 20MM	1	
11	90741ZE2000	KEY, SPECIAL WOODRUFF 25X18	1	
12	957010801600	BOLT, FLANGE 8X16	4	

# HONDA GX620TXF2 ENGINE — IGNITION COIL ASSY.

IGNITION COIL ASSY.

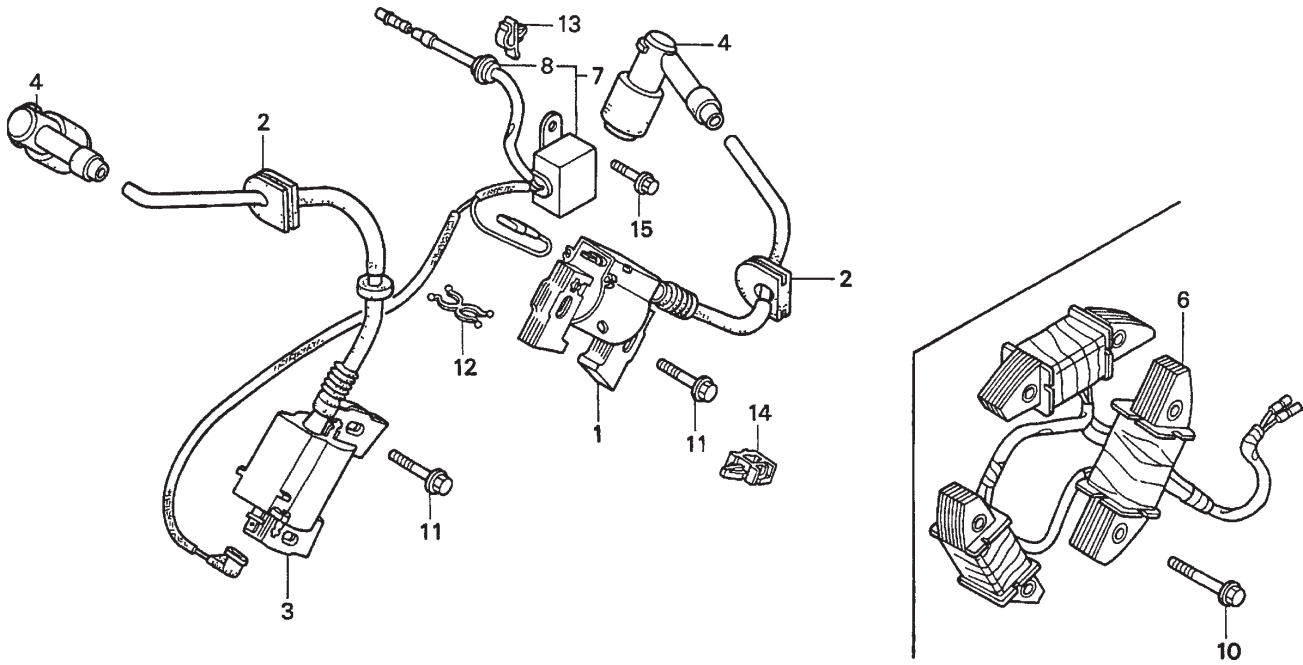


# HONDA GX620TXF2 ENGINE — IGNITION COIL ASSY.

## IGNITION COIL ASSY.

<u>NO</u>	<u>PART NO</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
1	30500ZJ1013	COIL ASSY., R. IGNITION	1	
2	30518ZJ1000	GROMMET, IGNITION WIRE	2	
3	30550ZJ1013	COIL ASSY., L. IGNITION	1	
4	30700ZJ1003	CAP ASSY., NOISE SUPPRESSOR	2	
6	31630ZJ1801	COIL ASSY., CHARGHE	1	
7	31740ZJ1003	DIODE ASSY., ENGINE STOP .....	1	INCLUDES ITEMS W/*
8*	63312ZA7000	GROMMET, TOOL	1	
10	90031ZE1000	BOLT, FLANGE 6X32	6	
11	90121952000	BOLT, FLANGE 6X25	2	
12	90658SA0003	CLIP, WIRE HARNESS	1	
13	90673GJ5003	CLIP, CORD	1	
14	915047540003	CLIP, WIRE HARNESS	1	
15	957010600800	BOLT, FLANGE 6X8	1	

# HONDA GX620TXF2 ENGINE — MUFFLER ASSY.

MUFFLER ASSY.

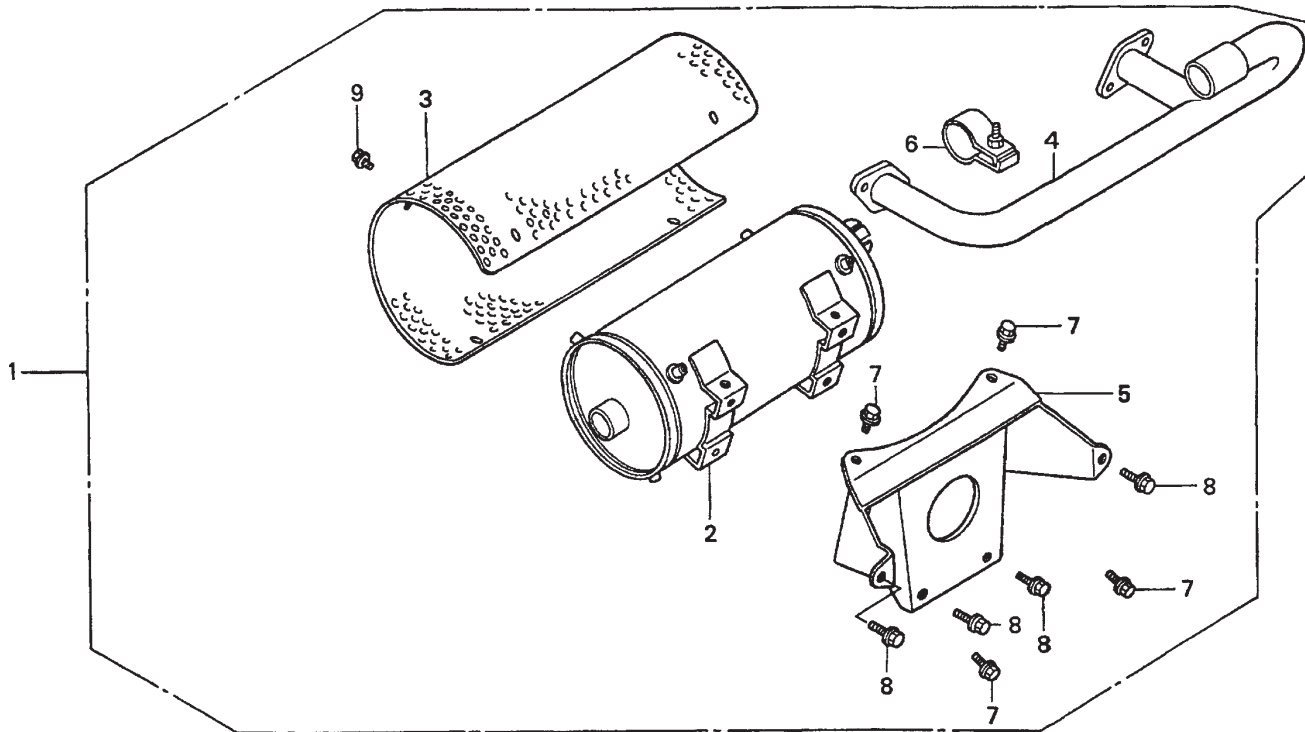


# HONDA GX620TXF2 ENGINE — MUFFLER ASSY.

## MUFFLER ASSY.

<u>NO</u>	<u>PART NO</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
1	06183ZJ1821	MUFFLER KIT, HIGH-B OPTIONAL.....	1	INCLUDES ITEMS W/*
2*	18310ZJ1003	MUFFLER, HIGH OPTIONAL	1	
3*	18321ZJ1003	PROTECTOR, MUFF., HIGH OPTIONAL	1	
4*	18330ZJ1600	PIPE, EX. HIGH-L OPTIONAL	1	
5*	18338ZJ1003	STAY, MUFFLER, HIGH OPTIONAL	1	
6*	18396ZJ1003	BAND ASSY. OPTIONAL	1	
7*	957010600800	BOLT, FLANGE 6X8 OPTIONAL	6	
8*	957010801400	BOLT, FLANGE 8X14 OPTIONAL	4	
9*	957010802000	BOLT, FLANGE 8X20 OPTIONAL	4	

# HONDA GX620TXF2 ENGINE — PISTON AND CONNECTING ROD ASSY.

PISTON & CONNECTING ROD ASSY.

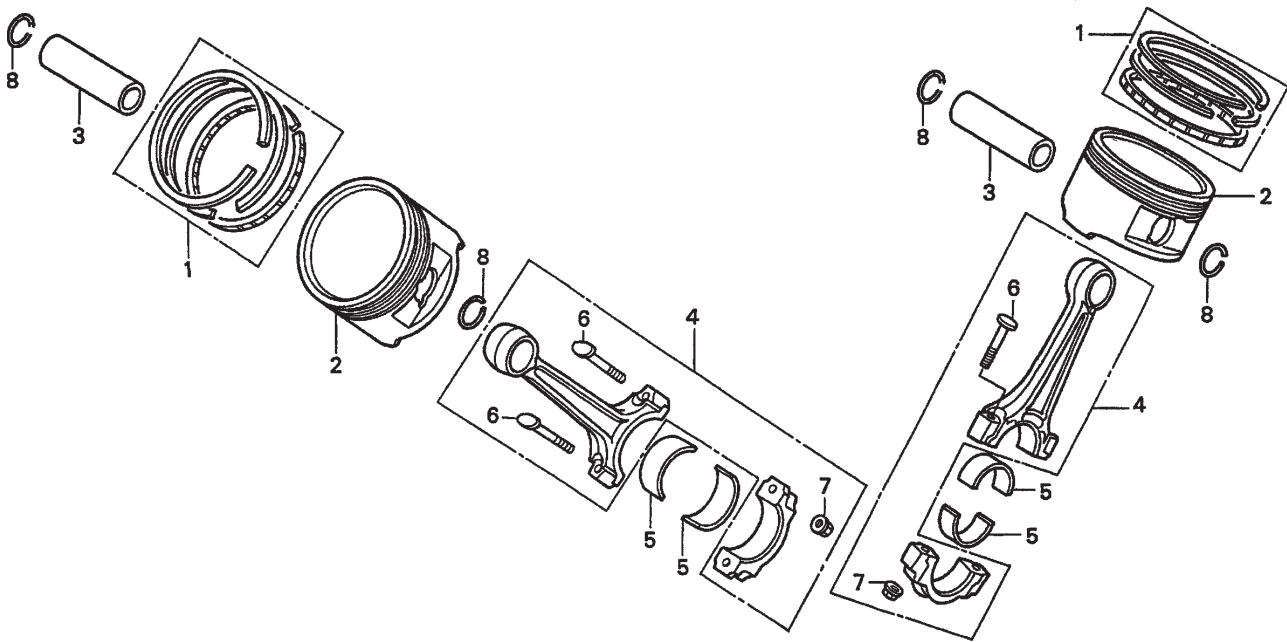


# HONDA GX620TXF2 ENGINE — PISTON AND CONNECTING ROD ASSY.

## PISTON & CONNECTING ROD ASSY.

<u>NO</u>	<u>PART NO</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
1	13010ZE8601	RING SET, PISTON STANDARD	2	
1	13011ZE8601	RING SET, PISTON OS 0.25 .....	2	OPTIONAL
1	13012ZE8601	RING SET, PISTON OS .050 .....	2	OPTIONAL
1	13013ZE8601	RING SET, PISTON OS .075 .....	2	OPTIONAL
2	13101ZJ1000	PISTON	2	
2	13102ZJ1000	PISTON, OS 0.25 .....	2	OPTIONAL
2	13103ZJ1000	PISTON, OS 0.50 .....	2	OPTIONAL
2	13104ZJ1000	PISTON, OS .075 .....	2	OPTIONAL
3	13111ZJ1000	PIN, PISTON	2	
4	13210ZJ1000	ROD SET, CONNECTING .....	2	INCLUDES ITEMS W/*
5	13211ZJ1003	BEARING A, CONNECTING ROD BLUE .....	4	
5	13212ZJ1003	BEARING B, CONNECTING ROD BLACK	4	
5	13213ZJ1003	BEARING C, CONNECTING ROD BROWN	4	
5	13214ZJ1003	BEARING D, CONNECTING ROD GREEN	4	
5	13215ZJ1003	BEARING E, CONNECTING ROD YELLOW	4	
5	13216ZJ1003	BEARING F, CONNECTING ROD PINK	4	
5	13217ZJ1003	BEARING G, CONNECTING ROD RED	4	
6*	13213ML0000	BOLT, CONNECTING ROD	4	
7*	1312KM3000	NUT, CONNECTING ROD	4	
8	90551ZE1000	CLIP, PISTON PIN 18MM	4	

# HONDA GX620TXF2 ENGINE — FUEL TANK ASSY.

FUEL TANK ASSY.

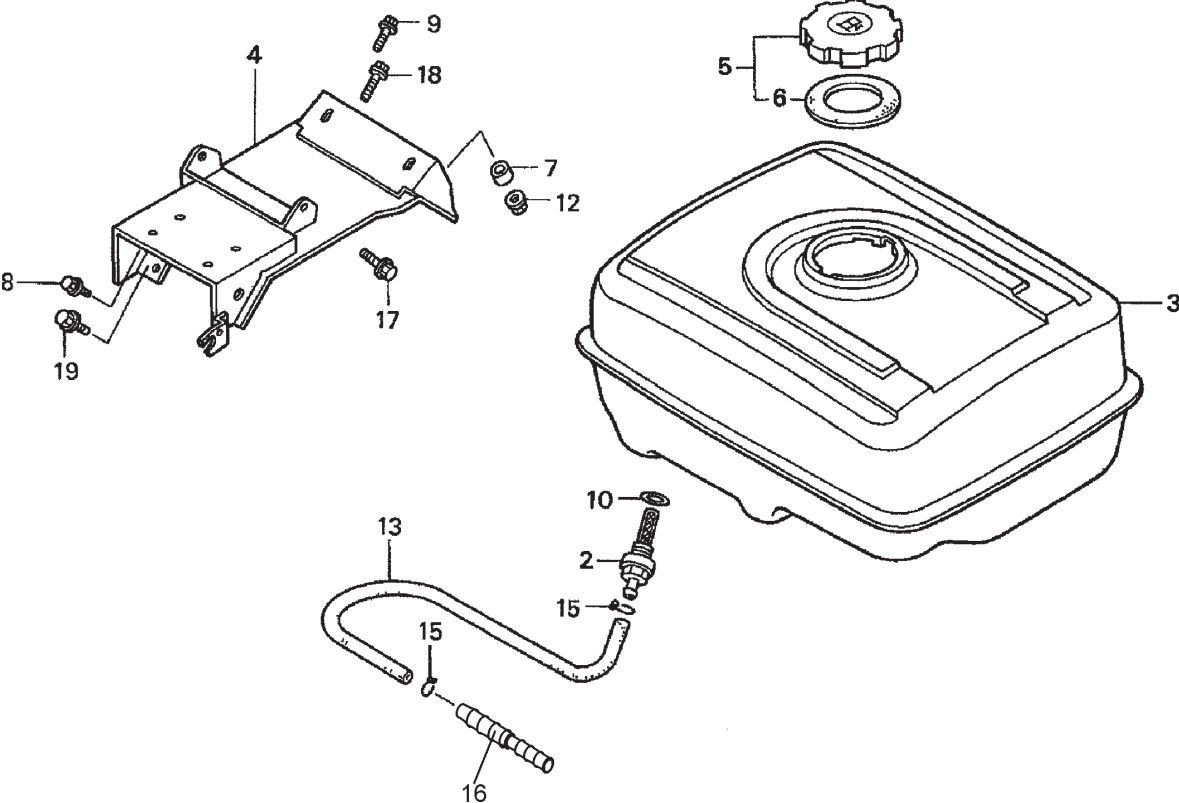




## HONDA GX620TXF2 ENGINE — FUEL TANK ASSY.

### FUEL TANK ASSY.

<u>NO</u>	<u>PART NO</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
2	15282	JOINT, FUEL TANK	1	
3	17510ZE3010ZB	FUEL TANK	1	
4	17560ZJ0U70	SUPPORT, FUEL TANK	1	
5	17620ZH7023	CAP, FUEL	1	
6	17631ZH7023	GASKET, FUEL FILLER CAP	1	
7	29219-001	COLLAR, FR. ENGINE HANGER	1	
8	90018ZE1000	BOLT, FLANGE (6X23)	1	
9	90022888010	BOLT, FLANGE (6X20)	1	
10	15229	O-RING (13.5X1.5)	1	
12	9405008000	NUT, FLANGE	2	
13	6004	HOSE, 3/16"	1 FT.	
15	22994-010	CLIP, HOSE	2	
16	29066-001	REDUCER	1	
17	957010801600	BOLT, FLANGE (8X16)	2	
18	957010802500	BOLT, FLANGE (8X25)	2	
19	957010803000	BOLT, FLANGE (8X30)	2	

# HONDA GX620TXF2 ENGINE — FUEL PUMP ASSY.

FUEL PUMP ASSY.

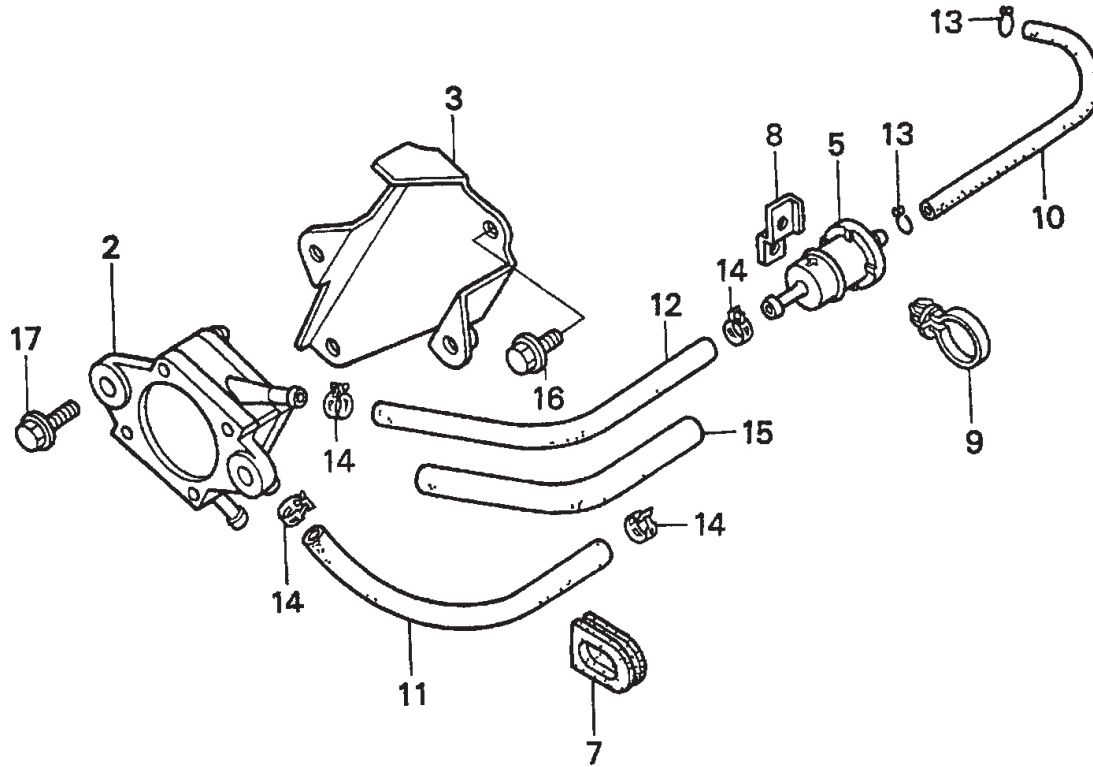


# HONDA GX620TXF2 ENGINE — FUEL PUMP ASSY.

## FUEL PUMP ASSY.

<u>NO</u>	<u>PART NO</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
2	16700ZJ1003	PUMP ASSY., FUEL	1	
3	16711ZJ1800	STAY, FUEL PUMP	1	
5	16910ZE8015	FILTER, FUEL	1	
7	19905ZA8701	GROMMET, WIRE	1	
8	35806752630	BASE, CLIP	1	
9	90617SA0003	CLIP, WIRE HARNESS	1	
10	950014500360M	BULK HOSE, FUEL 4.5X3000 X 4.5X110	1	
11	950015500840M	BULK HOSE, FUEL 5.5X8000 X 5.5X195	1	
12	950015500840M	BULK HOSE, FUEL 5.5X8000 X 5.5X215	1	
13	9500202080	CLIP, TUBE B8	2	
14	950024105008	CLIP, TUBE 10.5MM	4	
15	950033600310M	BULK HOSE, VINYL 11X13X3000 X 11X13X160	1	
16	957010600800	BOLT, FLANGE 6X8	2	
17	957010601400	BOLT, FLANGE 6X14	2	

# HONDA GX620TXF2 ENGINE — CARBURETOR ASSY.

## CARBURETOR ASSY.

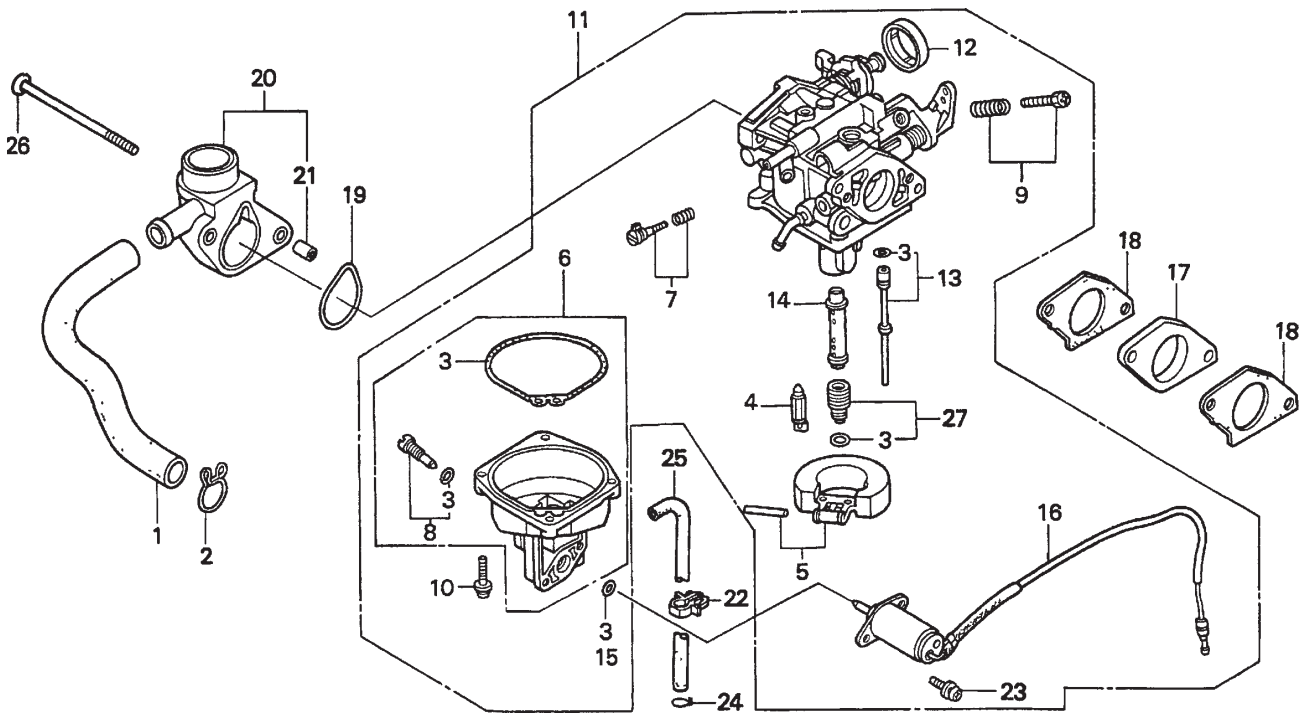


# HONDA GX620TXF2 ENGINE — CARBURETOR ASSY.

## CARBURETOR ASSY.

<u>NO</u>	<u>PART NO</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
1	12357ZJ1000	TUBE, BREATHER	1	
2	15772551000	CLIP, BREATHER TUBE	1	
3*#	16010ZG8000	GASKET SET	1	
4*	16011382004	VALVE SET, FLOAT	1	
5*	16013ZV4005	FLOAT SET	1	
6*	16015ZJ1000	CHAMBER SET, FLOAT .....	1	INCLUDES ITEMS W/#
7*	16016ZJ1010	SCREW SET	1	
8*#	16024124760	SCREW SET, DRAIN	1	
9*	16028ZG8000	SCREW SET	1	
10*	16081ZV4650	SCREW WASHER	4	
11	16100ZJ1023	CARBURETOR ASSY., BG224A C .....	1	INCLUDES ITEMS W/*
12*	161748141881	CAP, CHOKE LEVER DUST	1	
13*	16150ZJ1010	JET SET, #45	1	
14*	16166ZJ1010	NOZZLE, MAIN	1	
15*	16178548004	O-RING, 5.8X1.9	1	
16*	16200ZJ1003	VALVE ASSY., SOLENOID	1	
17	16211ZJ1000	INSULATOR, CARBURETOR	1	
18	16221ZG8000	GASKET, CARBURETOR	2	
19	17228ZG8003	GASKET, AIR CLEANER	1	
20	17410ZJ1000	ELBOW, AIR CLEANER .....	1	INCLUDES ITEMS W/+
21+	19024ZA0000	COLLAR, DISTANCE	2	
22	90682959661	CLIP B, CABLE	1	
23*	938920501208	SCREW WASHER, 5X12	2	
24	9500202080	CLIP, TUBE B8	1	
25	950054500120M	BULK HOSE, VAC. 4.5X1000 X 4.5X460	1	
26	958010610508	BOLT, FLANGE 6X105	2	
27	99201ZG80900	JET SET, MAIN #90 .....	1	OPTIONAL
27	99201ZG80920	JET SET, MAIN #92 .....	1	OPTIONAL
27*	99201ZG80950	JET SET, MAIN #95	1	

# HONDA GX620TXF2 ENGINE — STARTER MOTOR ASSY.

STARTER MOTOR ASSY.

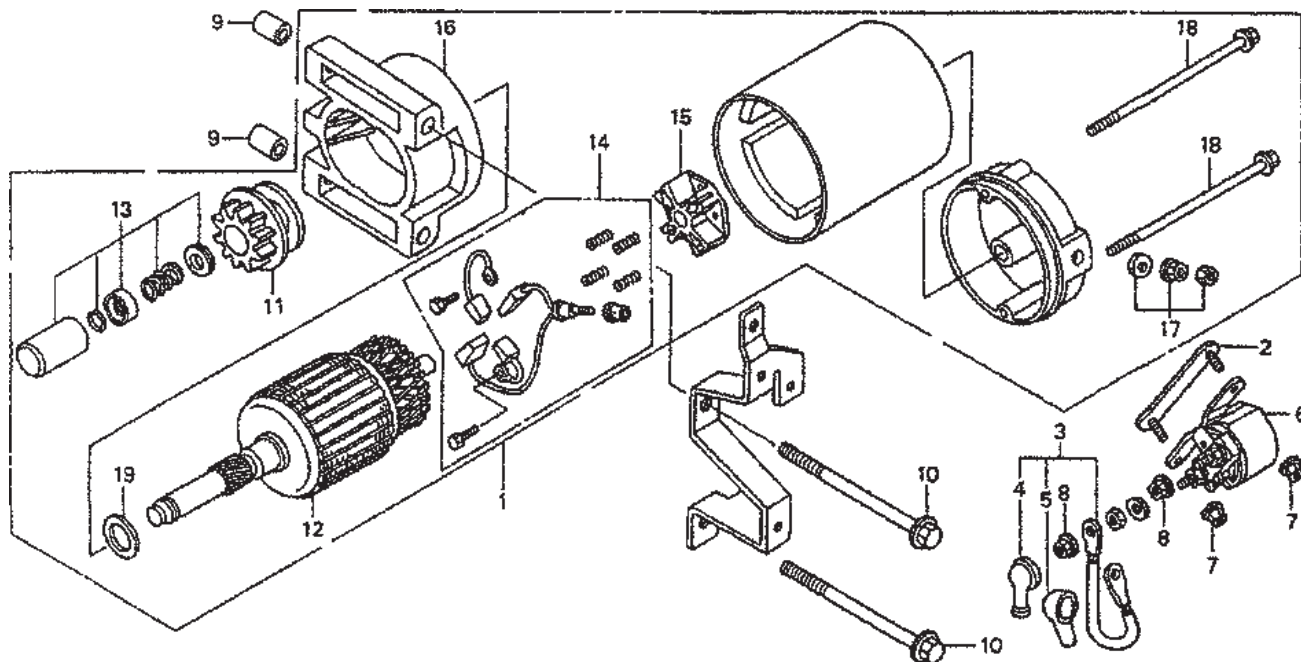

# HONDA GX620TXF2 ENGINE — STARTER MOTOR ASSY.

## STARTER MOTOR ASSY.

<u>NO</u>	<u>PART NO</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
1	31200ZJ1004	MOTOR ASSY., STARTER .....	1	INCLUDES ITEMS W/*
2	31243ZJ1800	BRACKET, STARTER MAGNETIC SETTING ...	1	INCLUDES ITEMS W/+
3	32402ZJ1810	CABLE, MAGNET SWITCH .....	1	
4+	32411KB9930	COVER A. MAGNETIC SWITCH	1	
5+	32411402000	COVER, STARTER MOTOR TERMINAL	1	
6	35850ZJ1811	SWITCH ASSY., STARTER MAGNETIC	1	
7	94050060000	NUT, FLANGE 6MM	2	
8+	9407006080	NUT, WASHER 6MM	2	
9	9430110120	PIN, DOWEL 10X12	2	
10	957010811000	BOLT, FLANGE 8X110	2	
11*	31213ZJ1004	GEAR SET, PINION	1	
12*	31217ZJ1004	ARMATURE	1	
13*	31225ZJ1004	STOPPER SET, PINION	1	
14*	31226ZJ1004	BRUSH SET	1	
15*	31231ZJ1004	HOLDER, BRUSH	1	
16*	31235ZJ1004	BRACKET, FR.	1	
17*	31237ZJ1004	NUT SET, TERMINAL	1	
18*	31281ZJ1004	BOLT, THROUGH	2	
19*	90407ZJ1004	WASHER, THRUST	1	

GASKET KIT ASSY.

**NO ARTWORK AVAILABLE**




# HONDA GX620TXF2 ENGINE — GASKET KIT ASSY.

## GASKET KIT ASSY.

<u>NO</u>	<u>PART NO</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
1	061A1ZJ1000	GASKET KIT .....	1 .....	INCLUDES ITEMS W/*
2*	12251ZJ1003	GASKET, CYLINDER HEAD	2	
3*	12358ZJ1000	GASKET, BREATHER COVER	1	
4*	12391ZJ1000	GASKET, HEAD COVER	2	
5*	16221ZG8000	GASKET, CARBURETOR	2	
6*	171541ZJ1003	GASKET, IN. MANIFOLD	2	
7*	17228ZG8003	GASKET, AIR CLEANER	1	
8*	18333ZJ1000	GASKET, EX. PIPE	2	
9*	91301805000	O-RING, 26X2.7	1	

# HONDA GX620TXF2 ENGINE — LABEL ASSY.

LABEL ASSY.

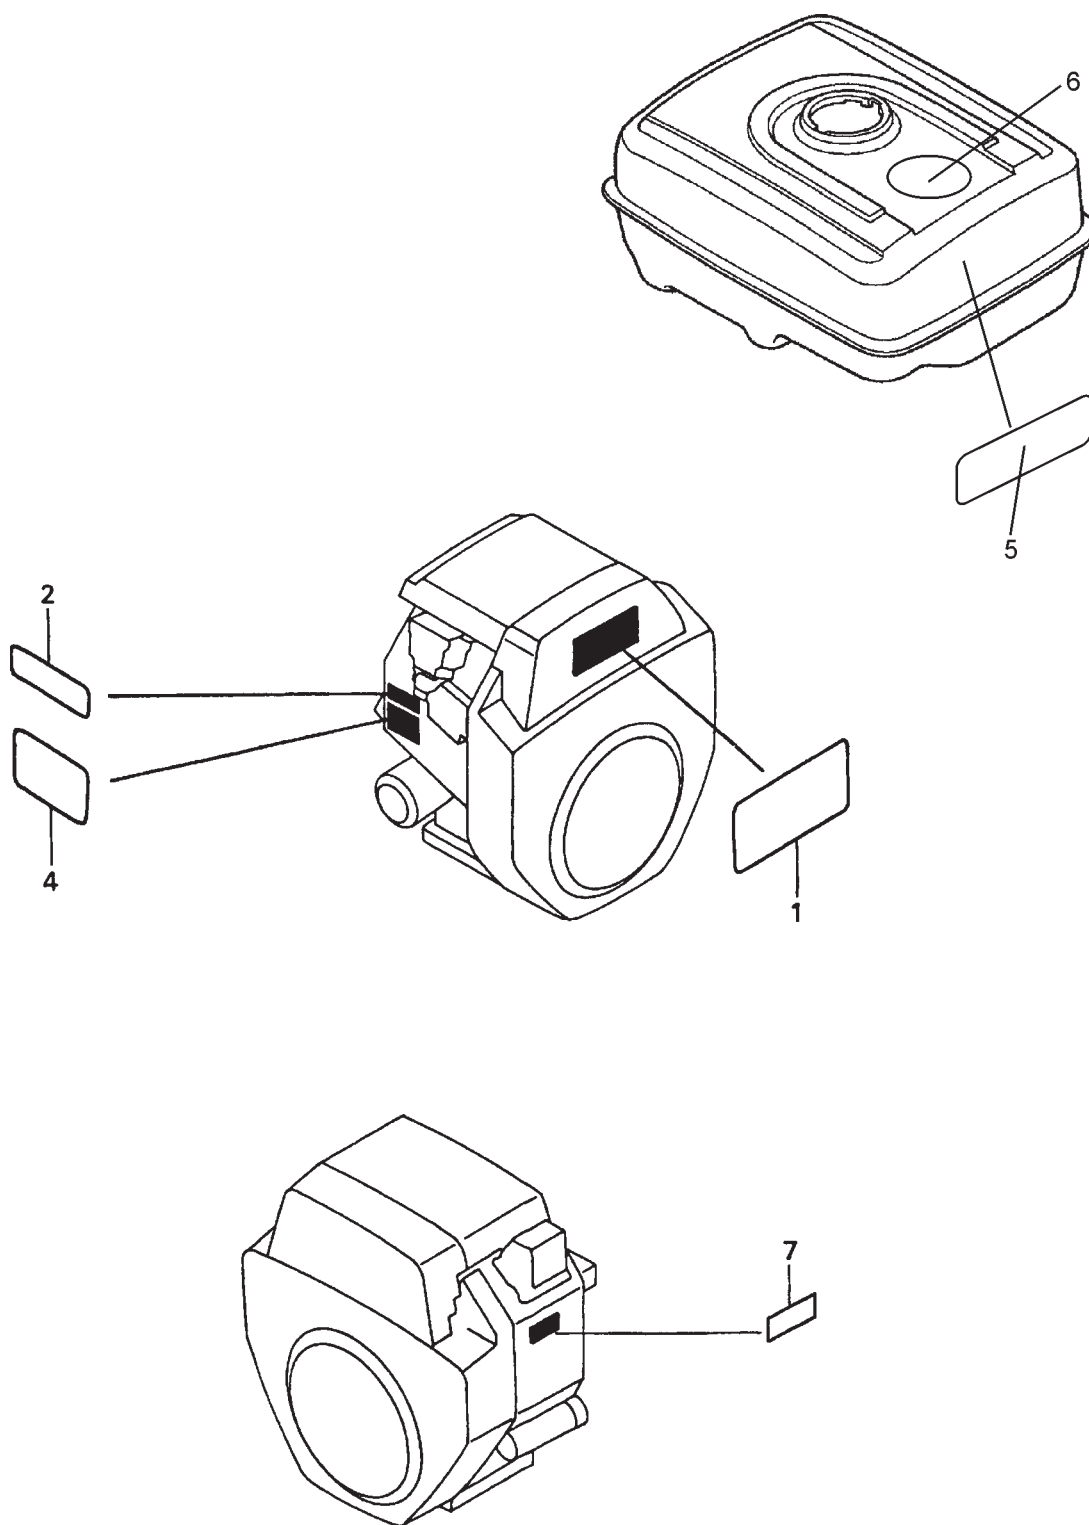

## HONDA GX620TXF2 ENGINE — LABEL ASSY.

LABEL ASSY.

<u>NO</u>	<u>PART NO</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
1	87101ZJ1000	MARK, EMBLEM, GX620	1	
2	87152ZJ1000	LABEL, SPECIFICATION GX620	1	
4	87522ZJ1000	LABEL, CAUTION	1	
5	22994-012	LABEL READ OWNER'S MANUAL	1	
6	22994-013	LABEL, GAS TANK (MATCH/FLAME)	1	
7	87532ZH8810	MARK, OIL ALERT( E)	1	

# STOW

A DIVISION OF MULTIQUIP INC.

## Terms and Conditions of Sale STOW Construction Equipment

### PAYMENT TERMS

Terms of payment for unit sales are 2% 15 days net 30 days from date of invoice unless otherwise specifically stated on our invoice. Parts invoices have terms of net 10 days. **Minimum parts billing is \$15.00 net.**

Applicable discounts will be computed on merchandise value only. Late charges will be assessed at prevailing rates. Cash discounts cannot be taken on current billings if any previously billed amounts are past due.

### FREIGHT POLICY

Freight policy is established to offer customers every advantage possible. Due to bulk freight ratings on some equipment and other shipping considerations, freight policies differ by equipment type. Actual back freight may be charged for shipments originating from other than specified FOB warehouses. **See Freight Policy for details.**

All STOW domestic sales are FOB nearest available designated MQ/STOW warehouse. Export orders are ex-works factory located in Carson, CA or Boise, ID.

Additions to orders already shipped cannot be accepted for freight minimums.

Should STOW elect to make partial shipments of an order originally complying with the "freight allowed" requirements, transportation charges will be absorbed by STOW on any subsequent shipment applying to that order.

All other orders will be shipped collect or prepaid with charges added to the invoice. STOW's responsibility ceases when a signed manifest has been obtained from the carrier, and any claim for shortage or damage must be settled between the consignee and the carrier.

**Parts:** FOB Carson, California or Boise, Idaho. **See Freight Policy for details and additional discounts.**

### DROP SHIPMENTS

STOW reserves the right to refuse Drop Shipments outside the normal service area of the purchasing dealer.

### FIELD WAREHOUSES

Field Warehouses are currently located in California, Georgia, Idaho, Iowa, and New Jersey

### SPECIAL EXPEDITING SERVICE

The higher of a \$35.00 surcharge or actual costs will be added to the invoice for special handling, including bus shipments, or in cases where STOW personnel must personally deliver the equipment or parts to the carrier.

### RETURNED GOODS POLICY

Return shipments may be accepted and credit allowed, subject to the following provisions.

1. A Returned Material Authorization (RMA) must be approved by STOW prior to shipment. Approvals for returned goods must be with just cause and are at the sole discretion of STOW. A copy of the Authorization must accompany the shipment to the designated Warehouse.
2. Parts being returned must be listed as currently supplied on the current parts list.
3. Parts must be in new and resalable condition in the original package, with part numbers clearly marked.
4. Units and accessories must be current models in the latest price list and in new and resalable condition.
5. Special order items are not returnable for credit.
6. Credit on returned parts and units will be issued at actual dealer net price at time of purchase less 15% restocking charge.
7. All returned shipments are to be made to the STOW designated receiving point, freight prepaid at the sender's expense.

The sender will be notified of any material received that does not meet the above provisions. Such material will be held for 30 days from notification pending instructions. If a reply is not received within 30 days, the material will be returned to the sender at his expense with no credit issued.

### PRICING, REBATES AND SPECIFICATIONS

Every effort will be made to provide adequate notice of changes; however, prices and equipment specifications are subject to change without notice.

Price changes are effective on a specific date and all orders received on or after that date will be billed at the revised price.

Rebates for price reductions and added charges for price increases will not be made for stock in dealer inventory at the time of a price change.

STOW reserves the right to quote and sell direct to Government agencies and to Original Equipment Manufacturer accounts who use our products as integral parts of their own products.

### LIMITATION OF SELLER'S LIABILITY

STOW shall not be liable hereunder for damages in excess of the purchase price of the item with respect to which damages are claimed and in no event shall STOW be liable for loss of profit or good will or for any other special, consequential or incidental damages.

### LIMITATION OF WARRANTIES

There are no warranties, express or implied, made by STOW hereunder on Products manufactured or distributed by it except the warranty against defects in material and workmanship on new Products to the original purchaser, as set forth in the STOW New Product Limited Warranty.

# STOW

A DIVISION OF MULTIQUIP INC.

Atlanta • Boise • Newark • Quebec, Canada  
Manchester, UK • Rio de Janeiro, BR • Puebla, MX

### STOW CONSTRUCTION EQUIPMENT

POST OFFICE BOX 6254  
CARSON, CALIFORNIA 90749  
310-661-4242 • 877-BUY-STOW  
FAX: 310-604-9237  
E-MAIL: [stow@stowmfg.com](mailto:stow@stowmfg.com)  
[www.stowmfg.com](http://www.stowmfg.com)



# OPERATION AND PARTS MANUAL

## **HERE'S HOW TO GET HELP**

STOW PRODUCT SUPPORT PROVIDED BY MULTIQUIP

PLEASE HAVE THE MODEL AND SERIAL  
NUMBER *ON-HAND* WHEN CALLING

### **UNITED STATES**

#### ***MULTIQUIP CORPORATE OFFICE***

18910 Wilmington Ave.  
Carson, CA 90746  
Contact: mq@multiquip.com

Tel. (800)-421-1244  
Fax (310)-537-3927

### **MEXICO**

#### ***MQ CIPSA***

Carr. Fed. Mexico-Puebla KM 126.5  
Momoxpan, Cholula, Puebla 72760 Mexico  
Contact: pmastretta@cipsa.com.mx

Tel. (52) 222-225-9900  
Fax (52) 222-285-0420

### **UNITED KINGDOM**

#### ***MULTIQUIP (UK) LIMITED HEAD OFFICE***

Hanover Mill, Fitzroy Street,  
Ashton-under-Lyne,  
Lancashire OL7 0TL  
Contact: sales@multiquip.co.uk

Tel. 0161 339 2223  
Fax 0161 339 3226

### **CANADA**

#### ***MULTIQUIP***

4110 Industriel Boul.  
Laval, Quebec, Canada H7L 6V3  
Contact: jmartin@multiquip.com

Tel. (450) 625-2244  
Fax (450) 625-8664

### **BRAZIL**

#### ***MULTIQUIP***

Av. Evandro Lins e Silva, 840 - grupo 505  
Barra de Tijuca - Rio de Janeiro  
RJ CEP 22631-470  
Contact: cnavarro@multiquip.com.br, srentes@multiquip.com.br

Tel. 011-55-21-3433-9055  
Fax 011-55-21-3433-9055

Your Local Dealer is:

**STOW**  
A DIVISION OF MULTIQUIP INC.

#### ***MULTIQUIP (UK) LIMITED HEAD OFFICE***

Hanover Mill, Fitzroy Street,  
Ashton-under-Lyne,  
Lancashire OL7 0TL

Tel.: 0161 339 2223

Fax: 0161 339 3226

Contact: kcassell@multiquip.com.uk

Internet: multiquip.com

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>