



# Technika

IDTV  
User Guide



Model No  
19-220  
22-220

**HD**  
ready

**USB** Universal Serial Bus  
Personal Video Recorder  
**PVR**

digital

**HDMI**™  
HIGH DEFINITION MULTIMEDIA INTERFACE

**Freeview**★

**DVD**  
VIDEO



## IMPORTANT GUARANTEE INFORMATION

Congratulations on purchasing this television. We hope you have many years of trouble free enjoyment from your purchase.

Your product is covered under the manufacturers guarantee for 12 months from date of purchase.

In the event of a fault being diagnosed, please refer to the frequently asked questions/ troubleshooting section at the rear of this user guide.

If you are still unable to remedy the fault, try resetting the TV to factory settings, (details in this user guide) or contact the helpline.

In the event that a fault is diagnosed, the helpline will arrange to collect the TV from your home or work address, return it to our service centre, repair the item and then return it to you.

If we believe we cannot offer a permanent repair, we will replace the item.

### Sky Media UK LTD – Helpline Information

Telephone UK 0871 2000 463, ROI 01443 3940

Email: [service@skymediauk.co.uk](mailto:service@skymediauk.co.uk)

Web support: [www.skymediauk.co.uk](http://www.skymediauk.co.uk)

The telephone opening hours are Monday to Friday 8.30am to 6pm, Saturday 9am – 5pm.

You must retain all packaging materials, in addition to your proof of purchase/receipt, as you will need these in the event of warranty/service support.

This guarantee is in addition to and does not affect your statutory rights.

If you need to call the helpline, you will need the following information.

- 1) Model Number \_\_\_\_\_ (You can find this on the rear of the TV)
- 2) Date of purchase \_\_\_\_\_ (You can find this on your sales receipt)
- 3) Serial Number \_\_\_\_\_ (You can find this on the rear of the TV)



EXAMPLE OF LABEL ON REAR OF TV

## IMPORTANT SAFETY INSTRUCTIONS



Please read these instructions. All the safety and operating instructions should be read before the appliance is operated.

### Warnings

- To reduce the risk of fire, electric shock or damage to the television, do not expose it to dust, rain or moisture, or place any objects filled with liquids on or near the television.
- Do not place the television in a confined space, ensure that nothing can obstruct the ventilation openings at the rear of the television.
- Do not place naked flames on or near the television.
- Dispose of this television and any components including batteries in an environmentally friendly manner. If in doubt, please contact your local authority for details of recycling.

### Safety

- For your safety, this appliance is fitted with a fused moulded 3 pin mains plug. Should the fuse need to be replaced, ensure that any replacement is of the same amperage and approved with the BSI mark.
- Never try and replace the mains plug unless you have adequate qualifications and are legally authorised to do so. In the event that a replacement Mains cable is required, contact the manufacturer for a suitable replacement.
- Never use the television if it is damaged in any way.
- Always place the television on a flat level surface avoiding anywhere which may be subject to strong vibration.
- Ensure the television is not placed on top of the power cable as the weight of the television may damage the cable and cause a safety hazard.
- Never place mobile phones, speakers or any other device which may cause magnetic or radio interference with the television. If interference is apparent, move the device causing the interference away from the television.

### Maintenance

- To clean this unit, wipe with a soft, dry cloth. If the surfaces are extremely dirty, use a soft cloth dipped in a soap and water solution or a weak detergent solution.
- Use eyeglass cleaner to remove stubborn dirt from the LCD/LED Screen.
- Never use alcohol, paint thinner or benzene to clean this unit.
- Before using a chemically treated cloth, read the instructions that came with the cloth carefully.

CAUTION: If water or other liquid enters the television through the display panel surface, a malfunction may occur.



### Packaging

- The safest way to transport your item is in the original box/packaging - please save your packaging for this.
- You will need original box/packaging in the event of warranty/service repair or support. We are unable to carry out warranty/service if you are unable to package it correctly.

## IMPORTANT SAFETY INSTRUCTIONS



Please read these instructions. All the safety and operating instructions should be read before the appliance is operated.

### Important Information Regarding Use of Video Games, Computers, Captions or Other Fixed Image Displays

The extended use of fixed image program material can cause a permanent "shadow image" on the LCD panel.

This background image is viewable on normal programs in the form of a stationary fixed image. This type of irreversible LCD/LED panel deterioration can be limited by observing the following steps:

1. Reduce the brightness/contrast setting to a minimum viewing level.
2. Do not display the fixed image for extended periods of time.
3. Turn the power off when not in actual use.

Examples of images that you need to watch out for are as follows (this is not an exhaustive list):

- TV Channel Logos: e.g. Shopping channel logos and pricing displays-especially if they are bright and stationary. Moving or low-contrast graphics are less likely to cause ageing of the screen.
- Time Displays
- Teletext: Do not view a stationary page for long period of time
- TV/DVD Menus: e.g. Listings of DVD disk content
- Pause Mode: Do not leave the TV in pause mode for long periods of time, e.g. When watching DVDs or videos.

Important - Once 'shadow image/screen burn' occurs, it will never disappear and is not repairable under warranty.

### How do I dispose of this product?

UK: Waste electrical products should not be disposed of with household waste. Separate disposal facilities exist. For your nearest facilities, please see [www.recycle-more.co.uk](http://www.recycle-more.co.uk) or in store for details.

ROI: Waste electrical products should not be disposed of with household waste. Separate disposal facilities exist. Check with your Local Authority or retailer for recycling advice.

#### Batteries

- Observe the correct polarity when inserting batteries.
- Do not use different types of batteries together or mix old and new batteries.
- Dispose of batteries in an environmentally friendly way.
- Certain regions may regulate the disposal of batteries. Please consult your local authority.



#### CAUTION:



This caution label is located on the rear panel of the unit

THIS UNIT IS A CLASS 1 LASER PRODUCT. HOWEVER THIS UNIT USES A VISIBLE LASER BEAM WHICH COULD CAUSE HAZARDOUS RADIATION EXPOSURE IF DIRECTED. BE SURE TO OPERATE THE PLAYER CORRECTLY AS INSTRUCTED. WHEN THIS UNIT IS PLUGGED INTO THE WALL OUTLET, DO NOT PLACE YOUR EYES CLOSE TO THE OPENINGS TO LOOK INTO THE INSIDE OF THIS UNIT. USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE. DO NOT OPEN COVERS AND DO NOT REPAIR YOURSELF. REFER SERVICING TO QUALIFIED PERSONNEL.



# Technika

---





# CONTENTS

|   |       |
|---|-------|
| Manufacturers Guarantee Information . . . . .               | 3     |
| Important Safety Instructions . . . . .                     | 4-5   |
| What is included in the box . . . . .                       | 8     |
| Attaching / detaching the stand and wall mounting . . . . . | 9     |
| Getting Started - Initial Set Up . . . . .                  | 11    |
| TV Buttons and Input Source Menu . . . . .                  | 12    |
| Remote Control . . . . .                                    | 13    |
| Connections . . . . .                                       | 14-15 |
| TV Menu Operation . . . . .                                 | 16-21 |
| Picture Menu . . . . .                                      | 16    |
| Sound Menu . . . . .  | 17    |
| Channel Menu . . . . .                                      | 18    |
| Feature Menu . . . . .                                      | 19    |
| Setup Menu . . . . .  | 20    |
| DVD Menu . . . . .  | 21    |
| PC Operation . . . . .                                      | 23-24 |
| Using the television as a computer monitor . . . . .        | 23    |
| PC Settings Menu . . . . .                                  | 24    |
| USB Record / 7 Day TV Guide . . . . .                       | 25-27 |
| USB Record . . . . .  | 25    |
| USB Record / 7 Day TV Guide . . . . .                       | 26    |
| USB Mode / Media Player . . . . .                           | 27    |
| General Information . . . . .                               | 28-32 |
| Using with Sky Digital/Virgin Media . . . . .               | 28    |
| Frequently Asked Questions . . . . .                        | 29    |
| Technical Specifications . . . . .                          | 30    |
| Index . . . . .   | 31    |
| Digital Switchover . . . . .                                | 31-32 |



## WHAT IS INCLUDED IN THE BOX

### Accessories

Included with this TV are the following accessories:

1 x User Guide



1 x Remote Control



1 x Quick Start Guide



2 x AAA Batteries



1 x Stand



1 x TV



1 x RF Cable



1 x USB Memory Stick




Please save your packaging as you will need this in the event of warranty/service repair or support. We are unable to carry out warranty/service if you are unable to package it correctly. The safest way to package your item in the event of warranty/service repair is in it's original box/packaging.



## ATTACHING/DETACHING THE STAND

### Attaching the Stand

1) Insert the TV into the stand at 45 degrees

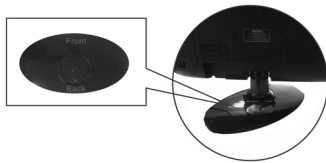

2) Twist the TV into the CLOSE position until it clicks into place



This television requires a VESA 100 wall mount, or equivalent.

### Detaching the Stand

- 1) To remove the base, press close and rotate 45 degrees.
- 2) Remove the 4 screws highlighted



3) Remove the screw/s in the neck of the stand (where fitted)

**IMPORTANT** - Before drilling any holes in the wall ensure you are not drilling where there could be any electric wires, water or gas pipes.


### Wall mounting the TV

- 1) Remove the four screws highlighted below.
- 2) The wall mount can now be easily attached to the mounting holes on the rear of the TV. These holes are indicated in the picture below.



For optimum viewing, if wall mounting the TV higher than eye level, the TV should be tilted downwards so that the TV's screen is 'face on'. See fig 1 and 2

**Important** – If wall mounting this TV, only use the screws already provided in the wall mounting holes. Using other screws which are longer could cause irreparable damage to internal parts.

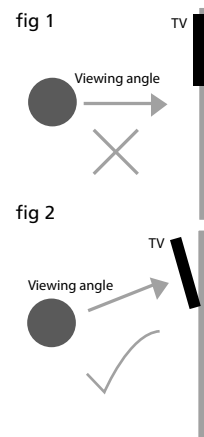



# Technika

---



## GETTING STARTED - INITIAL SET UP


1) Using the RF cable supplied, connect the TV to the TV Aerial wall socket (Fig A)

2) Connect the power cable to the Electrical outlet (Fig B)





3) Switch on the television using the power on/off switch located on the side of the TV.

4) Insert the batteries supplied into the Remote control and press the Standby button to power on the TV

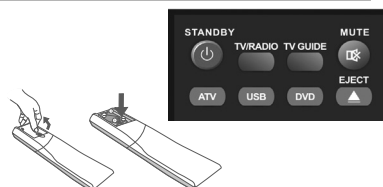

5) You will now be welcomed with the initial set-up screen. If it does not appear, on the remote control, please press [MENU] then 8-8-8-8 and the menu will appear. Press OK on the remote control and tuning will start.

6) After tuning the following screen will appear.

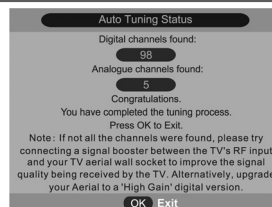

If you are missing channels, the reason for this is likely to be signal strength, you should consider connecting signal booster and re-tuning the TV.

**Tip:** If the TV finds some, but not all, of the Digital channels, the TV is functioning correctly but the signal being received is not strong enough. (The signal strength needs to be above 85% - you can see the signal strength the TV is receiving when you change channels/ programmes) you will need to increase the signal reception in order to receive all of the channels available. The most economical way to do this is by purchasing and connecting a 'signal booster' in between the TV and the TV aerial socket. If this does not solve the problem, you will need to upgrade the TV aerial to a digital hi-gain compatible aerial

## TV BUTTONS & SOURCE MENU

- ① Displays the input source menu
- ② Displays Menu/OSD
- ③ Programme/Channel down and menu down
- ④ Programme/Channel up and menu up
- ⑤ Volume down and menu left
- ⑥ Volume up and menu right
- ⑦ Play/Pause Disc
- ⑧ Eject Disc
- ⑨ Standby Power On/Off



### Choosing Mode Input/Source


To switch between the different input/connections.

A) Using the buttons on the remote control:

- 1) Press [SOURCE/ AV] - The source menu will appear
- 2) Press [V] or [A] to select the input you require.
- 3) Press [OK]

B) Using the buttons on the Television:

- 1) Press [SOURCE]
- 2) Scroll up / down using CH+/ CH- buttons to the input/source you require
- 3) Press Vol+ to change input/source to the one selected.

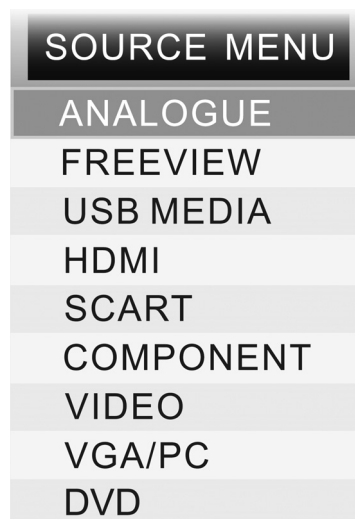

## REMOTE CONTROL


- 1** STANDBY - Switch on TV when in standby or vice versa  
 MUTE - Mute the sound or vice versa  
 TV/RADIO - Switch to Freeview and switch between TV and radio in Freeview mode  
 TV GUIDE - Opens the 7 Day TV Guide (Freeview mode)  
 ATV - Switch to analogue TV source  
 USB - Switch to USB source  
 DVD - Switch to DVD source  
 EJECT - Eject disc in DVD mode

- 2** REC - To record what is currently on television  
 REC LIST - Opens the list of what you have previously recorded  
 ⏪ - To restart the current chapter  
 ⏩ - To advance forward to the next chapter  
 ⏸ - To stop the playback  
 ⏮ - To play in fast rewind mode  
 ⏭ - To play in fast forward mode  
 ⏹ - To play/pause (Pause live TV when USB Memory Stick is inserted)


- 3** SOURCE/AV - To display the input/source menu  
 INFO - Press once for now/next channel information  
 Press twice for programme information about current programme  
 (▲/▼/◀/▶/OK) - Allows you to navigate the on-screen menus and adjust the system settings to your preference  
 MENU - To display OSD menu  
 EXIT - To exit all menus  
 NUMBER BUTTONS - 0 - 9 to select a TV channel directly.  
 ⏪ - To return to the previous channel viewed  
 FAV - To display favourites menu

- 4** VOL ▲/▼ - To increase / decrease the sound level  
 SUBTITLE - To switch the dialogue at the bottom of the screen (on/off)  
 ASPECT - To switch the screen between the different picture formats  
 AUDIO - To change the audio language (if available)  
 SLEEP - Press repeatedly to cycle through the sleep options  
 CH ▲/▼ - To increase or decrease the channel being watched  
 GOTO - DVD mode - To go to a specific chapter  
 A-B - DVD mode - Press once to set point, press a second time to return to point  
 ANGLE - DVD mode - Select different angle of DVD (if available)  
 REPEAT - DVD mode - To repeat playback


- 5** D.DIS - DVD mode - To display the current disc information  
 ZOOM - DVD mode - To zoom in  
 SIZE - Teletext mode - To change the display size in Teletext mode  
 DISPLAY - To switch off the screen when listening to radio  
 DVD SETUP/TEXT - DVD mode - To display the DVD setup menu  
 Teletext mode - To enter Teletext  
 D.MENU/INDEX - DVD mode - To display the DVD disc menu  
 Teletext mode - To display the index page  
 TITLE/REVEAL - DVD mode - To display the DVD title menu  
 Teletext mode - To reveal or hide the hidden words.  
 HOLD - Teletext mode - Hold current page which is displayed

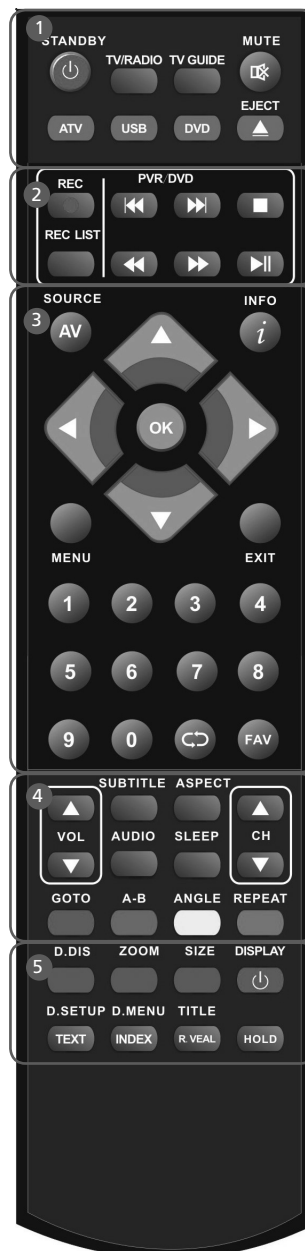

## CONNECTIONS

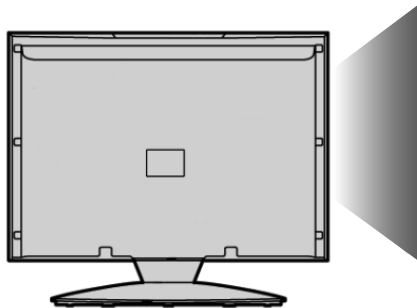


|   |                  |                               |
|---|------------------|-------------------------------|
| A | HEADPHONES       | 3.5mm Headphone output        |
| B | RF IN            | RF / TV Aerial Input          |
| C | AUDIO IN (R/L)   | Component / Video audio input |
| D | Component HD     | Component HD Input            |
| E | VIDEO            | Video input                   |
| F | COAX Audio Out   | Digital Coax output           |
| G | CI CARD IN       | Common Interface Card Input   |
| H | SCART            | SCART input                   |
| I | VGA(PC) Audio In | 3.5mm PC audio input          |
| J | VGA(PC)          | VGA-PC input                  |
| K | HDMI             | HDMI input                    |
| L | USB              | USB port                      |

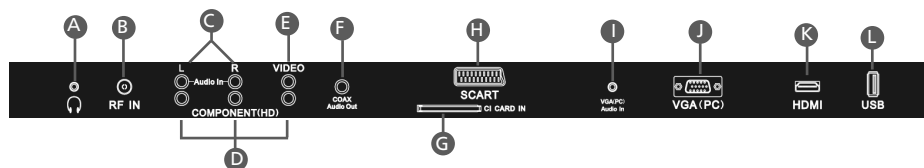

### Connecting a DVD Player/Recorder, Video Recorder or Cable/Satellite Box

TV's Input/Source should be set to SCART

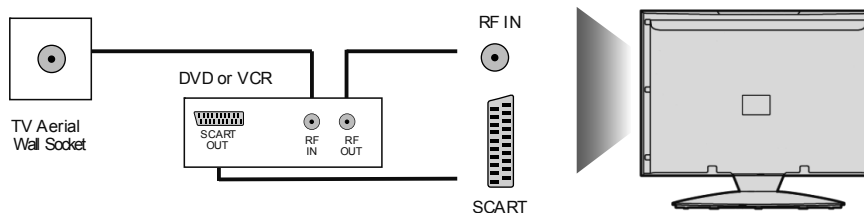




## CONNECTIONS

### Connecting a Camcorder, Camera or Games Console

Source should be set to Video

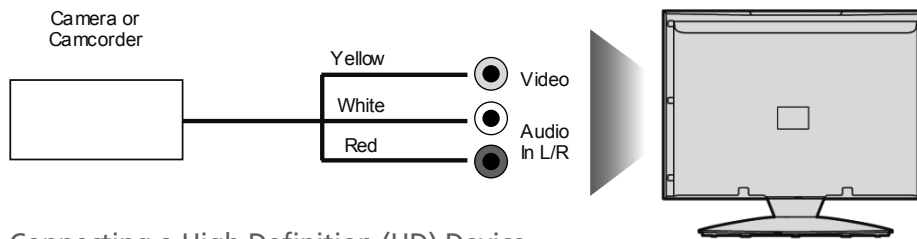


### Connecting a High Definition (HD) Device

Option 1 - via HDMI to HDMI cable

A HDMI cable can output both video and audio and enables you to enjoy digital-quality video and audio with minimal loss of quality.


TV's Input/Source should be set to HDMI.

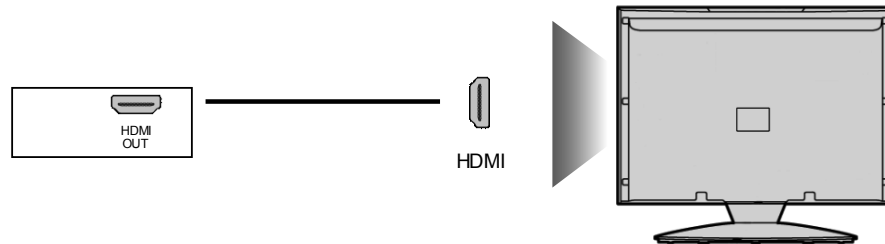

Option 2 - via Component cable



If you are supplied with a cable from the device which has RED, GREEN, BLUE, RED & WHITE connectors you must connect via Component (for picture) and by phono cable (for sound).

TV Source should be set to Component.

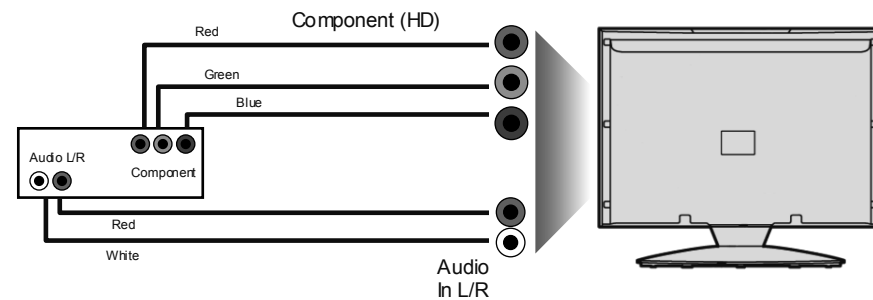



# PICTURE MENU

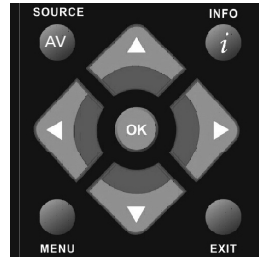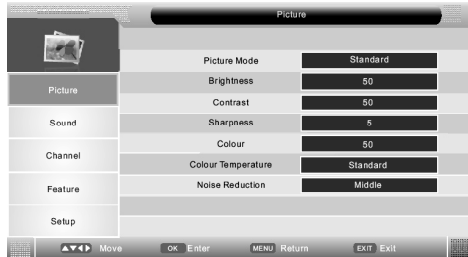

To access this menu, press [MENU] button on the remote control.

If you wish to make changes to any of the default settings, use the scroll **▲▼▶◀** buttons. To confirm any settings press [OK] button.

To exit this menu at anytime, press [EXIT] button.

Picture Mode - Choose from the following presets

|          |   |
|----------|---|
| Standard | Default settings                                |
| Personal | Lets you manually alter all the settings        |
| Movie    | Recommended settings when watching a movie      |
| Sport    | Recommended settings when watching sport        |
| Mild     | Set to be lighter in colour and less bright     |
| Game     | Recommended settings when playing game consoles |

Brightness - Increase or decrease the brightness of the picture

Contrast - Switch the balance between black and white

Sharpness - Increase or decrease the sharpness of the picture

Colour - Increases the colour from black and white

Colour Temperature - Choose from the following presets

|          |                                   |
|----------|-----------------------------------|
| Standard | Default settings                  |
| Warm     | Increases red within the picture  |
| Cool     | Increases blue within the picture |



Noise Reduction - Choose from the following presets

|        |                                   |
|--------|-----------------------------------|
| Low    | Minimum reduction in interference |
| Middle | Medium reduction in interference  |
| High   | Maximum reduction in interference |
| Off    | Off                               |


Tip: If you do not press any buttons for 10 seconds, the menu will automatically exit. You can change the length of time before the menu exits automatically - see 'OSD Timer' section.



## SOUND MENU

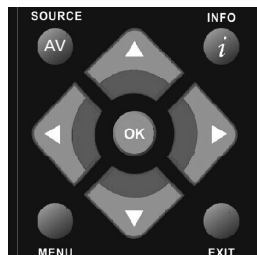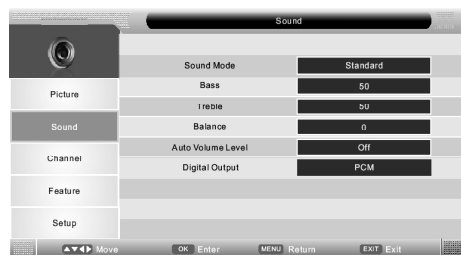

To access this menu, press [MENU] button on the remote control.

If you wish to make changes to any of the default settings, use the scroll  buttons. To confirm any settings press [OK] button.

To exit this menu at anytime, press [EXIT] button.

**Sound Mode - Choose from the following presets**

|          |   |
|----------|---|
| Personal | Selects your personal sound settings    |
| Voice    | Emphasises voice over other sounds      |
| Music    | Emphasises music over voices            |
| Theatre  | Provides live and full sound for movies |
| Standard | Default settings                        |

**Tip:** Treble and bass levels can only be adjusted when the sound mode 'Personal' is selected.

**Bass** - To adjust the amount of low frequency within the sound

**Treble** - To adjust the amount of high frequency within the sound


**Balance** - To switch the sound between the left and right speakers

**Auto Volume Level (AVL)** - When 'on' is selected, the volume will stay at a constant level regardless of input/source


**Digital Output** - This is the digital COAX Audio output. Choose from the following options:

|           |   |
|-----------|---|
| Off       | Off   |
| Bitstream | Select this option if you are connecting to a Dolby Digital 5.1 surround sounds amplifier via coax cable (True digital signal)                            |
| PCM       | Select this option if you are connecting to a Stereo Hi-fi via coax cable (Pulse-code modulation (PCM) is a digital representation of an analogue signal) |

## CHANNEL MENU

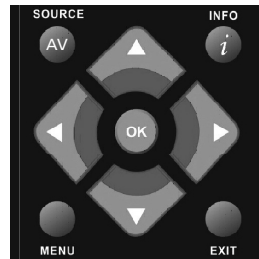

To access this menu, press [MENU] button on the remote control.

If you wish to make changes to any of the default settings, use the scroll  buttons. To confirm any settings press [OK] button.

To exit this menu at anytime, press [EXIT] button.

Channel Manager - Allows you to lock channels, delete channels, add/remove channel skip, move channel position and rename channels.

Favourite Manager - Add and remove favourites. Up to 4 favourite lists are available


Auto Search - You can select the country and then complete re-tune of the television

Manual Search - Select the start channel (which relates to the frequency) and search manually for a channel.


Note - This only searches for channels in the current source. i.e. Freeview channels on Freeview source



## FEATURE MENU

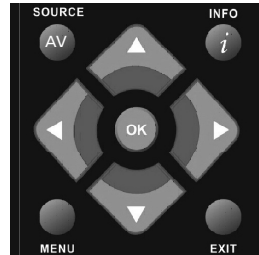

To access this menu, press [MENU] button on the remote control.

If you wish to make changes to any of the default settings, use the scroll  buttons. To confirm any settings press [OK] button.

To exit this menu at anytime, press [EXIT] button.

**System Lock** - This menu allows you to lock certain features of the television so that they cannot be used or viewed. For example if you don't want certain channels viewed by children or if the television is to be used in a hotel and you want to limit the volume.

When you enter the system lock menu you will be asked for a pin code. As default it is 0000.

You now have the choice to lock any of the following:

**System Lock** - Switches all the locks on or off

**Key Lock** - Stops the buttons on the television working

**Source Lock** - Press [OK] to enter then apply On to lock the source so it can't be used

**Channel Lock** - Press [OK] to enter then apply locks to channels you wish to block. This will lock the channels of the source you using, i.e. Analogue, Freeview.

**Default Source** - You can set the default start up source, so when the television is turned on it goes to this source, i.e. FREEVIEW, SCART, HDMI etc

**Default Channel** - You can set the default start up channel, so when the television is turned on it goes to this channel.

**Maximum Volume** - You can limit the maximum volume

**Change Pin Code** - Press [OK] to enter, first enter the current code, then enter your new code and confirm your new code. Write the new code here so you don't forget it \_\_\_\_\_

**Language** - Lets you adjust the different language options available

**Programme Schedule** - Lets you manually set recording by date, time and number of recordings.

**Clock** - Allows you to set the clock (as default the information is taken automatically from the digital TV signal)

**Hearing Impaired** - You can switch on the hearing impaired feature, this provides additional information and subtitles

**Sleep Timer** - Lets you set the sleep timer so the television automatically switches off after a certain amount of time


**Common Interface** - Pay per view services require a "smartcard" to be inserted into the TV.

If you subscribe to a pay per view service the provider will issue you with a 'CAM' and a "smartcard". The CAM can then be inserted into the COMMON INTERFACE PORT (CI Card In).



CAM and smartcard

## SETUP MENU

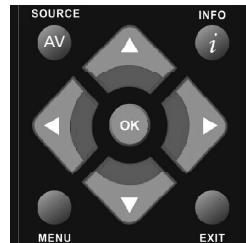

To access this menu, press [MENU] button on the remote control.

If you wish to make changes to any of the default settings, use the scroll ▲▼▶◀ buttons.

To confirm any settings press [OK] button.

To exit this menu at anytime, press [EXIT] button.

OSD Timer - Lets you adjust the amount of time the On Screen Menu stays on the screen before disappearing


First Time Installation - Takes you back to the first time installation screen, so you can completely re-tune both Freeview and analogue

Aspect Ratio - Within the UK the picture format varies depending on the channel/broadcast. There are a number of different options to best meet your needs

### Auto


Automatically displays the best picture format. So the picture is in the correct position. May have black lines At the top/bottom and/or sides.

### Full

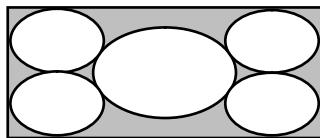


Fills the screen, so no black lines

### Zoom

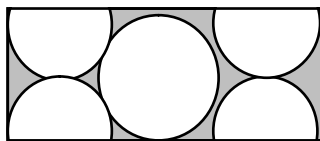


The picture is the correct proportion but zoomed in to fill the screen

### 4:3

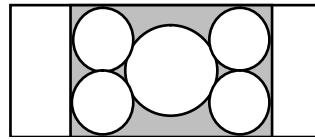


Displays the 4:3 picture in its original size. Side bars are shown to fill the 16:10 screen

### 16:9

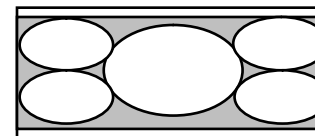

Top and bottom bars are shown to fill the 16:10 screen. 4:3 pictures will be stretched

### 14:9

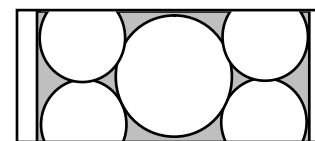

Displays the 14:9 picture in the correct proportion. As a result side bars are shown on the screen

Blue Screen - Changes the background when there is no input between clear and a blue background (Only available on some sources)

### Reset to default



Reset Menu System - This resets the menus to factory settings.

Reset TV Channels - This clears all the TV channels from the television.

Firmware Upgrade - From time to time we may release new firmware to improve the operation of the television (available to download). This menu lets you install the new software/firmware onto the television. Further details of how to do this will be issued with the firmware. Contact the helpline or refer to the 'product support' section of the website.

To check your firmware update press menu followed by the 'i' (information) button

## DVD MENU

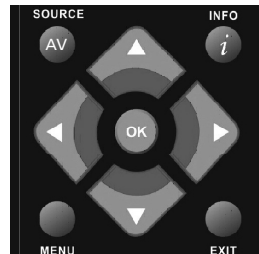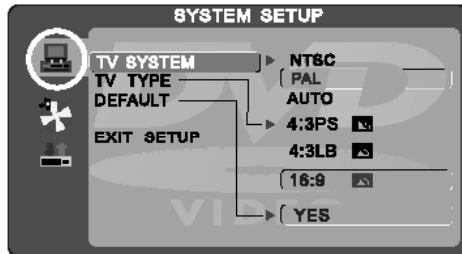

To access this menu, press [MENU] button on the remote control.

If you wish to make changes to any of the default settings, use the scroll buttons. To confirm any settings press [OK] button.

To exit this menu at anytime, press [EXIT] button.

TV System - Choose from the following options

|      |  |
|------|--|
| NTSC | Normally used for discs from North America, Japan etc              |
| PAL  | The standard for discs from UK/Europe, most of Asia, Australia etc |
| Auto | For both NTSC and PAL  |

TV Type - Choose from the following options

|        |   |
|--------|---|
| 4:3PS  | Traditional picture format, often used on old film        |
| 4:3 LB | Traditional picture which has been adapted for widescreen |
| 16:9   | Widescreen picture format                                 |

Default - This option allows you reset all DVD settings to factory settings.

Tone - Choose from the following options

|   |   |
|---|---|
| + | Increases the treble (high frequency sound) |
| - | Increases the bass (low frequency sound)    |

Dynamic Range - This is the difference between the quietest and loudest sounds. This setting works only with DVD discs recorded in Dolby digital.

|      |   |
|------|---|
| Full | Set this to listen with the range recorded on the disc                              |
| 4/8  | Set this to listen with a range equivalent to a normal television                   |
| 2/8  | Set this to listen with a smaller difference between the maximum and minimum volume |

Dual Mono

|          |  |
|----------|--|
| Stereo   | Outputs 2 channels of sound both left and right                  |
| Mono L   | Outputs left side sound  |
| Mono R   | Outputs right side sound   |
| Mix Mono | Outputs a single channel of sound but mix between right and left |

Tip: This TV/DVD player is pre-set to play Region 2 DVDs. In the event you wish to use the TV/DVD in another country that uses different region discs, please visit [www.skymediauk.co.uk](http://www.skymediauk.co.uk). Select 'Product Support', 'Changing Region'.



# Technika

---




## USING THE TELEVISION AS A COMPUTER MONITOR

**IMPORTANT** – Before connecting the computer to the television you must ensure the computer settings are correct for the television. You **MUST** do this using your old monitor.

How to set up for Windows XP & Windows Vista (connecting via VGA cable to the TV)

- 1) Switch on your computer
- 2) When finished booting up right click your mouse anywhere on the screen
- 3) Left click your mouse on Properties/Personalise

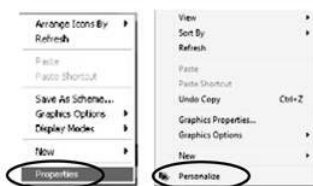

XP Screen

VISTA Screen



XP Screen

VISTA Screen

- 4) Left click your mouse on Setting/Display Settings. Ensure the screen resolution is set to what is shown in the technical specifications section toward the rear of this user guide. To correct the resolution to that of the television move the slider.



XP Screen

VISTA Screen

- 5) Left click your mouse on Advance/Advance Settings and left click on Monitor



XP Screen


VISTA Screen

- 6) Left click on the drop down for Screen refresh rate and select 60 Hertz, if you experience picture noise or 'flickering', select 50 hertz or 70 hertz.

- 7) Click on Apply, then click Yes and the settings will be saved.

- 8) Now switch off your computer and connect the television (as shown)

- 9) Switch on the TV, select the input/source to VGA/PC and re-start your PC.

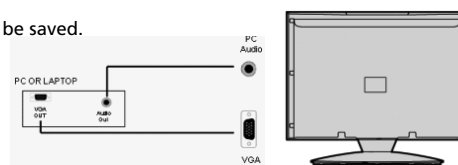

Connecting a Laptop

In addition to the above if you are connecting a laptop to the television you will also need to activate the VGA connection on the laptop. This can vary based on the brand of laptop you have, on many brands/models, it is as per below.

- 1) Connect the laptop to the television

- 2) On the Laptop push buttons  
The screen will now switch to the television.






Technika

PC Operation

## PC SETUP MENU

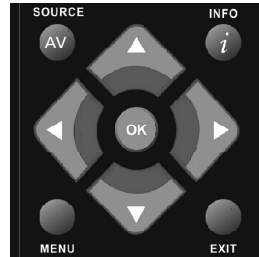

To access this menu, press [MENU] button on the remote control.

If you wish to make changes to any of the default settings, use the scroll buttons. To confirm any settings press [OK] button.

To exit this menu at anytime, press [EXIT] button.

Auto Adjust - Lets you automatically configure the television to be used as a computer monitor

Horizontal Position - Changes the horizontal position of the picture

Vertical Position - Changes the vertical position of the picture

Phase - To adjust delay time of phase in order to reduce the noise of picture

Clock - Alter this in order to reduce the noise within the picture

**Tip:** If the computer is left in-active for a period of time, the television will switch into a 'sleep' state (the screen will power off to save power). To switch back on press the standby button.



## USB RECORD - DIGITAL/FREEVIEW MODE

### USB RECORD – DIGITAL/FREEVIEW MODE

Built into this television is a USB record facility. This function is available in Digital/Freeview mode when used in conjunction with a compatible USB memory stick or USB Hard drive. The benefits of this are as follows:

- Pause live TV/Radio and then playback, fast forward and rewind (up to live TV)
- One button record, if you decide you want to record the current programme
- Easy programmable recording from the 7 day TV Guide
- Record TV/Radio and watch/listen back on your computer/laptop

Due to the nature of the product, it is necessary to use a high speed USB memory stick (as the TV reads from and writes to the memory stick at the same time, some memory sticks may not be suitable)

You can purchase high speed memory sticks from some computer stores, alternatively, we have a selection of tested and compatible memory sticks available to purchase directly from the helpline/web site. These are available in 4GB, 8GB and 16GB. (Please check the web site/helpline for latest specifications and prices)

#### Minimum Specification - USB Memory Stick

|             |                                |
|-------------|--------------------------------|
| Read Speed  | 20 MB/s (Mega Byte Per Second) |
| Write Speed | 6 MB/s (Mega Byte Per Second)  |

**If you wish to use a USB portable hard drive larger than 32GB, please refer to the FAQ section at the rear of this user guide.**

#### Setting up the USB Memory Stick

1) Insert the USB Memory Stick into the USB Port located on the side of the television.  
The TV will now test the speed of the memory

2) You will then have the option to start time shift

**Tip:** If the TV does not recognise the USB Memory Stick, please check that it is formatted to FAT32.

#### Pause Live TV/Radio (Time Shift)

Pausing Live TV/Radio is very simple.



⏸ - Press the play/pause button and the television will pause and the live content will be recorded. To resume watching press play/pause again.

⏩ - Press fast forward to go forward in a recording (i.e. to skip adverts)

⏪ - Press fast rewind to go back in a recording (i.e. if you fast forwarded too far)

**Tip:** When you switch the TV to standby or change channel the Time Shift memory is wiped. To restart time shift you must press play/pause button.

#### One Button Record

At any point in time you may decide to record the current channel that you are watching. To do this you need to press the [REC] button and the programme will record until it finishes.

**Tip:** This television contains one TV tuner, therefore it can only record the channel you are watching or record one channel while the television is in standby mode.


**Note:** USB record function is only available in Digital/Freeview TV/Radio mode. Due to copyright laws and illegal copying/recording it is not possible to record to/from any other input/output source.

## USB RECORD / 7 DAY TV GUIDE

### Record from 7 Day TV Guide

TV Guide is available in Digital TV mode. It provides information about forthcoming programmes (where supported by the freeview channel). You can view the start and end time of all programmes and on all channels for the next 7 days, set reminders and plan your recording

1) Press [TV GUIDE]. The following 7 Day TV Guide will appear.

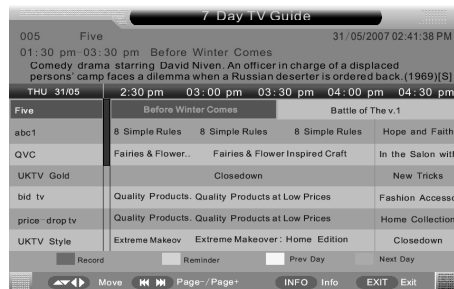

2) Navigate through the menu using ▲▼▶◀

You can now:

Record programmes by pressing RED (Press repeatedly to record daily, weekly, monthly)

Set a reminder by pressing GREEN

View a previous day by pressing YELLOW

View the next day by pressing BLUE

3) Press [EXIT] to exit the 7 day TV Guide.

### Playing Back Recorded Content

To view all your recordings, press [REC LIST]

You can then simply navigate using ▲▼▶◀ to the content you wish to watch and press [OK]



Indicates the amount of space available on the USB Memory Stick


Note: This TV is designed to operate with USB memory sticks up to 32GB. It is possible to use either a USB memory stick or a USB portable Hard Drive of a larger capacity, however, it must be formatted to the FAT32 file system in order to operate correctly. At the time of printing this user guide, Windows XP/Vista computers are only capable of formatting up to 32GB, therefore, you will need a software programme/utility to format larger USB drives/hard drives to FAT32. Additional help and support is available from the web site.



USB Mode / Media Player

Technika

## USB MODE / MEDIA PLAYER

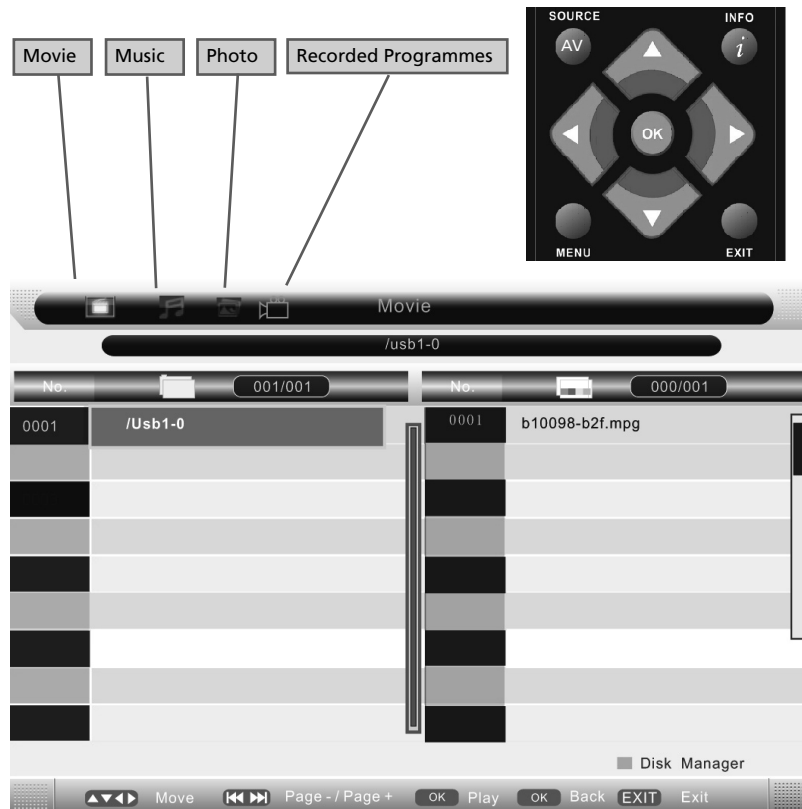

USB mode offers playback of various different types of content that you have saved on your USB Memory Stick.

On switching to USB source the above menu screen will appear. The content will be divided into Movies, Music, Photos and Recorded Programmes based on file type.

You can navigate through the menus using the scroll ▲▼▶◀ buttons. To confirm the item you wish to play/view press [OK] button.

## USING WITH SKY DIGITAL / VIRGIN MEDIA

You may wish to use your TV with Sky Digital, Virgin Media or another cable or Satellite box. There are a number of connection options, the best being connecting via SCART cable.

### Connecting via SCART

- 1) Connect the SCART cable from the Cable/Satellite Box to SCART of the TV
- 2) Press [SOURCE]
- 3) Press [V] or [^] to select SCART
- 4) Press [OK]

The channel your Cable/Satellite box is displaying will now be shown on the TV.

### Connecting via RF

You may wish to share your Sky Digital signal around the home by using an RF connection.

- 1) Connect the RF cable from the RF output socket of the sky/cable box to the 'RF IN' of the TV.
- 2) Switch the TV to analogue TV mode
- 3) Press [MENU] to enter menu
- 4) Press [V] twice to select Channel Menu
- 5) Press [>] to enter menu
- 6) Press [V] to select Auto Search
- 7) Press [OK] and then select Start

Once tuning is complete the first channel will appear. Press [CH+] to move through the channel until you find the Sky channel. The channel can then be moved if you wish, please refer to the Channel Menu, Channel Manager section of this user guide.

## USING WITH SKY DIGITAL REMOTE CONTROL (BSKYB) OR UNIVERSAL REMOTE CONTROL

You may wish to use your Sky Digital or a universal remote control to operate some of the functions of this TV. For this you require a 'code' that needs to be programmed into your Sky Digital or universal remote control.

For codes for universal remote controls, please visit our website where you will find the very latest information and codes. For codes for Sky/Sky+/Sky HD, please note that at the point of manufacture, BSKyB have not launched the code required for this model of TV. They are due to launch a new remote control which should include the necessary code to operate the functions of the TV during 2010 (called revision 9).

Please check our website for updates, alternatively, see some alternative options of remote controls that are available.

The One for All remote controls shown on the right will operate all of the functions of the Sky box in the same way the original remote control will, in addition, they will also operate the functions of this model of TV. The One for All versions shown are only available to purchase from the helpline/website. When you order, we will need to know the model and serial number of your TV in order that we can include the necessary software/code for your particular TV.



One for All

Sky Originals

The original Sky remotes are shown for comparison purposes only.

## FREQUENTLY ASKED QUESTIONS

|                  |  |  |
|------------------|--|--|
| TV               | I have tuned in Digital TV but I am not receiving any or all of the channels and/or the channels I receive are breaking up | <p>1) Check you are in an area that can receive Freeview. Visit <a href="http://www.freeview.co.uk">www.freeview.co.uk</a> or call 08701 111 270.</p> <p>2) Check you are using an aerial that is able to receive a good digital signal. In most cases, you will need an outdoor digital hi-gain/wideband aerial. In areas that have excellent Freeview coverage, you may be able to use a loft type aerial but it is highly likely that you will also need to connect a booster between the back of the TV and the TV aerial wall socket. Unfortunately, to receive a good enough digital signal, it is not possible to use a portable/indoor type aerial. This may change once the analogue signal is switched off in 2012 and the Digital signal strength is increased.</p> |
| DVD              | I have inserted a disc but it is not playing   | <p>1) Ensure you have inserted put the disc in facing the correct way forward</p> <p>2) Ensure the disc is clean and is not scratched</p> <p>3) Some copied discs will not play.</p> <p>4) Check the DVD is a region 2 disc – to change the region of the DVD player, refer to section 'Changing Regions'.</p>   |
| Game Consoles    | I have connected my PS3 to the TV via HDMI, but I am not receiving any pictures or sound on my Console                     | <p>1) Ensure the TV's source is on HDMI</p> <p>2) Check your settings on your PS3 are as per the PS3 instruction manual</p>  |
| Game Consoles    | I have connected my Xbox 360 to the TV via Component Cables (Red, Green & Blue) but I am not receiving any sound           | Component cables only provide HD Pictures. For the sound you will need to connect the Red & White audio cables on the Xbox to the Red & White phono inputs on the rear of the TV. Please refer to the 'Connections' pages.   |
| VCR/DVD Recorder | I have connected the TV to my VCR or DVD Recorder via SCART but it is not recording  | In addition to connecting via SCART, you should connect the aerial cable from the wall socket to your VCR/DVD Recorder and another aerial cable from the VCR/DVD Recorder to the TV  |
| General          | I would like to have louder sound by connecting additional speakers  | <p>There are 2 options:</p> <p>1) Use Digital COAX output that can be connected to an amplifier/surround sound system output and a 3.5mm to phono cable (available separately) to connect to an amplifier/surround sound system</p> <p>2) Use the 3.5mm headphone output and a 3.5mm to phono cable (available separately) to connect to an amplifier/surround sound system</p>  |
| General          | Why are some options in the menu unavailable and greyed out  | Some options are only available in certain sources, i.e. HDMI, PC/VGA. They are unavailable in the other sources where they have no affect.  |
| USB Mode         | I have inserted a USB Memory Key, but the TV does not recognise it   | Ensure the USB Memory Key is formatted to type FAT32.  |
| USB Mode         | Using a USB portable hard drive  | If you wish to use a portable hard drive larger than 32GB, please note that it must be formatted to the FAT32 file system in order to operate on this TV. Windows XP/Vista computers are only capable of formatting up to 32GB, therefore, you will need a software programme/utility to format larger hard drives. Please refer to the web site for more information.   |
| USB Record / TV  | I can not change the channel, access the menu or use the red button  | During Time Shift you can not change the channel, access the menu or use the red button  |
| USB Record / TV  | When using the USB to record the picture 'breaks up' or experience loss of sound.  | Check the USB Memory Stick meet the minimum requirements of Read Speed - 20 MB/s (Mega Byte Per Second), Write Speed - 6 MB/s (Mega Byte Per Second)   |
| System Lock      | I have changed the password on the television and now forgotten it   | There is a master password of 4711, to gain access to the TV menu and reset the normal password  |
| TV               | I have re-tuned my television but when I switch it of it is not storing the channels                                       | Complete a first time installation, please refer to the set-up menu section of the manual of how to do this  |

## TECHNICAL SPECIFICATION

|                                 |  |   |
|---------------------------------|--|---|
| Model                           | LCD 19-220   | LCD 22-220                                  |
| Screen size (diagonal)          | 19"/48cm   | 22"/56cm                                    |
| Resolution                      | 1440 x 900   | 1680 x 1050                                 |
| Contrast Ratio                  | 1000:1   | 1000:1                                      |
| Brightness cd/m2                | 300  | 300   |
| PC RGB                          | Yes  | Yes   |
| RF                              | 75 ohm Antenna / PAL-SECAM   |   |
| Video Inputs                    | 1 x SCART, 1 x Video, 1 x Component (YPbPr - 1080i)  |   |
| Sound Inputs                    | 1 x 3.5mm jack for PC audio input, 1 x pair RCA shared for Video & YPbPr (component) audio input |   |
| Sound Outputs                   | 1 x Coax Audio output, 1 x Headphone output  |   |
| HDMI                            | 1 (up to 1080i)  |   |
| Watts (RMS)                     | 2 x 3  |   |
| Voltage                         | 110-240v 50/60Hz 1.5A 60W<br>(standby 1.5W)  | 110-240v 50/60Hz 1.5A 70W<br>(standby 1.5W) |
| Dimensions including stand (mm) | 457W x 394H x 170D   | 527W x 426H x 170D                          |
| Net weight (Kgs)                | 5.0  | 5.5   |



## INDEX

|  |       |  |    |
|--|-------|--|----|
| Attaching the base/stand.....          | 9     | On Screen Display Timer .....                    | 20 |
| Aspect Ratio.....                      | 20    | One Button Record .....                          | 25 |
| Auto Configuration of screen (PC)..... | 24    | Pause Live TV / Radio (Time Shift).....          | 25 |
| Auto Volume Level .....                | 17    | Phase (PC) .....                                 | 24 |
| Auto Search .....                      | 18    | Picture Mode .....                               | 16 |
| Balance .....                          | 17    | Remote control .....                             | 13 |
| Bass .....                             | 17    | Reset to default.....                            | 20 |
| Blue Screen .....                      | 20    | Returning to Default (DVD) .....                 | 21 |
| Brightness .....                       | 16    | Sharpness .....                                  | 16 |
| Changing DVD Regions .....             | 21    | Sleep Timer .....                                | 19 |
| Channel Manager.....                   | 18    | Sound Mode .....                                 | 17 |
| Clock.....                             | 19    | Source Menu.....                                 | 12 |
| Clock (PC).....                        | 24    | System Lock .....                                | 18 |
| Colour .....                           | 16    | Technical Specifications .....                   | 30 |
| Colour Temperature .....               | 16    | Tone (DVD) .....                                 | 21 |
| Common Interface .....                 | 18    | Treble .....                                     | 17 |
| Connections.....                       | 14-15 | TV buttons .....                                 | 12 |
| Contrast .....                         | 16    | TV Guide .....                                   | 26 |
| Detaching the base/stand.....          | 9     | TV System (DVD) .....                            | 21 |
| Digital Output .....                   | 17    | TV Type (DVD) .....                              | 21 |
| Digital Switchover .....               | 31-32 | USB Mode / Media Player .....                    | 27 |
| Dual Mono (DVD).....                   | 21    | USB Record .....                                 | 25 |
| Dynamic Range (DVD).....               | 21    | Using with Sky Digital / Virgin Media .....      | 28 |
| Favourites Manager .....               | 18    | Using the television as a computer monitor ..... | 25 |
| Firmware Update .....                  | 20    | Vertical Position (PC) .....                     | 24 |
| First Time Installation .....          | 20    | Wall mounting .....                              | 9  |
| Frequently Asked Questions.....        | 29    | What is included in the box .....                | 8  |
| Getting Started.....                   | 11    |  |    |
| Hearing Impaired .....                 | 19    |  |    |
| Horizontal Position (PC).....          | 24    |  |    |
| Language .....                         | 19    |  |    |
| Manual Search.....                     | 18    |  |    |
| Noise Reduction .....                  | 16    |  |    |

## DIGITAL SWITCHOVER

Television in the UK is going digital, bringing us all more choice and new services. Starting late 2007 and ending in 2012, television services in the UK will go completely digital, TV region by TV region.

### How the switchover affects your TV equipment.

Your new TV has a digital tuner built in, which means it is ready to receive the Freeview signal by simply connecting it into your aerial socket (you can check if you can get digital TV through your aerial now or whether you will have to wait until the switchover at [www.digitaluk.co.uk](http://www.digitaluk.co.uk))

When the TV switchover happens in your area, there are at least two occasions when you will need to re-tune your TV in order to continue receiving your existing TV channels and also to pick up new ones. Digital UK, the body leading the digital switchover, will advise you when you need to retune during the switchover.

### How to retune.

Retuning your TV is a very quick and simple process. We recommend that you retune every few months to ensure you are receiving the very latest TV and radio channels that are broadcast.

1) On the remote control press [MENU] followed by 8 - 8 - 8 - 8 (so the number 8 button four times)

2) The First Time Installation menu will appear. Press [OK] and tuning will take place.


For help and support regarding the digital switchover, please contact Digital UK:

Telephone: 08456 50 50 50 (calls charged at local call rate, approx 3p per minute daytime or 1p per minute evenings from a BT landline)

Digital UK website: [www.digitaluk.co.uk](http://www.digitaluk.co.uk)



## When does switchover happen?

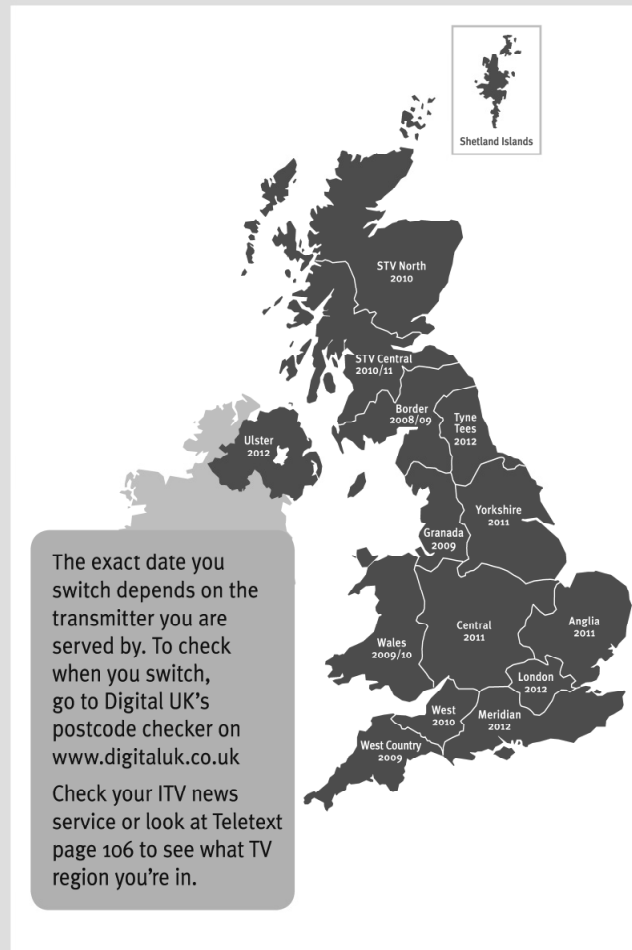

Tesco Stores Ltd.  
Cheshunt EN8 9SL, UK

XMU/MAN/0042





## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>