



# ACM1202P

## 2 x 120w Power Amplifier



# Operating Manual

# ACM1202P, 2 x 120 Watt Power Amplifier

## Product Description

The ACM1202P is a dual 120 watt power amplifier designed for commercial installations. The one unit contains two independent 120 watt amplifiers for either stereo or dual zone applications. The ACM1202P can be used for either low impedance (4 or 8 ohm) or 70v/100v line speaker systems per channel. The amplifier can be mounted in a standard 19" equipment rack (rack ears supplied) or it can be used on a shelf or table. The ACM1202P features a line level input (with parallel output) per channel and is normally used with mixers, mixer amplifiers or other power amplifiers.



## Front Panel Features

### Power Switch

The black rocker switch on the right hand side of the front panel is used to switch the amplifier on and off. The 'up' position is on. When the amplifier is connected to an appropriate AC power source and is switched on, the blue power LED will illuminate.

### On LED

The blue "On" LED above the power switch will illuminate when the amplifier is connected to mains power and is switched on.


### Signal LED

The green "Signal" LED's located next to the On LED indicate that the ACM1202P is receiving audio signal via its line level inputs. One LED is provided per channel. The signal LED's are a simple way of trouble-shooting installations especially in multi amplifier projects. At a glance the signal LED's will indicate that audio is reaching the amplifier.

### Rack Mounting

The ACM1202P is supplied with rack ears attached to allow mounting within a standard 19" equipment rack. As is the case with almost all audio products, adequate ventilation and air flow is required. When installing multiple ACM amplifiers within the one rack, it is recommended that at least one rack unit of ventilation space is left between every two amplifiers.

For table or shelf mounting, the rack ears can be removed using a screwdriver. Once the rack ears are removed, please reinstall the screws.

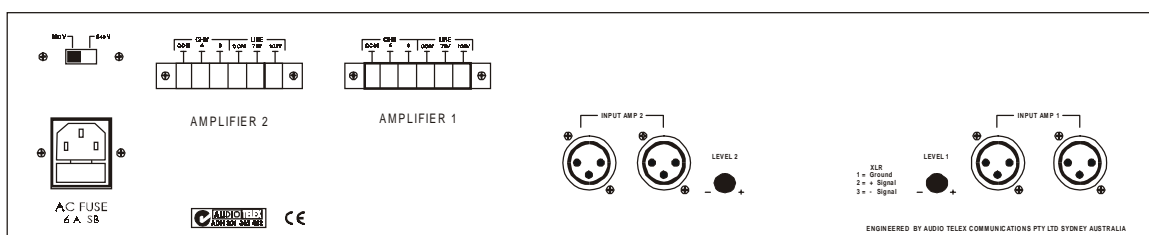

## Rear Panel Features

### AC Power Inlet

The 3 pin IEC power inlet is located on the bottom left of the rear panel and accepts a standard mains power lead fitted with an IEC connector. Before plugging in a power lead, please check the rear panel of the amplifier to ensure that the voltage label shows the correct AC operating voltage for your part of the world.

The inlet is equipped with an in-built AC fuse holder fitted with a 6 Amp slow blow fuse plus a spare fuse. **Please ensure that the mains power cord is disconnected before attempting to check or replace this fuse.** Power consumption is 400 watts (max).

### Speaker Output Terminal Strip

Located on the top left of the rear panel are the speaker output terminal strips. A terminal strip is provided for each of the two amplifiers. Reading from left to right, the connections per terminal strip are:

- COM** Common or “-” for low impedance speaker loads (4 or 8 ohms).
- 4** The “+” for 4 ohm speaker loads (use with common)
- 8** The “+” for 8 ohm speaker loads (use with common)

- COM** Common or “-” for 70v or 100v speaker loads (maximum load of 80 ohms at 100v)
- 70** The “+” for 70v line speaker loads (use with common)
- 100** The “+” for 100v line speaker loads (use with common)

Please ensure that the correct “Common” is used. Low impedance and 70/100v loads can be used simultaneously but please pay careful attention to the overall speaker load. When used individually, the low impedance load should be 4 ohms or higher while the 100v line load should not fall below 80 ohms per amplifier. When both low impedance and 70/100v outputs are used simultaneously on the one amplifier, ensure that neither output is loaded to maximum.

### Level Control

Located next to the XLR input/output is a recessed screwdriver adjustable level control. One is provided per amplifier channel. The level control is an input attenuation control normally used to match the amplifier to a wide variety of input signals. In essence, the amplifier is designed to receive a 700mv input signal however the level control can be used to increase the level for lower signals or decrease the level for higher input signals. In normal use, the level control is used as a ‘set and forget’ master level control for the amplifier.

### XLR Audio Input and Parallel Output

The ACM1202P includes both male and female 3 pin XLR connectors per channel. While the female is normally used as the input to the amplifier, both XLR’s are connected in parallel so either will work. When signal is connected to one XLR, the other XLR becomes a line level output allowing the input signal to be distributed (split) to other amplifiers. In some projects, the same input may be looped through to multiple amplifiers using this method. Up to 6 amplifiers can be looped together without any noticeable loss in level. A distribution amplifier should be used when more than 6 amplifiers need to be looped.

The XLR’s are wired as follows: **Pin 1:** Shield. **Pin 2:** Hot, +, Positive. **Pin 3:** Cold, -, Negative

## Fuse Sizes

Mains, 240VAC: 6 Amperes Slow Blow.

## Notes

The DC fuse is located on the circuit board. This is a feature of the ACM series amplifier, which is equipped with a current limiting circuit preventing excessive DC current, thus eliminating the risk of blowing high tensions fuses. In the unlikely event that the DC fuse actuates, the output transistors should be checked, as it is probable that the amplifier has been subjected to very extreme conditions.

# Important Safety Information

1. **Save the carton and packing material even if the equipment has arrived in good condition.** Should you ever need to ship the unit, use only the original factory packing.
  2. **Read all documentation before operating your equipment.** Retain all documentation for future reference.
  3. **Follow all instructions** printed on unit chassis for proper operation.
  4. **Do not spill water or other liquids into or on the unit,** or operate the unit while standing in liquid.
  5. **Make sure power outlets conform to the power requirements** listed on the back of the unit.
  6. **Do not use the unit if the electrical power cord is frayed or broken.** The power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords and plugs, convenience receptacles, and the point where they exit from the appliance.
  7. **Always operate the unit with the AC ground wire connected** to the electrical system ground. Precautions should be taken so that the means of grounding of a piece of equipment is not defeated.
  8. **Mains voltage must be correct and the same as that printed on the rear of the unit.** Damage caused by connection to improper AC voltage is not covered by any warranty.
  9. **Have gain controls on amplifiers turned down during power-up** to prevent speaker damage if there are high signal levels at the inputs.
  10. **Power down & disconnect units from mains voltage before making connections.**
  11. **Never hold a power switch in the “ON” position if it won’t stay there itself!**
  12. **Do not use the unit near stoves, heat registers, radiators, or other heat producing devices.**
  13. **Do not block fan intake or exhaust ports.** Do not operate equipment on a surface or in an environment which may impede the normal flow of air around the unit, such as a bed, rug, weathersheet, carpet, or completely enclosed rack. If the unit is used in an extremely dusty or smoky environment, the unit should be periodically “blown free” of foreign matter.
  14. **Do not remove the cover.** Removing the cover will expose you to potentially dangerous voltages. There are no user serviceable parts inside.
  15. **Do not drive the inputs with a signal level greater than that required to drive equipment to full output.**
  16. **Do not connect the inputs / outputs of amplifiers or consoles to any other voltage source,** such as a battery, mains source, or power supply, regardless of whether the amplifier or console is turned on or off.
  17. **Do not run the output of any amplifier channel back into another channel’s input. Do not parallel- or series-connect an amplifier output with any other amplifier output.**
- Audio Telex Communications Pty Ltd is not responsible for damage to loudspeakers for any reason.*
18. **Do not ground any red (“hot”) terminal. Never connect a “hot” (red) output to ground or to another “hot” (red) output!**
  19. **Non-use periods.** The power cord of equipment should be unplugged from the outlet when left unused for a long period of time.
  20. **Service Information** Equipment should be serviced by qualified service personnel when:
    - A. The power supply cord or the plug has been damaged.
    - B. Objects have fallen, or liquid has been spilled into the equipment
    - C. The equipment has been exposed to rain
    - D. The equipment does not appear to operate normally, or exhibits a marked change in performance
    - E. The equipment has been dropped, or the enclosure damaged.



Engineered by Audio Telex Communications Pty Ltd, Sydney, Australia  
A.B.N. 78 001 345 482 Inc in NSW

**[www.audiotelx.com.au](http://www.audiotelx.com.au)**

**Export Sales & Corporate Head Office**

Private Bag 149, Silverwater NSW 1811  
149 Beaconsfield Street, Silverwater NSW 2128  
Australia  
Ph: 61-2- 9647 1411  
Fax: 61-2-9748 2537  
E-mail: [ho@audiotelx.com.au](mailto:ho@audiotelx.com.au)

**Sydney (NSW & ACT Sales)**

Private Bag 149, Silverwater NSW 1811  
149 Beaconsfield Street, Silverwater NSW 2128  
Ph: (02) 9647 1411  
Fax: (02) 9648 3698  
E-mail: [nsw@audiotelx.com.au](mailto:nsw@audiotelx.com.au)

**Melbourne (Vic & Tas Sales)**

P.O. Box 131, Blackburn South VIC 3130  
22/277 Middleborough Road, Box Hill VIC 3128  
Ph: (03) 9890 7477  
Fax: (03) 9890 7977  
E-mail: [vic@audiotelx.com.au](mailto:vic@audiotelx.com.au)

**Brisbane (Qld Sales)**

P.O. Box 871, Fortitude Valley QLD 4006  
42 Commerical Road, Fortitude Valley QLD 4006  
Ph: (07) 3852 1312  
Fax: (07) 3252 1237  
E-mail: [qld@audiotelx.com.au](mailto:qld@audiotelx.com.au)

**Adelaide (SA & NT Sales)**

P.O. Box 157, Hindmarsh SA 5001  
31 Walsh Street, Thebarton SA 5031  
Ph: (08) 8352 4444  
Fax: (08) 8352 4488  
E-mail: [sa@audiotelx.com.au](mailto:sa@audiotelx.com.au)

**Perth (WA Sales)**

P.O. Box 404, North Perth WA 6906  
299 Fitzgerald Street, West Perth WA 6005  
Ph: (08) 9228 4222  
Fax: (08) 9228 4233  
E-mail: [wa@audiotelx.com.au](mailto:wa@audiotelx.com.au)

**Auckland (NZ Sales)**

P.O. Box 512, Albany 1331  
Unit B, 11 Piermark Drive, Albany 1331  
Ph: (09) 415 9426  
Fax: (09) 415 9894  
E-mail: [audiotlx@nznet.gen.nz](mailto:audiotlx@nznet.gen.nz)

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>