



User's Guide
SCSCF30xx-10x
Stand-Alone Device

- **DS3 or T3 / E3**
- **Coax (BNC) to Fiber**

Transition Networks SCSCF30xx-10x series Devices encode and decode DS3 or E3 coax copper signals over fiber optic cable to extend the distance and transmission reliability of high-speed DS3 or E3 data traffic. The SCSCF30xx-10x also connects remote locations via T3/E3 cable.

| Part Number | Port One - Copper | Port Two - Duplex Fiber-Optic |
|---------------|-------------------|--|
| SCSCF3011-100 | 75 ohm coax (BNC) | ST, 1300 nm multimode 2 km (1.2 miles)* |
| SCSCF3013-100 | 75 ohm coax (BNC) | SC, 1300 nm multimode 2 km (1.2 miles)* |
| SCSCF3014-100 | 75 ohm coax (BNC) | SC, 1310 nm singlemode 20 km (12.4 miles)* |
| SCSCF3015-100 | 75 ohm coax (BNC) | SC, 1310 nm singlemode 40 km (24.8 miles)* |
| SCSCF3016-100 | 75 ohm coax (BNC) | SC, 1310 nm singlemode 60 km (37.3 miles)* |
| SCSCF3017-100 | 75 ohm coax (BNC) | SC, 1550 nm singlemode 80 km (49.7 miles)* |
| SCSCF3018-100 | 75 ohm coax (BNC) | MT-RJ, 1300 nm multimode 2 km (1.2 miles)* |
| SCSCF3019-100 | 75 ohm coax (BNC) | LC, 1310 nm single mode 20 km (12.4 miles)* |
| SCSCF3029-100 | 75 ohm coax (BNC) | SC, 1310 nm (TX)/1550 nm (RX) 20 km (12.4 miles)* |
| SCSCF3029-101 | 75 ohm coax (BNC) | SC, 1550 nm (TX)/1310 nm (RX) 20 km (12.4 miles)* |

SCSCF3029-100 and -101 are intended to be installed in the same network where one is the local converter and the other is the remote converter.

* Typical maximum cable distance. Actual distance is dependent upon the physical characteristics of the network.

Note: The CCSCF30xx-10x model is the chassis version of the Device. For more information, see the CCSCF30xx-10x user's guide on-line at www.transition.com.

| | |
|--------------------------|--------------|
| Installation | 2 |
| Operation | 6 |
| Cable Specifications | 7 |
| Technical Specifications | 8 |
| Troubleshooting | 9 |
| Compliance Information | 12 |

SCSCF30xx-10x

| Part Number | Port One - Copper | Port Two - Single Fiber Optic |
|---------------|-------------------|--|
| SCSCF3029-102 | 75 ohm coax (BNC) | SC, 1310 mn (TX)/1550 nm (RX) 40 km (24.8 miles)* |
| SCSCF3029-103 | 75 ohm coax (BNC) | SC, 1550 mn (TX)/1310 nm (RX) 40 km (24.8 miles)* |
| SCSCF3039-100 | 75 ohm coax (BNC) | LC, 1300 mn multimode 2 km (1.2 miles)* |

SCSCF3029-102 and -103 are intended to be installed in the same network where one is the local converter and the other is the remote converter.

*Typical maximum cable distance. Actual distance is dependent upon the physical characteristics of the network: (TX) = transmit, (RX) = receive.

Optional Accessories (sold separately)

| Part Number | Description |
|-------------|---|
| SPS-1872-SA | Optional External Power Supply; 18-72VDC Stand-Alone Output: 12.6VDC, 1.0 A |
| SPS-1872-PS | Optional External Power Supply; 18-72VDC Piggy-back; Output: 12.6VDC, 1.0 A |
| E-MCR-04 | 12-Slot Device Rack (includes universal internal power supply) 17 x 15 x 5 in. (432 x 381 x 127 mm) |
| WMBL | Optional Wall Mount Brackets; 4.0 in. (102 mm) |
| WMBV | Optional Vertical Mount Bracket; 5.0 in. (127 mm) |
| WMBD | Optional DIN Rail Mount Bracket; 5.0 in. (127 mm) |
| WMBD-F | Optional DIN Rail Mount Bracket (flat); 3.3in. (84 mm) |

Installation

Set the Loop-Back Switch

The loop-back switch is located on the front panel of the Device and is used for installation and network debugging procedures.

To set the switch, use a small flatblade screwdriver or a similar device (see the drawing to the right).



- CL (Coax loop-back) Enable loop-back on the local coax interface.
- (Center Position) Normal operation.
- FL (Fiber loop-back) Enable loop-back on the local fiber interface.

Note: Three loop-back test scenarios are described in detail on page 10.

Installation -- Continued

CAUTION: Wear a grounding device and observe electrostatic discharge precautions when setting the configuration switches. Failure to observe this caution could result in damage to, and subsequent failure of, the Device.

Set the Configuration Switches

The configuration switches are located on the side of the Device. Use a small, flat-blade screwdriver to set the recessed switches.

Switch 1 -- Select DS3 or E3

up - Supports a DS3 interface.

down - Supports a E3 interface.



DS3




E3

Switch 2 -- Coax Line Build Out (DS3 only)

up - The DS3 line is set up to operate at distances up to 225 ft. (68.6 m).

down - The DS3 line is set up to operate at distances greater than 225 ft. (68.6 m).



<225 ft (68.6 m)




>225 ft (68.6 m)


Switch 3 -- Signal on Loss of Carrier

up - Transmits an alarm indication signal (AIS) on the loss of the input carrier (unframed).

down - No signal is transmitted on the loss of the input carrier (unframed).



Transmit alarm



No signal


Switch 4 -- Alarm Indication Signal (AIS)

up - AIS is defined as a pattern of alternating 1's and 0's (unframed).

down - AIS is defined as a pattern of all 1's (unframed).



Alarms = 1's and 0'



Alarm = all 1's

Installation -- Continued

CAUTION: Wear a grounding device and observe electrostatic discharge precautions when setting the jumper. Failure to observe this caution could result in damage to, and subsequent failure of, the Device.

Set the Coax Grounding Jumpers

Note: Modify the settings for J11 and J12 only if necessary.


Jumpers J11 and J12 (located on the circuit board near the coax ports) provide a grounding feature so that the SCSCF30xx-10x Device complies with the G.703 specification where:

- The output coax port is connected to chassis ground.
- A provision to connect the input coax port to chassis ground is provided.

The factory settings for these two jumpers are:


Jumper J12 (*jumpered*) = Output coax port is connected to chassis ground.

Jumper J11 (*not-jumpered*) = Input coax port is not connected to chassis ground.



The jumpers are located on the circuit board inside the Device housing. To set the jumpers:

1. Using a small screwdriver, remove the four (4) screws that secure the cover and carefully remove the cover from the Device.
2. Locate the jumper on the circuit board.

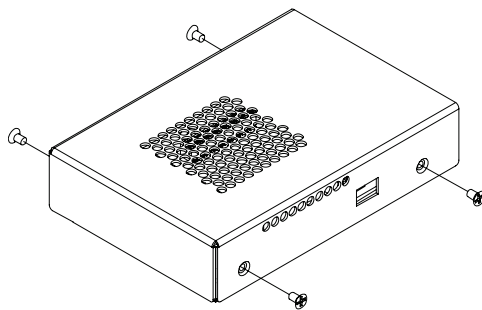


3. Using small needle-nosed pliers or similar device, move the jumper to the desired position. (Refer to the above drawing.)
4. Carefully replace the cover on the Device and replace the four (4) screws that secure the cover to the Device.

Installation -- Continued


Install the Coax Cable

1. Locate or build coax cables with female connectors installed at both ends.
2. Connect the coax cables to the Device as described:
 - Connect the female TX cable connector to the male TX port.
 - Connect the female RX cable connector to the male RX port.
3. Connect the coax cables to the other device (switch, workstation, etc.) as described:
 - Connect the female TX cable connector to the male RX port.
 - Connect the female RX cable connector to the male TX port.

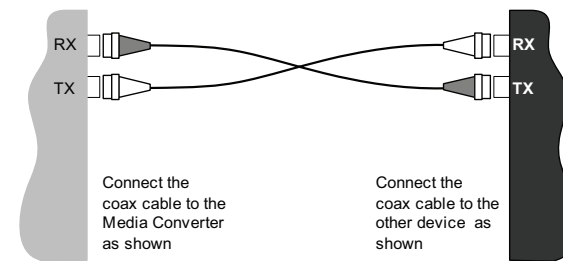

Install the Fiber Cable

1. Locate or build fiber cables with male, two-stranded TX to RX connectors installed at both ends.
2. Connect the fiber cables to the local SCSCF30xx-10x Device as described:
 - Connect the male TX cable connector to the female TX port.
 - Connect the male RX cable connector to the female RX port.
3. Connect the fiber cables to the remote SCSCF30xx-10x Device as described:
 - Connect the male TX cable connector to the female RX port.
 - Connect the male RX cable connector to the female TX port.

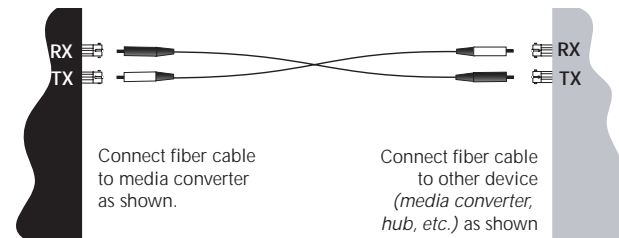

Installation -- Continued

Power the Device

AC

1. Connect the barrel connector on the power adapter to the Device's power port (located on the back of the Device).
2. Connect the power adapter plug to AC power.
3. Verify that the Device is powered by observing the illuminated LED power indicator light.


DC

Consult the user's guide for the Transition Networks SPS1872-xx DC external power supply for powering the Device.

Operation

After installation, the Device should function without operator intervention. Use the status LEDs to monitor the Device operation in the network.

| | | |
|-----|----------------|--|
| SDC | Green on | The coax link is up. |
| | Green flashing | The coax link is in loop-back mode. |
| | Yellow on | AIS (Alarm Indication Signal) on the coax link. |
| SDF | Green on | The fiber link is up. |
| | Green flashing | The fiber link is in loop-back mode. |
| | Yellow on | AIS (Alarm Indication Signal) on the fiber link. |
| PWR | Green on | The Device is connected to external power. |

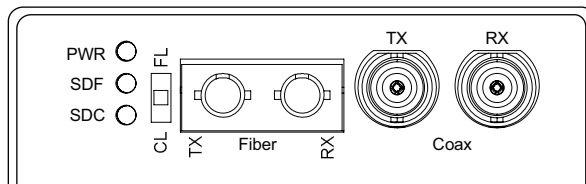

Cable Specifications

Coax Cable

DS3 / E3: 75 ohm coax cable with BNC connectors. Peak pulse power in DBm (Decibel milliwatts).

TX output
min: +1.25 dBm
max: +3.25 dBm

RX input
min: -9.47 dBm
max: +9.25 dBm

Fiber Cable

Singlemode fiber (recommended):
Multimode fiber (recommended):
Multimode fiber (optional):

9 μ m
62.5/125 μ m
100/140, 85/140, 50/125 μ m

SCSCF3011-100
Fiber Optic Transmitter Power:
Fiber Optic Receiver Sensitivity:
Link Budget:

1300 nm multimode
min: -19.0 dBm max: -14.0 dBm
min: -30.0 dBm max: -14.0 dBm
11.0 dB

SCSCF3013-100
Fiber Optic Transmitter Power:
Fiber Optic Receiver Sensitivity:
Link Budget:

1300 nm multimode
min: -19.0 dBm max: -14.0 dBm
min: -30.0 dBm max: -14.0 dBm
11.0 dB

SCSCF3014-100
Fiber-optic Transmitter Power:
Fiber-optic Receiver Sensitivity:
Link Budget:

1310 nm singlemode
min: -15.0 dBm max: -8.0 dBm
min: -31.0 dBm max: -8.0 dBm
16.0 dB

SCSCF3015-100
Fiber Optic Transmitter Power:
Fiber Optic Receiver Sensitivity:
Link Budget:

1310 nm singlemode
min: -8.0 dBm max: -2.0 dBm
min: -34.0 dBm max: -7.0 dBm
26.0 dB

SCSCF3016-100
Fiber-optic Transmitter Power:
Fiber-optic Receiver Sensitivity:
Link Budget:

1310 nm singlemode
min: -5.0 dBm max: 0.0 dBm
min: -34.0 dBm max: -7.0 dBm
29.0 dB

SCSCF3017-100
Fiber-optic Transmitter Power:
Fiber-optic Receiver Sensitivity:
Link Budget:

1550 nm singlemode
min: -5.0 dBm max: 0.0 dBm
min: -34.0 dBm max: -7.0 dBm
29.0 dB

SCSCF3018-100
Fiber-optic Transmitter Power:
Fiber-optic Receiver Sensitivity:
Link Budget:

1300 nm multimode
min: -19.0 dBm max: -14.0 dBm
min: -33.5 dBm max: -14.0 dBm
14.5 dB

SCSCF3019-100
Fiber-optic Transmitter Power:
Fiber-optic Receiver Sensitivity:
Link Budget:

1310 nm single mode
min: -15.2 dBm max: -8.0 dBm
min: -32.5 dBm max: -3.0 dBm
17.3 dB

SCSCF3029-100
SCSCF3029-101
Fiber-optic Transmitter Power:
Fiber-optic Receiver Sensitivity:
Link Budget:

1310 nm (TX) / 1550 nm (RX) simplex
1550 nm (TX) / 1310 nm (RX) simplex
min: -13.0 dBm max: -6.0 dBm
min: -32.0 dBm max: -3.0 dBm
19.0 dB

Cable Specifications -- Continued

| | |
|-----------------------------------|-------------------------------------|
| SCSCF3029-102 | 1310 nm (TX) / 1550 nm (RX) simplex |
| SCSCF3029-103 | 1550 nm (TX) / 1310 nm (RX) simplex |
| Fiber-optic Transmitter Power: | min: -8.0 dBm max: -3.0 dBm |
| Fiber-optic Receiver Sensitivity: | min: -33.0 dBm max: -3.0 dBm |
| Link Budget: | 25.0 dB |
| CSCSCF3039-100 | 1300 nm multimode |
| Fiber-optic Transmitter Power: | min: -19.0 dBm max: -14.0 dBm |
| Fiber-optic Receiver Sensitivity: | min: -30.0 dBm max: -14.0 dBm |
| Link Budget: | 11.0 dB |

The fiber optic transmitters on this device meet Class I Laser safety requirements per IEC-825/CDRH standards and comply with 21 CFR1040.10 and 21CFR1040.11.

Technical Specifications

For use with Transition Networks Model SCSCF30xx-10x or equivalent

| | |
|--------------------|---|
| Standards | FCC Class A; EN 55022 Class A; EN 55024; ANSI T1.102-1993; ETSI TBR-24; ITU-T G.703 G.823 for jitter tolerance; G.775 for loss of signal; Telecordia GR-499CORE & GR-253-CORE |
| Data Rate | DS3 / T3 = 44.7 Mb/s; E3 = 34.4 Mb/s |
| Dimensions | 3.25" x 4.7" x 1.0" (83 mm x 119 mm x 25 mm) |
| Weight | 10 oz. (283 g) approximately |
| Power Consumption | 6.0 Watts |
| Power Supply | 12 VDC, 0.8 Amp (<i>minimum</i>) |
| DC Outlet | Minimum output regulation: 5% |
| MTBF (stand alone) | 48,996 (MIL217F2 V5.0) (MIL-HDBD-217F) 119,854 (Bellcore7 V5.0) |
| Environment | Tmra*: 0 to 50°C (32° to 122°F) Storage Temp: -20° to 85°C (-4° to 185°F) Humidity: 5 to 95%, non condensing Altitude: 0 to 10,000 feet |
| Warranty | Lifetime |

*Manufacturer's rated ambient temperature.

For the most up-to-date information on the SCSCF30xx-10x Device, view the user's guide on-line at www.transition.com.

Product is certified by the manufacturer to comply with DHHS Rule 21/CFR, Subchapter J applicable at the date of manufacture.

CAUTION: Visible and invisible laser radiation when open. Do not stare into beam or view directly with optical instruments.

CAUTION: Use of controls, adjustments or the performance of procedures other than those specified herein may result in hazardous radiation exposure.

Troubleshooting


If the Device fails, isolate and correct the failure by determining the answers to the following questions and then taking the indicated action:

- Is the PWR (*Power*) LED on the Device illuminated?
NO
 - Ensure that the power adapter is the proper type of voltage and cycle frequency for the outlet.
 - Ensure the power adapter is properly installed in the Device and in the grounded outlet.
 - Contact Tech Support: 1-800-260-1312, Int'l: 00-1-952-941-7600.
 YES
 - Proceed to step 2.
- Is the SDC (*Signal Detect / Coax*) LED illuminated green?
NO
 - Check the coax cables for the proper connection.
 - Contact Tech Support: 1-800-260-1312, Int'l: 00-1-952-941-7600.
 YES
 - Proceed to step 3.
- Is the SDF (*Signal Detect / Fiber*) LED illuminated green?
NO
 - Check the fiber cables for proper connection.
 - Verify that the TX and RX cables on the local Device are connected to the RX and TX ports, respectively, on the remote Device.
 - Contact Tech Support: 1-800-260-1312, Int'l: 00-1-952-941-7600.
 YES
 - Proceed to step 4.
- Is the SDC (*Signal Detect / Coax*) LED flashing green?
YES
 - The coax link is in loop-back mode. For normal operation, set the loop-back switch to the center (normal) position.
 - Contact Tech Support: 1-800-260-1312, Int'l: 00-1-952-941-7600.
 NO
 - Proceed to step 5.
- Is the SDF (*Signal Detect / Fiber*) LED flashing green?
YES
 - The fiber link is in loop-back mode. For normal operation, set the loop-back switch to the center (*normal*) position.
 - Contact Tech Support: 1-800-260-1312, Int'l: 00-1-952-941-7600.
 NO
 - Proceed to step 6.


6. Is Data Transfer Failing?

YES


- Verify the local copper connection by starting a local copper loop-back (set the loop-back switch on the local Device to "CL") and then use a bit error test unit at the local location to run a bit error test.



- Verify the local fiber connection by starting a local fiber loop-back at the remote location (set the loop-back switch on the remote Device to "FL") and then use a bit error test unit at the local location to run a bit error test.



- Verify the remote copper connection by starting a local copper loop-back at the remote location (set the loop-back switch on the remote Device to "CL") and then use a bit error test unit at the remote location to run a bit error test.



- Contact Tech Support: 1-800-260-1312, Int'l: 00-1-952-941-7600.


NO

- Proceed to step 7.

7. Is the SDC (Signal Detect / Coax) LED illuminated yellow?

YES

- A failure of the remote unit connected to the coax interface has caused an Alarm Indication Signal (AIS) on the coax interface. Correct the remote unit failure.

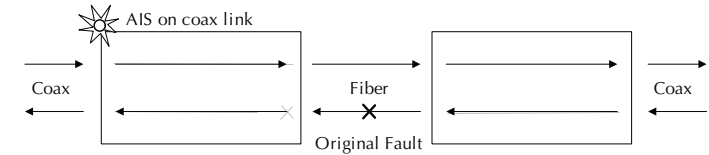

- Contact Tech Support: 1-800-260-1312, Int'l: 00-1-952-941-7600.


NO

- Proceed to step 8.

8. Is the SDF (Signal Detect / Fiber) LED illuminated yellow?

YES

- A broken coax link has caused an Alarm Indication Signal (AIS) on the fiber interface. Correct the coax link failure.

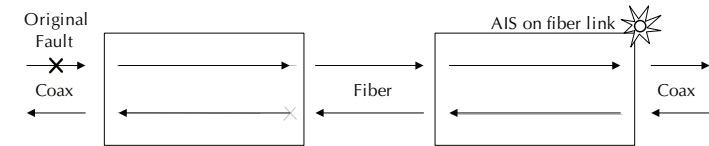

- Contact Tech Support: 1-800-260-1312, Int'l: 00-1-952-941-7600.

NO

- Contact Tech Support: 1-800-260-1312, Int'l: 00-1-952-941-7600.

| | | |
|---|---|--|
| | Declaration of Conformity | |
| | Name of Mfg: | Transition Networks 10900 Red Circle Drive, Minnetonka MN 55343 U.S.A. |
| Model: | SCSCF30xx-10x Series Device | |
| Part Number: | SCSCF3011-100, SCSCF3013-100, SCSCF3014-100, SCSCF3015-100, SCSCF3016-100, SCSCF3017-100, SCSCF3018-100, SCSCF3019-100, SCSCF3029-100, SCSCF3029-101, SCSCF3029-102, SCSCF3029-103, SCSCF3039-100 | |
| Regulation: | EMC Directive 89/336/EEC | |
| Purpose: | To declare that the SCSCF30xx-10x to which this declaration refers is in conformity with the following standards. | |
| EN 55022:1998 Class A; EN 55024:1998; FCC Part 15 Subpart B; CFR 21 subpart J 61000-3-2:1995+A14:2000; 61000-3-3:1995; | I, the undersigned, hereby declare that the equipment specified above conforms to the above Directive(s) and Standard(s). | |
| | Stephen Anderson, Vice-President of Engineering | February, 2009 Date |

Compliance Information

CE Mark

CISPR22/EN55022 Class A + EN55024

FCC Regulations

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user will be required to correct the interference at the user's own expense.

Canadian Regulations

This digital apparatus does not exceed the Class A limits for radio noise for digital apparatus set out on the radio interference regulations of the Canadian Department of Communications.

Le présent appareil numérique n'émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques de la Class A prescrites dans le Règlement sur le brouillage radioélectrique édicté par le ministère des Communications du Canada.

European Regulations

Warning This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

Achtung ! Dieses ist ein Gerät der Funkstörgrenzwertklasse A. In Wohnbereichen können bei Betrieb dieses Gerätes Rundfunkstörungen auftreten. In Diesem Fall ist der Benutzer für Gegenmaßnahmen verantwortlich.

Attention ! Ceci est un produit de Classe A. Dans un environnement domestique, ce produit risque de créer des interférences radioélectriques, il appartiendra alors à l'utilisateur de prendre les mesures spécifiques appropriées.

Contact Us

Technical support is available 24 hours a day.

US and Canada: 1-800-260-1312 International: 00-1-952-941-7600

Chat live via the Web with Transition Networks Technical Support.

Log onto www.transition.com and click the Transition Now link.

Transition Networks provides seminars via live web-based training.

Log onto www.transition.com and click the Learning Center link.

Ask a question anytime by sending an e-mail to our technical support staff.

techsupport@transition.com

Transition Networks, 10900 Red Cricle Drive, Minnetonka, MN 55343, U.S.A.

telephone: 952-941-7600, toll free: 800-526-9267, fax: 952-941-2322

Trademark Notice

All trademarks and registered trademarks are the property of their respective owners.

Copyright Restrictions

© 2001, 2004 Transition Networks.

All rights reserved. No part of this work may be reproduced or used in any form or by any means - graphic, electronic, or mechanical - without written permission from Transition Networks.

Printed in the U.S.A.

33216.G

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>