

# D3580 Series User's Guide

## What's in the box?



D3580 base with answering system and cordless handset

Battery cover



Not pictured:

- Rechargeable battery (BT-1022 or BT-1031)
- AC adapter (PS-0046)
- Telephone cord
- Belt clip

## You will also find:



Accessory handset and charger

Not pictured:

- Rechargeable battery (BT-1022 or BT-1031)
- Belt clip
- Battery cover
- AC adapter (PS-0035)

If you purchased model number:	You should have:
D3580	None
D3580-2	1 of each
:	:
D3580-11	10 of each
D3580-12	11 of each

\* If the model number ends in R, your package includes a DRX100 range extender. Refer to the DRX100 User's Guide for details.

- ◆ If any items are missing or damaged, contact our Customer Care Line immediately. Never use damaged products!
- ◆ Need help? Get answers 24/7 at our website: [www.uniden.com](http://www.uniden.com).

If You...	Contact Uniden's...	Phone Number
have a question or problem	Customer Care Line*	817-858-2929 or 800-297-1023
need a replacement part or an accessory	Parts Department*	800-554-3988
need special assistance due to a disability	Accessibility Help Line	800-874-9314 (voice or TTY)

\* During regular business hours, Central Standard Time; see our website for detailed business hours.

## What's in the manual?

<b>Getting Started</b> .....	3	Silent Mode .....	16
Installing Your Phone .....	3	Call Block .....	16
<b>Getting to Know Your Phone</b> .....	5	Multihandset Features .....	17
Parts of the Base .....	5	Chain Dialing .....	19
Parts of the Handset .....	6	Voice Message Notification .....	19
Reading the Display .....	7	<b>Using the Answering System</b> .....	<b>20</b>
Using the Handset Menu .....	8	Answering System Options	
Entering Text on Your Phone .....	10	(Answering Setup) .....	20
<b>Using Your Phone</b> .....	11	Personalizing the Greeting .....	20
Using Your Bluetooth Connection ....	11	Accessing the Answering System ....	21
Finding a Lost Handset .....	12	Using the System While	
Changing the Volume .....	12	You're Away from Home .....	22
Staying in Range .....	12	<b>Important Information</b> .....	<b>23</b>
Using the Caller ID and Redial Lists ...	13	Solving Problems .....	23
Using Call Waiting .....	14	Resetting Handsets .....	25
Using the Phonebooks .....	14	Registering Handsets .....	25
Using an Optional Headset .....	16		

## Important Safety Instructions!

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:

- ◆ **This unit is NOT waterproof.** DO NOT expose it to rain or moisture.
- ◆ Do not use this product near water, for example, near a bath tub, wash bowl, kitchen sink or laundry tub, in a wet basement or near a swimming pool.
- ◆ Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electric shock from lightning.
- ◆ Do not use the telephone to report a gas leak in the vicinity of the leak.
- ◆ Use only the power cord and batteries indicated in this manual. Do not dispose of batteries in a fire. They may explode. Check with local codes for possible special disposal instructions.
- ◆ Do not place the handset in any charging cradle without the battery installed and the battery cover securely in place.

### SAVE THESE INSTRUCTIONS!

**CAUTION! Risk of explosion if battery is replaced by an incorrect type! Dispose of used batteries according to the instructions. Do not open or mutilate the battery. Disconnect the battery before shipping this product.**


For more details, see the *Important Information* section.

## GETTING STARTED

### Installing Your Phone

#### Charge the Battery

1. Unpack all handsets, battery packs, and battery charger. To remove a cover, press in on the notch and slide the cover down and off.
2. Line up the battery connector with the jack inside the handset; the connector only fits one way.
3. Push the connector in until it clicks into place; tug gently on the wires to make sure the battery is securely connected.
4. Replace the battery cover and slide it into place.
5. Use an AC adapter to connect the power jack on the base to a regular indoor (120V AC) power outlet. Connect any chargers the same way.
6. Place a handset in the base with the display facing forward. If the display doesn't light up, reseal the handset or connect the base to a different outlet. For 2 or more handsets, place each handset in a charger.


 **Charge all handsets completely (about 15 hours) before using.**

#### Connect the Telephone Cord

Use the telephone cord to connect the **TEL LINE** jack on the base to a standard telephone wall jack.

#### Test the Connection

1. Pick up the handset and press **HOME/FLASH**. The handset sounds a dial tone, and the display shows *Talk*.
  - If you don't hear a dial tone or the display says *Check Tel Line*, check



the connection between the base and the phone jack.

2. Make a quick test call. (Press **END** to hang up.)
  - If you keep hearing a dial tone, change to pulse dialing.
  - If there's a lot of noise, check for interference (see page 23).
3. Test all handsets the same way. If you can't get a dial tone, move the handset closer to the base.

#### Changing to Pulse Dialing

Your phone uses tone dialing by default. If your phone company uses pulse dialing, you need to change your phone's dial mode.

1. Press **MENU/SELECT**; choose *Global Setup*.
2. Select *Dial Mode* then *Pulse*. You'll hear a confirmation tone.

To send DTMF tones during a call (e.g., for an automated response system), press **\*** to temporarily switch to tone dialing. When you hang up, the phone automatically returns to pulse dialing.

#### Attaching the Belt Clip

Line up the holes on each side of the handset. Insert the belt clip into the holes on each side of the handset. Press down until it clicks.

To remove the belt clip, pull either side of the belt clip to release the tabs from the holes.

#### Attaching Optional Wall Mount Bracket

You can order a wall-mount bracket from the Uniden website. Follow the instructions that come with the bracket.

## Setting Up the CellLink™ Bluetooth™ Connection


The new D3580 with CellLink technology can connect with mobile phones that support the Bluetooth V2.1 handsfree profile.

- ◆ If you are not certain of the profiles supported by your Bluetooth phone or if you have difficulty pairing your phone to the D3580, see the manual that came with your phone.
- ◆ With the CellLink feature, you can essentially treat your cellular phone as a second line. You can use the D3580 handset to make and receive calls on your cellular phone number, put cellular calls on hold, and transfer calls to other handsets. See page 11 for more information.
- ◆ Bluetooth wireless devices have a maximum range of about 33 feet (10 m); the actual range will vary depending on local conditions (obstacles, battery power, interference, etc.).

### Pair your Bluetooth phone

Pairing “introduces” the Bluetooth device and D3580 and gives them permission to connect to each other. In most cases, once you pair a phone to the D3580, these two devices connect automatically whenever they detect each other. (If you have to manually reconnect each time, check the Bluetooth settings on your cellular phone.) You can pair your Bluetooth devices through the D3580 handset.

1. Press **MENU/SELECT** to display the handset’s main menu.
2. Select the *Bluetooth Setup* menu; the *Select Cellular* submenu displays.
3. Select a cellphone to pair to from the list provided. (If your cellphone is not on the list, select *Add Cellular*.) The base goes into pairing mode when the handset displays *Search & Select from Cellular D3580 PIN: 0000*.
4. On your Bluetooth phone, start a search for other Bluetooth devices. (This process may take several seconds and it will be different for each mobile phone. See your phone owner’s manual for detailed instructions.)
5. Your phone should discover a device called *D3580* or *Handsfree device*. When your phone asks if you want to pair with this device, answer yes.
6. If your phone prompts you for a PIN code or password to pair with the D3580, enter **0000** (four zeroes).
7. When your phone accepts the Bluetooth connection, the D3580 sounds a confirmation tone and *Add Cellular Completed* displays. The Bluetooth device number icon on the base and the handset display lights up. After 2 seconds, the *Select Cellular* screen displays again.

 **Most cell phones automatically transfer the audio to a Bluetooth device as soon as it pairs; if yours does not, look in your cell phone’s Bluetooth setup for a “transfer audio” or “send audio to device” option.**

## To test the connection


1. Pick up the handset from the cradle.
2. Dial the number you want to call, then press **CELL** on the handset. You may not hear a dial tone or ringing, but the handset display says *Talk*.
3. Make sure the call connects and you can hear clearly. (When you're finished, press **END** to hang up.)
  - ◆ The D3580 remembers the pairing information for your cellular; if it loses connection with your phone for any reason (e.g., the cell phone travels out of range, runs out of charge, etc.), the D3580 can automatically reconnect the next time your phone becomes available.



## Using the D3580 with four Bluetooth phones





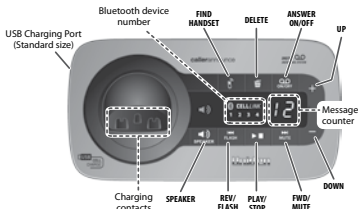

- ◆ The D3580 can save the pairing information for four different Bluetooth phones, but it can only use one cellular line at any given time. For example, if you pair the D3580 to four Bluetooth phones, when you press **CELL** on the handset, the D3580 asks which phone you want to connect to.
- ◆ If you are using the D3580 to talk on one Bluetooth phone, the D3580 will not ring if a call comes in on another phone.
- ◆ You can set a different ring tone for each paired cell phone (see page 8).
- ◆ To pair another Bluetooth phone, just repeat the pairing procedure with the new phone. (If the paired phones interfere when you're pairing the new one, just turn off Bluetooth on any paired phones until you finish pairing the new one.)

## GETTING TO KNOW YOUR PHONE


### Parts of the Base




Key (icon)	What it does
<b>FIND HANDSET</b> (  )	<ul style="list-style-type: none"><li>• In standby: page all handsets.</li></ul>
<b>DELETE</b> (  )	<ul style="list-style-type: none"><li>• When listening to messages: delete the current message.</li><li>• In standby: press twice to delete all messages.</li></ul>

Key (icon)	What it does
<b>ANSWER ON/OFF</b> (  )	<ul style="list-style-type: none"> <li>In standby: turn the answering system on and off</li> </ul>
<b>UP</b> (  )	<ul style="list-style-type: none"> <li>In standby: increase the ringer volume.</li> <li>While playing a message: increase the speaker volume.</li> </ul>
<b>SPEAKER</b> (  )	<ul style="list-style-type: none"> <li>Switch a normal call to the speakerphone (and back).</li> </ul>
<b>REV/FLASH</b> (  )	<ul style="list-style-type: none"> <li>In a message's first 2 seconds: go to the previous message.</li> <li>Anytime after that: restart the current message.</li> <li>During a call: switch to a waiting call.</li> </ul>
<b>PLAY/STOP</b> (  )	<ul style="list-style-type: none"> <li>When the phone is ringing: ignore this call (mute the ringer).</li> <li>In standby: begin message playback.</li> <li>While screening calls: mute Call Screen.</li> <li>While playing a message: stop playing messages.</li> </ul>
<b>FWD/MUTE</b> (  )	<ul style="list-style-type: none"> <li>While playing a message: skip to the next message.</li> <li>During a call: mute the microphone.</li> <li>While the phone is ringing: ignore this call (mute the ringer).</li> </ul>
<b>DOWN</b> (  )	<ul style="list-style-type: none"> <li>In standby: decrease the ringer volume.</li> <li>While playing a message: decrease the speaker volume.</li> </ul>
Bluetooth device number	<ul style="list-style-type: none"> <li>The number indicates the Bluetooth device number linked to the D3580.</li> </ul>
USB Charging Port	<ul style="list-style-type: none"> <li>Standard size USB port for charging devices.</li> </ul>

## Parts of the Handset

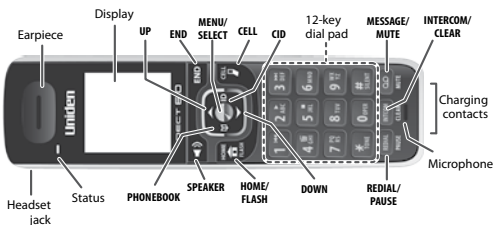


Key (icon)	What it does
<b>UP</b> (  )	<ul style="list-style-type: none"> <li>In standby: increase the ringer volume.</li> <li>During a call: increase the audio volume.</li> <li>In any menu or list: move the cursor up one line.</li> </ul>
<b>END</b>	<ul style="list-style-type: none"> <li>During a call: hang up.</li> <li>In the menu or any list: exit and go to standby.</li> </ul>

Key (icon)	What it does
<b>MENU/SELECT</b>	<ul style="list-style-type: none"> <li>• In standby: open the menu.</li> <li>• In the menu or any list: select the highlighted item.</li> </ul>
<b>CELL</b>	<ul style="list-style-type: none"> <li>• In standby: start a telephone call using a paired Bluetooth phone.</li> <li>• While a paired phone is ringing: answer the incoming call.</li> <li>• During a CellLink call: switch to a waiting call.</li> </ul>
<b>CID</b>	<ul style="list-style-type: none"> <li>• In standby or during a call: open the Caller ID list.</li> <li>• When entering text: move the cursor to the right.</li> </ul>
<b>MESSAGE/MUTE</b> (✉)	<ul style="list-style-type: none"> <li>• In standby: access your answering system.</li> <li>• During a call: mute the microphone.</li> <li>• While the phone is ringing: ignore this call (mute the ringer).</li> </ul>
<b>INTERCOM/ CLEAR</b>	<ul style="list-style-type: none"> <li>• In standby: start an intercom call.</li> <li>• During a call: put the call on hold and start a call transfer.</li> <li>• When entering text or numbers: erase the character at the cursor (press &amp; hold to erase all characters).</li> </ul>
<b>REDIAL/PAUSE</b>	<ul style="list-style-type: none"> <li>• In standby: open the redial list.</li> <li>• When entering a phone number: insert a 2-second pause.</li> </ul>
<b>DOWN</b> (▼)	<ul style="list-style-type: none"> <li>• In standby: decrease the ringer volume.</li> <li>• During a call: decrease the audio volume.</li> <li>• In any menu or list: move the cursor down one line.</li> </ul>
<b>HOME/FLASH</b>	<ul style="list-style-type: none"> <li>• In standby: start a telephone call on your land line (get a dial tone).</li> <li>• While the land line is ringing: answer the incoming call.</li> <li>• During a call: switch to a waiting call.</li> </ul>
<b>SPEAKER</b> (🔊))	<ul style="list-style-type: none"> <li>• Switch a normal call to the speakerphone (and back).</li> </ul>
<b>PHONEBOOK</b> (📖)	<ul style="list-style-type: none"> <li>• In standby or during a call: open the phonebook.</li> <li>• In the menu: go back to the previous screen.</li> <li>• When entering text: move the cursor to the left.</li> </ul>







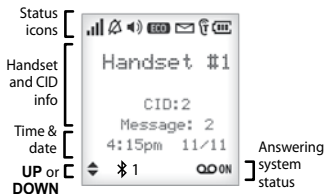

## Reading the Display

The table shows possible status icons and what they mean. Since the icons appear based on what the phone is doing, you won't see all the icons at the same time


You can use the **UP** and **DOWN** keys to scroll through CID lists and phonebook entries. You can also use **PHONEBOOK** and **CID** to jump to the next (or previous) 5 entries.



Icon	What it means
	The signal from the base is 1) weak through 4) strong.

Icon	What it means
	The ringer is turned off and will not ring for new calls.
	The speakerphone is on.
	The handset is using ECO (power save) mode.
	You have a voice message waiting.
	T-coil mode is on (see p. 8).
	The battery is 1) full, 2) half charged, 3) getting low or 4) empty.
	Privacy Mode is on: no other handset can join the call.
 1 2 3 4	Bluetooth device number linked to the D3580.
[Aa] [aA]	Enter 1) capital or 2) lower case letters (see p. 9).

## Using the Handset Menu

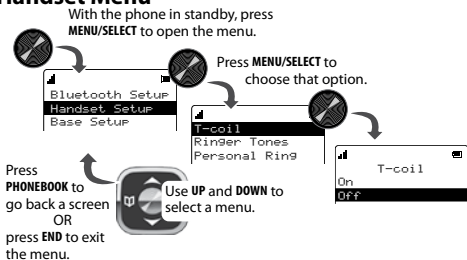

If you don't press any keys for about 30 seconds, the handset exits the menu. During a call, use **HOME/FLASH** to back out of the menu without hanging up.

## Off-Hook Menus

Your phone displays different menus depending on whether you are on-hook or off-hook. Off-hook menus are *Call Privacy* and *HD Audio*.

### Call Privacy Menu (Off-Hook Menu Only)

This menu lets you turn Call Privacy on and off during a call. With Call Privacy turned on, no other handsets can connect with your conversation. Going on-hook (ending your conversation) resets Call Privacy to off.



## HD Audio Menu (Off-Hook Menu Only)

This menu lets you turn high-definition audio on and off for the call you are on. When you end the call (go on-hook), HD audio defaults to off. If you put your call on hold, the HD audio setting does not change.

## Bluetooth Setup Menu

Use the *Bluetooth Setup* menu to pair a cell phone to the D3580 and select a cellular phone if you pair more than one.

## Handset Setup Menu

You can change these settings separately for each handset.

Menu Option	What it does
<i>T-coil</i>	Turn on T-coil mode to reduce noise on hearing aids equipped with a telecoil (T-coil) feature. T-coil mode shortens talk time, so keep your battery fully charged.
<i>Ringer Tones</i>	Select a phone, then choose that phone's ring tone. As you highlight each ring tone, you hear a sample. Press <b>MENU/SELECT</b> to select.
<i>Personal Ring</i>	Turn on personal ring so you can assign a special ring tone to people in your phonebook. With Caller ID, this handset uses the assigned tone when the person calls.
<i>AutoTalk</i>	Have this handset answer a call when you pick it up from the cradle (without pressing any buttons).
<i>Any Key Answer</i>	Have this handset answer a call when you press any key on the 12-key dialpad.
<i>Banner</i>	Change the name used on the handset's display.
<i>Language</i>	Change the display language.
<i>Key Touch Tone</i>	Have the keypad sound a tone when you press a key.
<i>LCD Contrast</i>	Change the contrast of the display.
<i>Caller Announce</i>	Turn Text-To-Speech on or off to hear CID information.
<i>HD Audio</i>	Turn HD Audio on or off.

## Base Setup Menu

These settings affect the base.

Menu Option	What it does
<i>Caller Announce</i>	Turn Text-To-Speech on or off to hear CID information.
<i>HD Audio</i>	Turn HD Audio on or off.

## Answering Setup Menu

Refer to page 20 for details on setting up your answering system.

## Date & Time Menu

Use this menu to set the clock. Enter the date and time (MM/DD/YY); select *AM* or *PM*. Use **CID** to move the cursor past a digit without changing it. If you have CID service, you can set it to provide the time (*Global Setup/Time Adjustment*).

## Global Setup Menu

The settings on this menu affect all handsets. Only one handset at a time can change these menu options.

Menu Option	What it does
<i>Dial Mode</i>	Choose tone or pulse dialing (see page 3).
<i>Set Line Mode</i>	Do not change this setting unless instructed to by customer service.
<i>VMWI Reset</i>	Reset the Voice Message Waiting Indicator (see page 19)
<i>Edit Voice Mail</i>	Enter, edit, or delete the access number for your voice mail service (see page 19).
<i>Edit Int'l No.</i>	Enter, edit, or delete international numbers.
<i>Time Adjustment</i>	Select <i>Auto from CID</i> if you want the CID function to supply the time. Select <i>Manual</i> for the system clock to do it.

## Call Blocking Menu

See p. 15 for a detailed description of the Call Blocking feature.

## Entering Text on Your Phone

- ◆ Use the 12-key dial pad anytime you want to enter text into your phone (a name in the phonebook, the handset banner, etc.).
- ◆ If two letters in a row use the same key, enter the first letter; wait for the cursor to move to the next space and enter the second letter.

To...	Press...
move the cursor left	<b>PHONEBOOK.</b>
move the cursor right	<b>CID.</b>
erase the character at the cursor	<b>INTERCOM/CLEAR.</b>
erase the entire entry	and hold <b>INTERCOM/CLEAR.</b>
enter a blank space	<b>#.</b>
switch between upper and lower case letters	<b>*.</b>
rotate through the punctuation and symbols	<b>0.</b>
enter a " + "	and hold <b>0.</b>

## USING YOUR PHONE

This section explains the most common functions on the phone.


To...	From the land line	From the CellLink
make a call: dial the number, then	Press <b>HOME/FLASH</b> or <b>SPEAKER</b> .	Press <b>CELL*</b> .
answer a call	Press <b>HOME/FLASH</b> or <b>SPEAKER</b> . You can also set your phone to answer when you press any key ( <i>Handset Setup/Any Key Answer</i> )	Press <b>CELL</b> .
hang up	Press <b>END</b> or put the handset in the cradle.	
mute the microphone during a call	Press <b>MESSAGE/MUTE</b> . Press again to turn the microphone back on.	
put a call on hold	Press <b>INTERCOM/CLEAR</b> . After 5 minutes on hold, the call will be disconnected.	
return to a call on hold	Press <b>HOME/FLASH</b> or <b>SPEAKER</b> .	Press <b>CELL</b> .
switch between the CellLink and the land line (automatic hold)	Press <b>CELL*</b> .	Press <b>HOME/FLASH</b> .
switch between speakerphone and earpiece	Press <b>SPEAKER</b> .	
mute the ringer for this call only	While the phone is ringing, press <b>MESSAGE/MUTE</b> on the handset.	

\* If only 1 cell phone is paired, it will be dialed. If more than 1 cell phone is paired, the phone prompts you to choose one.

### Using Your Bluetooth Connection



After you have paired your cell phone with the D3580 (see p. 4), you can make and receive calls from your cell phone through the D3580. With the phone in standby, press **CELL** to make a call through your cell phone.

To...	From the <i>Bluetooth Setup</i> menu, select a cell phone and then select...
make a CellLink call	<i>Make Call</i> . Enter the number to call and press <b>CELL</b> or <b>MENU/SELECT</b> .

To...	From the <i>Bluetooth Setup</i> menu, select a cell phone and then select...
set Privacy features	<p><i>Privacy Setup</i>, then set Privacy to <i>On</i> or <i>Off</i>.</p> <ul style="list-style-type: none"> <li>• All handsets set to <i>Off</i>: All handsets will ring (default).</li> <li>• One or more handsets set to <i>On</i>: Only handsets set to <i>On</i> will ring; other handsets do not ring but they can still receive calls.</li> </ul> <p> <b>The Privacy option only affects the ring. All handsets still get CID information and can use the cellular phone to make and receive calls.</b></p>
download phonebook	<i>Download PB</i> . The screen displays <i>Download PB completed</i> when complete.
delete Bluetooth pairing	<i>Remove Cellular</i> . The screen displays <i>Done!</i> when complete.
relink a cellular phone	<i>Connect</i> . A confirmation tones sounds if the connection is successful.

 Use the same procedures on p.4 to add a new cellular phone.

## Finding a Lost Handset

With the phone in standby, press  on the base. All handsets beep for 1 minute; to cancel, press  again or press any handset key.

## Changing the Volume

To change the...	When...	Press...
earpiece or speaker volume for each handset	you are listening to that earpiece or speaker (playing messages, etc.)	<b>UP</b> to increase the volume.
base speaker volume		
ringer volume for each handset*	the phone is in standby	<b>DOWN</b> to decrease it.

\* If you turn the ringer all the way down, that particular ringer turns off.

## Staying in Range

Your system will alert you when you are out of range (or about to go out of range).

If...	Then...
the handset and base are connected (intercom call) and no signal from the base	the handset sounds an error tone and <i>Out of Range</i> displays.

If...	Then...
the handset is in Talk mode and moves out of range	the outside line is put on Hold for 30 seconds and then dropped. The LCD alternately displays <i>Out of Range</i> and <i>Check Base Power</i> .
the handset and base are in standby mode and the handset does not get a signal from the base for 5 seconds	the LCD alternately displays <i>Out of Range</i> and <i>Check Base Power</i> .
audio deteriorates	the handset sounds an error tone. The LCD alternately displays <i>End of Range</i> and <i>Move toward base</i> .
you are trying to go off-hook	call data displays and then an error tone sounds. The LCD alternately displays <i>Out of Range</i> and <i>Check Base Power</i> .
you are trying to go on-hook	Talk mode continues for 5 seconds and then <i>END</i> displays.

## Using the Caller ID and Redial Lists

Caller ID (CID) is a service available from your telephone provider that shows the phone number (and sometimes the caller's name) of incoming calls; if you turned on Text-To-Speech, it also announces the name. Contact your telephone provider for more information.

Caller ID list	Redial list
<ul style="list-style-type: none"> <li>• The phone saves the information for the last 50 incoming calls (both landline and CellLink calls) to the <i>CID list</i>. An asterisk (*) marks any calls received since the last time you checked the record details.</li> <li>• All handsets share the same CID list so only one handset can access the list at a time.</li> <li>• In standby, handsets show how many calls came in since the last time you checked the CID list.</li> </ul>	<ul style="list-style-type: none"> <li>• Each handset remembers the last 10 numbers you dialed on it.</li> <li>• Only one handset can access its redial list at a time.</li> <li>• The handset does not record which line was used to call the number.</li> </ul>

To...	Press...
open the CID list	<b>CID</b> , then use the <b>UP</b> and <b>DOWN</b> keys to enter the list. Up to 5 entries display at a time.
open the redial list	<b>REDIAL/PAUSE</b> .
scroll through the lists	<ul style="list-style-type: none"> <li>• <b>UP</b> to select the previous number.</li> <li>• <b>DOWN</b> to select the next number.</li> </ul> In CID list: <ul style="list-style-type: none"> <li>• <b>PHONEBOOK</b> to return to the previous menu.</li> </ul>

To...	Press...
dial the highlighted number	<b>HOME/FLASH</b> or <b>CELL</b> . If you have more than one cellular phone paired, the phone prompts you to choose one. Select the phone you want and press <b>MENU/SELECT</b> .
review current CID record details	<b>MENU/SELECT</b> or <b>CID</b> .
add other digits and codes to the CID number	<ul style="list-style-type: none"> <li>• # once to add an area code.</li> <li>• * once to add 1 for a toll call.</li> <li>• * twice to add the International code to the CID number.</li> </ul> <b>Press * a third time to return to normal mode.</b>
close the lists	<b>END</b> .

For individual record options, find a number and press **MENU/SELECT** (press twice from a CID entry) to display the following options for that record:

Select...	To...
<i>Delete</i>	Erase the number from the list.
<i>Store into PB</i>	Add the number to the phonebook. The handset prompts you to edit the name and number and select a personal ring.
<i>Add Call Block</i>	(CID list only) Add the number to the Call Block list (see page 16).

## Using Call Waiting

- ◆ Call Waiting, a service available from your telephone provider, lets you receive calls while you are on another call. Caller ID on Call Waiting (CIDCW) service displays Caller ID information for a waiting call.
- ◆ If you get a Call Waiting call, the phone sounds a tone and displays any CID information received from the waiting call. Press **HOME/FLASH** on the land line or **CELL** on a cellular phone call to switch between the current call and the waiting call; each time you switch, there is a short pause before you're connected to the other call.

## Using the Phonebooks

- ◆ You can download the phonebook (up to 1500 entries) from each paired cellular phone (up to four). You can also store up to 200 entries in the D3580's Home phonebook, which is separate from any downloaded phonebooks.
- ◆ Only one cordless handset can access the phonebook at a time.

## Downloading Cellular Phonebooks into your Phone

1. Make sure your cellular phone is paired to the D3580 and is within range of the base.
2. With the D3580 in standby, open the menu and select *Bluetooth Setup*.

3. Select the cellular phone you want to download from, then select *Download PB*. When downloading is complete, the cordless handset displays a confirmation screen. To cancel downloading, press **END**.
  - ◆ Each time you download a phonebook, the D3580 overwrites any previous copy of that phonebook. The D3580 automatically cancels the download if it receives an incoming call or someone tries to make an outgoing call.
  - ◆ If the download is interrupted or canceled, the D3580 reverts to the original copy of the downloaded phonebook.
  - ◆ If you delete the pairing information for a cellular phone, the downloaded phonebook from that phone will also be deleted.

To...	Press...
open the phonebook	<b>PHONEBOOK</b> , then select the phone name and then <i>View Number</i> .
scroll through the entries	<b>DOWN</b> to scroll through the entries from A to Z. <b>UP</b> to scroll from Z to A. <b>CID</b> to view the detail information. <b>PHONEBOOK</b> to return to the previous display.
jump to entries that start with a certain letter	the number key corresponding to the first letter of the entry you want. Press the number key for the next letter and the list will narrow down to entries only with those letters.
dial the current entry	<b>HOME/FLASH</b> or <b>CELL</b> .
review the current entry's details	<b>MENU/SELECT</b> or <b>CID</b> after scrolling to the desired phonebook entry.
save this cellular phonebook entry to the home phonebook	<b>MENU/SELECT</b> . From the available options, select <i>Store into PB</i> . A confirmation tone sounds and <i>Done!</i> displays.
edit the current entry	<b>MENU/SELECT</b> at the phonebook entry detail screen and then select <i>Edit</i> .
delete the current entry	<b>MENU/SELECT</b> at the phonebook entry detail screen and then select <i>Delete</i> . When the system prompts you to confirm, select <i>Yes</i> .
close the phonebook	<b>END</b> .

### Adding Phonebook Entries (Home only)

With the phone in standby, open the phonebook. Select *Home*, then *Create New*. Enter a name & number, and select a personal ring.

- ◆ Enter the phone number (up to 32 digits) exactly as you would dial it.

- ◆ If you need the phone to wait before sending the next set of digits, press **REDIAL/PAUSE** to insert a 2-second pause. You can insert multiple pauses, but each one counts as a digit (you'll see *P* in the display).
- ◆ To edit the name, press **PHONEBOOK** to move the cursor back and insert a letter. Press **INTERCOM/CLEAR** to delete a letter.
- ◆ To edit the number, press **INTERCOM/CLEAR** to back up the cursor and delete numbers. Re-enter the correct numbers.


## Deleting All the Phonebook Entries

With the phone in standby, open the phonebook. Select *Home*, then *Delete All*. To confirm, select *Yes*.

## Using an Optional Headset

You can use a standard 2.5 mm telephone headset with your cordless handsets. To purchase headsets, contact the Parts Department (see the front cover).

- ◆ To install a headset, remove the headset jack cover and insert the headset plug into the jack.
- ◆ Just make and receive calls as usual, and use your headset to talk to the caller after the call connects.
- ◆ When you connect a headset, the handset automatically mutes the earpiece. To re-activate the earpiece, just unplug the headset.

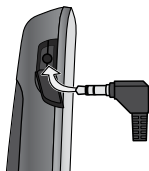

## USING SPECIAL FEATURES

### Silent Mode

You can silence the ringers on the base and all handsets for a specific period of time; the answering system answers any incoming calls without playing anything through the speaker.

1. With the phone in standby, press and hold **#** on any handset. The phone prompts you to select the number of hours (*1 - 9* or *Always On*) that you want it to stay in silent mode.
  2. To confirm, press **MENU/SELECT** or just wait about 5 seconds. The phone turns on the answering system and displays *Silent Mode On* on each handset.
  3. After the selected number of hours, the phone automatically exits silent mode. To exit silent mode manually, press and hold **#** again.
- ⚠ If the phone is in silent mode and you turn off the answering system, the phone exits silent mode.**

### Call Block

If you subscribe to Caller ID, you can save phone numbers to the call block list. When a call comes in, the phone compares the received phone number to the

Downloaded from [www.Somanuals.com](http://www.Somanuals.com). All Manuals Search And Download.



numbers on the call block list. If the phone number is on the list, the phone replaces the caller's name with *Call Blocked* and blocks the call.

 **You can reject an incoming call from CellLink directly; press DELETE on the base.**

The call block list holds 20 entries, and all handsets share the same list. You can add entries by selecting *Add Call Block* in the CID menu that displays after you have viewed the CID record or through the *Call Blocking* menu (see below). (Only one handset can edit the call block list at a time.)

## Call Blocking Menu Options

With the phone in standby, open the menu and select *Call Blocking*. Choose one of these options:

Menu Option	What it does
<i>View Number</i>	See the numbers on your call block list.
<i>Create New</i>	Add an entry to your call block list. The phone will prompt you to enter a name & phone number.
<i>Private Number</i>	Block all calls from numbers reported by CID as "Private." (This does not count as one of the 20 entries.)
<i>Unknown Number</i>	Block all calls from numbers reported by CID as "Unknown." (This does not count as one of the 20 entries.)

## Call Blocking Entry Options

With the phone in standby, open the menu, select *Call Blocking/View Number*, and scroll through the entries. Press **MENU/SELECT** to open the individual entry. Choose one of these options:

Choose this...	To...
<i>Edit</i>	Edit this entry. The phone will prompt you to edit the name & phone number.
<i>Delete</i>	Erase this entry from the list & allow calls from this number.

## Multihandset Features

 **To use the features in this section, you need at least 2 handsets.**

- ◆ Your base supports a total of 12 cordless handsets: the one that came with the base and up to 11 accessory handsets. Your base also supports a total of 2 DRX100 range extenders, including any that came with your phone. If you have any DRX handsets, the D3580 is limited to a total of 6 accessory handsets. If you have any DWX (waterproof) handsets registered to the base, the D3580 is limited to a total of 6 accessory handsets.
- ◆ You must register accessory handsets to the base before using them. (Handsets that came packaged with the base are already registered.)

- ◆ Handsets that aren't registered display a *Not Registered* message. For registration instructions, see page 25, or see the accessory handset manual.
- ◆ If a handset was ever registered to a base, you must reset it before it can register to a new base; see page 25, or see the accessory handset manual.


## Conference Calling

- ◆ When an outside call comes in on the land line, four handsets can join in a conference call with the outside caller.
- ◆ To join a call that's already in progress, just press **HOME/FLASH** or **SPEAKER**.
- ◆ To leave the conference call, hang up normally; the other handsets remain connected to the call.

## Call Transfer

To...	On the land line	Using CellLink
transfer a call	Press <b>INTERCOM/CLEAR</b> , then select the handset you want to transfer the call to (select <i>ALL</i> to page all the handsets). When the other handset accepts the call, you'll be disconnected.	
cancel a transfer and leave the call on hold	Press <b>END</b> .	
return to the call	Press <b>HOME/FLASH</b> .	Press <b>CELL</b> .
answer a call transfer page	1. Press <b>INTERCOM/CLEAR</b> . You can speak to the transferring handset. 2. To speak to the outside caller, Press <b>HOME/FLASH</b> .	Press <b>CELL</b> .

## Privacy Mode

To activate privacy mode on a land line call in progress, press **MENU/SELECT**. The current call privacy mode displays as a menu selection. If you want to change the privacy mode, select it. As long as privacy mode is on, you'll see a  in the display, and no other handsets can join your call. Privacy mode turns off automatically when you hang up; you can also turn it off by pressing **MENU/SELECT** twice.

## Intercom

- ◆ Whenever the phone is in standby, you can make an intercom call between handsets without using the phone line.
- ◆ You can make an intercom call from any handset, but only two handsets can be in an intercom call at any time.
- ◆ If an outside call comes in during an intercom page, the phone cancels the page so you can answer the incoming call.

- ◆ If an outside call comes in during an intercom call, press **HOME/FLASH** or **CELL**, depending on which line is ringing, to hang up the intercom call and answer the outside call.

To...	Press...
make an intercom page	<b>INTERCOM/CLEAR</b> . Select the handset you want to talk with, or <i>ALL</i> to page all handsets at the same time.
cancel a page	<b>END</b> .
answer a page	<b>INTERCOM/CLEAR</b> or <b>HOME/FLASH</b> .
end an intercom call	<b>END</b> . Both handsets return to standby.

## Chain Dialing


If you often have to enter a series of digits or a code number during a call, you can save that code number to a phonebook entry and use the phonebook to send the code number.

1. Enter the code number (up to 32 digits) into the phonebook just like a regular phonebook entry. Be sure to enter the code number into the phonebook exactly as you would enter it during a call.
2. When you hear the prompt that tells you to enter the number, open the phonebook and find the entry that contains your code number.
3. Press **MENU/SELECT** twice to send the code. If you change your mind, just close the phonebook.

## Voice Message Notification

If you subscribe to a land line's voice mail service, your phone can notify you when you have a new message. This feature supports Frequency-Shift Keying (FSK) notification. Contact your voice mail provider for information.

When you have new messages, the display shows a message icon. To access your voice mail, press **MESSAGE/MUTE** and select *Voice Mail*.

 **When you select *Voice Mail*, you will be prompted to enter a Voice Mail Access number if you have not yet set one up (see page 10). If you have already set one up, your phone will dial it.**

After you listen to your messages, the message icon turns off. If it doesn't, you can reset it: With the phone in standby, open the menu and select *Global Setup*; select *VMWI Reset*, then select *Yes*.

If you change voice mail providers, you can edit your voice mail number. Open the menu and select *Global Setup/Edit Voice Mail*.

## USING THE ANSWERING SYSTEM

 **The answering system works with land-line calls only.**

### Answering System Options (*Answering Setup*)

You can set or change the answering system options from any handset. Just open the menu and select *Answering Setup*.

Select this option...	To...
<i>Security Code</i>	Enter a 2-digit PIN so you can access your answering system from any touch-tone phone (see page 22).
<i>Ring Time</i>	Set the number of rings (2, 4, or 6) before the system answers. <i>Toll Saver</i> makes the system answer after 2 rings if you have new messages or after 4 rings if you don't.
<i>Record Time</i>	Set the amount of time (1 or 4 minutes) callers have to leave a message. Choose <i>Announce Only</i> if you don't want the system to let callers to leave a message.
<i>Message Alert</i>	Have the system beep every 15 seconds when you have a new message. The alert stops after you listen to all your new messages or if you press any key on the base.
<i>Ans. Language</i>	Change the language of the system's voice prompts.
<i>Call Screen</i>	Turn on the call screen feature so you can hear callers as they leave messages on the base speaker (see page 22).
<i>Ans. On/Off</i>	Turn your answering system on or off. You can also press <b>ANSWER ON/OFF</b> on the base.
<i>Record Greeting</i>	Record an outgoing message or greeting (see below).
<i>Greeting Option</i>	Switch greetings or delete your greeting (see below).

### Personalizing the Greeting

Your personal outgoing message or *greeting* can be from 2 to 30 seconds long. If you don't record a greeting, the system uses a pre-recorded greeting: *Hello, no one is available to take your call. Please leave a message after the tone.*

To...	Follow these steps:
record a personal greeting	<ol style="list-style-type: none"><li>1. Open the menu with the phone in standby. Select <i>Answering Setup</i>, then <i>Record Greeting</i>.</li><li>2. Press <b>MENU/SELECT</b> to start recording. Wait until the system says "Record greeting" before speaking.</li><li>3. Press <b>MENU/SELECT</b> to stop recording. The system plays back your new greeting.</li><li>4. To keep the greeting, press <b>END</b>. To delete it and try again, press <b>INTERCOM/CLEAR</b>.</li></ol>

To...	Follow these steps:
switch between greetings	<ol style="list-style-type: none"> <li>1. Open the menu with the phone in standby. Select <i>Answering Setup</i>, then <i>Greeting Options</i>.</li> <li>2. The system plays back the current greeting. Press <b>MENU/SELECT</b> to switch greetings.</li> </ol>
delete your greeting	Switch to your personal greeting, then press <b>INTERCOM/CLEAR</b> while the greeting is playing.

## Accessing the Answering System

When the phone's in standby, you can access the system from any handset through the *Play Message* menu on the **MESSAGE/MUTE** key. The following conditions apply:

- ◆ Only 1 handset can access the system at a time.
- ◆ If you do nothing for 30 seconds, the phone returns to standby.
- ◆ During remote access, the phone beeps so you know it's waiting for the next command.

During message playback, press **MENU/SELECT** to open the menu for playback control.



## Play Message

*Play Message* replays all the messages received, starting with the newest, unheard messages and then replaying the older messages. With the phone in standby, press **MESSAGE/MUTE** to access the *Play Message* selection. You can play messages with this mode from the base or from the handset.

To...	From the base	From a handset
play new messages	<p>Press <b>PLAY/STOP</b>.</p> <p>The system announces the number of new &amp; old messages, then plays each new message (followed by the day and time) in the order it was received. After the new messages play, the system plays the old messages.</p>	Press <b>MESSAGE/MUTE</b> and select <i>Play Message</i> .
restart this message	Wait at least 5 seconds after the message starts playing, press <b>REV/FLASH</b> .	press <b>1</b> (number key).
replay an earlier message	Within 2 seconds after a message starts playing, press <b>REV/FLASH</b> .	select <b>1</b> (number key).
skip a message	Press <b>FWD/MUTE</b> .	Select <b>3</b> (number key).

To...	From the base	From a handset
delete a message	While a message is playing, press <b>DELETE</b> .	While a message is playing, select <b>4</b> (number key).
delete all messages	With the phone in standby, press <b>DELETE</b> ; press <b>DELETE</b> again to confirm.	Not available.
play old messages	After the system plays all new messages, press <b>PLAY/STOP</b> again.	
stop playback	Press <b>PLAY/STOP</b> .	Select <b>5</b> (number key).

## Screening Your Calls

You can use the answering system for call screening. While the system takes a message, you can listen on the base speaker (if you turn on *Call Screen*) or from a handset. Only one handset can screen calls at a time. If another handset tries to screen calls, it beeps and returns to standby.

To...	From the base	From a handset
hear the caller leaving a message	Listen to the caller over the speaker.	Press <b>MESSAGE/MUTE</b> .
answer the call	NA	Press <b>HOME/FLASH</b> .
mute the call screen without answering*	Press <b>PLAY/STOP</b> .	Press <b>END</b> or return the handset to the cradle.

\* If you mute the call screen, the system continues taking the message: it just stops playing through the speaker.

## Using the System While You're Away from Home

You can dial in to your answering system from any touch-tone phone. Before you can use this feature, you must program a security code.

### Programming a Security Code

With the phone in standby, open the menu; select *Answering Setup*, then select *Security Code*. Use the number keypad to enter a two-digit security code (01 to 99). Press **MENU/SELECT** when you're finished.


 **Remember to make a note of your new security code!**

## Dialing In to Your System

1. Call your phone number & wait until the system answers. (If the system is turned off, it answers after 10 rings & sounds a series of beeps.)
2. During the greeting or beeps, press **0** and **immediately** enter your security code. If you enter it incorrectly 3 times, the system hangs up and returns to standby.

Downloaded from [www.Somanuals.com](http://www.Somanuals.com). All Manuals Search And Download.

- The system announces the time, the number of messages in memory, and a help prompt. It beeps to let you know it's waiting for a command.
- When you hear beeping, enter a 2-digit command from the chart.

 **If you don't press any keys for 15 seconds, the system hangs up and returns to standby.**

01	Repeat message	05	Stop playback
02	Play message	06	Turn the system on
03	Skip message	09	Turn the system off
04	Delete message	10	Hear help prompts

## IMPORTANT INFORMATION

### Solving Problems

If you have any trouble with your phone, check this section first. If you need help, call our Customer Care Line listed on the front cover.

General problems	Possible solutions
No handsets can make or receive calls.	<ul style="list-style-type: none"> <li>Check the telephone cord connection.</li> <li>Disconnect the base AC adapter for a few minutes; then reconnect it.</li> </ul>
A handset can't make or receive calls.	<ul style="list-style-type: none"> <li>Move the handset closer to the base.</li> </ul>
A handset can make calls, but it won't ring.	<ul style="list-style-type: none"> <li>Make sure the ringer is turned on.</li> <li>Make sure Silent Mode is turned off (see p. 15).</li> </ul>
A handset is not working.	<ul style="list-style-type: none"> <li>Charge the battery for 15-20 hours.</li> <li>Check the battery connection.</li> </ul>
The phone keeps ringing when I answer on an extension.	<ul style="list-style-type: none"> <li>You may have to change the line mode. Contact Customer Service for instructions.</li> </ul>
Audio issues	Possible solutions
Callers sound weak or soft.	<ul style="list-style-type: none"> <li>Move the handset closer to the base.</li> <li>Keep the handset's battery fully charged.</li> <li>Increase the earpiece volume.</li> </ul>
There's a lot of noise or static on the line	<ul style="list-style-type: none"> <li>Check for interference from appliances (microwave ovens, TVs, etc.) or wireless devices (baby monitors, WiFi equipment, etc.). Move the handset or base away from the interference source.</li> <li>If you use a telecoil hearing aid, turn on T-coil mode (see p. 8).</li> <li>If you have any service that uses the phone line, add a DSL or telephone line filter (see page 25).</li> </ul>
Caller ID problems	Possible solutions
No handsets display Caller ID information.	<ul style="list-style-type: none"> <li>Let calls ring twice before answering.</li> <li>Make sure your Caller ID service is active.</li> </ul>

Caller ID problems	Possible solutions
Caller ID displays briefly and then clears.	<ul style="list-style-type: none"> <li>You may have to change the line mode. Contact Customer Service for instructions.</li> </ul>
Multi-handset problems	Possible solutions
I can't transfer calls.	<ul style="list-style-type: none"> <li>Reset the handset (see page 25).</li> </ul>
Two handsets can't talk to a caller.	<ul style="list-style-type: none"> <li>See if any handset is in Privacy Mode.</li> </ul>
A handset says <i>Unavailable</i> .	<ul style="list-style-type: none"> <li>Move the handset closer to the base.</li> <li>See if any handset is in Privacy Mode.</li> </ul>
I can't register a new handset.	<ul style="list-style-type: none"> <li>Reset the handset (see page 25).</li> <li>See if you have 12 registered handsets.</li> </ul>
Answering system problems	Possible solutions
The answering system does not work.	<ul style="list-style-type: none"> <li>Make sure the answering system is on.</li> <li>Make sure the base is plugged in.</li> </ul>
The system won't record messages.	<ul style="list-style-type: none"> <li>See if <i>Record Time</i> is set to <i>Announce Only</i>.</li> <li>Delete messages (memory may be full).</li> </ul>
A handset can't access the answering system.	<ul style="list-style-type: none"> <li>See if another handset is using the system.</li> <li>Make sure the phone is in standby.</li> </ul>
My outgoing message is gone.	<ul style="list-style-type: none"> <li>If there was a power failure, re-record your personal outgoing message.</li> </ul>
I can't hear the base speaker.	<ul style="list-style-type: none"> <li>Make sure call screening is turned on.</li> <li>Change the base speaker volume.</li> </ul>
Messages are incomplete.	<ul style="list-style-type: none"> <li>Increase the <i>Record Time</i>.</li> <li>Delete messages (memory may be full).</li> </ul>
The system keeps recording when I answer on an extension.	<ul style="list-style-type: none"> <li>You may have to change the line mode. Contact Customer Service for instructions.</li> </ul>
Bluetooth problems	Possible solutions
The D3580 won't pair with my phone.	<ul style="list-style-type: none"> <li>Making sure your phone is in pairing mode.</li> <li>Check your phone's manual for instructions on Bluetooth device pairing.</li> <li>Making sure your phone supports the Bluetooth hands-free profile.</li> <li>Checking the link order for that phone. In rare cases, some cellular phones may not be linked as the third or fourth cellular phone.</li> </ul>
The D3580 doesn't ring when my cellular phone does.	<ul style="list-style-type: none"> <li>Making sure your phone has Bluetooth turned on.</li> <li>Making sure your phone is in range of the base.</li> <li>Making sure the handset's ringer is not turned off. (The base doesn't ring on cellular calls.)</li> </ul>



Bluetooth problems	Possible solutions
The D3580 paired with my phone, but I can't hear anything through the handset.	<ul style="list-style-type: none"> <li>• Adjusting the handset volume.</li> <li>• Setting your cellular phone to transfer the audio to a Bluetooth device. Check your phone's manual for instructions on Bluetooth setup and options.</li> <li>• Erase the Bluetooth pairing and repair the cellular phone to the base. To erase the Bluetooth pairing, see page 12.</li> </ul>

## Installing a Line Filter or DSL Filter

A telephone line filter or DSL filter prevents services that use the phone line from causing interference on your phone. To get a line filter, contact your service provider or look in an electronics store.

Plug the filter into the telephone wall jack and plug the base into the filter. Make a test call to make sure the noise is gone.

## Liquid Damage

**CAUTION: If the base is covered in liquid, disconnect the adapter & phone cord from the wall before touching it.**

If the liquid is only on the exterior housing of the base or handset, wipe it off and use as normal. If you can hear liquid inside the housing:

1. Remove all compartment covers, and disconnect all cables and cords.
2. If liquid is leaking from any vent or hole, turn the phone so that vent faces down. If not, place the largest vent face down.
3. Let dry for at least 3 days. Check for liquid inside the phone before replacing compartment covers & reconnecting cords.

## Resetting Handsets

If you have trouble with a handset or if you want to replace one, clear the registration information from the base and the handset:

1. Press & hold **END** and **#** at the same time until you see the *System Reset* menu.
2. If you still have the base the handset is registered to, select *Deregister HS*, then select the handset you want to reset. If you don't have that base anymore, select *Base Unavailable*.
3. To confirm, select *Yes*. The handset displays *Handset not registered*.

## Registering Handsets

If you see a "not registered" message on a handset, you must register it to a base before using it.

1. Place the handset in the base; the display should say *Handset Registering*.

- Wait until the display says *Registration Complete* (about 30 seconds), then pick up the handset; press **HOME/FLASH**.
- If you don't hear a dial tone or the display says *Registration Failed*, charge the battery completely, then try again.

## Adapter and Battery Information

AC adapter	Base	Charger
Part number	PS-0046	PS-0035
Input voltage	120V AC, 60 Hz	
Output voltage	6V DC @ 500mA 7V DC @ 800mA (USB)	8V AC @ 300mA

- Use only the supplied AC adapters.
- Use the proper adapter for the base & any chargers.
- Do not place the unit in direct sunlight or subject it to high temperatures.

### Battery pack (with normal use)

Part number	BT-1022 or BT-1031	
Capacity	300mA, 2.4V DC (BT-1022) 400mA, 2.4V DC (BT-1031)	
Talk time	about 7 hours	
Standby time	about 7 days	
Battery life	about 1 year	

- Replace the battery when the talk or standby time becomes noticeably reduced. For replacements, call the Parts Department (see the front cover).
- When the battery gets low, the handset beeps and shows a low battery alert; put the handset in the cradle for recharging.

## Rechargeable Battery Warning

- This equipment contains a rechargeable Nickel-Metal-Hydride (Ni-MH) battery.
- Nickel is a chemical known to the state of California to cause cancer.
- Do not short-circuit the battery.
- The batteries in this equipment may explode if disposed of in a fire.
- Do not charge the batteries in any charger other than the one specified in the owner's manual. Using another charger may damage the battery or cause it to explode.
- As part of our commitment to protecting our environment and conserving natural resources, Uniden voluntarily participates in an RBRC® industry program to collect and recycle used

Ni-MH batteries within the United States. Please call 1-800-8-BATTERY for information on Ni-MH battery recycling in your area. (RBRC® is a registered trademark of the Rechargeable Battery Recycling Corporation.)



**Rechargeable batteries must be recycled or disposed of properly.**

**Warning! The cords on this product and/or accessories contain lead, a chemical known to the state of California to cause birth defects or other reproductive harm. Wash hands after handling.**

**Uniden works to reduce lead content in our products & accessories.**

## Compliance Information FCC Part 68 Information

This equipment complies with Part 68 of the FCC rules and the requirements adopted by the ACTA. On the bottom of this equipment is a label that contains, among other information, a product identifier in the format US: AAAEQ#TXXXX. If requested, this number must be provided to the phone company.

An applicable Universal Service Order Codes (USOC) certification for the jacks used in this equipment is provided (i.e., RJ11C) in the packaging with each piece of approved terminal equipment. A plug and jack used to connect this equipment to the premises wiring and telephone network must comply with the applicable FCC Part 68 rules and requirements adopted by the ACTA. A compliant telephone cord and modular plug is provided with this product. It is designed to be connected to a compatible modular jack that is also compliant. See installation instructions for details.

The REN is used to determine the number of devices that may be connected to a phone line. Excessive RENs on a phone line may result in devices not ringing in response to an incoming call. In most but not all areas, the sum of RENs should not exceed five (5.0). To be certain of the number of devices that may be connected to a line, as determined by the total RENs, contact the telephone provider. The REN for this product is part of the product identifier that has the format US:AAAEQ#TXXXX. The digits represented by ## are the REN without a decimal point (e.g., 03 is a REN of 0.3).

If this equipment causes harm to the telephone network, the telephone company will notify you in advance that temporary discontinuance of service may be required. But if advance notice isn't practical, the telephone company will notify the customer as soon as possible. Also, you will be advised of your right to file a complaint with the

FCC if you believe it is necessary. The telephone company may make changes in its facilities, equipment, operations or procedures that could affect the operation of the equipment. If this happens the telephone company will provide advance notice in order for you to make necessary modifications to maintain uninterrupted service.

Please follow instructions for repairing, if any (e.g. battery replacement section); otherwise do not substitute or repair any parts of the device except as specified in this manual. Connection to party line service is subject to state tariffs. Contact the state public utility commission, public service commission or corporation commission for information. This equipment is hearing aid compatible.

If you experience trouble with this equipment, contact the manufacturer (see the cover of this manual for contact information) or an authorized agent. If the equipment is causing harm to the telephone network, the telephone company may request that you disconnect the equipment until the problem is resolved.

If your home has wired alarm equipment connected to a phone line, be sure that installing the system does not disable your alarm equipment. If you have questions about what will disable alarm equipment, contact your telephone company or a qualified installer.

Any changes or modifications to this product not expressly approved by the manufacturer or other party responsible for compliance could void your authority to operate this product.

**NOTICE:** According to telephone company reports, AC electrical surges, typically resulting from lightning strikes, are very destructive to telephone equipment connected to AC power sources. To minimize damage from these types of surges, a surge arrester is recommended.

## FCC Part 15 Information

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation. Privacy of communications may not be ensured when using this phone.

**FCC PART 15.105(b):** Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be deter-

mined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## FCC RF Exposure Information

This product complies with FCC radiation exposure limits under the following conditions:

- The base must be placed to allow a minimum of 20 cm (8 inches) between the antenna and all persons during normal operation.
- The base must not be collocated or operated in conjunction with any other antenna or transmitter.
- The handset is designed for body-worn operation and meets FCC RF exposure guidelines when used with any belt clip, carrying case, or other accessory supplied with this product. (All necessary accessories are included in the package; any additional or optional accessories are not required for compliance with the guidelines.) Third party accessories (unless approved by the manufacturer) should be avoided as these might not comply with FCC RF exposure guidelines.

## Disable All Functions Except Charging

### D3580 Base

1. Press and hold **ANS ON/OFF** and **FIND HS** simultaneously, then plug in the AC adapter.
2. Continue to hold the keys for about 5 seconds. When the message counter turns off, all functions are disabled except for charging.

### D3580 Handset

1. Install the battery.
2. When the "Welcome, please wait..." message disappears from the display, press and hold **END, MENU,** and **3** simultaneously.
3. After about 5 seconds, a confirmation tone sounds, indicating all functions except charging are disabled.

**To return to normal operation, cycle the power for the base and remove and reinstall the handset battery.**

## **Industry Canada (I.C.) Notice**

### *Terminal equipment*

NOTICE: This equipment meets the applicable Industry Canada Terminal Equipment Technical Specifications. This is confirmed by the registration number. The abbreviation *IC* before the registration number signifies that registration was performed based on a Declaration of Conformity indicating that Industry Canada technical specifications were met. It does not imply that Industry Canada approved the equipment.

NOTICE: The Ringer Equivalence Number (REN) for this terminal equipment is marked on the equipment itself. The REN assigned to each terminal equipment provides an indication of the maximum number of terminals allowed to be connected to a telephone interface. The termination on an interface may consist of any combination of devices subject only to the requirement that the sum of the Ringer Equivalence Numbers of all the devices does not exceed 5.

### *Radio equipment*

The term *IC* before the radio certification number only signifies that Industry Canada technical specifications were met. Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device. "Privacy of communications may not be ensured when using this telephone".

## **1-Year Limited Warranty**

**Evidence of original purchase is required for warranty service.**

WARRANTOR: UNIDEN AMERICA CORPORATION ("Uniden")

ELEMENTS OF WARRANTY: Uniden warrants, for one year, to the original retail owner, this Uniden Product to be free from defects in materials and craftsmanship with only the limitations or exclusions set out below.

WARRANTY DURATION: This warranty to the original user shall terminate and be of no further effect 12 months after the date of original retail sale. The warranty is invalid if the Product is (A) damaged or not maintained as reasonable or necessary, (B) modified, altered, or used as part of any conversion kits, subassemblies, or any configurations not sold by Uniden, (C) improperly installed, (D) serviced or repaired by someone other than an authorized Uniden service center for a defect or malfunction covered by this warranty, (E) used in any conjunction with equipment or parts or as part of any system not manufactured by Uniden, or (F) installed or

programmed by anyone other than as detailed by the owner's manual for this product.

STATEMENT OF REMEDY: In the event that the product does not conform to this warranty at any time while this warranty is in effect, warrantor will either, at its option, repair or replace the defective unit and return it to you without charge for parts, service, or any other cost (except shipping and handling) incurred by warrantor or its representatives in connection with the performance of this warranty. Warrantor, at its option, may replace the unit with a new or refurbished unit. THE LIMITED WARRANTY SET FORTH ABOVE IS THE SOLE AND ENTIRE WARRANTY PERTAINING TO THE PRODUCT AND IS IN LIEU OF AND EXCLUDES ALL OTHER WARRANTIES OF ANY NATURE WHATSOEVER, WHETHER EXPRESS, IMPLIED OR ARISING BY OPERATION OF LAW, INCLUDING, BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. THIS WARRANTY DOES NOT COVER OR PROVIDE FOR THE REIMBURSEMENT OR PAYMENT OF INCIDENTAL OR CONSEQUENTIAL DAMAGES. Some states do not allow this exclusion or limitation of incidental or consequential damages so the above limitation or exclusion may not apply to you.

LEGAL REMEDIES: This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. This warranty is void outside the United States of America and Canada.

PROCEDURE FOR OBTAINING PERFORMANCE OF WARRANTY: If, after following the instructions in the owner's manual you are certain that the Product is defective, pack the Product carefully (preferably in its original packaging). Disconnect the battery from the Product and separately secure the battery in its own separate packaging within the shipping carton. The Product should include all parts and accessories originally packaged with the Product. Include evidence of original purchase and a note describing the defect that has caused you to return it. The Product should be shipped freight prepaid, by traceable means, to warrantor at:

Uniden America Service  
4700 Amon Carter Blvd.  
Fort Worth, TX 76155

- Uniden® is a registered trademark of Uniden America Corporation.
- The pictures in this manual are for example only. Your phone may not look exactly like the pictures.

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>