

# ViewSonic®



---

**SWB5501/SWB6552/SWB7051/  
SWB8451**

**Smart White Board**

**CDE5501/CDE6552/CDE7051/  
CDE8451**

**LCD Display  
User Guide**

---

**IMPORTANT:** Please read this User Guide to obtain important information on installing and using your product in a safe manner, as well as registering your product for future service. Warranty information contained in this User Guide will describe your limited coverage from ViewSonic Corporation, which is also found on our web site at <http://www.viewsonic.com> in English, or in specific languages using the Regional selection box in the upper right corner of our website. "Antes de operar su equipo lea cuidadosamente las instrucciones en este manual"

---

**Model No. VS15421/VS15432/VS15633/VS15420**

# Compliance Information

**NOTE:** This section addresses all connected requirements and statements regarding regulations. Confirmed corresponding applications shall refer to nameplate labels and relevant markings on unit.

## FCC Compliance Statement

This device complies with part 15 of FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Warning:** You are cautioned that changes or modifications not expressly approved by the party responsible for compliance could void your authority to operate the equipment.

## Industry Canada Statement

CAN ICES-3 (B)/NMB-3(B)

## CE Conformity for European Countries

 The device complies with the EMC Directive 2004/108/EC and Low Voltage Directive 2006/95/EC.

### Following information is only for EU-member states:

The mark shown to the right is in compliance with the Waste Electrical and Electronic Equipment Directive 2002/96/EC (WEEE). The mark indicates the requirement NOT to dispose the equipment as unsorted municipal waste, but use the return and collection systems according to local law.



## Declaration of RoHS2 Compliance

This product has been designed and manufactured in compliance with Directive 2011/65/EU of the European Parliament and the Council on restriction of the use of certain hazardous substances in electrical and electronic equipment (RoHS2 Directive) and is deemed to comply with the maximum concentration values issued by the European Technical Adaptation Committee (TAC) as shown below:

Substance	Proposed Maximum Concentration	Actual Concentration
Lead (Pb)	0.1%	< 0.1%
Mercury (Hg)	0.1%	< 0.1%
Cadmium (Cd)	0.01%	< 0.01%
Hexavalent Chromium (Cr <sup>6+</sup> )	0.1%	< 0.1%
Polybrominated biphenyls (PBB)	0.1%	< 0.1%
Polybrominated diphenyl ethers (PBDE)	0.1%	< 0.1%

Certain components of products as stated above are exempted under the Annex III of the RoHS2 Directives as noted below:

Examples of exempted components are:

1. Mercury in cold cathode fluorescent lamps and external electrode fluorescent lamps (CCFL and EEFL) for special purposes not exceeding (per lamp):
  - (1) Short length ( $\leq 500$  mm): maximum 3.5 mg per lamp.
  - (2) Medium length ( $> 500$  mm and  $\leq 1,500$  mm): maximum 5 mg per lamp.
  - (3) Long length ( $> 1,500$  mm): maximum 13 mg per lamp.
2. Lead in glass of cathode ray tubes.
3. Lead in glass of fluorescent tubes not exceeding 0.2% by weight.
4. Lead as an alloying element in aluminium containing up to 0.4% lead by weight.
5. Copper alloy containing up to 4% lead by weight.
6. Lead in high melting temperature type solders (i.e. lead-based alloys containing 85% by weight or more lead).
7. Electrical and electronic components containing lead in a glass or ceramic other than dielectric ceramic in capacitors, e.g. piezoelectronic devices, or in a glass or ceramic matrix compound.

## Cautions and Warnings

1. Read these instructions completely before using the equipment.
2. Keep these instructions in a safe place.
3. Heed all warnings and follow all instructions.
4. Always handle the LCD display with care when moving it.
5. Never remove the rear cover. This LCD display contains high-voltage parts. You may be seriously injured if you touch them.
6. Do not use this equipment near water. **Warning:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
7. Avoid exposing the LCD display to direct sunlight or another heat source. Orient the LCD display away from direct sunlight to reduce glare.
8. Clean with a soft, dry cloth. If further cleaning is required, see the “Care and Maintenance” section in this guide for further instructions.
9. Avoid touching the screen. Skin oils are difficult to remove.
10. Do not rub or apply pressure to the LCD panel, as it may permanently damage the screen.
11. Do not block any ventilation openings. Install the equipment in accordance with the manufacturer’s instructions.
12. Do not install near any heat sources such as radiators, heat registers, stoves, or other devices (including amplifiers) that produce heat.
13. Place the LCD display in a well ventilated area. Do not place anything on the LCD display that prevents heat dissipation.
14. Do not place heavy objects on the LCD display, video cable, or power cord.
15. If smoke, an abnormal noise, or a strange odor is present, immediately switch the LCD display off and call your dealer or ViewSonic. It is dangerous to continue using the LCD display.
16. Do not attempt to circumvent the safety provisions of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade and the third prong are provided for your safety. If the plug does not fit into your outlet, consult an electrician for replacement of the outlet.
17. Protect the power cord from being tread upon or pinched, particularly at the plug, and the point where it emerges from the equipment. Be sure that the power outlet is located near the equipment so that it is easily accessible.
18. Only use attachments/accessories specified by the manufacturer.

(Continued on next page)

**19.** Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the equipment. When a cart is used, use caution when moving the cart/equipment combination to avoid injury from tipping over.



**20.** Unplug this equipment when it will be unused for long periods of time.

**21.** Refer all servicing to qualified service personnel. Service is required when the unit has been damaged in any way, such as: if the power-supply cord or plug is damaged, if liquid is spilled onto or objects fall into the unit, if the unit is exposed to rain or moisture, or if the unit does not operate normally or has been dropped.

# Contents

## Compliance Information

FCC Compliance Statement.....	i
Industry Canada Statement.....	i
CE Conformity for European Countries.....	i
Declaration of RoHS2 Compliance.....	ii
Cautions and Warnings.....	iii

## Copyright Information

Product Registration.....	2
For Your Records.....	2

## 1. Getting Started

1.1 Package Contents.....	3
1.2 Wall Mount Kit Specifications (VESA).....	4

## 2. Smart Whiteboard/LCD Display

### Features

2.1 Control Panel Overview.....	5
2.2 Terminal Interface Overview.....	8
2.3 Remote Control Overview.....	11
2.4 Inserting Remote Control Batteries.....	13
2.5 Remote Control Receiver Range.....	14

## 3. Setting Up Your Display

3.1 Connecting an External PC.....	15
3.2 RS232 Connections.....	18
3.3 Connecting USB Peripherals.....	19
3.4 AV IN Connections.....	22
3.5 S-Video Connections.....	24
3.6 YPbPr Connections.....	25
3.7 HDMI Connections.....	26
3.8 Microphone Connections.....	27
3.9 Coaxial Connections.....	28
3.10 VGA Connections.....	29
3.11 AV OUT Connections.....	31

## **4. Basic Display Operations**

## **5. OSD Menu Operation**

5.1 Input Source .....	33
5.2 Screen Menu .....	37
5.3 Picture Menu .....	39
5.4 Sound Menu (SWB5501/SWB6552/SWB7051/CDE5501/ CDE6552/CDE7051 Models) .....	41
5.5 Time Menu (SWB5501/SWB6552/SWB7051/CDE5501/ CDE6552/CDE7051 Models) .....	42
5.6 Lock Menu (SWB5501/SWB6552/SWB7051/CDE5501/ CDE6552/CDE7051 Models) .....	43
5.7 Setup Menu (SWB5501/SWB6552/SWB7051/CDE5501/ CDE6552/CDE7051 Models) .....	44
5.8 Annotation Menu (SWB8451/CDE8451 Models) .....	45
5.9 Android System Interface (SWB8451/CDE8451 Models) .....	46
5.10 Multimedia File Playback Interface (SWB8451/CDE8451 Models).....	51

## **6. Trouble Shooting**

## **7. Care and Maintenance**

## **8. Display Modes**

8.1 YPbPr Mode .....	57
8.2 VGA Mode.....	57
8.3 HDMI Mode .....	58

## **9. Specifications**

## **10. RS-232 Protocol**

10.1 Introduction.....	60
10.2 Description .....	60
10.2.1 Hardware specification .....	60
10.2.2 Communication Setting .....	61
10.2.3 Command Message Reference.....	61
10.3 Protocol .....	61
10.3.1 Set-Function Listing.....	61

10.3.2 Get-Function Listing .....	67
10.3.3 Remote Control Pass-through mode .....	70

**Other Information**

Customer Support .....	72
Limited Warranty .....	73
Mexico Limited Warranty .....	75



# Copyright Information

Copyright © ViewSonic Corporation, 2014. All rights reserved.

Macintosh and Power Macintosh are registered trademarks of Apple Inc.

Microsoft, Windows, and the Windows logo are registered trademarks of Microsoft Corporation in the United States and other countries.

ViewSonic, the three birds logo, OnView, ViewMatch, and ViewMeter are registered trademarks of ViewSonic Corporation.

VESA is a registered trademark of the Video Electronics Standards Association. DPMS, DisplayPort, and DDC are trademarks of VESA.

 is a trademark of SRS Labs, Inc.

Premium Sound technology is incorporated under license from SRS Labs, Inc.

ENERGY STAR® is a registered trademark of the U.S. Environmental Protection Agency (EPA).

As an ENERGY STAR® partner, ViewSonic Corporation has determined that this product meets the ENERGY STAR® guidelines for energy efficiency.

Disclaimer: ViewSonic Corporation shall not be liable for technical or editorial errors or omissions contained herein; nor for incidental or consequential damages resulting from furnishing this material, or the performance or use of this product.

In the interest of continuing product improvement, ViewSonic Corporation reserves the right to change product specifications without notice. Information in this document may change without notice.

No part of this document may be copied, reproduced, or transmitted by any means, for any purpose without prior written permission from ViewSonic Corporation.

## Product Registration

To fulfill possible future product needs, and to receive additional product information as it becomes available, please visit your region section on ViewSonic's website to register your product online.

The ViewSonic CD also provides an opportunity for you to print the product registration form. Upon completion, please mail or fax to a respective ViewSonic office. To find your registration form, use the directory “:\CD\Registration”. Registering your product will best prepare you for future customer service needs.

Please print this user guide and fill the information in the “For Your Records” section. Your LCD displays serial number is located on the rear side of the display.

For additional information, please see the “Customer Support” section in this guide.

### For Your Records

<b>Product Name:</b>	SWB5501/SWB6552/SWB7051/SWB8451 ViewSonic Smart White Board CDE5501/CDE6552/CDE7051/CDE8451 ViewSonic LCD Display
<b>Model Number:</b>	VS15421/VS15432/VS15633/VS15420
<b>Document Number:</b>	SWB5501/SWB6552/SWB7051/SWB8451/CDE5501/ CDE6552/CDE7051/CDE8451_UG_ENG Rev. 1D 03-31-14
<b>Serial Number:</b>	_____
<b>Purchase Date:</b>	_____

### Product disposal at end of product life

ViewSonic respects the environment and is committed to working and living green. Thank you for being part of Smarter, Greener Computing.

Please visit ViewSonic website to learn more.

USA & Canada: <http://www.viewsonic.com/company/green/recycle-program/>

Europe: <http://www.viewsoniceurope.com/uk/support/recycling-information/>

Taiwan: <http://recycle.epa.gov.tw/recycle/index2.aspx>

# 1. Getting Started

Congratulations on your purchase of a ViewSonic® Smart Whiteboard/LCD display.

**Important!** Save the original box and all packing material for future shipping needs.

**Note:** The word “Windows” in this user guide refers to Microsoft Windows operating system.


## 1.1 Package Contents

- Power cable
- VGA cable
- Remote control
- AAA battery x 2
- USB cable
- Audio cable
- Stylus pen x 3
- AV cable (for SWB6552/SWB7051/SWB8451/CDE6552/CDE7051/CDE8451 models only)
- YPbPr cable (for SWB6552/SWB7051/CDE6552/CDE7051 models only)
- Wall mount installation guide
- User manual CD wizard
  - User Guide
  - ViewBoard software



## 1.2 Wall Mount Kit Specifications (VESA)

Please follow the instructions in the wall mount installation guide to install your wall mount or mobile mount bracket. If attaching to other building materials, please contact your nearest dealer.

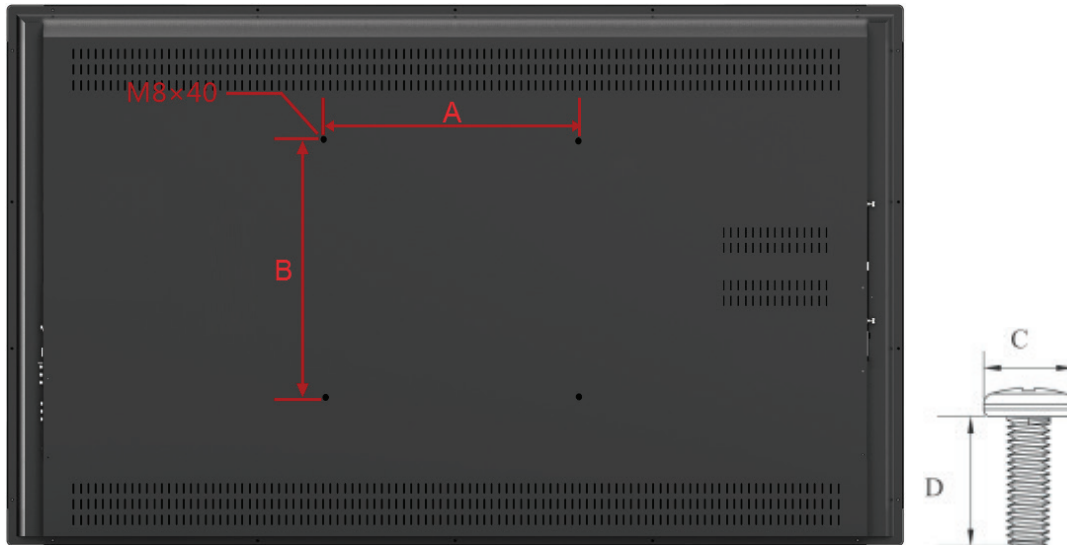

inch	VESA Spec. (A x B)	Standard Screw (C x D)	Quantity
55	400 x 400 mm	M8 x L40	4
65	600 x 400 mm	M8 x L40	4
70	600 x 600 mm	M8 x L40	4
84	600 x 600 mm	M8 x L40	8

- ViewSonic provides the standard dimensions for wall mount kits as shown in the table above.
- To find the perfect mount, please browse [www.viewsonic.com](http://www.viewsonic.com) or call our service team: United States 1-800-688-6688, Canada 1-866-463-4775.
- When purchasing our wall mount kit, a detailed install manual and all parts necessary for assembly are provided.
- Do not use the screws that longer than the standard dimension, as they may cause damage to the inside of the LCD display set.


## 2. Smart Whiteboard/LCD Display Features


This section introduces you to the features of your Smart Whiteboard/LCD Display.

**Note:** The features or applications described in this User's manual may vary depending on the device model purchased.


### 2.1 Control Panel Overview


SWB5501/CDE5501 Control Panel:

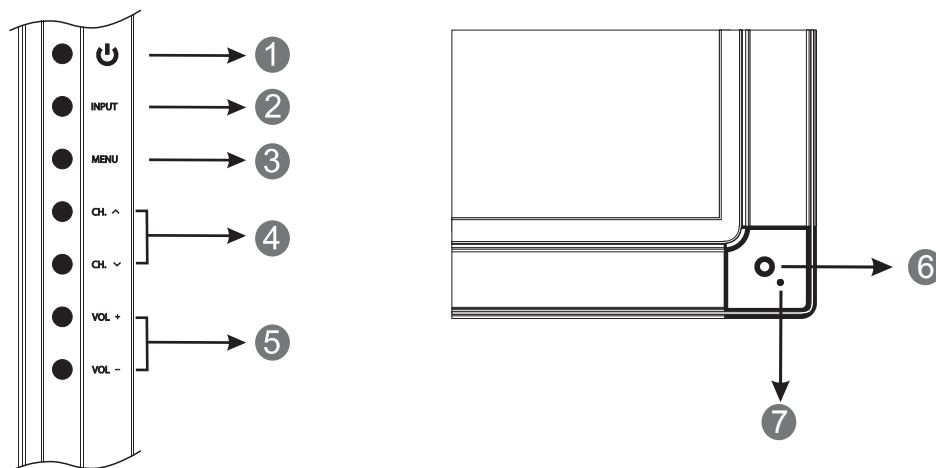


Item	Description
1 	Power On/Off
2 INPUT	Switch between different sources
3 MENU	OSD Menu On/Off
4 CH.	Move upward/downward to scroll through menu options.
5 VOL +/-	Increase or decrease volume
6 RC Receiver	Receives signals from the remote control
7 Power Indicator	Indicates power status (On/Off)

## SWB6552/SWB7051/CDE6552/CDE7051 Control Panel:

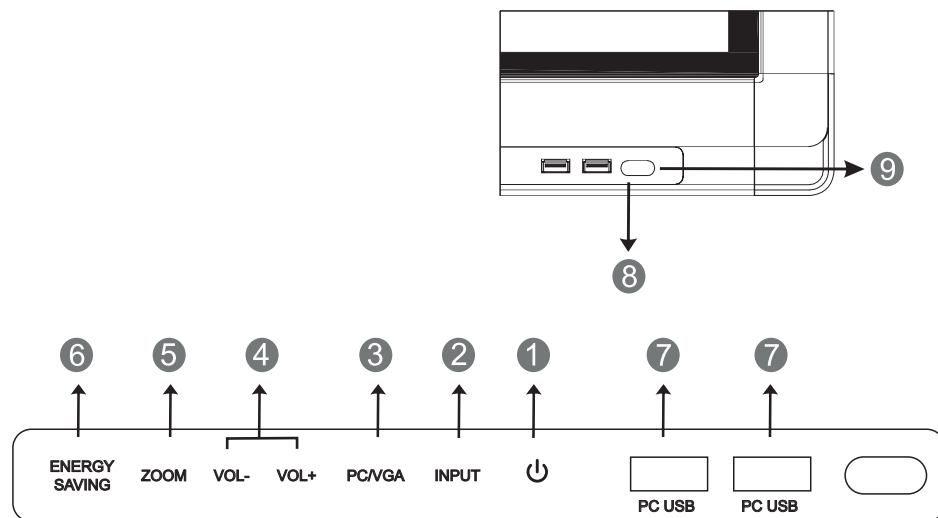

Item	Description
① 	Power On / Off switch
② INPUT	Switch to different source
③ PC/VGA	Switch between PC and VGA sources
④ VOL+/-	Increase or decrease volume
⑤ ZOOM	Adjust screen ratio
⑥ ENERGY SAVING	Energy-saving mode
⑦ PC USB	Internal PC USB port
⑧ RC Receiver	Receives signals from the remote control
⑨ Power Indicator	Indicates power status (On / Off)


## SWB8451/CDE8451 Control Panel:

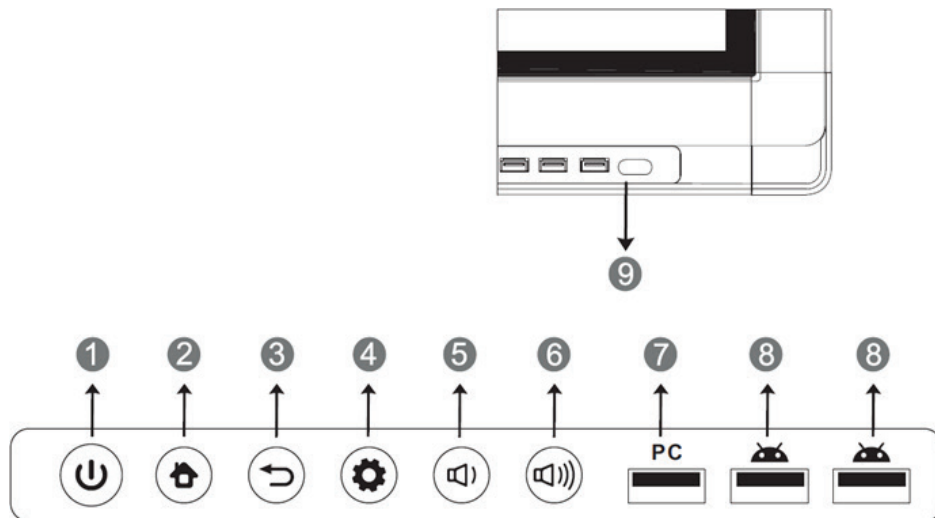

Item	Description
1	Press the key to turn on the device Press the key to turn on/off the screen Press and hold the key to turn off the device
2	Back to Android main interface
3	Return to Android previous level
4	Call up function menu
5	Decrease volume
6	Increase volume
7	Internal PC USB port
8	Display USB port for Android system
9	Receives signals from the remote control

## 2.2 Terminal Interface Overview

### SWB5501/CDE5501 Interface:

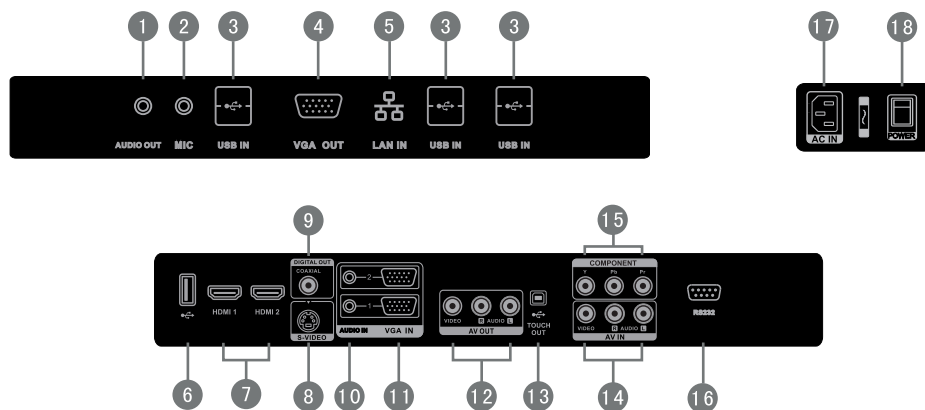



Item	Description
1 AUDIO OUT	Connects the device to headphones or speakers
2 MIC	Connects to a microphone
3 USB IN	Connects USB peripherals such as HDDs USB keyboards, mice and more
4 VGA OUT	Connects the display with the VGA-IN connector
5 LAN IN	Standard RJ45 (10M/100M/1G) Internet connection interface
6 USB IN	Display Motherboard Upgrade Interface
7 HDMI	High Definition Multimedia Interface
8 S-VIDEO	S-VIDEO input
9 COAXIAL	Coaxial output
10 AUDIO IN	Connects the device to external audio sources
11 VGA IN	Connects the device to external video sources
12 AV OUT	Audio-Video output port
13 TOUCH OUT	External PC touch-signal input
14 AV IN	Audio-Video combined input port
15 COMPONENT	YPbPr signal input, connect DVD, set -top -box with YPbPr
16 RS232	Serial port interface
17 AC IN	AC power input
18 POWER	Power On / Off switch

**Note:** Model nos. CDE5501 do not have interface features #1 – 5 if the optional slot-in PC module is not installed.




## SWB6552/SWB7051/CDE6552/CDE7051 Interface:

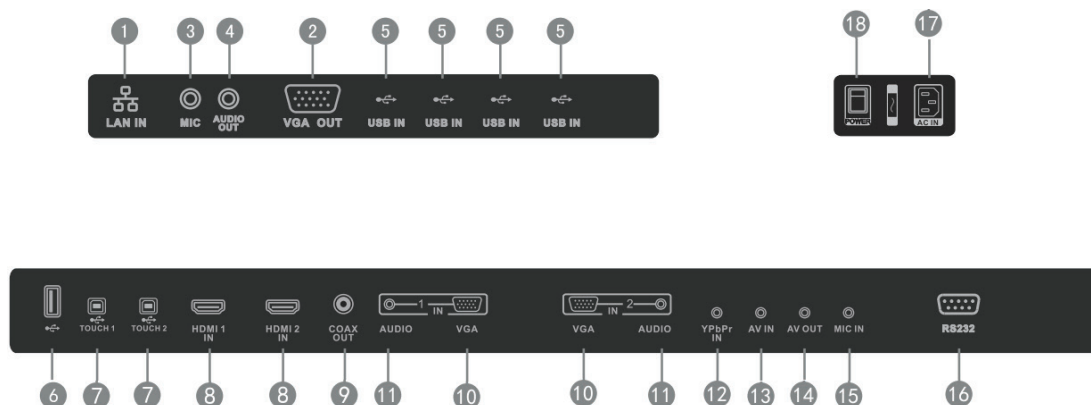

Item	Description
① LAN IN	Standard RJ45 (10M/100M/1G) Internet connection interface
② VGA OUT	Connects the display to a VGA-IN connector
③ MIC	Connects to a microphone
④ AUDIO OUT	Connects the device to headphones or speakers
⑤ USB IN	Connects USB peripherals such as HDDs USB keyboards and mice
⑥ 	Display Motherboard Upgrade Interface
⑦ TOUCH	Touch signal input, controls an external PC once the driver has been installed (available through PC, VGA and HDMI sources).
⑧ HDMI IN	High Definition Multimedia Interface
⑨ COAXIAL	Coaxial output
⑩ VGA IN	Connects the device to external video sources
⑪ AUDIO IN	Connects the device to external audio sources
⑫ YPbPr IN	YPbPr signal input, connects to DVD players and set-top boxes
⑬ AV IN	Audio-Video combined input port
⑭ AV OUT	Audio-Video output port
⑮ MIC IN	Connects to a microphone
⑯ RS232	Serial port interface
⑰ AC IN	AC power input
⑱ POWER	Power On / Off switch

**Note:** Model no. CDE6552/CDE7051 does not have interface features #1 – 5 if the optional slot-in PC module is not installed.

## SWB8451/CDE8451 Interface:

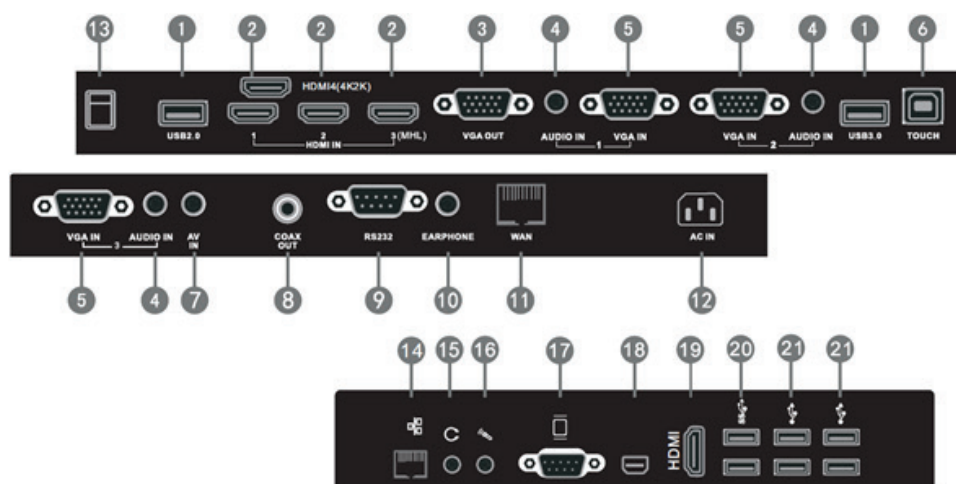













Item	Description
1	USB interface, connect USB devices such as mobile hard disk, U disk, USB keyboard and mouse, USB drives, etc
2	High Definition Multimedia Interface, HDMI3 can realize MHL function, HDMI4 can realize 4Kx2K
3	Connected to display devices with VGA input function
4	Connects the device to external audio sources
5	Connects the device to external video sources
6	Touch signal input, controls an external PC once the driver has been installed (available through PC, VGA and HDMI sources).
7	Audio-Video combined input port
8	Coaxial output
9	Serial port interface
10	Connects the device to headphones or speakers
11	Standard RJ45 (10M/100M/1G) Internet connection interface (This network port is only used for Android system)
12	AC power input
13	Power On / Off switch
14	Standard RJ45 (10M/100M/1G) Internet connection interface (This network port is only used for PC)
15	Connects the device to headphones or speakers
16	Connects to a microphone
17	Connects the display to a VGA-IN connector
18	Connects the display to a DisplayPort connector
19	Connected to device with HDMI input function
20	USB 3.0 interface , connects USB peripherals such as HDDs USB keyboards and mice
21	USB 2.0 interface , connects USB peripherals such as HDDs USB keyboards and mice

**Note:** Model no. CDE8451 does not have interface features #14 – 21 if the optional slot-in PC module is not installed.

## 2.3 Remote Control Overview




- 1  :  
Press to turn the display ON/OFF (Standby), or press and hold for 5 seconds to shut down
- 2  :  
Mute / Unmute
- 3 SLEEP :  
Set the sleep time function (55", 65", 70")
- 4 DISPLAY :  
Display information of the current input source
- 5 P.MODE :  
Picture mode selection (55", 65", 70")  
Blank screen (84")
- 6 S.MODE :  
Sound mode selection (55", 65", 70")
- 7 Numeric button:  
Numeric input button
- 8  /  , ALT+TAB:  
Press to switch between PC applications
- 9 0 :  
Numeric input button
- 10  , ALT+F4 :  
Close current PC window
- 11 INPUT:  
Source selection button
- 12 MENU:  
Press to display Menu
- 13 RESET+ASPECT:  
Adjust the aspect ratio of PC, HDMI and VGA sources (55", 65", 70")
- 14 RED+ALT:  
PC 'Alt' button (55", 65", 70")
- 15 GREEN+TAB:  
PC 'Tab' button (55", 65", 70")
- 16 YELLOW+DESKTOP:  
Switch to Windows Desktop  
Switch to Android main screen (84")
- 17 BLUE+BACKSPACE:  
PC 'Backspace' button
- 18  , D. MENU:  
PC 'Windows' button
- 19  , D. TITLE:  
PC 'Menu' button (55", 65", 70")
- 20  :  
Press to scroll up
- 21  :  
Press to scroll left
- 22  :  
Press to scroll right
- 23  :  
Press to scroll down
- 24 ENTER:  
Enter button. Press it to select options.
- 25  , D. USB:  
Writing software startup
- 26 ESC/EXIT, D. SETUP:  
Shortcut button to exit dialog boxes
- 27 EPG:  
Digital program guide (not available)
- 28 FAV, SPACE:  
PC 'Space' button
- 29 CH. +, CH. - :  
CH+ : PC previous page (84")  
CH- : PC next page (84")
- 30 VOL+, VOL- :  
Increase / Decrease volume
- 31 F1 :  
F1 Function
- 32 F2 :  
F2 Function
- 33 F3 :  
F3 Function
- 34 F4 :  
4 Function
- 35 F5 :  
F5 Function
- 36 F6 :  
F6 Function
- 37 F7 :  
F7 Function
- 38 F8 :  
F8 Function
- 39 F9 :  
F9 Function
- 40 F10 :  
F10 Function
- 41 F11 :  
F11 Function
- 42 F12 :  
F12 Function


## 2.4 Inserting Remote Control Batteries

To insert the provided batteries into the remote control follow these instructions. We recommend that you don't mix battery types.


1. Remove the cover on the rear of the remote control.
2. Insert two "AAA" batteries, ensuring the "+" symbol on the battery matches the "+" on the battery post.
3. Replace the cover by aligning it with the slot on the remote control and snapping the latch shut.

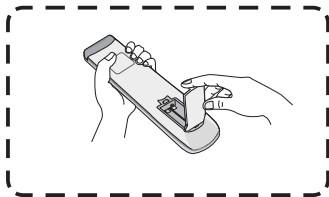

(1)

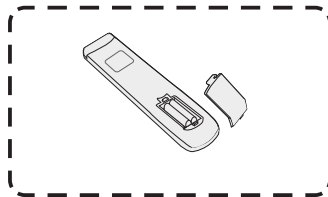

(2)

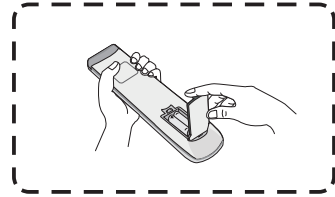


(3)

**Warning:** There is a risk of explosion if batteries are replaced with the incorrect type.

**Note:** Always dispose of old batteries in an environmentally friendly way. Contact your local government for more information on how to dispose of batteries safely.

## 2.5 Remote Control Receiver Range

The working range of the remote control receiver is shown here. It has an effective range of 8 meters. Make sure there is nothing obstructing the remote control's signal to the receiver.

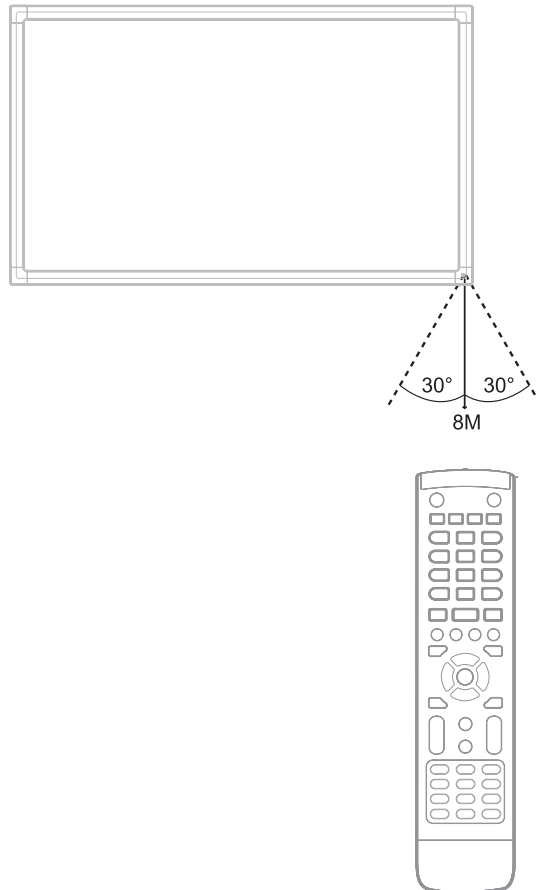


## 3. Setting Up Your Display


**Warning:** For the safety of you and your unit, please do not connect to a power supply before the external device is prepared.

### 3.1 Connecting an External PC


SWB5501/CDE5501 Models:

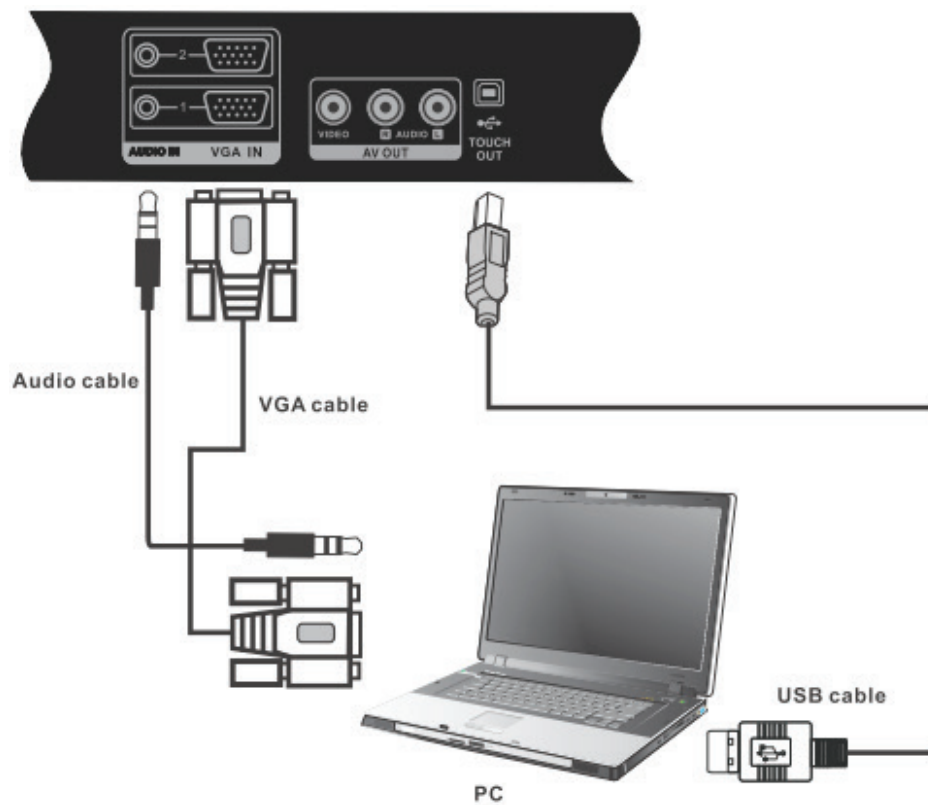

## SWB6552/SWB7051/CDE6552/CDE7051 Models:

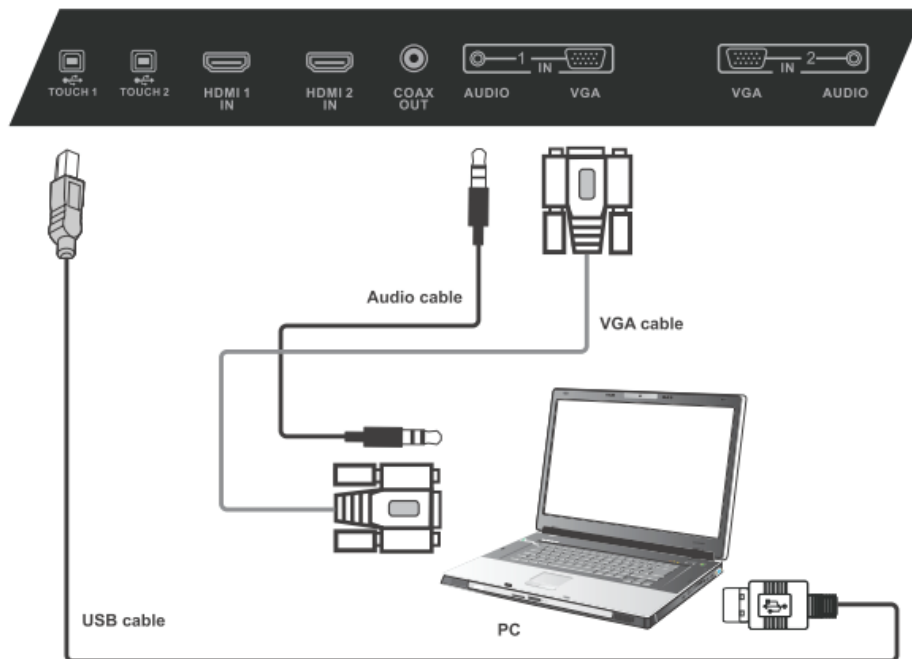

## SWB8451/CDE8451 Models:

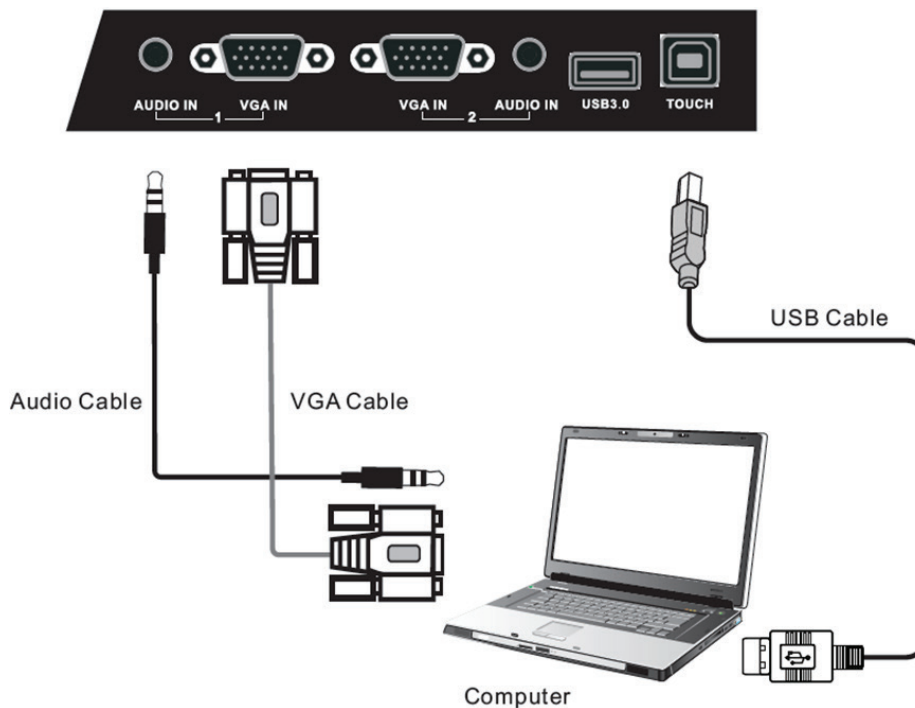


1. To display video and sound from an external PC follow the instructions below.


**Note:** External PCs can also be connected to the display via HDMI cable.

- Connect a VGA cable (15-pin) from your external PC to the VGA IN port on the display.
- Connect an audio cable from the AUDIO OUT port on your external PC to the AUDIO IN port on the display.



2. Connect a USB cable to the external PC from the TOUCH OUT port of the display.
3. Plug the power cord into the rear panel of the display and flip the power switch (I/O) to the “I” position. The display is now in “Standby” mode.

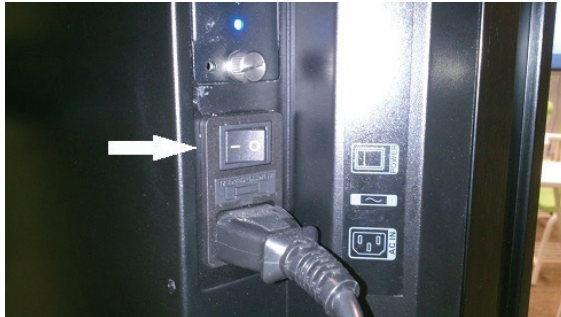


4. Turn on your external computer and set up the touch driver.
5. Press the  button on the right-hand side of the display to turn on the screen.



6. Press the INPUT button to switch to the “PC” source.

**Note:** For optimal results, select 1920x1080p as the external computer's input resolution.

## 3.2 RS232 Connections

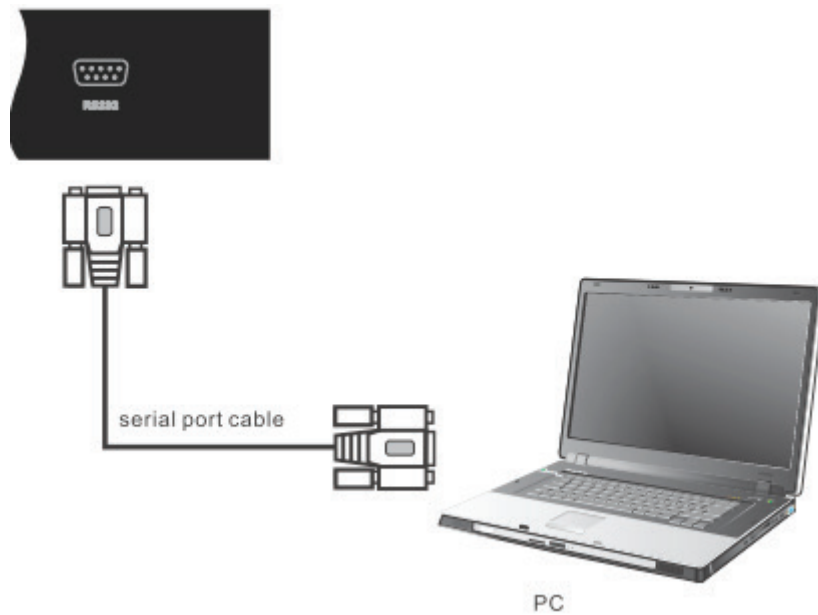


When you use a RS232 serial port cable to connect your display to an external computer, certain functions can be controlled by the PC, including power on/off, volume adjustment and more.

### 3.3 Connecting USB Peripherals


Just like a regular PC, it is easy to connect various USB devices and other peripherals with your smart whiteboard.

1. USB Peripherals: Plug the USB device cable into the USB IN port.
2. Networking and modem cables: Plug the router cable into the LAN IN port.
3. Microphone: Plug the microphone cable into the MIC port.


#### SWB5501 Model:

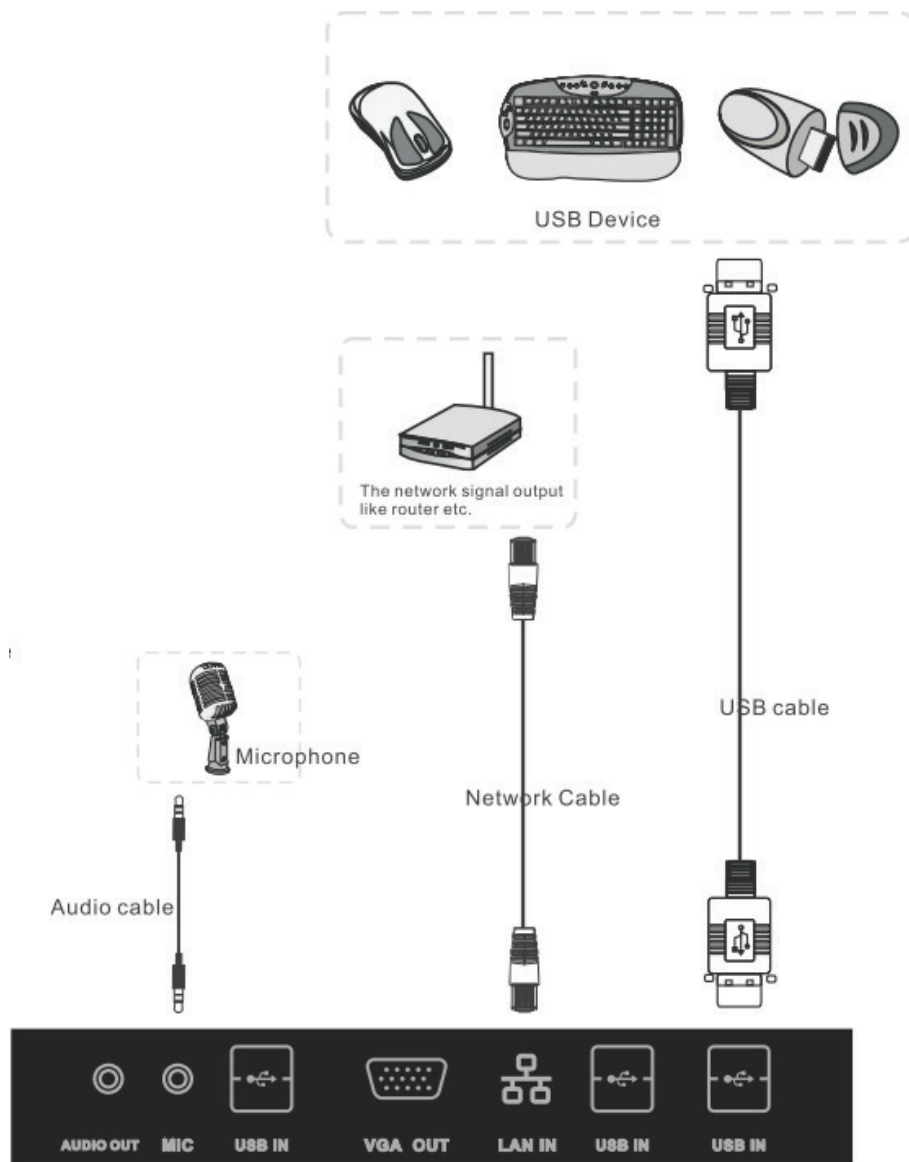

### SWB6552/SWB7051 Models:

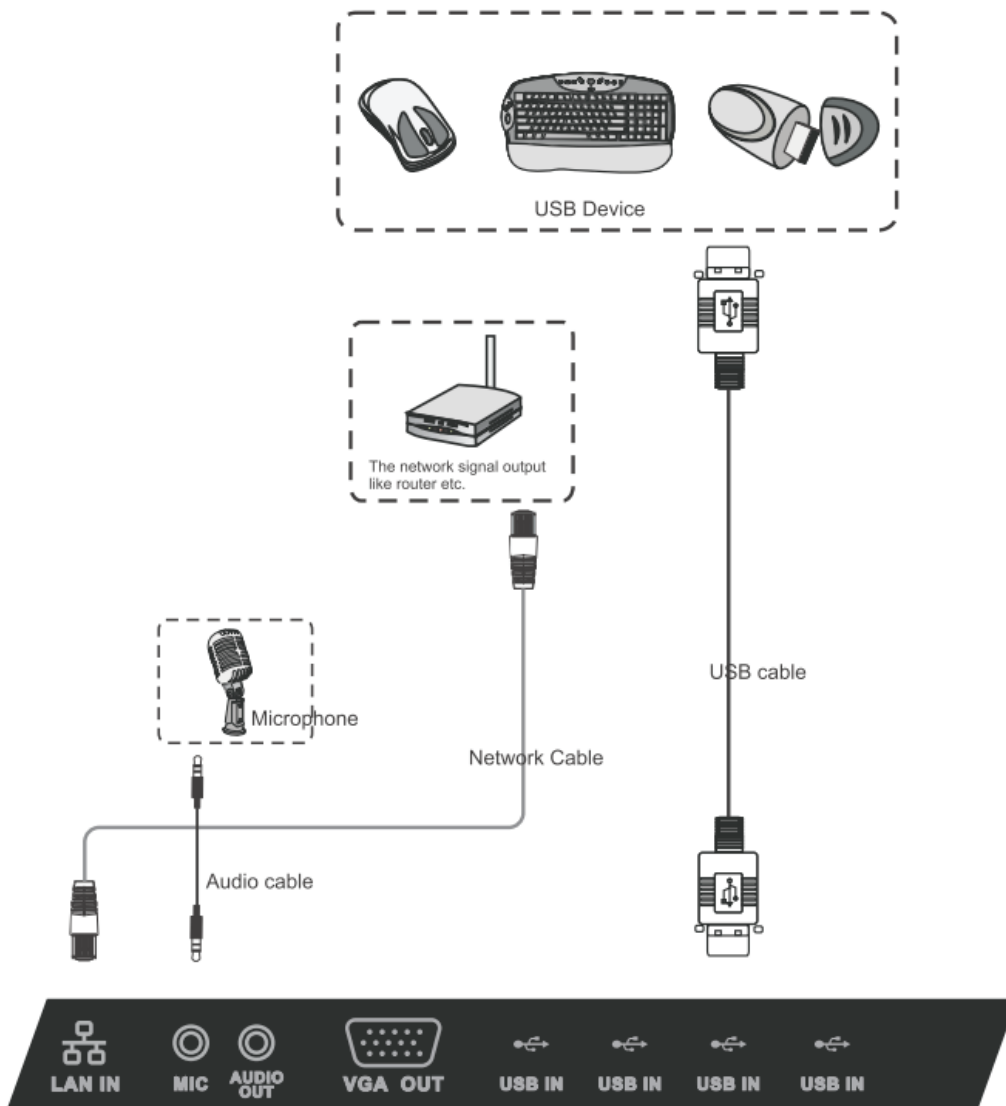


**SWB8451 Model:**

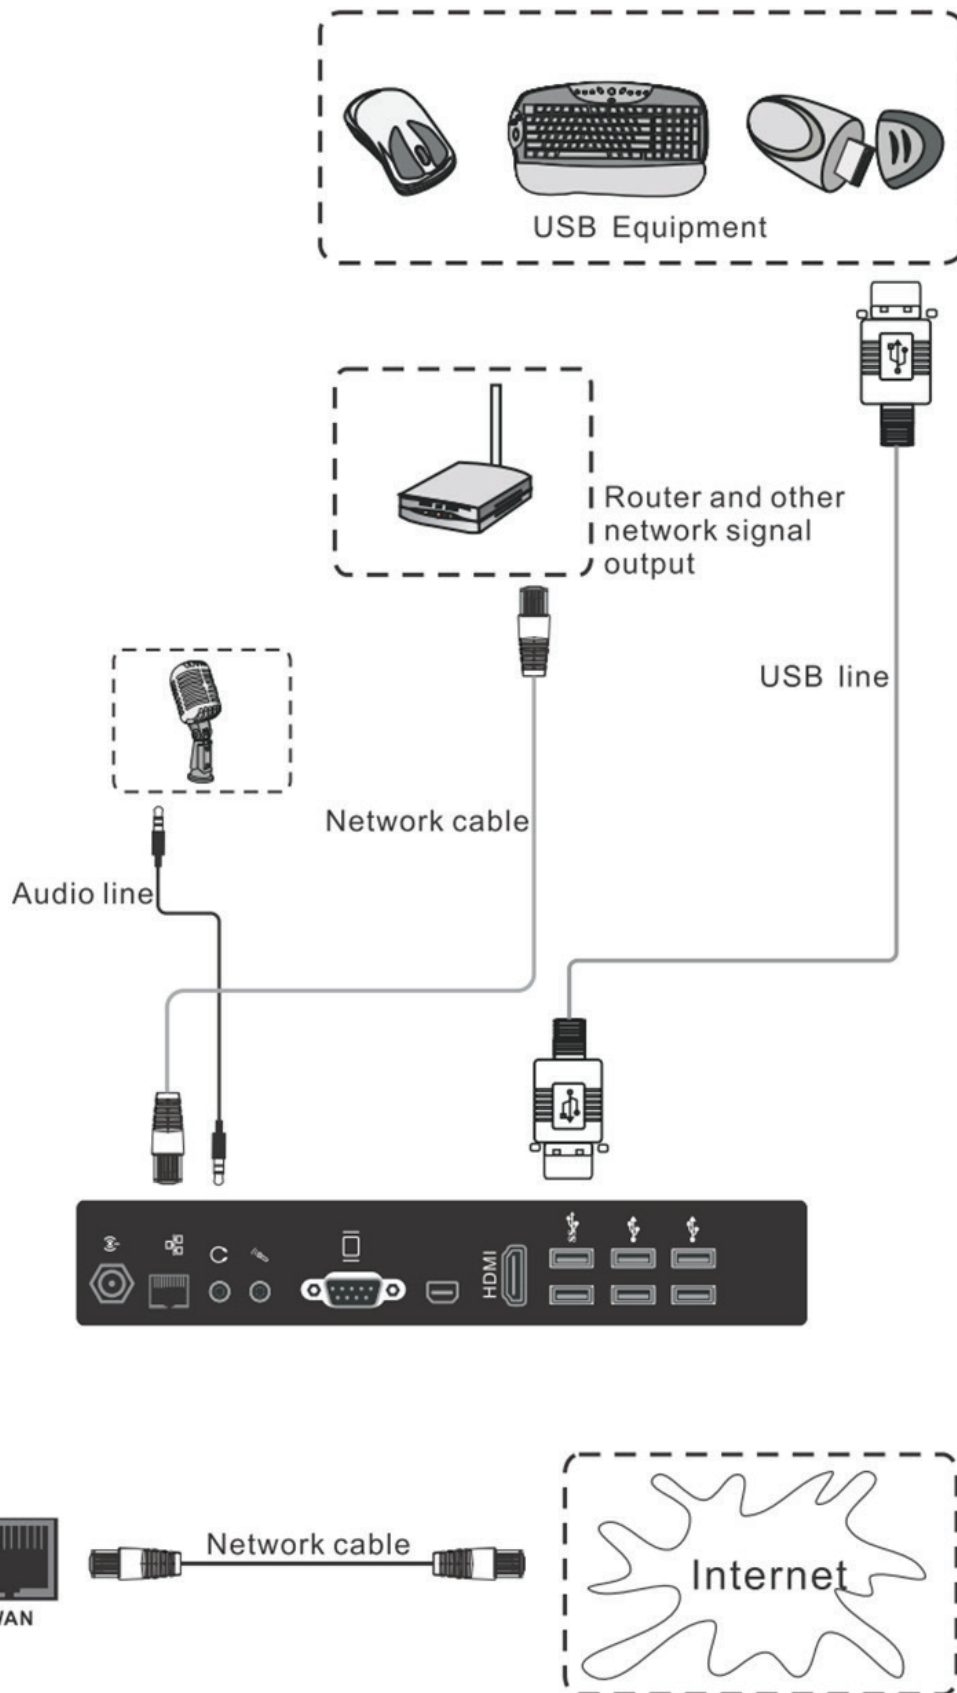


### 3.4 AV IN Connections


SWB5501/CDE5501 Models:

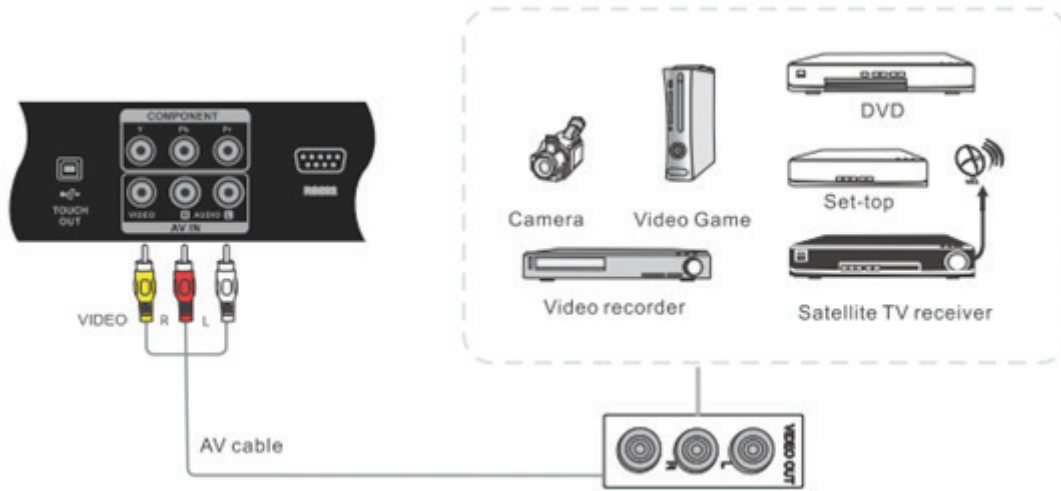


SWB6552/SWB7051/CDE6552/CDE7051 Models:

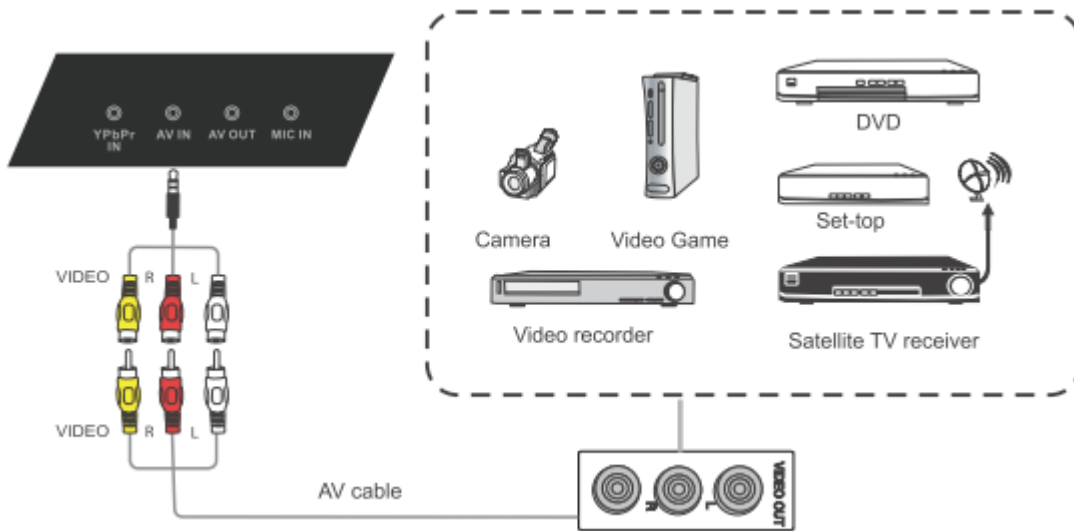


## SWB8451/CDE8451 Models:

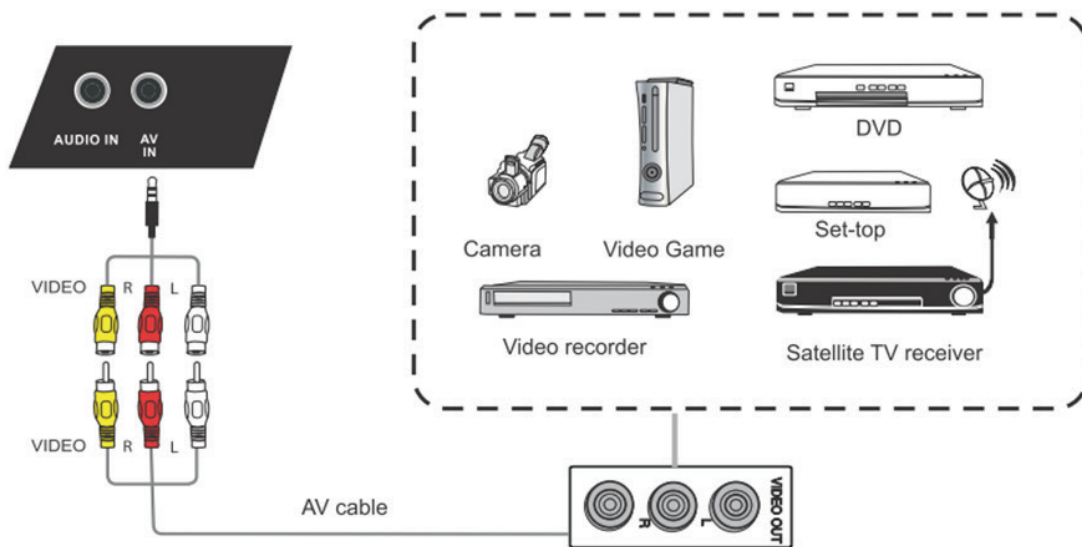


1. Connect a 3-color AV cable from the AV IN ports on your display to the AV OUT ports of a peripheral device (AV cable: Yellow is Video, Red is Audio-R, White is Audio-L).
2. Plug in the power cord, and turn on the rear-panel power supply switch (see section 3.1).
3. Press the  button on the right-hand side of the display to turn the screen on (see section 3.1).
4. Press the INPUT button to switch to the "AV" source.

## 3.5 S-Video Connections

(SWB5501/CDE5501 models only)

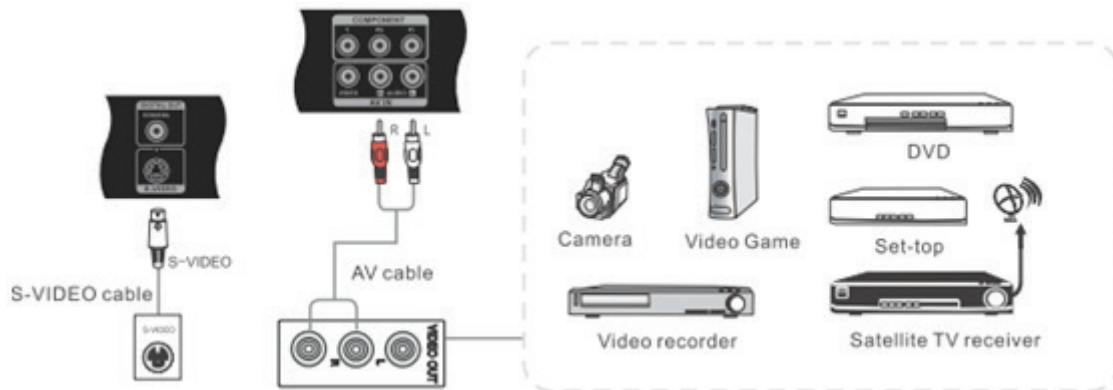


1. Connect the S-VIDEO cable to the ports of the display and the peripheral device.
2. Plug in the power cord, and turn on the rear-panel power supply switch (see section 3.1).
3. Press the  button on the right-hand side of the display to turn the screen on (see section 3.1).
4. Press the INPUT button to switch to the "S-VIDEO" source.





## 3.6 YPbPr Connections

SWB5501/CDE5501 Models:

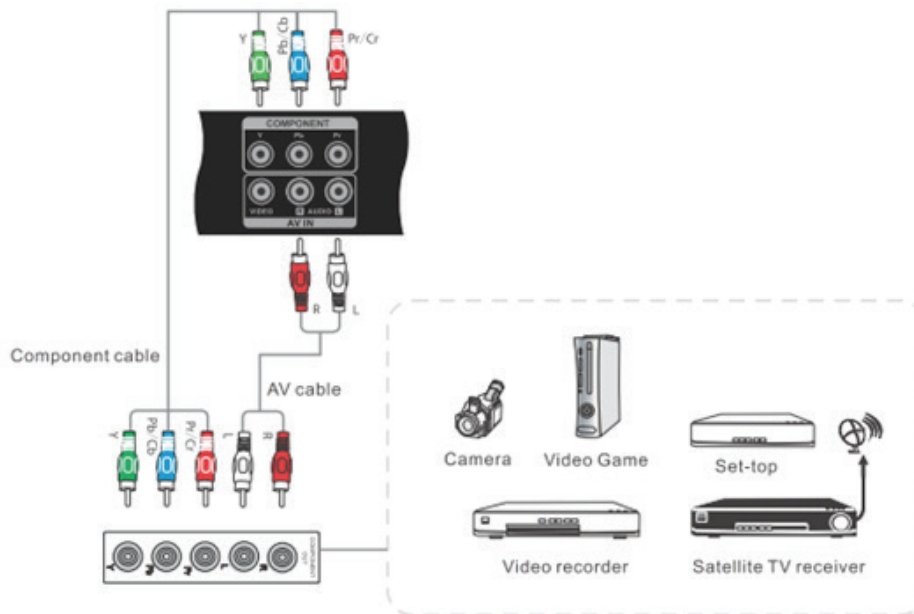


SWB6552/SWB7051/CDE6552/CDE7051 Models:

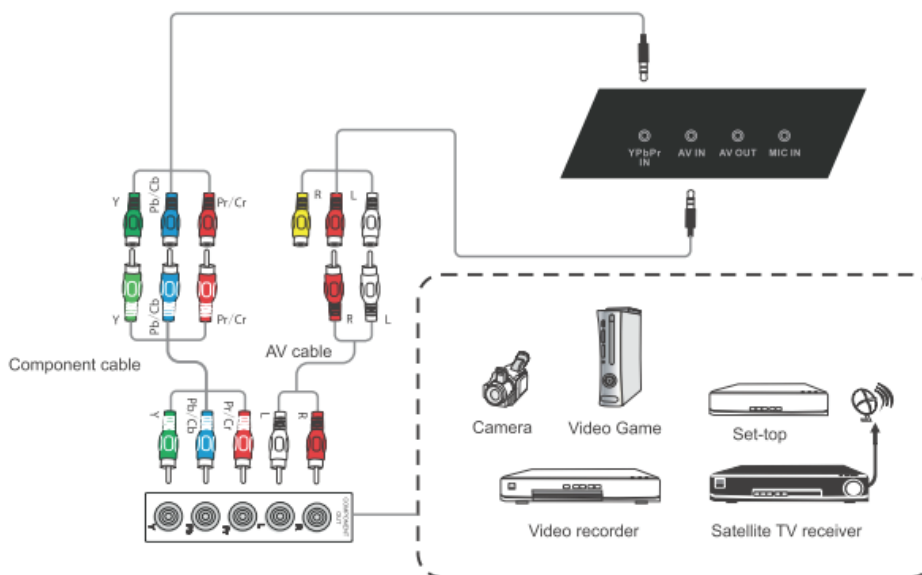


1. Connect the 3-color YPbPr cable from the COMPONENT ports on your display to the ports on the peripheral device.
2. Plug in the power cord, and turn on the rear-panel power supply switch (see section 3.1).
3. Press the  button on the right-hand side of the display to turn the screen on (see section 3.1).
4. Press the INPUT button to switch to the "YPbPr" source.

## 3.7 HDMI Connections


### SWB5501/CDE5501 Models:

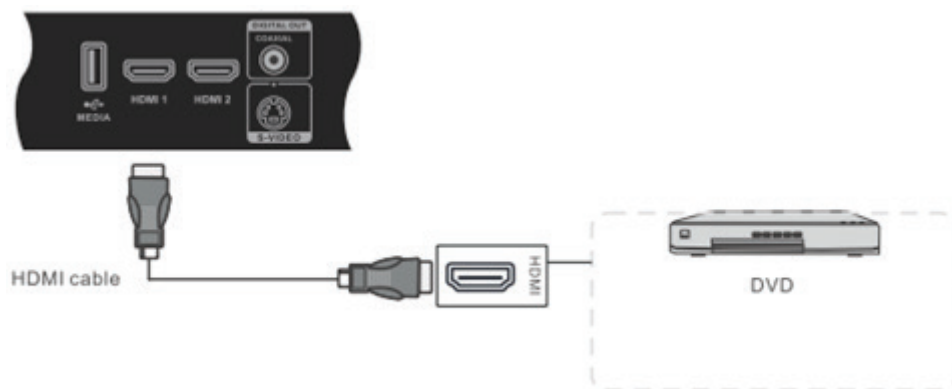


### SWB6552/SWB7051/CDE6552/CDE7051 Models:

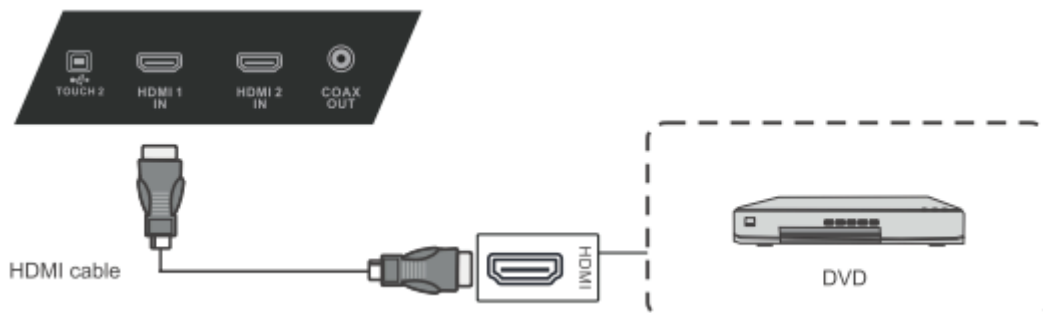


### SWB8451/CDE8451 Models:

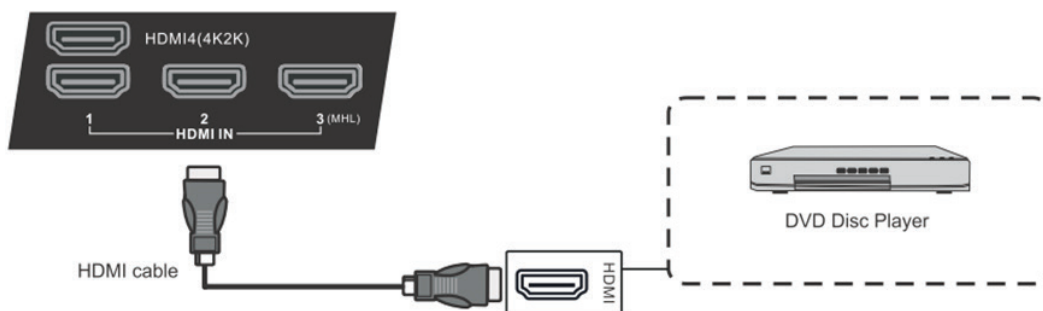


1. Connect the HDMI cable to the HDMI ports on your display and peripheral device.
2. Plug in the power cord, and turn on the rear-panel power supply switch (see section 3.1).
3. Press the  button on the right-hand side of the display to turn the screen on (see section 3.1).
4. Press the INPUT button to switch to the HDMI source.

## 3.8 Microphone Connections


(SWB6552/SWB7051/CDE6552/CDE7051 models only)

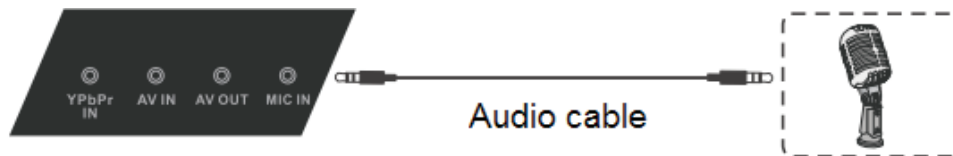


1. Connect the microphone cable to the MIC IN jack.
2. Plug in the power cord, and turn on the rear-panel power supply switch (see section 3.1).
3. Press the  button on the right-hand side of the display to turn the screen on (see section 3.1).
4. The microphone/speakerphone can be used with all channels.

## 3.9 Coaxial Connections


### SWB5501/CDE5501 Models:

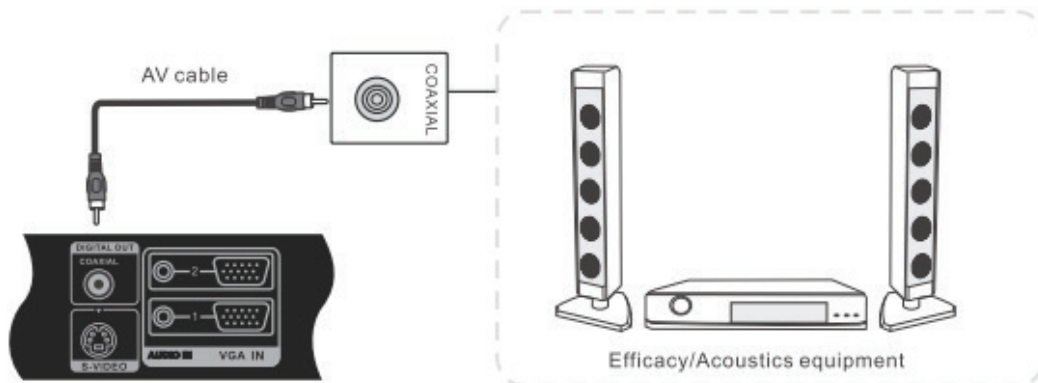


### SWB6552/SWB7051/CDE6552/CDE7051 Models:

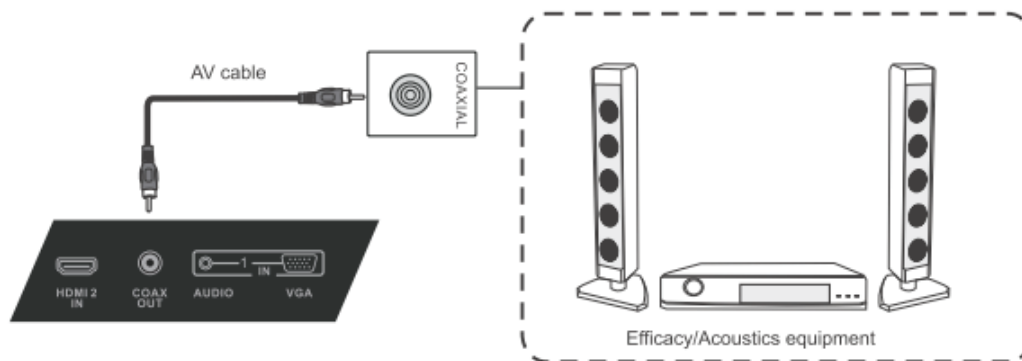


### SWB8451/CDE8451 Models:

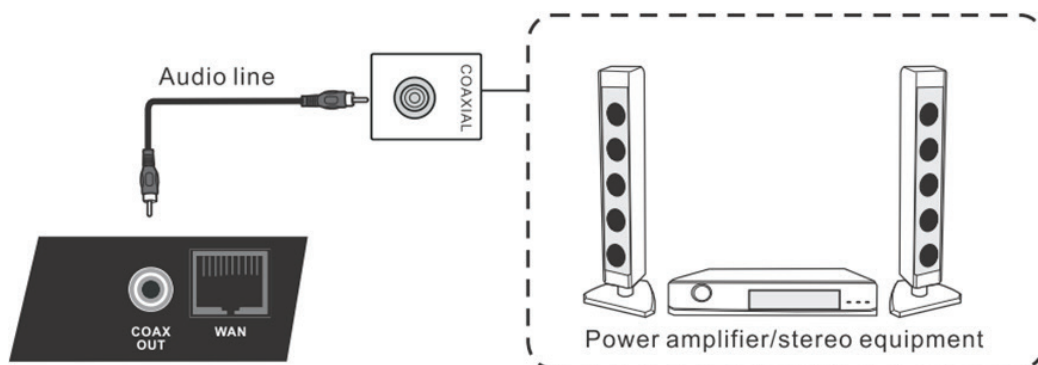


1. Connect a coaxial cable from DIGITAL OUT to your sound system's coaxial connector.
2. Plug in the power cord, and turn on the rear-panel power supply switch (see section 3.1).
3. Press the  button on the right-hand side of the display to turn the screen on (see section 3.1).

### 3.10 VGA Connections


SWB5501 Model:

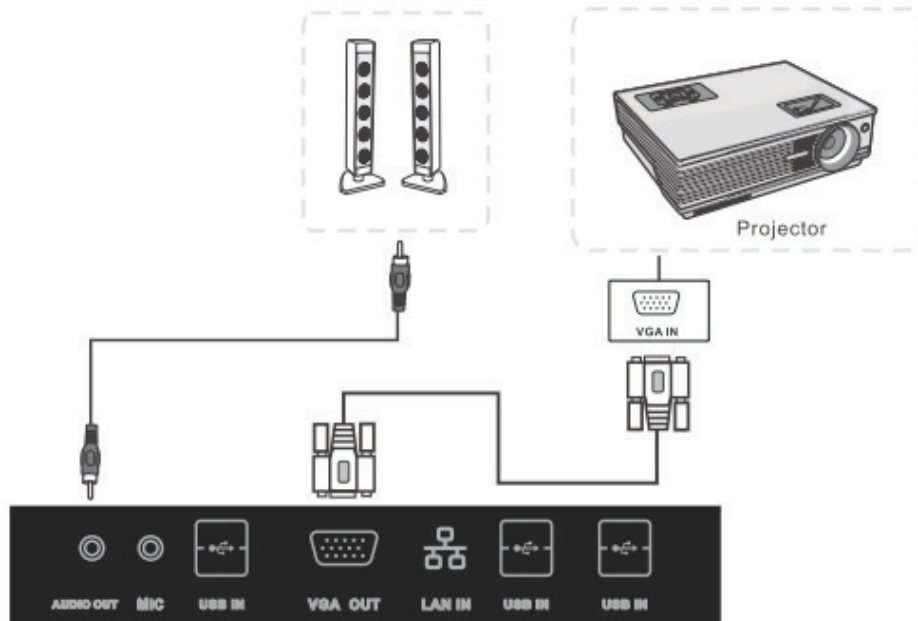


SWB6552/SWB7051 Models:

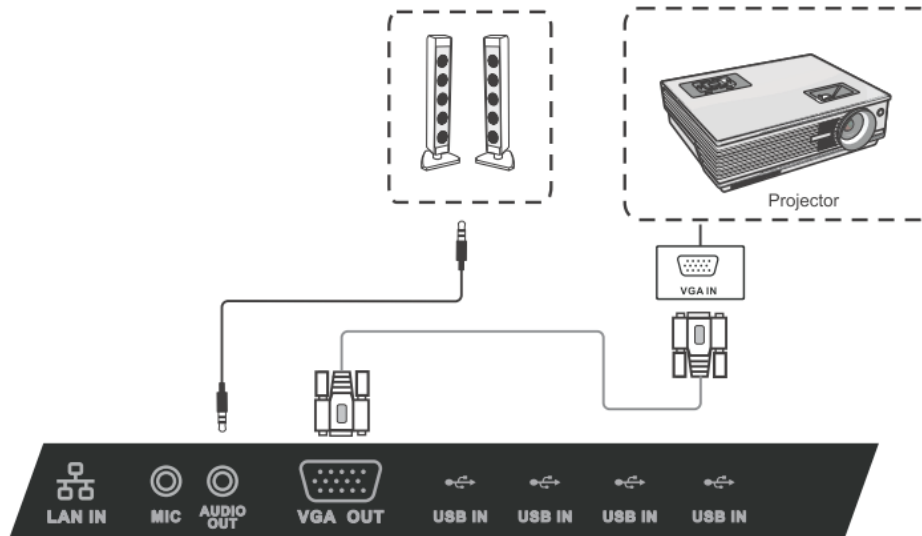

## SWB8451 Model:

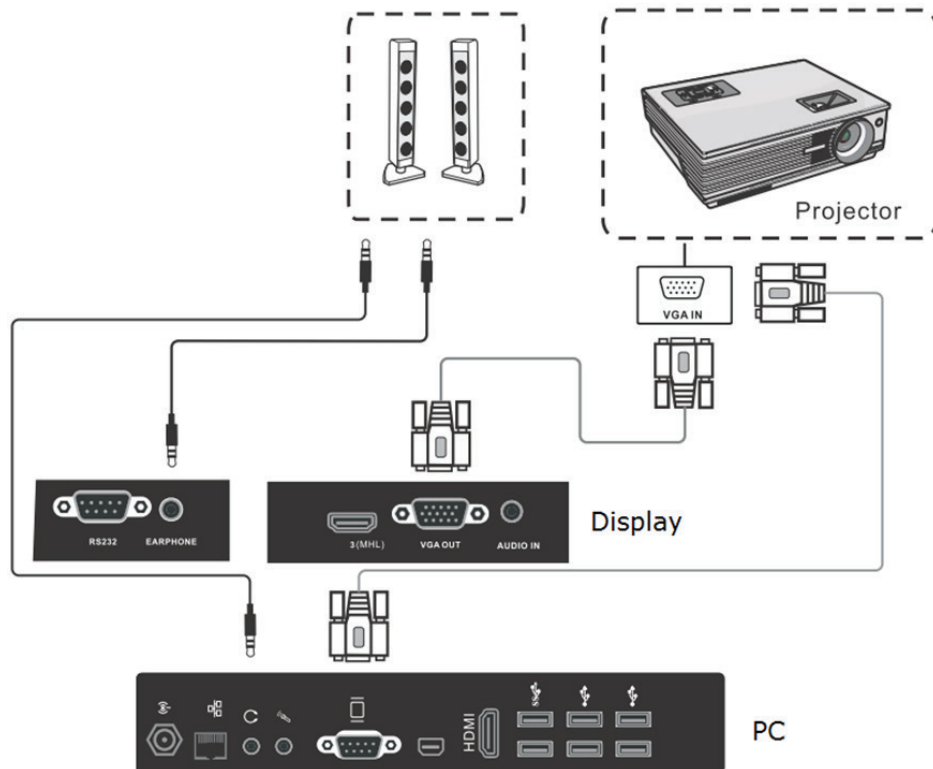

1. To output video and sound to an external device via VGA connection:
  - Connect a VGA cable (15-pin) from your display's VGA OUT port to the input port of a projector or other device.
  - Connect an audio cable from the AUDIO OUT port on your display to the input port of your speaker system.
2. Plug in the power cord, and turn on the rear-panel power supply switch (see section 3.1).
3. Press the  button on the right-hand side of the display to turn the screen on (see section 3.1).
4. Press the INPUT button to switch to the "PC" source.
5. Setup the VGA OUT or Multiscreen settings on your smart display.


**Note:** The VGA OUT function can output images from the smart display only.

## 3.11 AV OUT Connections


### Connecting a display:

To output video from your smart whiteboard to a second display, connect a 3-color AV cable from the AV OUT ports on your display to the AV IN ports of the secondary display (AV cable: Yellow is Video, Red is Audio-R, White is Audio-L).

#### SWB5501/CDE5501 Models:

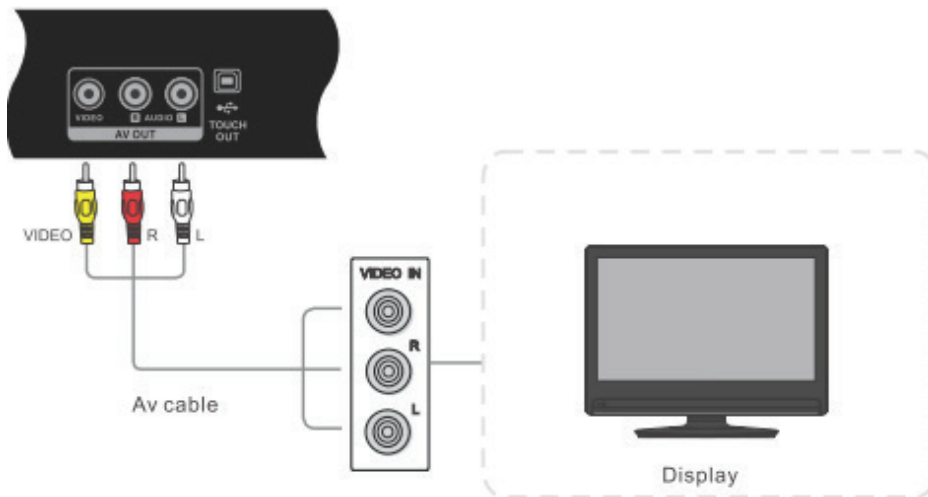


#### SWB6552/SWB7051/CDE6552/CDE7051 Models:

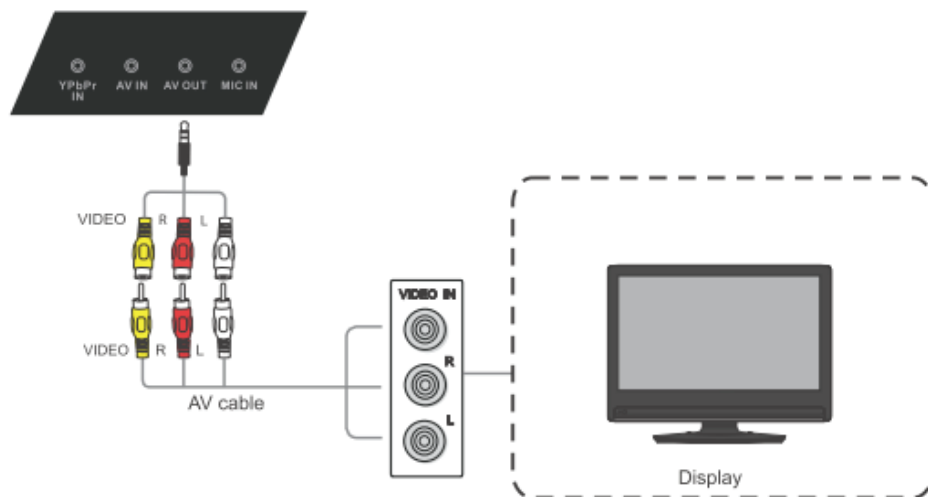

## 4. Basic Display Operations

Here are several basic display operations you should become familiar with when using your display:

### **Turning on the display:**

Plug the display's power cord into a power source, and wait 30 seconds before pressing the  button to turn on the display and PC together.

### **Turning off the display:**

From the Windows 8 START menu, press the POWER button on the remote control to see the message in the image below. Press the power button again to turn off both the display and PC.



### **Using the Windows button:**

With the display on, you can press the WINDOWS button on the remote control to jump back and forth between the desktop screen and the Windows 8 Start menu, or back and forth between the current and previous screens.

### **Entering Standby mode:**

To enter standby mode, touch the WINDOWS button on the lower left-hand corner of the desktop screen or press the WINDOWS button on the remote control. Select OFF. This will turn off the PC, but the display will still be on.

### **Exiting Standby mode:**


From Standby mode you can turn on the PC by pressing the INPUT button to switch back to the PC source. Both the display and the PC will now be on.



# 5. OSD Menu Operation

## 5.1 Input Source


SWB5501/SWB6552/SWB7051/CDE5501/CDE6552/CDE7051 Models:

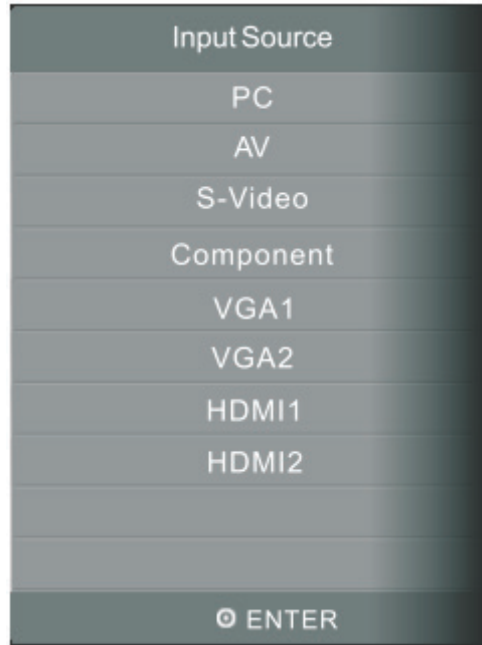

To select an input source:


1. Press INPUT to display the input source list.
2. Press DOWN / UP or INPUT to highlight the input source you want.
3. Press ENTER to select the input source.
4. Press EXIT to quit the on-screen menu.

SWB8451/CDE8451 Models:

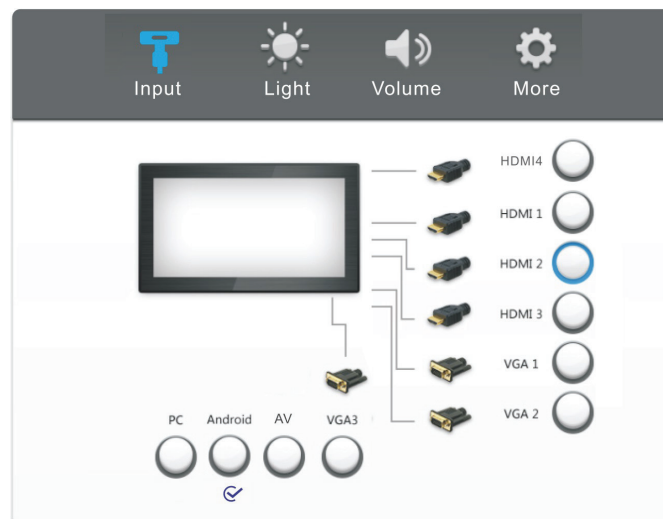


### To select an input source:

1. Press INPUT button on remote control to display the input setting menu, then press DOWN to enter the input source menu..
2. Press DOWN / UP / LEFT/ RIGHT to select the input source you want.
3. Press Enter button on remote control or click with touch pen to select the input source.
4. Press EXIT key on remote control or click blank area outside menu with touch pen to quit the on-screen menu.

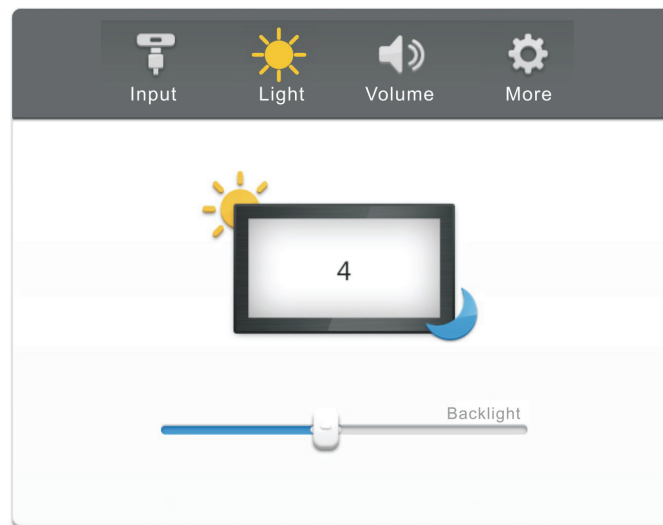


### To adjust the brightness:

1. Press INPUT button on remote control to display the input setting menu.
2. Press RIGHT button on remote control or click "Light" icon directly with touch pen to enter Brightness Setting menu.
3. Press LEFT/ RIGHT button on remote control or drag icon directly with touch pen to adjust the value.
4. Press EXIT key on remote control or click blank area outside menu with touch pen to quit the on-screen menu.

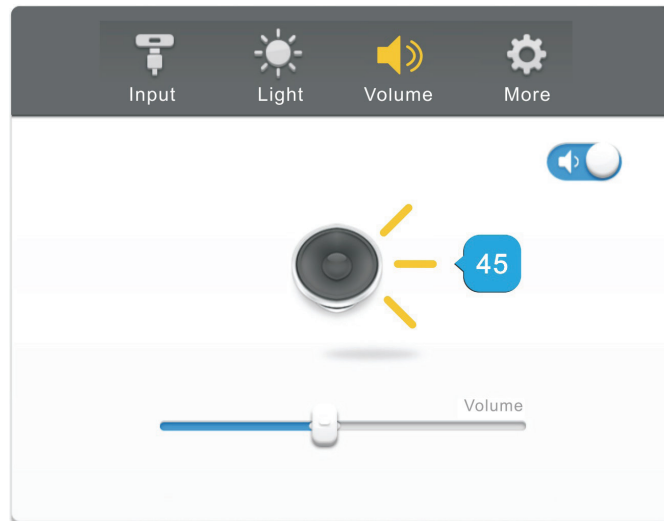

### To adjust the volume:

1. Press INPUT button on remote control to display the input setting menu.
2. Press RIGHT button on remote control or click "Volume" icon directly with touch pen to enter Brightness Setting menu.
3. Press LEFT/ RIGHT button on remote control or drag icon directly with touch pen to adjust the value.
4. Press < Mute > button on remote control or click mute icon directly with touching pen to enable or disable mute function.
5. Press EXIT key on remote control or click blank area outside menu with touch pen to quit the on-screen menu.

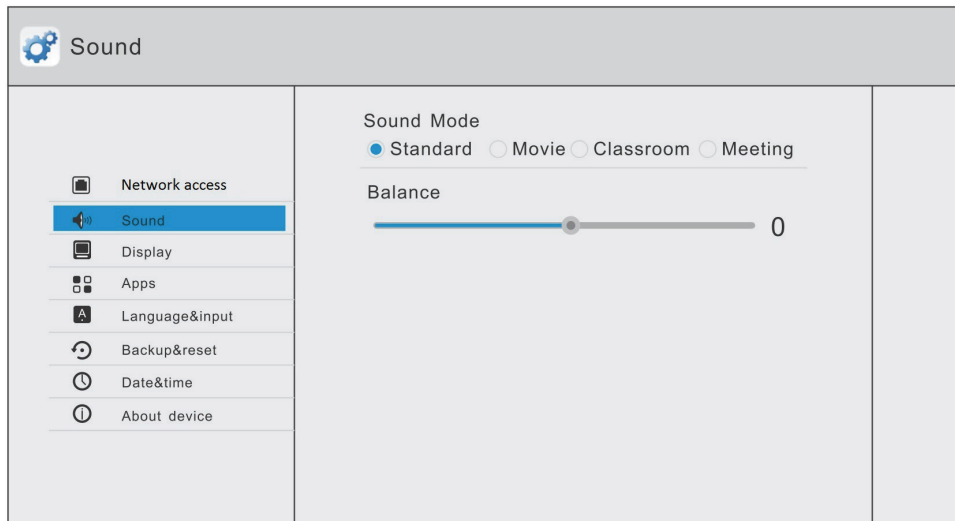

### To adjust more functions in Android mode:


Press INPUT button on remote control to display the input setting menu.

Press RIGHT button on remote control or click "More" icon directly with touch pen to enter More Setting menu.

- **Network access:** Check the current network connection status and the network parameters of the device.
- **Sound:** Select the Sound mode and adjust the balance.
- **Display:** Adjust system wallpaper and system font size.
- **Apps:** Display all applications' information in Android system.
- **Language & input:** Adjust language and input method of Android system.
- **Date & time:** Set the system time and format.
- **About device:** Display Android system software version information.

## 5.2 Screen Menu

SWB5501/SWB6552/SWB7051/CDE5501/CDE6552/CDE7051 Models:

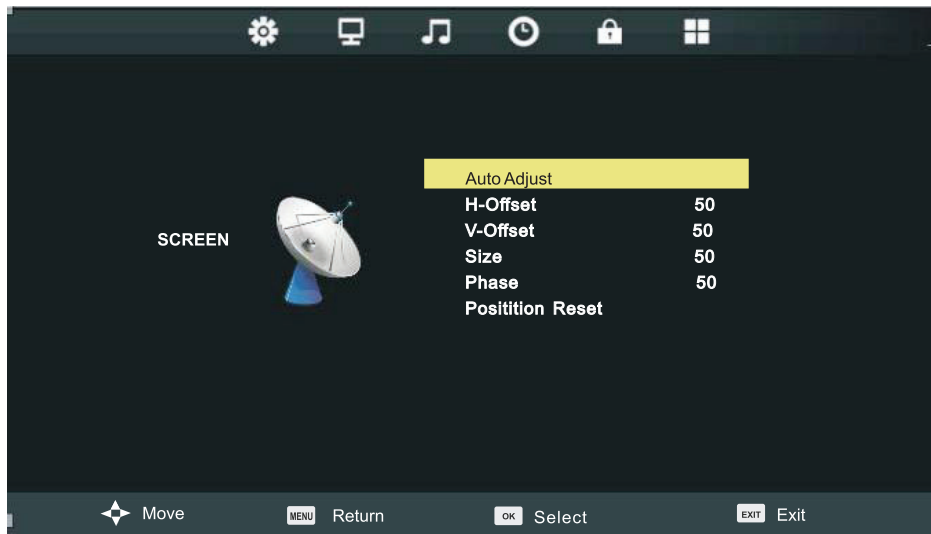

The Screen menu is available only in VGA or DVI modes. When using DVI signal input mode, only the Horizontal Position and Vertical Position can be adjusted. Press the ▼/▲ buttons to highlight one of the following options then press **ENTER** to select it.



**Auto Adjust:** Automatically adjust H-Offset, V-Offset, Size and Phase settings. For best results, open a “full-screen” picture before executing Auto Adjust.

**H-Offset:** Shift the screen slightly to the left or right.


**V-Offset:** Shift the screen slightly up or down.

**Size:** Adjust the picture size.

**Phase:** Adjust the VGA picture signal sampling phase. This may affect image definition. A wrong value may be the fault of the interference.

**Position Reset:** Reset the Screen menu to default settings.

## SWB8451/CDE8451 Models:

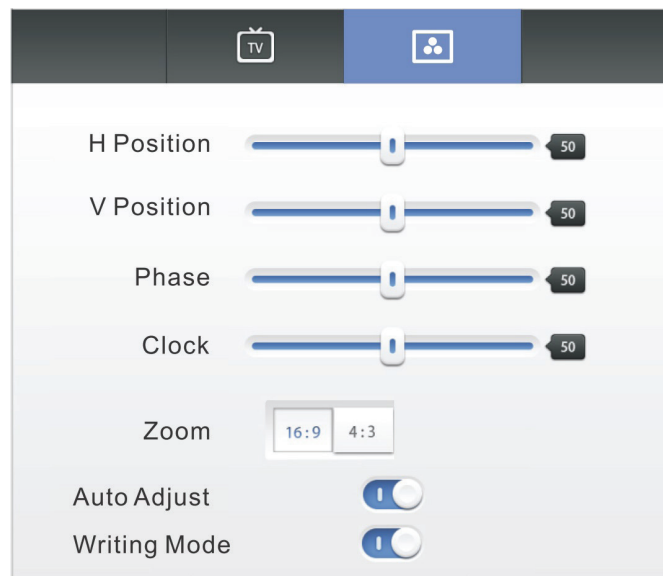

In VGA mode, press MENU button on remote control to display the setting menu. Press RIGHT button on remote control under setting menu or directly click “More” icon with touch pen or press Menu directly on remote control in VGA mode to enter advanced setting menu. Press DOWN / UP / LEFT / RIGHT button on remote control or click with touch pen directly to select and adjust each option. Press EXIT key on remote control, or click blank area outside menu with touch pen to exit menu.

**H-position/V-position/Phase/Clock:** Press LEFT / RIGHT button on remote control or drag icon directly with touch pen to adjust the value.


**Zoom:** Press LEFT / RIGHT button on remote control or click icon directly with touch pen to switch image display ratio.

**Auto Adjust:** Press LEFT / RIGHT button on remote control or click icon directly with touch pen to automatically adjust.

**Writing Mode:** Press LEFT / RIGHT button on remote control to on/off the writing mode.

## 5.3 Picture Menu

SWB5501/SWB6552/SWB7051/CDE5501/CDE6552/CDE7051 Models:

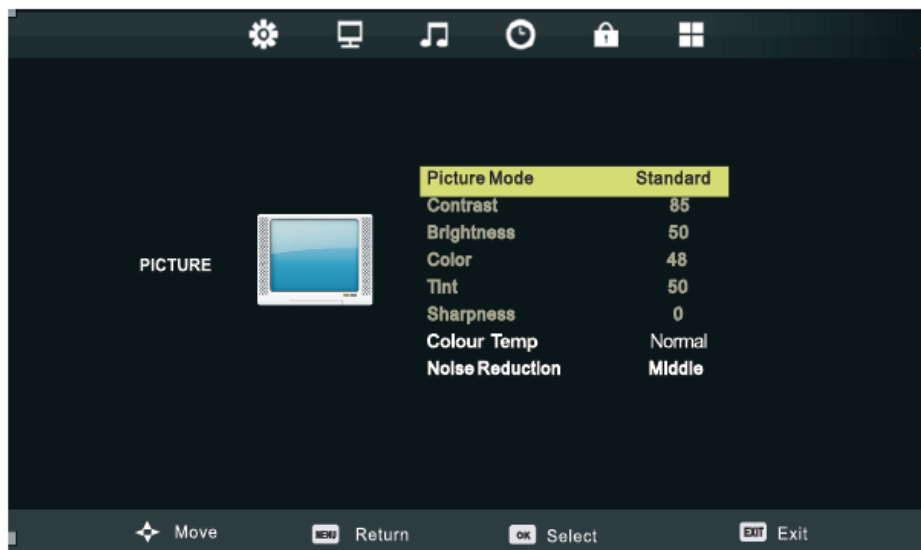

Inside the Picture menu, press the **▼/▲** buttons to highlight one of the following options then press **ENTER** or **▶** to enter the sub-menu. Press **EXIT** to leave the on-screen menu, or press **MENU** to go back to the previous menu.

**Picture Mode:** When Picture Mode is set to personal, the following settings can be manually adjusted. You can press the **P.MODE** shortcut button on the remote control to select Picture Mode directly.

**Contrast/Brightness/Color/Tint/Sharpness:** Highlight a menu item and press **▶**. Press **◀/▶** to adjust the value up or down along the scale bar that appears (see below image). Tint adjustment is available for NTSC-system AV or S-video sources.



**Color Temp:** Press the **◀/▶** buttons to adjust the color temperature to one of the following:


**Normal:** General setting.

**Cold:** High color temperature.

**Warm:** Low color temperature.

**Noise Reduction:** Off/Low/Middle/High/Default.

## SWB8451/CDE8451 Models:

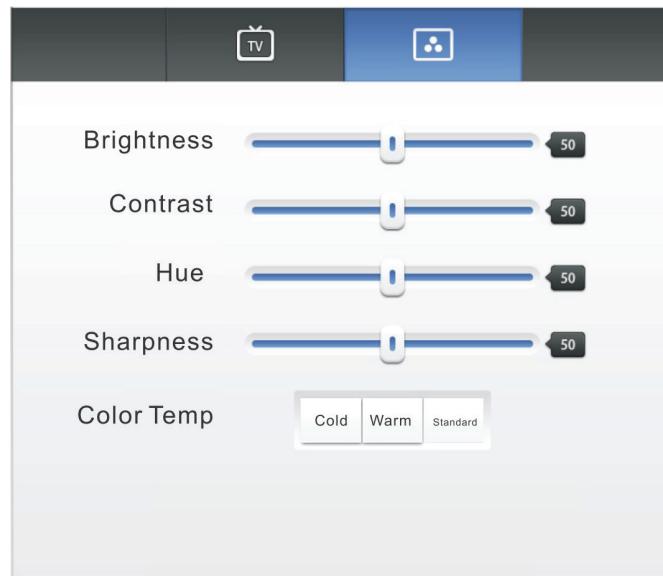

In AV, VGA and HDMI modes, press MENU button on remote control or via touch A method to display the setting menu. Press RIGHT button on remote control under setting menu or directly click “More” icon with touch pen or press Menu directly on remote control in VGA mode to enter advanced setting menu. Press DOWN / UP / LEFT / RIGHT button on remote control or click with touch pen directly to select and adjust each option. Press EXIT key on remote control, or click blank area outside menu with touch pen to exit menu.

**Brightness/Contrast/Hue/Sharpness:** Press LEFT / RIGHT button on remote control or drag icon directly with touch pen to adjust the value.

**Color Temp:** Press LEFT / RIGHT button on remote control or click icon directly with touch pen to adjust the color temperature of image (Cool color/warm color/automatic).

**Zoom:** Press LEFT / RIGHT button on remote control or click icon directly with touch pen to adjust.

**Writing Mode:** Press ENTER button on remote control or click icon directly with touch pen to enable / disable writing function.



## 5.4 Sound Menu (SWB5501/SWB6552/SWB7051/CDE5501/CDE6552/CDE7051 Models)



Inside the Sound menu, press the ▼/▲ buttons to highlight one of the following options then press **ENTER** or ► to enter the sub-menu. Press **EXIT** to leave the on-screen menu, or press **MENU** to go back to the previous menu.

**Sound Mode:** Standard/Music/Movie/Sports/Personal. The following items can only be adjusted in “Personal” mode:

**Bass:** Adjust the low frequency band response.

**Treble:** Adjust the low frequency band response.

**Balance:** Adjust the level of sound coming from the left or right speakers.

**Auto Volume:** Reduces the sound fluctuation between channels and programs automatically.

**Surround Sound:** Turns Surround Sound on or off.

**SPDIF MODE:** Select from Off/Auto/PCM SPDIF modes.

**AD Switch:** Turn AD switch on or off (Not available).


**Microphone Switch:** Turns the microphone on or off. (SWB6552/SWB7051/CDE6552/CDE7051 models only)

**Microphone Volume:** Adjusts the microphone volume. (SWB6552/SWB7051/CDE6552/CDE7051 models)

**Microphone Channel:** Different mic settings for different channels prevent interference. (SWB6552/SWB7051/CDE6552/CDE7051 models only)

**Chord Effect:** Adjusts touch sounds. (SWB6552/SWB7051/CDE6552/CDE7051 models only)

## 5.5 Time Menu (SWB5501/SWB6552/SWB7051/CDE5501/CDE6552/CDE7051 Models)

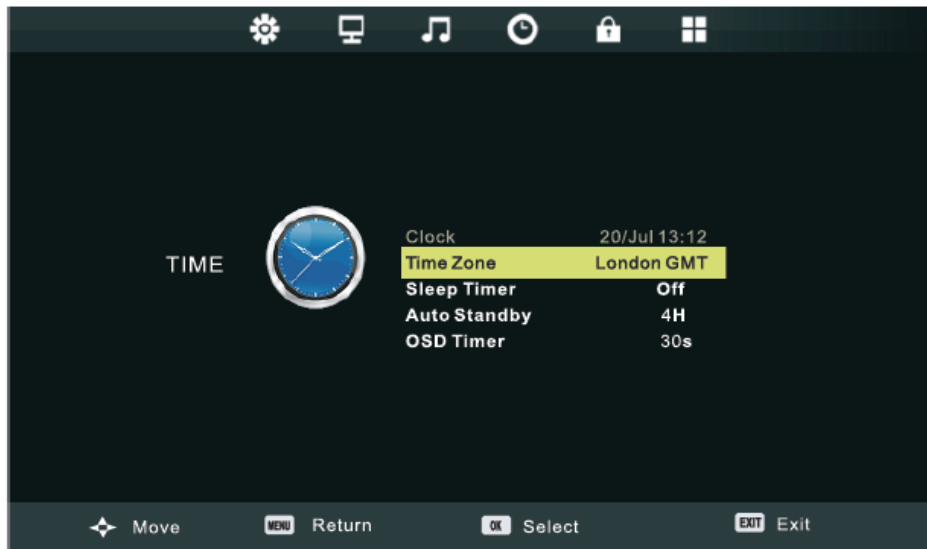

Press MENU to display the Main Menu then press the ◀/▶ buttons to highlight the Time Menu. Press **ENTER** or ▶ to enter the sub-menu. In the Time Menu you can adjust the following items:

**Clock:** Sets the time using the digital input signal.

**Time Zone:** Select the time zone for your region (Note: Clock and Time Zone functions are not available).

**Sleep Time:** Select the time (in minutes) that you want the display to shut off automatically. You can turn off this setting at any time.

**Auto Sleep:** Select the amount of time (in hours) that you want the display to remain on, after the last operation, before shutting off automatically. You can turn off this setting at any time.

**OSD Timer:** Select the amount of time (in seconds) that you want the on-screen display to remain on after the last operation.


## 5.6 Lock Menu (SWB5501/SWB6552/SWB7051/CDE5501/CDE6552/CDE7051 Models)



You can change the display's lock settings in the Lock Menu. To access the Lock Menu, first press MENU to display the main menu then press the ◀/▶ buttons to select Lock Menu. Press **ENTER** or ▶ to enter the Lock menu.

The default password for the Lock System is "0000". The default master password is "4711". Enable the lock system by selecting "ON". To create a new password select "Set Password".

## 5.7 Setup Menu (SWB5501/SWB6552/SWB7051/CDE5501/CDE6552/CDE7051 Models)

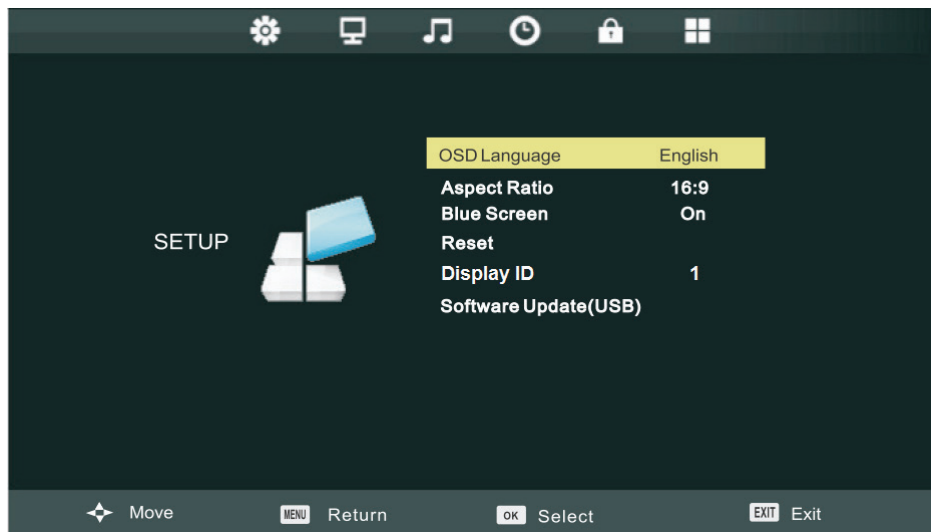

To access the Setup Menu, first press MENU to display the main menu then press the ◀/▶ buttons to select Setup Menu. Press **ENTER** or ▶ to enter the Setup menu.

**OSD language:** Set the OSD menu language.

**Aspect Ratio:** Set the display image aspect ratio according to the input source.

**Blue Screen:** Set the screen background color for when there is no signal input.

**Reset:** Revert back to the default factory settings.

**Display ID:** To set ID number to LCD display for RS232 function.

**Software Update (USB):** Update your display's OS software.









## 5.8 Annotation Menu (SWB8451/CDE8451 Models)




Main menu

Sub menu

In any input source, to place two fingers on the screen (about 20~50mm spacing) and stay more than two seconds to call up annotation menu. In this mode, user can only use touch pen to operate.

Item	Description
 Annotation menu	Pop up sub-menu.
 Return	Click to return to previous operation interface.
 Main	Click to return to main interface of Android system.
 Pen	Click to make annotation in the picture, click again to change color.
 ViewBoard Lite	Click to enter ViewBoard Lite software. Storage location: resource browse/blackboard writing.
	Click to open resources browse menu.
	Click to screenshot the current image. storage location: resource browse/blackboard writing.
	Click to close annotation menu.

## 5.9 Android System Interface (SWB8451/CDE8451 Models)

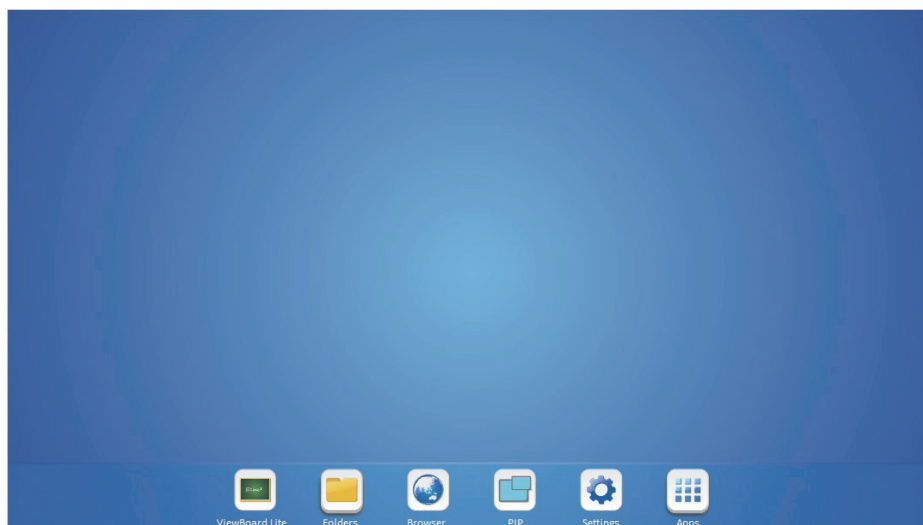

Switch to Android source to display main interface as show above. Press LEFT / RIGHT key on remote control to select icon below, and press Enter key to enter corresponding program, or click icon directly with touching pen to enter program. In any program, to press Home button on remote control or Home key on front panel of display to return to the main interface.

**ViewBoard Lite:** Enter to ViewBoard Lite software.

**Folders:** Enter android system resource browser.


**Browser:** Enter internet page.









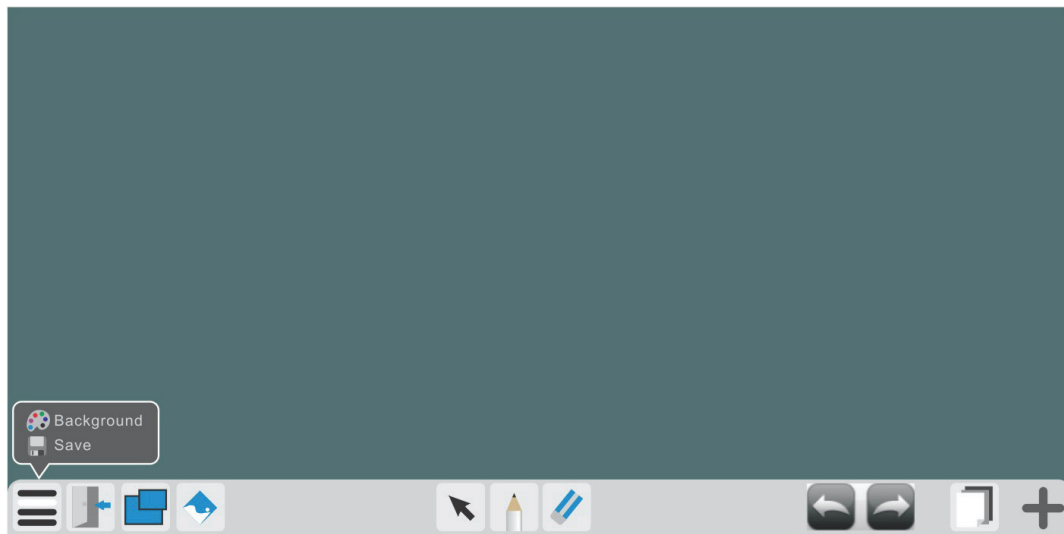


**PIP:** Enter picture-in-picture image.

**Settings:** Enter setting menu page.


**Apps:** Enter Android system application management page.

## ViewBoard Lite



Item	Description
 Menu	Click to pop up sub-menu.
 Exit	Click to exit ViewBoard Lite.
 Picture in picture	Click to pop up picture in picture interface.
 Image import	Click to import image.
 Select	Click to select symbols.
 Pen	Click to write or press and hold for three seconds to set color and thickness.
 Eraser	Click to erase symbols.
 Cancel	Click to cancel previous step operation.
 Restore	Click to restore cancelled operation.
 Page	Display page number.
 Add page	Click to add a new page.


## Folders

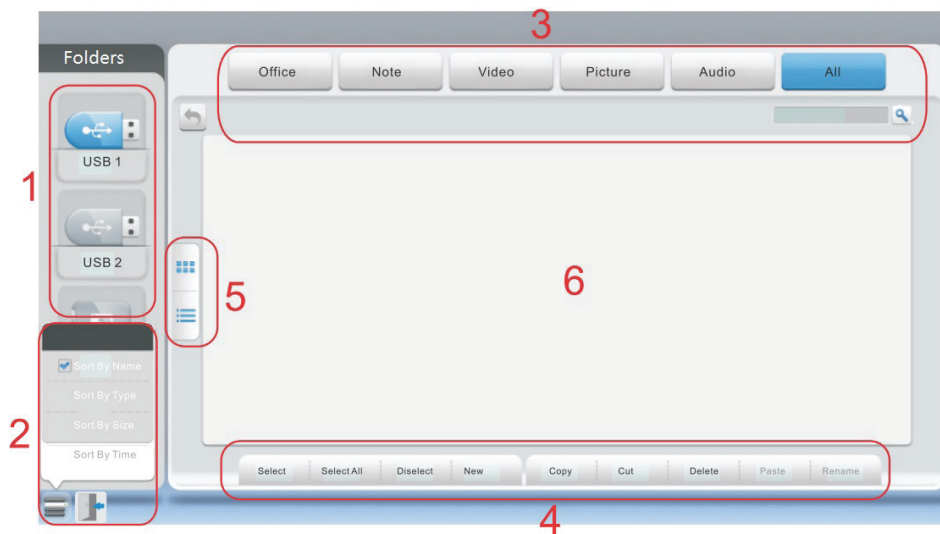

- 1. Storage device display:** Click with touching pen to enter corresponding storage devices area.
- 2. Menu/exit menu:** Click menu icon to pop up menu options. Click exit icon to exit.
- 3. File type menu:**
  - Office:** OFFICE type files
  - Note:** Image stored by ViewBoard Lite and images stored by annotation screenshot.
  - Video:** Audio and video type files
  - Picture:** Image type files
  - Audio:** Audio type files
  - All:** All types
- 4. File operation menu:** Perform basic operations towards file such as select/delete/create/copy/cut.
- 5. File arrangement menu:** Divided into two arrangement modes by icon and by list.
- 6. Main display area:** Display files of corresponding type.




## Browser

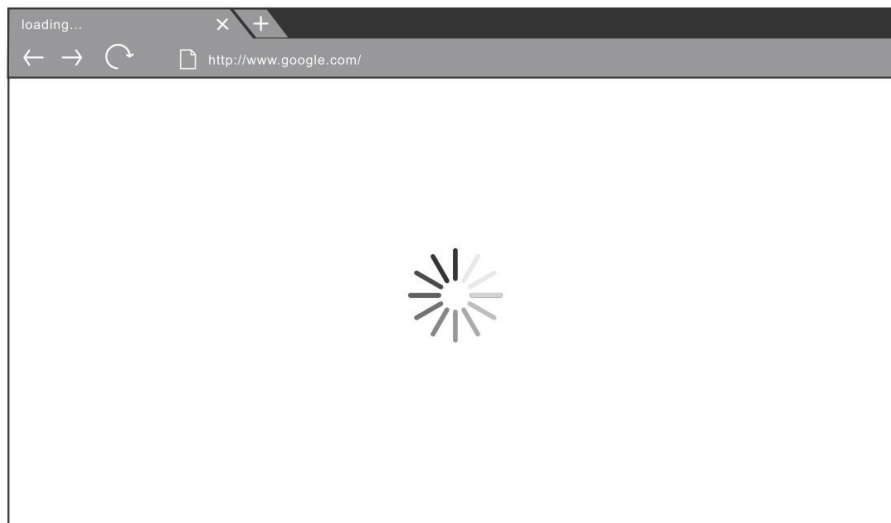

Enter web browser to surfing the internet.

## PIP

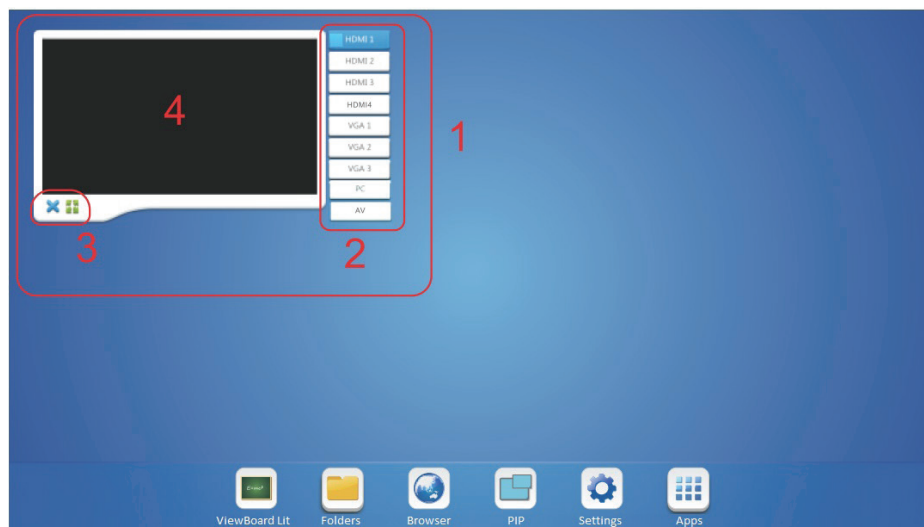

Click picture-in-picture display interface point "4" with touching pen directly, to pop up input selection list "2", to select the input you want to display. Picture-in-picture interface operation key is shown in above figure "3".



: Click picture-in-picture input for full screen.



: Click to exit picture-in-picture interface.

## Settings

Click to setting menu.

## Apps












- Settings
- Browser
- Folders
- ViewBoard Lite
- Kingsoft Office

## 5.10 Multimedia File Playback Interface (SWB8451/ CDE8451 Models)









### Image play



Item	Description
	Close the player
	Zoom in
	Zoom out
	Previous file
	Play/pause
	Next file
	Counterclockwise rotate the picture
	Clockwise rotate the picture
	Player setting








## Audio play



Item	Description
	Close the player
	Previous file
	Play/pause
	Next file
	Playlist
	Loop
	Random
	Single

## Video play



Item	Description
	Close the player
	Previous file
	Fast backward
	Play/pause
	Fast forward
	Next file
	Playlist

## 6. Trouble Shooting

Remote control is out of order	<ol style="list-style-type: none"> <li>1. Check whether something is obstructing the display's remote control receiver.</li> <li>2. Check whether the batteries in the remote control are installed correctly.</li> <li>3. Check whether the batteries need to be replaced.</li> </ol>
The unit turns of unexpectedly	<ol style="list-style-type: none"> <li>1. Check whether Sleep mode is enabled.</li> <li>2. Check if there is a power outage in your area.</li> <li>3. Turn on the display and see if the problem is with the signal and control system.</li> </ol>

### PC mode

No PC signal	<ol style="list-style-type: none"> <li>1. Check the display settings.</li> <li>2. Check the display resolution.</li> <li>3. Adjust the Hs &amp; Vs (synchronization) settings using the OSD menu.</li> </ol>
Background streaking	<ol style="list-style-type: none"> <li>1. Choose auto adjust.</li> <li>2. Adjust clock and phase.</li> </ol>
False color	<ol style="list-style-type: none"> <li>1. Check the VGA connection.</li> <li>2. Adjust chroma, brightness and contrast settings.</li> </ol>
Unsupported format	<ol style="list-style-type: none"> <li>1. Choose auto adjust.</li> <li>2. Adjust clock and phase settings.</li> </ol>

### Touch Function

Touch function does not work	<ol style="list-style-type: none"> <li>1. Check that drivers are installed correctly.</li> <li>2. Reinstall driver.</li> <li>3. Check setup and align it.</li> <li>4. Check whether the touch pen is working properly.</li> </ol>
------------------------------	-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

### Video not working properly

No picture / No sound	<ol style="list-style-type: none"> <li>1. Check POWER status.</li> <li>2. Check the signal cable.</li> <li>3. Check that the internal PC is installed correctly.</li> </ol>
Picture trembling	<ol style="list-style-type: none"> <li>1. Check the signal cable.</li> <li>2. Check if other electronics are interrupting the signal.</li> </ol>

Poor picture	<ol style="list-style-type: none"> <li>1. Adjust chroma, brightness and contrast settings in the menu.</li> <li>2. Check the signal cable.</li> </ol>
--------------	-------------------------------------------------------------------------------------------------------------------------------------------------------


### **Audio not working properly**

No sound	<ol style="list-style-type: none"> <li>1. Press the Mute/ Unmute button.</li> <li>2. Adjust the volume.</li> <li>3. Check the audio cable.</li> </ol>
One speaker only	<ol style="list-style-type: none"> <li>1. Adjust the sound balance in the menu.</li> <li>2. Check the sound control panel settings of the computer.</li> <li>3. Check the audio cable.</li> </ol>
No sound from VGA-OUT	<ol style="list-style-type: none"> <li>1. Check that the audio cable is properly connected.</li> </ol>

## 7. Care and Maintenance

Please follow these cleaning guidelines to make sure your smart whiteboard display looks like new for years to come:

- Don't clean the machine if it has been turned on for a long period of time.
- Unplug the unit from the wall outlet before cleaning or polishing it.

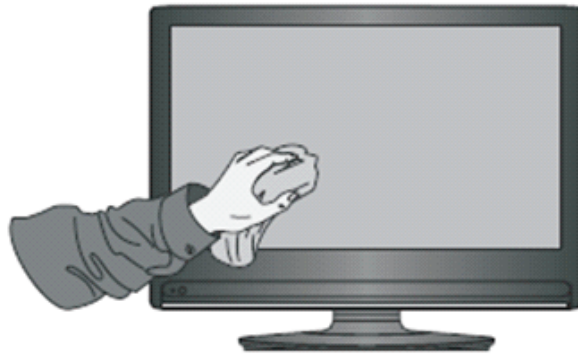

- Don't use liquid cleaners or aerosol cleaners on the screen.
- Only use a slightly dampened cloth when cleaning the exterior of the unit.
- Don't use system continuously for long periods of time.
- Remember to unplug the display when it is not in use.
- Use a power surge protector to prevent system failures and power supply surges.
- Make sure the display remains dry at all times. Be careful when handling liquids near or on the unit.

**Note:** If condensation appears between the glass and the panel, keep the display turned on until the moisture disappears.



# 8. Display Modes

## 8.1 YPbPr Mode

480i	@60Hz
480p	@60Hz
576i	@50Hz
576p	@50Hz
720p	@50Hz/60Hz
1080i	@50Hz/60Hz
1080p	@50Hz/60Hz

## 8.2 VGA Mode

640x480	@60Hz/72Hz/75Hz
720x400	@70Hz
800x600	@56Hz/60Hz/72Hz/75Hz
832x624	@75Hz
1024x768	@60Hz/70Hz/75Hz
1152x870	@75Hz
1280x768	@60Hz/75Hz
1280x960	@60Hz
1280x1024	@60Hz/75Hz
1360x768	@60Hz
1440x900	@60Hz/75Hz
1920x1080	@60Hz

### 8.3 HDMI Mode

640x480	@60Hz/70Hz
720x400	@70Hz
800x600	@60Hz/70Hz
1024x768	@60Hz/70Hz/75Hz
1280x800	@60Hz
1280x1024	@60Hz
1360x768	@60Hz
1440x900	@60Hz
1680x1050	@60Hz
1920x1080	@60Hz
480i	@60Hz
480p	@59Hz/60Hz
576i	@50Hz
720p	@50Hz/60Hz
576p	@50Hz
1080i	@50Hz/60Hz
1080p	@50Hz/60Hz

## 9. Specifications

<b>Model</b>		SWB5501 CDE5501	SWB6552 CDE6552	SWB7051 CDE7051	SWB8451 CDE8451
<b>LCD</b>	<b>Screen Size</b>	54.6"	65.5"	69.5"	84"
<b>Input Signal</b>		2 x HDMI 2 x VGA 2 x PC audio 1 x S-video 1 x YPbPr 1x CVBS	2 x HDMI 2 x VGA 2 x PC audio 1 x Mic in 1 x YPbPr 1x CVBS		
<b>Speaker Output</b>		15W x 2			
<b>RS232 Output</b>		RS232 communication			
<b>Power</b>	<b>Voltage</b>	100V-240V AC 50/60HZ			
<b>Operation Conditions</b>	<b>Temperature Humidity Altitude</b>	32°F to 104°F (0°C to 40°C) 20% ~ 80% non-condensing ≤2000M			
<b>Storage Conditions</b>	<b>Temperature Humidity Altitude</b>	-4°F to 140°F (-20°C to 60°C) 10% ~ 90% non-condensing ≤2000M			
<b>Dimensions</b>	<b>Physical (mm)</b>	1369 x 828 x 104	1544 x 937 x 95	1649 x 999 x 97	1979 x 1186 x 86
<b>Weight</b>	<b>Physical (kg)</b>	47	66	75	116
<b>Power Consumption</b>	<b>On Off</b>	158W <0.5W	245W <0.5W	242W <0.5W	560W <0.5W

**Note:** Product Specifications are subject to change without notice.

# 10. RS-232 Protocol

## 10.1 Introduction

This document describes the hardware interface spec and software protocols of RS232 interface communication between ViewSonic Commercial TV / Digital Signage and PC or other control unit with RS232 protocol.

The protocol contains three sections command:

- Set-Function
- Get-Function
- Remote control pass-through mode

※ In the document below, “PC” represents all the control units that can send or receive the RS232 protocol command.

## 10.2 Description

### 10.2.1 Hardware specification

Viewsonic TV communication port on the rear side:

(1) Connector type: DSUB 9-Pin Male

(2) Pin Assignment

Male DSUB 9-Pin  
(outside view)



Pin #	Signal	Remark
1	NC	
2	RXD	Input to Commercial TV or DS
3	TXD	Output from Commercial TV or DS
4	NC	
5	GND	
6	NC	
7	NC	
8	NC	
9	NC	
frame	GND	

\* Use of crossover (null modem) cable required for use with PC

[Special case]  
3.5mm barrel connector

Pin #	Signal	Remark
Tip	TXD	Output from Commercial TV or DS
Ring	RXD	Input to Commercial TV or DS
Sleeve	GND	

## 10.2.2 Communication Setting

- Baud Rate Select: 9600bps (fixed)
- Data bits: 8 bits (fixed)
- Parity: None (fixed)
- Stop Bits: 1 (fixed)

## 10.2.3 Command Message Reference

PC sends to Monitor command packet followed by "CR". Every time PC sends control command to the Monitor, the Monitor shall respond as follows:

1. If the message is received correctly it will send "+" (02Bh) followed by "CR" (00Dh)
2. If the message is received incorrectly it will send "-" (02Dh) followed by "CR" (00Dh)

## 10.3 Protocol

### 10.3.1 Set-Function Listing

The PC can control the TV/DS for specific actions. The Set-Function command allows you to control the TV/DS behavior in a remote site through the RS232 port. The Set-Function packet format consists of 9 bytes.

#### Set-Function description:

<b>Length:</b>	Total Byte of Message excluding "CR".
<b>TV/DS ID</b>	Identification for each of TV/DS (01~98; default is 01) If we want to set all TV/DS settings, use the TV/DS ID "99", and it will not have <b>Reply</b> command on this function. The TV/DS ID can be set via the OSD menu for each TV/DS set.
<b>Command Type</b>	Identify command type, "s" (0x73h) : Set Command "+" (0x2Bh) : Valid command Reply "- " (0x2Dh) : Invalid command Reply
<b>Command:</b>	Function command code: One byte ASCII code.
<b>Value[1~3]:</b>	Three bytes ASCII that defines the value.
<b>CR</b>	0x0D

### Set-Function format

Send: (Command Type="s")

Name	Length	ID	Command Type	Command	Value1	Value2	Value3	CR
Byte Count	1 Byte	2 Byte	1 Byte	1 Byte	1 Byte	1 Byte	1 Byte	1 Byte
Bytes order	1	2~3	4	5	6	7	8	9

#### NOTE:

For VT2405LED-1 and VT3205LED, the set "Power on" command is the exception.

Reply: (Command Type="+" or "-")

Name	Length	ID	Command Type	CR
Byte Count	1 Byte	2 Byte	1 Byte	1 Byte
Bytes order	1	2~3	4	5

#### NOTE:

1. The reply for "Power on" command is the exception for VT2405LED-1 and VT3205LED. It's 0x322B0D ( 2+<CR>).
2. When PC applies command to all displays (ID=99), only the #1 set needs to reply by the name of ID=1.

**Example1: Set Brightness as 76 for TV-02 and this command is valid**

Send (Hex Format)

Name	Length	ID	Command Type	Command	Value1	Value2	Value3	CR
Hex	<u>0x38</u>	<u>0x30</u> <u>0x32</u>	<u>0x73</u>	<u>0x24</u>	<u>0x30</u>	<u>0x37</u>	<u>0x36</u>	<u>0x0D</u>

Reply (Hex Format)

Name	Length	ID	Command Type	CR
Hex	<u>0x34</u>	<u>0x30</u> <u>0x32</u>	<u>0x2B</u>	<u>0x0D</u>

**Example2: Set Brightness as 176 for TV-02 and this command is NOT valid**

Send (Hex Format)

Name	Length	ID	Command Type	Command	Value1	Value2	Value3	CR
Hex	<u>0x38</u>	<u>0x30</u> <u>0x32</u>	<u>0x73</u>	<u>0x24</u>	<u>0x31</u>	<u>0x37</u>	<u>0x36</u>	<u>0x0D</u>

## Reply (Hex Format)

Name	Length	ID	Command Type	CR
Hex	<u>0x34</u>	<u>0x30</u> <u>0x32</u>	<u>0x2D</u>	<u>0x0D</u>

## Set-function table

Set Function	Length	ID	Command Type (ASCII)	Command		Value Range (Three ASCII bytes)	Comments
				Code (ASCII)	Code (Hex)		
Power on/off(standby)	8		s	!	21	000: STBY 001: ON	Exclude VT2405-1, and VT3205
*Power on	6	n/a	s	!	21	001: ON	For VT2405-1, and VT3205 only
Input Select	8		s	"	22	000 : TV 001 : AV 002 : S-Video 003 : YPbPr 004 : HDMI 014: HDMI2 024: HDMI3 005 : DVI 006 : VGA1 (PC) 016: VGA2 007: OPS	1. No need for USB 2. For the case of two more same sources, the 2 <sup>nd</sup> digital is used to indicate the extension. 3. Exclude VT2405-1, and VT3205
Contrast	8		s	#	23	000 ~ 100	
Brightness	8		s	\$	24	000 ~ 100	
Sharpness	8		s	%	25	000 ~ 100	
Color	8		s	&	26	000 ~ 100	
Tint	8		s	'	27	000 ~ 100	
Color mode	8		s	)	29	000: Normal 001: Warm 002: Cold 003: Personal	
Sound	8		s	-	2D	000: SRS Off 001: SRS On	(for TV)
Bass	8		s	.	2E	000 ~ 100	(for TV)
Treble	8		s	/	2F	000 ~ 100	(for TV)
Balance	8		s	0	30	000 ~ 100	(for TV) Sets Balance position
Picture Size	8		s	1	31	000 : FULL 001 : NORMAL 002 : CUSTOM 003 : DYNAMIC 004 : REAL	(for DS)
OSD language	8		s	2	32	000: English 001: French 002: Spanish	Extend the value for more supported languages
OSD timeout	8		s	3	33	005 ~120 Sec	Set OSD timeout
Power lock	8		s	4	34	000 : Unlock 001 : Lock	

Volume	8		s	5	35	000 ~ 100 900:Volume down(-1) 901:Volume up(+1)	
Mute	8		s	6	36	000: OFF 001: ON (mute)	
Off Timer	8		s	7	37	000: OFF 001~024 (hour)	
PIP-Mode	8		s	9	39	000 : OFF 001: PIP 002: PBP	(for DS)
PIP-Sound select	8		s	:	3A	000: Main 001: PIP	(for DS)
PIP-Position	8		s	;	3B	000: Up 001: Down 002: Left 003: Right	(for DS)
PIP-Input	8		s	<	3C	000 : TV 001 : AV 002 : S-Video 003 : YPbPr 004 : HDMI 014: HDMI2 024: HDMI3 005 : DVI 006 : PC/VGA 007: OPS	(for DS) For the case of two more same sources, the 2 <sup>nd</sup> digital is used to indicate the extension.
Button lock	8		s	8	38	000: Unlock 001: Lock	
TV channel (DTV)	8		s	<	3C	For -0: 001~999 A00~F99 (1000~1599) For -k: 1 <sup>st</sup> and 2 <sup>nd</sup> char are same as -0 3th char is CHAR [ ASC(3th digi)+ k x 10 ]	(for TV) 1. Channel OSD number but not frequency number 2. For VT3255, VT4236, and CDE3201 only
TV channel (ATV)	8		s	=	3D	001~999	(for TV)
Menu lock	8		s	>	3E	000: Unlock 001: Lock	
Number	8		s	@	40	000~009	(for TV)
Key Pad	8		s	A	41	000: UP 001: DOWN 002: LEFT 003: RIGHT 004: ENTER 005: INPUT 006: MENU/EXIT	



Remote Control	8		s	B	42	000: Disable 001: Enable 002: Pass through	<b>Disable:</b> RCU has no effect on HDTV. <b>Enabled:</b> RCU controls the HDTV. This is the power up default on the HDTV. <b>Pass through:</b> RCU has no effect on HDTV and all RCU command codes are transmitted to FC via the RS232 port. See page 26 for more details
Setup wizard	8		s	C	43	000: Disable 001: Enable	(for TV) Disable: to skip the initial setup wizard
Tiling-Mode	8		s	P	50	000: OFF 001: ON	(for DS)
Tiling-Compensation	8		s	Q	51	000: OFF 001: ON	(for DS) Bezel width compensation
Tiling-H by V Monitors	8		s	R	52	01x~09x: H 0x1~0x9: V	(for DS) 1. 2 <sup>nd</sup> digital for H monitors 2. 3 <sup>rd</sup> digital for V monitors
Tiling-Position	8		s	S	53	001~025	(for DS) Copy the screen of Position# to identified display
Restore default	8		s	~	7E	000	Rests HDTV to factory setting

## NOTE:

### 1. Behavior at lock modes

Lock Mode	Behavior
Button Lock	<ol style="list-style-type: none"> <li>1. Lock all buttons on the front panel and RCU, except for "Power".</li> <li>2. All the SET functions should be workable via RS32, even the ones with according hot key in RCU like Mute,...etc.</li> </ol>
MENU Lock	<ol style="list-style-type: none"> <li>1. Lock "MENU" key on the front panel and RCU.</li> <li>2. The Factory and Hospitality modes should not be blocked for the model using MENU-combined key to enter these two modes. Alternative approach will be indicated separately if any limitation by model.</li> </ol>

POWER Lock	<ol style="list-style-type: none"> <li>1. Lock the front and RCU "POWER" keys.</li> <li>2. The SET_POWER on/off should be workable via RS232, but does not mean the POWER lock will be released under this case.</li> <li>3. Can not be unlocked by resetting in OSD settings.</li> <li>4. Will auto AC power-on in power-lock</li> <li>5. Under power-lock, the set will not enter power saving when no PC signal and neither not turn off when no other video signals after 15min.</li> </ol>
Remote control disable	Lock the RCU keys, but keep the front panel buttons workable.

## 2. Example for value setting of SET\_TV channel DTV

012-0: 0x 30 31 32

012-1: 0x 30 31 42

1012-2: 0x 41 31 52

1512-3: 0x 46 31 62

## 3. Tiling definition of H Monitors/ V Monitors/ and Position

		H MONITORS					
V MONITORS		1	2	3	4	5	Position
		6	7	8	9	10	
		11	12	13	14	15	
		16	17	18	19	20	
		21	22	23	24	25	

### 10.3.2 Get-Function Listing

The PC can interrogate the TV/DS for specific information. The Get-Function packet format consists of 9 bytes which is similar to the Set-Function packet structure. Note that the "Value" byte is always = 000

#### Get-Function description:

- Length:** Total Byte of Message excluding "CR".
- TV/DS ID** Identification for each of TV/DS (01~98; default is 01).
- Command Type** Identify command type,  
 "g" (0x67h) : Get Command  
 "r" (0x72h) : Valid command Reply  
 "-" (0x2Dh) : Invalid command Reply
- Command:** Function command code: One byte ASCII code.
- Value[1~3]:** Three bytes ASCII that defines the value.
- CR** 0x0D

#### Get-Function format

Send: (Command Type="g")

Name	Length	ID	Command Type	Command	Value1	Value2	Value3	CR
Byte Count	1 Byte	2 Byte	1 Byte	1 Byte	1 Byte	1 Byte	1 Byte	1 Byte
Bytes order	1	2~3	4	5	6	7	8	9

#### NOTE:

"Power STBY status" is the exception for VT2405LED-1 and VT3205LED.

Reply: (Command Type="r" or "-")

*If the Command is valid, Command Type = "r"*

Name	Length	ID	Command Type	Command	Value1	Value2	Value3	CR
Byte Count	1 Byte	2 Byte	1 Byte	1 Byte	1 Byte	1 Byte	1 Byte	1 Byte
Bytes order	1	2~3	4	5	6	7	8	9

#### NOTE:

The reply for "Power STBY status" command is the exception for VT2405LED-1 and V3205LED. It's 0x36 72 6C 30 30 30 0D ( 6rI000<CR>).

**If the Command is Not valid, Command Type="-"**

Name	Length	ID	Command Type	CR
Byte Count	1 Byte	2 Byte	1 Byte	1 Byte
Bytes order	1	2~3	4	5

**Example1: Get Brightness from TV-05 and this command is valid. The Brightness value is 67.**

**Send (Hex Format)**

Name	Length	ID	Command Type	Command	Value1	Value2	Value3	CR
Hex	<u>0x38</u>	<u>0x30</u> <u>0x35</u>	<u>0x67</u>	<u>0x62</u>	<u>0x30</u>	<u>0x30</u>	<u>0x30</u>	<u>0x0D</u>

**Reply (Hex Format)**

Name	Length	ID	Command Type	Command	Value1	Value2	Value3	CR
Hex	<u>0x38</u>	<u>0x30</u> <u>0x35</u>	<u>0x72</u>	<u>0x62</u>	<u>0x30</u>	<u>0x36</u>	<u>0x37</u>	<u>0x0D</u>

**Example2: Get Brightness from TV-05, but the Brightness command ID is error and it is NOT in the command table.**

**Send (Hex Format)**

Name	Length	ID	Command Type	Command	Value1	Value2	Value3	CR
Hex	<u>0x38</u>	<u>0x30</u> <u>0x35</u>	<u>0x67</u>	<u>0xD3</u>	<u>0x30</u>	<u>0x30</u>	<u>0x30</u>	<u>0x0D</u>

**Reply (Hex Format)**

Name	Length	ID	Command Type	CR
Hex	<u>0x34</u>	<u>0x30</u> <u>0x35</u>	<u>0x2D</u>	<u>0x0D</u>

### Get-Function table

Get Function	Length	ID	Command Type (ASCII)	Command		Response Range (Three ASCII bytes)	Comments
				Code (ASCII)	Code (Hex)		
Get-Contrast	8		g	a	61	000 ~ 100	
Get-Brightness	8		g	b	62	000 ~ 100	

Get-Sharpness	8		g	c	63	000 ~ 100	
Get-Color	8		g	d	64	000 ~ 100	
Get-Tint	8		g	e	65	000 ~ 100	
Get-Volume	8		g	f	66	000 ~ 100	
Get-Mute	8		g	g	67	000: Off 001: On (muted)	
Get-Input select	8		g	j	6A	000~	See Set-function table
*Get-Power status: STBY	6	n/a	g	l	6C	000	For VT2405-1 and VT3205 only
Get-Power status: ON/ STBY	8		g	l	6C	001: ON 000: STBY	Exclude VT2405-1, and VT3205
Get-Remote control	8		g	n	6E	000: Disable 001: Enable 002: Pass through	Gets RCU mode status
Get-Power lock	8		g	o	6F	000: Unlock 001: Lock	
Get-Button lock	8		g	p	70	000: Unlock 001: Lock	
Get-Menu lock	8		g	q	71	000: Unlock 001: Lock	
Get-Setup wizard	8		g	s	73	000: Disable 001: Enable	(for TV)
Get-PIP mode	8		g	t	74	000 : OFF 001: PIP 002: PBP	(for DS)
Get-PIP input	8		g	u	75	000 ~	(for DS) See Set-function table
Get-Tiling Mode	8		g	v	76	000: OFF 001: ON	(for DS)
Get-Tiling Compensation	8		g	w	77	000: OFF 001: ON	(for DS) Bezel width compensation
Get-Tiling H by V monitors	8		g	x	78	01x~09x: H monitors 0x1~0x9: V monitors	(for DS) 1. 2 <sup>nd</sup> digital for H monitors 2. 3 <sup>rd</sup> digital for V monitors
Get-Tiling position	8		g	y	79	000: OFF 001~025	(for DS) Copy the screen of Position# to identified display
Get-ACK	8		g	z	7A	000	This command is used to test the communication link

### 10.3.3 Remote Control Pass-through mode

When the PC sets the TV/DS to Remote Control Pass through mode, the TV/DS will send a 7-byte packet (followed by “CR”) in response to RCU button activation. Note, that in this mode the RCU shall have no effect on the TV/DS function. For example: “Volume+” will not change the volume in the LCD but only sends “Volume+” code to PC over the RS232 port.

#### IR Pass Through-Function format

Reply: (Command Type=“p”)

Name	Length	ID	Command Type	RCU Code1 (MSB)	RCU Code2 (LSB)	CR
Byte Count	1 Byte	2 Byte	1 Byte	1 Byte	1 Byte	1 Byte
Bytes order	1	2~3	4	5	6	7

**Example1: Remote Control pass-through when “VOL+” key is pressed for TV-05 Send (Hex Format)**

Name	Length	ID	Command Type	RCU Code1 (MSB)	RCU Code2 (LSB)	CR
Hex	<u>0x36</u>	<u>0x30</u> <u>0x35</u>	<u>0x70</u>	<u>0x31</u>	<u>0x30</u>	<u>0x0D</u>

Key	Code (HEX)
1	01
2	02
3	03
4	04
5	05
6	06
7	07
8	08
9	09
0	0A
-	0B
RECALL (LAST)	0C
INFO (DISPLAY)	0D
	0E
ASPECT (ZOOM, SIZE)	0F
VOLUME UP (+)	10
VOLUME DOWN (-)	11
MUTE	12
CHANNEL/PAGE UP (+)/ BRIGHTNESS+	13
CHANNEL/PAGE DOWN (-)/ BRIGHTNESS-	14

POWER	15
SOURCES (INPUTS)	16
	17
	18
SLEEP	19
MENU	1A
UP	1B
DOWN	1C
LEFT (-)	1D
RIGHT (+)	1E
OK (ENTER, SET)	1F
EXIT	20
	21
	22
	23
	24
	25
	26
	27
	28
	29
	2A
	2B
RED ■ (F1)	2C
GREEN ■ (F2)	2D
YELLOW ■ (F3)	2E
BLUE ■ (F4)	2F

**NOTE:**

1. This IR-pass-through code is different from the RCU key code.
2. Special control sequence for POWER key under IR-pass through mode.
  - 2-1. When TV/DS is OFF and receives the IR POWER code: TV/DS will turn itself on, then forward the POWER code to the host via RS232.
  - 2-2. When TV/DS is ON and receives the IR POWER code: TV/DS will forward the POWER code to the host via RS232, then turn off itself.
  - 2-3. When SET-POWER LOCK is enabled, the TV/DS will not respond to POWER key pressing.
3. The VOLUME UP and VOLUME DOWN code will repeatedly output when you press and hold the keys.

# Other Information

## Customer Support

For technical support or product service, see the table below or contact your reseller.

**NOTE:** You will need the product serial number.

Country/Region	Website	T= Telephone C = CHAT ONLINE	Email
Australia New Zealand	www.viewsonic.com.au	AUS= 1800 880 818 NZ= 0800 008 822	service@au.viewsonic.com
Canada	www.viewsonic.com	T (Toll-Free)= 1-866-463-4775 T (Toll)= 1-424-233-2533	service.ca@viewsonic.com
Europe	www.viewsoniceurope.com	www.viewsoniceurope.com/uk/support/call-desk/	
Hong Kong	www.hk.viewsonic.com	T= 852 3102 2900	service@hk.viewsonic.com
India	www.in.viewsonic.com	T= 1800 266 0101	service@in.viewsonic.com
Korea	ap.viewsonic.com/kr/	T= 080 333 2131	service@kr.viewsonic.com
Latin America (Argentina)	www.viewsonic.com/la/	C= <a href="http://www.viewsonic.com/la/soporte/servicio-tecnico">http://www.viewsonic.com/la/soporte/servicio-tecnico</a>	soporte@viewsonic.com
Latin America (Chile)	www.viewsonic.com/la/	C= <a href="http://www.viewsonic.com/la/soporte/servicio-tecnico">http://www.viewsonic.com/la/soporte/servicio-tecnico</a>	soporte@viewsonic.com
Latin America (Columbia)	www.viewsonic.com/la/	C= <a href="http://www.viewsonic.com/la/soporte/servicio-tecnico">http://www.viewsonic.com/la/soporte/servicio-tecnico</a>	soporte@viewsonic.com
Latin America (Mexico)	www.viewsonic.com/la/	C= <a href="http://www.viewsonic.com/la/soporte/servicio-tecnico">http://www.viewsonic.com/la/soporte/servicio-tecnico</a>	soporte@viewsonic.com
Nexus Hightech Solutions, Cincinnati #40 Desp. 1 Col. De los Deportes Mexico D.F. Tel: 55) 6547-6454 55)6547-6484 Other places please refer to <a href="http://www.viewsonic.com/la/soporte/servicio-tecnico#mexico">http://www.viewsonic.com/la/soporte/servicio-tecnico#mexico</a>			
Latin America (Peru)	www.viewsonic.com/la/	C= <a href="http://www.viewsonic.com/la/soporte/servicio-tecnico">http://www.viewsonic.com/la/soporte/servicio-tecnico</a>	soporte@viewsonic.com
Macau	www.hk.viewsonic.com	T= 853 2870 0303	service@hk.viewsonic.com
Middle East	ap.viewsonic.com/me/	Contact your reseller	service@ap.viewsonic.com
Puerto Rico & Virgin Islands	www.viewsonic.com	T= 1-800-688-6688 (English) C = <a href="http://www.viewsonic.com/la/soporte/servicio-tecnico">http://www.viewsonic.com/la/soporte/servicio-tecnico</a>	service.us@viewsonic.com soporte@viewsonic.com
Singapore/ Malaysia/ Thailand	www.ap.viewsonic.com	T= 65 6461 6044	service@sg.viewsonic.com
South Africa	ap.viewsonic.com/za/	Contact your reseller	service@ap.viewsonic.com
United States	www.viewsonic.com	T (Toll-Free)= 1-800-688-6688 T (Toll)= 1-424-233-2530	service.us@viewsonic.com



# Limited Warranty

## ViewSonic® Smart White Board

### What the warranty covers:

ViewSonic warrants its products to be free from defects in material and workmanship, under normal use, during the warranty period. If a product proves to be defective in material or workmanship during the warranty period, ViewSonic will, at its sole option, repair or replace the product with a like product. Replacement product or parts may include remanufactured or refurbished parts or components.

### How long the warranty is effective:

ViewSonic Smart White Board is warranted for 1 year, depending on your country of purchase, for all parts including the light source and for all labour from the date of the first consumer purchase

### Who the warranty protects:

This warranty is valid only for the first consumer purchaser.

### What the warranty does not cover:

1. Any product on which the serial number has been defaced, modified or removed.
2. Damage, deterioration or malfunction resulting from:
  - a. Accident, misuse, neglect, fire, water, lightning, or other acts of nature, unauthorized product modification, or failure to follow instructions supplied with the product.
  - b. Any damage of the product due to shipment.
  - c. Removal or installation of the product.
  - d. Causes external to the product, such as electrical power fluctuations or failure.
  - e. Use of supplies or parts not meeting ViewSonic's specifications.
  - f. Normal wear and tear.
  - g. Any other cause which does not relate to a product defect.
3. Any product exhibiting a condition commonly known as "image burn-in" which results when a static image is displayed on the product for an extended period of time.
4. Removal, installation, one way transportation, insurance, and set-up service charges.

### How to get service:

1. For information about receiving service under warranty, contact ViewSonic Customer Support (Please refer to Customer Support page). You will need to provide your product's serial number.
2. To obtain warranty service, you will be required to provide (a) the original dated sales slip, (b) your name, (c) your address, (d) a description of the problem, and (e) the serial number of the product.
3. Take or ship the product freight prepaid in the original container to an authorized ViewSonic service center or ViewSonic.
4. For additional information or the name of the nearest ViewSonic service center, contact ViewSonic.

### Limitation of implied warranties:

There are no warranties, express or implied, which extend beyond the description contained herein including the implied warranty of merchantability and fitness for a particular purpose.

**Exclusion of damages:**

ViewSonic's liability is limited to the cost of repair or replacement of the product. ViewSonic shall not be liable for:

1. Damage to other property caused by any defects in the product, damages based upon inconvenience, loss of use of the product, loss of time, loss of profits, loss of business opportunity, loss of goodwill, interference with business relationships, or other commercial loss, even if advised of the possibility of such damages.
2. Any other damages, whether incidental, consequential or otherwise.
3. Any claim against the customer by any other party.
4. Repair or attempted repair by anyone not authorized by ViewSonic.

**Effect of state law:**

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Some states do not allow limitations on implied warranties and/or do not allow the exclusion of incidental or consequential damages, so the above limitations and exclusions may not apply to you.

**Sales outside the U.S.A. and Canada:**

For warranty information and service on ViewSonic products sold outside of the U.S.A. and Canada, contact ViewSonic or your local ViewSonic dealer.

The warranty period for this product in mainland China (Hong Kong, Macao and Taiwan Excluded) is subject to the terms and conditions of the Maintenance Guarantee Card.

For users in Europe and Russia, full details of warranty provided can be found in [www.viewsoniceurope.com](http://www.viewsoniceurope.com) under Support/Warranty Information.

# Mexico Limited Warranty

## ViewSonic® Smart White Board

### What the warranty covers:

ViewSonic warrants its products to be free from defects in material and workmanship, under normal use, during the warranty period. If a product proves to be defective in material or workmanship during the warranty period, ViewSonic will, at its sole option, repair or replace the product with a like product. Replacement product or parts may include remanufactured or refurbished parts or components & accessories.

### How long the warranty is effective:

ViewSonic Smart White Board is warranted for 1 year, depending on your country of purchase, for all parts including the light source and for all labour from the date of the first consumer purchase

### Who the warranty protects:

This warranty is valid only for the first consumer purchaser.

### What the warranty does not cover:

1. Any product on which the serial number has been defaced, modified or removed.
2. Damage, deterioration or malfunction resulting from:
  - a. Accident, misuse, neglect, fire, water, lightning, or other acts of nature, unauthorized product modification, unauthorized attempted repair, or failure to follow instructions supplied with the product.
  - b. Any damage of the product due to shipment.
  - c. Causes external to the product, such as electrical power fluctuations or failure.
  - d. Use of supplies or parts not meeting ViewSonic's specifications.
  - e. Normal wear and tear.
  - f. Any other cause which does not relate to a product defect.
3. Any product exhibiting a condition commonly known as "image burn-in" which results when a static image is displayed on the product for an extended period of time.
4. Removal, installation, insurance, and set-up service charges.

### How to get service:

For information about receiving service under warranty, contact ViewSonic Customer Support (Please refer to the attached Customer Support page). You will need to provide your product's serial number, so please record the product information in the space provided below on your purchase for your future use. Please retain your receipt of proof of purchase to support your warranty claim.

For Your Records

Product Name: \_\_\_\_\_ Model Number: \_\_\_\_\_

Document Number: \_\_\_\_\_ Serial Number: \_\_\_\_\_

Purchase Date: \_\_\_\_\_ Extended Warranty Purchase? \_\_\_\_\_ (Y/N)  
If so, what date does warranty expire? \_\_\_\_\_

1. To obtain warranty service, you will be required to provide (a) the original dated sales slip, (b) your name, (c) your address, (d) a description of the problem, and (e) the serial number of the product.
2. Take or ship the product in the original container packaging to an authorized ViewSonic service center.
3. Round trip transportation costs for in-warranty products will be paid by ViewSonic.

### Limitation of implied warranties:

There are no warranties, express or implied, which extend beyond the description contained herein including the implied warranty of merchantability and fitness for a particular purpose.

### Exclusion of damages:

ViewSonic's liability is limited to the cost of repair or replacement of the product. ViewSonic shall not be liable for:

1. Damage to other property caused by any defects in the product, damages based upon inconvenience, loss of use of the product, loss of time, loss of profits, loss of business opportunity, loss of goodwill, interference with business relationships, or other commercial loss, even if advised of the possibility of such damages.
2. Any other damages, whether incidental, consequential or otherwise.
3. Any claim against the customer by any other party.
4. Repair or attempted repair by anyone not authorized by ViewSonic.

<b>Contact Information for Sales &amp; Authorized Service (Centro Autorizado de Servicio) within Mexico:</b>	
<b>Name, address, of manufacturer and importers:</b> México, Av. de la Palma #8 Piso 2 Despacho 203, Corporativo Interpalmas, Col. San Fernando Huixquilucan, Estado de México Tel: (55) 3605-1099 <a href="http://www.viewsonic.com/la/soporte/index.htm">http://www.viewsonic.com/la/soporte/index.htm</a>	
<b>NÚMERO GRATIS DE ASISTENCIA TÉCNICA PARA TODO MÉXICO: 001.866.823.2004</b>	
<b>Hermosillo:</b> Distribuciones y Servicios Computacionales SA de CV. Calle Juarez 284 local 2 Col. Bugambillas C.P: 83140 Tel: 01-66-22-14-9005 E-Mail: <a href="mailto:disc2@hmo.megared.net.mx">disc2@hmo.megared.net.mx</a>	<b>Villahermosa:</b> Compumantenimientos Garantizados, S.A. de C.V. AV. GREGORIO MENDEZ #1504 COL, FLORIDA C.P. 86040 Tel: 01 (993) 3 52 00 47 / 3522074 / 3 52 20 09 E-Mail: <a href="mailto:compumantenimientos@prodigy.net.mx">compumantenimientos@prodigy.net.mx</a>
<b>Puebla, Pue. (Matriz):</b> RENTA Y DATOS, S.A. DE C.V. Domicilio: 29 SUR 721 COL. LA PAZ 72160 PUEBLA, PUE. Tel: 01(52).222.891.55.77 CON 10 LINEAS E-Mail: <a href="mailto:datos@puebla.megared.net.mx">datos@puebla.megared.net.mx</a>	<b>Veracruz, Ver.:</b> CONEXION Y DESARROLLO, S.A DE C.V. Av. Americas # 419 ENTRE PINZÓN Y ALVARADO Fracc. Reforma C.P. 91919 Tel: 01-22-91-00-31-67 E-Mail: <a href="mailto:gacosta@qplus.com.mx">gacosta@qplus.com.mx</a>
<b>Chihuahua</b> Soluciones Globales en Computación C. Magisterio # 3321 Col. Magisterial Chihuahua, Chih. Tel: 4136954 E-Mail: <a href="mailto:Cefeo@soluglobales.com">Cefeo@soluglobales.com</a>	<b>Cuernavaca</b> Compusupport de Cuernavaca SA de CV Francisco Leyva # 178 Col. Miguel Hidalgo C.P. 62040, Cuernavaca Morelos Tel: 01 777 3180579 / 01 777 3124014 E-Mail: <a href="mailto:aquevedo@compusupportcva.com">aquevedo@compusupportcva.com</a>
<b>Distrito Federal:</b> QPLUS, S.A. de C.V. Av. Coyoacán 931 Col. Del Valle 03100, México, D.F. Tel: 01(52)55-50-00-27-35 E-Mail : <a href="mailto:gacosta@qplus.com.mx">gacosta@qplus.com.mx</a>	<b>Guadalajara, Jal.:</b> SERVICRECE, S.A. de C.V. Av. Niños Héroes # 2281 Col. Arcos Sur, Sector Juárez 44170, Guadalajara, Jalisco Tel: 01(52)33-36-15-15-43 E-Mail: <a href="mailto:mmiranda@servicrece.com">mmiranda@servicrece.com</a>
<b>Guerrero Acapulco</b> GS Computación (Grupo Sesicomp) Progreso #6-A, Colo Centro 39300 Acapulco, Guerrero Tel: 744-48-32627	<b>Monterrey:</b> Global Product Services Mar Caribe # 1987, Esquina con Golfo Pérsico Fracc. Bernardo Reyes, CP 64280 Monterrey N.L. México Tel: 8129-5103 E-Mail: <a href="mailto:aydeem@gps1.com.mx">aydeem@gps1.com.mx</a>
<b>MERIDA:</b> ELECTROSER Av Reforma No. 403Gx39 y 41 Mérida, Yucatán, México CP97000 Tel: (52) 999-925-1916 E-Mail: <a href="mailto:rrrb@sureste.com">rrrb@sureste.com</a>	<b>Oaxaca, Oax.:</b> CENTRO DE DISTRIBUCION Y SERVICIO, S.A. de C.V. Murguía # 708 P.A., Col. Centro, 68000, Oaxaca Tel: 01(52)95-15-15-22-22 Fax: 01(52)95-15-13-67-00 E-Mail: <a href="mailto:gpotai2001@hotmail.com">gpotai2001@hotmail.com</a>
<b>Tijuana:</b> STD Av Ferrocarril Sonora #3780 L-C Col 20 de Noviembre Tijuana, Mexico	<b>FOR USA SUPPORT:</b> ViewSonic Corporation 381 Brea Canyon Road, Walnut, CA. 91789 USA Tel: 800-688-6688 (English); <a href="http://www.viewsonic.com/la/soporte/servicio-tecnico">http://www.viewsonic.com/la/soporte/servicio-tecnico</a> (Spanish); E-Mail: <a href="http://www.viewsonic.com">http://www.viewsonic.com</a>



**ViewSonic®**

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>